 
# ASSEMBLY INSTRUCTIONS DINING CHAIR

ASSEMBLY REQUIREMENTS 2-PERSON ASSEMBLY 45 MINUTES ASSEMBLY TIME TOOLS REQUIRED (NOT PROVIDED)



## Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days



### ASSEMBLY PREPARATION

- 1. Remove all packing materials, staples and packing straps from the carton.
- 2. Refer to Parts List and Hardware List. Ensure all the parts, hardware and quantities are correct before assembly. Contact customer service for missing part.
- 3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

### SAFETY PRECAUTION

- 1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

### TIPS FOR ASSEMBLY

- 1. Allow ample room for assembly and in close proximity to where product will be placed.
- 2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
- 3. Identify all of the parts, hardware and quantities required for each step.
- 4. During assembly, do not over-tighten any fittings as this may cause damage.
- 5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
- 6. Always place the product on a flat, level surface.
- 7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

## CARE AND MAINTANANCE

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only – not for commercial use.

# ASSEMBLY INSTRUCTIONS DINING CHAIR

#### PART LIST (FOR 2 CHAIRS)


NO.	COMPONENT	QTY.
P1	CHAIR BACK	2
P2	CHAIR SEAT	2
P3	FRONT LEGS	4

#### HARDWARE LIST (FOR 2 CHAIRS)

NO.	DESCRIPTION	QTY.	EXTRA	
H1	JCBC SCREW M6 X 35		4	1
H2	JCBC SCREW M6 X 60		8	1
H3	JCBC SCREW M6 X 80		8	1
H4	SPRING WASHER	0	20	2
H5	FLAT WASHER	$\bigcirc$	20	2
H6	ALLEN KEY	ل	1	
H7	LEG STUD	9	8	1
* Extra Hardware For Spare Use				

STEP 2


STEP 4

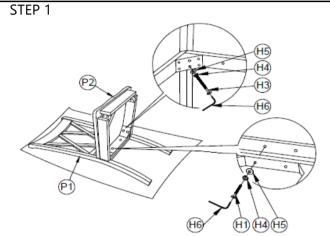

- a) Place Chair Back (P1) on a flat & soft material that does not scratch or damage the part.
- b) Place Chair Seat (P2) on (P1) as shown. Fasten the two parts at the center using JCBC Screw (H1) fitted with Spring Washer (H4) and Flat Washer (H5). Use Allen Key (H6) to drive (H1). Do not tighten (H1) completely at this time.
- c) At each rear corner of (P2), align the screw holes on the corner block to the screw holes on each rear leg. Next, insert Screw (H3) fitted with Spring Washer (H4) and Flat Washer (H5) into each of the screw hole. Use Allen Key (H6) to drive (H3). Do not tighten completely until all four screws are in place.
- d) Tighten Screw (H1) completely at this time.

# STEP 3

Use a mallet to nail Leg Stud (H7) to the bottom of each leg.

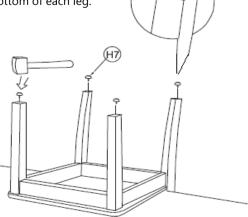

a) Assembly from STEP 1, bottom-side up as shown on an elevated surface (e.g. table top).

- a) Place a Front Leg (P3) against a front corner of (P2) as shown, and align the screw holes on (P3) to the screw holes on front corner block of (P2).
- b) Insert Screw (H2) fitted with Spring Washer (H4) and Flat Washer (H5) into each of the screw hole on the corner block. Use Allen Key (H6) to drive (H2). Do not tighten (H2) completely until both screws are in place. Do not over-tighten the screws.
- c) Use the same procedure above to install the other Front Leg.



Set the chair right-side up. The assembly of the chair is complete.

