



USE, CARE AND SAFETY ADVICE

BEFORE USE

Remove labels, wash in hot soapy water, rinse and dry. Condition non-stick surfaces with a little cooking oil, and wipe with kitchen paper.

COOKING

We strongly recommend the use of plastic or wooden utensils only to protect non stick surfaces. Do not use a knife to cut food in the on the non-stick surface.

Do not pour or plunge into cold water whilst still hot, as this may cause warping. Always use oven gloves or similar when moving hot pans.

Verify that handles remain secure - do not attempt to repair broken cookware, return the pan to stellar at the address given.

CLEANING

Soak the pan for a few minutes before washing. Remove food deposits with a nylon scourer or brush. Wash in hot soapy water, rinse and dry thoroughly. Stellar non-stick roasters are dishwasher safe.

5 YEAR NON-STICK GUARANTEE

Non-Stick surfaces are guaranteed to be free from defects in material and workmanship under normal domestic use for a period of 5 years.

The Guarantee does not cover damage by accident, misuse or commercial use. In addition, discoloration, scratching, staining and damage from overheating is not covered by the Guarantee. This Guarantee is in addition to your statutory rights.

LIFETIME GUARANTEE

Please read the Use, Care and Safety Advice thoroughly. Stellar cookware has a Lifetime Guarantee to be free from defects in material and workmanship under normal domestic use.

We promise to the original purchaser that any defective part or item will be replaced, (or we will supply a product of equal value if the product is out of production).

The Guarantee does not cover damage by accident, misuse or commercial use. In addition, discoloration, scratching, staining and damage from overheating is not covered by the Guarantee.

This Guarantee is in addition to your statutory rights.

