 


DRESSER

Assembly Instructions - Please keep for future reference

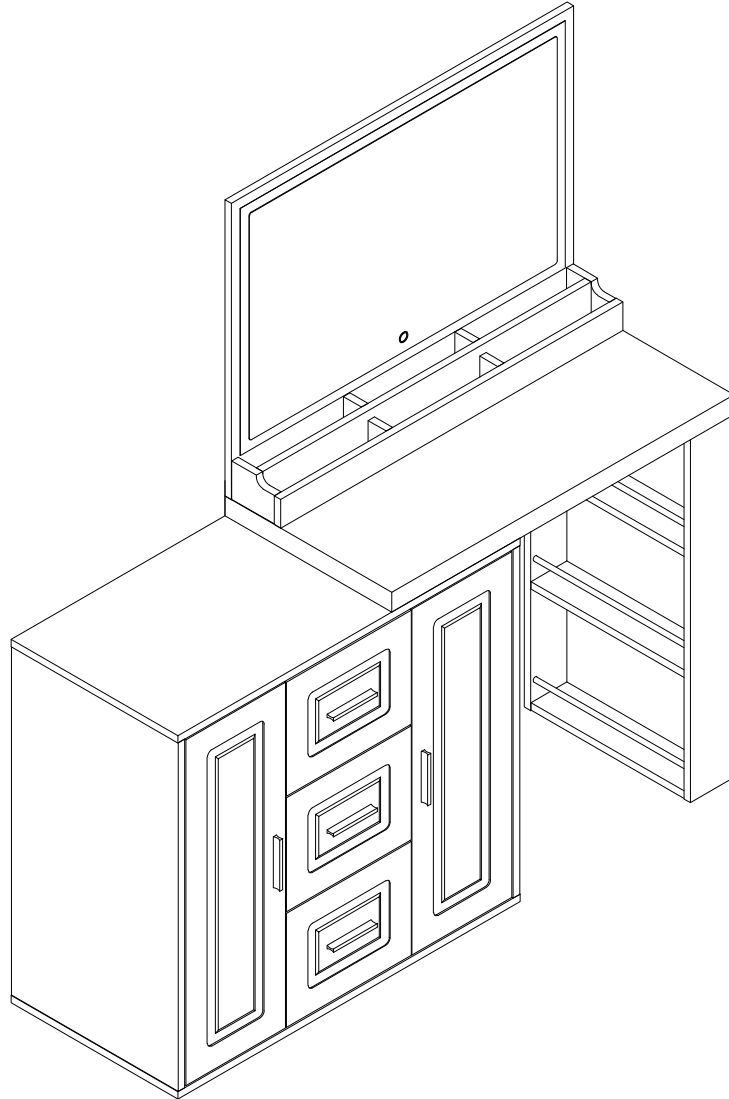

Dimensions

Width-59inch

Depth-15.7inch+11inch

Height-54inch

Important – Please read these instructions fully before starting assembly

Issue 1 - 05/05/24



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

 
 
 
 
 
 
 
 
 
 
Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

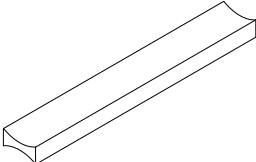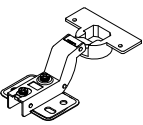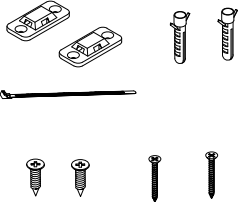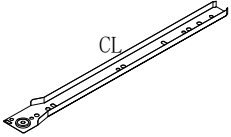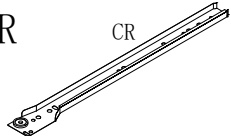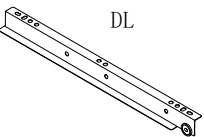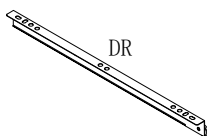A  Cam Bolt x44	B  Cam Lock x44	C  3.5*14 Screw x48	D  6*40 Screw x21
E  6*20 Screw x2	F  Wooden sales x30	G  handle x5	H  4*18 Screw x10
I  Plate sales x8	J  Hinge x4	K  4*35 Screw x12	L  The power plug x1
M  Prevent falling accessories x1	CL  Runner300mm x3 CR  Runner300mm x3	DL  Runner300mm x3 DR  Runner300mm x3	6-point screwdriver  6-point screwdriver x1 bolt driver  bolt driver x1

 Ruler - Use this ruler to help correctly identify the screws

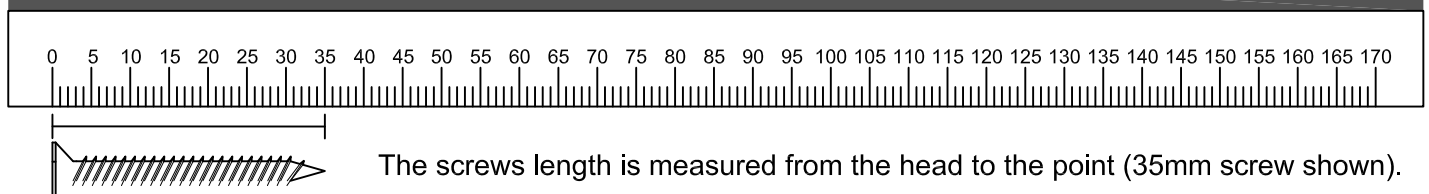


EN_ It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

FR_ Il est parfois nécessaire d'ajuster les charnières pour un meilleur alignement des portes. Servez-vous des instructions ci-dessous comme guide.

ES_ Puede que sea necesario ajustar los quicios de forma que se alineen las puertas. Use las instrucciones que aparecen debajo como guía.

DE_ Möglicherweise müssen Sie die Scharniere so einstellen, dass die Türen ausgerichtet sind. Verwenden Sie die nachstehenden Anweisungen als Leitfaden.

 IT_ Potrebbe essere necessario regolare le cerniere in modo che le porte siano allineate. Per fare ciò attenersi alle istruzioni sottostanti.

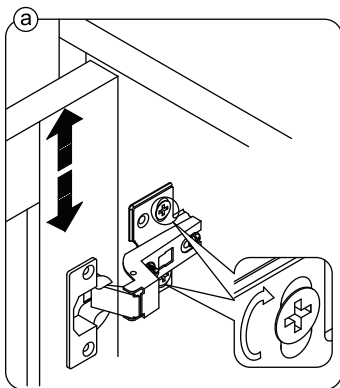


EN_ To adjust the door vertically loosen the screw as shown and move up and down as needed.

FR_ Si vous souhaitez régler la porte **verticalement**, desserrez la vis comme indiqué et déplacez la porte de haut en bas selon les besoins.

ES_ Para ajustar la puerta **verticalmente** afloje el tornillo tal y como se muestra y muévelo hacia arriba o hacia abajo según sea necesario.

DE_ Um die Tür **vertikal** auszurichten, lösen Sie die Schraube wie abgebildet und bewegen Sie sie nach Bedarf nach oben oder nach unten.

 IT_ Per allineare la porta **verticalmente** allentare la vite come mostrato e spostarla in alto o in basso secondo necessità.

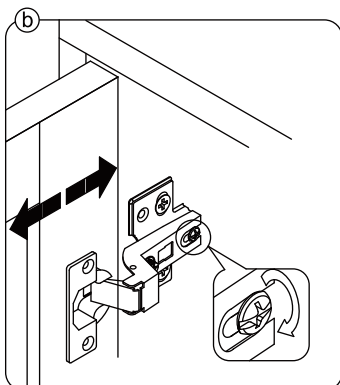


EN_ To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

FR_ Si vous souhaitez ajuster l'**écart** entre la porte et le cadre principal, tournez la vis dans le sens des aiguilles d'une montre ou dans le sens inverse, si nécessaire.

ES_ Para ajustar el **espacio** desde la puerta al marco principal, gire el tornillo en sentido horario o antihorario, según se necesite.

DE_ Um den **Abstand** von der Tür zum Hauptrahmen auszurichten, drehen Sie die Schraube je nach Bedarf im oder gegen den Uhrzeigersinn.

 IT_ Per regolare lo **spazio** tra la porta e il telaio principale, avvitare o svitare la vite secondo necessità.

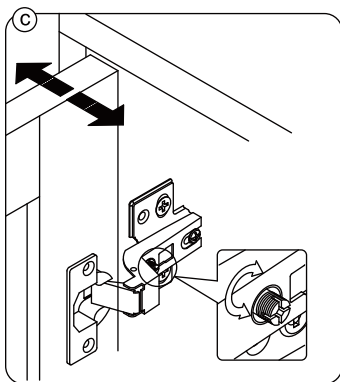


EN_ To adjust the door laterally adjust the screw as shown by turning clockwise or anti-clockwise.

FR_ Si vous souhaitez ajuster la porte **latéralement**, ajustez la vis comme indiqué en tournant dans le sens des aiguilles d'une montre ou dans le sens inverse des aiguilles d'une montre.

ES_ Para ajustar la puerta **lateralmente** ajuste el tornillo tal y como se muestra girándolo en sentido horario y antihorario.

DE_ Um die Tür **seitlich** auszurichten, stellen Sie bitte die Schraube wie abgebildet durch Drehen im oder gegen den Uhrzeigersinn ein.

 IT_ Per allineare la porta **lateralmente** regolare la vite come mostrato, avvitandola o svitandola.

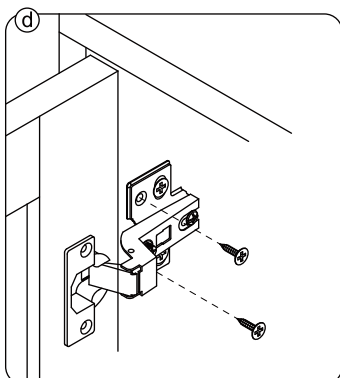

EN_ Please fix other screws

FR_ Merci de serrer les autres vis.

ES_ Fije los demás tornillos

DE_ Befestigen Sie bitte die anderen Schrauben

IT_ Fissare le altre viti

 
Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

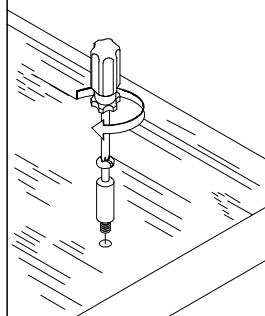

Step 2

Push the male camlock into the entry hole.

 2

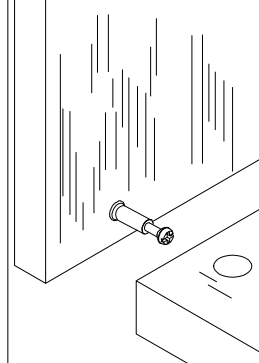


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

 3

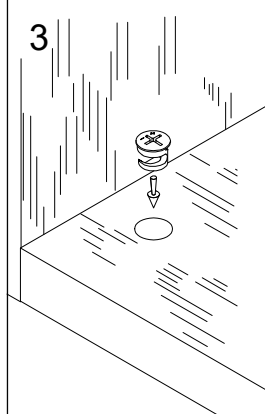


Step 4

Turn the female camlock clockwise with a screwdriver.




You should feel a click when the camlock is locked in place.

The joint is now secure.

 4


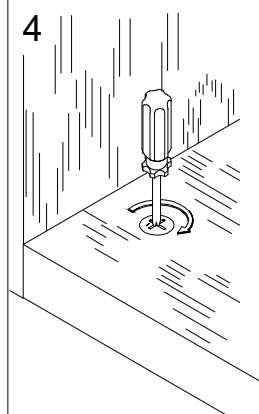


Tools required









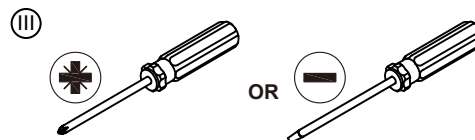 
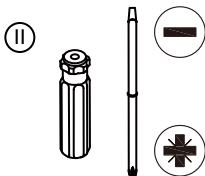 
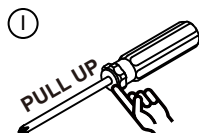 


Screwdrivers can be converted to Phillips and Slotted.






 
 
Assembly Instructions

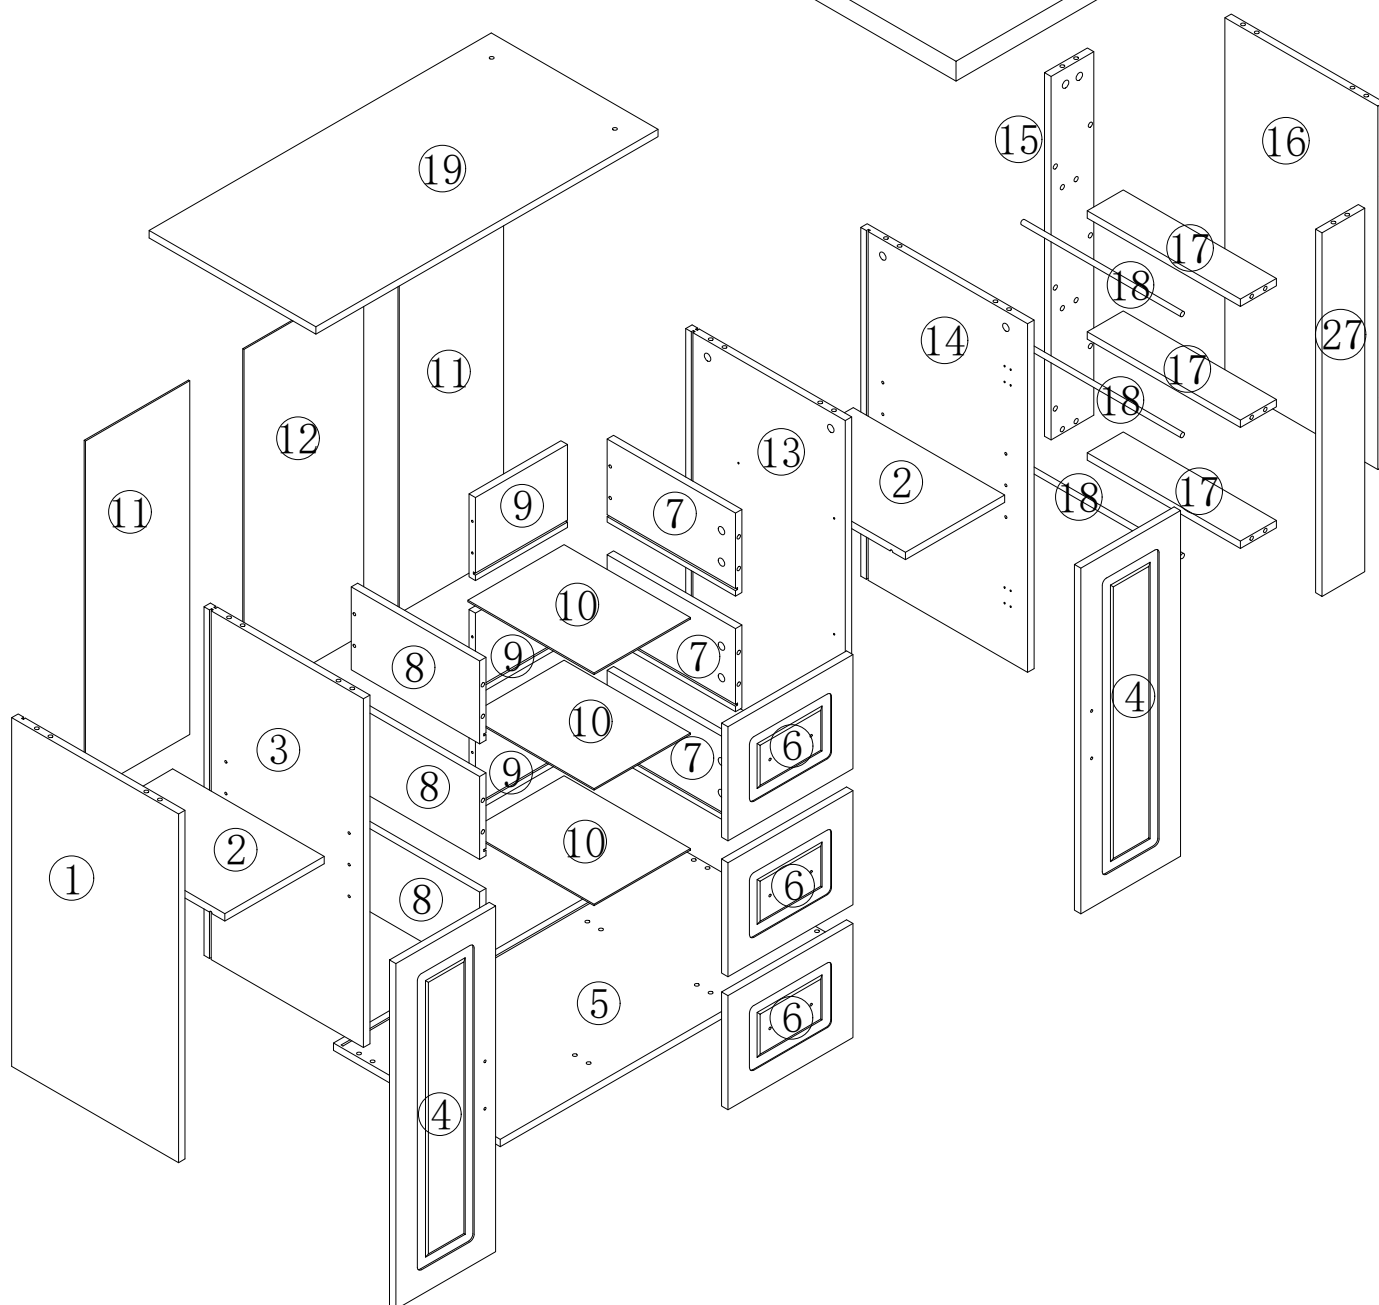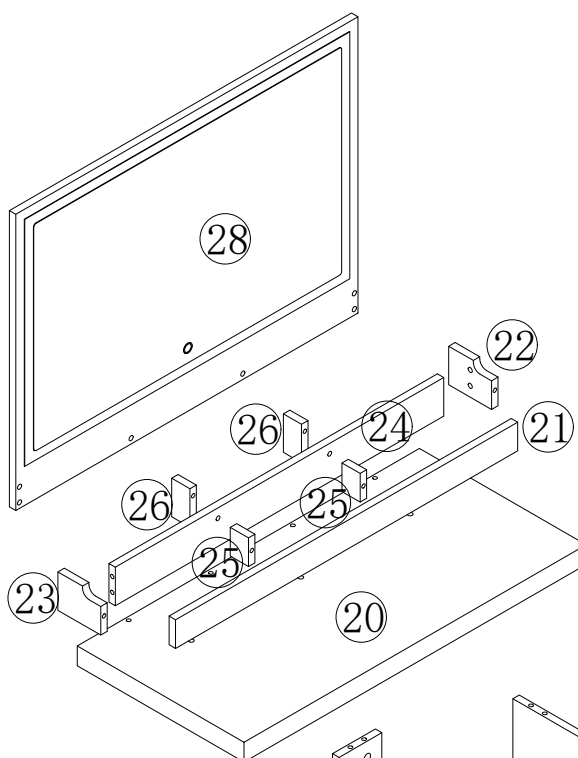

Assembly Instructions

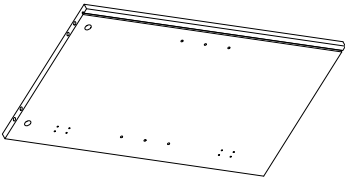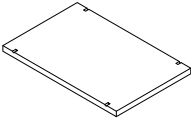   
 
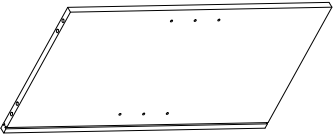 
 
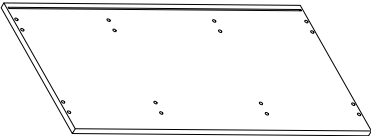 
 
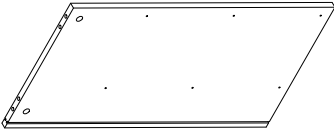 
 
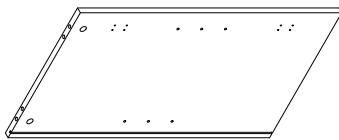 
①  706*390*15mm 1	⑧  300*168*15mm 3
②  354*232*15mm 2	⑨  215*168*15mm 3
③  mm 1	⑩  295*225*3mm 3
④  700*233*15mm 2	⑪  716*244*3mm 2
⑤  800*390*15mm 1	⑫  716*280*3mm 1
⑥  292*231*15mm 3	⑬  706*373*15mm 1
⑦  300*168*15mm 3	⑭  706*390*15mm 1

       Assembly Instructions

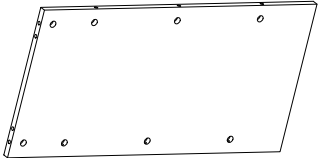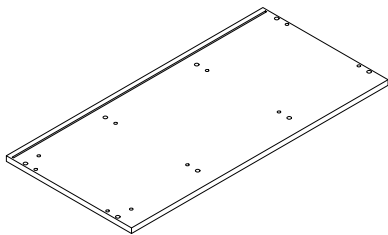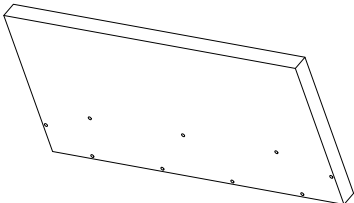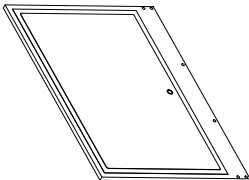⑮ 736*100*15mm  1	⑳ 100*58*15mm  1
⑯ 736*358*15mm  1	㉑ 100*58*15mm  1
⑰ 358*84*15mm  3	㉒ 768*78*15mm  1
⑱ 373*10mm  3	㉓ 42.5*58*15mm  2
⑲ 800*390*15mm  1	㉔ 42.5*78*15mm  2
㉀ 800*390*40mm  1	㉕ 736*100*15mm  1
㉁ 800*58*15mm  1	㉖ 800*600*15mm  1


Assembly Instructions

        
 
Step 1

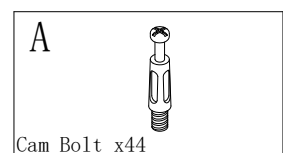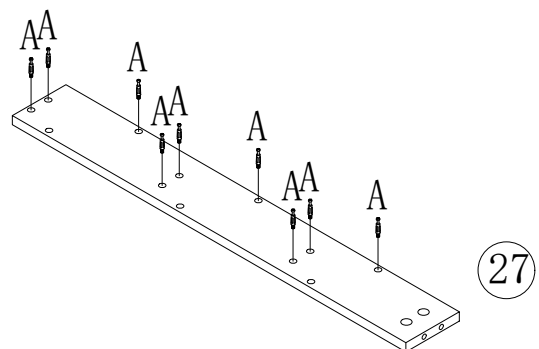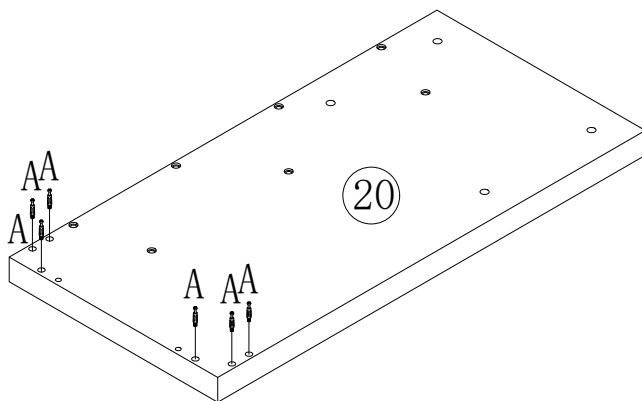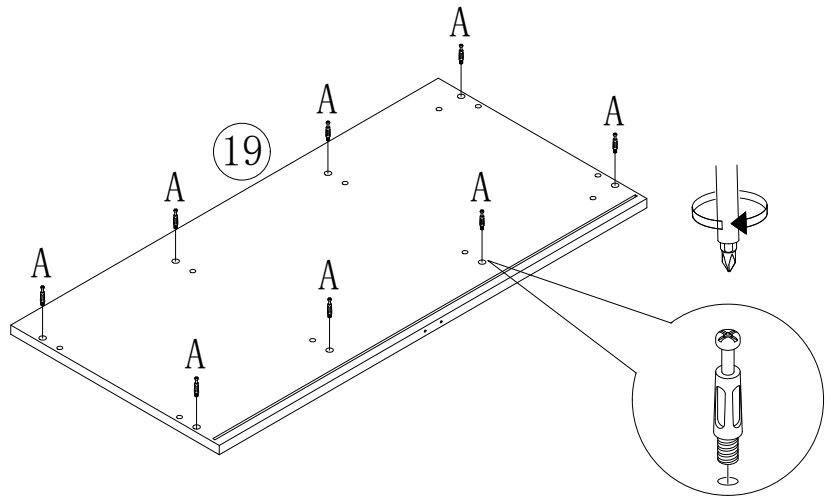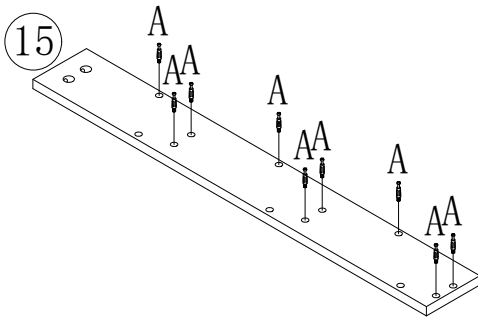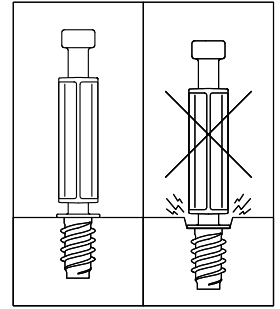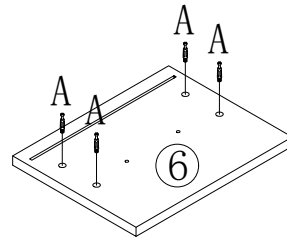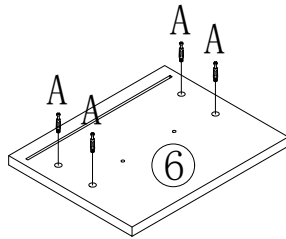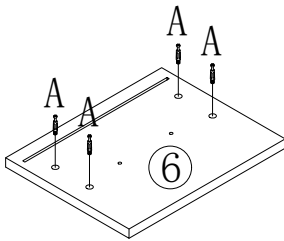


Assembly Instructions

   
Step 2

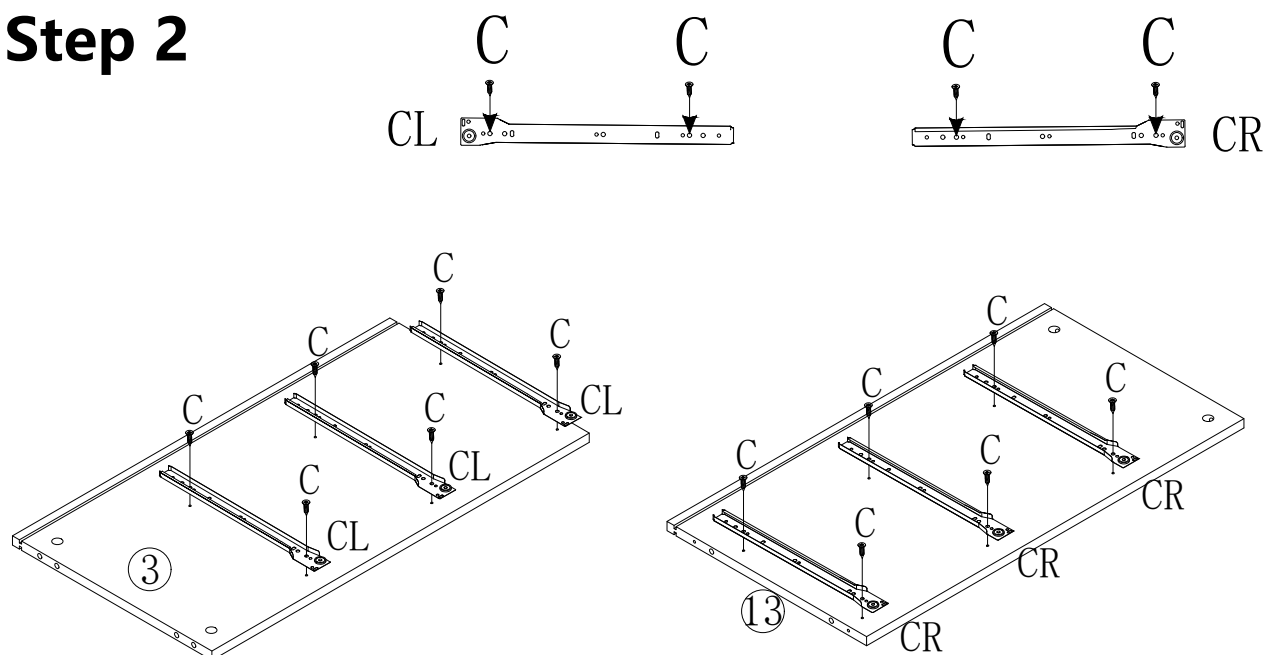

CL  Runner 300mm x 3	CR  Runner 300mm x 3	C  3.5*14 Screw x12
---	---	--



 
 
Step 3

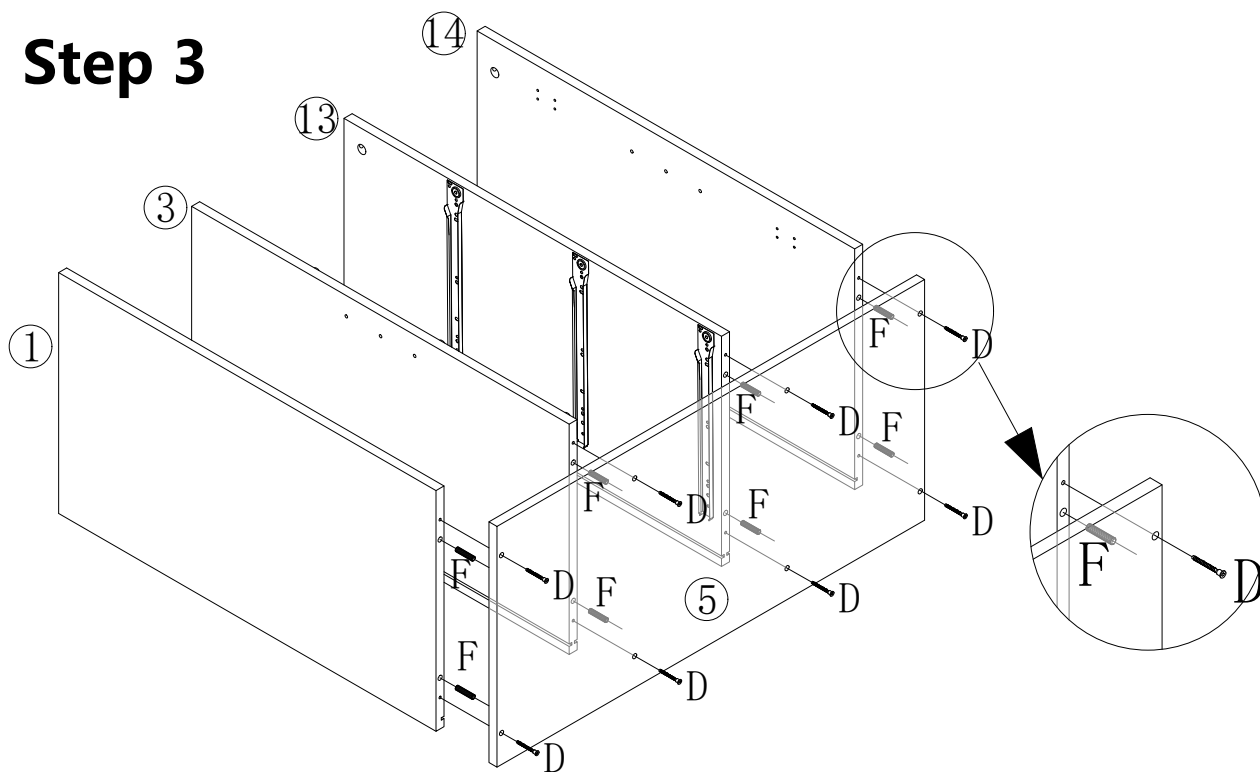

D  6*40 Screw x8	F  Wooden sales x8
---	---

Assembly Instructions

   
 
Step 4

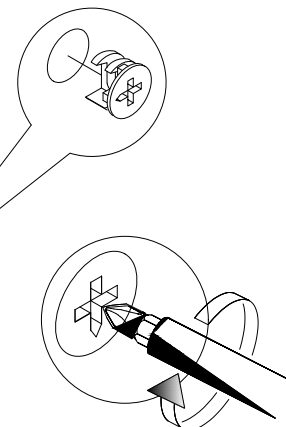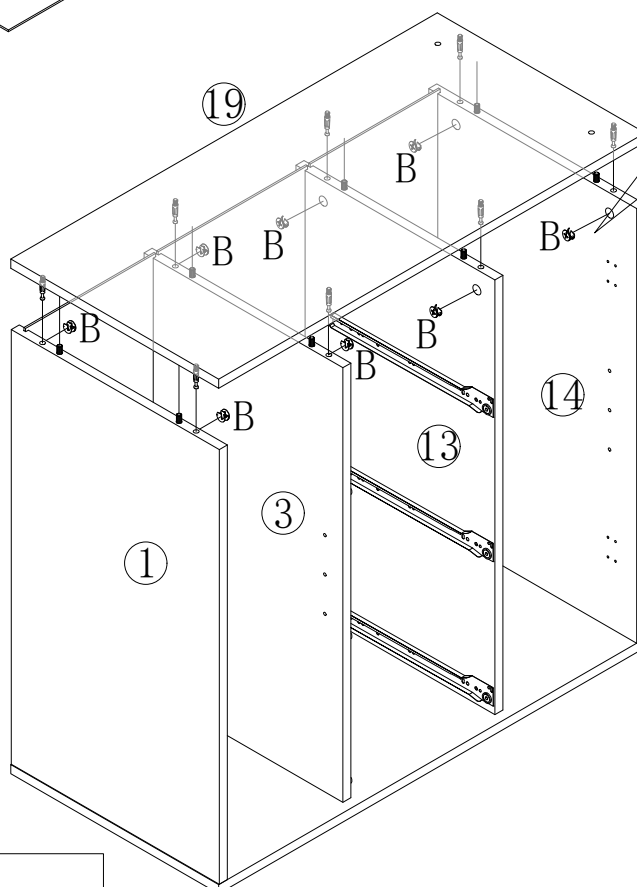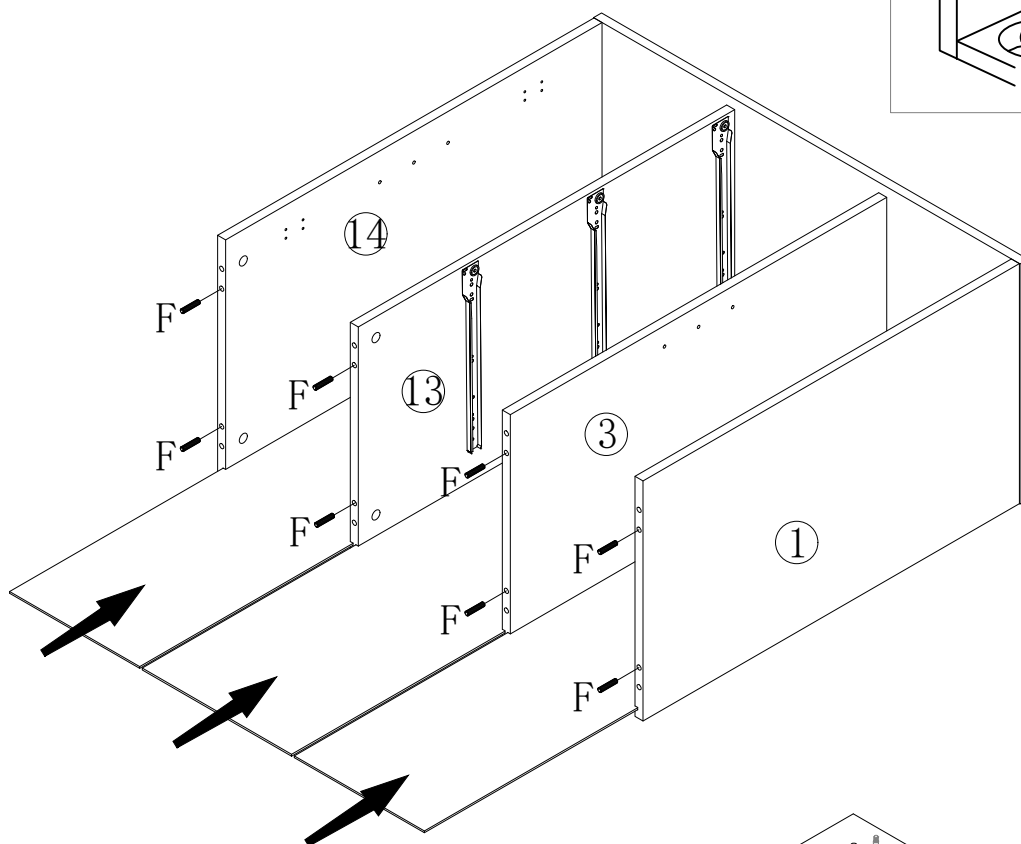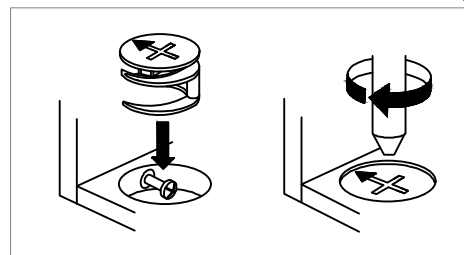




B  Cam Lock x8	F  Wooden sales x8
---	---

Assembly Instructions

  Step 5

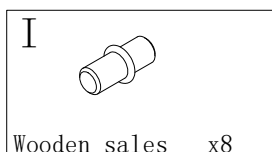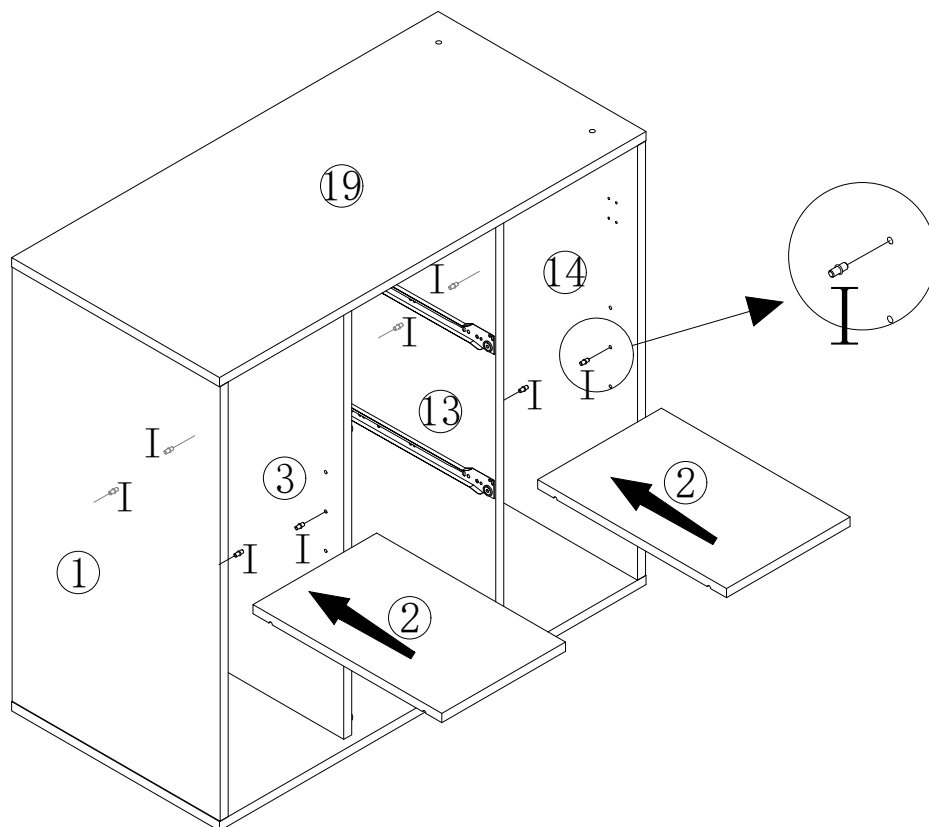


   Step 6

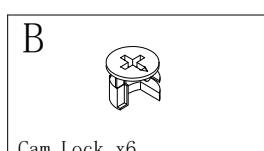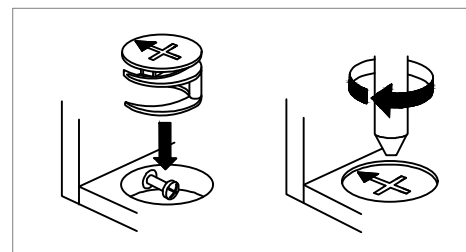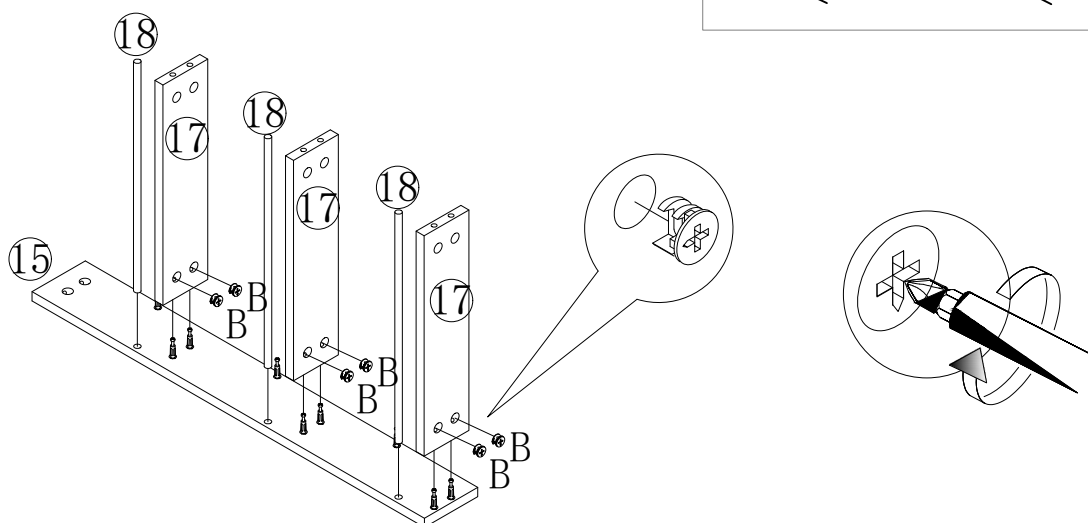

Assembly Instructions

 Step 7

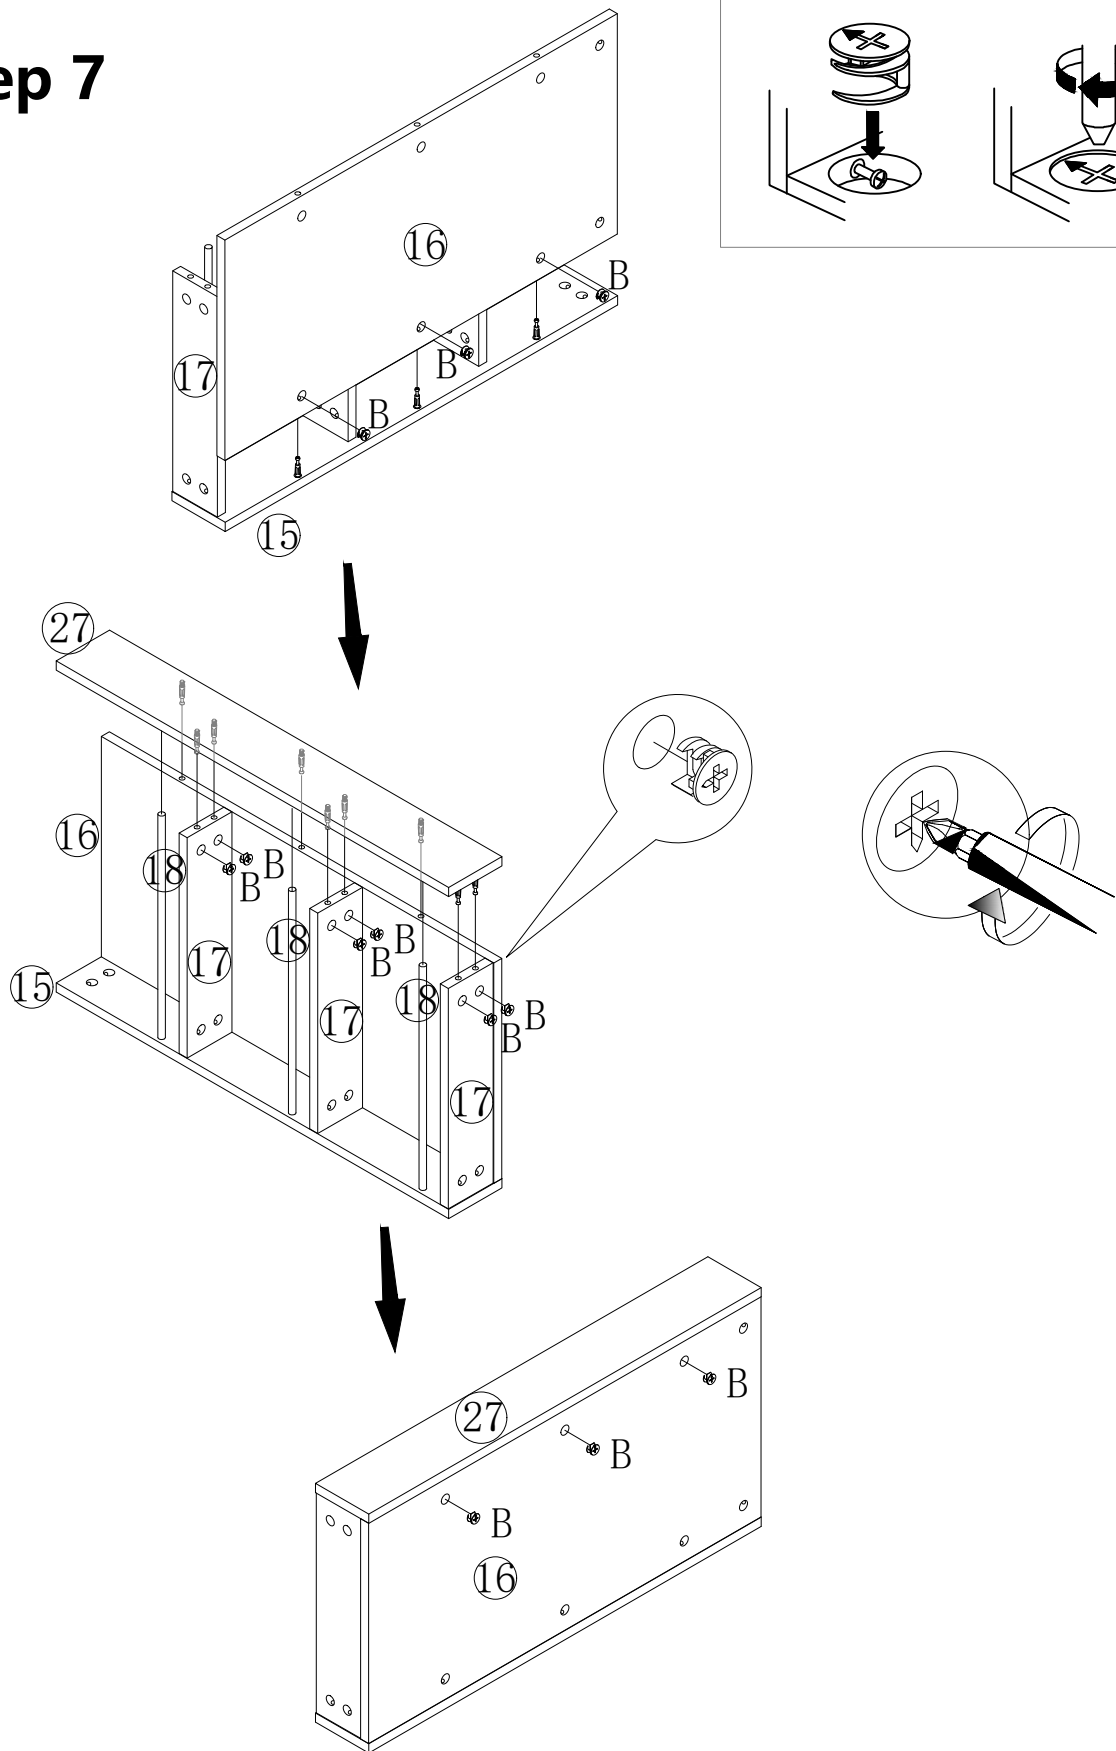



B



Cam Lock x12


Assembly Instructions

  
Step 8

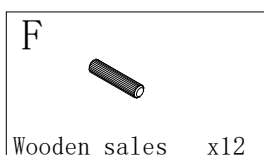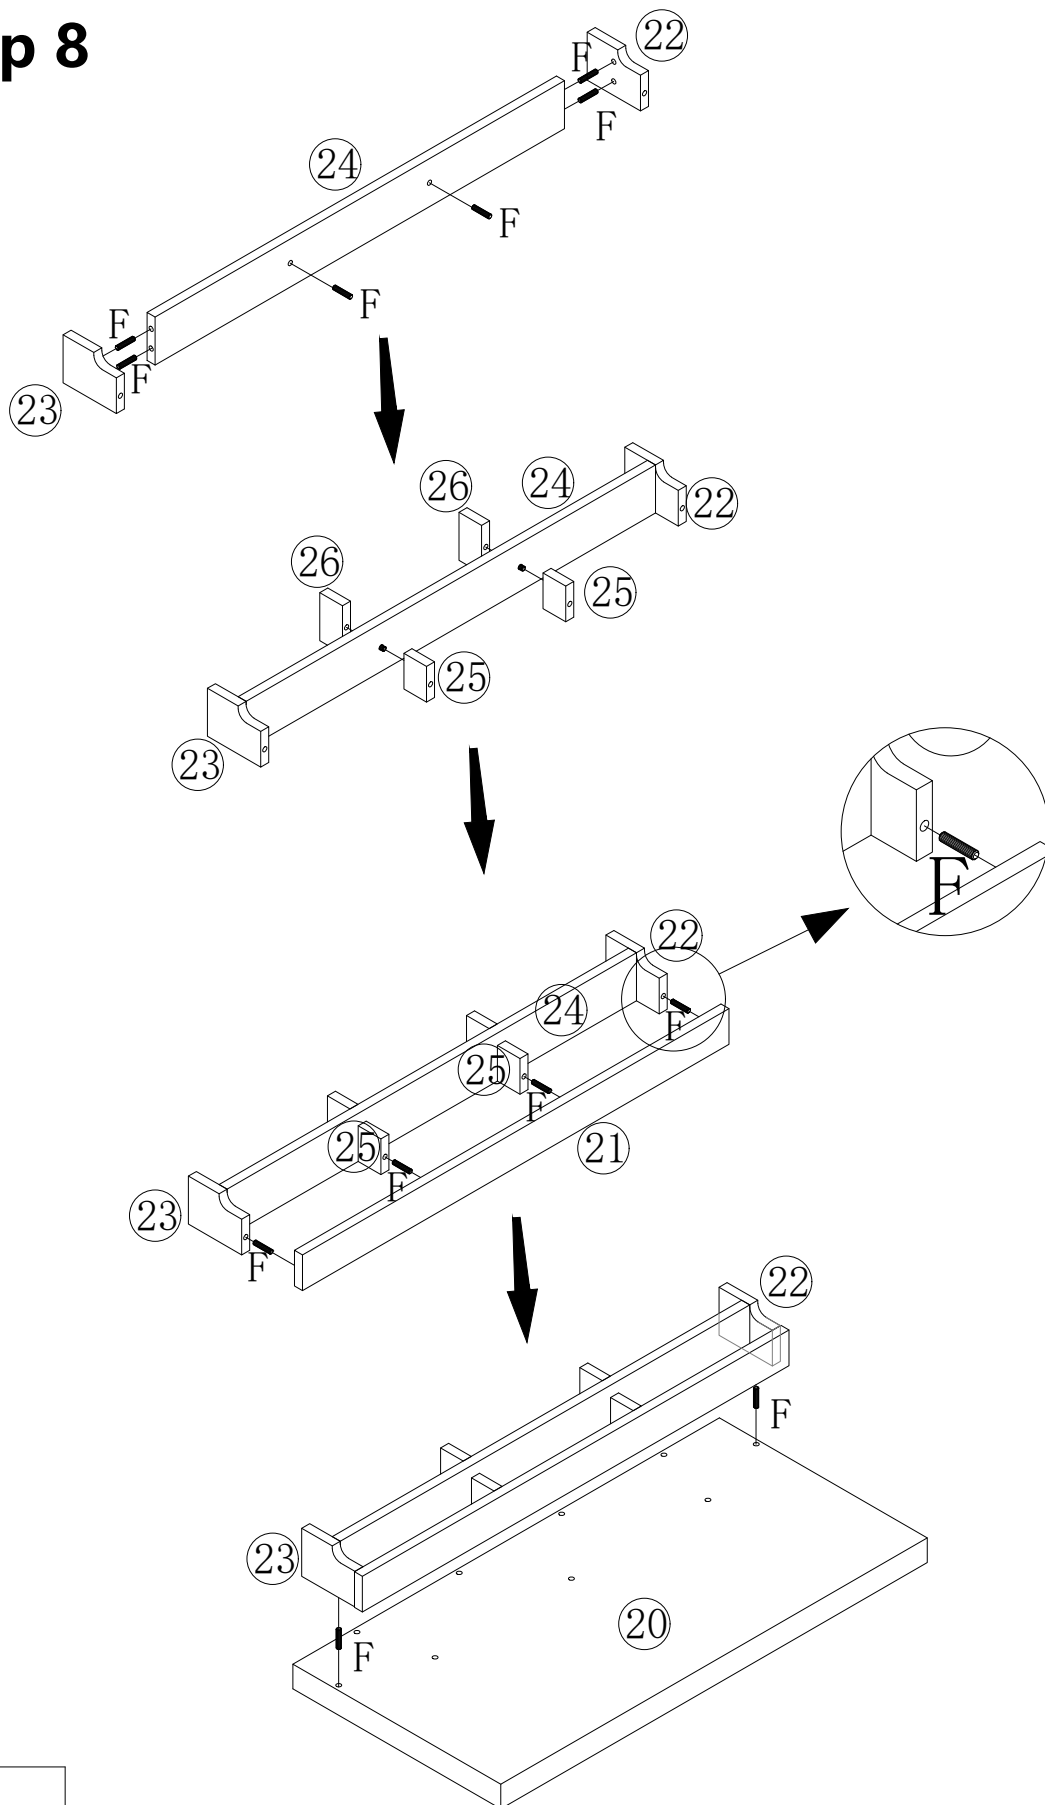

Assembly Instructions

  
Step 9

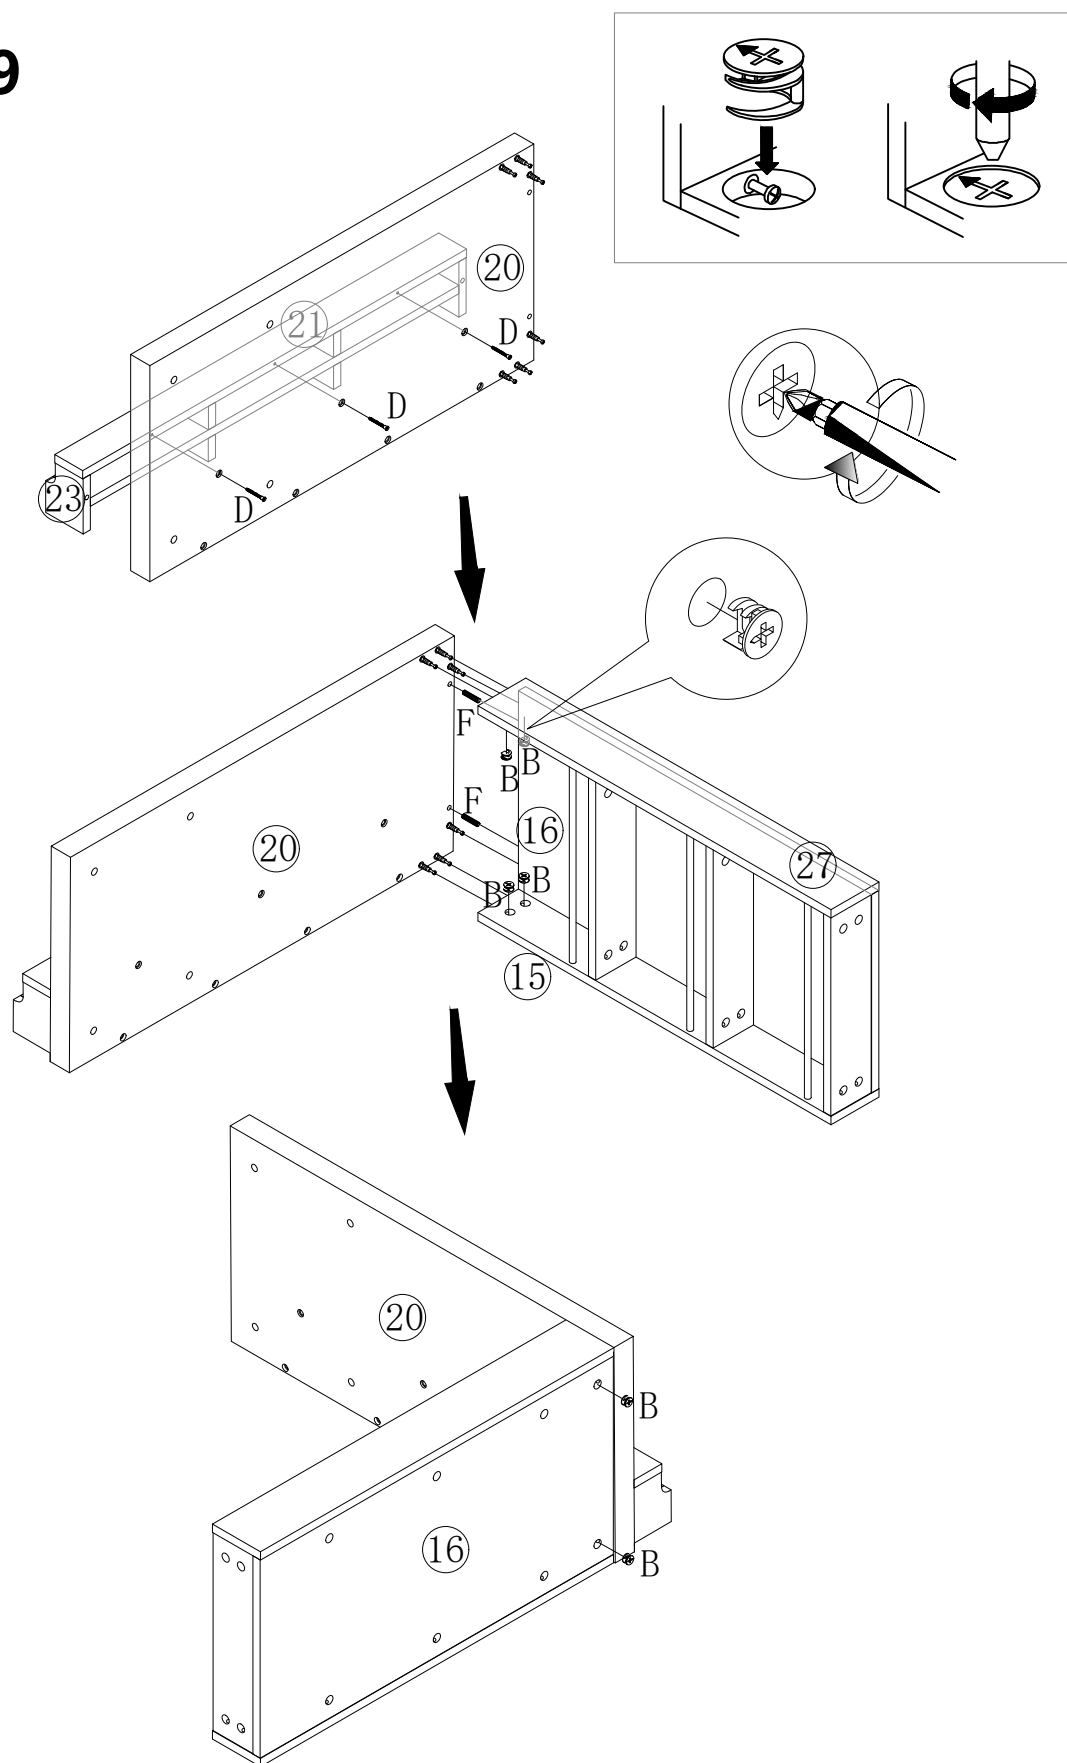


B  Cam Lock x6	F  Wooden sales x2	D  6*40 Screw x3
---	---	---

Assembly Instructions

 Step 10

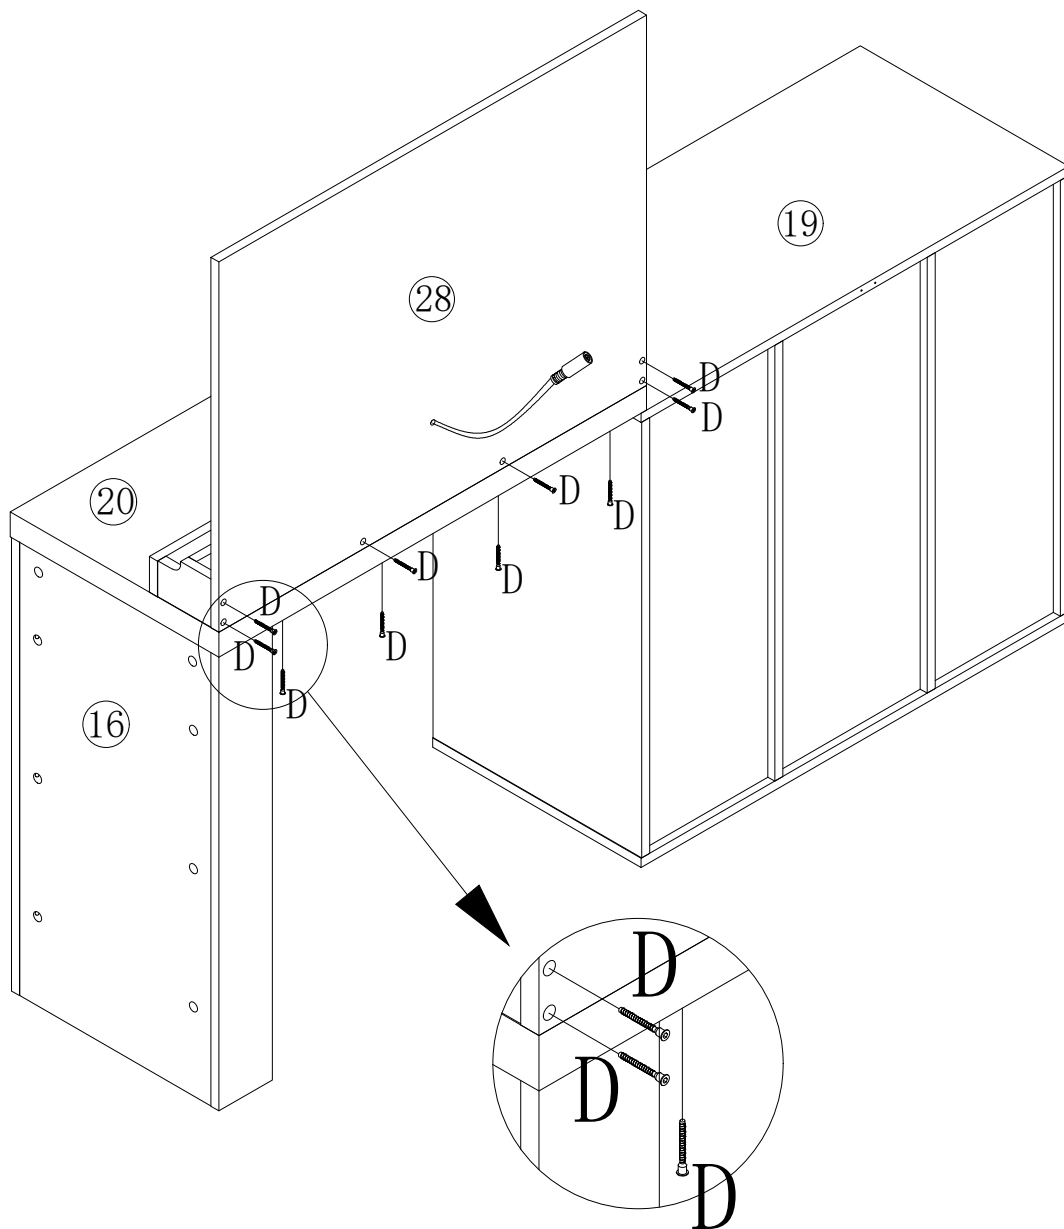



D

 

6*40 Screw x10

Assembly Instructions

  Step 11

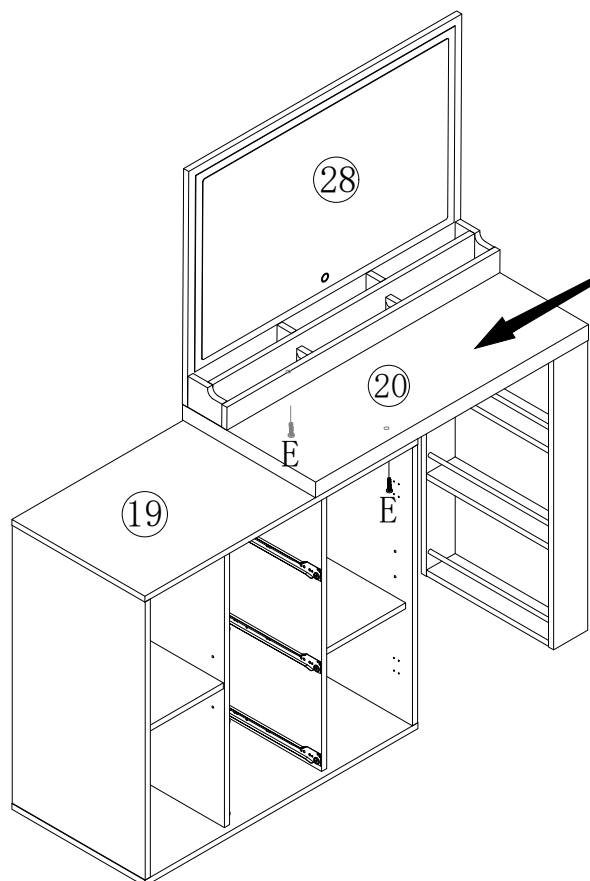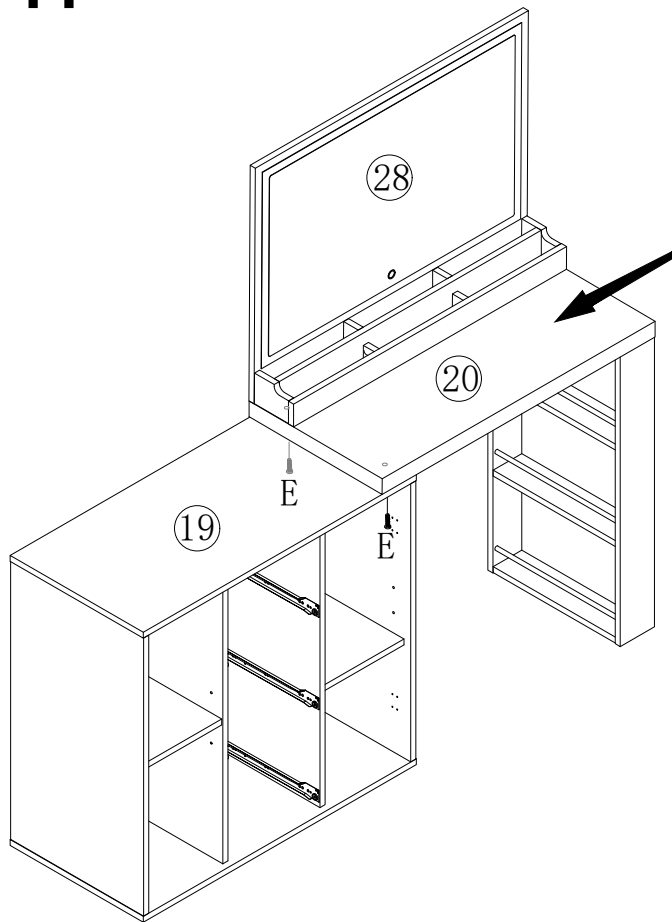



E



6*20 Screw x2

Assembly Instructions

  
Step 12

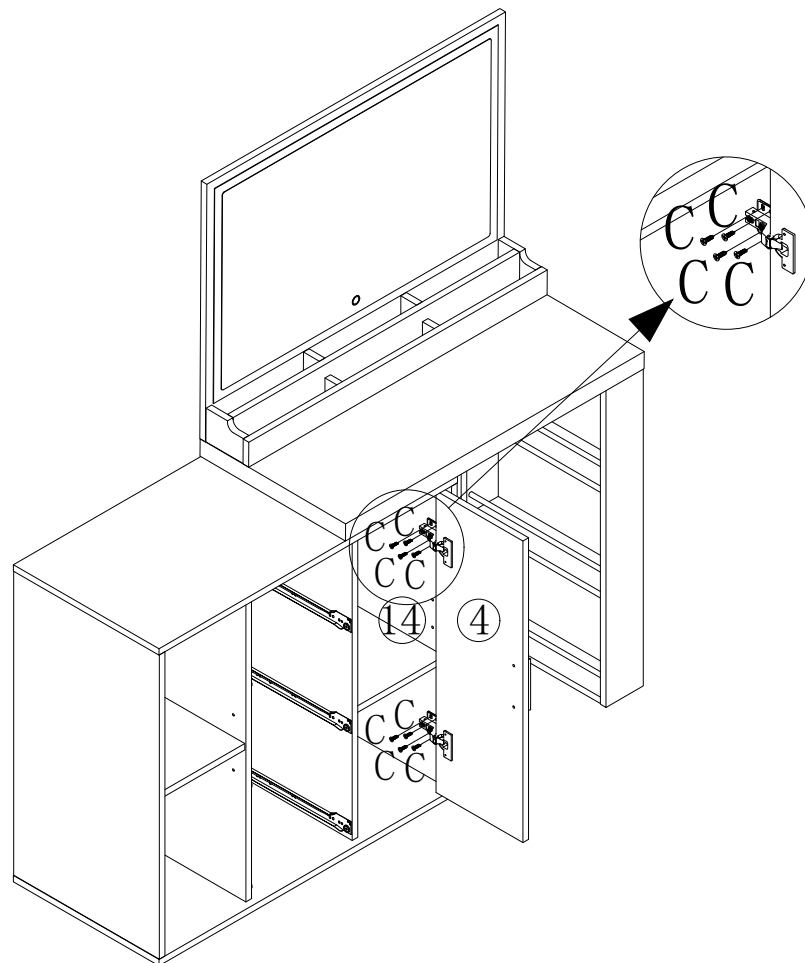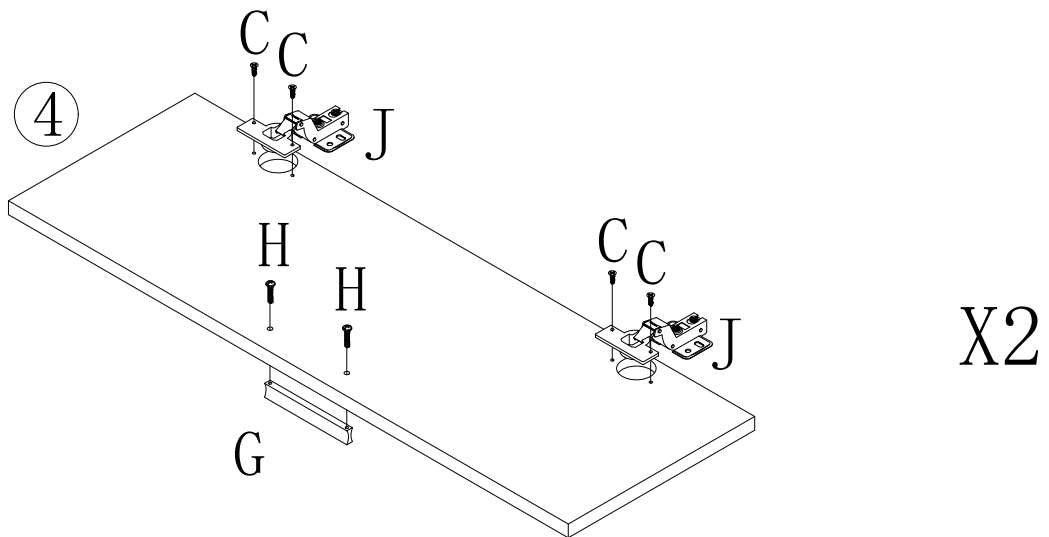

C  3.5*14 Screw x16	G  handle x2	H  4*18 Screw x4	J  Hinge x4
--	---	---	--

Assembly Instructions

 Step 13





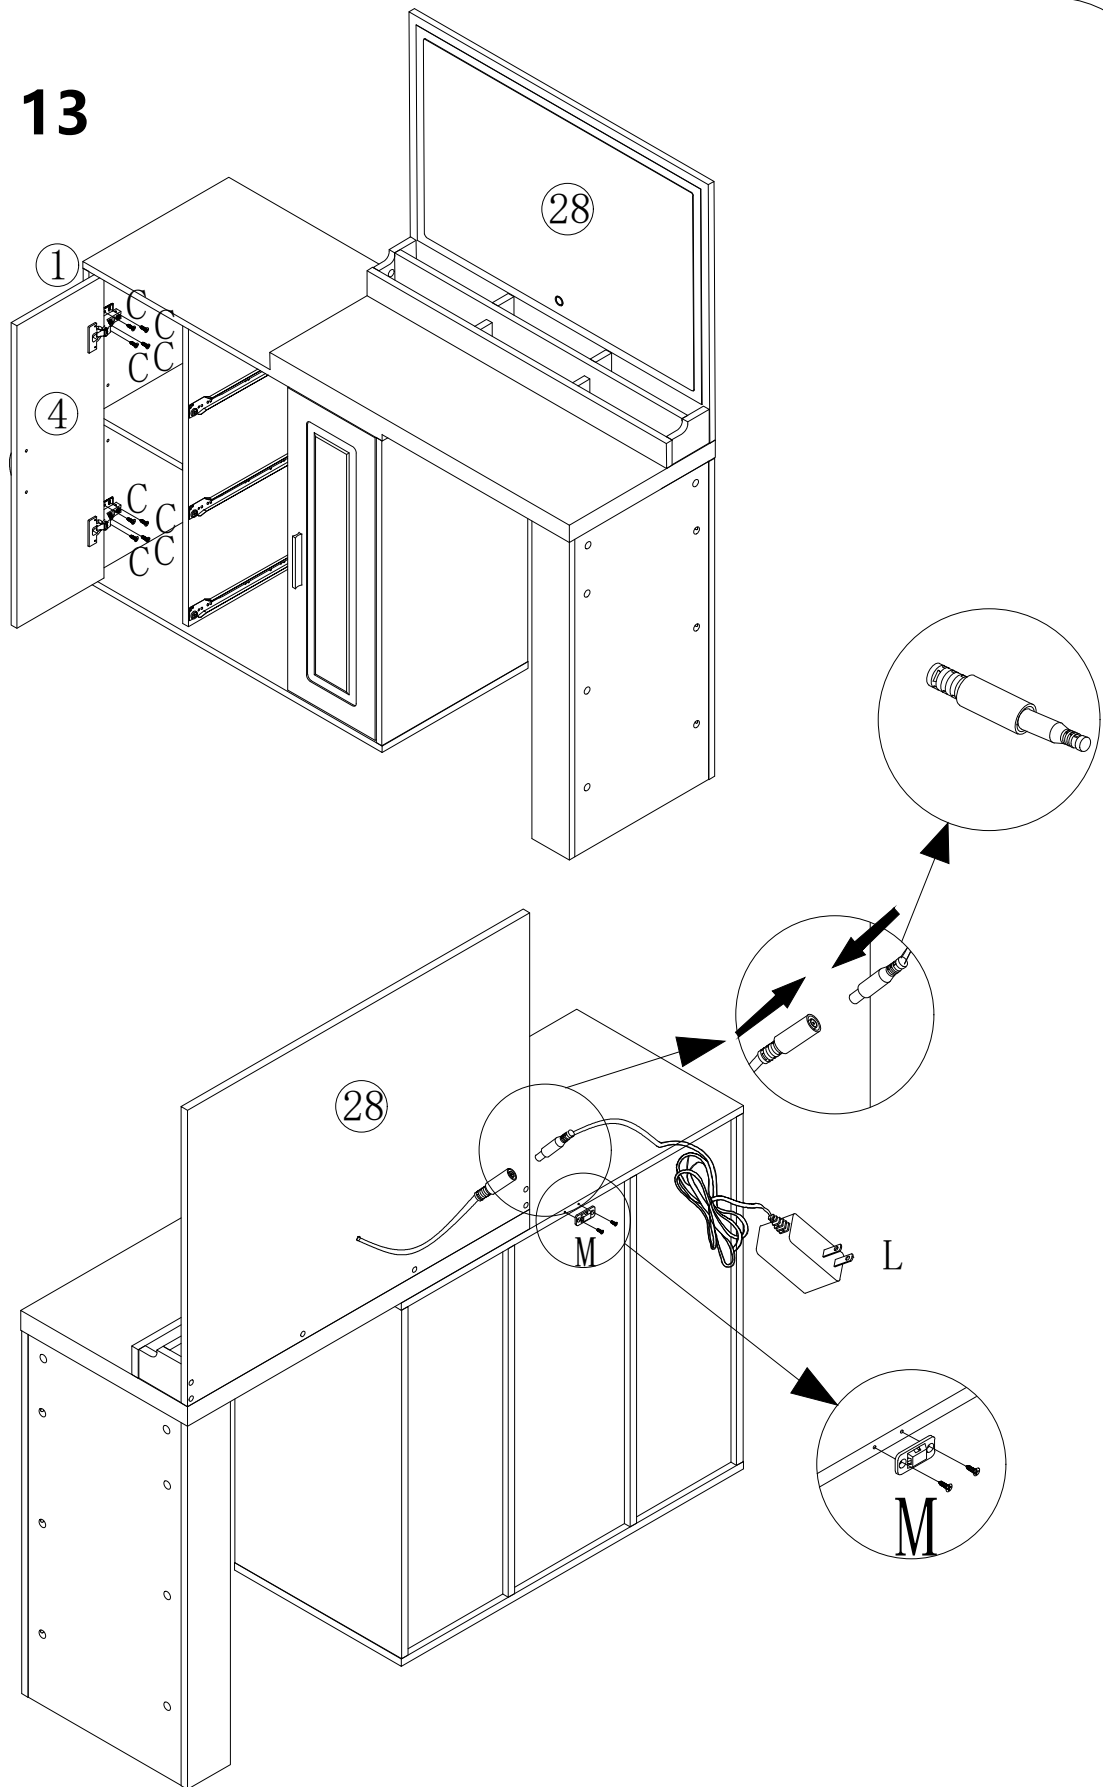


C  3.5*14 Screw x8	L  The power plug x1	M  Prevent falling accessories x1
---	---	--


Assembly Instructions

Step 14

     WALL

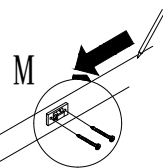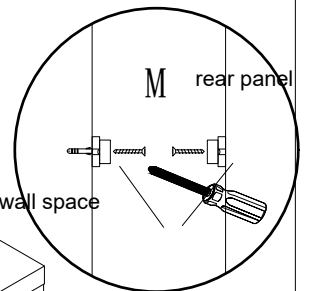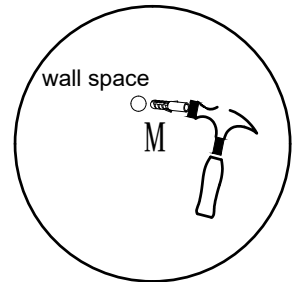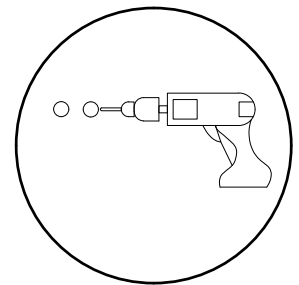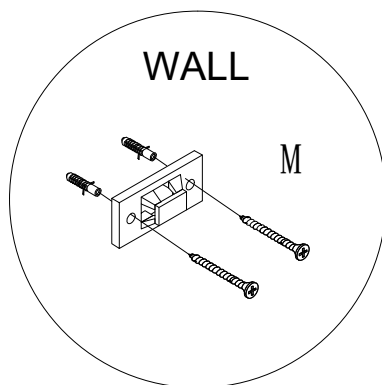


 After the cabinet assembly, please install the wall fixing device on the back of the cabinet to avoid accidents. Install at a location based on your needs.

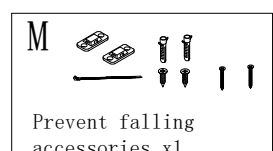


Assembly Instructions

 Step 15

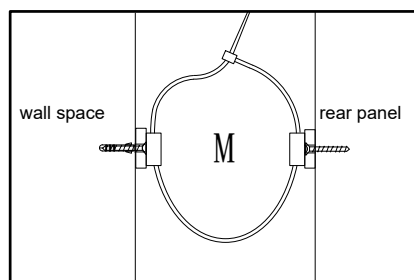


WALL

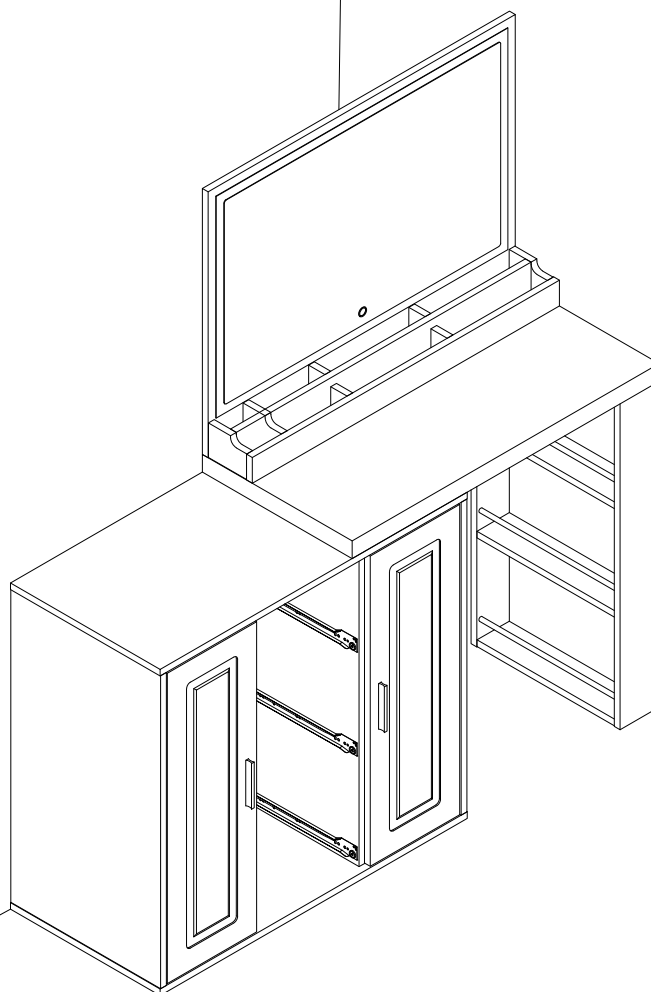 

Assembly Instructions

 Step 16

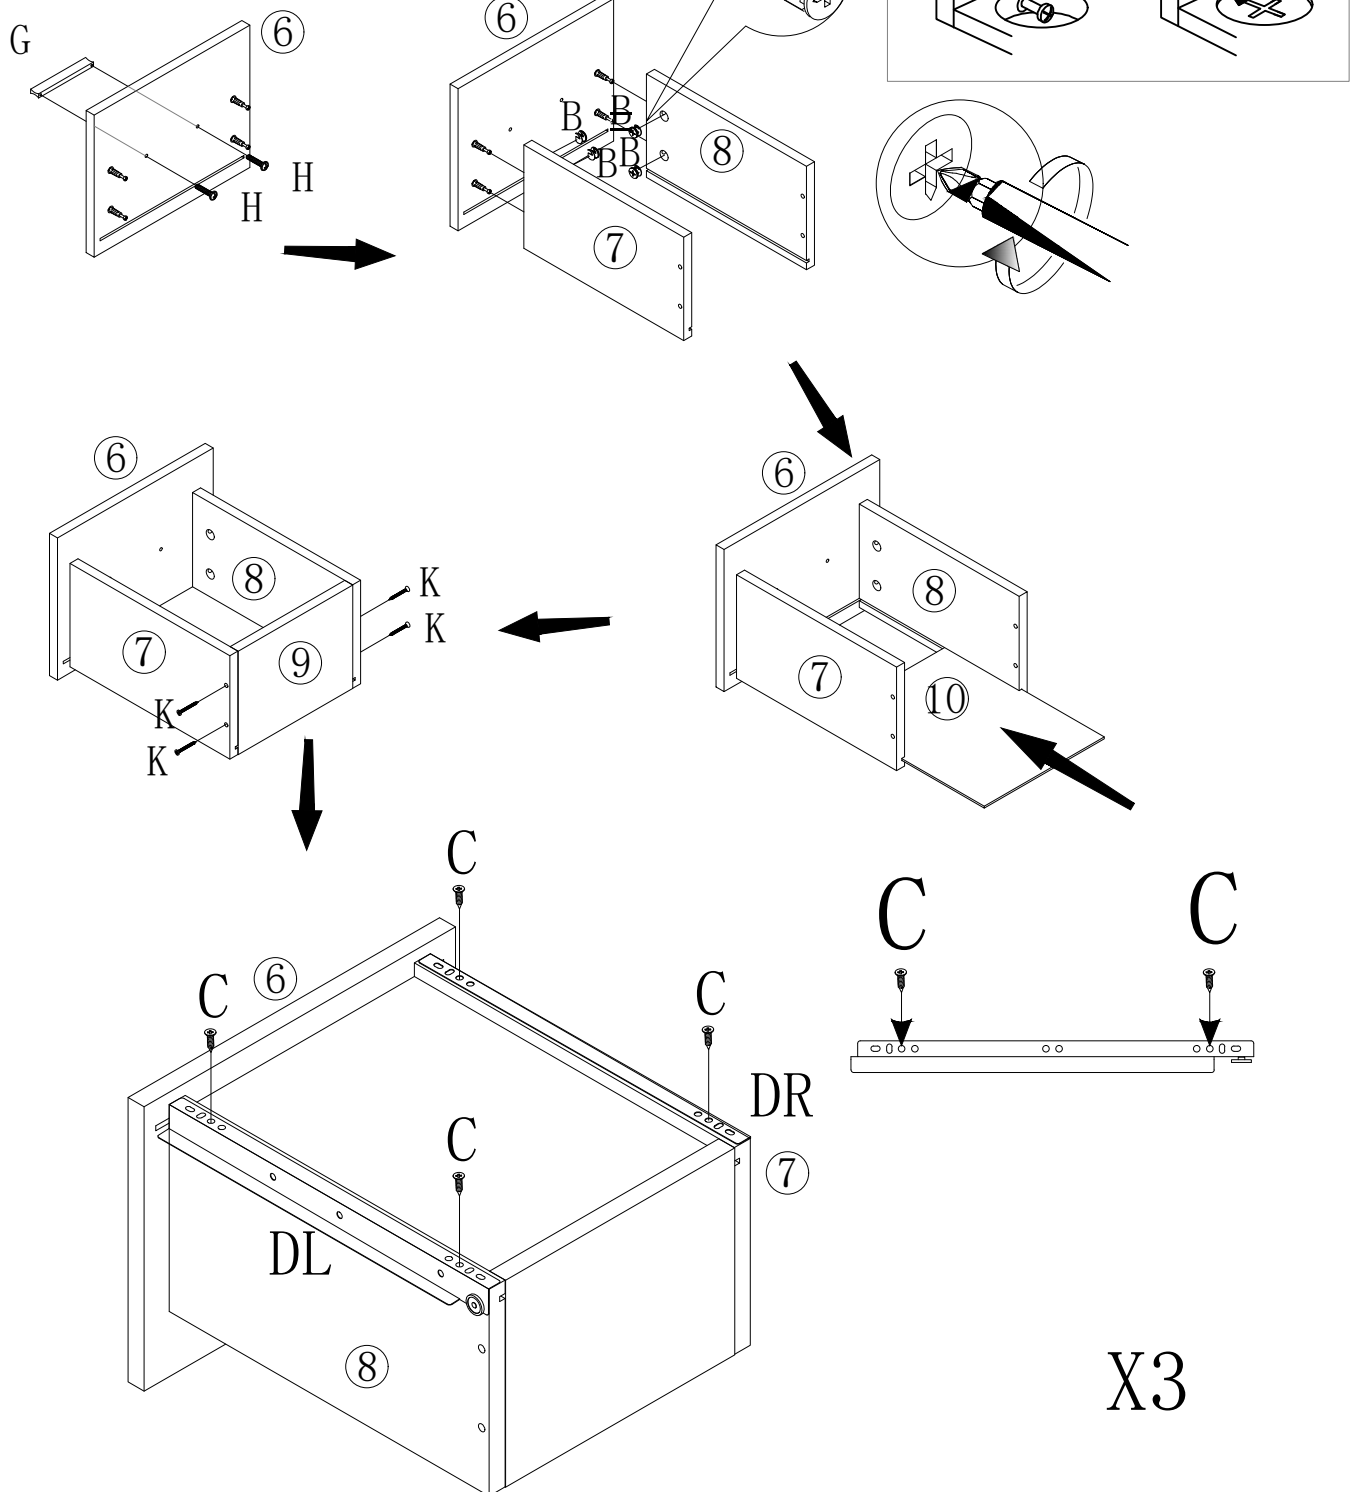

B  Cam Lock x12	C  3.5*14 Screw x12	G  handle x3	H  4*18 Screw x6
K  4*35 Screw x12	DL  Runner300mm x3	DR  Runner300mm x3	

Assembly Instructions

Step 17

