 


TV Stand

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

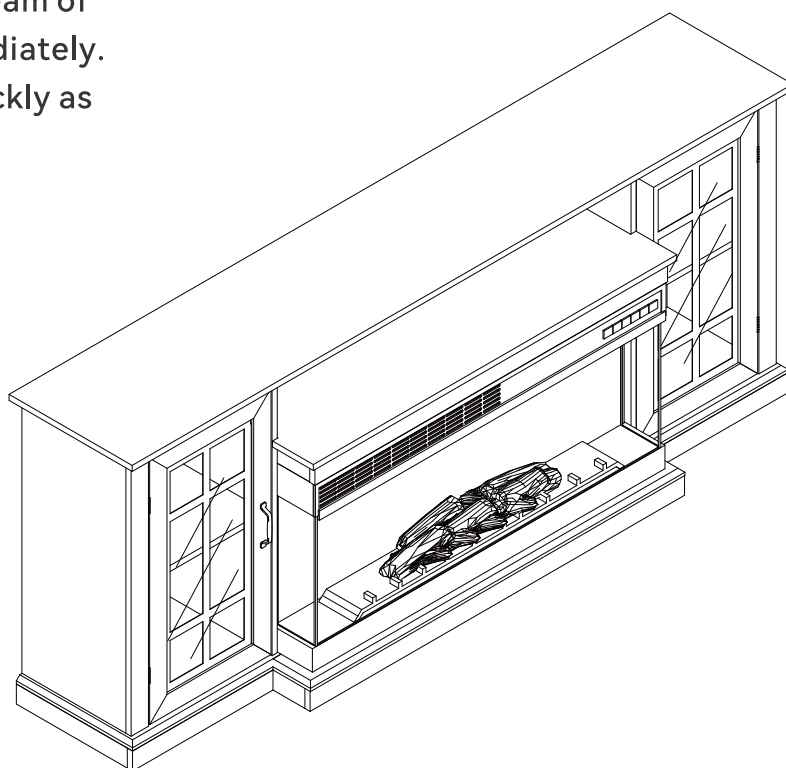

THE FOLLOWING INFORMATION:

- Order number
 - Purchase platform
 - Purchase date
 - Detailed description of the issue along with photos (if applicable)
-

EN

Important – Please read these instructions carefully before starting the installation.

Before Assembly



Thank you for choosing our product!

To ensure a smooth installation process, please read this guide carefully to familiarize yourself with the required tools, materials, and installation steps.

Follow the relevant sections to avoid any damage caused by improper installation, and make sure to review all operation and safety guidelines for correct installation procedures.

Packaging Notice:

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

Safety and Care Advice



Important :

Please read these instructions fully before starting assembly.

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.

Warning

In order to help prevent overturning, please follow these instructions.

- Use the anti tip strap or wall fixing method provided (if applicable).
- Do not allow children to climb or hang on the furniture.
- Do not open more than one drawer at a time.
- Do not place heavy items in the top drawers.
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose.
- Please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type.

Safety Instructions / Warnings



Please read and follow all instructions carefully before installation and use.

WARNING:

Risk of electric shock – Do not open or disassemble electrical parts.

- Use only the power cord specifically provided for this product.
Plug rating: 120V~ 60Hz.
- Do not use with damaged power cords or plugs.
- Keep power cables away from moving or sharp parts of the furniture.
- Do not use extension cords or power strips unless specifically approved for the load.
- This product is **not a toy**. Do not allow children to play with electrical components or moving parts.
- Children under 8 years old must be kept away from the furniture unless continuously supervised.
- Keep remote controls, control switches, and ports out of children's reach.
- Always **disconnect the product from power** before cleaning, maintenance, or relocation.
- Do not attempt to open, modify, or repair electrical components.
- **Repairs must be performed by qualified professionals only.**
- Do not insert any foreign objects into openings or mechanisms.
- Clean with a dry cloth or a slightly damp soft cloth. Do not use solvents.
- This product is intended **for indoor** use only in dry environments.
- Do not expose the furniture to moisture, liquids, or direct sunlight.
- * Ensure stability and clearance around any moving parts (e.g., lift mechanisms, recliners).
- Do not overload power outlets or USB ports beyond the specified ratings.
- **Always unplug the product when it is not in use.**

FCC Information:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

Customer Service Guide



Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6×30mm screws.”

Contact Us:

By Email:

Send an email with the subject line "Missing Parts Issue." Include the following information in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with the order details, with the subject line "Product Damage Issue."

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team.
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Helpful Tips

To process your issue efficiently, please prepare the following information:

- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

 
Thank you for your trust and support!
We hope you enjoy using our product!

Parts List - Panels




EN


Please check you have all the panels listed below.

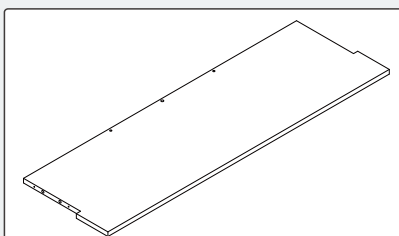


1 1050*327*15mm **x1**

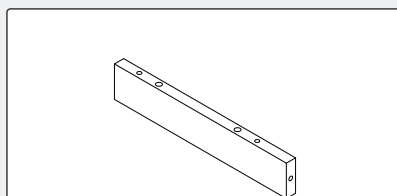 


2 272*55*15mm **x1**

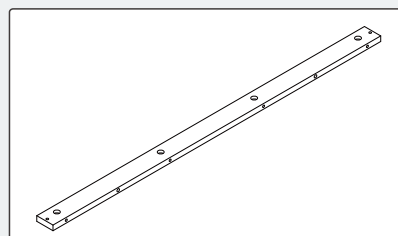 


3 1020*55*15mm **x1**

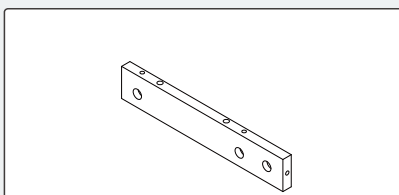 


4 272*55*15mm **x1**

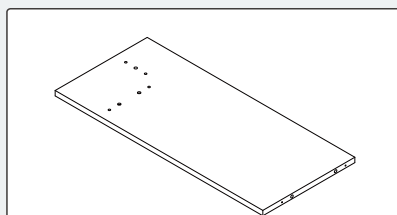 


5 680*295*15mm **x1**

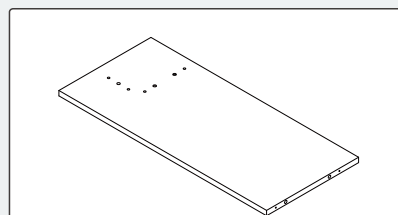 


6 680*295*15mm **x1**

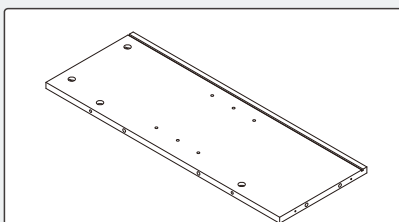 


7 680*295*15mm **x1**

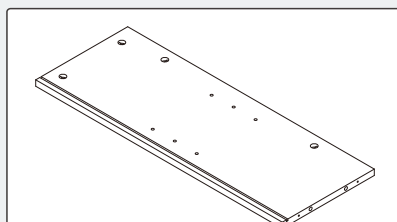 


8 680*295*15mm **x1**

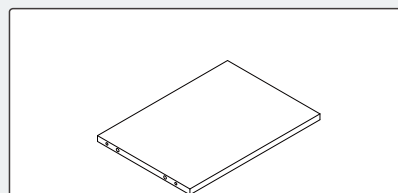 


9 387*276*15mm **x2**

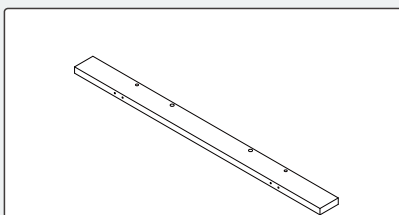 


10 680*50*15mm **x2**

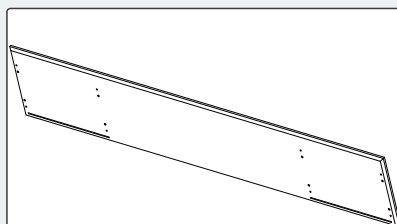 


11 1905*335*18mm **x1**

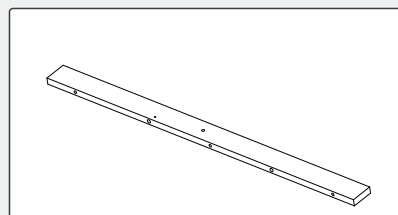 


12 800*50*15mm **x1**

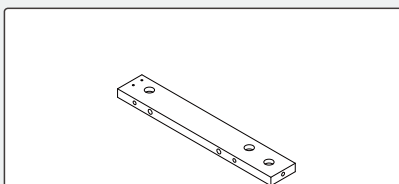 










13 319*50*15mm **x1**

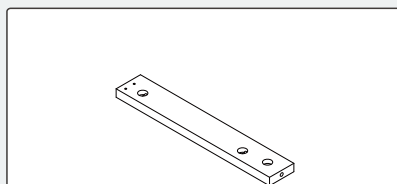 

14 319*50*15mm **x1**

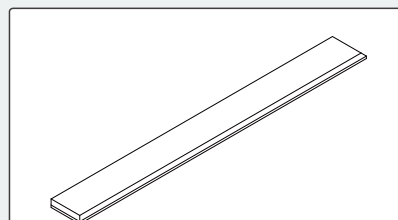 

15 1085*120*18mm **x1**

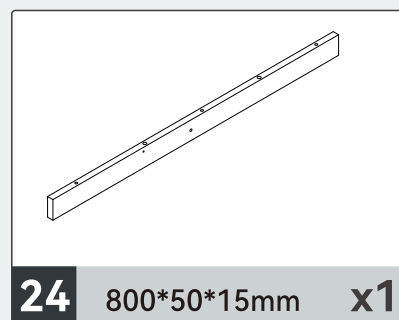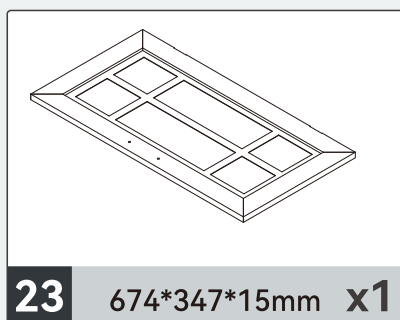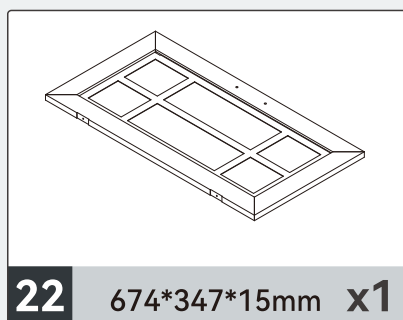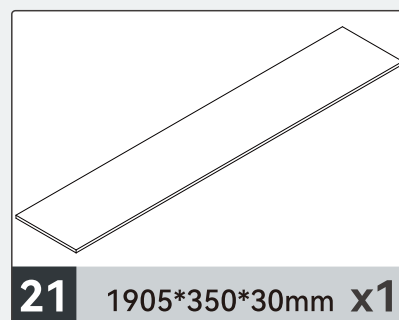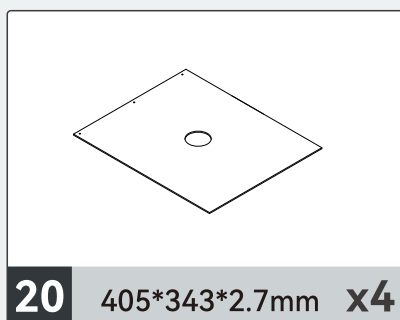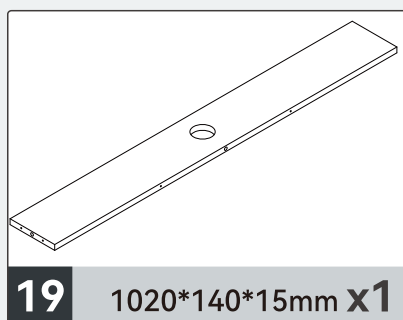      
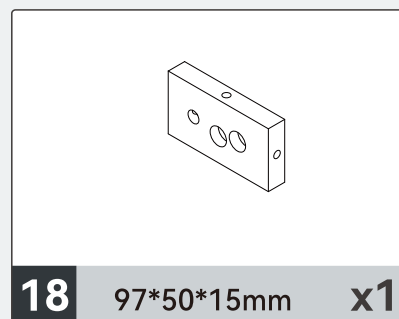 
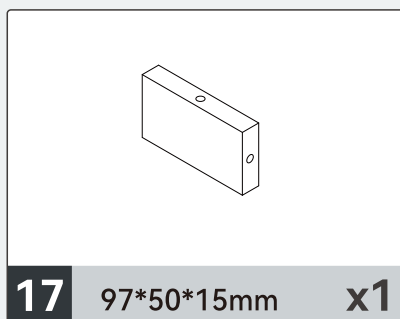 
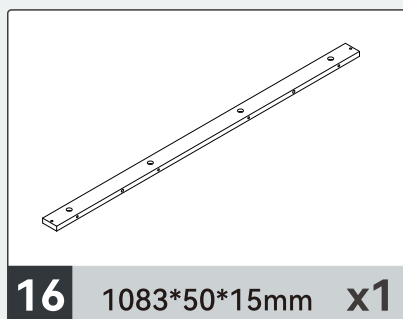 






Parts List - Fittings



Please check you have all the fittings listed below.

        Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than required.

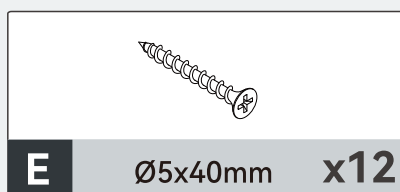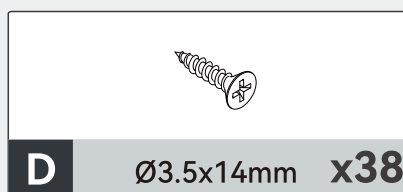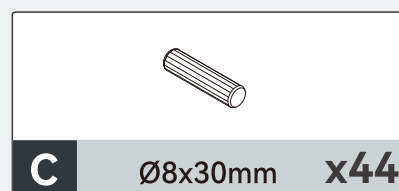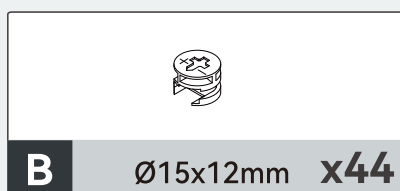

		
G Door Stopper x2	H Metal Plate x2	I Ø3x16mm x8
		
J Handle & Fixings x2	K Hinges x4	L Protective Foot x9
		
M Wall Fixing Pack x2	N Bracket x2	O L Shape Bracket x2
		
P H bar x2	Q Ø3x16mm x12	R Ø4x14mm x8
		
S Adjustable Foot (Hx50mm) x2	T Shelf Support Pin x8	

 
Tools required



Phillips screwdriver
(medium & large)

Ruler

Use this ruler to help correctly identify the screws

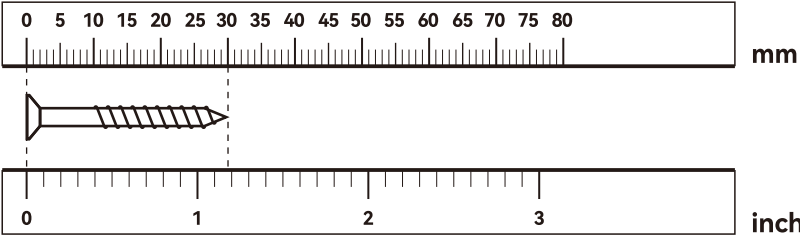

The screws length is measured from the head to the point (30mm screw shown).

 


Using Camlocks

Step 1


Connect the male camlock as directed in the assembly instructions using a screwdriver.

DO NOT OVER TIGHTEN.

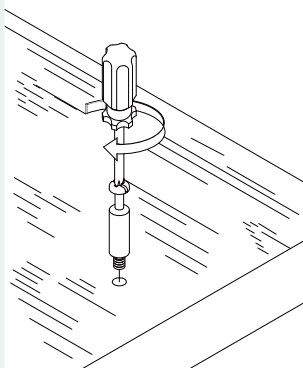

Step 2

 
Push the male camlock into the entry hole.

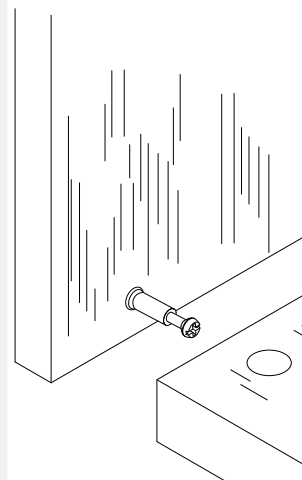

Step 3

Insert the female camlock as shown in the instructions.

 Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

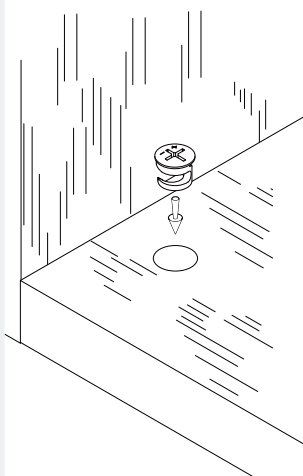


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

 
The joint is now secure.

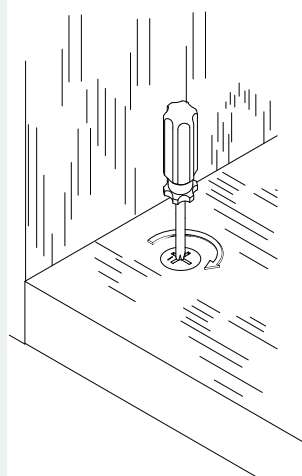


Assembly Instructions




 EN

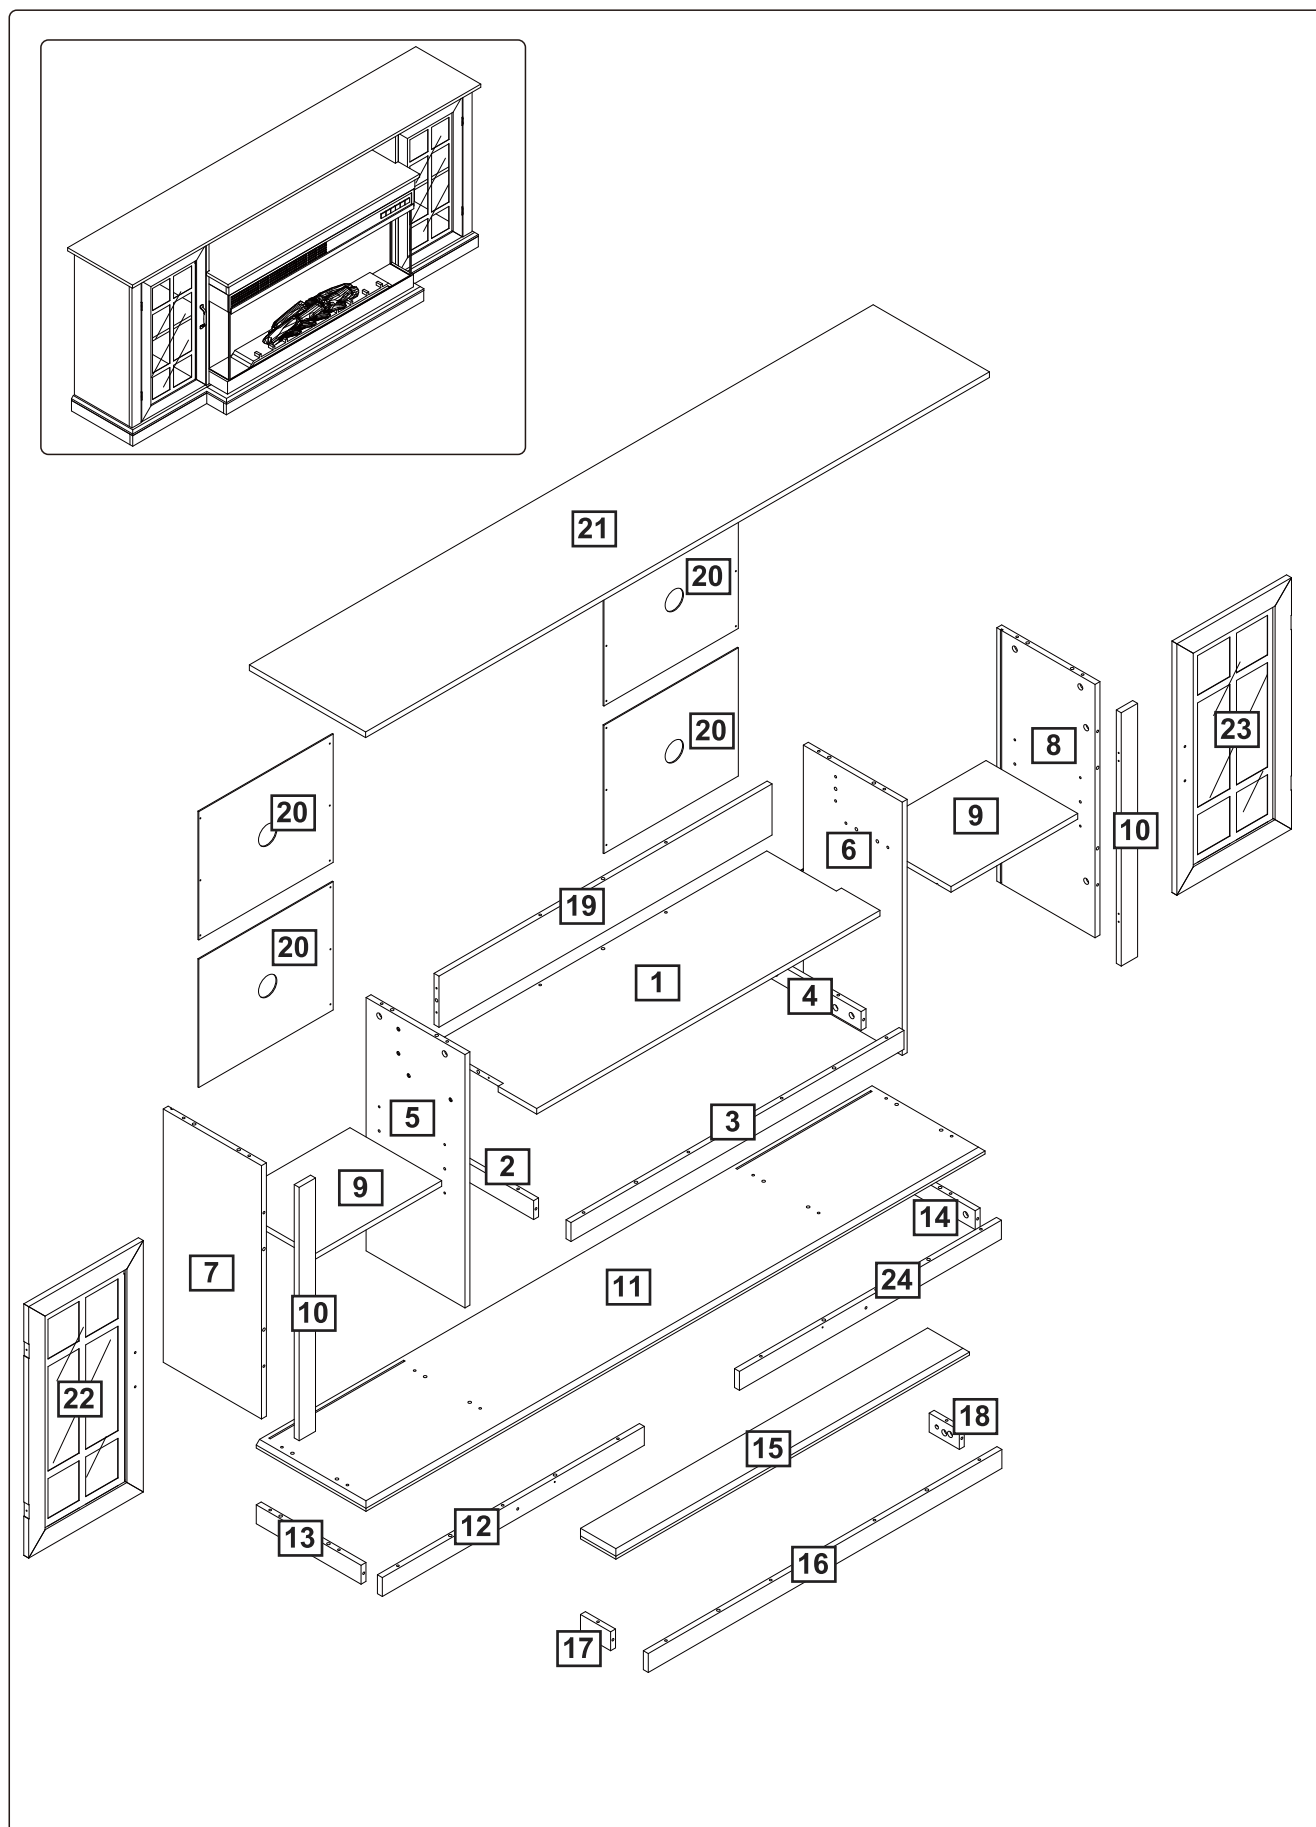



 
Step 1

A		
Ø7x39mm		x8
C		
Ø8x30mm		x4

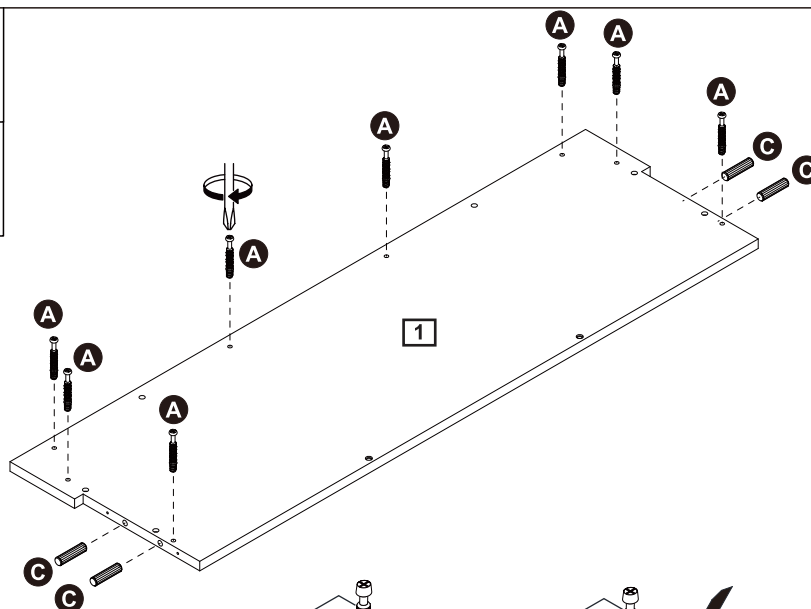 


CAM-LOCK

   
Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example)

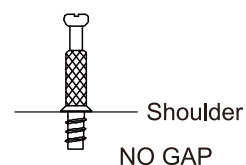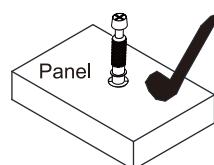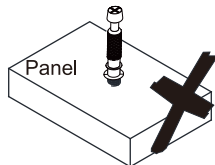

Insert wooden dowel (C) into part (1).
Attach cam bolt (A) to part (1) with a screwdriver.

 Step 2

A		
Ø7x39mm		x2
C		
Ø8x30mm		x6

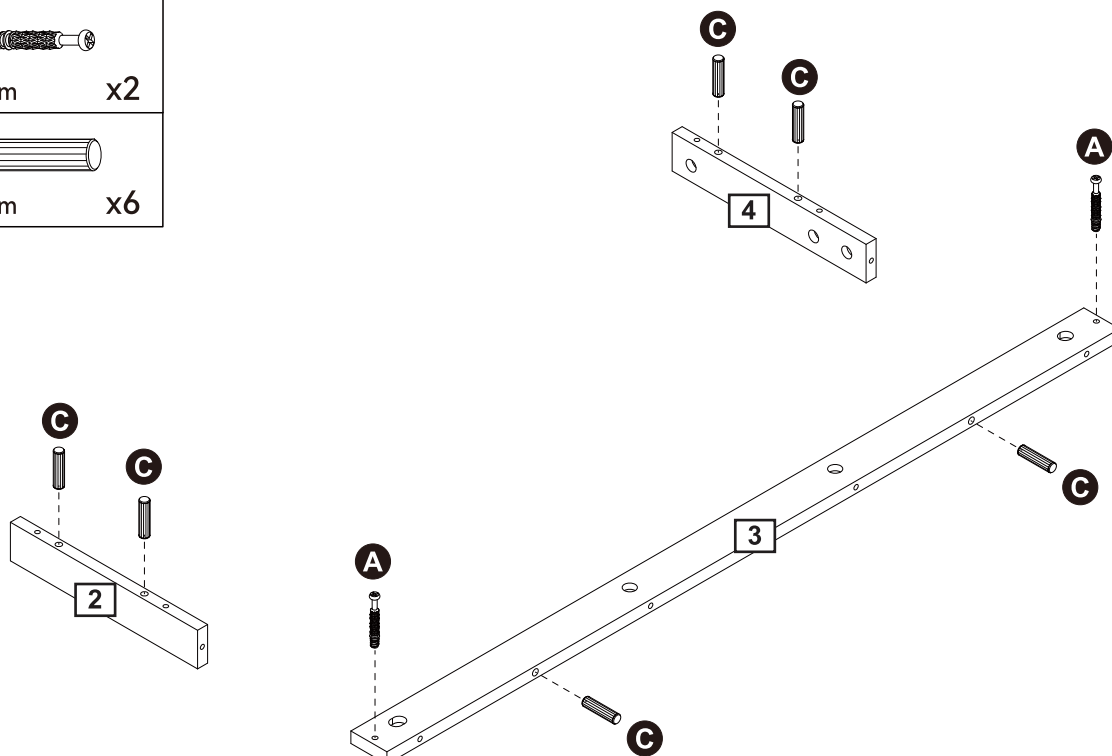 

Attach cam bolt (A) to part (3) with a screwdriver.
Insert wooden dowel (C) into part (2, 3, 4).

 
Step 3

B



Ø15x12mm

x2

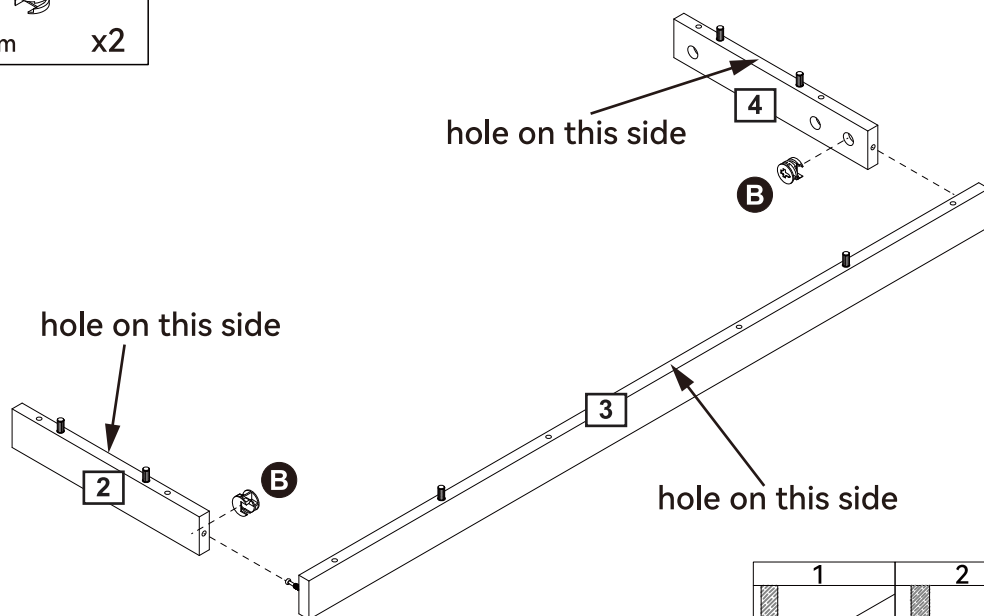

Attach part (2, 4) to part (3), then insert and secure cam lock (B) to part (2, 4) to lock it .

 
Step 4

B





Ø15x12mm

x8

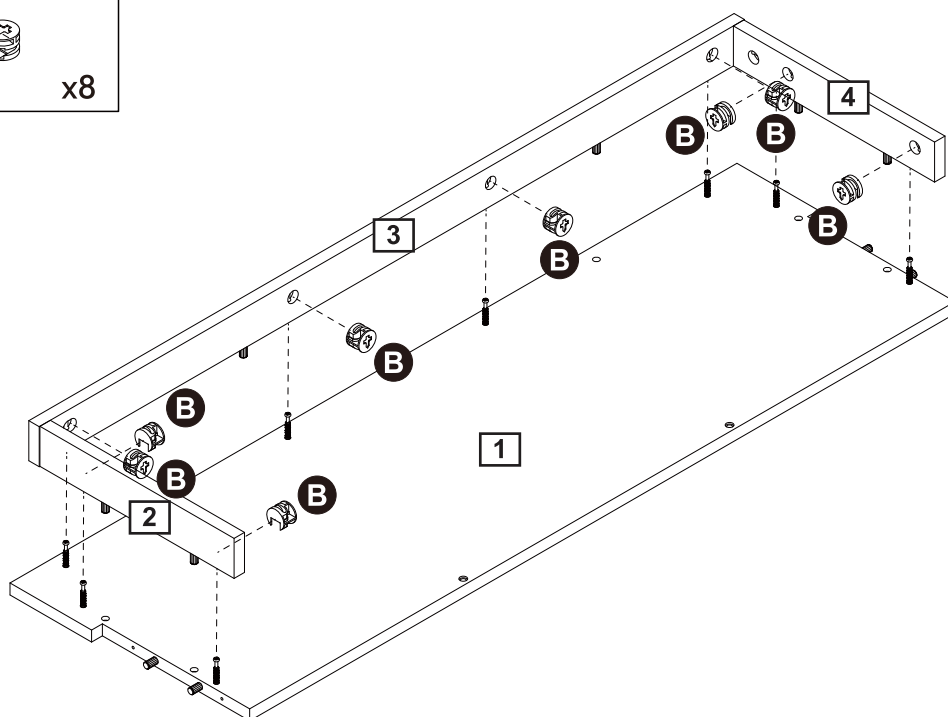



Attach part (2, 3, 4) to part (1), then insert and secure cam lock (B) to part (2, 3, 4) to lock it.

  Step 5

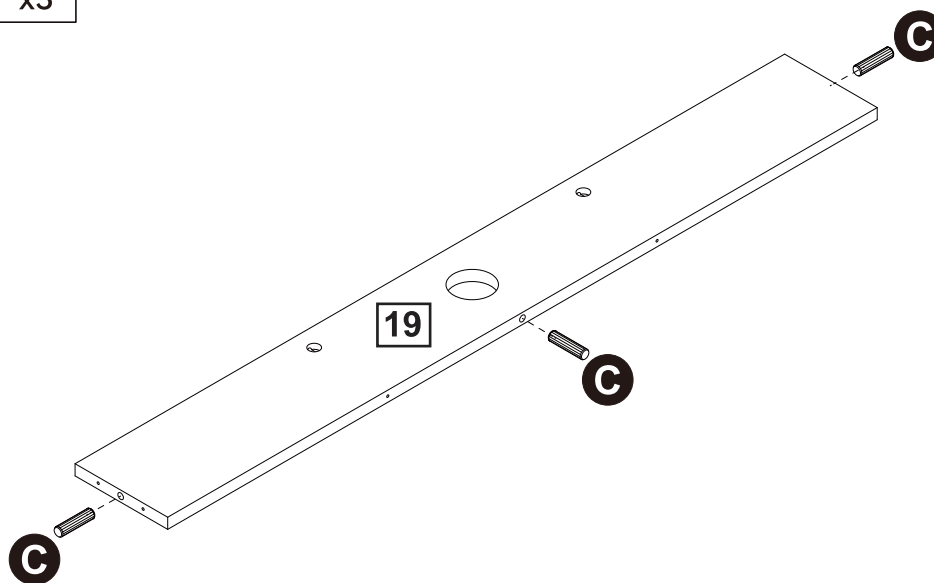


Insert wooden dowel (C) into part (19).

  Step 6

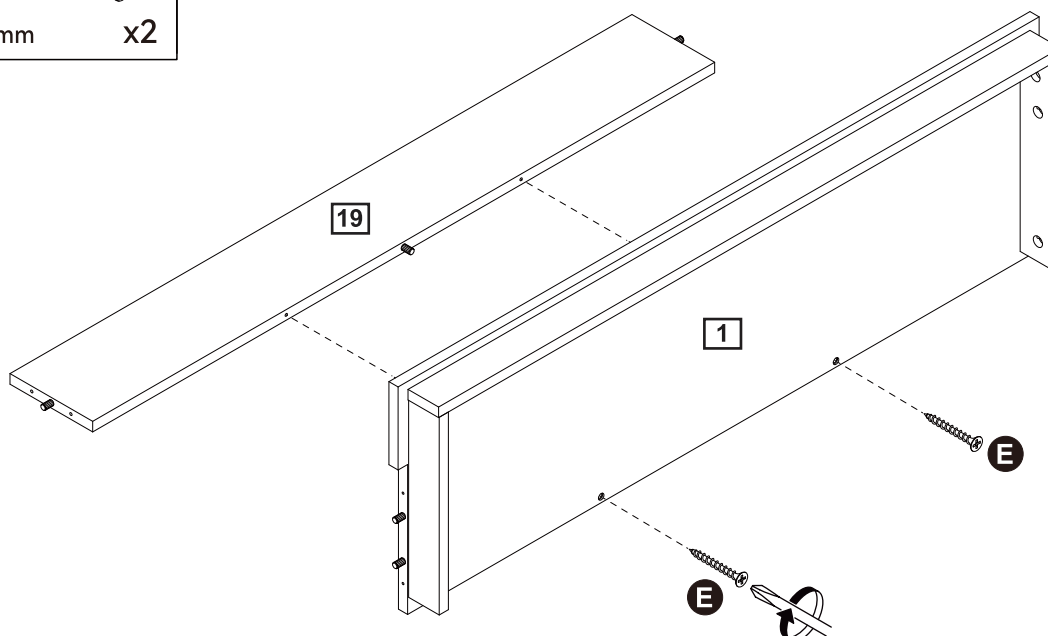


Attach part (19) to part (1) using screw (E) with a screwdriver.

 Step 7

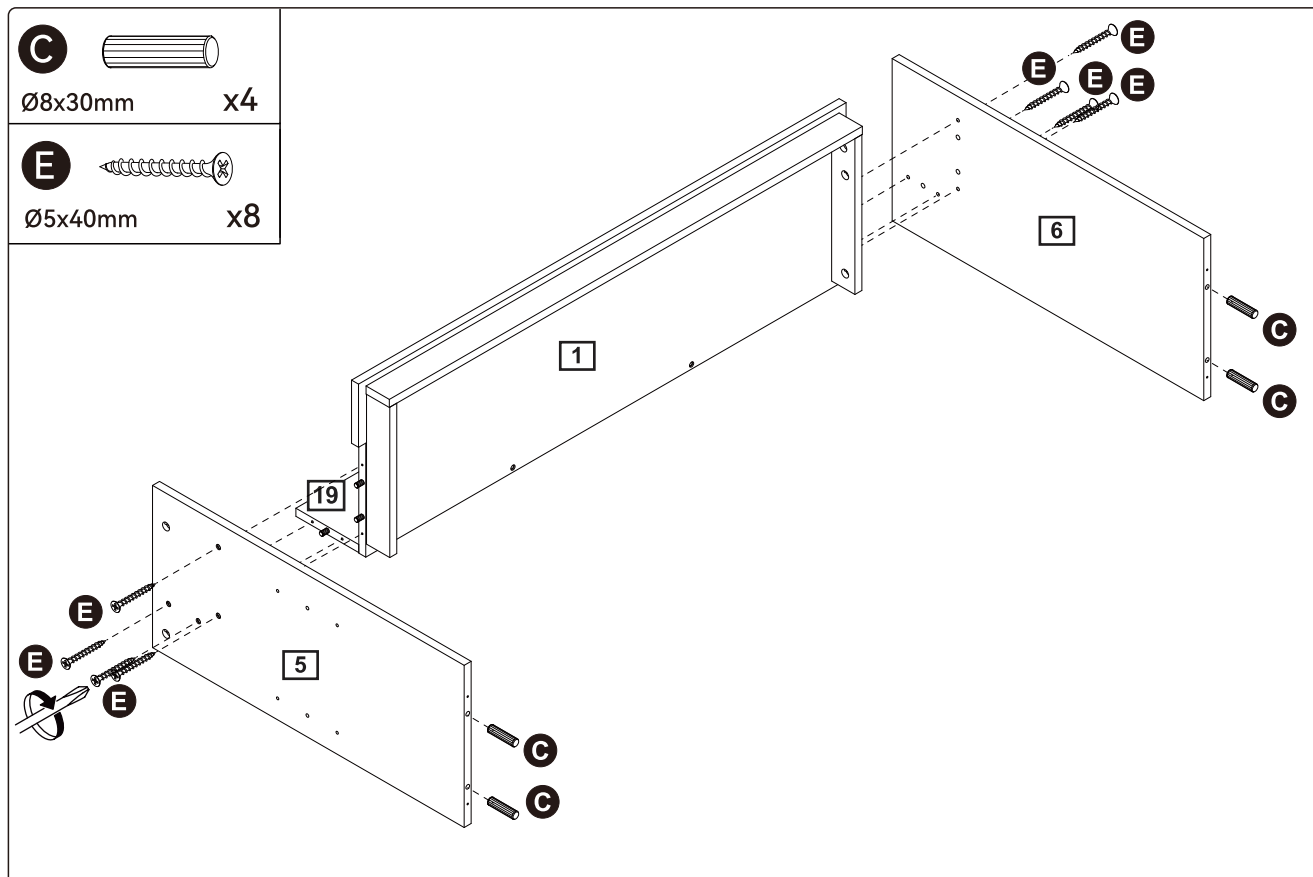


Attach part (5) to part (1, 19) using screw (E) with a screwdriver.
Then attach part (6) to part (1, 19) using screw (E) with a screwdriver.
Insert wooden dowel (C) into part (5, 6).

 Step 8

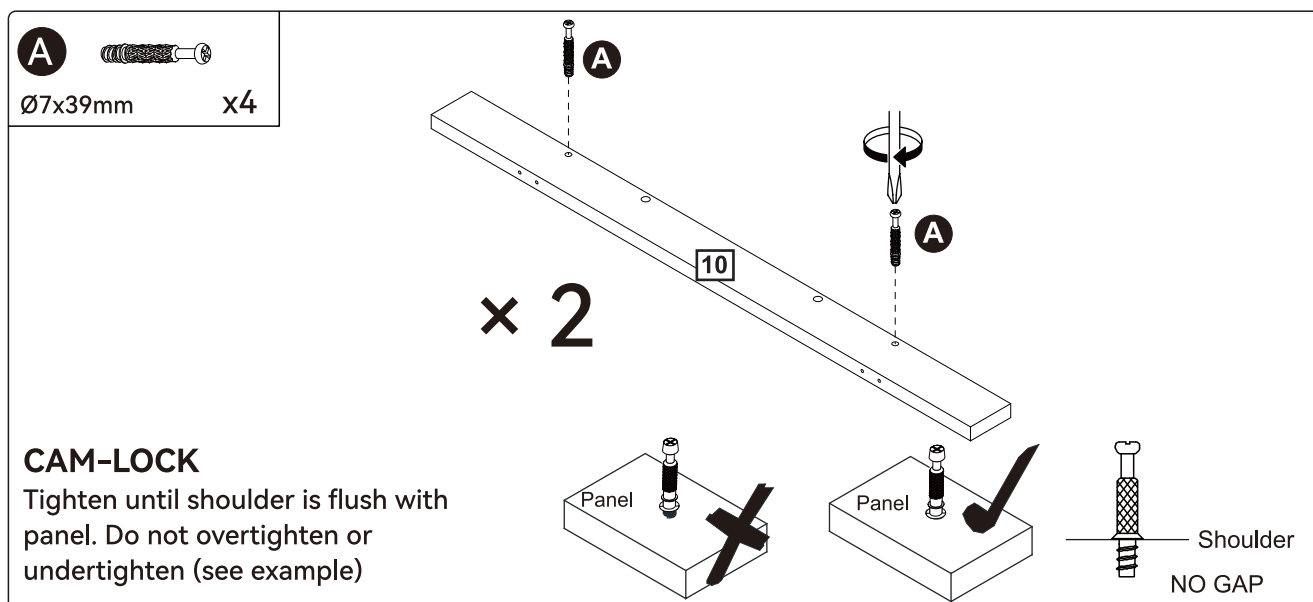


Attach male camlock (A) to part (10) with a screwdriver.

 Step 9

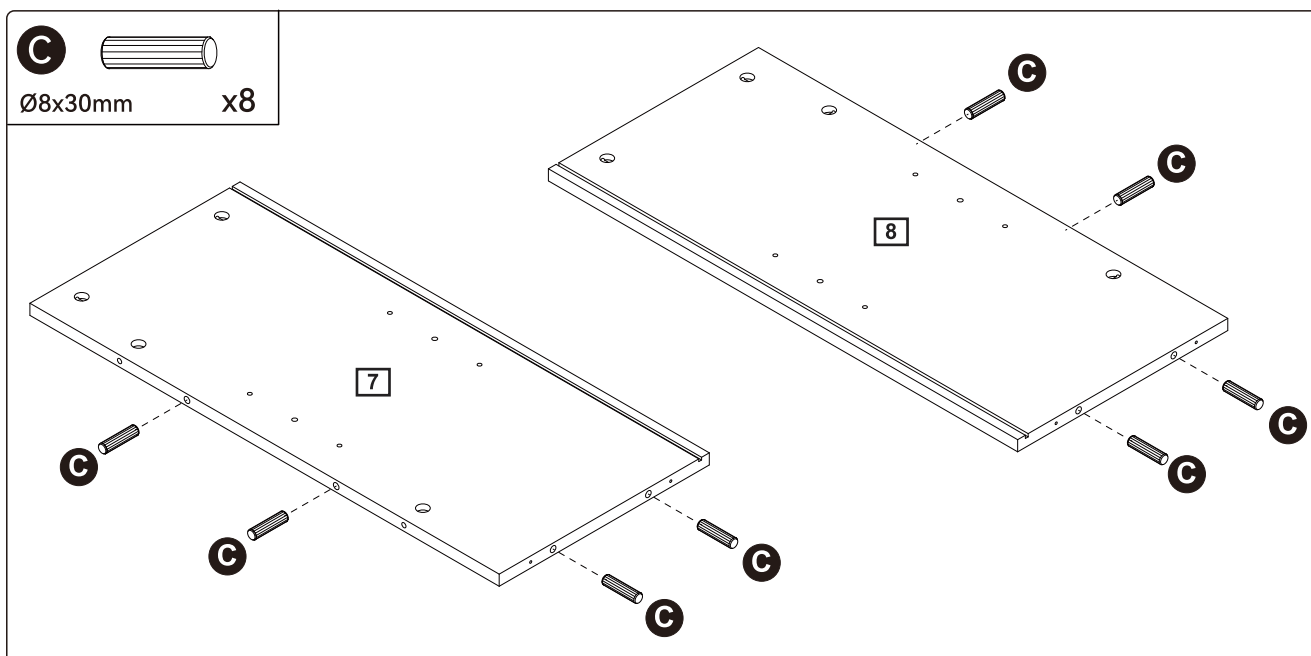


Insert wooden dowel (C) into part (7, 8).

 Step 10

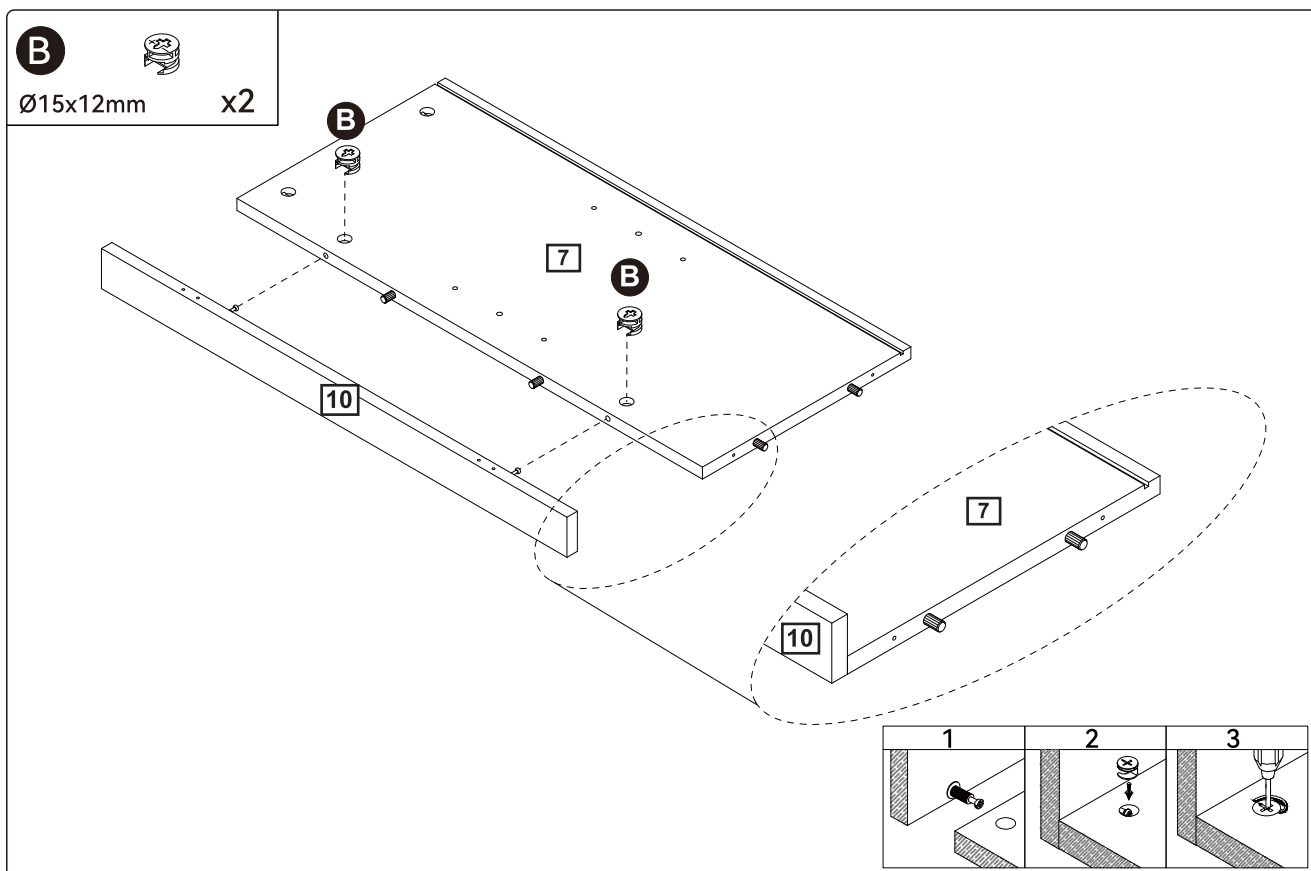


Attach part (10) to part (7), then insert and secure female camlock (B) to part (7) to lock it.

 Step 11

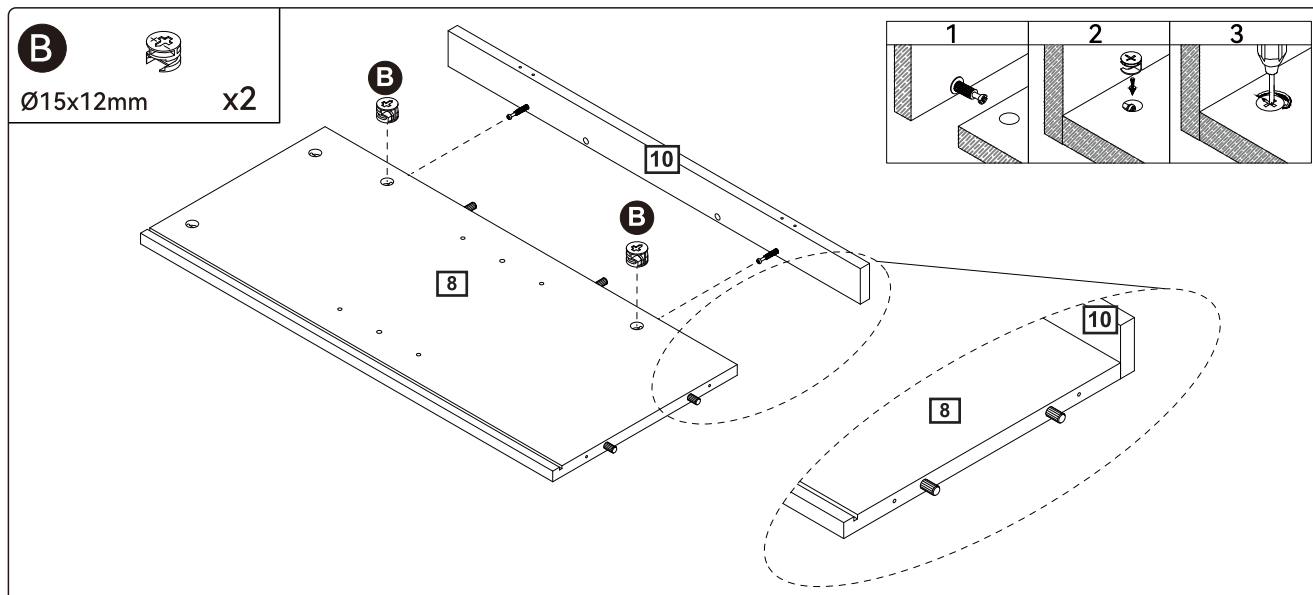


Attach part (10) to part (8), then insert and secure female camlock (B) to part (8) to lock it.

 Step 12

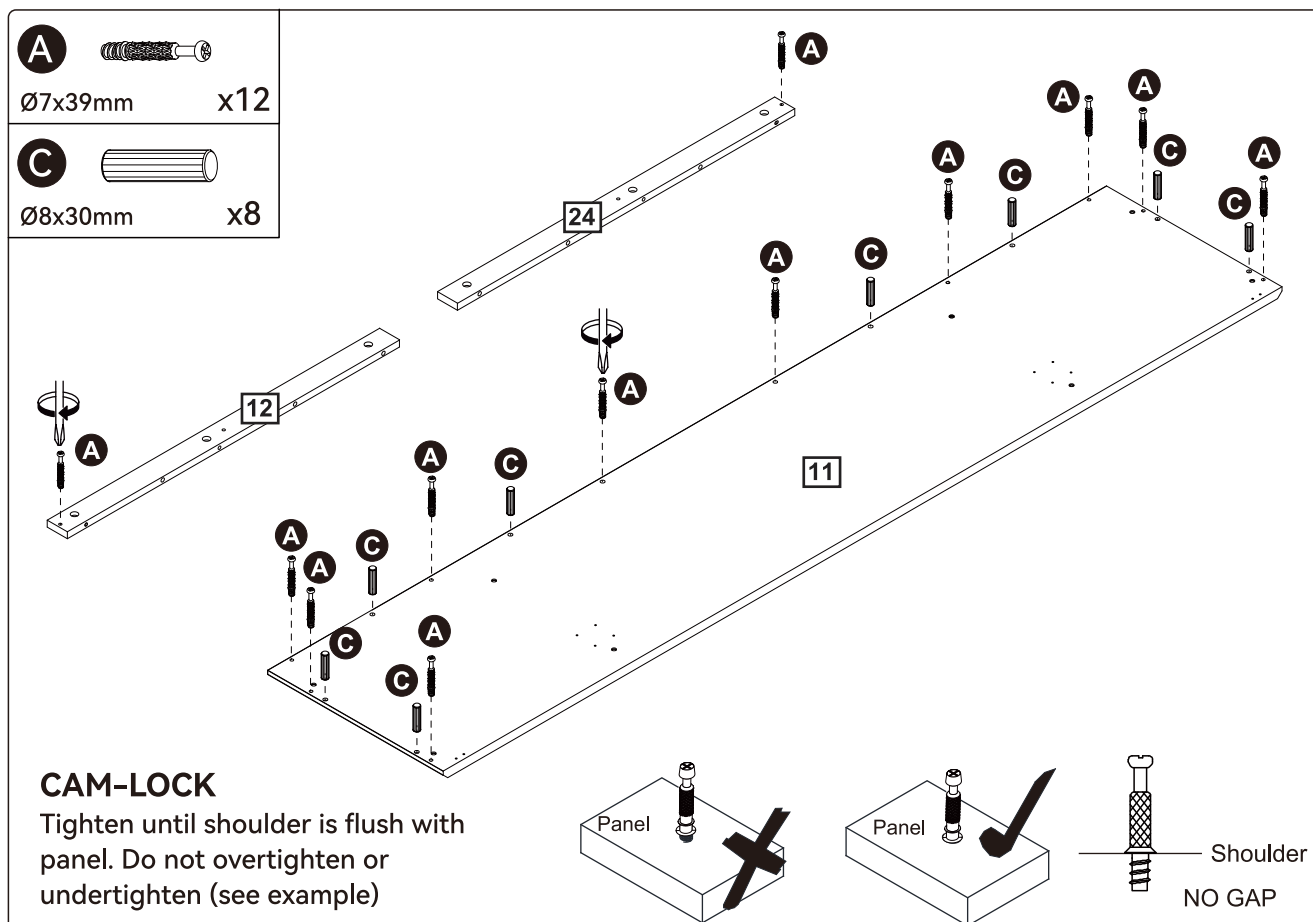


Attach cam bolt (A) to part (11, 12, 24) with a screwdriver. Insert wooden dowel (C) into part (11).

 Step 13

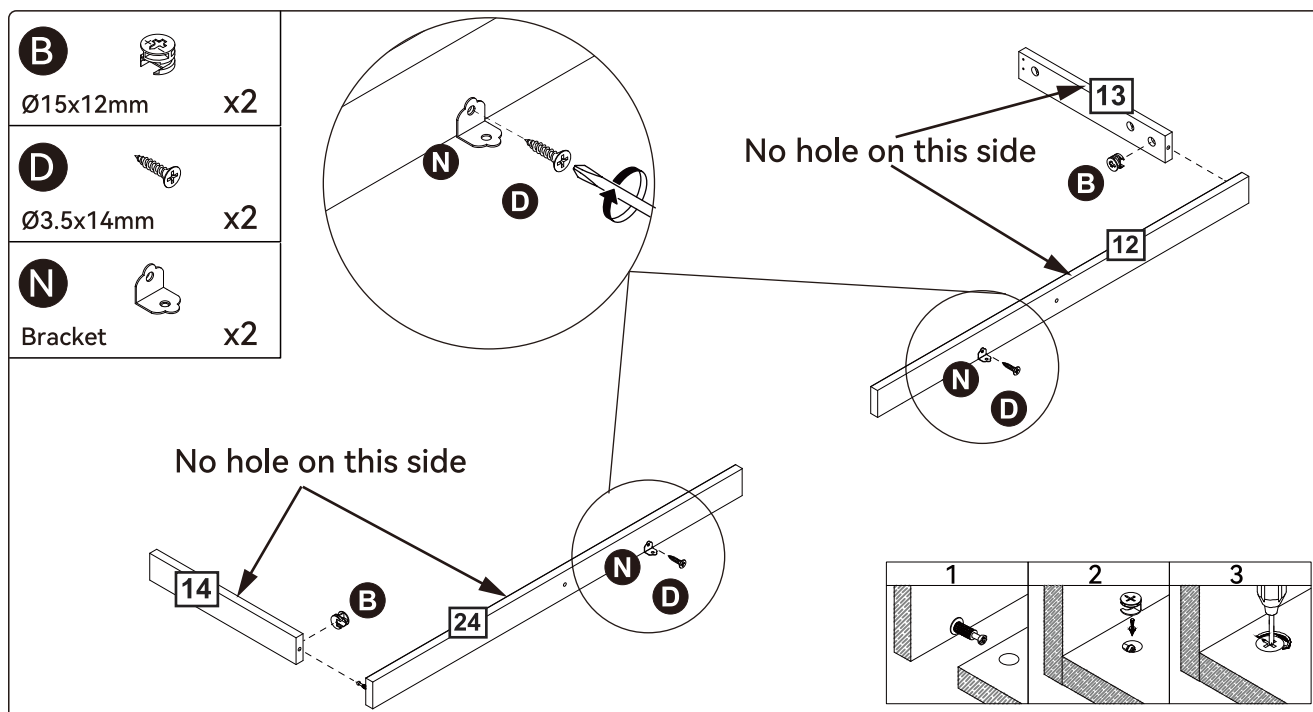


Attach part (N) to part (12,24) using screw (D) with a screwdriver.
Attach part (13) to part (12) and part (14) to part (24), then insert and secure cam lock (B) to part (13, 14) to lock it.

 Step 14

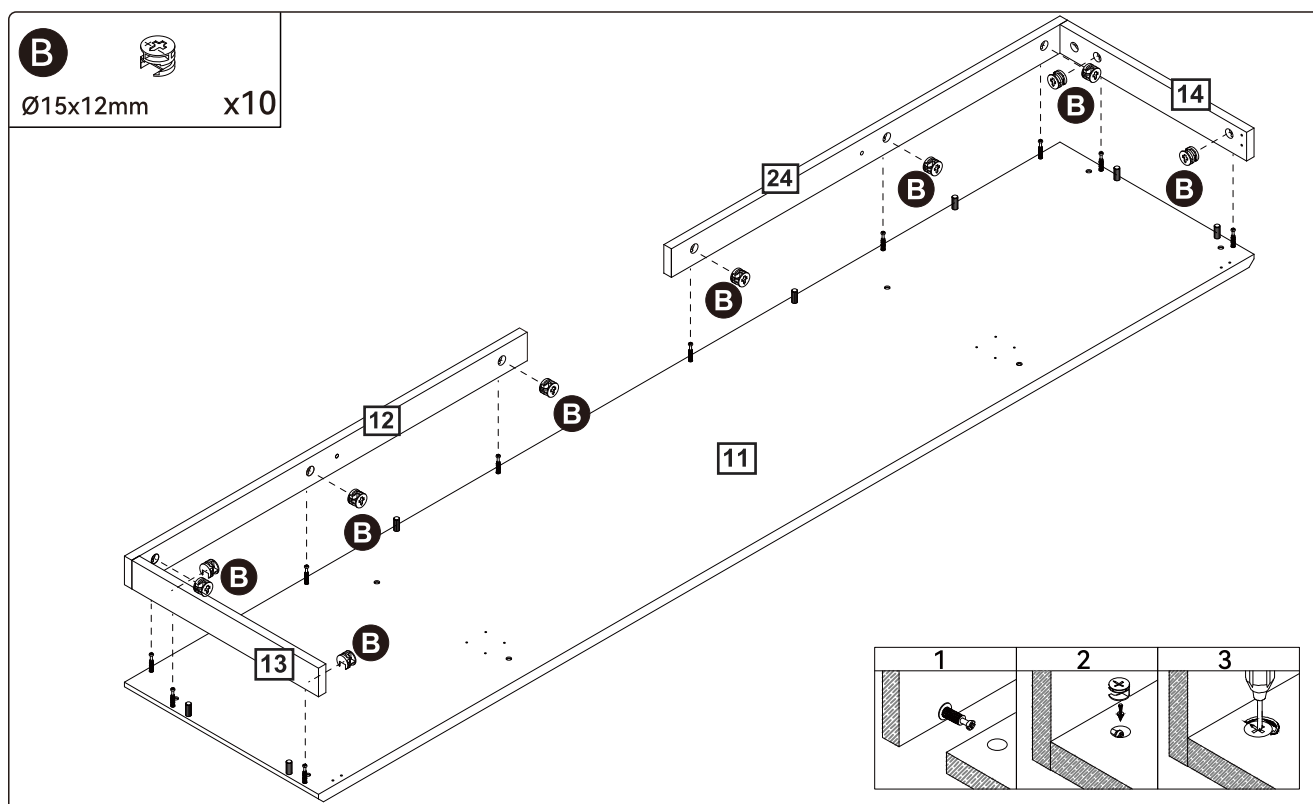


Attach part (12, 13, 14, 24) to part (11), then insert and secure cam lock (B) to part (12, 13, 14, 24) to lock it.

 Step 15

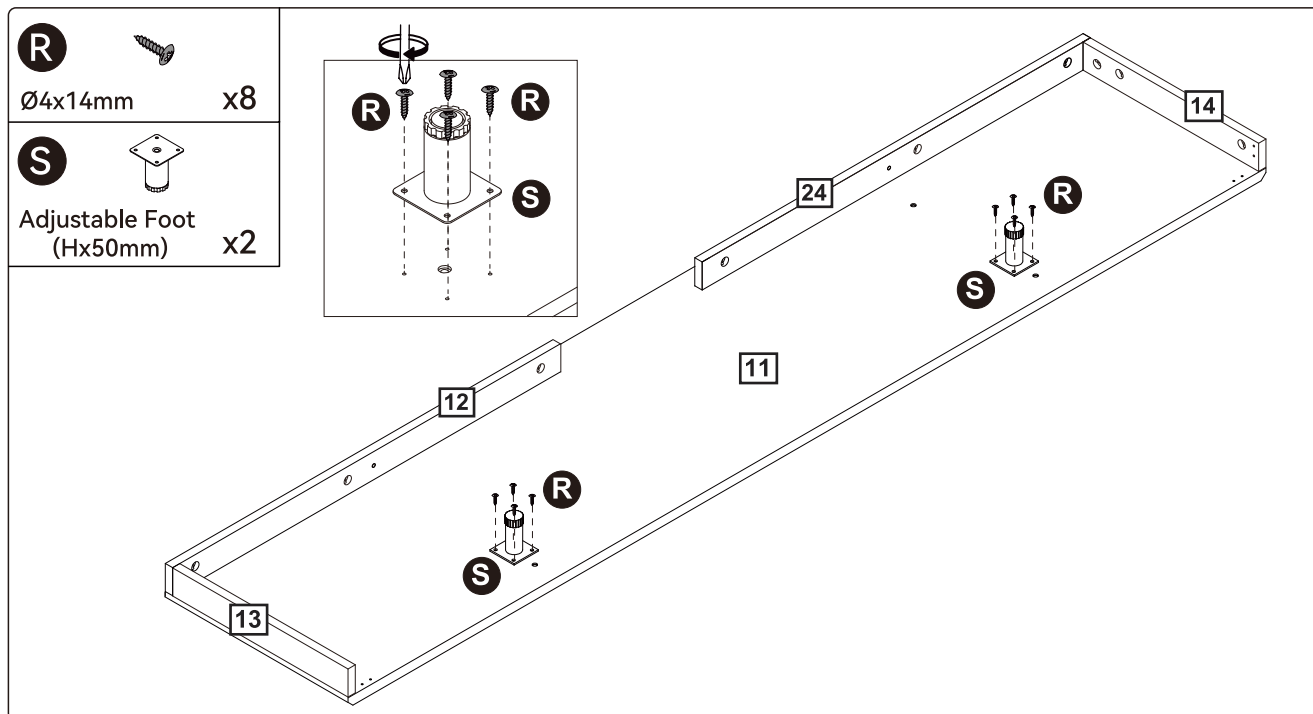

Attach adjustable leg (S) to bottom panel (11) using screw (R).

 
Step 16

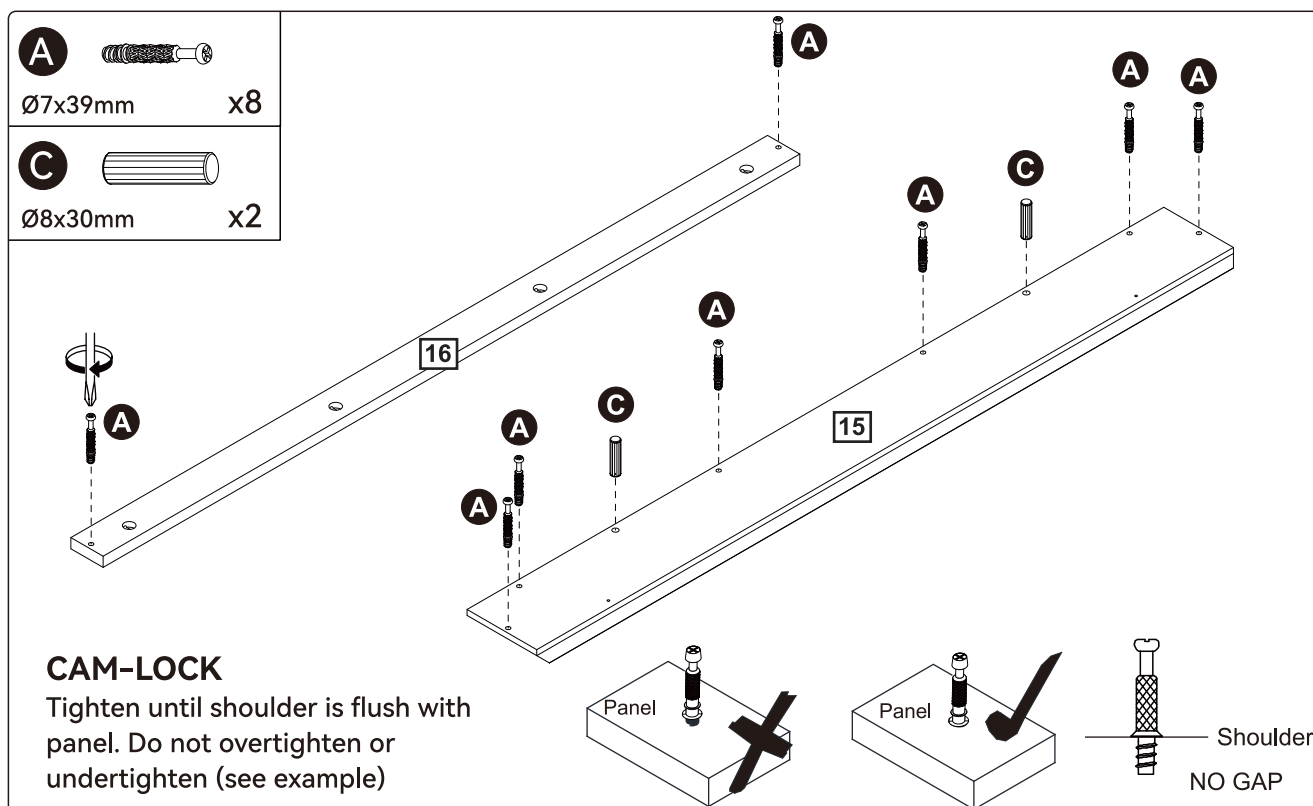

Attach cam bolt (A) to part (15, 16) with a screwdriver.
Insert wooden dowel (C) into part (15).

Step 17

 
B 
 Ø15x12mm x2

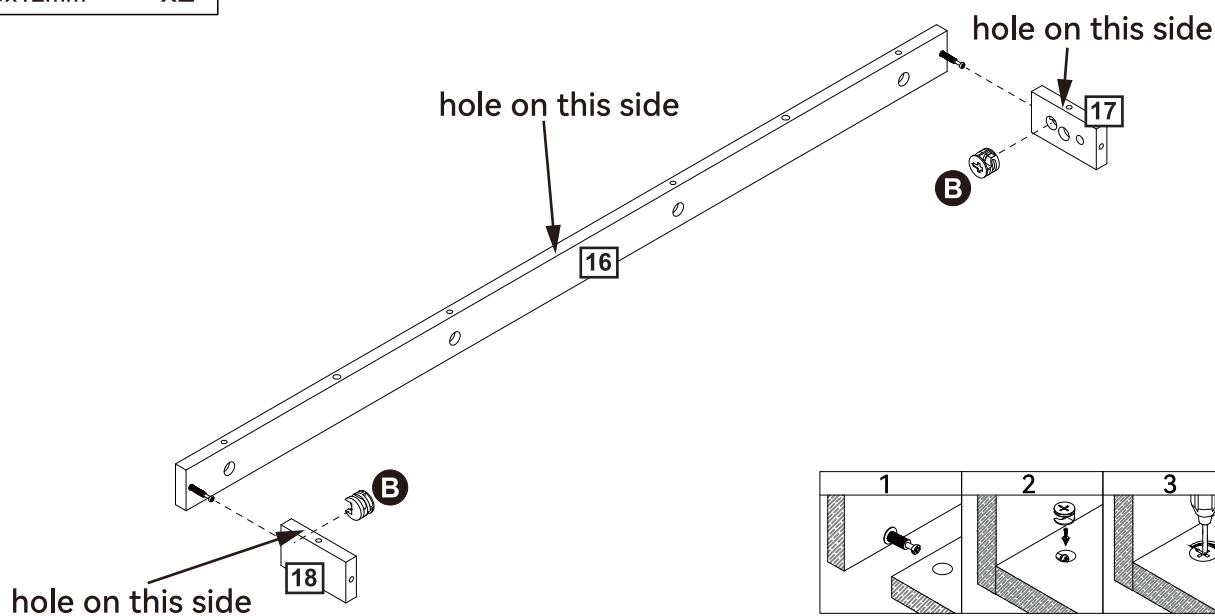

Attach part (17, 18) to part (16), then insert and secure cam lock (B) to part (17, 18) to lock it.


Step 18

 B 
 Ø15x12mm x6

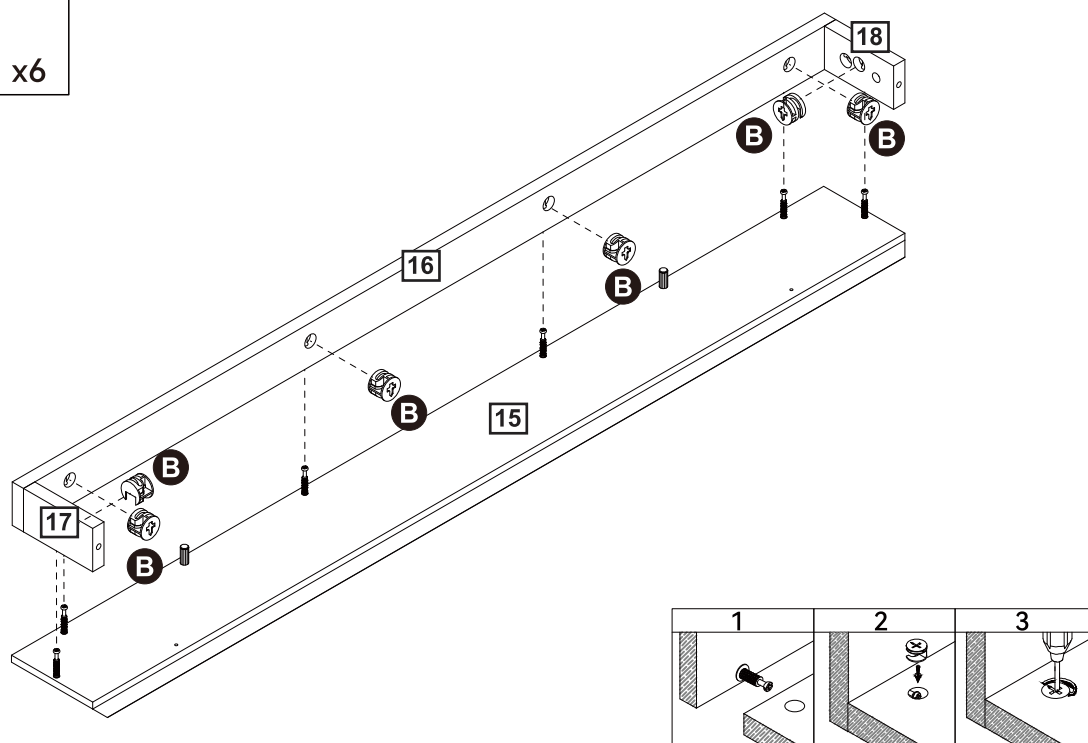


Attach part (16, 17, 18) to part (15), then insert and secure cam lock (B) to part (16, 17, 18) to lock it.

 Step 19

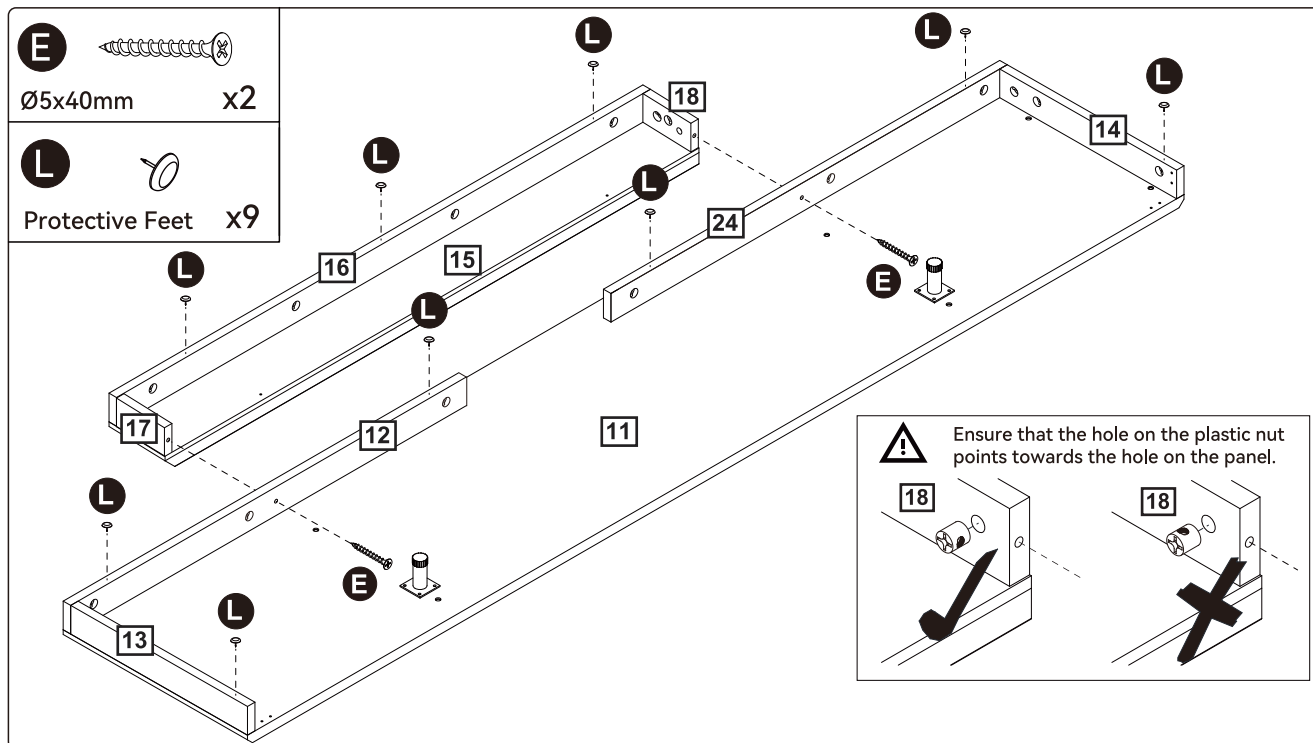


Attach part (17, 18) to part (12, 24) using screw (E) with a screwdriver.
Insert protective foot (L) to the panels.

 Step 20

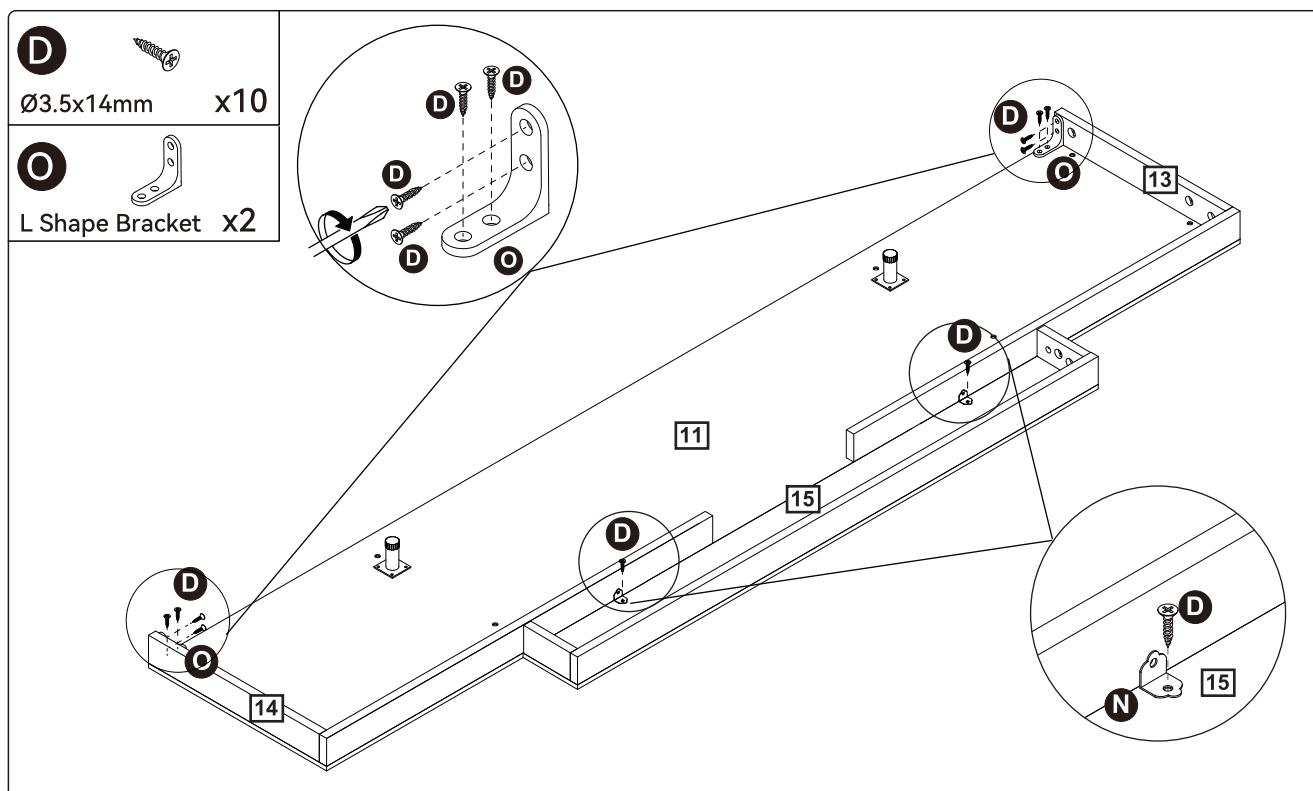


Attach part (N) to part (15) using screw (D) with a screwdriver.
Use L shape bracket (O) and screw (D) to attach part (13) to part (11), and then attach part (14) to part (11).

 Step 21

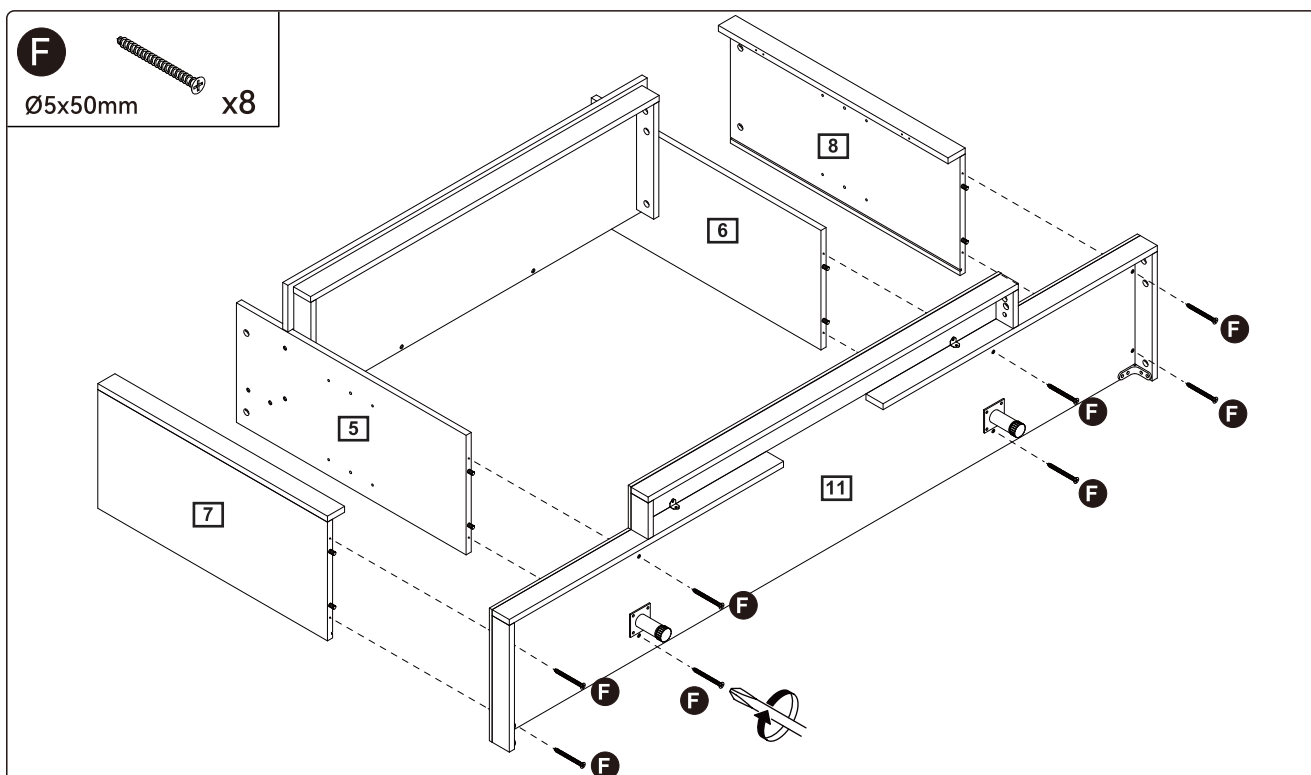

Attach part (11) to part (5, 6, 7, 8) using screw (F) with a screwdriver.

 Step 22

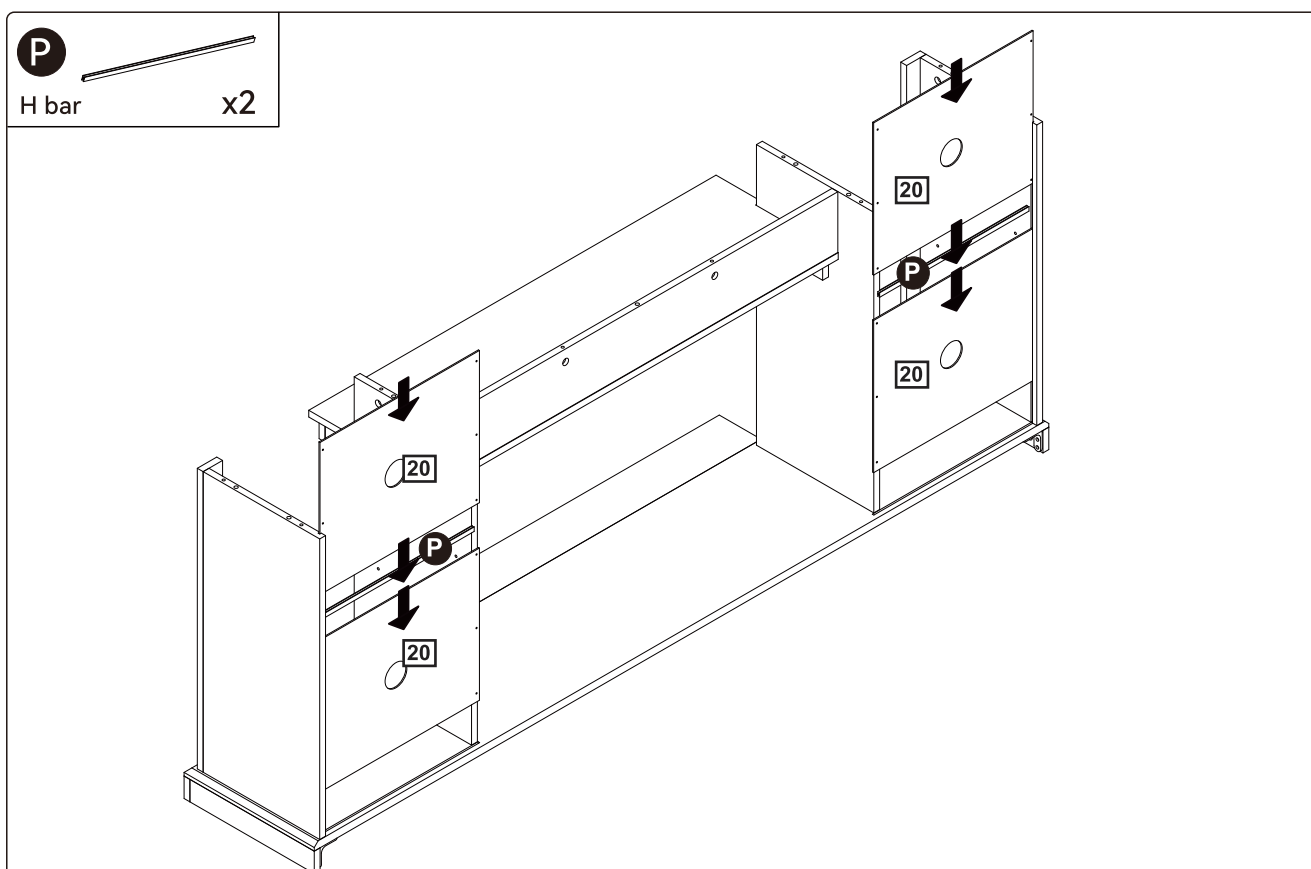

Slide the back panel (20) into grooves as per diagram.

 
Step 23

Q



Ø3x16mm

x12

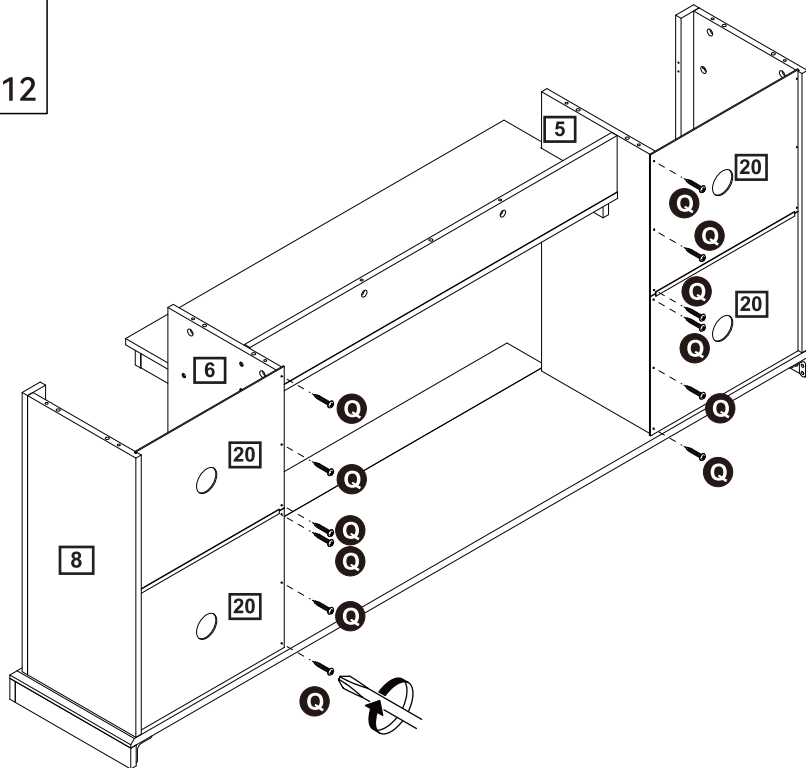

Attach back panel (20) to part (5, 6) using screw (Q) with a screwdriver.

 
Step 24

C



Ø8x30mm


x9

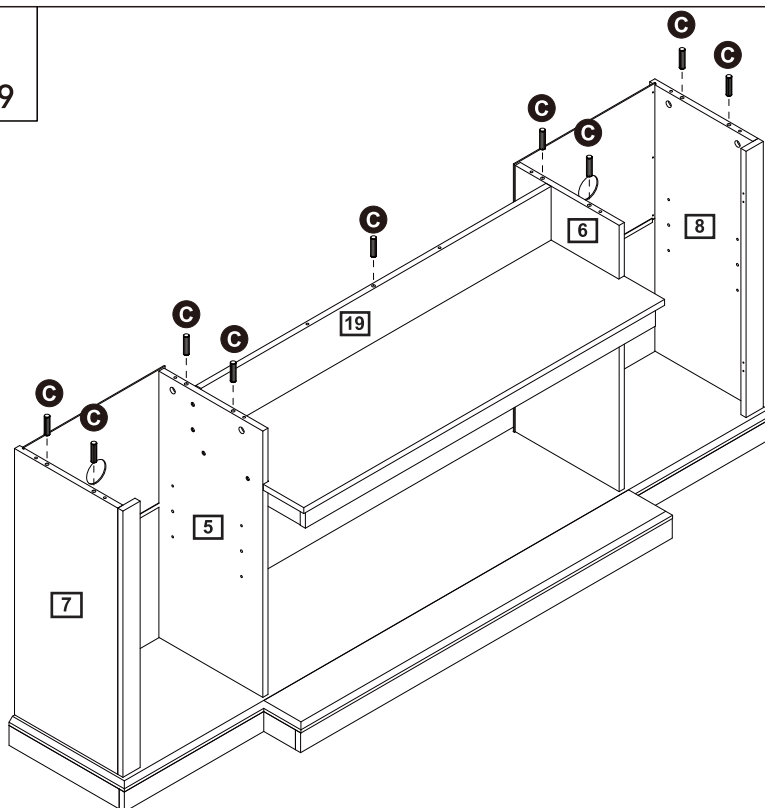

Insert wooden dowel (C) into part (5, 6, 7, 8, 19).


Step 25

A		
	Ø7x39mm	x10
D		
	Ø3.5x14mm	x4
G		
	Door Stopper	x2

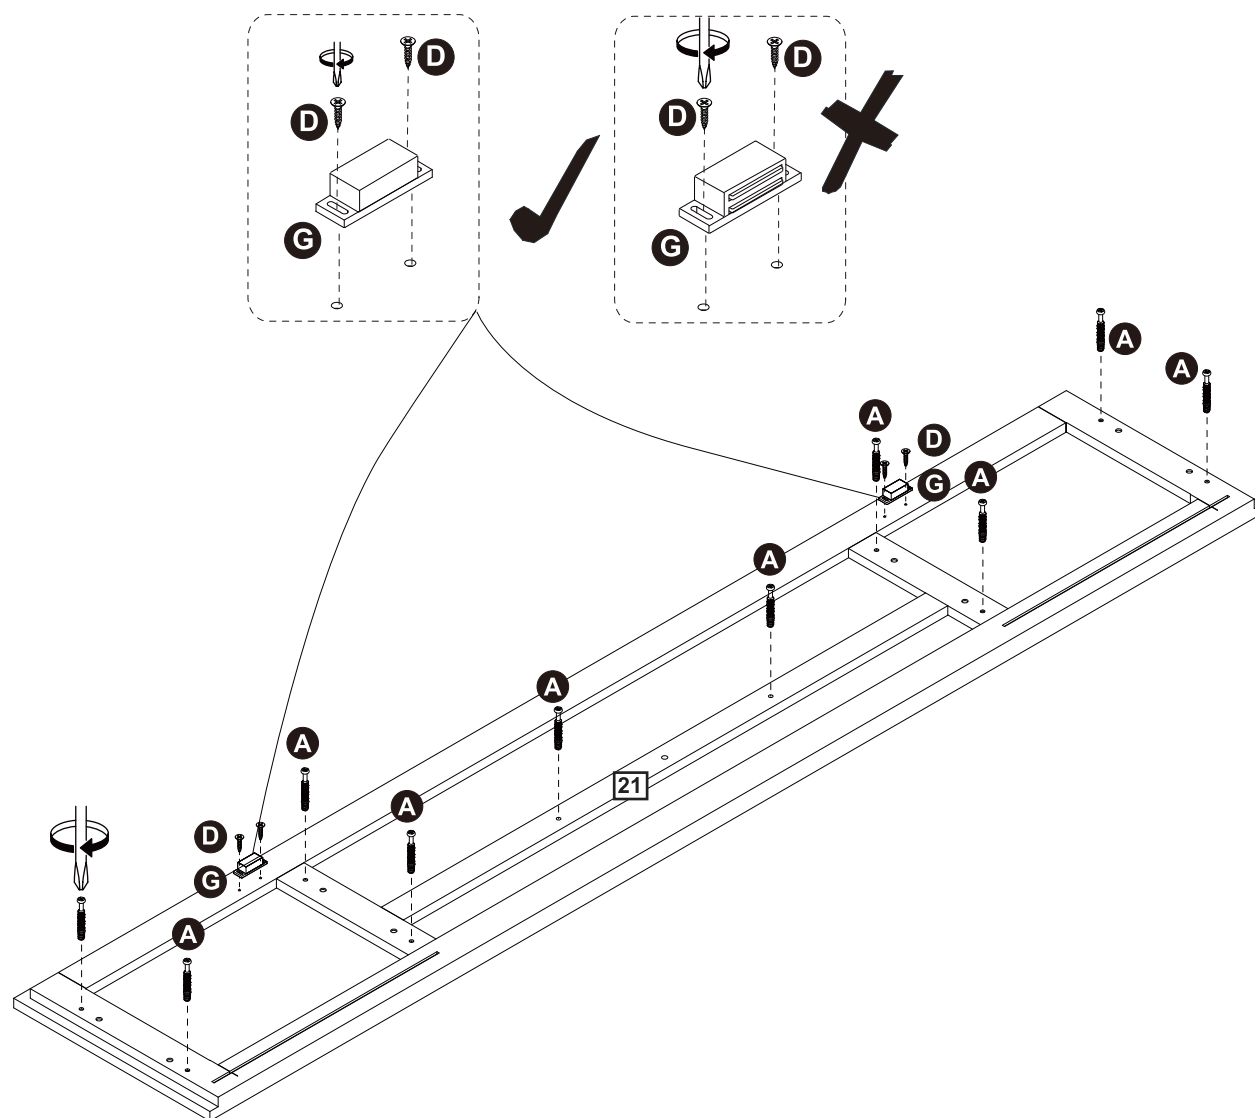 

CAM-LOCK

 
Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example)

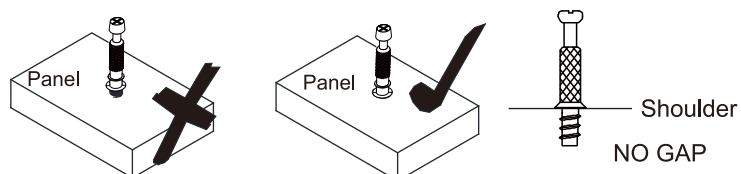

Attach male camlock (A) to part (21) with a screwdriver.
Attach door stopper (G) to part (21) using screw (D) with a screwdriver.

Step 26

 
B 
 Ø15x12mm x10

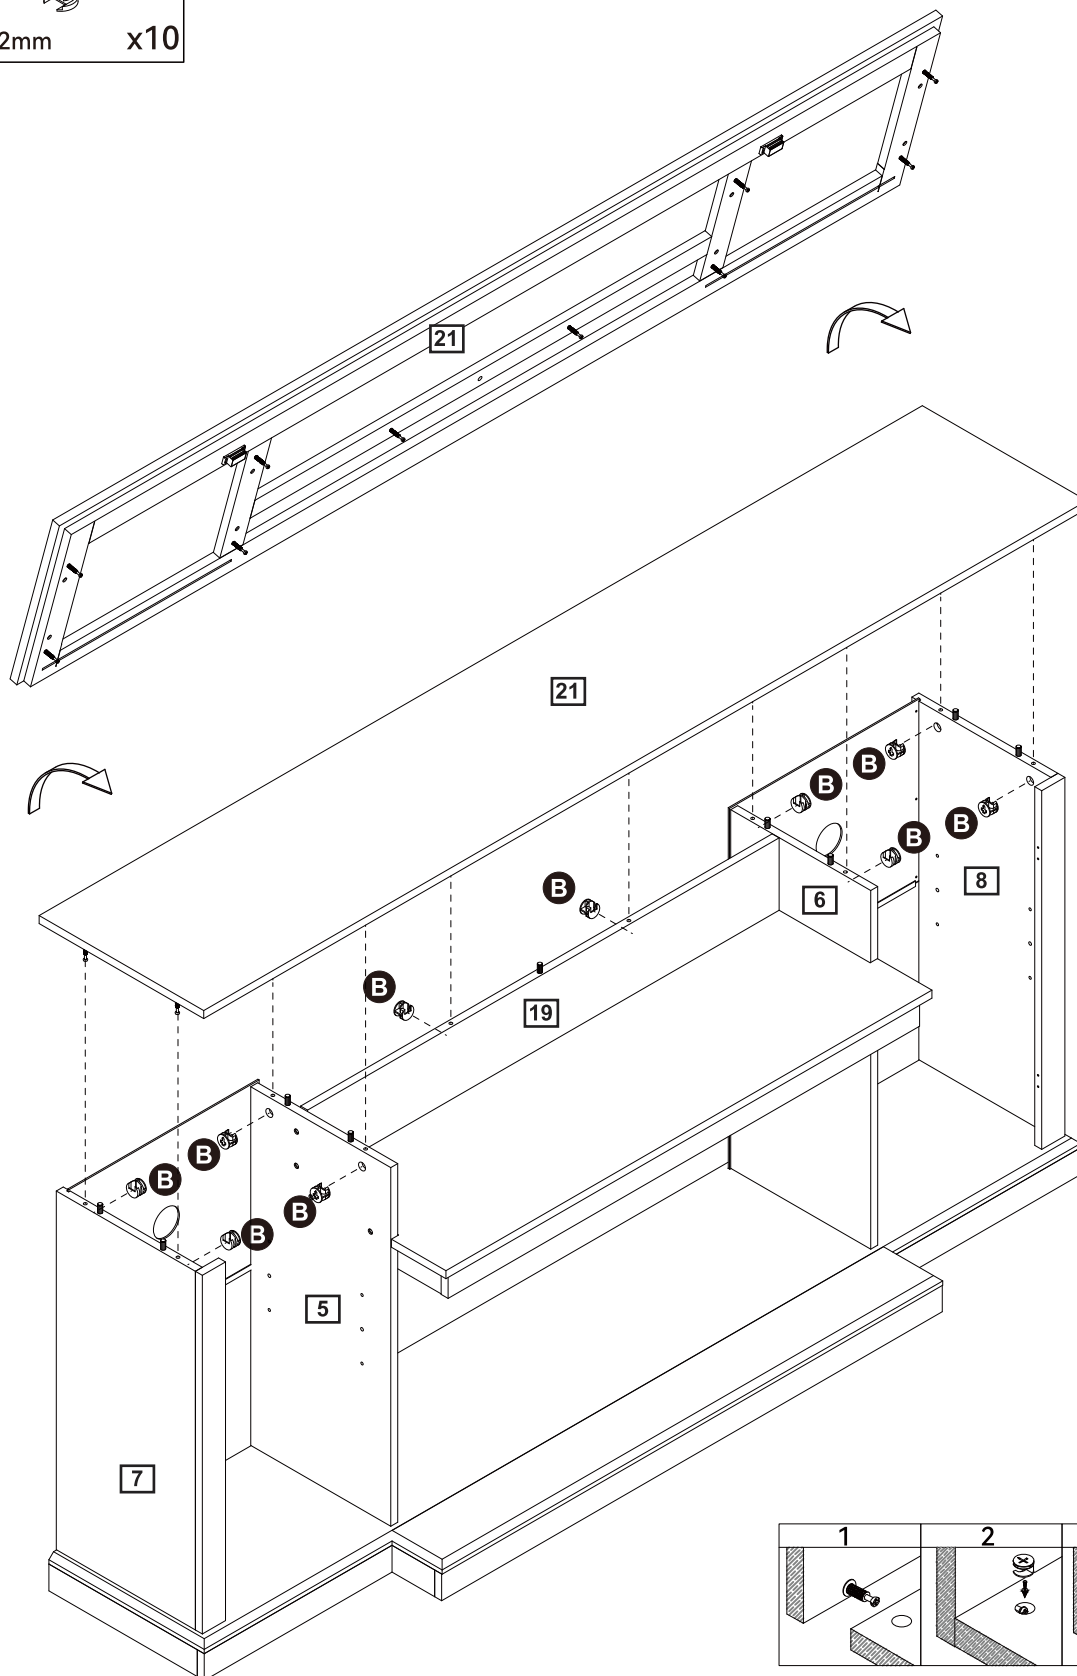

Attach part (21) to part (5, 6, 7, 8, 19), then insert and secure cam lock (B) to part (5, 6, 7, 8, 19) to lock it.

Step 27

 I 
Ø3x16mm x8

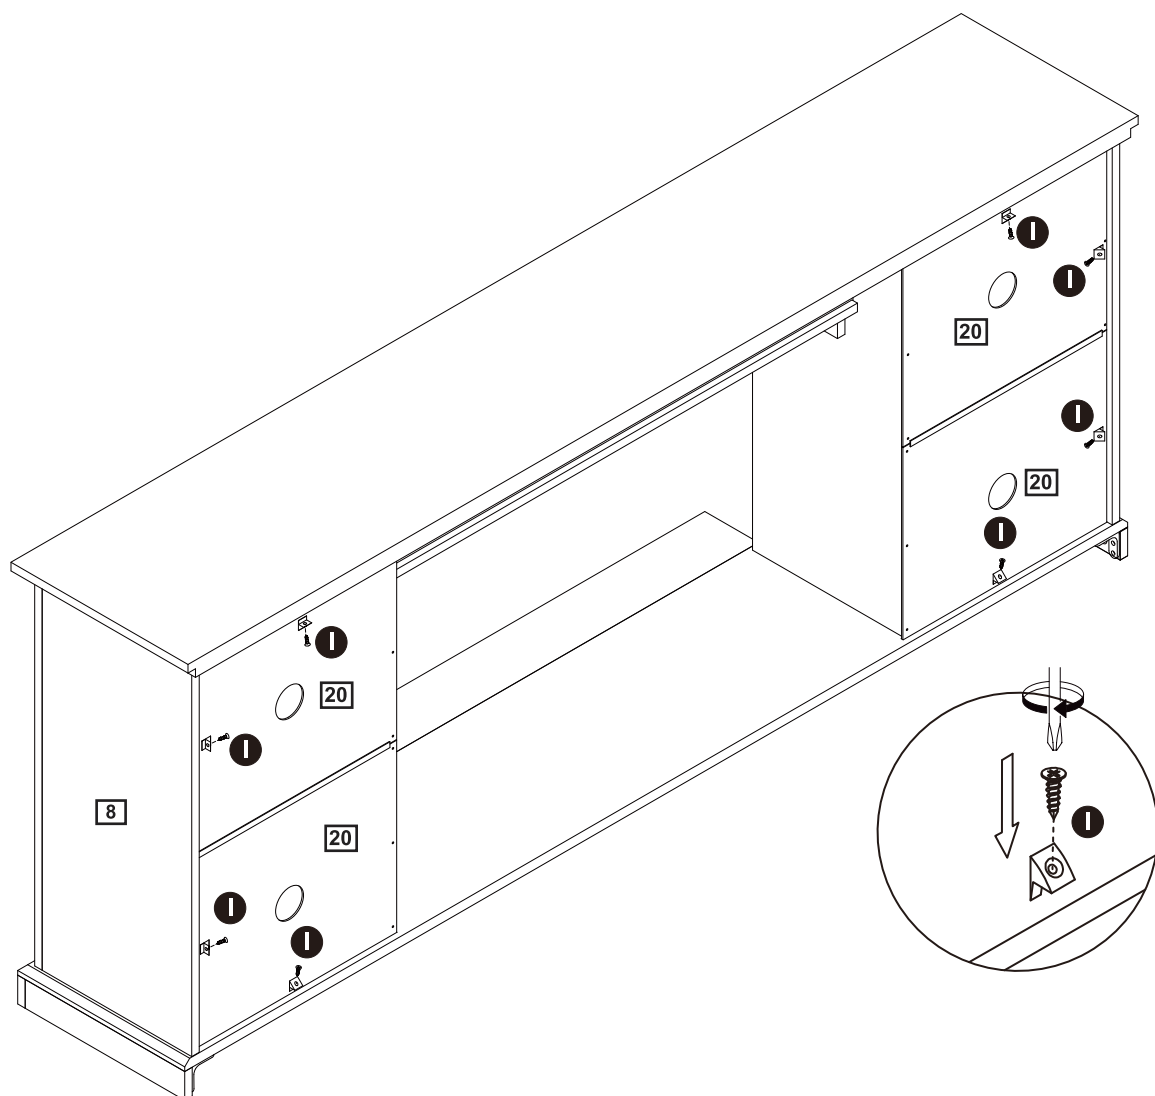


Attach plastic wedge (I) to back panel using screw (I) with a screwdriver.

Step 28

T



 Shelf Support Pin x8

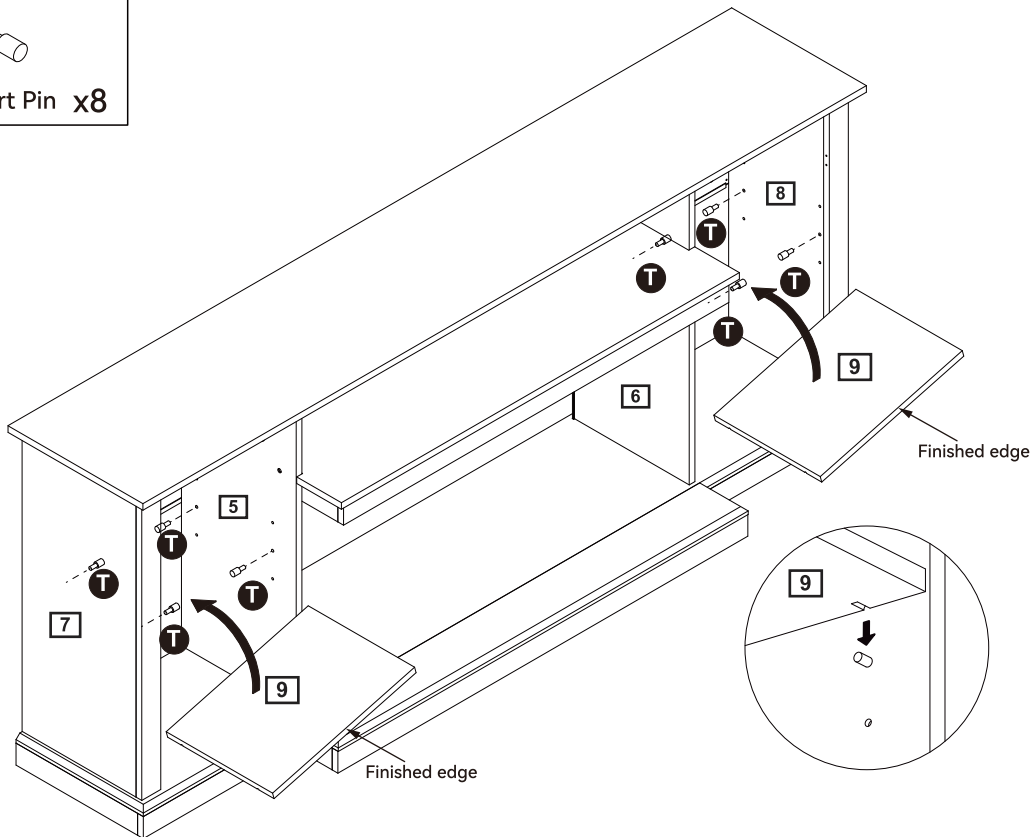

Insert shelf support pin (T) into part (5, 6, 7, 8).
Place part (9) on the top of support pins.

Step 29

D

 


Ø3.5x14mm x12

K




Hinges x4

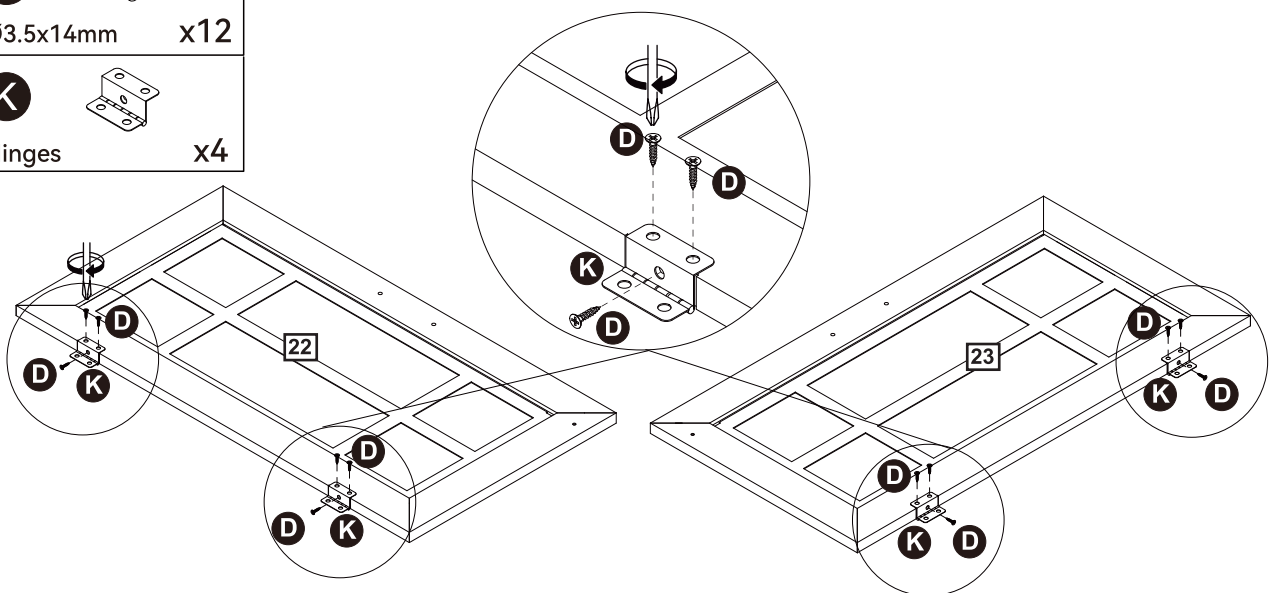


Use screw (D) to secure hinge (K) to door (22, 23) with a screwdriver.

 Step 30

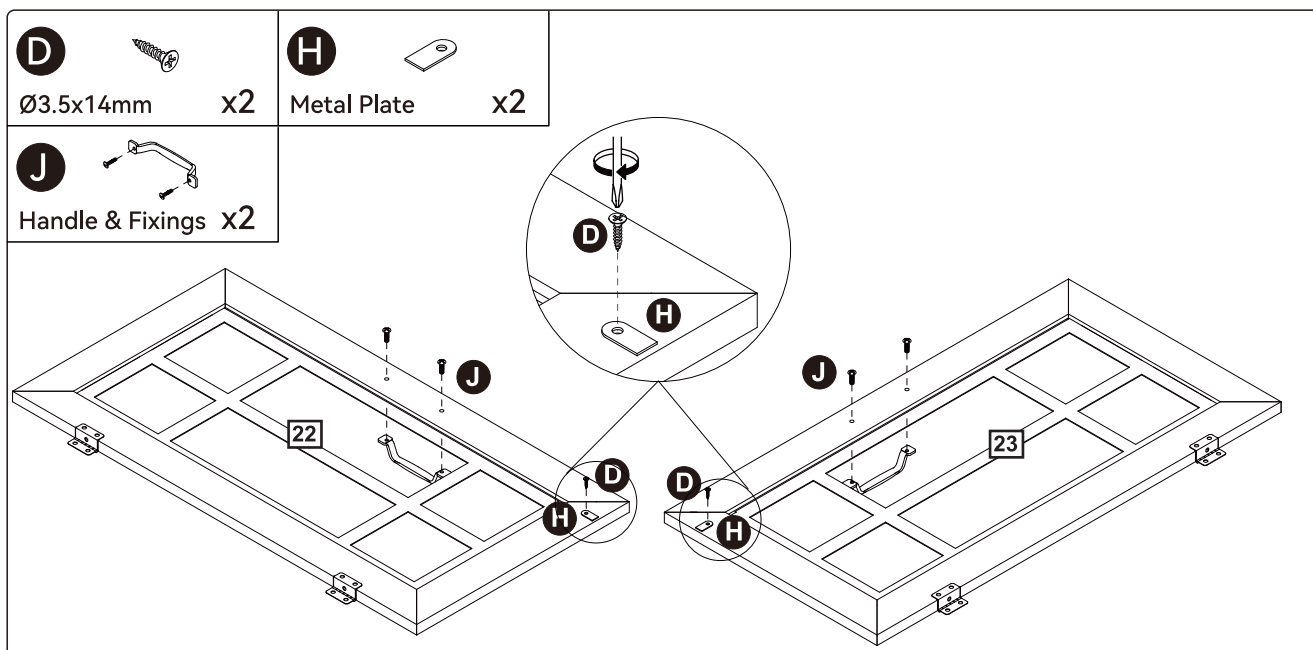

Use screw (D) to secure metal (H) to door (22, 23) with a screwdriver.
 Use screw (J) to secure handle (J) to door (22, 23) with a screwdriver.


 
Step 31

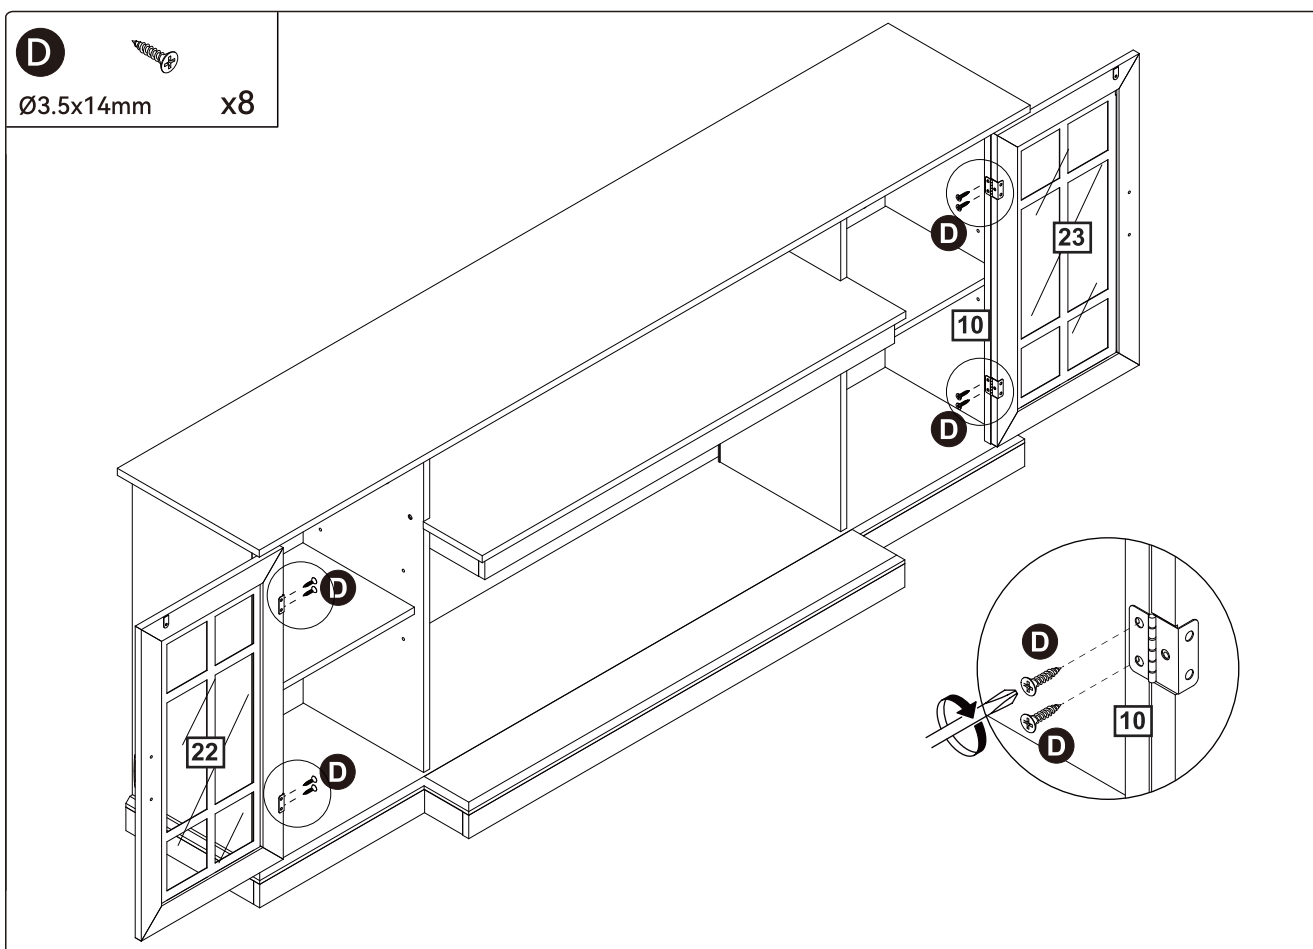

Use screw (D) to secure hinge (K) to part (10) with a screwdriver.

Step 32

  
EN

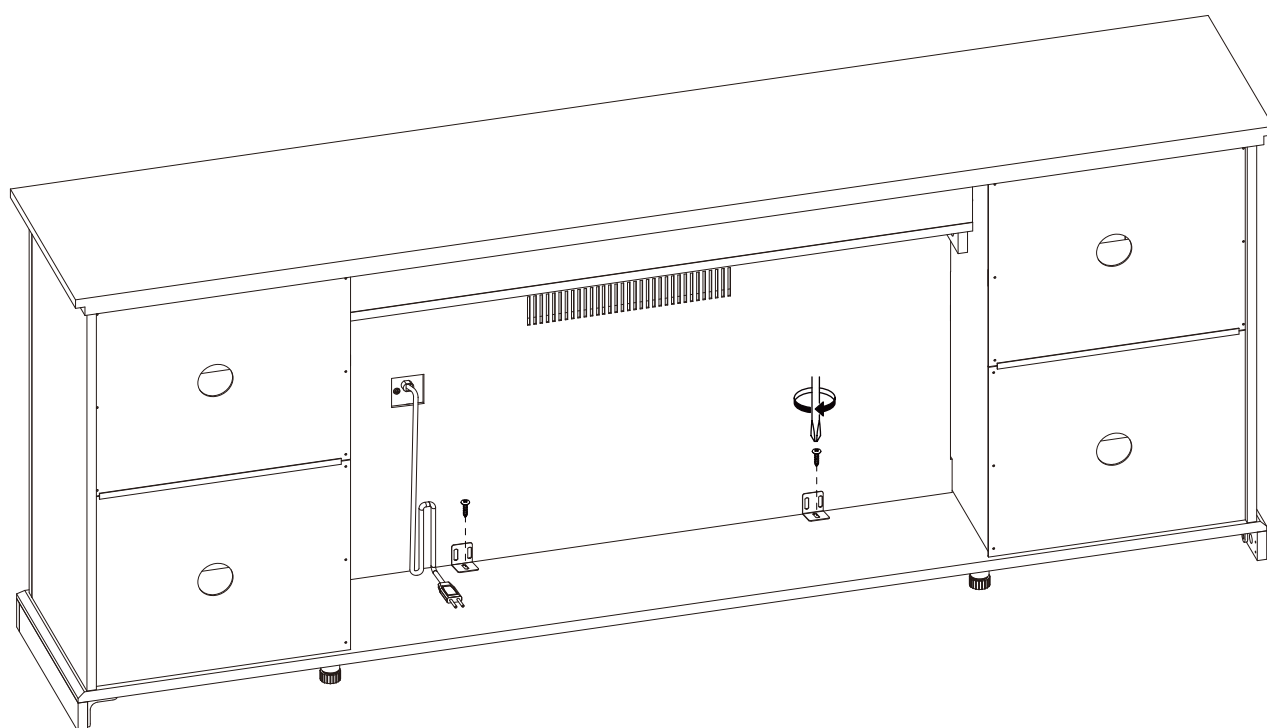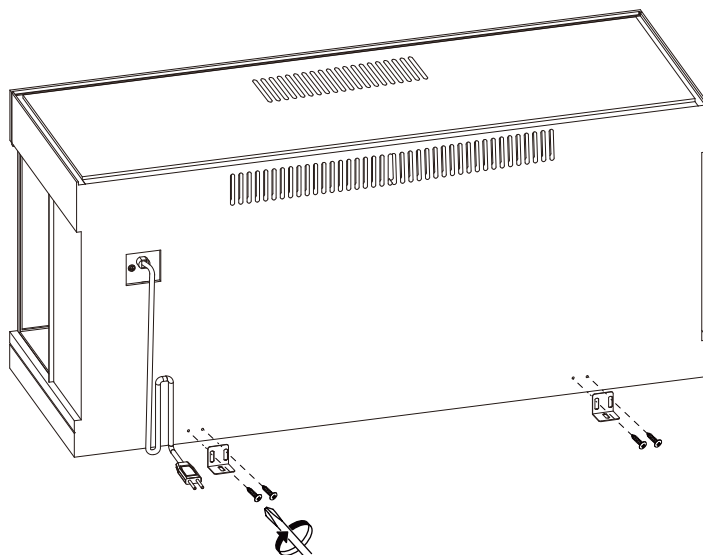

Note: You can find the bracket and screws in the box of the fireplace.

Fix the L shape brackets on the back of the fireplace by 4 screws
Assemble the fireplace insert to the stand and secure it with 2 screws.

 Step 33

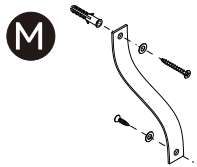

Wall Fixing Pack x2

