


Power Motion Recliner **Assembly Manual** **ME76002**

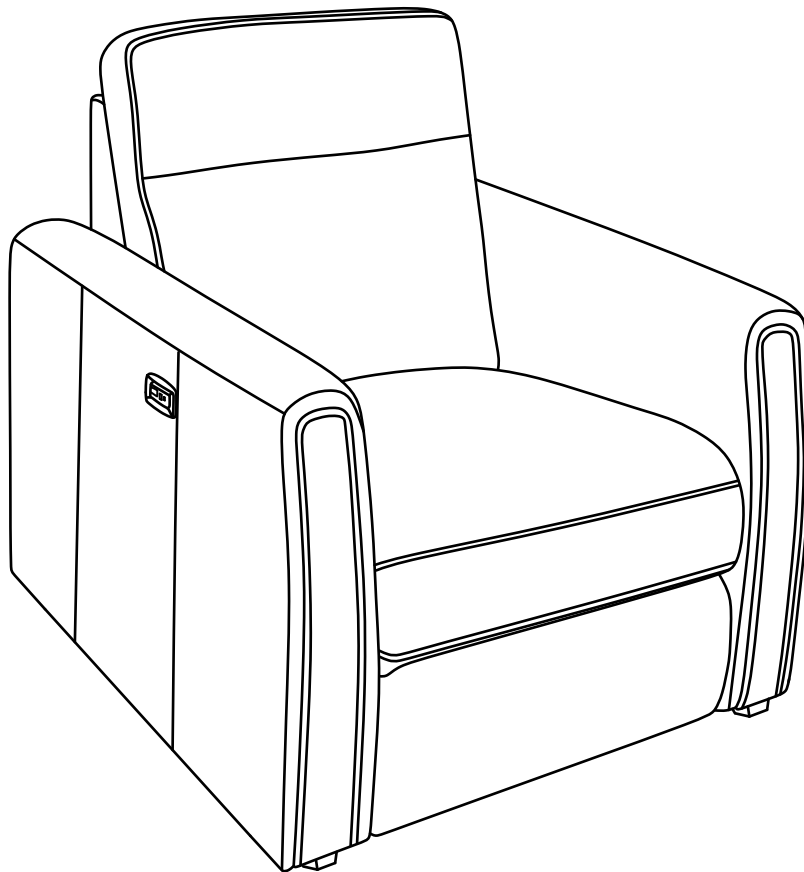


CS.furniture@outlook.com


▲ CAUTION

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.


COMPONENTS

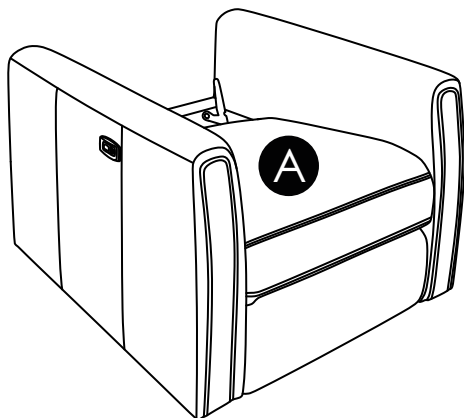


A Chair Base
1X

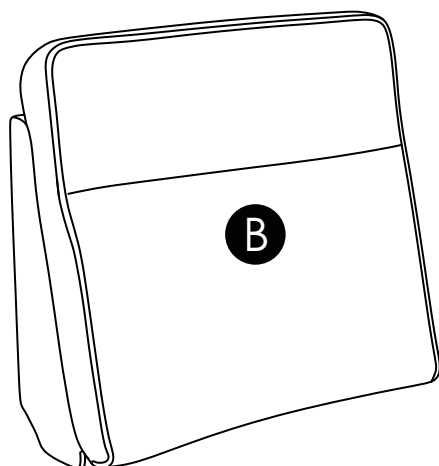

B Chair Back
1X

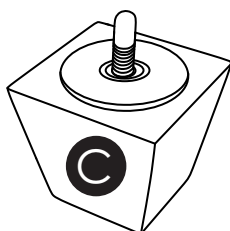


C Wooden leg
4X

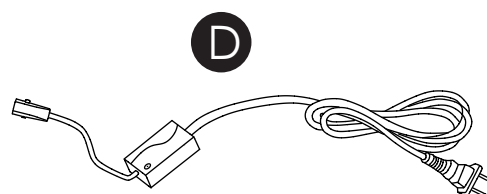


D Adapter
1X

- 1 Locate the Adapter and the Wooden Legs with the red string at the bottom of the seat base.
- 2 Attach the legs to the bottom of the chair base by turning clockwise.

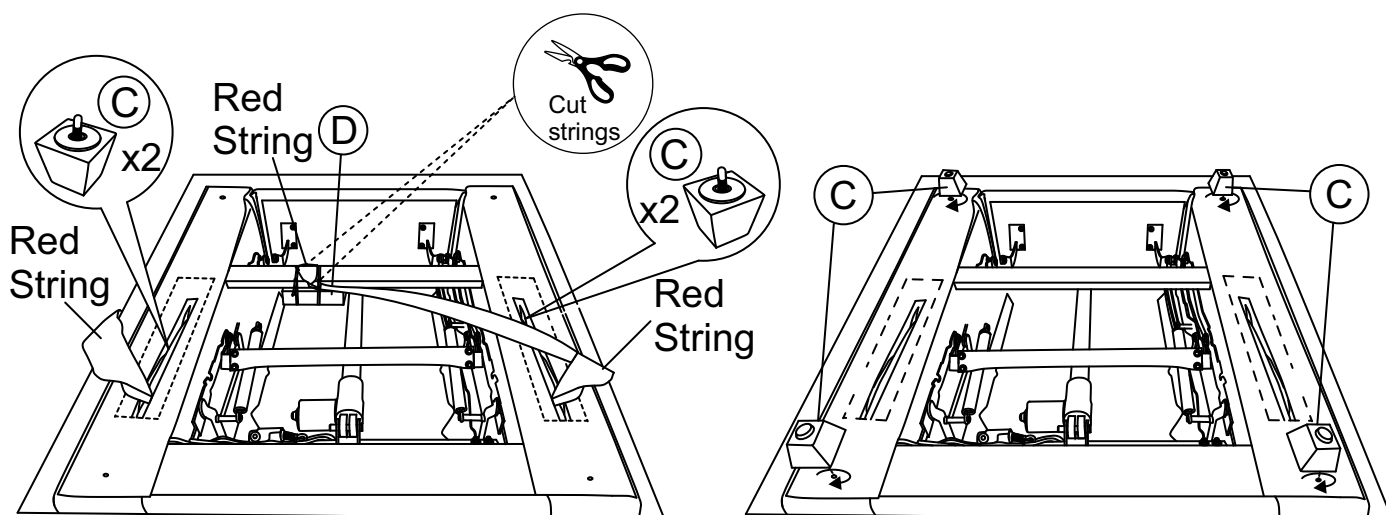

- 3 Slide the back into the metallic quick connectors of the base. Push down the back firmly until each side is locked into place and an audible "click" is heard.

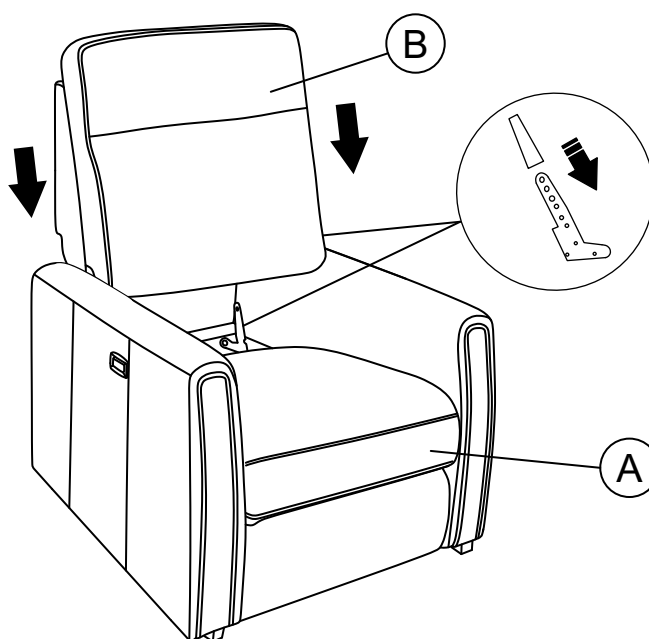


4 Power connections.


4.1 Connect one end of the DC adaptor into connection jack located at the bottom of the seat.

4.2 Plug the other one of power cord into the power outlet.

Note: After all the connections are made, the green LED of the DC adapter will be lit up.

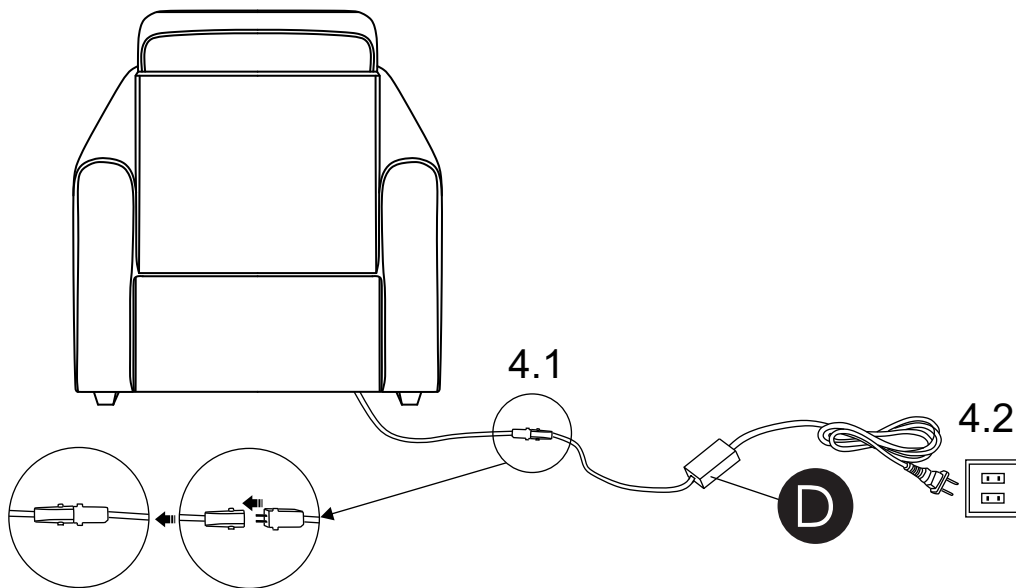

5 Assembly completed, it's ready to use.

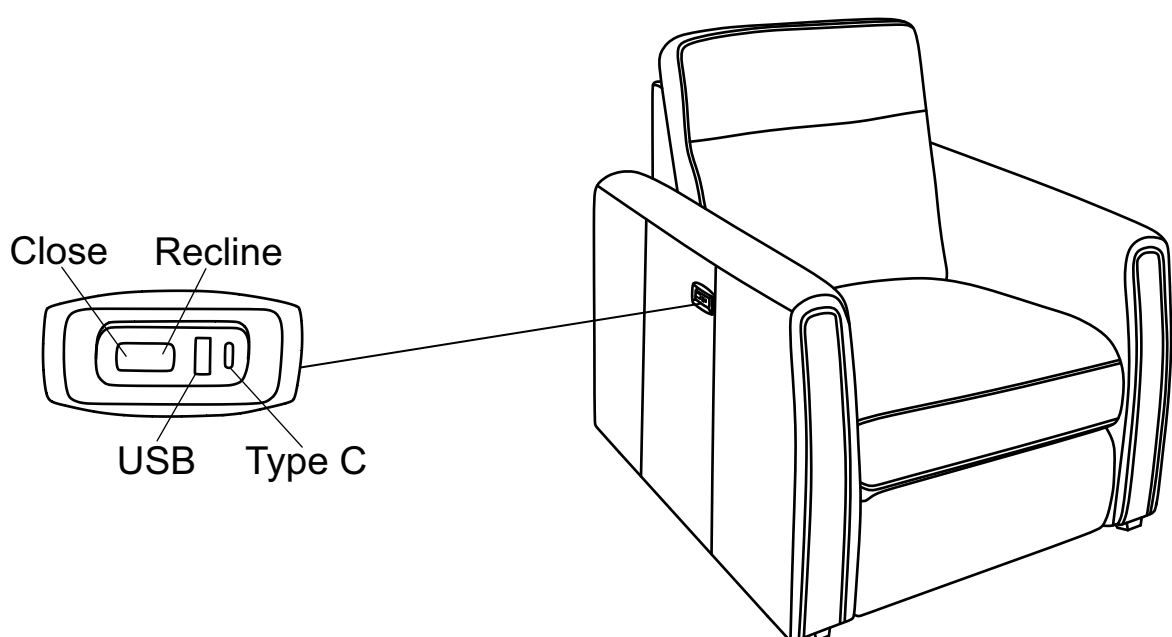

Design Exquisite Furniture For Your Home

PRODUCT WARRANTY

- 1-year limited on cover against splitting, peeling, and/or tearing.
- 1-year limited on internal and external frame structure.
- 1-year limited on cushioning material, seat springs and mechanism.

Contact us:

We make all efforts to guarantee that the products you receive are in excellent condition. If there are any parts missing or damaged, the Customer Service Team will be happy to provide free replacements for you. We have professional warehouses where the current inventory of parts is enough so that they will arrive in your hands as fast as possible.

Assistance with assembly or product details is available; don't hesitate to get in touch with us to get priority service.

Our E-mail address: CS.furniture@outlook.com.



CS.furniture@outlook.com