

1. Screw together pole (B) to base (A), and then poles (B), (C), and (D).
2. Screw the upper portion (E) to pole (D), and pull the excess cord through the lamp gently from the base of the lamp.
3. Assemble the shade (Shade assembly instructions are on a separately included sheet).
4. Unscrew the socket ring (H) from the socket, place the shade (G) onto the socket, and then screw the shade into place using the socket ring.
5. Adjustments: Use the knob (F) to adjust the lamp's height to the desired level. The shade's direction is also adjustable via the rotating universal head.
6. Screw in the LED bulb (I), plug in the power cord, and tap the foot pedal to power on/off.

Product Features and Information

- 9.5 watt LED bulb included.
- Bulb is standard, but can be switched out for a dimmable or smart-bulb if desired.
- Maximum wattage capacity for the light bulb socket is 150 incandescent watts.

IMPORTANT SAFETY WARNINGS

AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK, THIS LAMP HAS A POLARIZED PLUG, MEANING THAT ONE PRONG IS TALLER THAN THE OTHER AND WILL THEREFORE ONLY FIT IN A POLARIZED OUTLET ONE WAY. DO NOT TRY TO INSERT THE PLUG INTO AN OUTLET OR EXTENSION CORD IF IT DOES NOT FIT. DO NOT ALTER THE PLUG. PRODUCT IS SUITABLE FOR DRY LOCATIONS ONLY.

Brightech Warranty

Thank you for choosing Brightech! We guarantee our products with a best-in-class warranty for any manufacturer defects. For more details and to get support, please visit www.brightech.com.

Warranty Extension- Our warranty is a solid 3 years, unless the purchase was made on Brightech.com. For a complimentary extension to our incredible 5-year Brightech warranty, visit www.brightech.com/pages/extended-warranty

