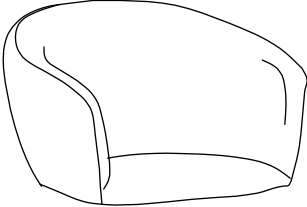
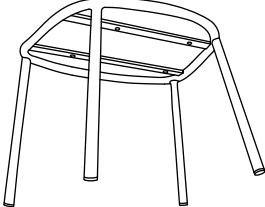



ITEM NAME/NOM D'ITEM:ESSEN DINING CHAIR

PARTS LIST/LISTE DES PIÈCES

(1)	(2)	(3)
		A  M6×35mm ×2 B  M6×40mm ×2 C  M6 ×4 D  M6 ×2 E  M5 ×1


ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE

I

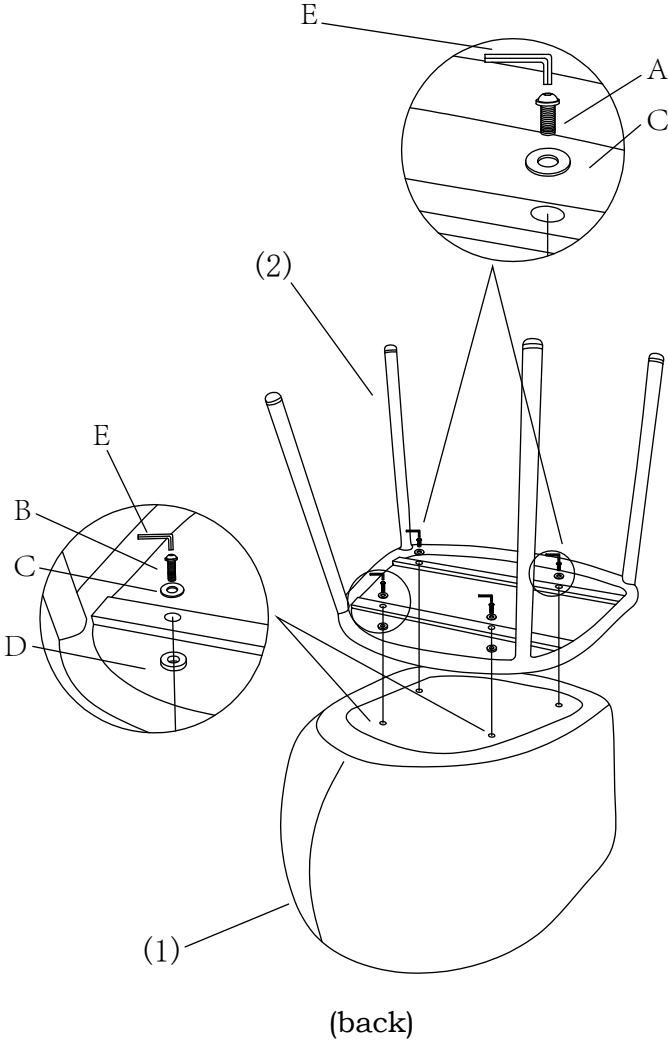

(back)

II

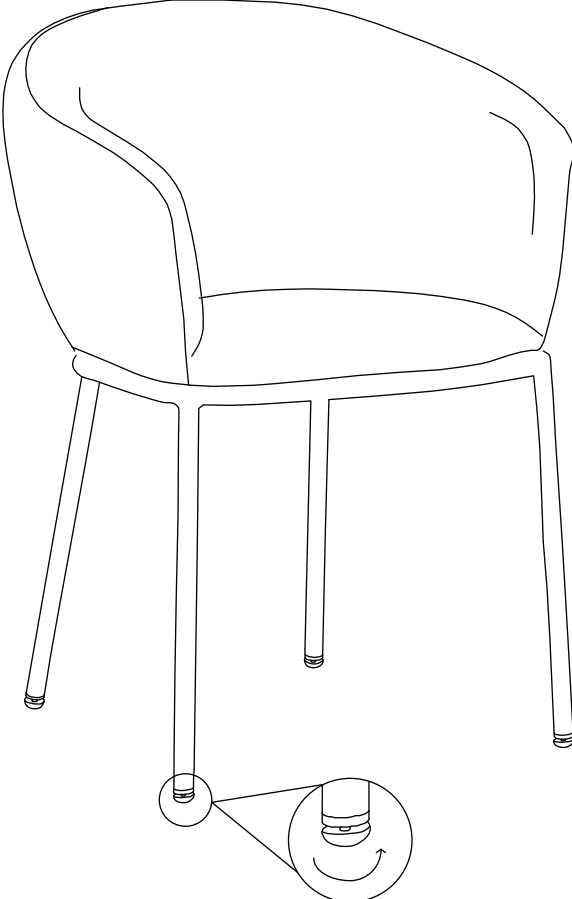

Please use the attached adjustable footglides to level the chair on uneven surface.