INSTRUCTION MANUAL



Dresser

Important Safety Information

- Please carefully read all instructions before attempting installation. If you do not understand the instructions or have any questions or concerns, please call technical support or email customer service.
- Before starting assembly, verify all parts are included and undamaged. Do not use damaged or defective parts. If you require replacement parts, please call technical support or email customer service.
- This product contains small parts that may pose a choking hazard.
- Avoid potential injuries and property damage that may be caused by furniture tip-over.
- Do not place a TV or other heavy objects on the top of this product.
- To avoid instability, place heaviest items in the lowest drawers, and never open more than one drawer at a time.
- Do not allow anyone to stand on top of this product.
- Never allow children to climb or hang on the product. To avoid head injury, do not allow children to play underneath open drawers.
- Due to the absence of drawer stops, never allow children to pull the drawer out, which may lead to the drawer falling and causing injury.
- In order to prevent this product from tipping over, it must be used with the wall attachment device provided. Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.
- Do not use this product for any purpose that is not explicitly specified in this manual. We are not liable for damage or injury caused by improper mounting, incorrect assembly, or inappropriate use.

Care and Maintenance

- Please clean the product with a damp cloth or mild detergent.
- Do not use bleach or other abrasive cleaners.





Installation Tips

- It is recommended that at least two people install this product together.
- Make sure you have enough space to lay the parts out before assembling.
- To avoid scratches, assemble this product on unfolded cardboard or a soft surface.





Tools Needed (Not Included)



How the Assembly System Works



How to Install Wood Dowels

Insert the wood dowel [C] at least halfway into the hole. IF NECESSARY, lightly tap the wood dowel with a self–supplied rubber mallet.



Using the Cam Lock System

- 1. Screw cam bolt [A] into the threaded hole on the panel.
- 2. Connect both panels together. Make sure cam bolt [A] goes into the pre-drilled hole on the end of the panel for cam lock [B1/B2].
- 3. Insert cam lock [B1/B2] into the large hole on the panel. Make sure the open slot faces the head of the cam bolt [A].
- 4. Rotate cam lock [B1/B2] clockwise with a Phillips screwdriver to lock the cam bolt [A] in place.



You are now ready to assemble the unit.

Exploded Drawing





Supplied Parts and Hardware				
(A) x 45		(B1) x 20	(B2) x 25	© x 29
		Control of the second s		
M6 x 35mm Cam Bolt		Ø15 x 11mm Tall Cam Lock	Ø15 x 9mm Short Cam Lock	Ø8 x 30mm Wood Dowel
(D) x 60		(E) x 30	(F) x 2	(G) x 10
		<pre> Additional(%) </pre>		
Ø3.5 x 12mm Screw		Ø4 x 38mm Screw	M6 x 50mm Bolt	M4 x 12mm Bolt
(H) x 3		(J) x 5	(K) x 10	
Canadaaaaaaaa (C)		00 00 0 00 00 00 00 00 00 0 00 00 00 00 0000 00	€K2	
Ø4 x 50mm Screw		Image: Second secon		
	Dresser Slides	J1(L) x 5	0 0 00	0000 00
		J1(R) x 5 🔽 00 0	000 00	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
	Drawer Slides	J2(L) x 5	00	
		J2(R) x 5	00	
Anti–Tip Kit				
ST4 x 12mm	ST4 × 25mm			A CAUTION! wall anchor is for concrete Y. DO NOT use them in all or wood studs.
Screw x 2	Screw x 2	Washer Strap x 4 x 2 0	Wall Anchor x 2	

































Installation Instructions:

1. Secure the strap to the top of the dresser using a short screw.

2. Determine where the dresser is to be placed. If you have a wood stud wall, locate a stud using a stud finder and mark the centerline.

3. Drill pilot holes in the wall at the appropriate height.

4. Secure the strap to the wall using long screws and washers. (Note: Use wall anchors for solid concrete. Do not use them on wood studs.)