 



USER'S MANUAL

Storage Cabinet

Before You Start



- ⚠ Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
- ⚠ Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
- ⚠ Work in a spacious area, preferably on a carpet close to where the unit will be used.
- ⚠ Keep the handtools close at hand. Do not use power tools to assemble your furniture. They may scratch or damage the parts.

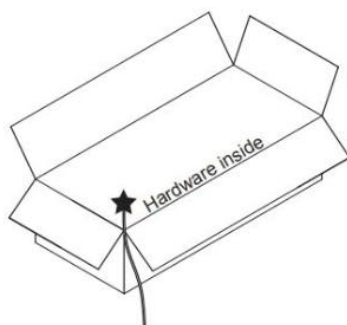



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on page 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Part assembly will be easier with 2 people.



the product. Only use hand screwdrivers

- We do not recommend the use of power drill/drivers for inserting screws, as this could damage

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.


Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


Please check you have all the panels listed below

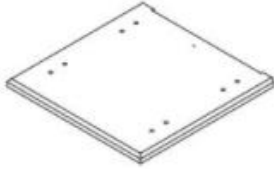


1 Top Panel x 1
(30(w)cmx30(d)cm)

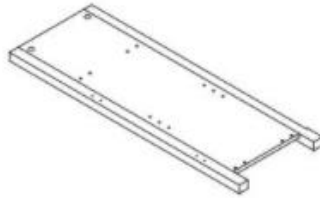


2 Left Side Panel x 1
(78.5(w)cmx28.4 (d)cm)

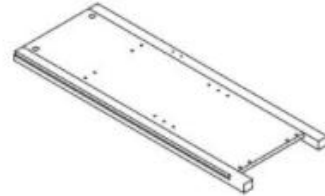


3 Right Side Panel x 1
(78.5(w)cmx28.4(d)cm)

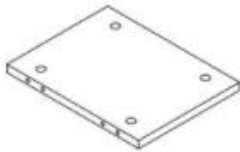


4 Bottom Panel x 1
(28(w)cmx21.5(d)cm)

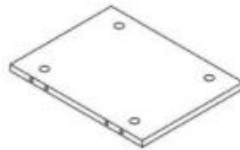


5 Fixed Shelf x 1
(28(w)cmx21.5(d)cm)

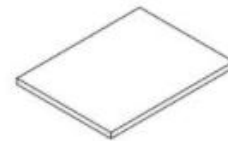

6 Adjustable Shelf x 1
(26(w)cmx21.2(d)cm)

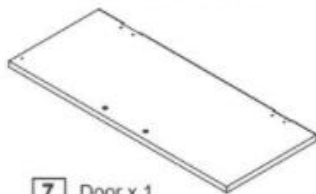

7 Door x 1
(51.4(w)cmx21.3(d)cm)

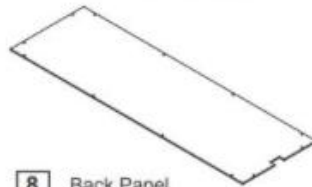




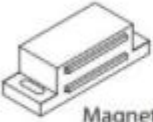













8 Back Panel
(74.3(w)cmx23.5 (d)cm)

Components - Fittings

If you have damaged or missing components, please contact us in time.

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  35mm Male Camlock x 12	B  Female Camlock x 12	C  30mm Wooden Dowel x 12
D  Magnetic Catch x 1	E  Catch Plate x 1	F  14mm Screw x 2
G  Hinge x 2	H  10mm Screw x 9	I  Handle x 1
J  14mm Screw x 2	K  14mm Screw x 12	L  25mm Shelf Supports x 4
M  Safety Strap x 1	N  12mm Screw x 1	O  35mm Screw x 1
P  Wall Plug x 1	Q  Washer x 2	

Tools required



Phillips screwdriver
(medium & large)



Drill (for wall drilling only)

Ruler – Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


 
Inserting Male Camlocks

1. Insert 12 x Male Camlocks **A** into Panels **1**, **2** and **3** as shown.

2. Connect Magnetic Catch **D** to Right Side Panel **3** as shown using 2 x Screw **F**.

The unit is floor standing, but it is recommended that the unit is secured to the wall.

3. To the underside of Top Panel **1**, connect wall strap **M** as shown using 1 x Washer **Q** and screw **N**.

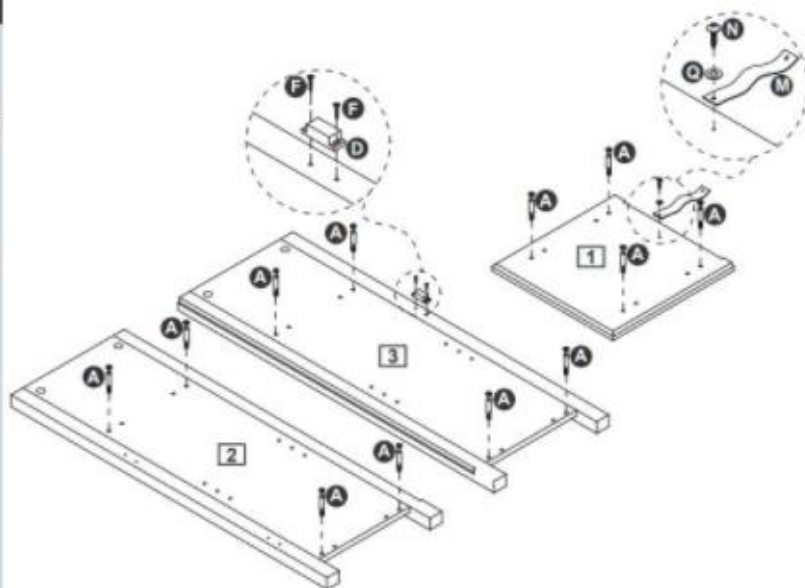


Step 2

1. Insert 8 x Dowels **C** into the ends of Panels **4** and **5** as shown.

2. Locate Panels **4** and **5** onto Male Camlocks in Panel **2**. Locate Male Camlocks in Panel **3** into adjacent holes in panels **4** and **5**.

3. Into the underside of Panels **4** and **5** insert 8 x Female Camlocks **B**. Use a screwdriver to turn the Female Camlocks Clockwise to lock.

For more information refer to the Using Camlocks Section

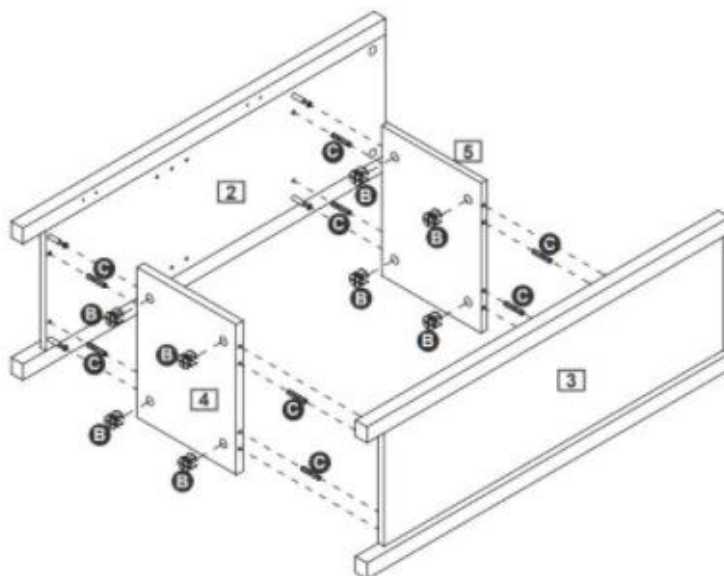


Assembly Instructions

Step 3


1. Insert 4 x Dowels **C** into the top edge of Side Panels **2** and **3** as shown
2. Locate Top Panel **1** into position as shown.
3. Insert 4 x Female Camlocks **B** into Side Panels **2** and **3**. Use a screwdriver to turn the Female Camlocks Clockwise to lock

For more information refer to the Using Camlocks Section

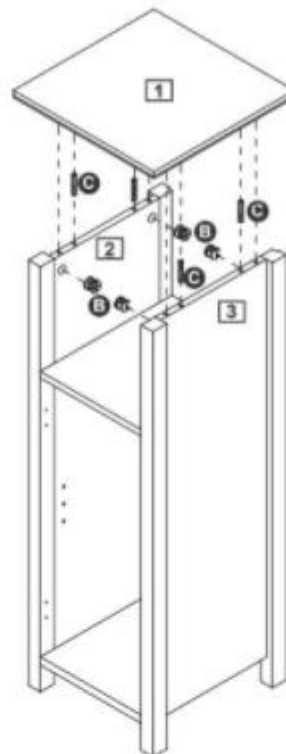

Step 4

1. Locate Back Panel **8** into position. Ensure that the wall strap pulls through the gap shown.
2. Connect Back Panel **8** to the unit using 12 x Screws **K**

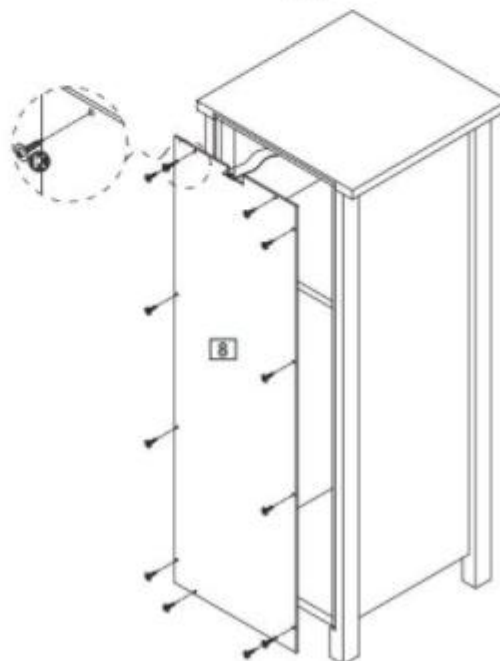


Assembly Instructions

Step 5

1. Insert 4 x Shelf Supports **L** into internal holes in Side Panels **2** and **3**


2. Locate Shelf **6** onto Supports as shown

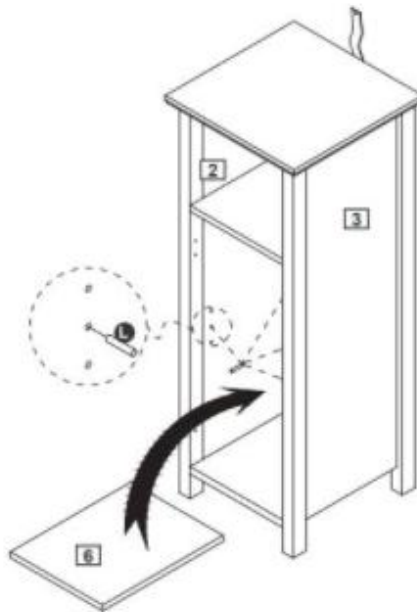

Step 6

1. To door **7**, attach 1 x Catch Plate **E** using 1 x Screw **H**


2. Connect 2 x Hinges **G** as shown using 2 x Screw **H** per Hinge

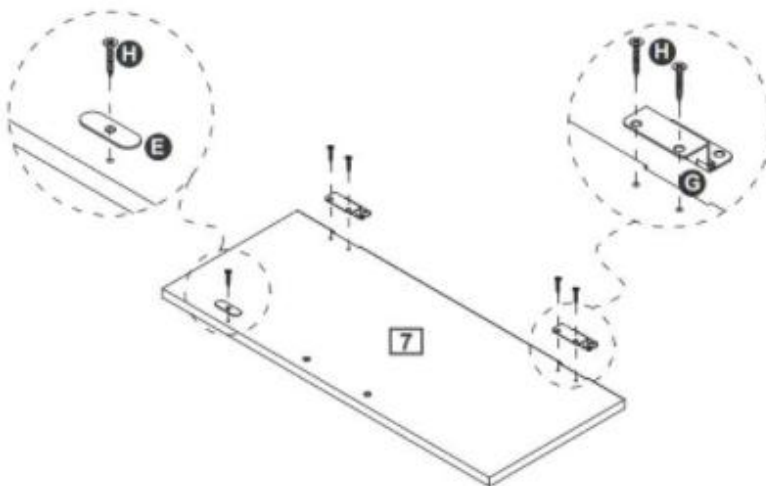

Assembly Instructions

Step 7

1. Connect Handle **I** to the Door using 2 x Screws **J**
2. Connect the Door to the unit by attaching the hinges to Side Panel **2** as shown using 2 x Screw **H** per Hinge

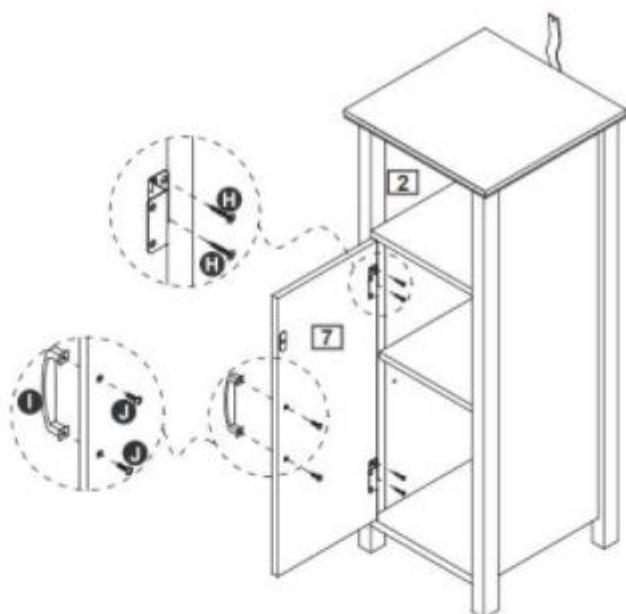

Step 8

The unit is floor standing, but it is recommended that the unit is secured to the wall.

1. Move the unit into desired position.
2. Mark the location of the fixing holes on the wall with a scribe.




Warning:
Before drilling, check wall for hidden pipes and cables.

3. Drill hole and insert 1 x wall plug **P**
4. Secure the strap to the wall using 1 x Washer **Q** and 1 x Screw **O**

Note: To hide the strap behind the unit, drill the holes lower than the top of the unit

Assembly Complete

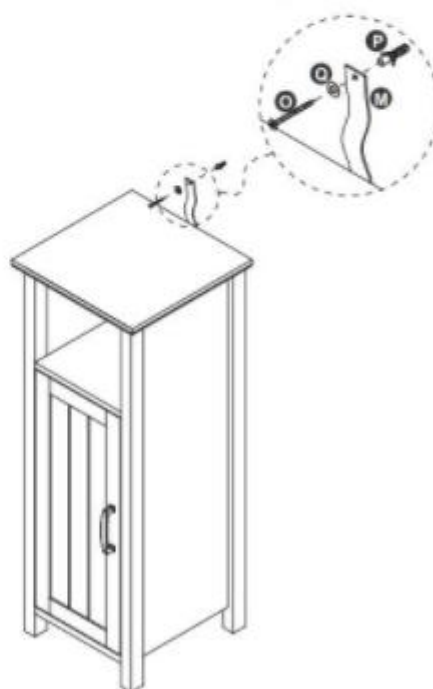

If you need help or have damaged or missing parts, please contact us in time.

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

- 1: General rule: always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

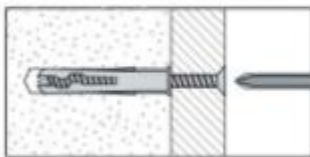


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.3 "Cavity Fixing" wall plug

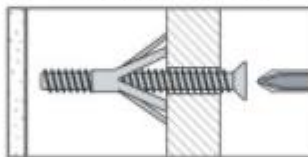


For use with plasterboard partitions or hollow wooden doors.

No.5 "Hammer Fixing" wall plug

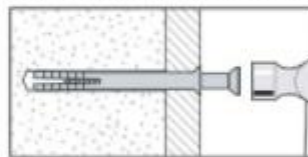


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2 "Plasterboard" wall plug

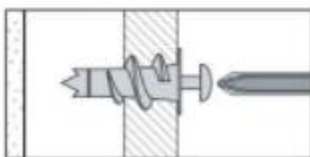


For use when attaching light loads onto plasterboard partitions.

No.4 "Cavity Fixing - Heavy Duty" wall plug

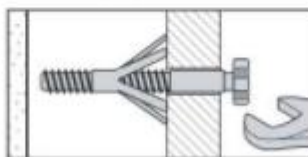

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.6 "Shield Anchor" wall plug - heavy loads

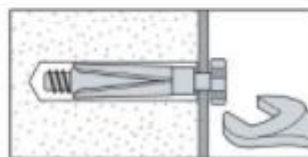

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.

If you need help or have damaged or missing parts, please contact us in time.

Care and Maintenance

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Never use water to clean your furniture as it may cause damage to the finish.

Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.

Check bolts/screws periodically and tighten them if necessary.

Further advice about wood furniture care

It is best to keep your furniture in a climate-controlled environment.

Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood.

It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase.

Following these important and helpful tips will enhance your furniture as it ages.