
OWNER'S MANUAL

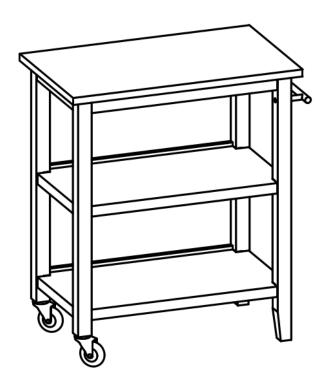

WOOD KITCHEN CART - WHITE Model

Important / Importante

FOR QUICK & EASY 3D ASSEMBLY INSTRUCTIONS


POUR DES DIRECTIVES D'ASSEMBLAGE 3D RAPIDES ET FACILES

PARA INSTRUCCIONES DE ENSAMBLAJE RÁPIDAS Y SENCILLAS EN 3D

PARTS LIST

Your Wood Kitchen Cart should include the following parts. Please inspect box contents to ensure you have received all components.

You may use a power screwdriver for easier assembly.

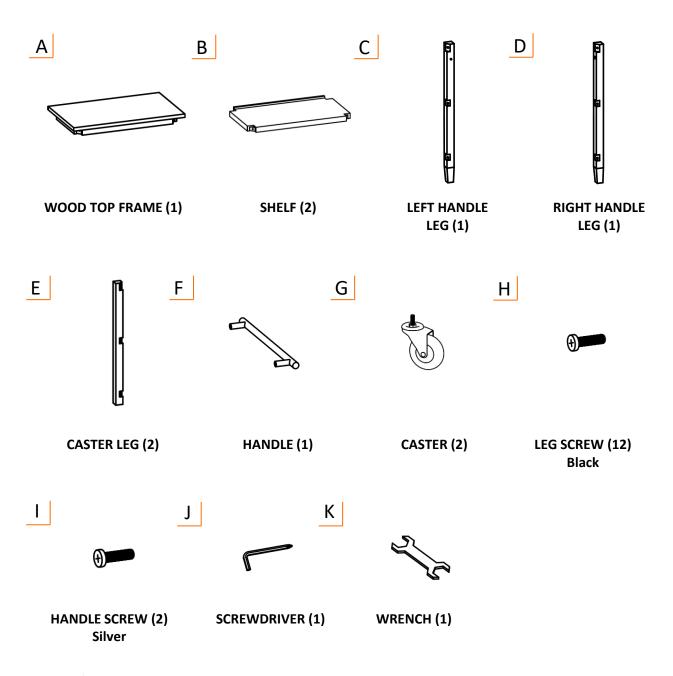

ASSEMBLY INSTRUCTIONS


STEP 1


Lay WOOD TOP FRAME (A) on a clean surface to prevent scratching the top surface. Take LEFT HANDLE LEG (C) and orient it in proper position by aligning hole for mounting handle along long edge of WOOD TOP FRAME (A)

Place LEG SCREW (H) through hole in WOOD TOP FRAME (A) and tighten it with SCREWDRIVER (J) to top nut in LEFT HANDLE LEG (C).

Repeat for RIGHT HANDLE LEG (D).

Note: LEFT & RIGHT HANDLE LEG (C & D) have FOOT PAD on bottom.

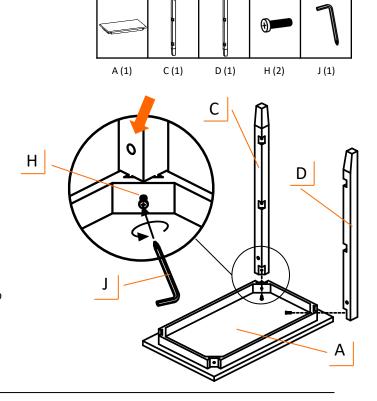

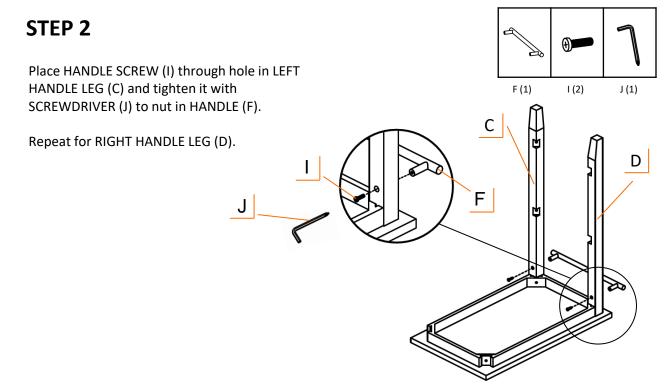



ASSEMBLY INSTRUCTIONS


STEP 3

Lay kitchen cart on its side so it is leaning on side of WOOD TOP FRAME (A) and RIGHT HANDLE LEG (D). Orient SHELF (B) so flat surface faces WOOD TOP FRAME (A) and raised edge of 2 shelves are on same side. Place LEG SCREW (H) through hole in SHELF (B) and tighten it with SCREWDRIVER (J) to nut in RIGHT HANDLE LEG (D).

 Repeat for LEFT HANDLE LEG (C) and for 2nd shelf.

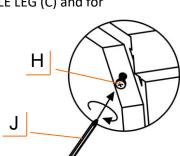

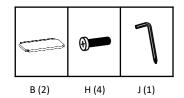


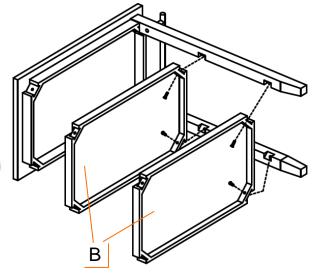



STEP 4

Place LEG SCREW (H) through hole in WOOD TOP FRAME (A) or SHELF (B) and tighten it with SCREWDRIVER (J) to nut in CASTER LEG (E).

 Repeat until all 6 LEG SCREWS (H) have been installed.

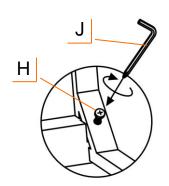

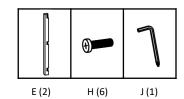

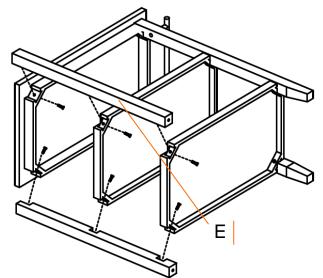


ASSEMBLY INSTRUCTIONS

STEP 5

Flip cart over and lay WOOD TOP FRAME (A) top surface on a clean surface again. Screw CASTER (G) into nut of CASTER LEG (E) bottom. Tighten CASTER (G) with WRENCH (K).

<u>Use provided caster wrench to tighten</u> <u>completely. Failure to do as instructed</u> <u>could result in caster stem breaking.</u>

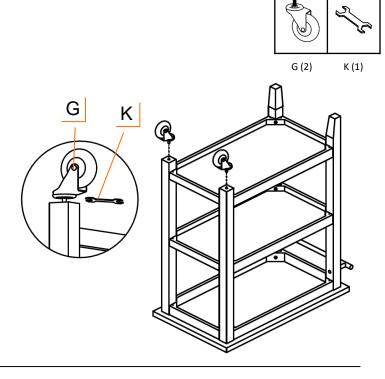

STEP 6


Carefully flip completed cart right side up.



SERVICE PARTS LIST –

Customer Service provides the following replacement parts:

#	Description	#	Description
1)	Wood Top Frame	7)	Foot Pad
2)	Right Handle Leg	8)	Screwdriver
3)	Handle	9)	Wrench
4)	Handle Screw	10)	Caster
5)	Left Handle Leg	11)	Caster Leg
6)	Shelf	12)	Leg Screw

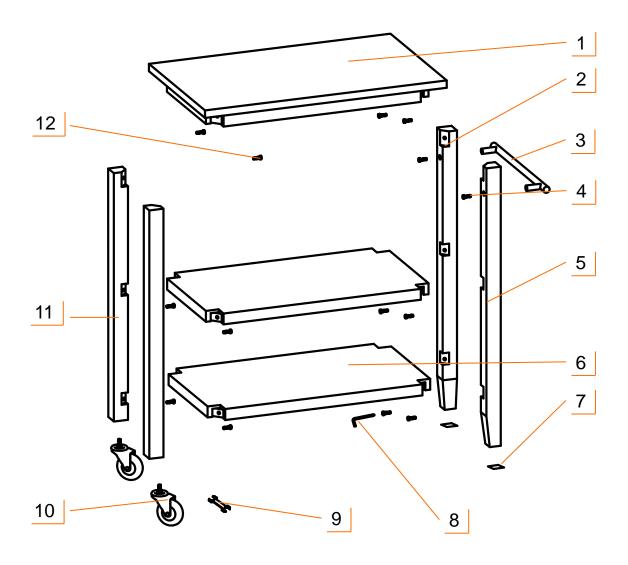

WARNINGS

- **1. Read and understand all instructions.** Failure to follow all instructions may result in injury and/or damage.
- **2. Use the provided caster wrench to tighten completely.** Failure to do as instructed could result in the caster stem breaking thereby causing the kitchen cart to collapse.
- 3. The warnings, cautions, and instructions discussed in this manual cannot cover all possible conditions or situations that may occur. The user must always be aware of their environment and ensure that they use the product in a safe and responsible manner.
- **4. Do NOT modify the product in any way.** Unauthorized modification may impair the function and/or safety of the product, and may affect the life of the product. Any modifications will void product warranty.
- **5.** Check for damaged parts. Before using this product, carefully check that all parts are in good condition, and that the product will operate properly and perform its intended function. Check for damaged parts and any other conditions that may affect the operation of this product. Replace damaged or worn parts, and never use this product with a damaged part.
- 6. Do NOT overload the product.

Weight capacity per shelf (evenly distributed)	50 lb
Total weight capacity of kitchen cart (evenly distributed)	150 lb

- Do NOT allow children to climb or play around the product. Tipping may occur causing injury.
- **8.** Do NOT stand or lean on the product or use any part of this product as a step ladder. Tipping may occur causing injury.
- 9. Do NOT roll the product on an uneven surface. Only move the product on a smooth surface. Rolling over rough or uneven surfaces may cause casters to break or items on the product to fall, resulting in injury and / or damage. Wood and laminate flooring can be scratched or dented. Ensure your flooring can bear the weight of loaded product before rolling loaded product across your flooring.
- **10. Do NOT move a loaded cart.** Tilting of cart is needed to move it and items may fall causing damage or injury.

CARE AND MAINTENANCE

- Avoid harsh, abrasive cleaners, and other corrosive chemicals.
- Clean up any spills immediately to prevent stains from forming on the wood surface.
- Do not put hot items directly on wood top or shelves to prevent damaging and discoloring wood surface.
- Wipe dry and keep out of direct sunlight.
- The product is designed for indoor use.

1 YEAR LIMITED WARRANTY

Wood Kitchen Cart

International Industries ("warrants to the original consumer purchaser ("Purchaser") of the Wood Kitchen Cart ("Product") that each Product shall be free from defects in workmanship and materials for a period of 1 year from the date of original purchase. obligation under this warranty shall be limited to repair or replacement of, or adequate compensation for the Product which shall not be greater than the amount of the purchase price of the Product, at the option of , during the warranty period. All replaced parts and Products become the property of and must be returned to .

This warranty excludes normal wear and tear of the Product and its parts or components, and damage arising from any of the following: negligent use or misuse of the Product, use contrary to this User's Manual, or alteration by any one other than . The warranty period of 1 year shall not be extended or renewed by the repair or replacement of, or compensation for, the Product. Any warranty implied by applicable law is limited in duration to one year from the date of purchase and is subject to the same conditions and limitations as is provided for our express warranty.

Except as set forth herein, and to the extent of applicable there are no warranties on this Product either express or implied, and Trinity disclaims all warranties including, but not limited to, any implied warranties of merchantability, infringement or fitness for a particular purpose. No warranty or guarantee given by any person, firm, or corporation with respect to this product shall be binding on .

LIMITATION OF REMEDIES AND LIABILITY

(and its employees, officers, members, managers, affiliates and assigns) shall not be liable for any incidental, consequential, special, indirect, remote, special or punitive damages for breach of any warranty, express or implied, including, but not limited to, lost profits, lost savings, loss of anticipated benefits and attorneys' fees, which arise out of the purchase, use or inability to use the Product, whether arising out of contract, negligence, strict tort, product liability, or any other legal theory on which a claim is based. As noted above, to the extent damages are allowed by our express warranty or by applicable law, those damages may not exceed the purchase price paid for the Product. Without limiting the foregoing Purchaser assumes all risk and liability for loss, damage or injury to Purchaser and Purchaser's property and to others and their property arising out of the use, misuse, or inability to use this Product. This limited warranty shall not extend to anyone other than the original purchaser of this product, is nontransferable and states your exclusive remedy.

Some states do not allow the exclusion or limitation of incidental, consequential, special, or punitive damages, so the above limitation or exclusion may not apply to you. The above warranty gives you specific legal rights, and you may have other rights which vary from state to state.