


PARTS LIST

Your TRINITY Stainless Steel Cooler should include the following parts. Please inspect box contents to ensure you have received all components.

If you are missing any parts, need assistance with assembly or have questions, please contact TRINITY Customer Service: 800.985.5506 or customerservice@trinityii.com. Parts can also be requested online via "Contact Us" section at www.trinityii.com.


You will need a Phillips screwdriver for assembly which is not provided.

A

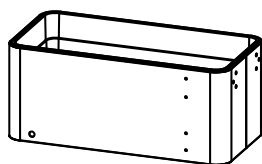

TUB (1)

 B



LID (1)

C



SHELF (1)

D



 
LEG (4)

E



**SMALL
SCREW (10)**

F



HANDLE (2)

G



**LARGE
SCREW (12)**

H



CAP CATCHER (1)

I



**BOTTLE
OPENER (1)**

J



DRAIN PLUG (1)

K



**LOCKING
CASTER (2)**

L



**NON-LOCKING
CASTER (2)**

M





WRENCH (1)

ASSEMBLY INSTRUCTIONS



STEP 1

Align HANDLES (F) on each side of TUB (A). Attach HANDLE (F) with LARGE SCREW (G). Make sure to tighten securely. HANDLES (F) can be attached either angled up or down based on your preference.

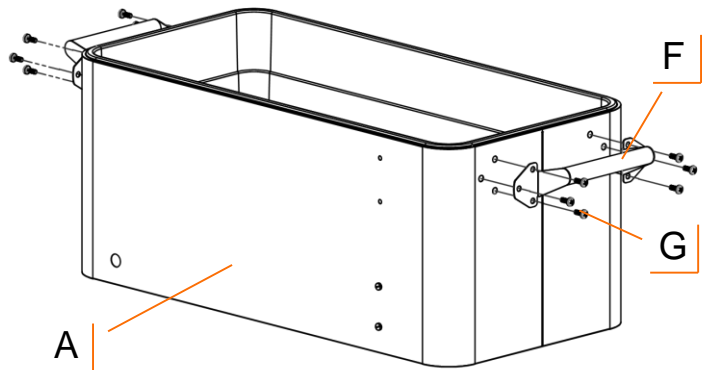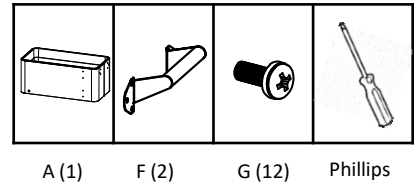

STEP 2

Turn Cooler upside down. Align LEG (D) with holes on bottom of TUB (A). Attach LEG (D) with SMALL SCREWS (E). Make sure to tighten securely.

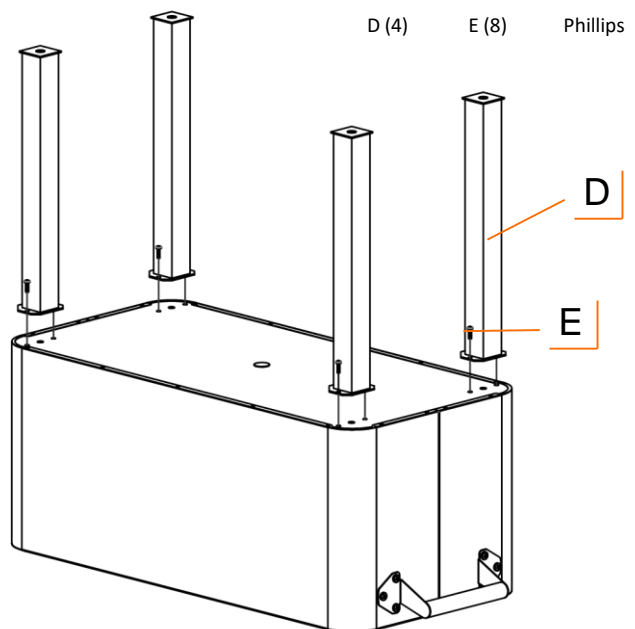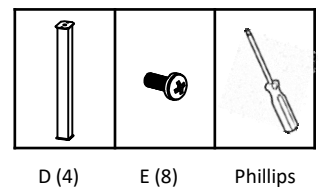


ASSEMBLY INSTRUCTIONS

STEP 3

Align holes in SHELF (C) with bottom of LEG (D), making sure that Shelf Lip is facing TUB (A). Screw LOCKING CASTER (K) into bottom of LEG (D), securing SHELF (C) in between. Make sure LOCKING CASTERS (K) are installed on the same side. Screw NON-LOCKING CASTER (L) into bottom of LEG (D), securing SHELF (C) in between. Repeat for the other NON-LOCKING CASTER (L).

Tighten CASTERS (K, L) with the provided WRENCH (M).

Use provided caster wrench to tighten completely. Failure to do as instructed could result in caster stem breaking.

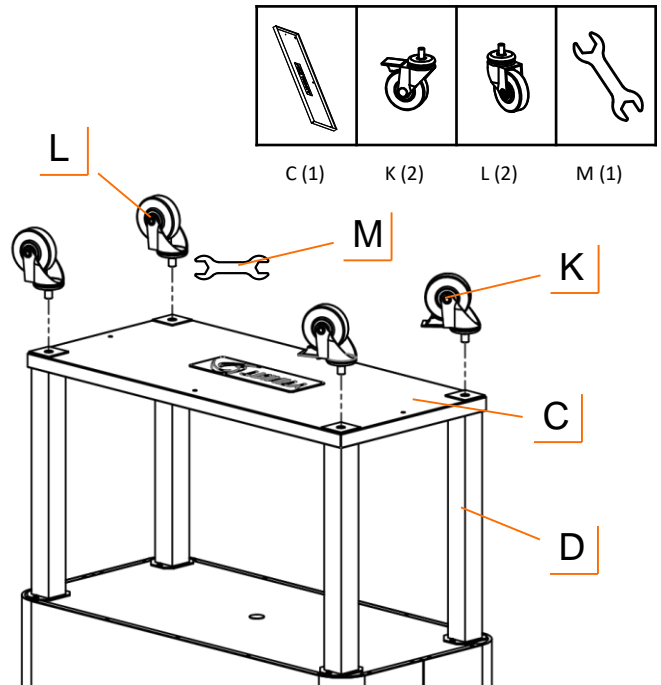


STEP 4

Turn the Cooler right side up.

Attach BOTTLE OPENER (I) to TUB (A) using SMALL SCREWS (E).

Attach CAP CATCHER (H) to TUB (A) by sliding it down on metal notch.

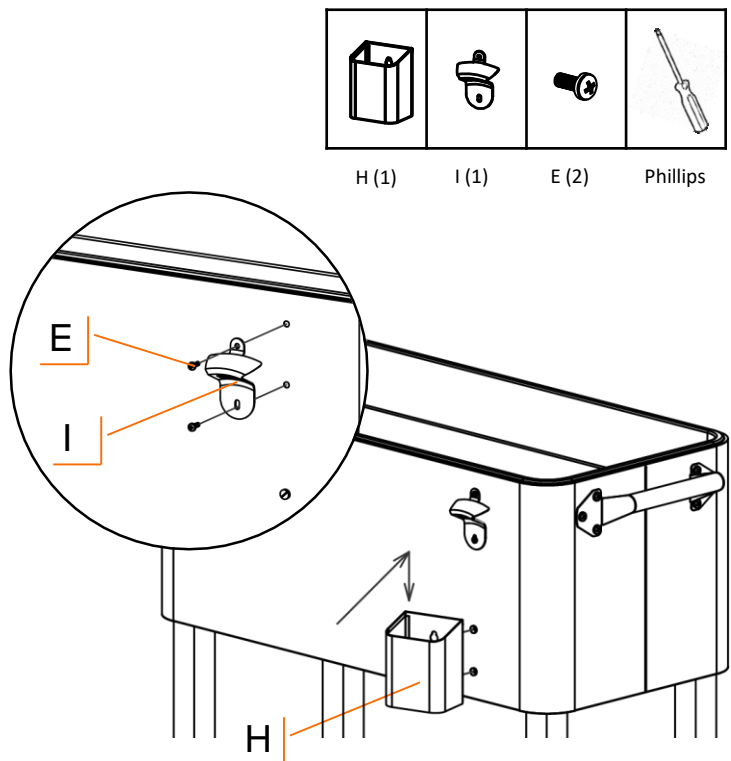


ASSEMBLY INSTRUCTIONS

STEP 5

Unscrew DRAIN PLUG (J) assembly. Insert DRAIN PLUG (J) through the opening in TUB (A) from the inside. Make sure the rubber seal is on the inside of TUB (A).


From the outside, slide the Washer on first, then the second Washer with Chain, and then screw on the Nut. Be sure not to overtighten. Once DRAIN PLUG (J) is in place, screw on the Cap.

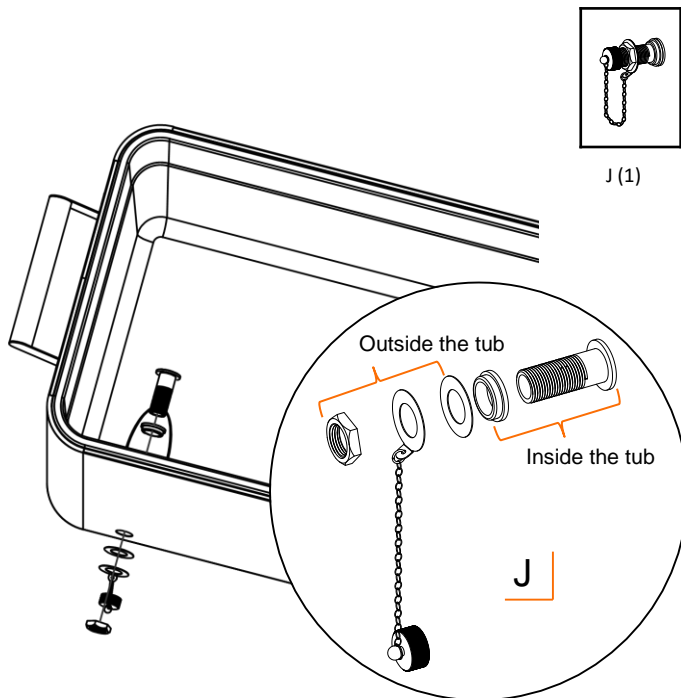

STEP 6

Set LID (B) on top of TUB (A).

Clean the inside of Cooler thoroughly before use.

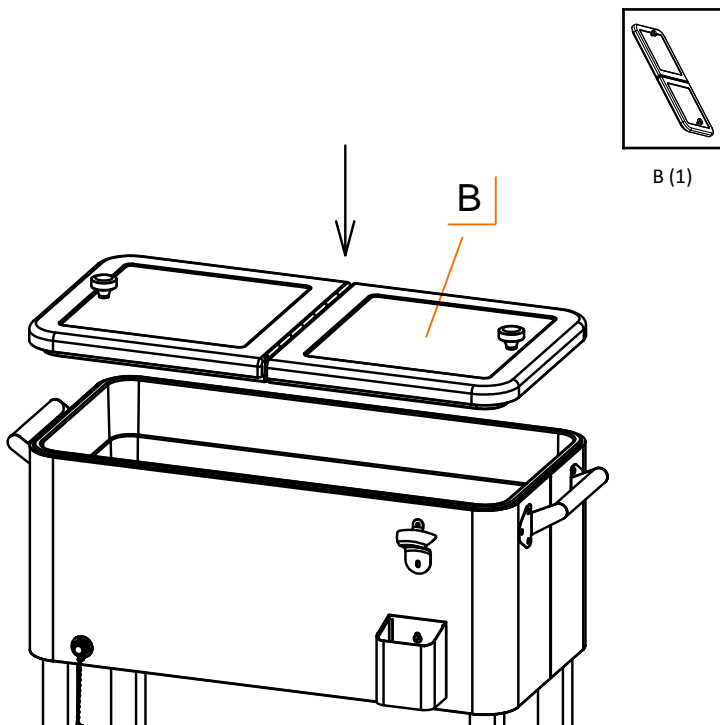

SERVICE PARTS LIST – TXK-0802

TRINITY Customer Service provides the following replacement parts:

Part Number	Description	Part Number	Description
1) PBR-17-002-3115	Cooler Lid	9) ZSV-99-011-3010	Non-Locking Caster
2) AMA-05-005-0150	Lid Knob	10) PBR-03-028-2913	Shelf
3) XSV-01-010-0530	Knob Screw	11) PBR-04-022-1625	Leg
4) XST-18-015-3115	Cooler Tub	12) XSV-01-010-0416	Small Screw
5) XST-02-004-0001	Bottle Opener	13) CGL-02-003-0001	Drain Plug
6) XST-02-005-0002	Cap Catcher	14) XSV-05-001-0675	Handle
7) ZSV-99-012-3010	Locking Caster	15) XSV-01-010-0615	Large Screw
8) XXX-97-002-0007	Wrench		

