 
 


---

## 48" CORNER SIT/STAND ELECTRIC DESK

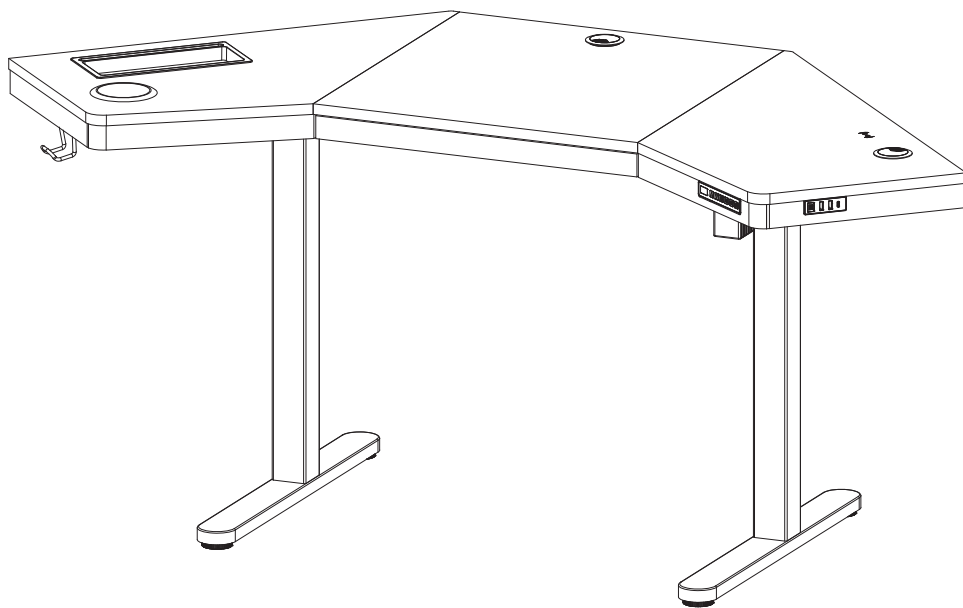

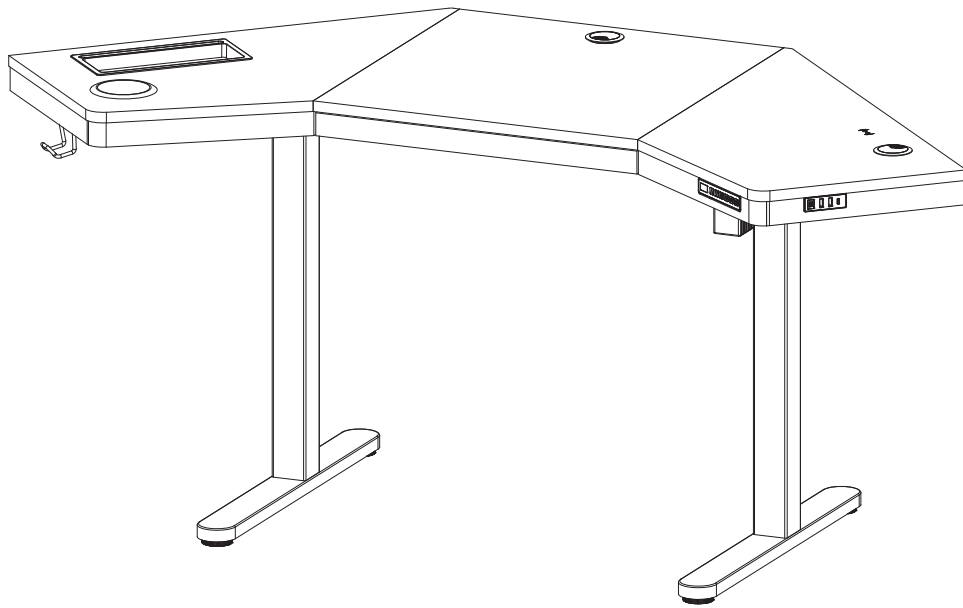

 
1. Do not use this product unless all screws and bolts are securely tightened.
2. Check that all screws and bolts are tight every three months or as needed.
3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
4. Do not use this product as a stepladder.
5. Use this product for its intended purpose only.
6. **FOR INDOOR RESIDENTIAL USE ONLY.**

#### **LIMITED WARRANTY**


We warrant to the original purchaser that this product will be free from defects in material and workmanship as described below. We will repair or replace, at its option, without charge to the original purchaser only, defective products or parts for one (1) year from the date of purchase. Replacement parts can only be supplied if parts are available. Items out of production may be unavailable. This warranty shall be effective for the applicable time period beginning from the date of purchase as shown on your original sales receipt. This warranty is your sole remedy for product defects and excludes defects due to or arising in connection with product abuse or misuse, use modification of, or attachments to the product, and products or parts not used, maintained, or installed in accordance with the company's installation, maintenance and/or applicable guidelines. There are no other warranties, express or implied, other than those specifically described, including without limitation any implied warranty of merchantability or of fitness for a particular purpose. We will not be responsible for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Our quality standards are among the highest in the industry. Sometimes, no matter how hard we try, there are times when parts are damaged or missing. Our Parts Department will do everything possible to promptly remedy the problem.

(a) Supply compatible components of current manufacture. (b) Repair the customer's component. The customer must prepay freight on any components returned to the factory. Return freight on components still in warranty will be paid


PARTS

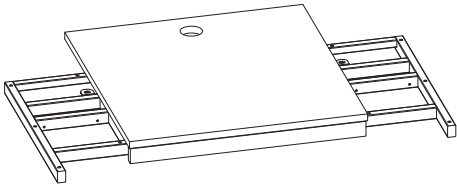

 
(1) Center Top (1 PC)

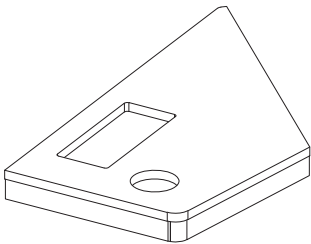

 
(2) Left Top (1 PC)

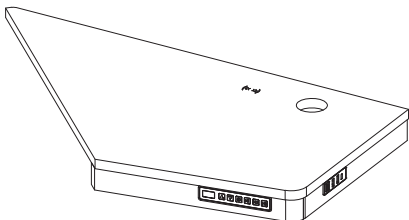

 (3) Right Top (1 PC)

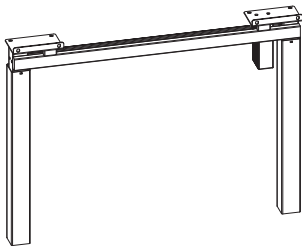

 (4) Leg Frame (1 PC)


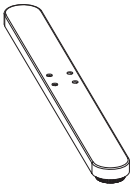 

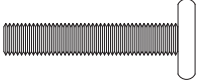
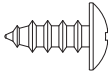
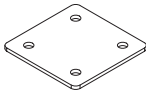
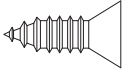
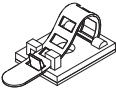



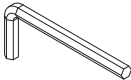






(5) Leg (2 PCS)

Specifications

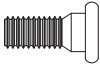
Max. Weight Capacity	110 lbs (50kg)
Speed	25mm/s
Input Voltage	100-240V
Min. Height	29.5"(750mm)
Max. Height	47.25"(1200mm)
Duty Cycle	10% (Working 2 minutes then stop 18 minutes)
Certification	FCC, UKCA

## HARDWARE LIST

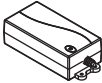
NO	DRAWING	DESCRIPTION	SIZE	QUANTITY
A		Machine Screw	3/4"	8 PCS
B		Machine Screw	1/2"	10 PCS
C		Machine Screw	1-5/8"	15 PCS
D		Machine Screw	1-1/8"	5 PCS
E		Wood Screw	9/16"	13 PCS
F		Metal Plate	n/a	2 PCS
G		Wood Screw	1/2"	3 PCS
H		Self-Adhesive Cable Strap	n/a	3 PCS
I		Grommet	n/a	2 PCS
J		Cup Holder	n/a	1 PC
K		Tray	n/a	1 PC
L		Allen Wrench	n/a	1 PC
M		Control	n/a	1 PC
N		Hook	n/a	1 PC
O		Power Adapter	n/a	1 PC
P		Wood Screw	5/8"	4 PCS

*Phillips screwdriver also needed for assembly (not provided)*


## STEP 1

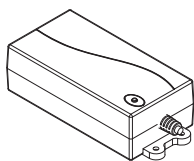 

 
(0) Power Adapter - 1 PC



 
(P) 5/8" Wood Screw - 4 PCS



 (E) 9/16" Wood Screw - 5 PCS

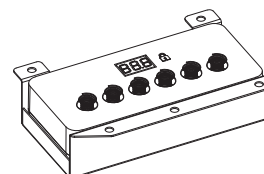


 (M) Control - 1 PC

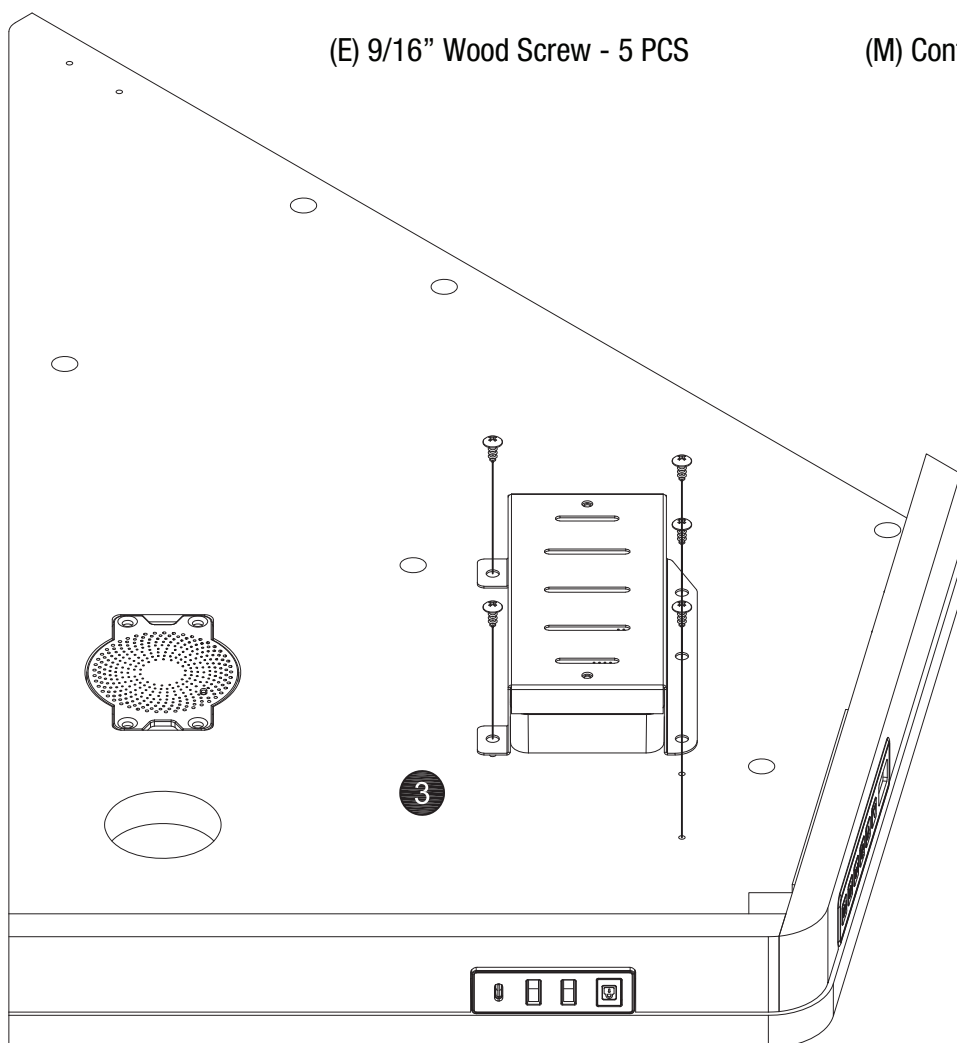


## FULLY TIGHTEN SCREWS


 
## STEP 2

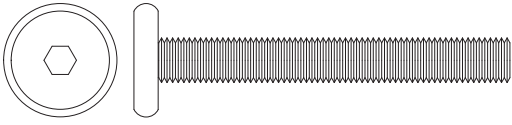

 
(C) 1-5/8" Machine Screw - 8 PCS



  (L) Allen Wrench - 1 PC

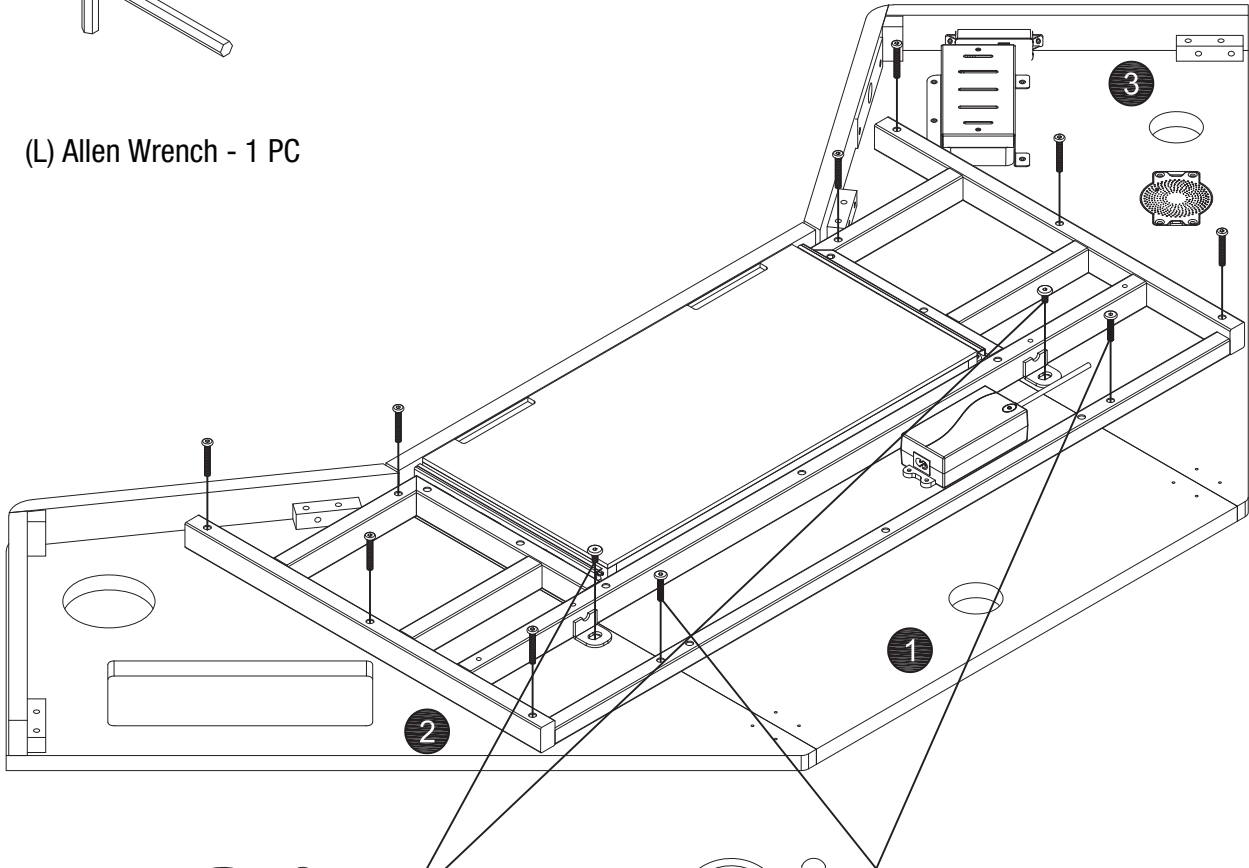

 
(B) 1/2" Machine Screw - 2 PCS

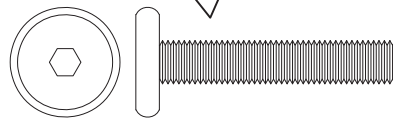


(D) 1-1/8" Machine Screw - 2 PCS

**FULLY TIGHTEN SCREWS**
 
### STEP 3

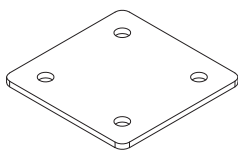


 
(F) Metal Plate - 2 PCS



(E) 9/16" Wood Screw - 8 PCS




  (N) Hook

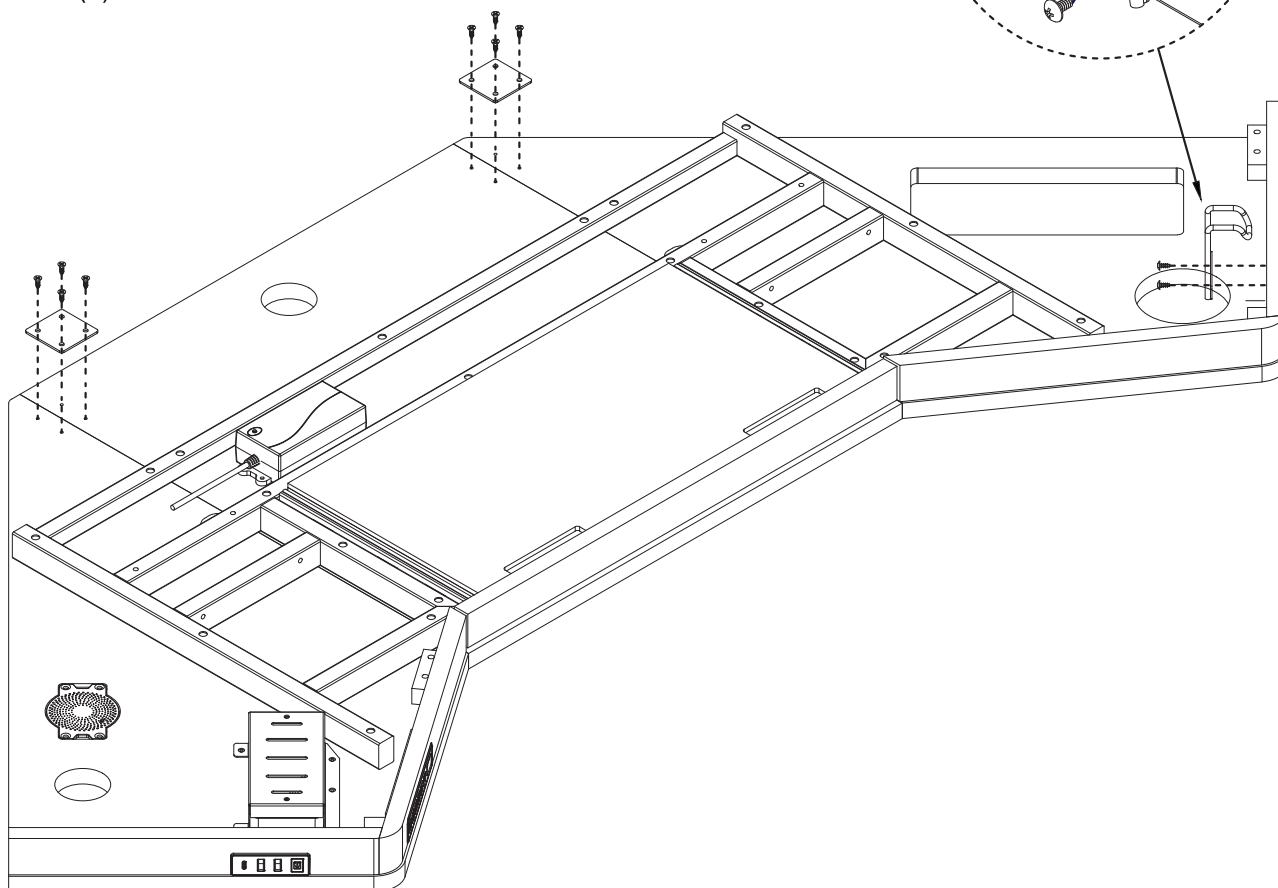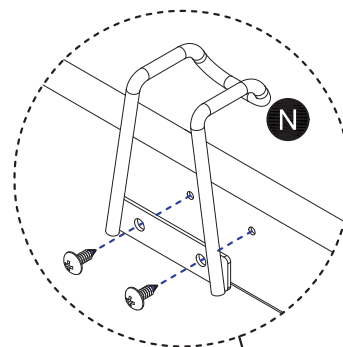


**FULLY TIGHTEN SCREWS**
 
## STEP 4

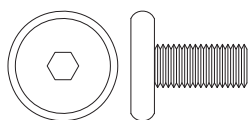

 (B) 1/2" Machine Screw - 8 PCS

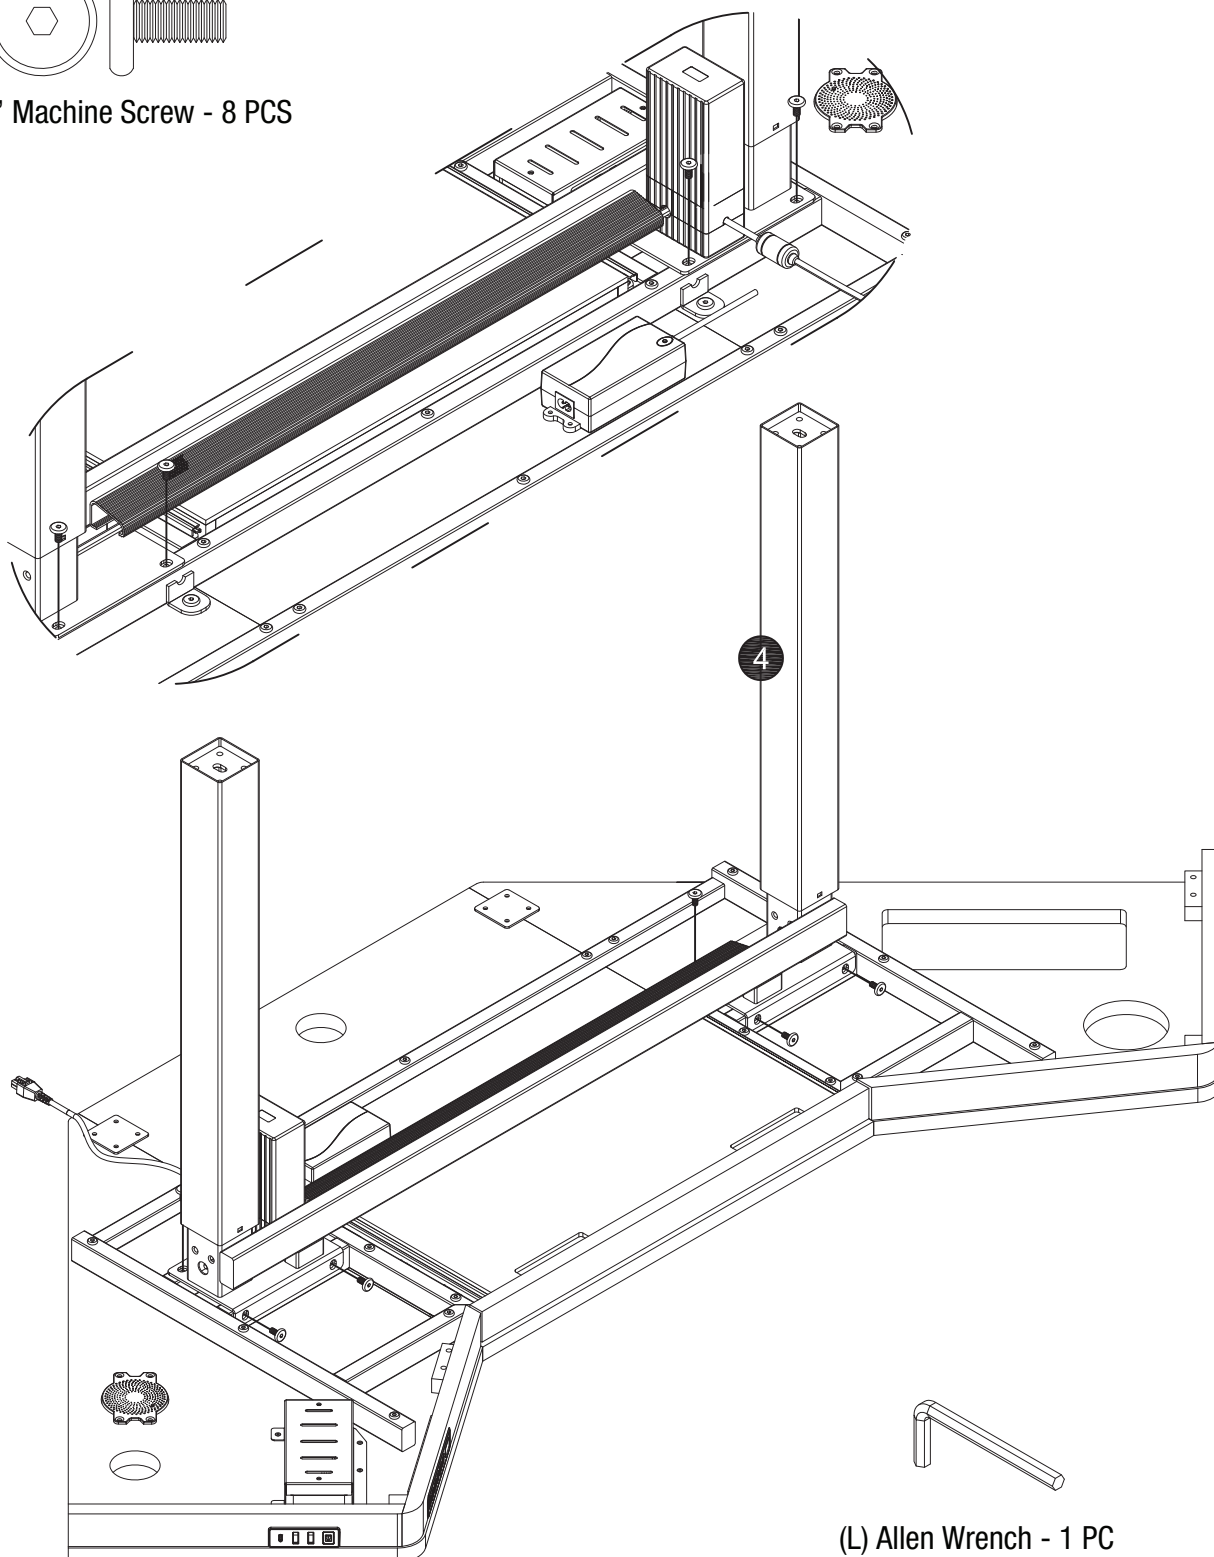


(L) Allen Wrench - 1 PC


**FULLY TIGHTEN SCREWS**


 
## STEP 5






 (A) 3/4" Machine Screw - 8 PCS

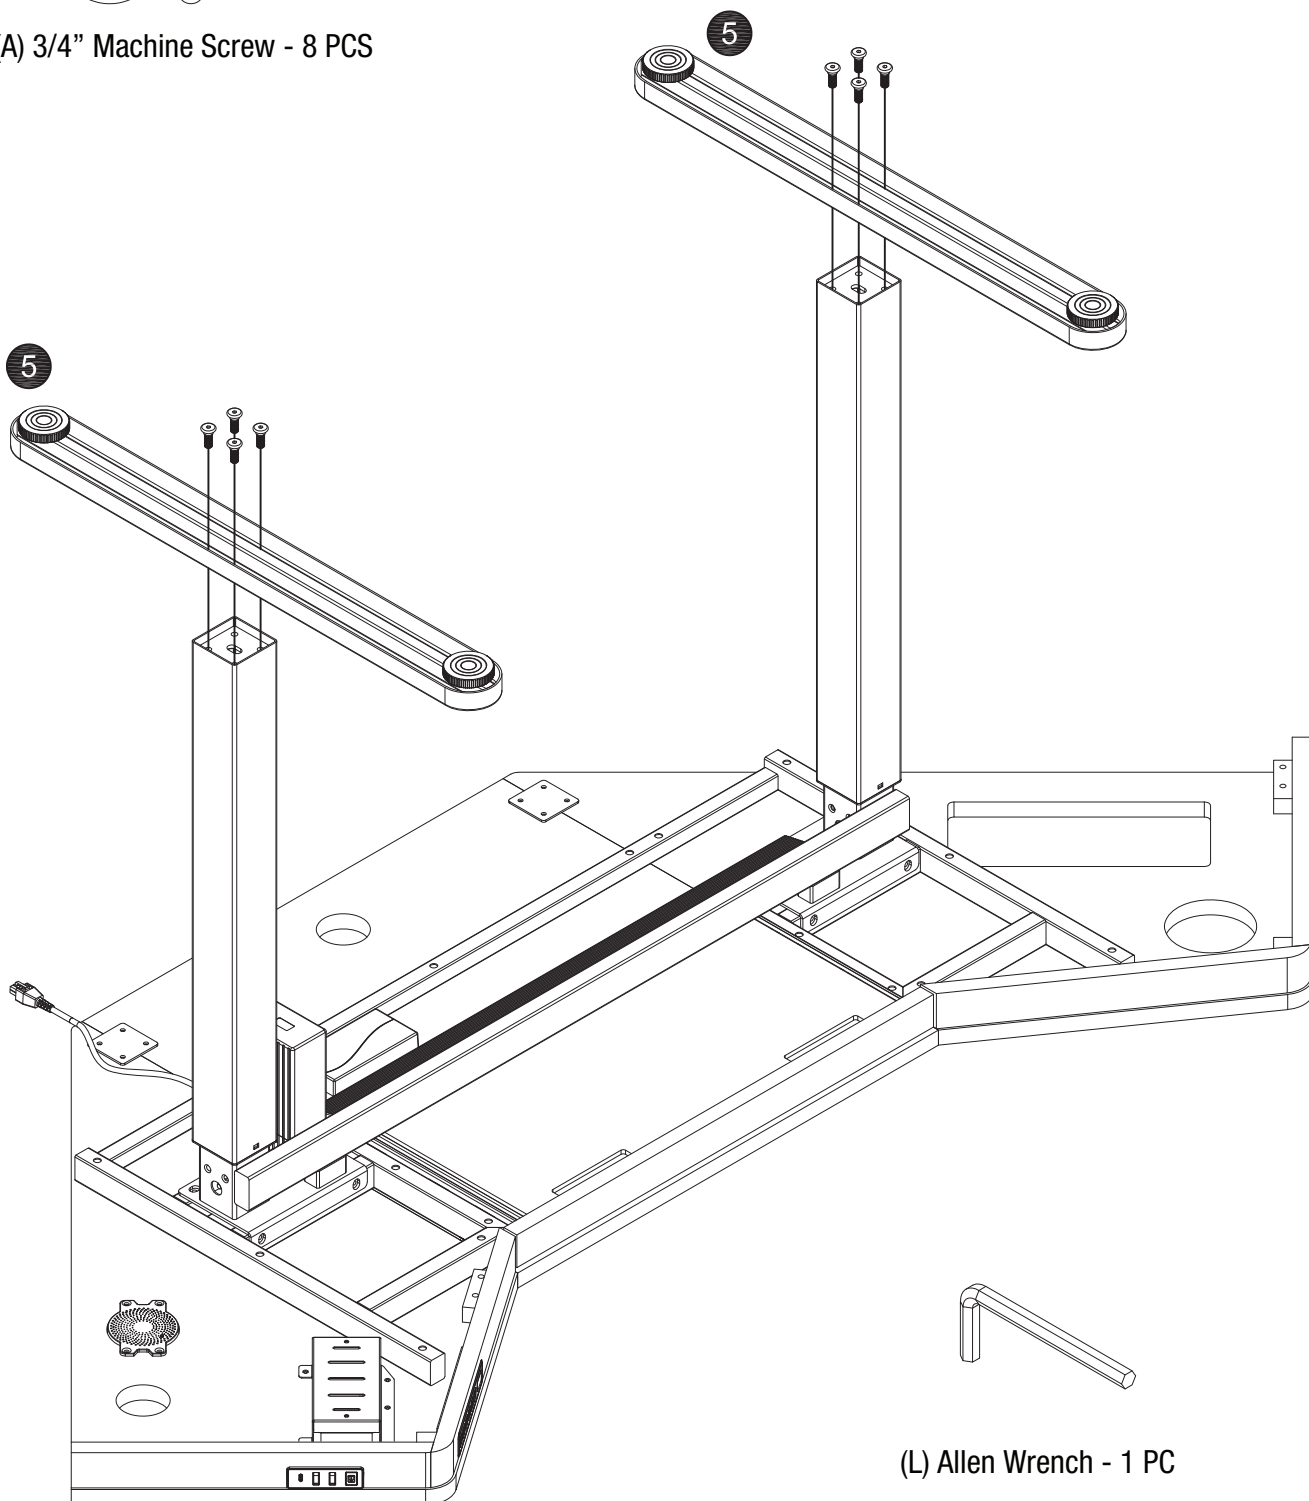


**FULLY TIGHTEN SCREWS**
   
## STEP 6

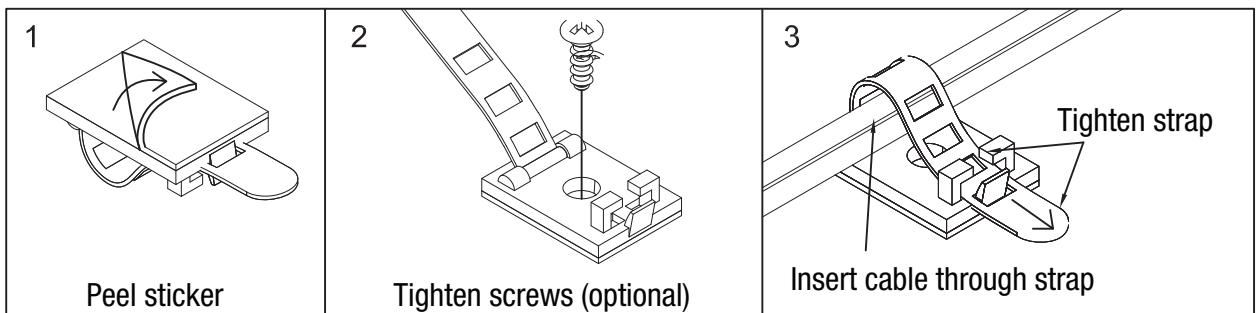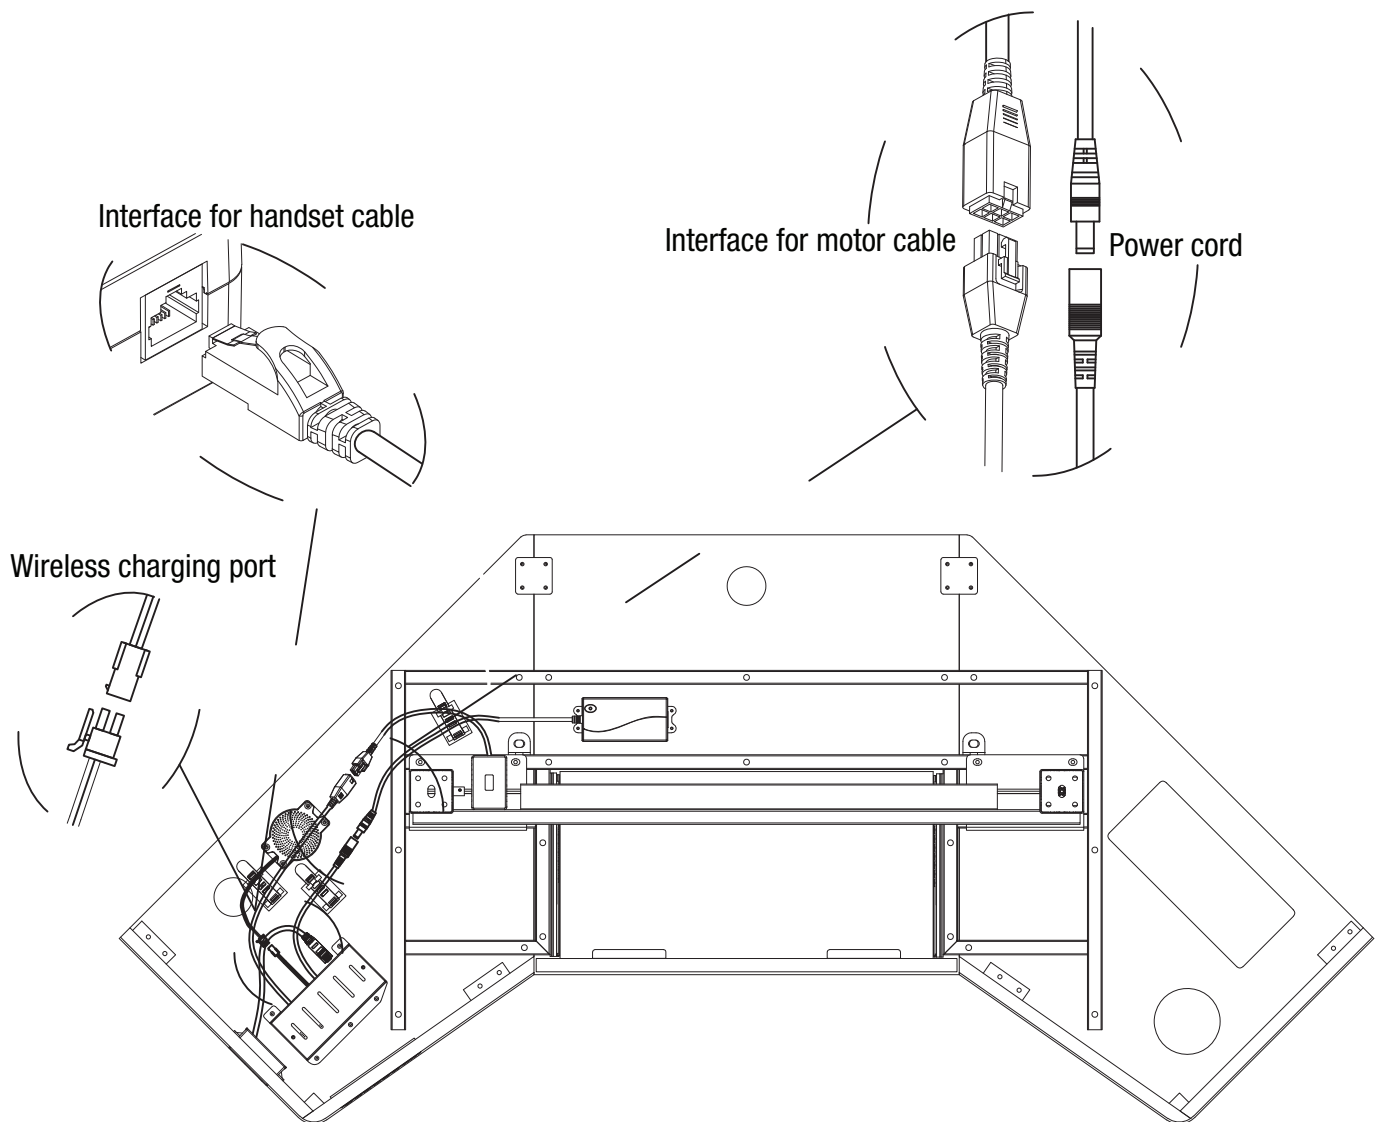

 
(G) 1/2" Wood Screw - 3 PCS

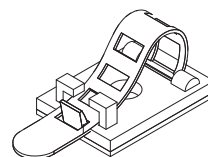


(H) Self-Adhesive Cable Strap - 3 PCS

**FULLY TIGHTEN SCREWS**

 
## STEP 7

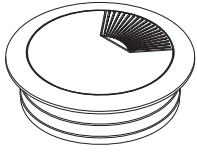

 
(I) Grommet - 1 PC

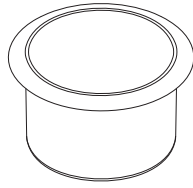

 
(J) Cup Holder - 1 PC

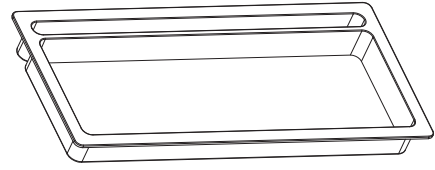

 (K) Tray - 1 PC


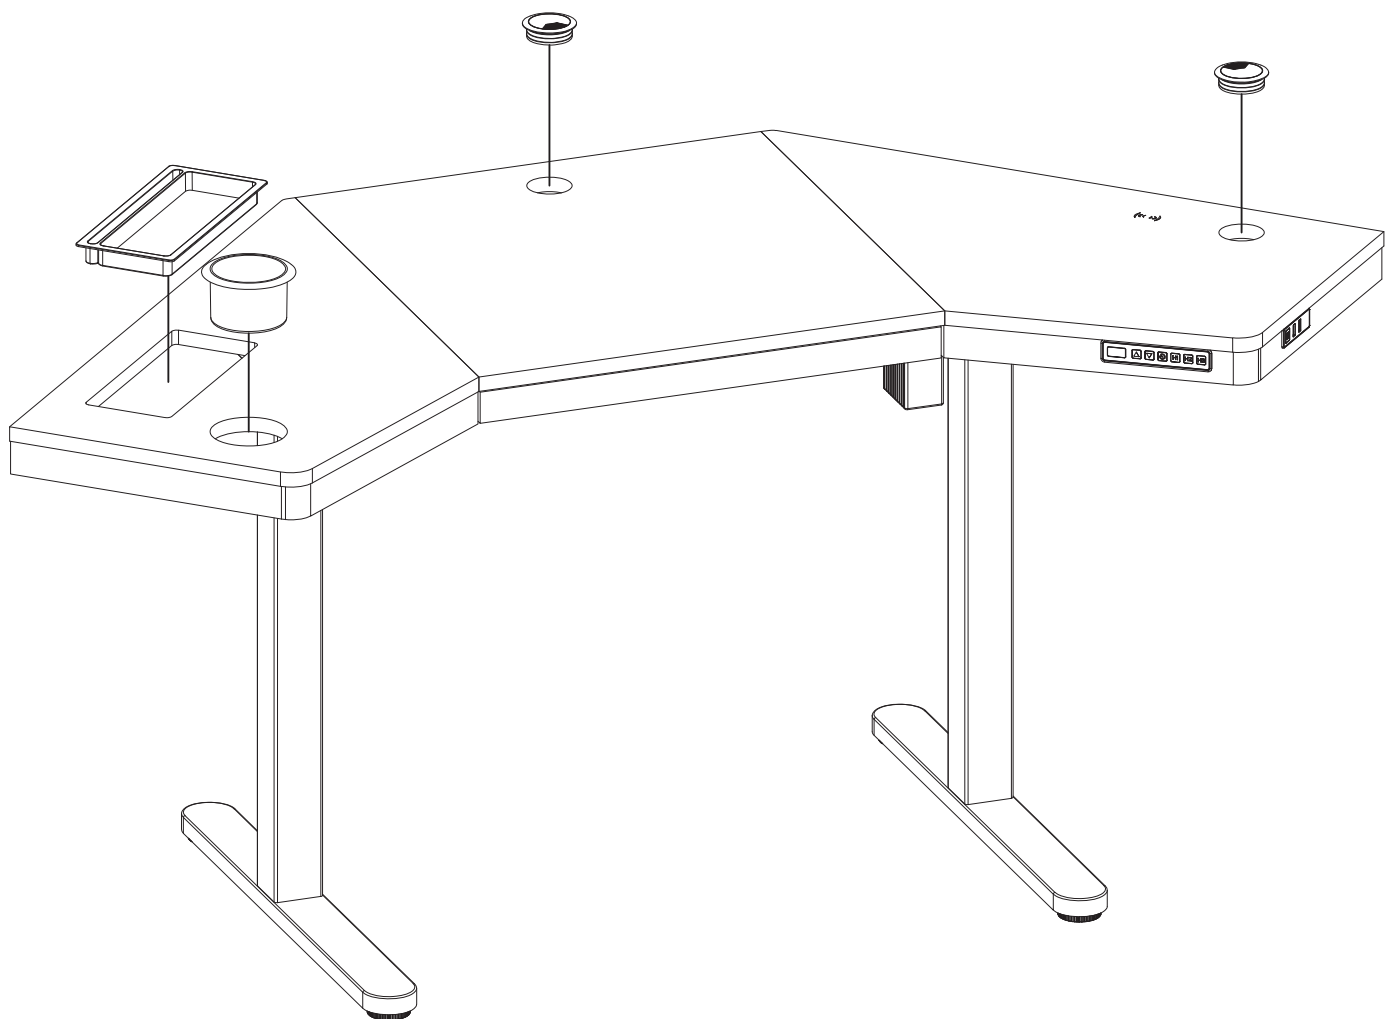


## STEP 8

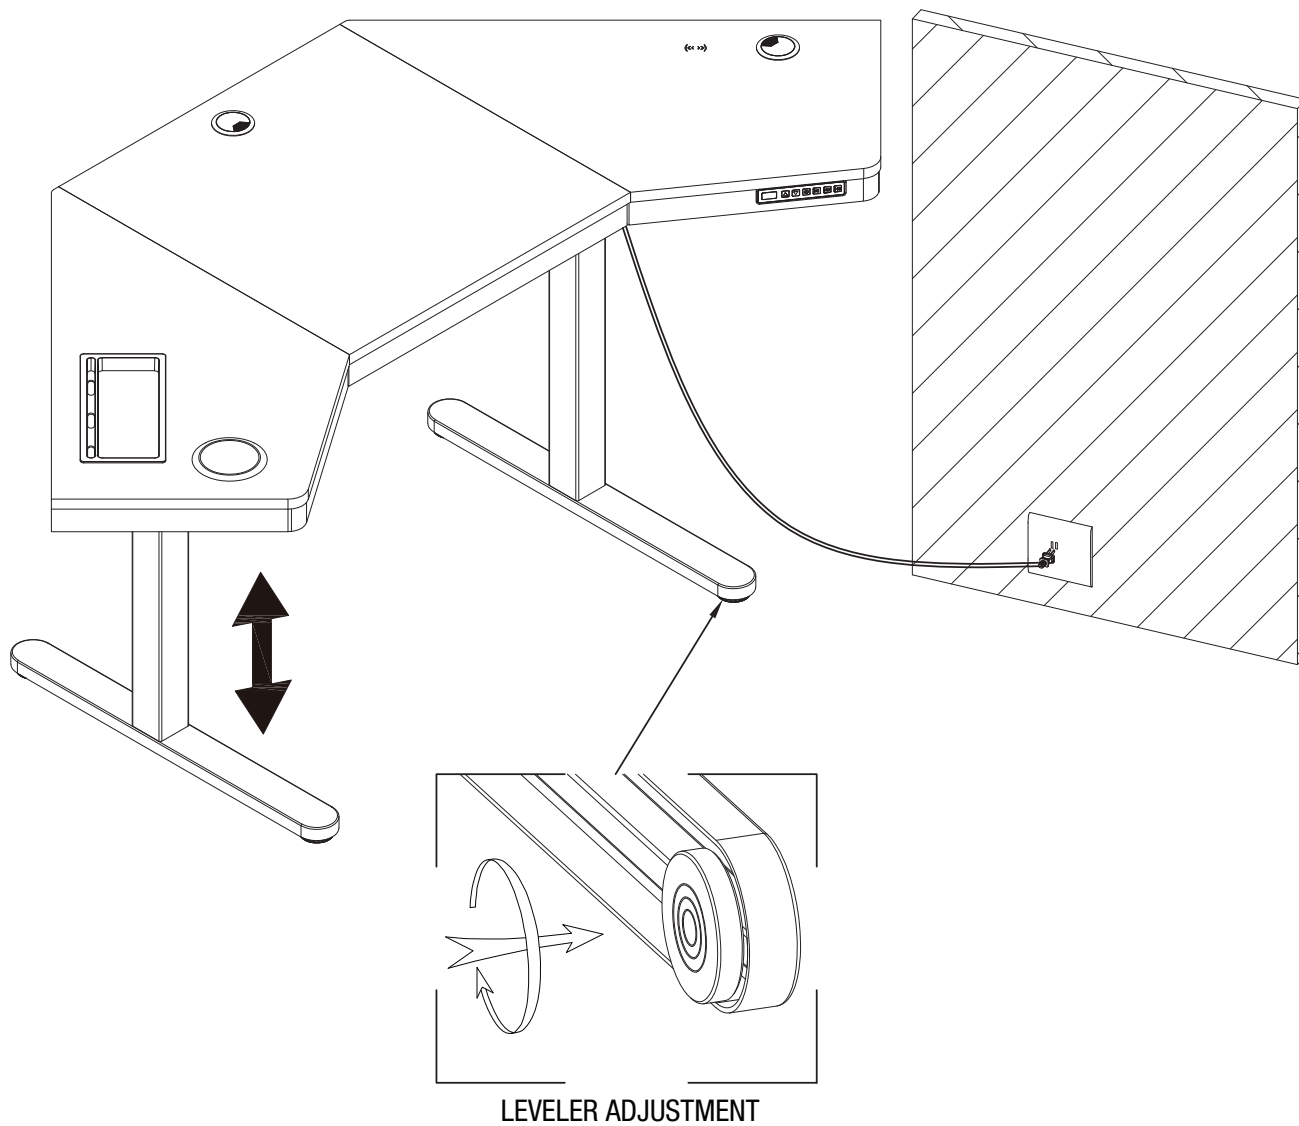 


\*Factory reset is required for first time initialization\*

## OPERATION

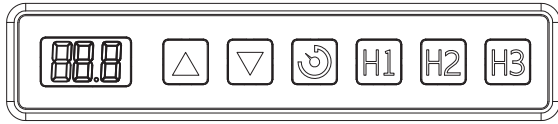  

Wireless Charger  
5W / 7.5W / 10W

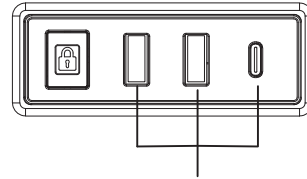 

3 USB Ports

(2 Type A 5V2.4A, 1 Type 20V1A)

While adjusting desk height, the USB ports will pause charging until the height adjustment process completes.

### LOCK BUTTON “”:

**NOTE: It is strongly recommended to use this feature to avoid any unexpected/unintentional movement.**

1. Press this button to lock the touch-screen. This will prevent accidentally engaging the controls after the desired height has been set. Press the button again to unlock the touch-screen.
2. To change between inches and centimeters, press and hold the Lock button for 5 seconds.

### DISPLAY:

1. The display will indicate the height of the desk (inches) . After five seconds without input, the digital readout will automatically fade away.
2. When the desk has reached the lowest setting, the display will indicate “bot”.
3. When the desk has reached the highest setting, the display will indicate “top”.
4. Touch and hold one of the memory buttons (H 1-H3) for 3 seconds when the desk is at the desired height in order to save it as a memory preset. The desk will automatically return to the set height when the corresponding memory button is touched.
5. Touch and hold the ▲ button to lower the desk and release when it arrives at the desired height. The desk is at the lowest height setting when “bot” is displayed.
6. Touch and hold the ▼ button to raise the desk and release when it arrives at the desired height. The desk is at the highest height setting when “top” is displayed.

### TIMER BUTTON “”:

The time is displayed in minutes and the point will not appear. For example, the readout will display 105 or 90, as opposed to 10.5 or 9.0.

1. Touching the timer button will cause the digital readout to blink. Use the Up button ▲ to cycle through the timer settings: 00, 10, 15, 30, 45, 60, 75, 90, 105, 120. Use the Down button ▼ to cycle through the timer settings: 120, 105, 90, 75, 60, 45, 30, 15, 10, 00. Touch the timer button again to confirm and start the countdown.
2. When the timer function is activated, the digital readout will display the timer in descending minutes For example, 120, 119, 118, 117 ..... 05, 04, 03, 02, 01, 00). At that time, if the desk's height is adjusted, the readout will show the height and return to the timer afterwards.
3. When the countdown is finished, the desk will beep 5 times continuously in 3 total successions and remain stationary.

## TROUBLE SHOOTING

PROBLEM	ROOT CAUSE	CORRECTIVE ACTION
Display indicates E1	Motor has overheated	Disconnect power cord and reconnect after 18 minutes. Factory reset is required.
Display indicates E2	Motor is stuck	Reduce top load to a max. of 45.4 kg (100 lbs)
	Motor is not powered	Visually inspect whether there are foreign materials or objects are obstructing the motor and/or shaft  Disconnect power cord and reconnect after 5 minutes. Factory reset is required.
Display indicates E4	Motor voltage is too low	Ensure the power adapter is properly connected and check power supply within the power supply range AC100V-240V  Disconnect power cord and reconnect after 5 minutes. Factory reset is required.
Display indicates RES	Desk must be reset to accurately display height	A factory reset is required for first initialization or when power is cut off due to electrical issues. Factory reset is required
Display indicates E12	Motor failure	Contact customer service

Factory reset	<p>Make sure all cables are connected properly before powering up.</p> <p>Press and hold the “Δ” and “H3” for 5 seconds after connecting to power until RES appears on screen. The table automatically lowers until it reaches bottom and will raise slightly with a “beeping” sound. The “bot” message will display on screen.</p> <p>The reset process is complete.</p>
---------------	---

## RECYCLING AND DISPOSAL



This product cannot be disposed of as household waste. To prevent damage to the environment, this product should be recycled. Please use the relevant recycling systems available to you or contact the distributor or manufacturer for recycling assistance.

## ATTENTION

- Power supply: AC100V-240V~, frequency 50/60HZ;
- Working environment: 14° F- 131° F;
- Before cleaning, you have to unplug the power supply cable. Clean with a slightly damp cloth to wipe away the surface dust. Keep all electrical components away from liquids. Do not damage the connection line and keep the plug in a safe position.
- Inside the control box, there are electronic components, metal parts, plastic parts, wires and so on. They should be disposed in accordance with the local laws and regulations. They cannot be disposed as household waste.
- Before using the product, please make sure the product has been installed correctly.
- Before starting use of the product, please read the instructions to fully understand all the product's functions and settings.
- Keep children away from electric height-adjustable desks, control units and handsets. Manufacturer is not responsible for any damages that result from children's unpredictable behavior.
- Slight noise caused by the multi-wedge belt or brake system will not impact the use of this product.
- Do not use corrosive or abrasive materials to clean this product and please dispose of cleaning solutions in an environmentally friendly manner.
- Understand the risks associated with using this product. Children or those with cognitive impairment should not use this product without supervision.
- If the power supply cord is damaged or broken, it must be replaced by the manufacturer or a relevant specialist to avoid any injuries.
- Please operate in a clean and safe environment. For example; Do not leave tools around. Always be careful when dealing with packaging materials to avoid any possible danger. Potential choking or asphyxiation risk exists when children play with plastic bags.
- If necessary, retain the original package for future transportation.

## FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.