

SMART GUN STORAGE BOX

INSTRUCTION MANUAL




Welcome to our company to buy our products


No matter where you come from, you are our closest friend. We will provide you with the best quality products, logistics and after-sales service. We will help you to solve your questions. We strive to do our best.

SCHEMATIC DIAGRAM


- ① Digital keys
- ② Fingerprint collector
- ③ Hide emergency keyholes

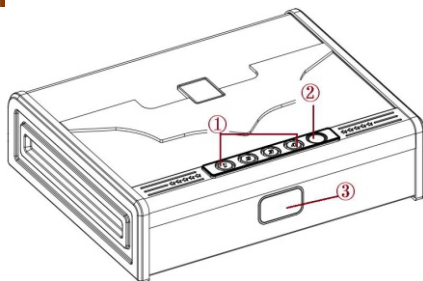

- ① Hydraulic rod
- ② Latches Hook
- ③ Reserved mounting hole
- ④ Safety rope mounting screws

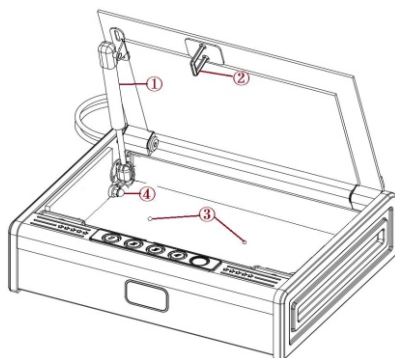


- ① Battery case cover
- ② Install the battery box
- ③ Interior LED Light
- ④ Set the keys
- ⑤ The safety rope hole


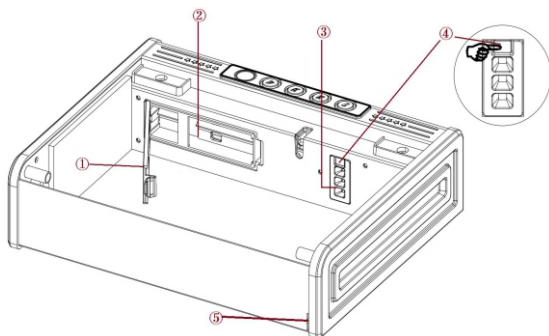


PENING YOUR SAFE FOR THE FIRST TIME

① Find the location of the mark, press the upper left or right corner of the mark to open the emergency cover.

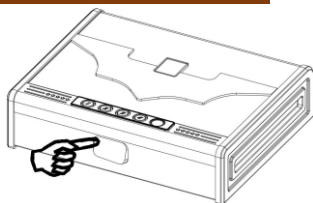



② Expose the emergency key channel, insert the emergency key, turn it counterclockwise 40°, then the door will open.

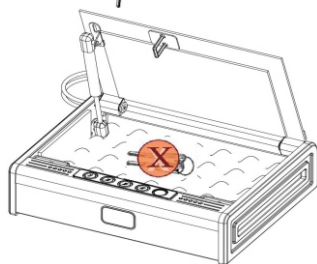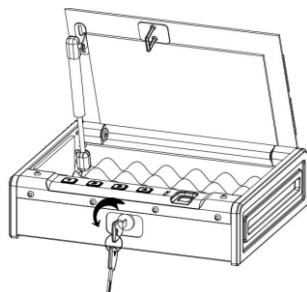

⚠ Note: After finishing the operation, take out the emergency key and keep it properly. Don't put the key in the safe.

INSTALL THE BATTERY

① Open the cover plate of the internal battery box and install four AA alkaline batteries in the positive and negative directions. When the buzzer "beep" sounds, it means that the power has been connected and the operation can continue normally.

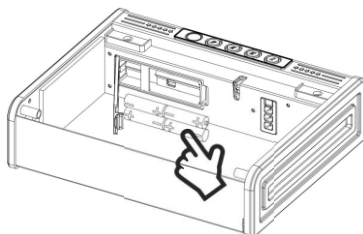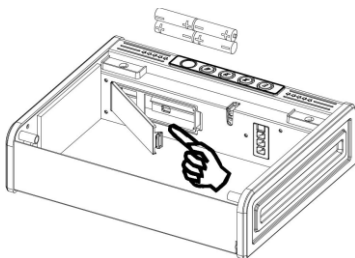



⚠ Note: Install 4 new batteries of the same brand, avoid using lithium batteries.

PRODUCT PERFORMANCE

- ① After the battery is installed in the internal battery box, the buzzer beeps once, indicating that the power has been connected and the operation can continue normally.
- ② The blue light in the indicator area indicates the setting state and door opening state, the red light indicates the error code alarm state, and the yellow light indicates the battery undervoltage state. (The factory original password is 1234, the password can be set to 4-6 digits, and the door cannot be opened with a blank fingerprint.)
- ③ This product has two modes of opening the door with digital password and fingerprint opening. The door can be opened by entering any correct password or correct fingerprint. After the door is opened, the blue light flashes once, and the buzzer beeps for a long time and the lock opens. The lighting inside the box lights up.

SET PASSWORD



- ① In standby state, press the setting button once, the blue light will shine, and the buzzer "beep" will sound twice. Enter a new password, press the setting button again, the blue light will light up, and the buzzer "beep" will sound for a long time, indicating that the password has been set successfully.

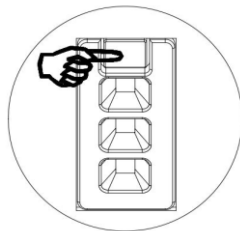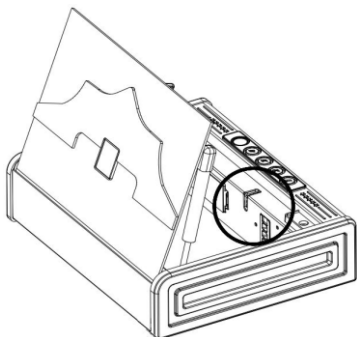


SET FINGERPRINTS

(20 FINGERPRINTS CAN BE REGISTERED)

- ① In the standby state, press the setting button once, the blue light will light up and the buzzer will "beep" twice.
- ② At this point, put your finger on the fingerprint collector, raise your finger when you hear the "beep" sound, and then put the same finger back on the fingerprint collector, and press it repeatedly for 3 times.
- ③ At this time, the buzzer "beep" , indicating that the fingerprint is set successfully.
- ④ If the red light is on, the buzzer "beep" twice, indicating that the fingerprint setting was unsuccessful.

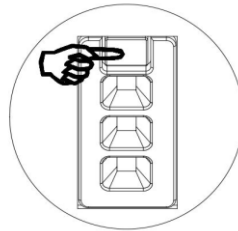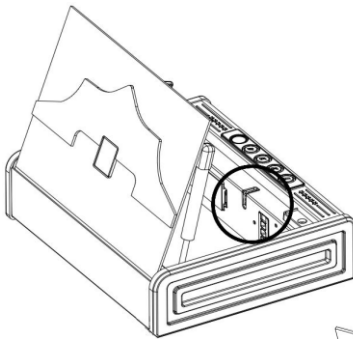


Tip: Repeat 3 times

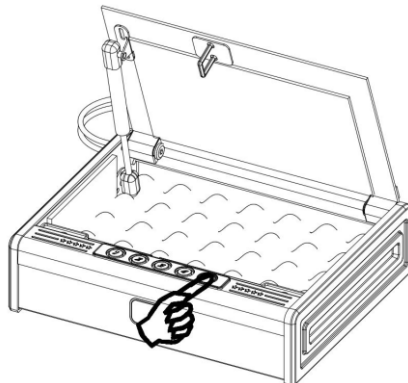

MUFFLER FUNCTION

1. Long press the number "1" key (about 3 seconds), the blue light will shine and the sound will be silenced successfully.
2. Long press "1" button again (about 3 seconds). The blue light will shine and the sound will turn on

 (Note: "1" is the muffler button, and it will return to normal without electricity).

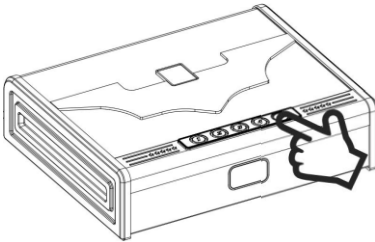

Press for 3 seconds to lift the finger

ERROR ALARM FUNCTION

1. When the wrong password or wrong fingerprint is entered, the red light flashes five times, and the buzzer "beep" five times to alarm. After 5 consecutive times of wrong code or wrong fingerprint, the button and fingerprint will self-lock for 5 minutes. (Both the digital keys and fingerprints are invalid when the alarm is wrong, and they will be returned to normal use after the alarm is over).

RESTORE FACTORY SETTINGS

1. Press the setting button for 3-5 seconds, and the blue light will shine, and the buzzer "beep" will ring, indicating that the fingerprint has been removed successfully. The numeric password is reset to the original password 1234. (At this point, any fingerprint cannot be verified.) Reset the fingerprint.


UNDERVOLTAGE FUNCTION

1. When the voltage is around 4.8V, the yellow light will shine 6 times after opening the door, and the buzzer "beep" will ring 6 times to alarm, reminding the low power to replace the new battery, so as not to affect the normal opening of the door next time.

 **Tip: Do not use lithium batteries, different brands of batteries.**


INSTALLATION DRAWING OF SAFETY ROPE

- ① The B end of the safety rope should be aligned with the wire hole of the box body.
- ② Fix the B end with screws according to the schematic diagram

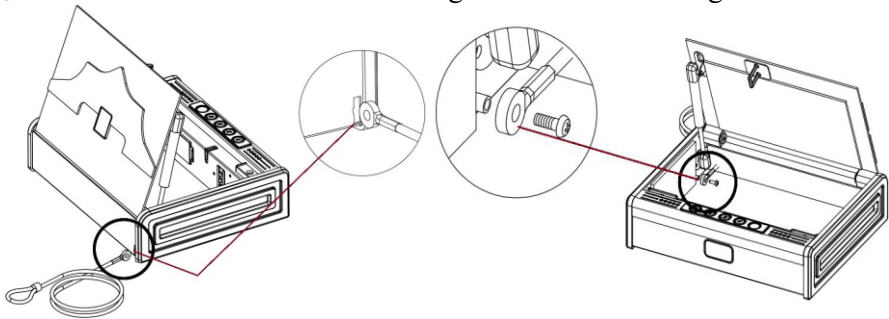

INSTALLATION AND FIXATION DIAGRAM

- ① Secure the safe in a place that cannot be moved easily.
- ② Clamp the screws in the correct position, secure the box body to the board, make sure the installation is in place, then tighten all screws.
- ③ Note: Use clamping screws when wooden wall surfaces are available. Each product comes with 2 screws.

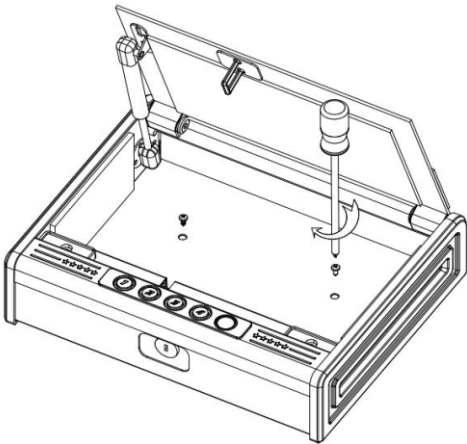

PARTS LIST

Product specification*1			
Emergency key*2		Safety rope * 1	
Install the screw*2		Safety line screw*1	

FINGERPRINT SAFE