 




INSTALLATION

Product Manual

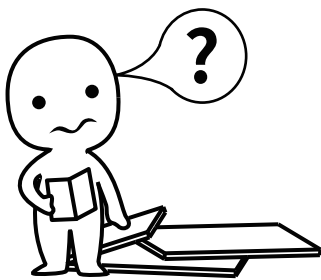


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

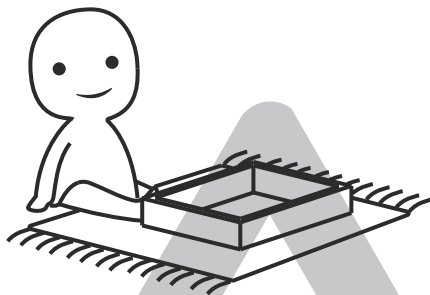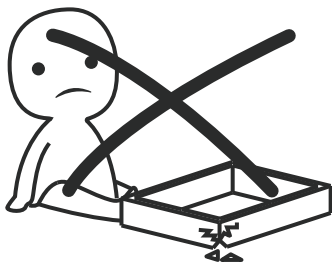



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

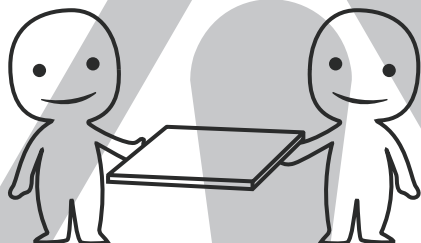

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

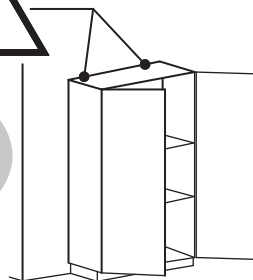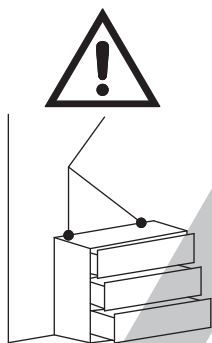

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

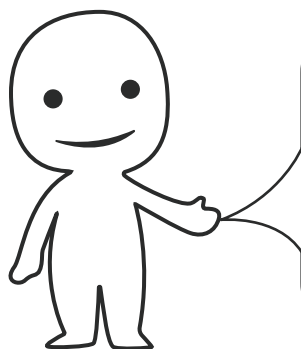

Please prepare the following tools

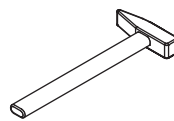   


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 95




Ø 12 x 10 mm

 B x 95



Ø 7 x 40 mm

 C x 56



M5 x 40 mm

D x 16

 


18 x 13 x 15 mm

E x 11



F x 11



M4 x 16 mm

G x 88



 
M3 x 12 mm

H x 32




M3.5 x 12 mm

L-CL x 11

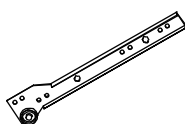


12"

 L-CR x 11

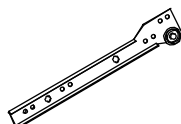


12"

 L-DL x 11

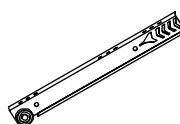


12"

 L-DR x 11

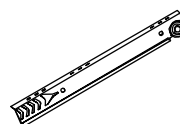

12"

 M x 4



55 x 27 mm

N x 6

 


 
Ø 10 x 2 mm

 
 
 
 
 
 
P x 12



Q x 2

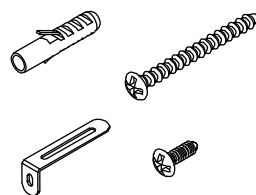

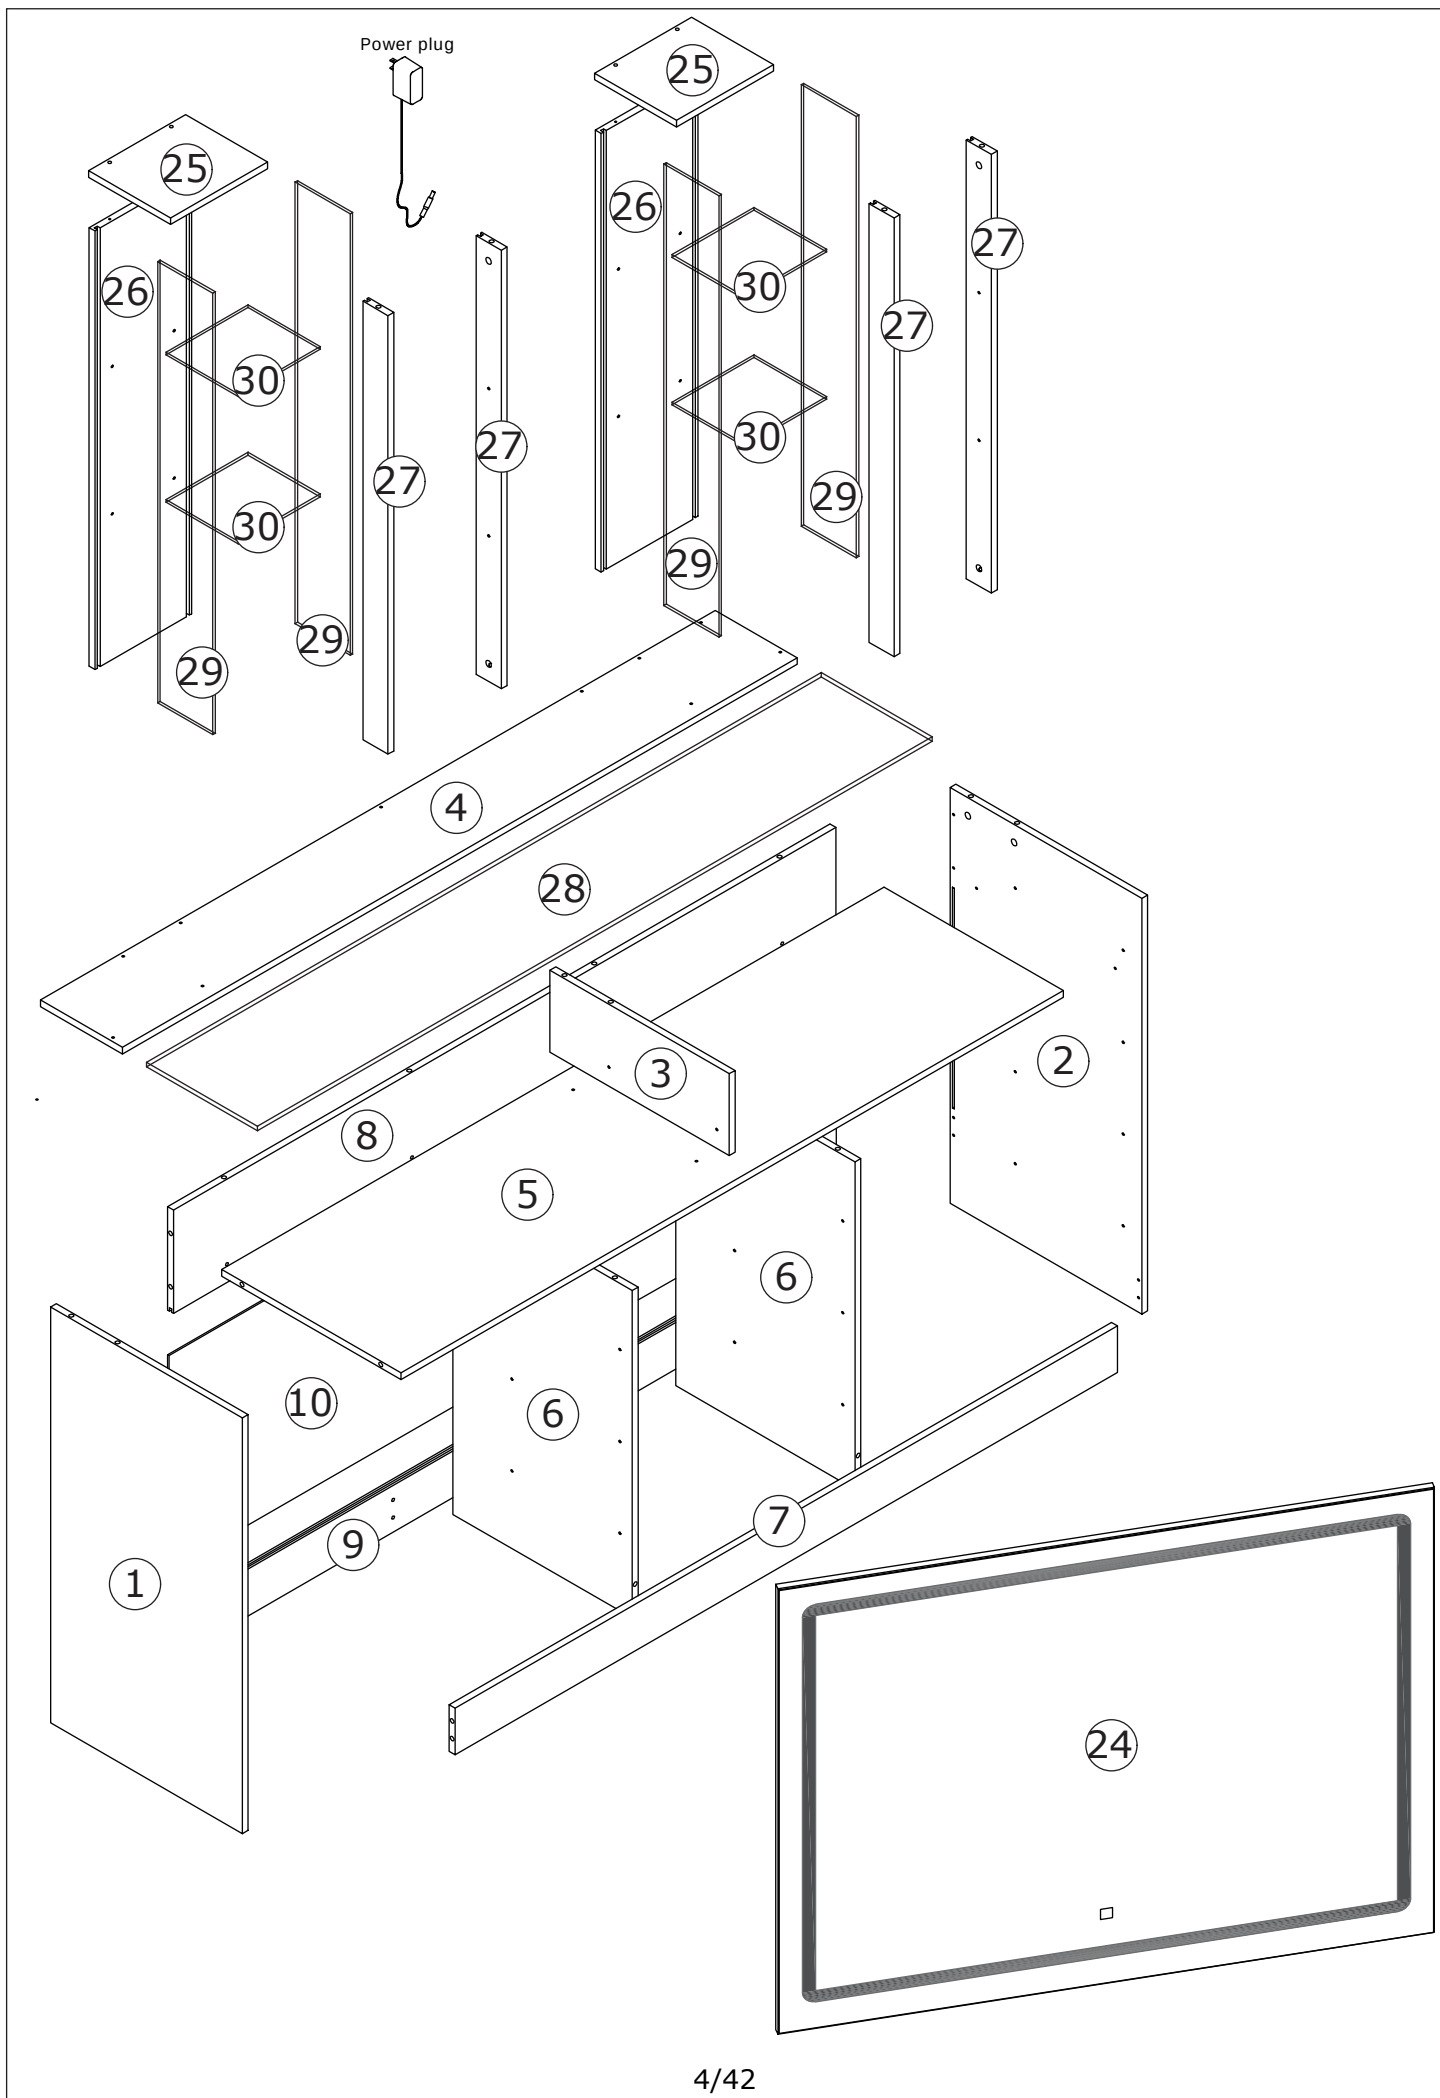

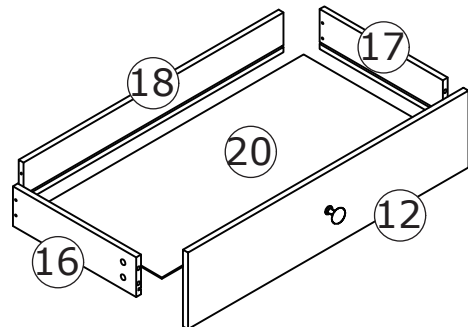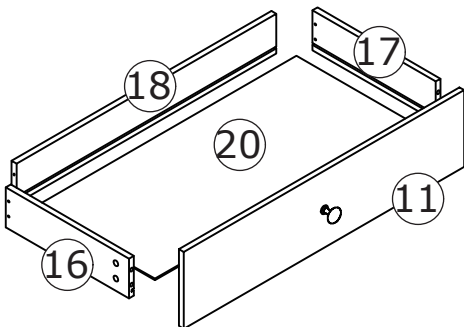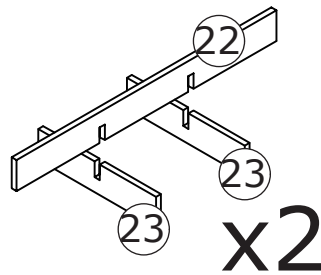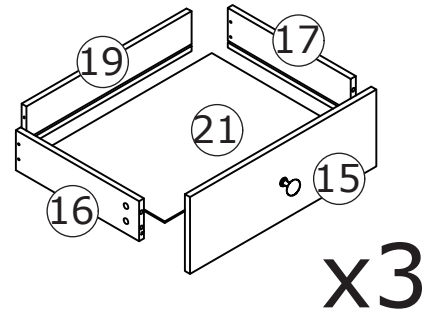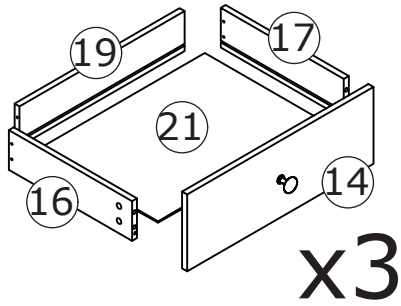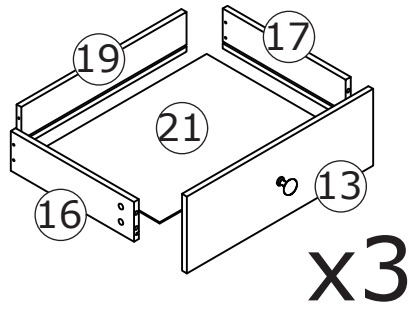


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

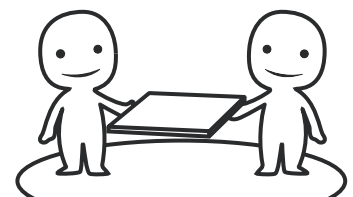


ASSEMBLED BY 2 ADULTS

 
① x1

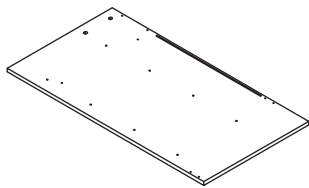


② x1

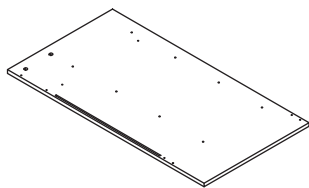 


③ x1

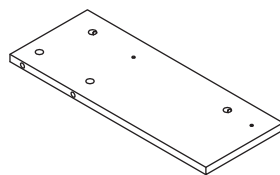 


④ x1

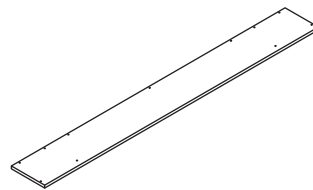 


⑤ x1

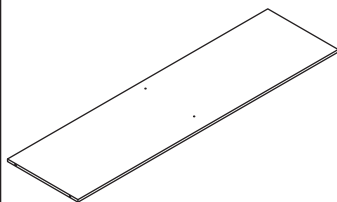 


⑥ x2

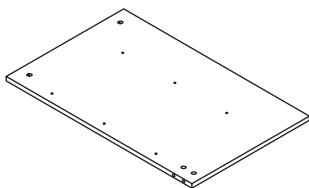 


⑦ x1

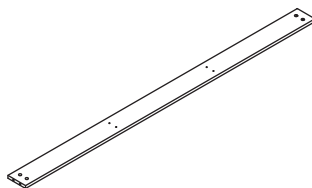 


⑧ x1

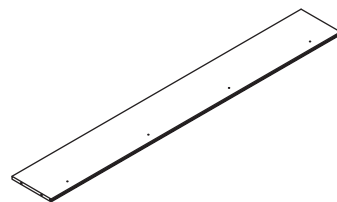 


⑨ x1

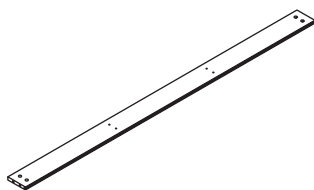 


⑩ x1

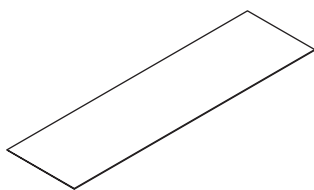 


⑪ x1

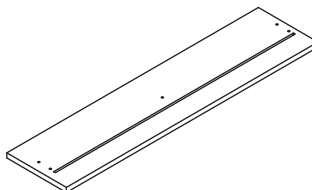 


⑫ x1

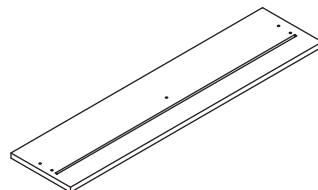 


⑬ x3

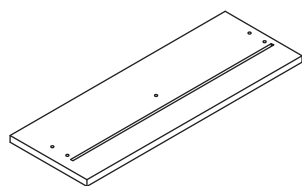 


⑭ x3

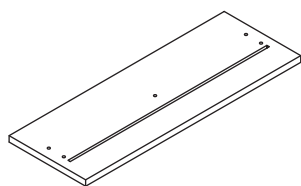 


⑮ x3

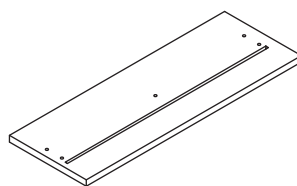 


⑯ x11

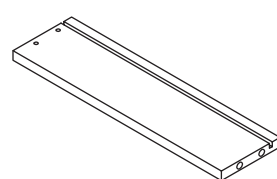 


⑰ x11

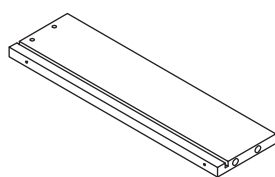 


⑱ x2











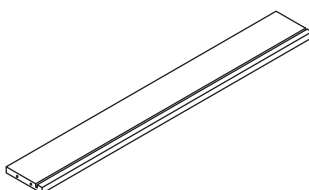 


⑲ x9



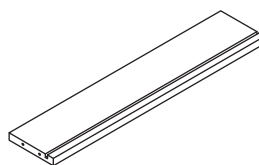 



⑳ x2

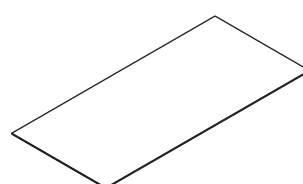 

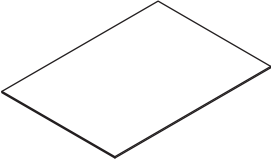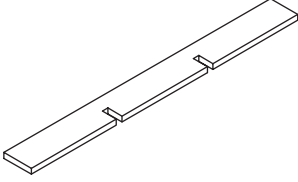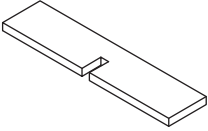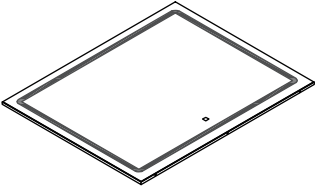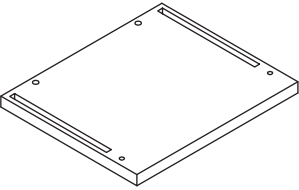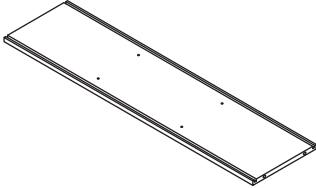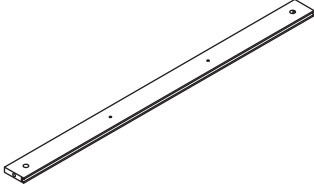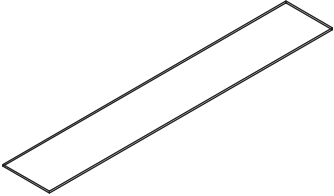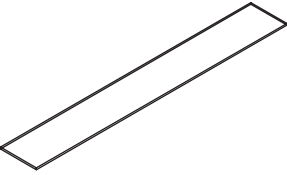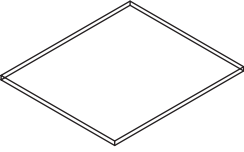           
②1 x9 	②2 x2 	②3 x4 	②4 x1 
②5 x2 	②6 x2 	②7 x4 	②8 x1 
②9 x4 	③0 x4 	Power plug x1 	

   1





C x 4  M5 x 40 mm	G x 24  M3 x 12 mm	L-CL x 6  12"	L-CR x 6  12"	
--	---	--	---	---

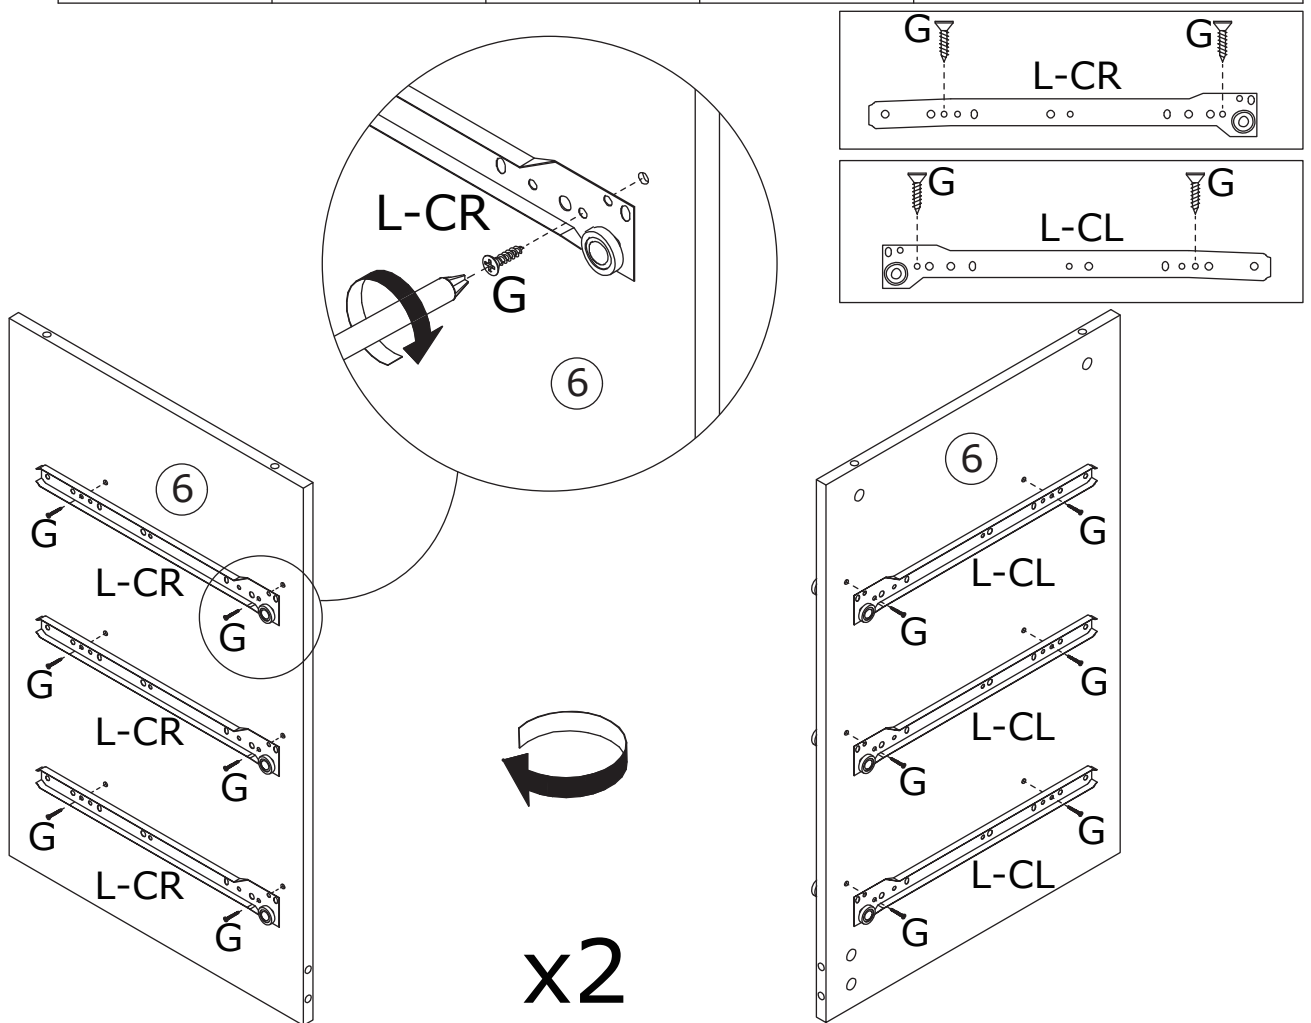 

 
Secure slide rail (L-CR) and (L-CL) to **both sides of** Panel 6 using screw (G).
Secure Panel 9 to Panel 6 using screw (C).

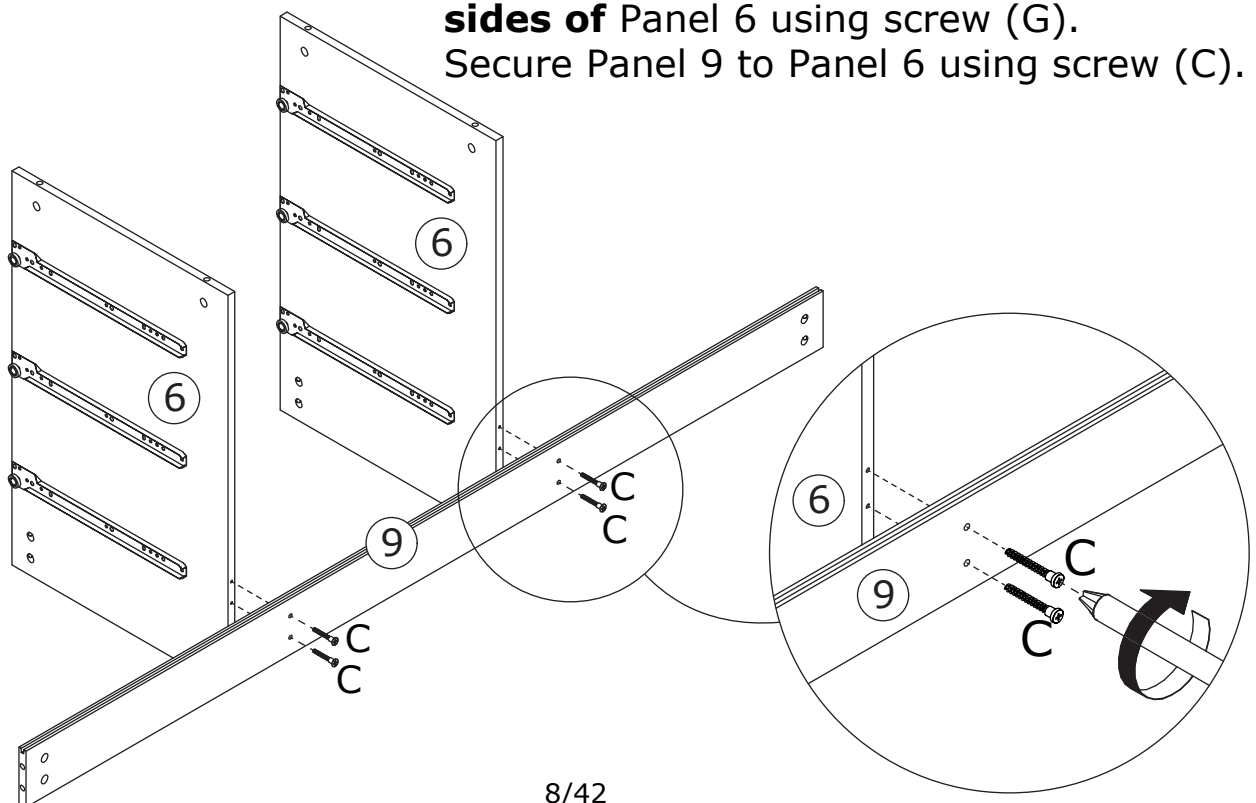





2

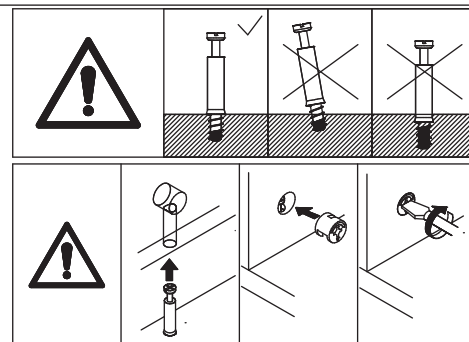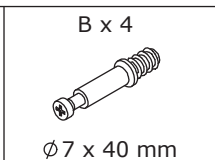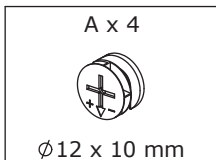    

 Screw eccentric bolt (B) onto Panel 7.
 Connect Panel 7 to Panel 6, then tighten by
 turning cam lock (A) clockwise.

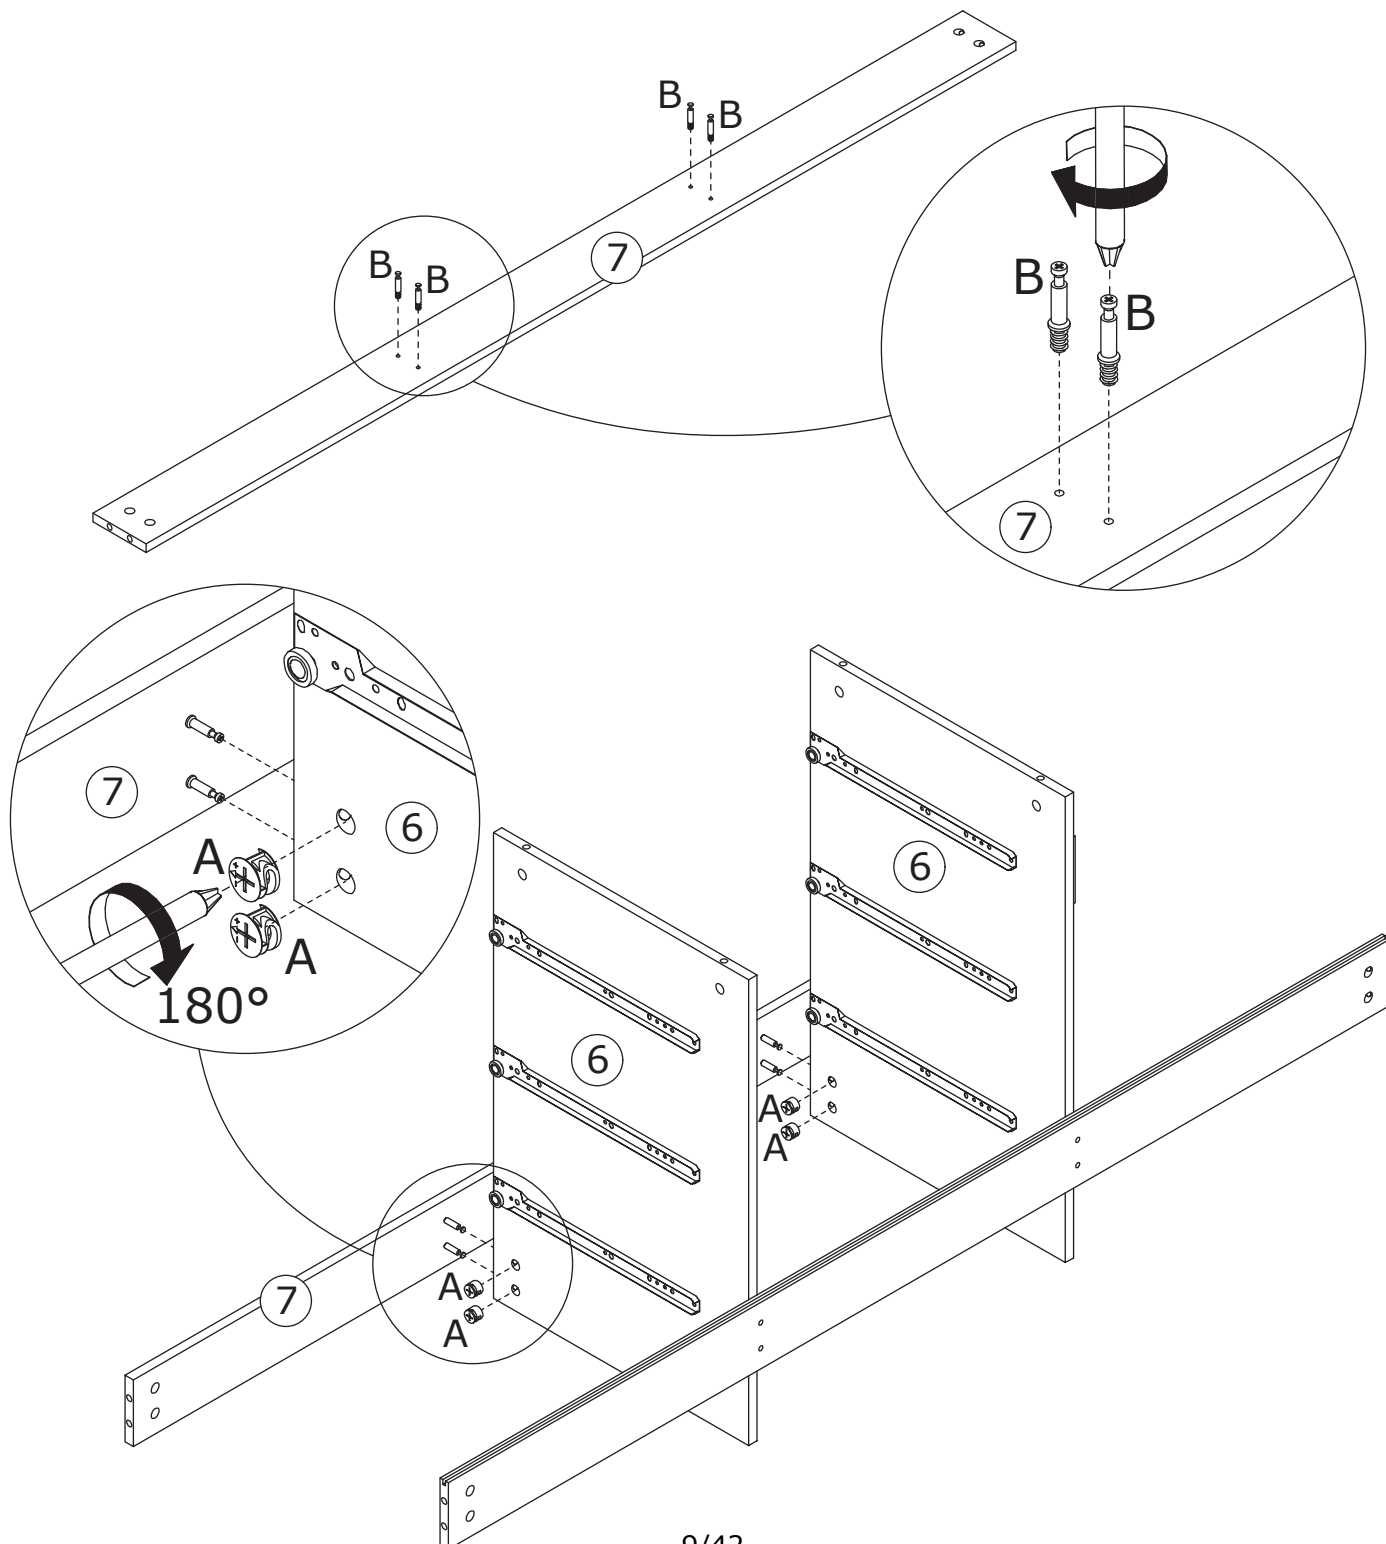

3

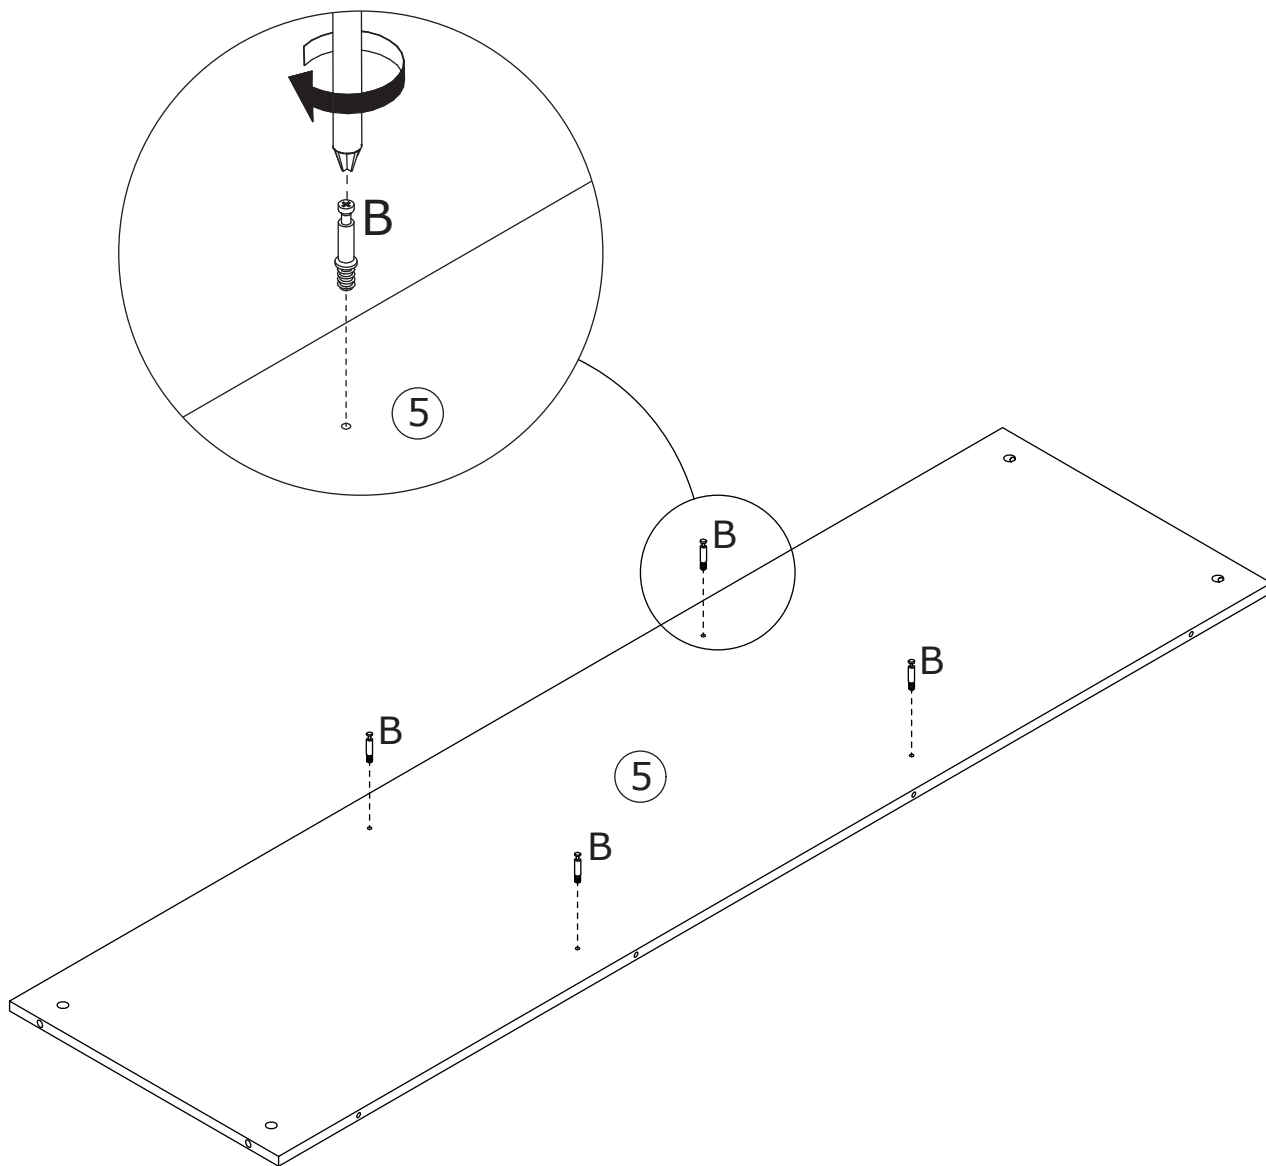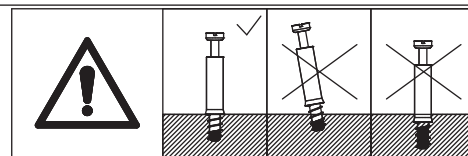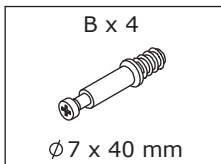    



Screw eccentric bolt (B) onto Panel 5.

4


A x 4



  Ø12 x 10 mm

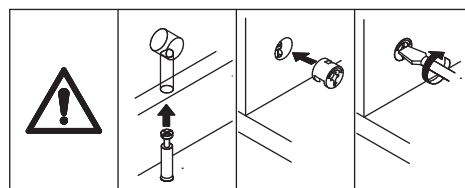



 Connect Panel 5 to Panel 6, then tighten by turning cam lock (A) clockwise.

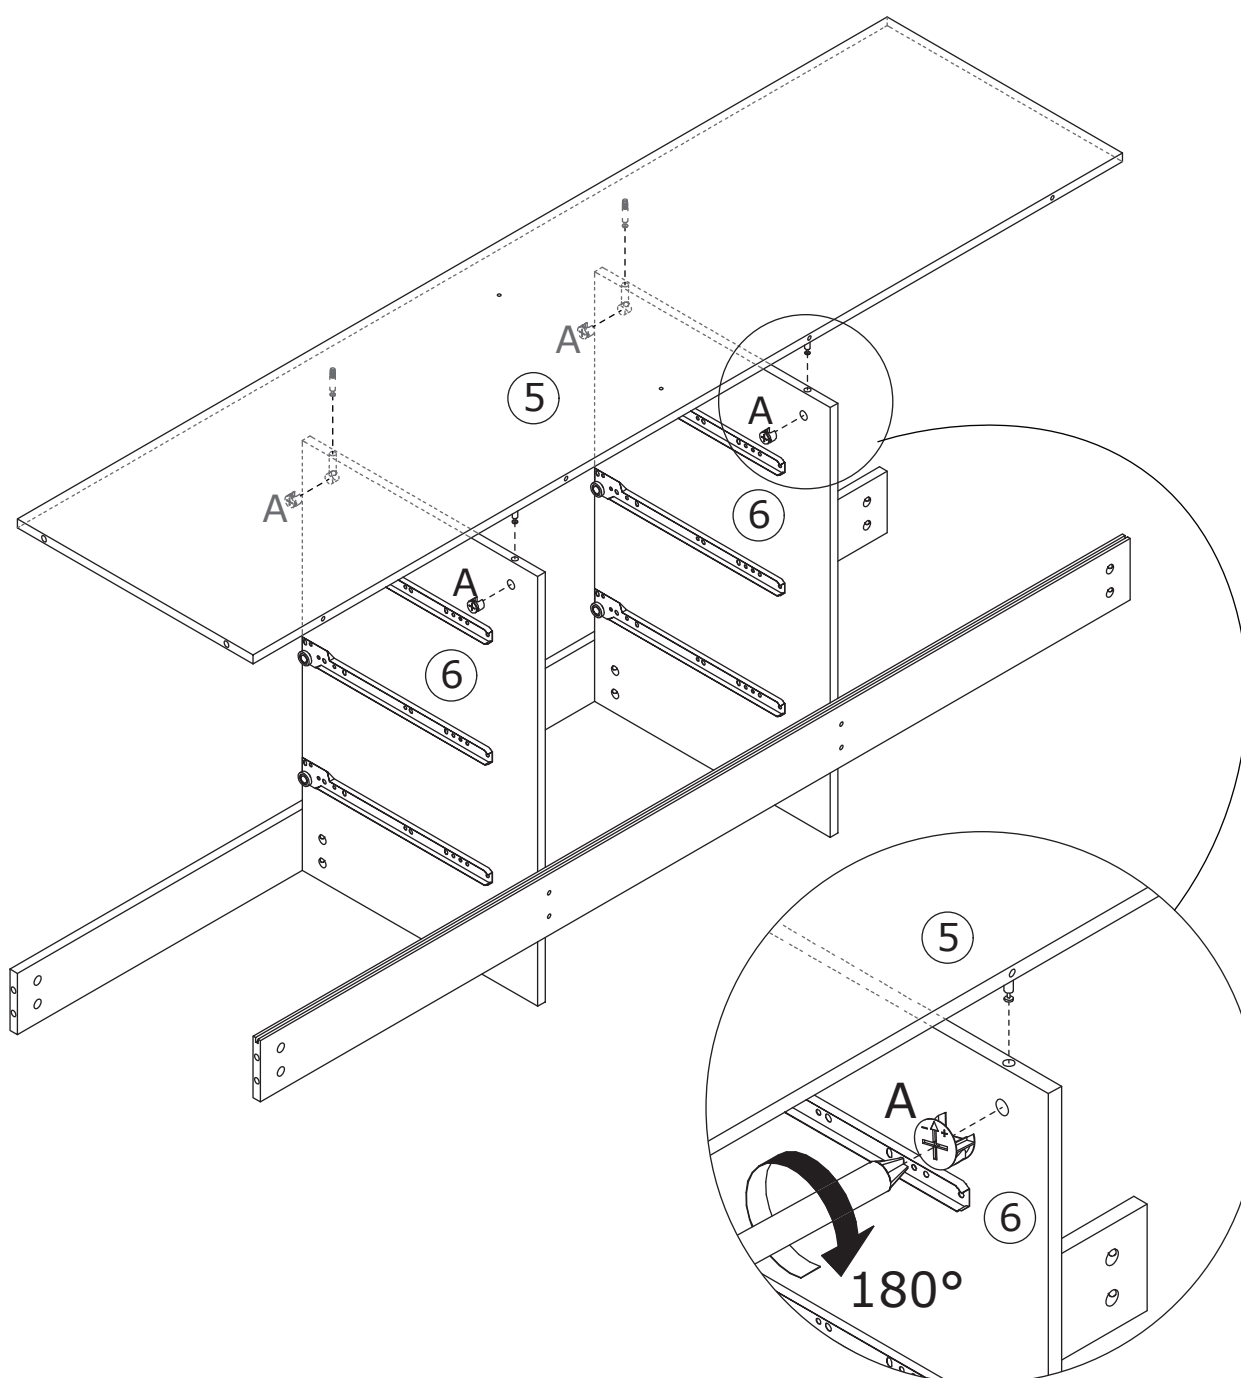

5

  C x 4
M5 x 40 mm

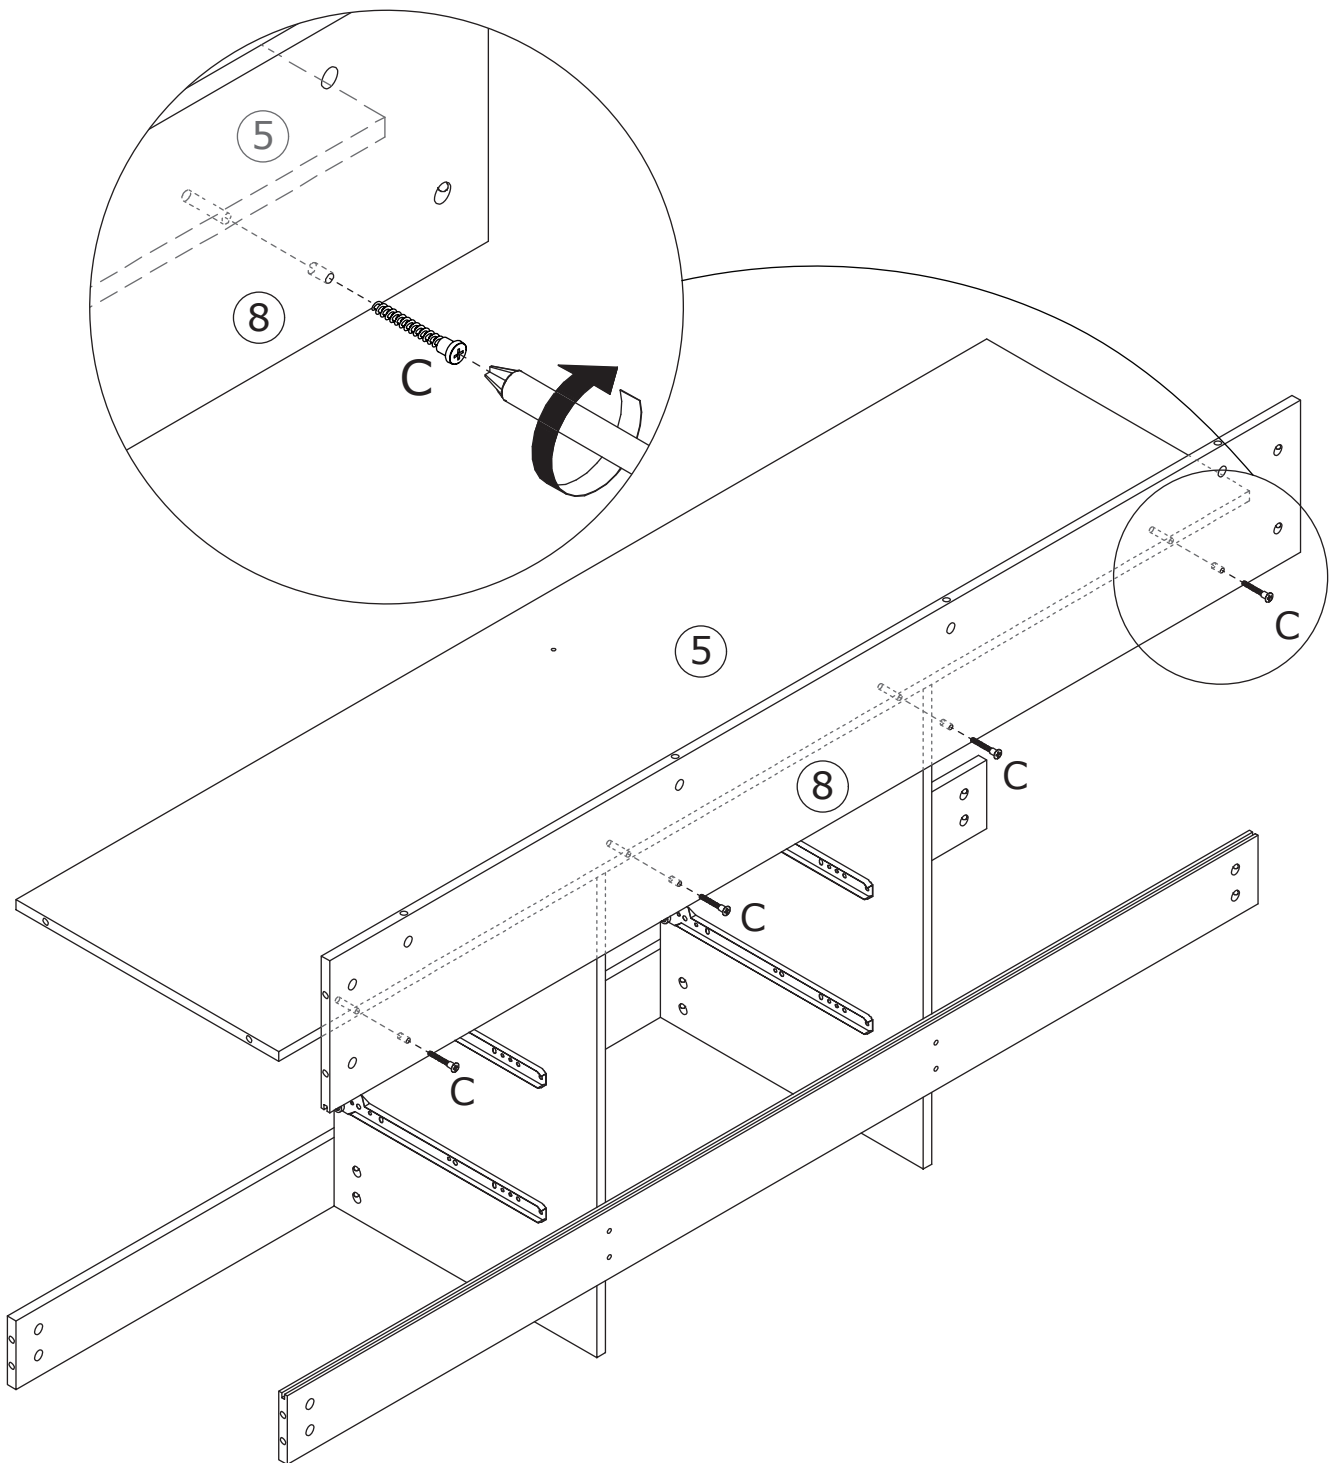






Secure Panel 8 to Panel 5 using screw (C).

6

B x 8
Ø 7 x 40 mm

G x 8
M3 x 12 mm

     L-CL x 4
12"

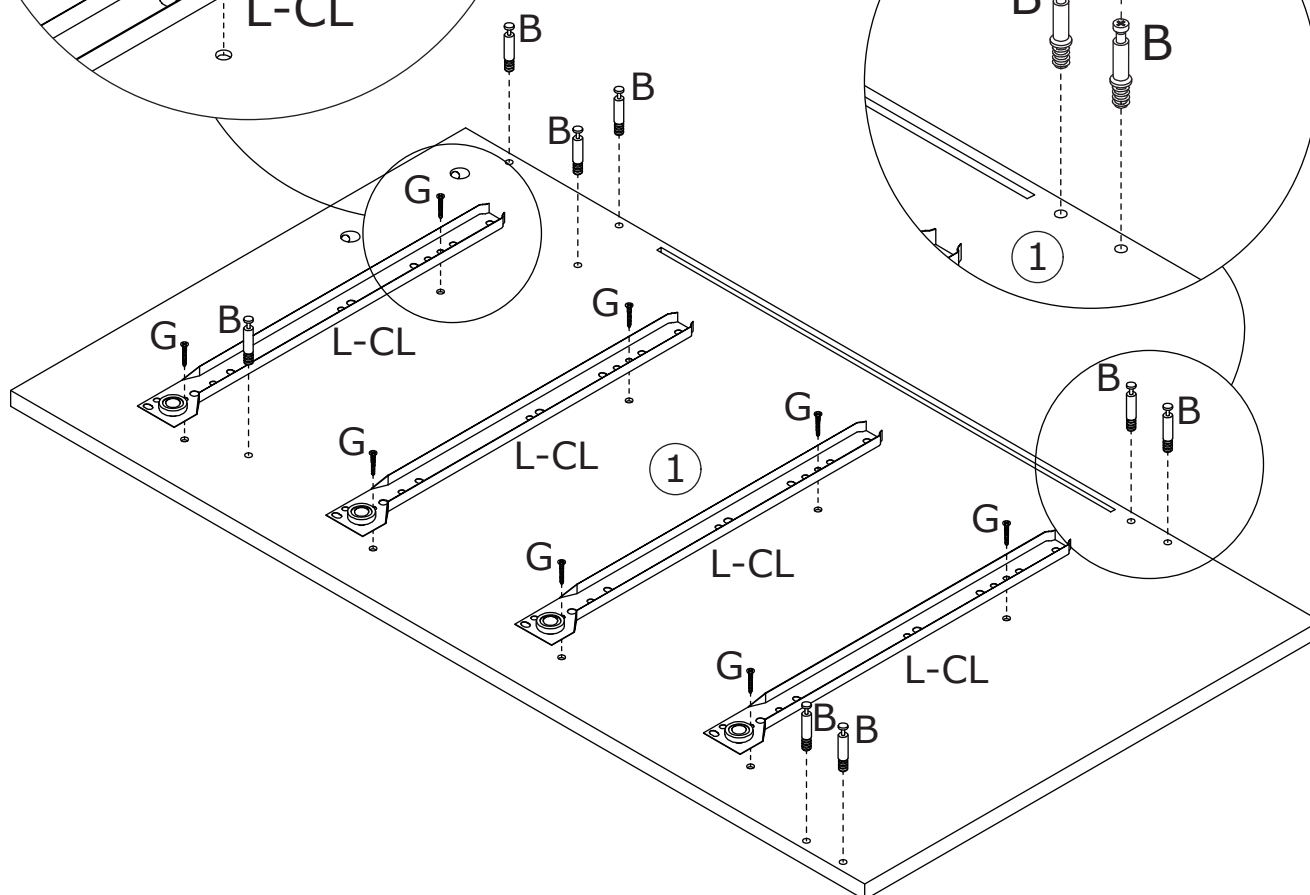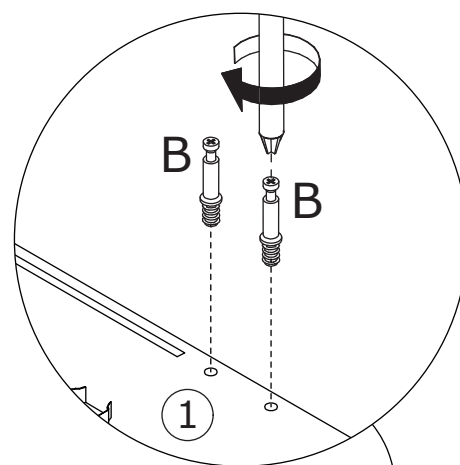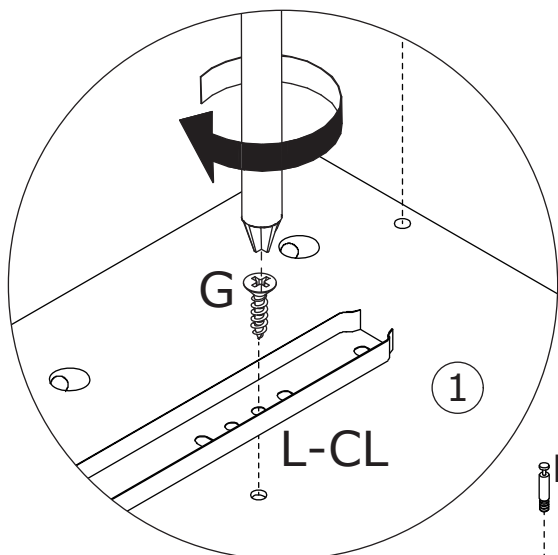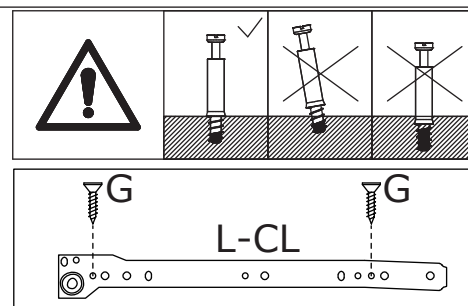


Secure the drawer slide (L-CL) to Panel 1 using screws (G).
Screw eccentric bolt (B) onto Panel 1.

7


A x 8



 Ø12 x 10 mm

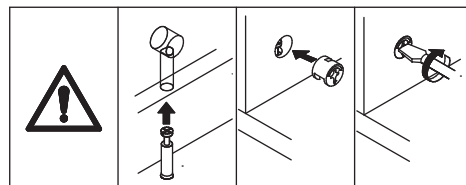


 Connect Panel 1 to Panels 5, 7, 8 and 9, then tighten by turning cam lock (A) clockwise.

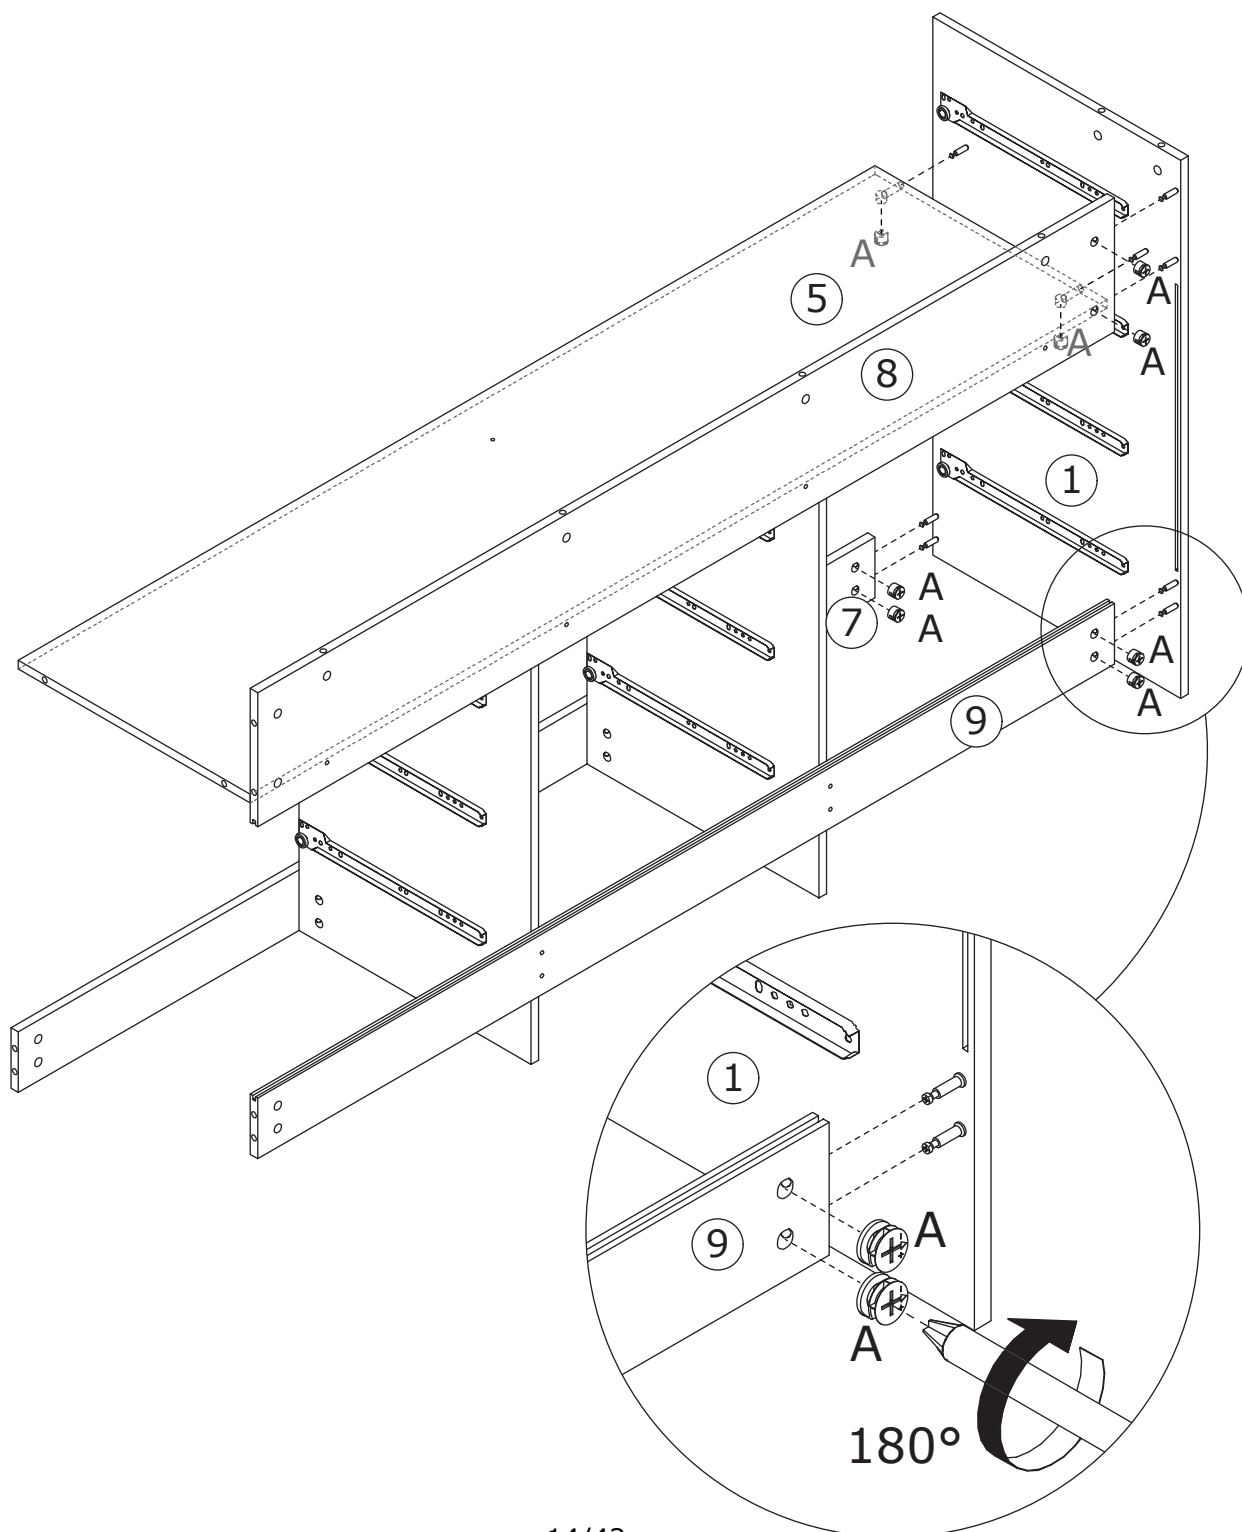

8

 Insert Panel 10 along the available slots.

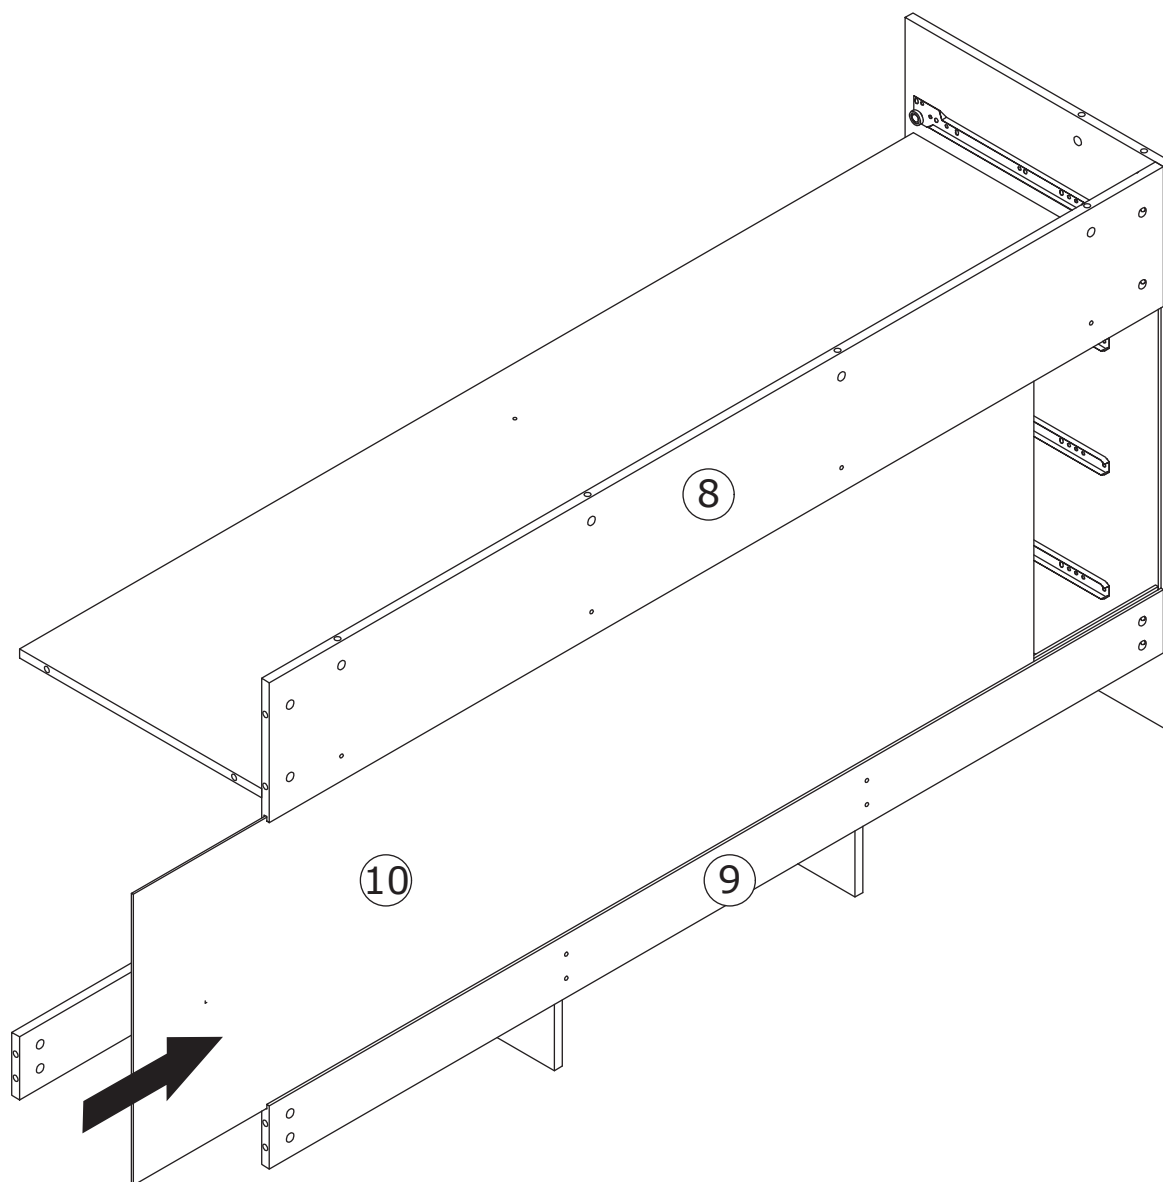

9

 
 
 
 
B x 8



G x 8






L-CR x 4

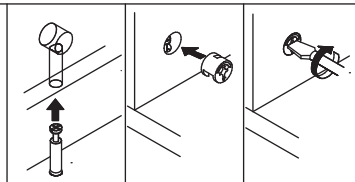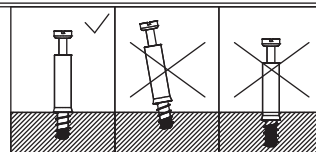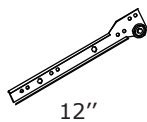

G

L-CR

   G

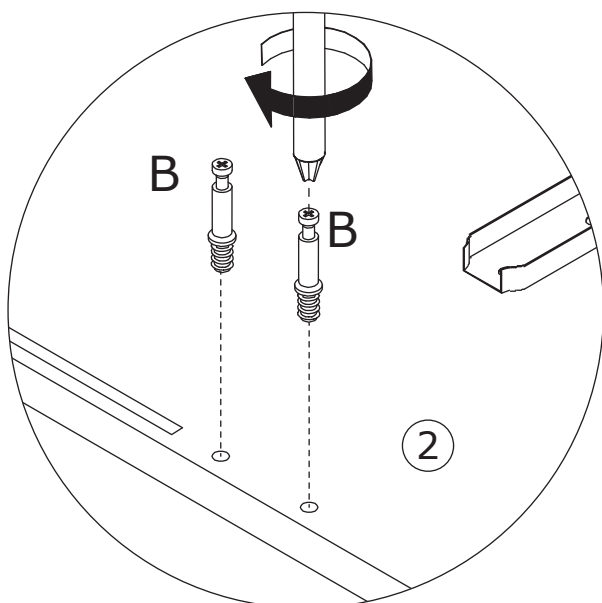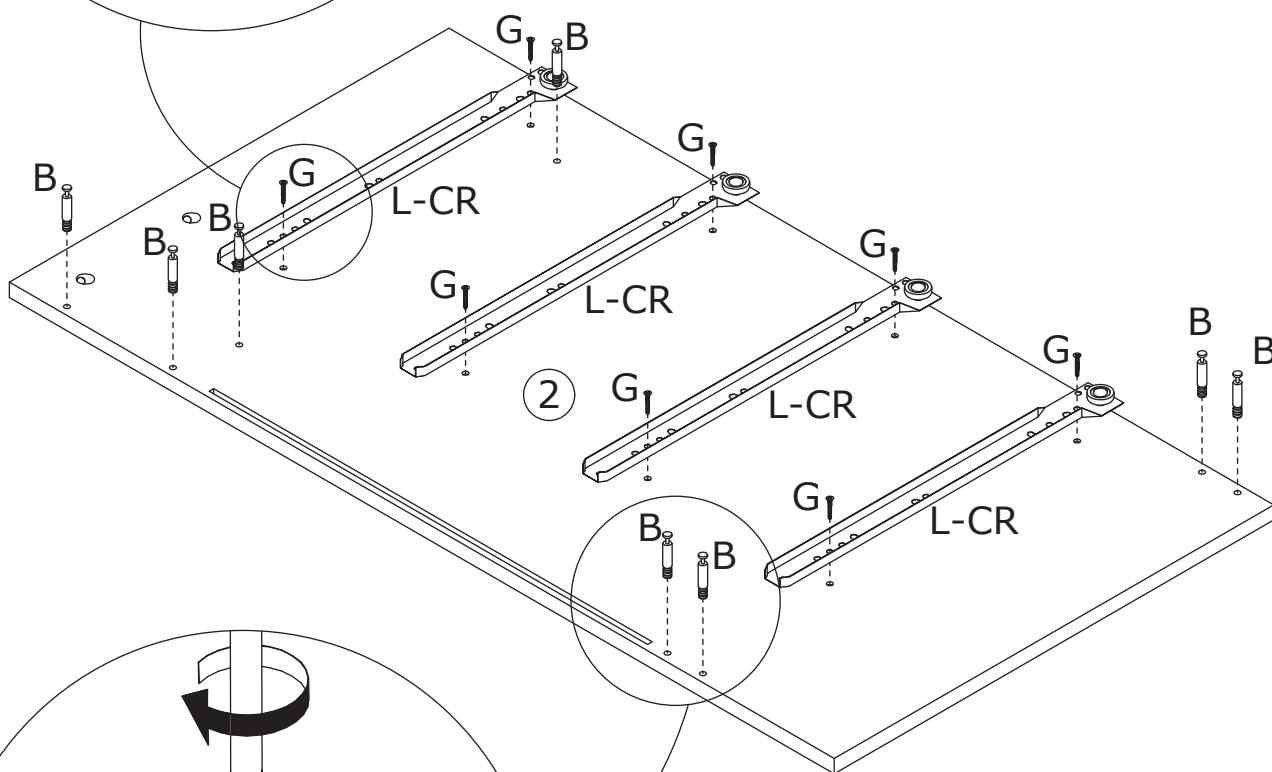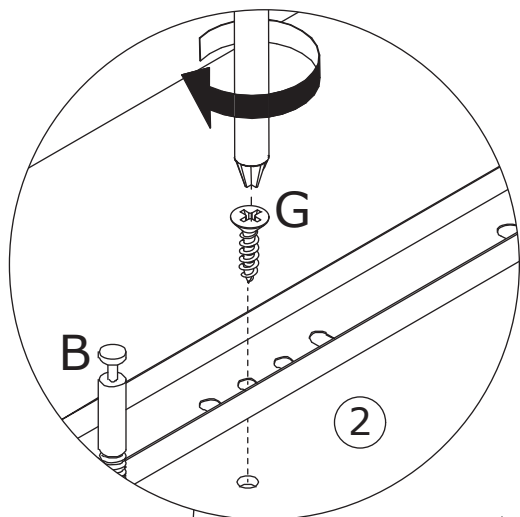



Secure slide rail (L-CR) to Panel 2 using screw (G).
Screw eccentric bolt (B) onto Panel 2.

10


A x 8



  Ø12 x 10 mm

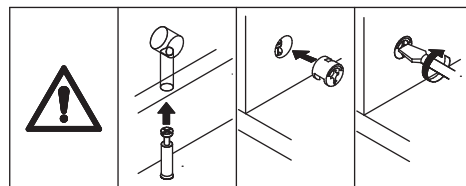


 Connect Panel 2 to Panels 5, 7, 8 and 9, then tighten by turning cam lock (A) clockwise.




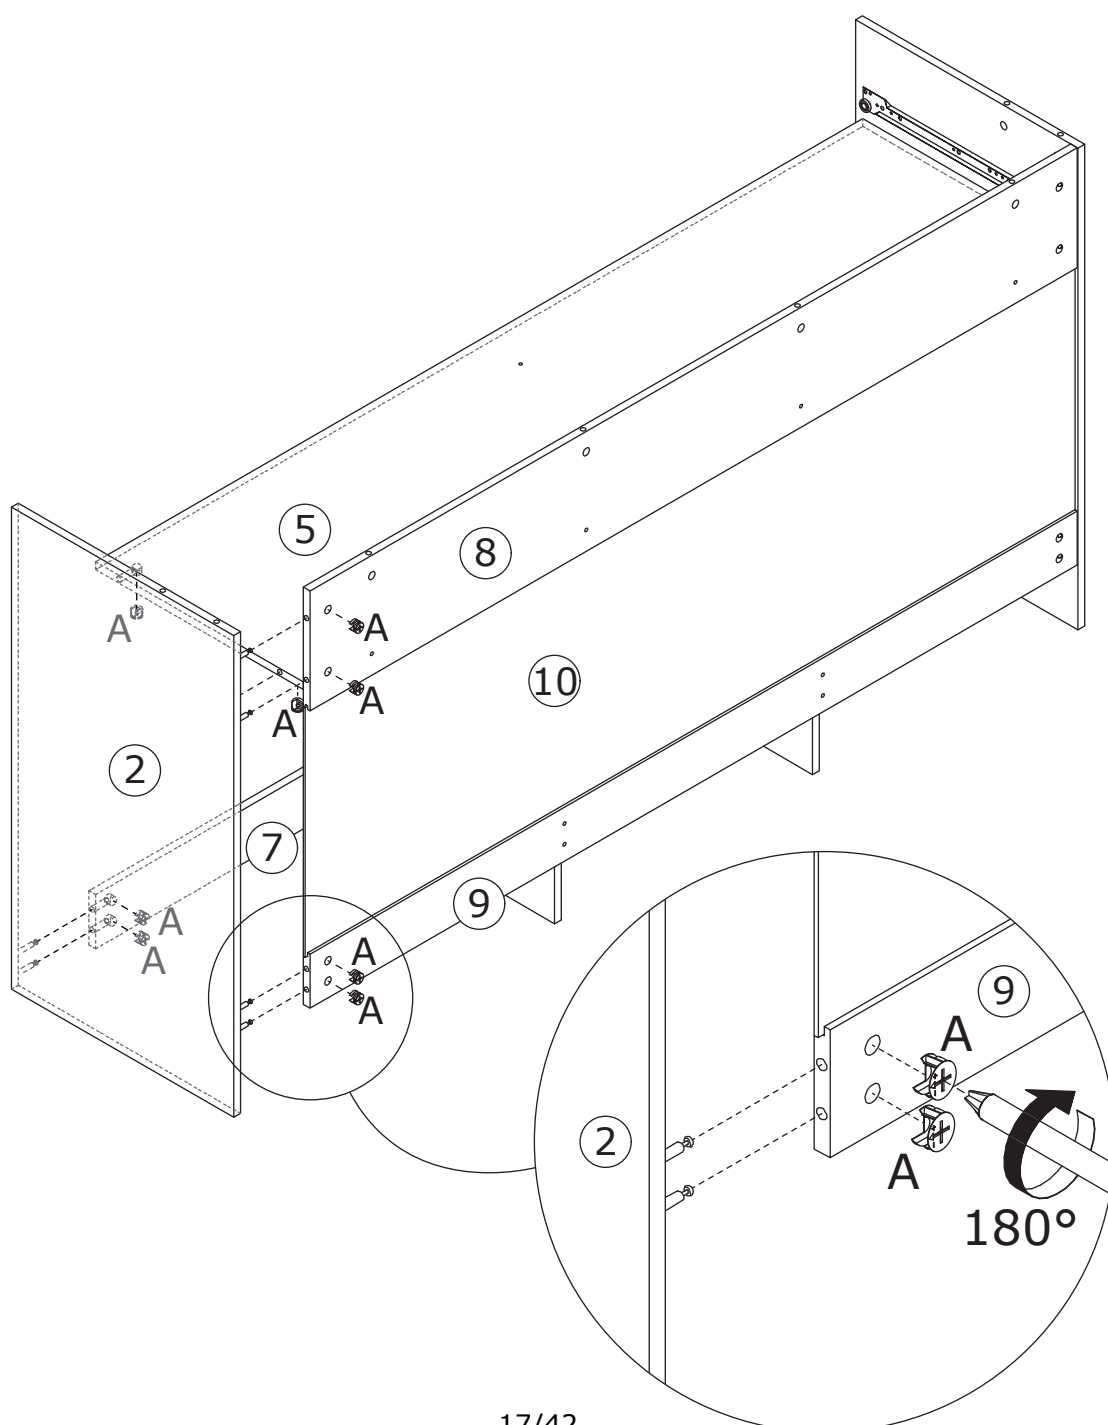


11

 B x 2



Ø 7 x 40 mm

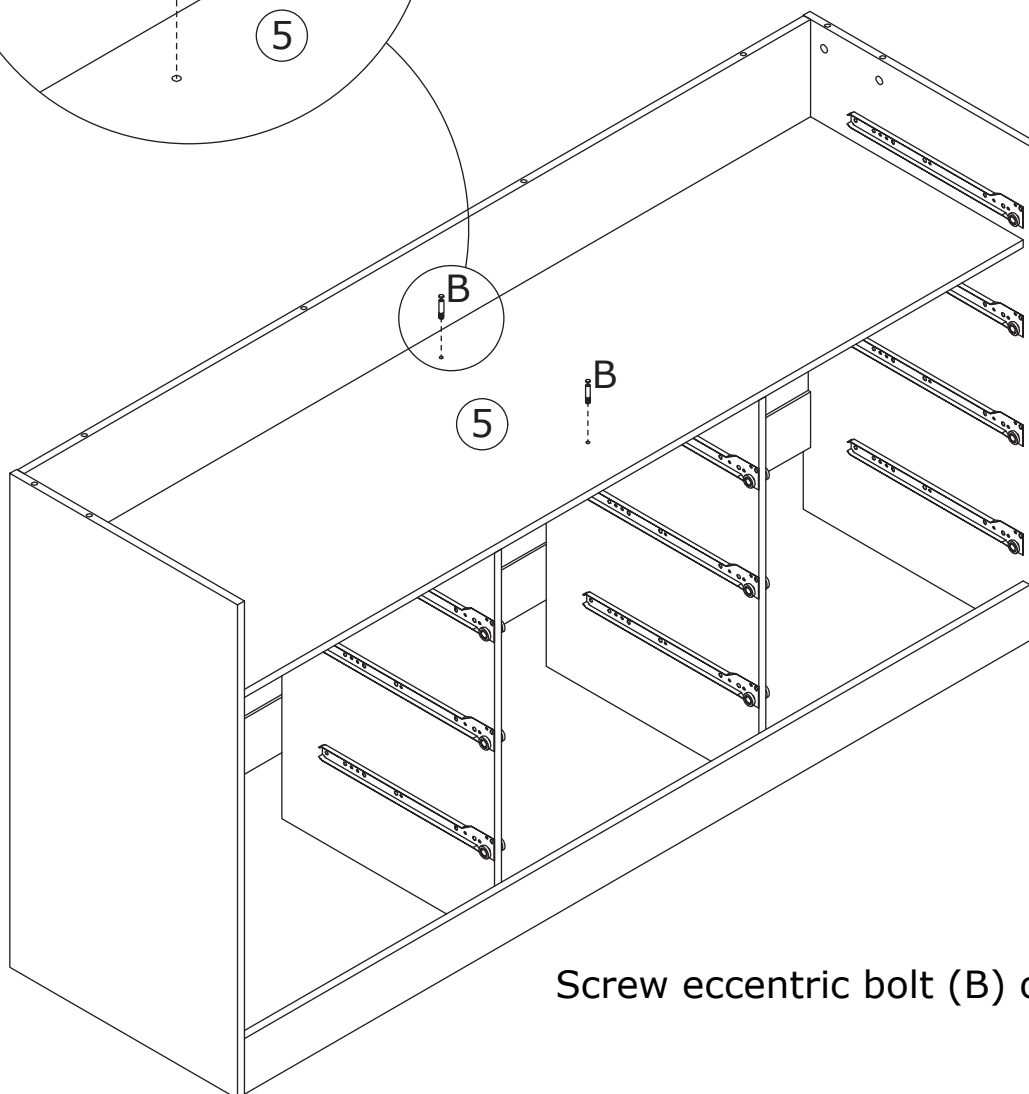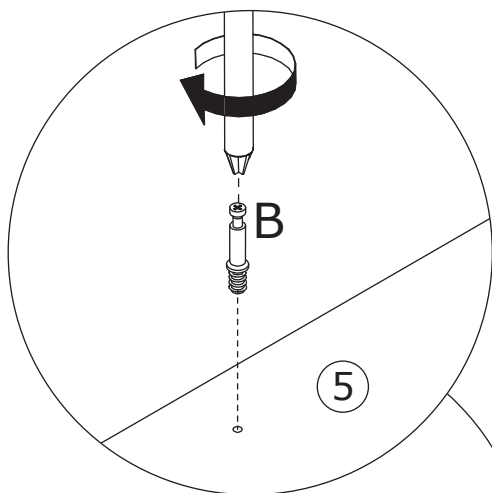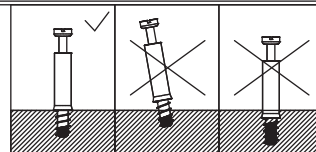    




Screw eccentric bolt (B) onto Panel 5.

12

A x 2



   Ø12 x 10 mm

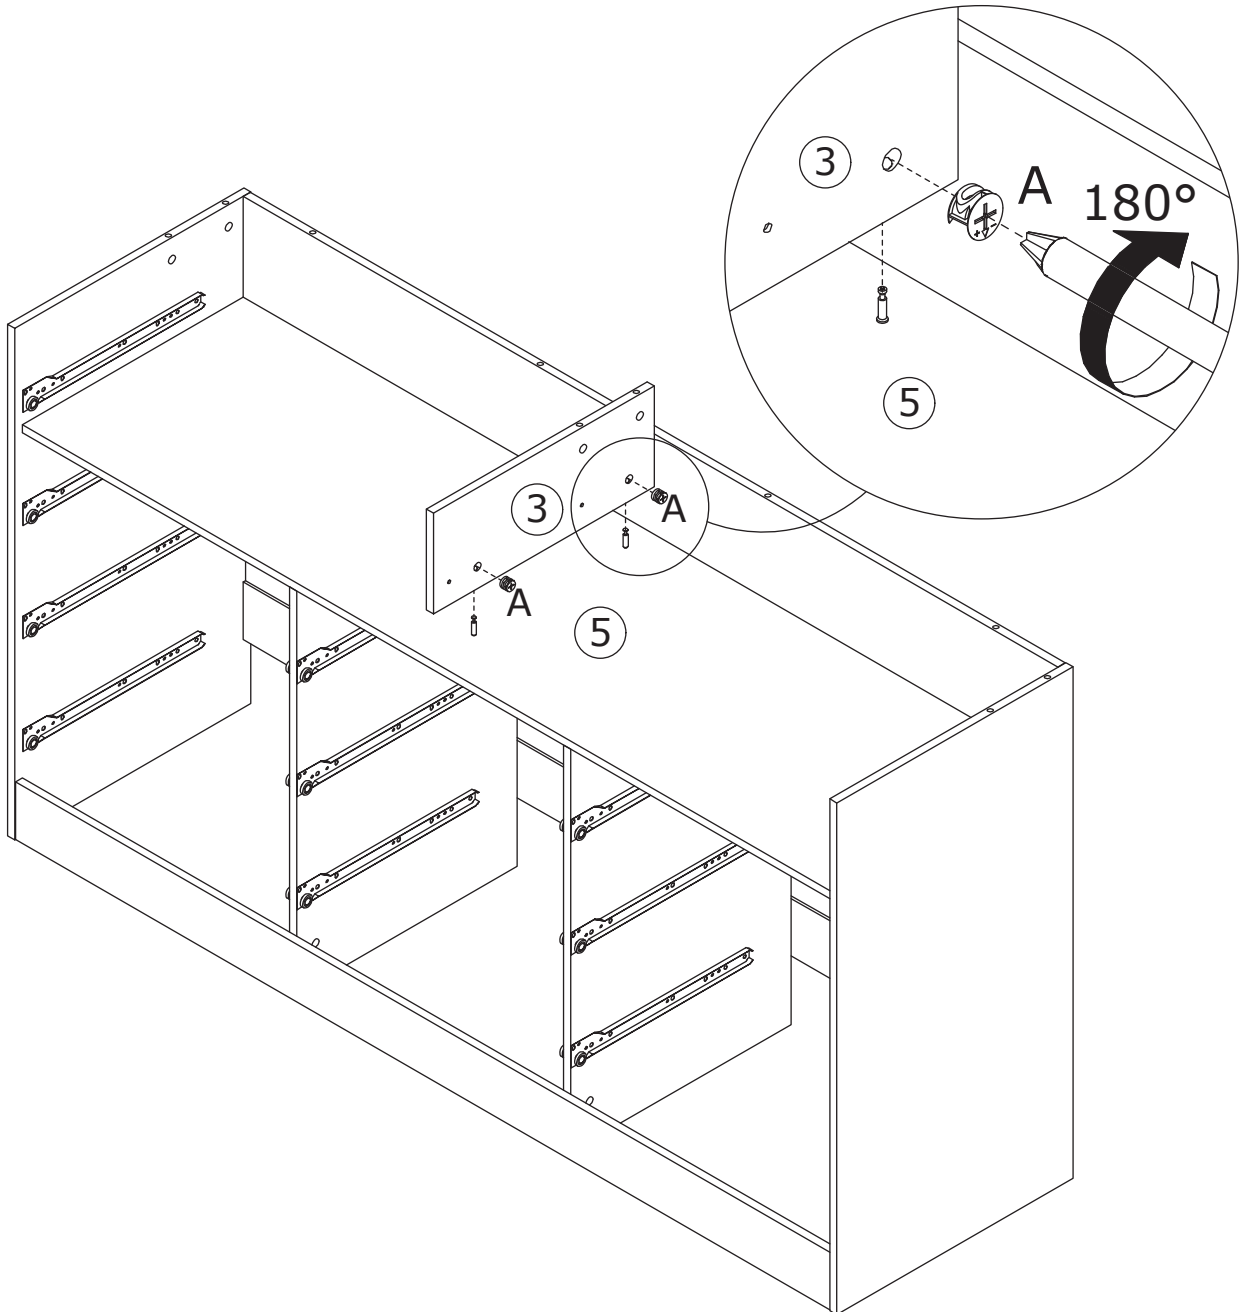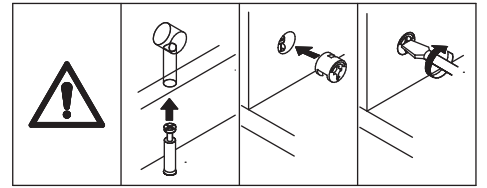

Connect Panel 3 to Panel 5, then tighten by turning cam lock (A) clockwise.

 
13

G x 4




M3 x 12 mm

L-CL x 1






12"

 
L-CR x 1



12"

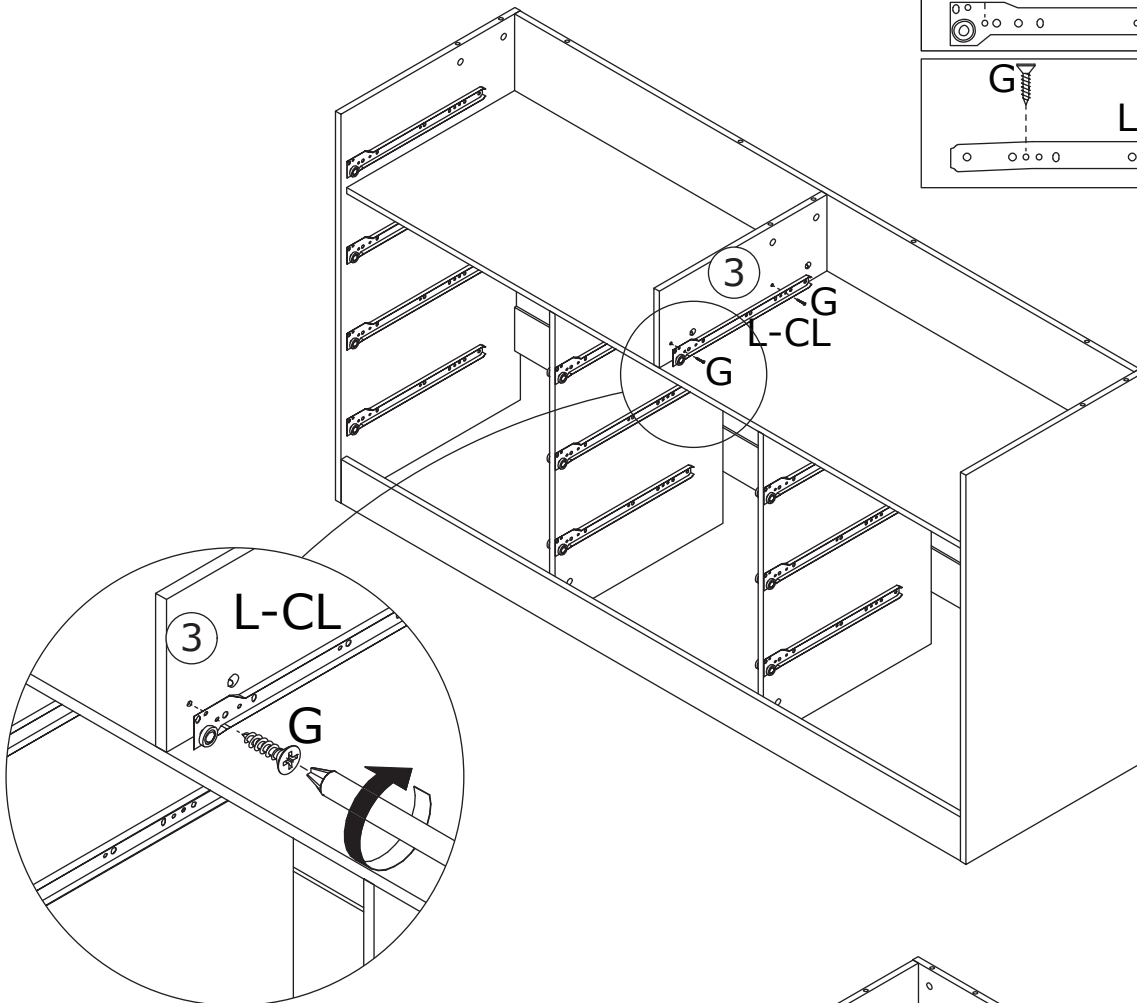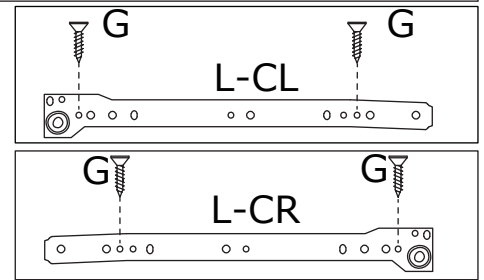   

 Secure slide rail (L-CR) and (L-CL) to **both sides** of Panel 3 using screw (G).

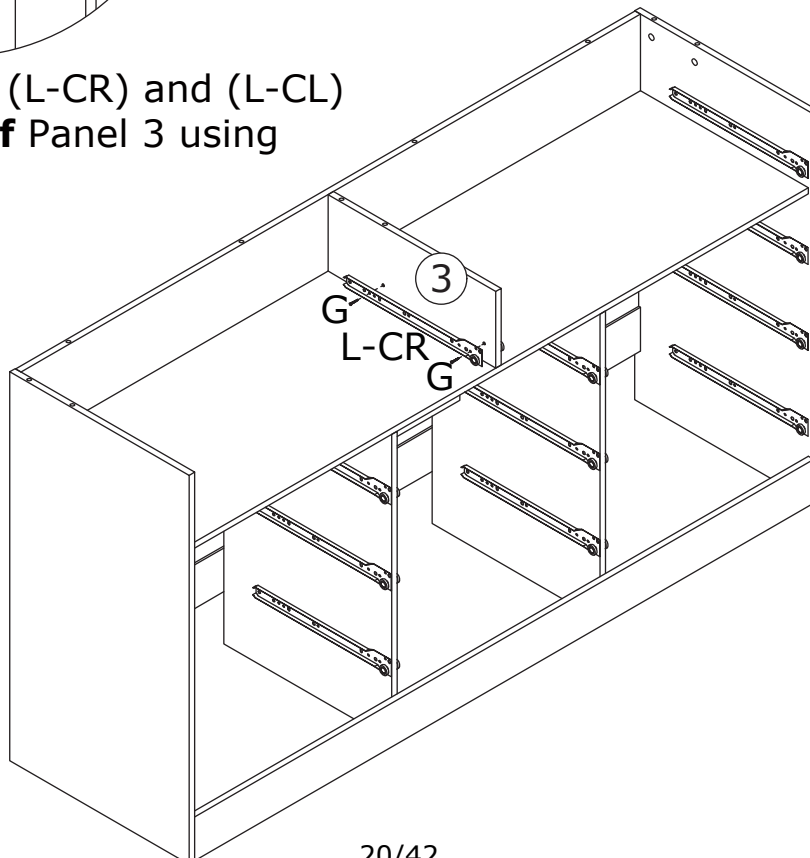


14

A x 10








Ø12 x 10 mm

 
B x 10



Ø7 x 40 mm

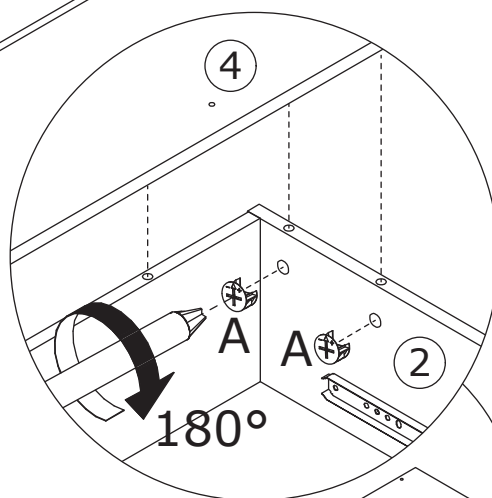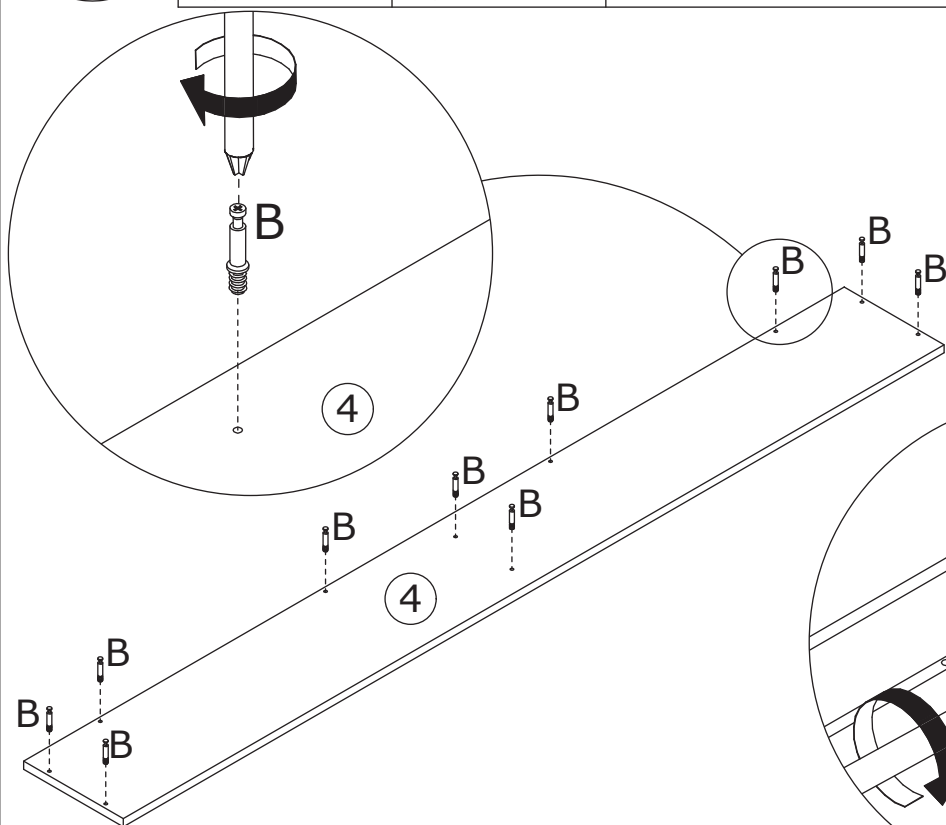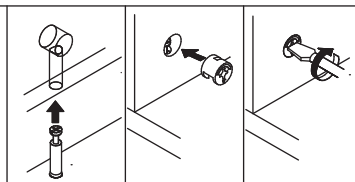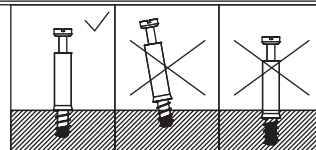     


 Screw eccentric bolt (B) onto Panel 4.
Connect Panel 4 to Panels 1, 2, 3 and 8,
then tighten by turning cam lock (A)
clockwise.

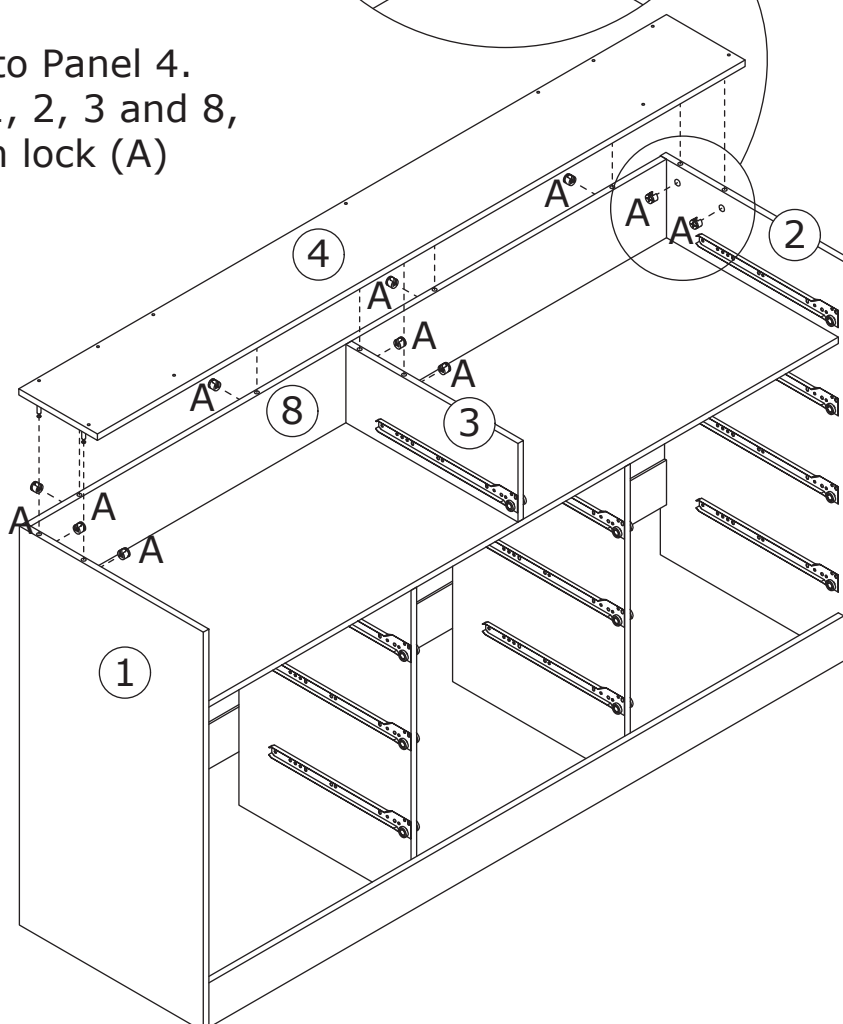


15

 
P x 12







 Secure foot pin (P) to Panels 1, 2, 6 and 7.

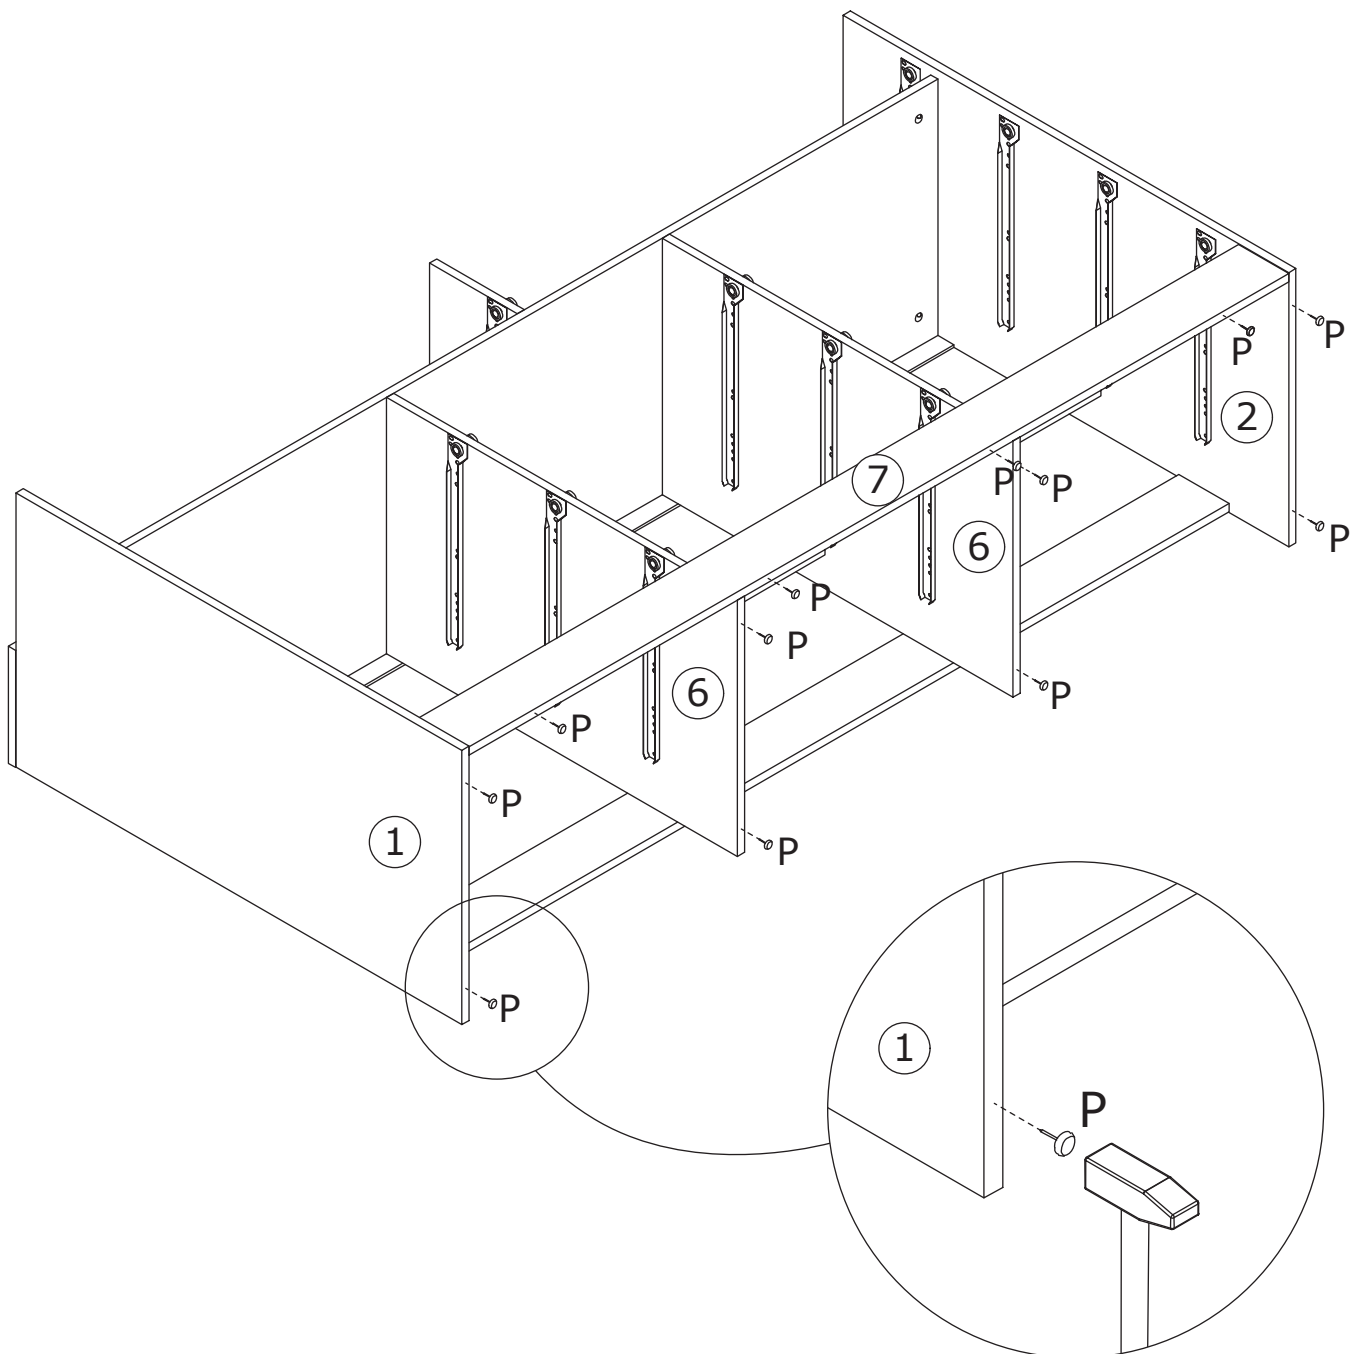

16

 B x 11

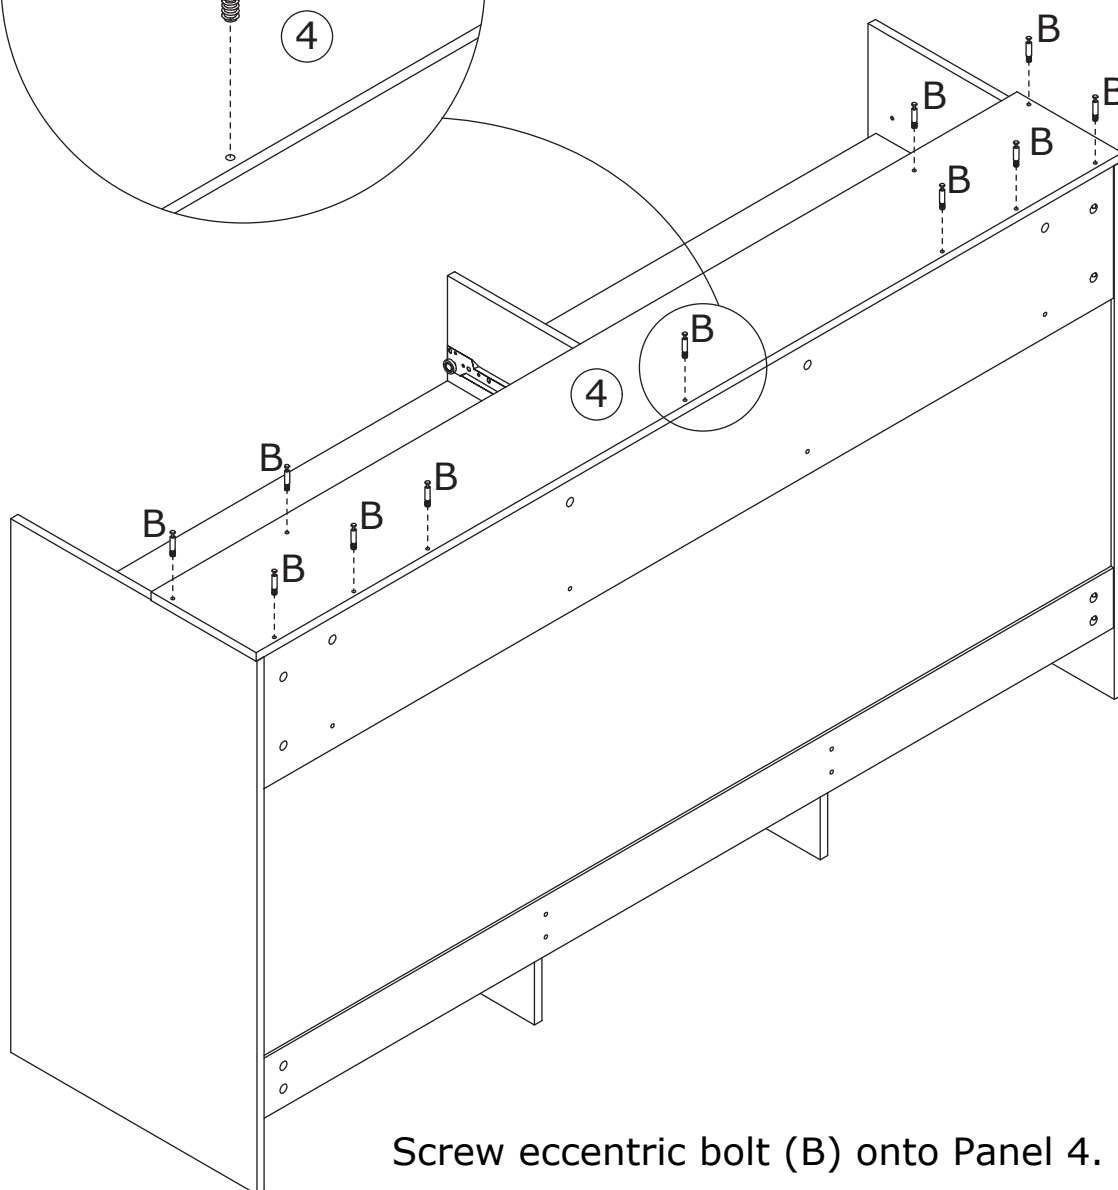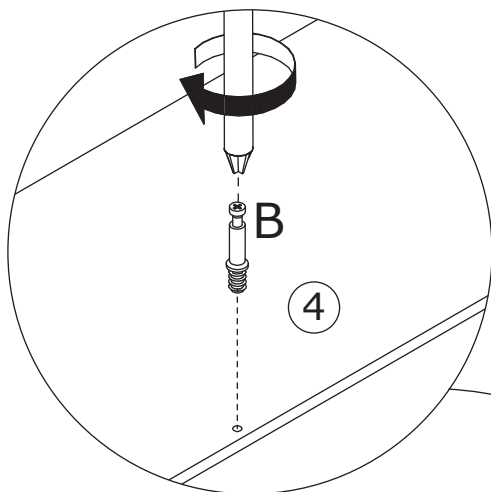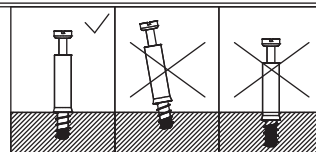     Ø 7 x 40 mm



Screw eccentric bolt (B) onto Panel 4.

17

A x 7



Ø12 x 10 mm

D x 8

 
 
 
 


18 x13 x15 mm

H x 8



M3.5 x 12 mm

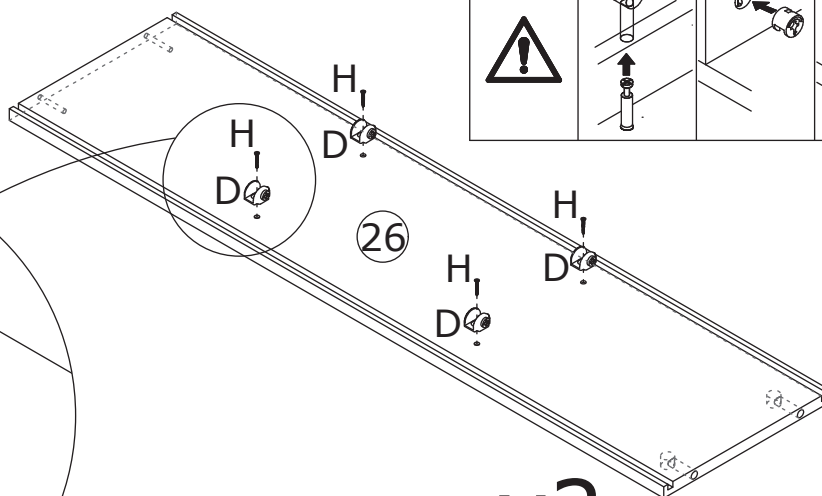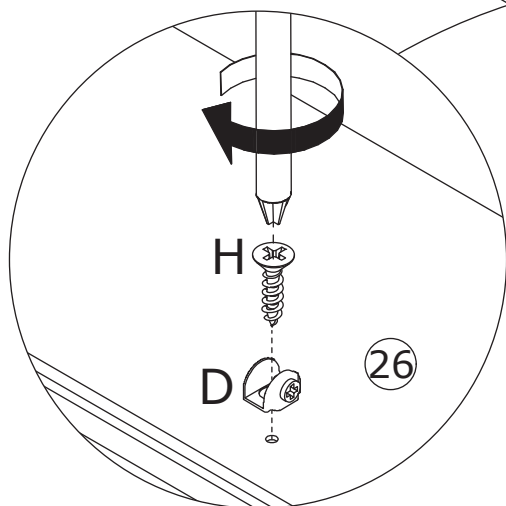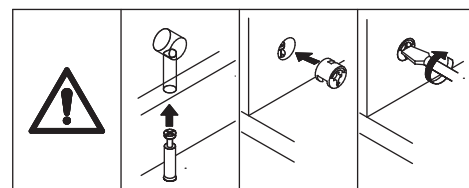



x2

Secure part (D) to Panel 26 using screw (H).

Note: Pay attention to the orientation of part (D).

Connect Panels 24 and 26 to Panel 4, then tighten by turning cam lock (A) clockwise.

  Note: The screw holes of part (D) must face downward.

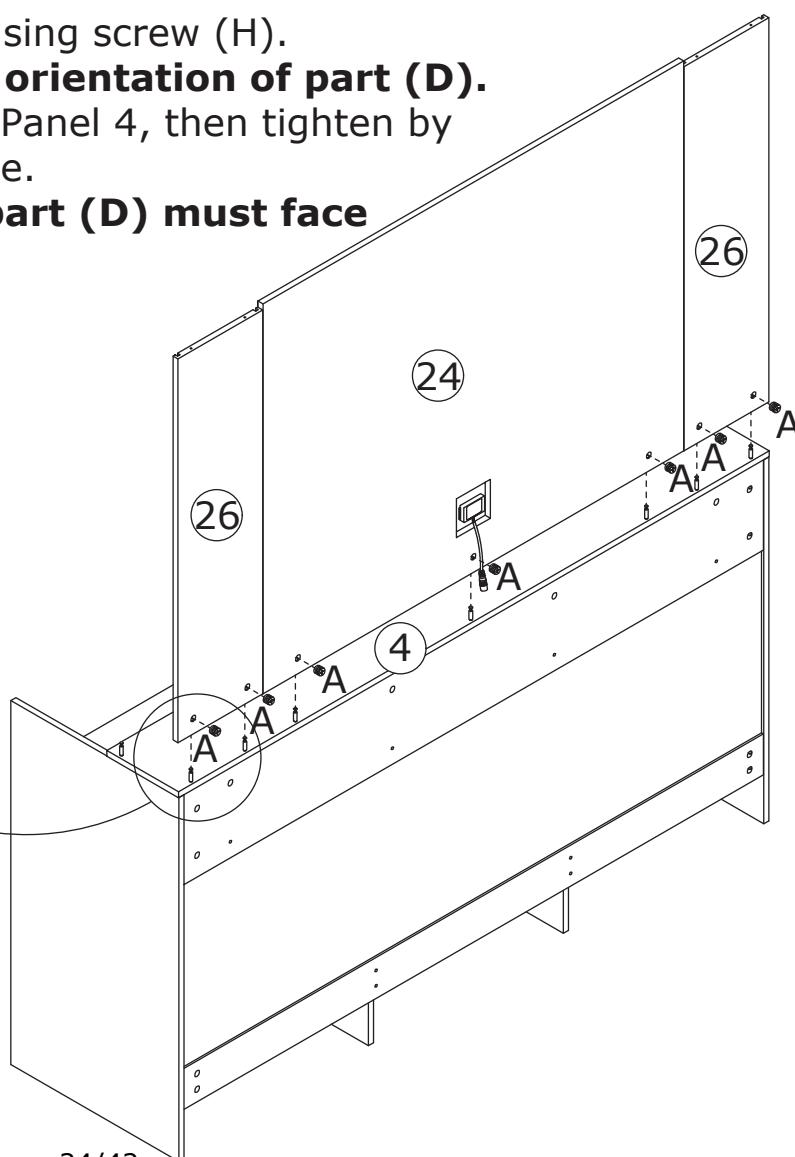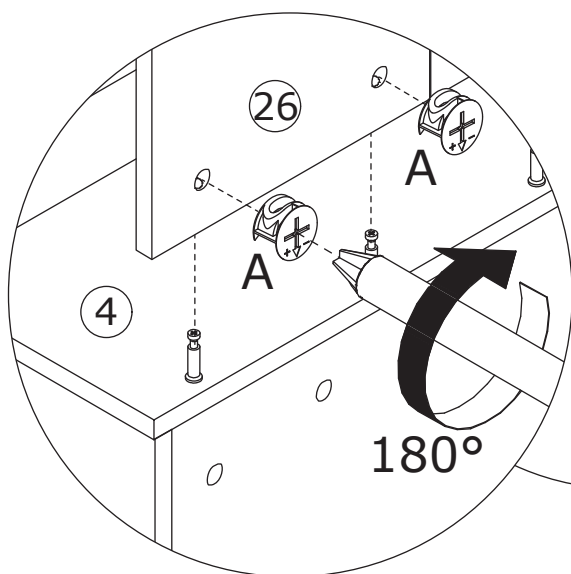


18

H x 16





M3.5 x 12 mm

 M x 4



55 x 27 mm

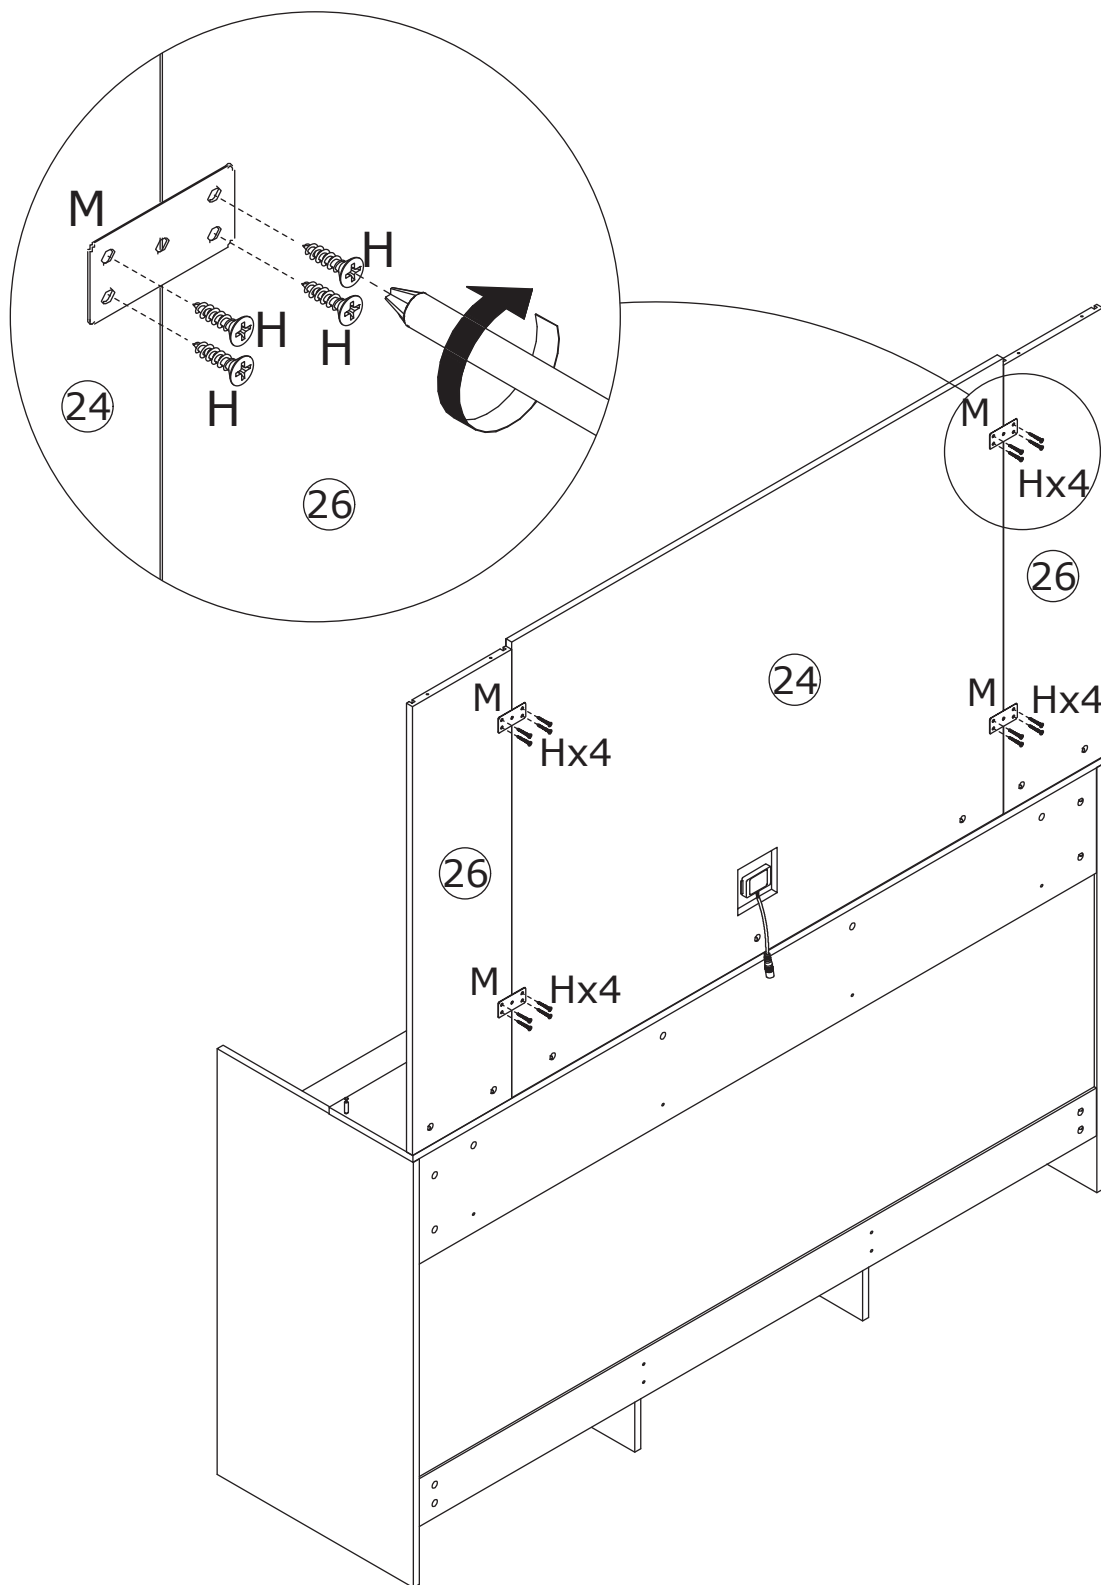  

Secure part (M) to Panels 24 and 26 using screw (H).

19

D x 8

 
 


18 x13 x15 mm

H x 8




M3.5 x 12 mm

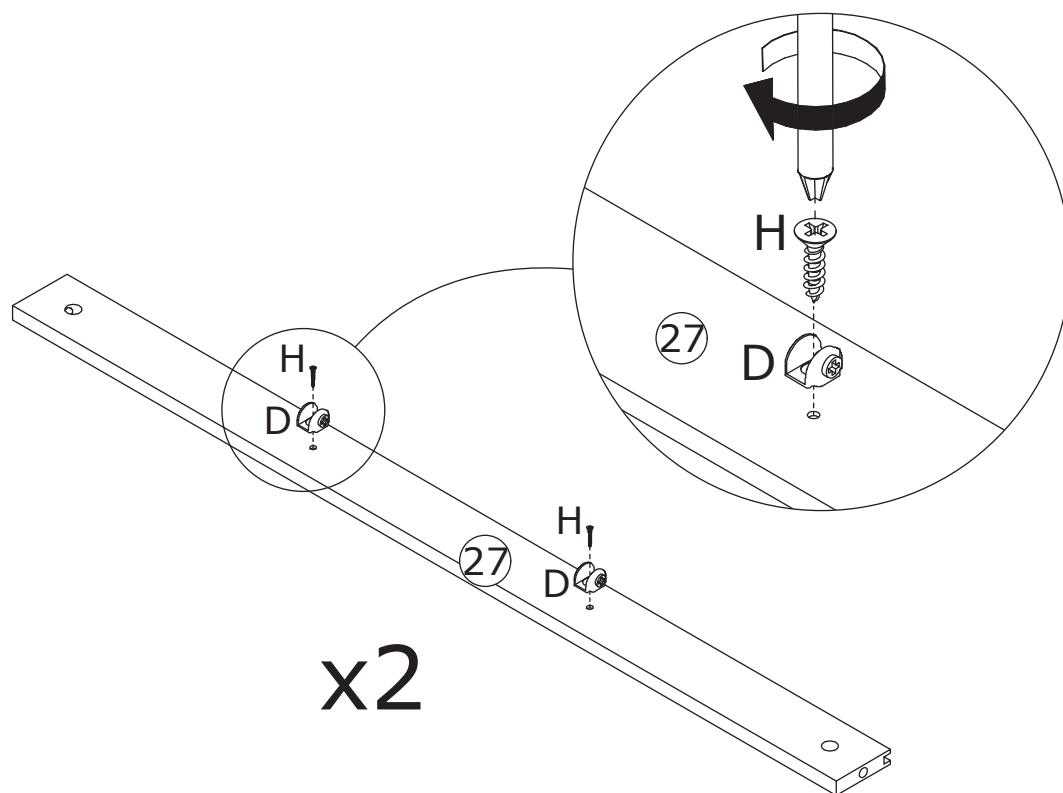

x2

Secure part (D) to Panel 27 using screw (H).

 Note: Pay attention to the orientation of part (D).

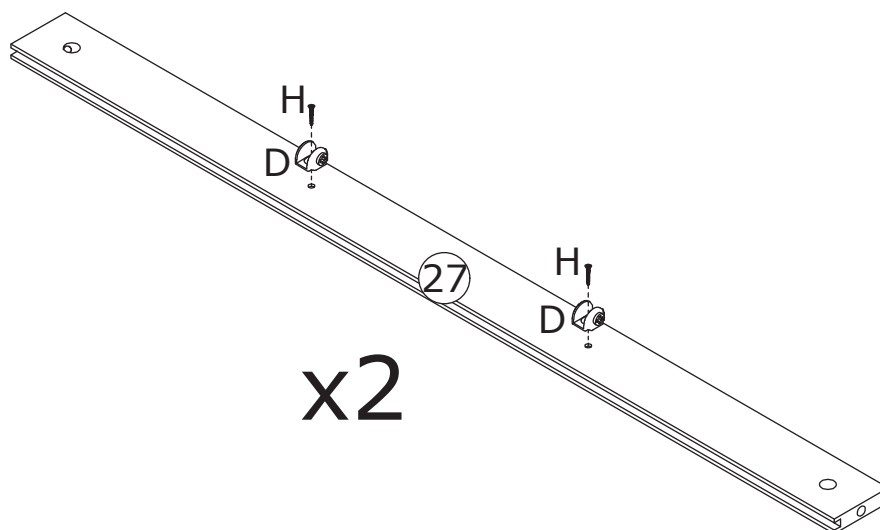





x2

20

A x 4




    Ø12 x 10 mm

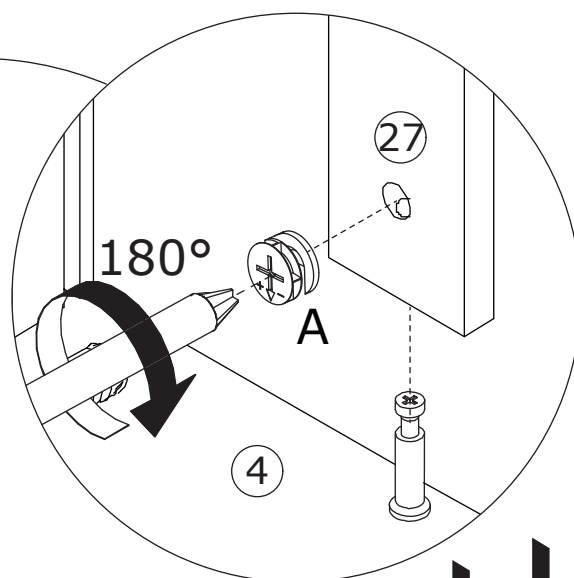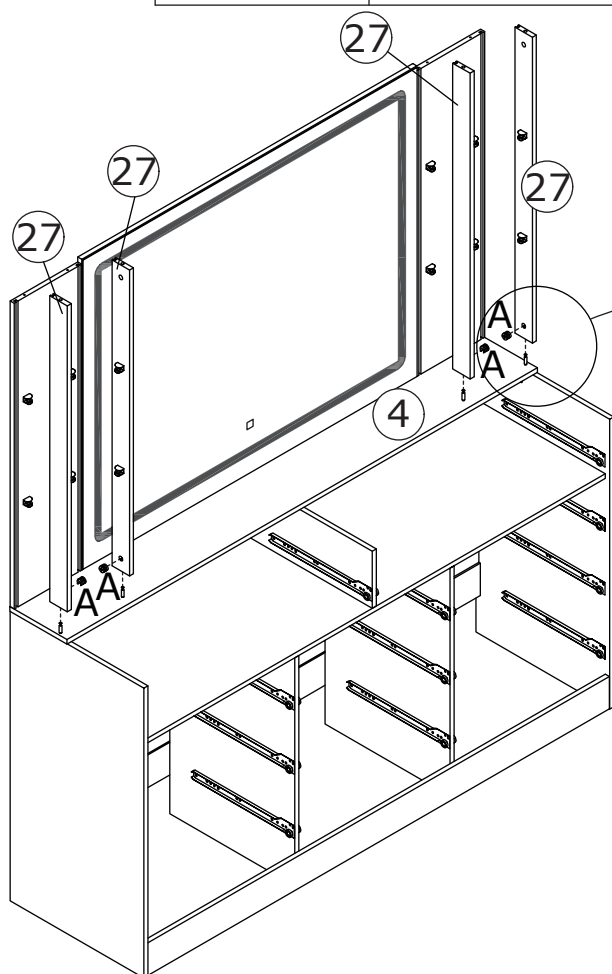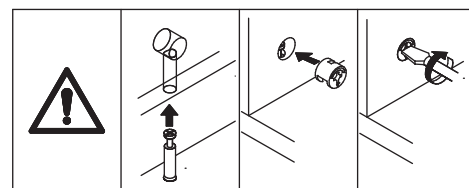

Connect Panel 27 to Panel 4, then tighten by turning cam lock (A) clockwise.

 Note: The screw holes of Part (D) must face downward.
Insert glass (29) along the direction of the available slots.

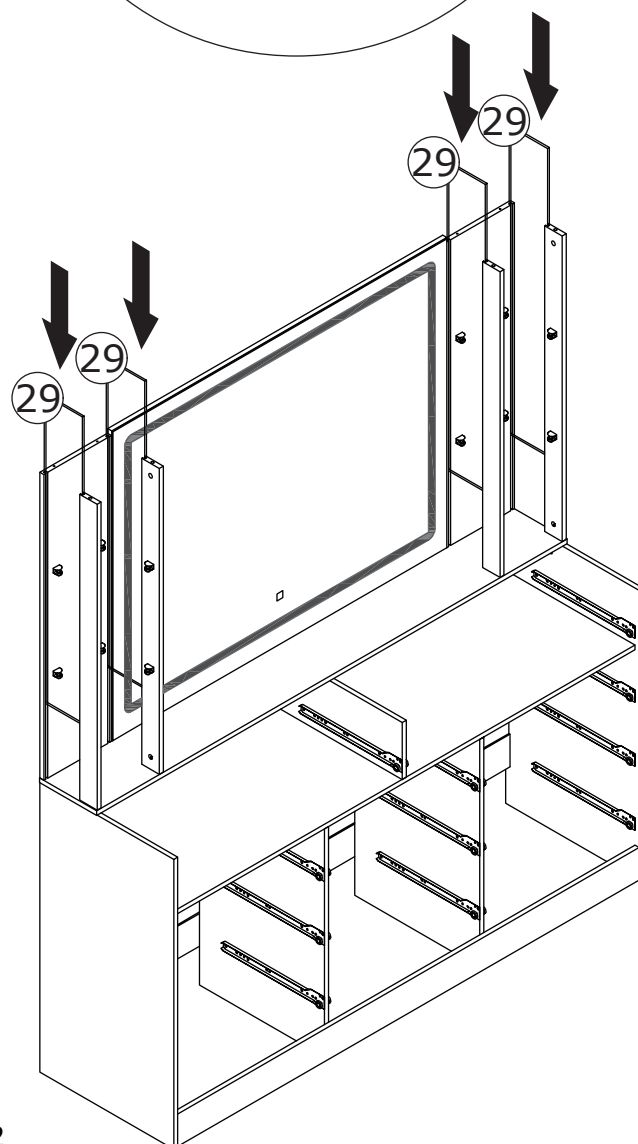


21

A x 4



Ø12 x 10 mm

 B x 4






Ø7 x 40 mm

C x 4







  
 
M5 x 40 mm

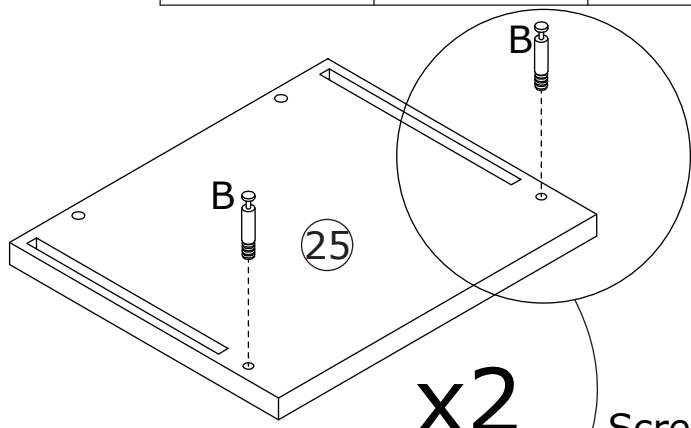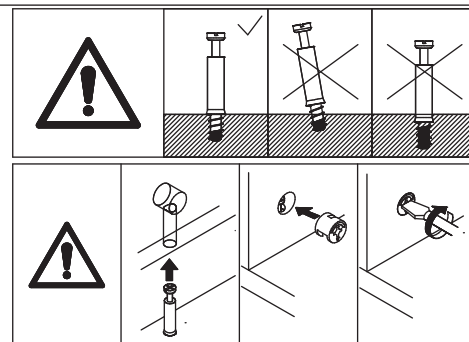

x2

      Screw eccentric bolt (B) onto Panel 25. Connect Panel 25 to the combined unit, secure it to Panel 26 using screw (C), then tighten by turning cam lock (A) clockwise.

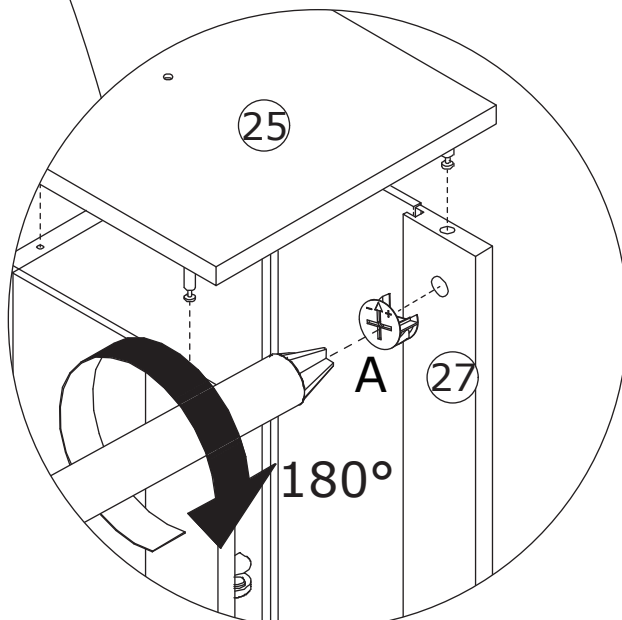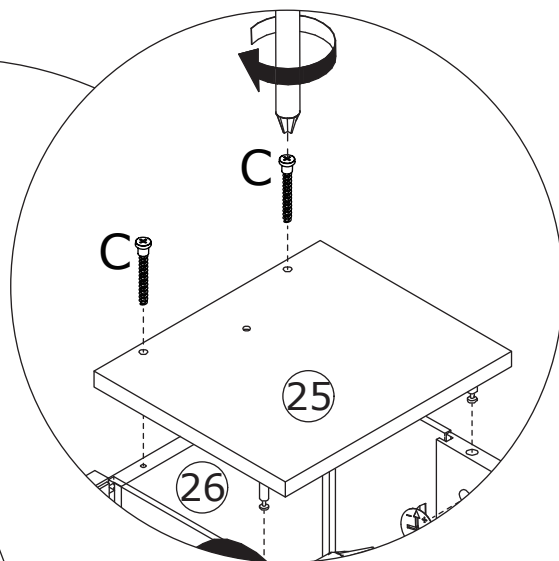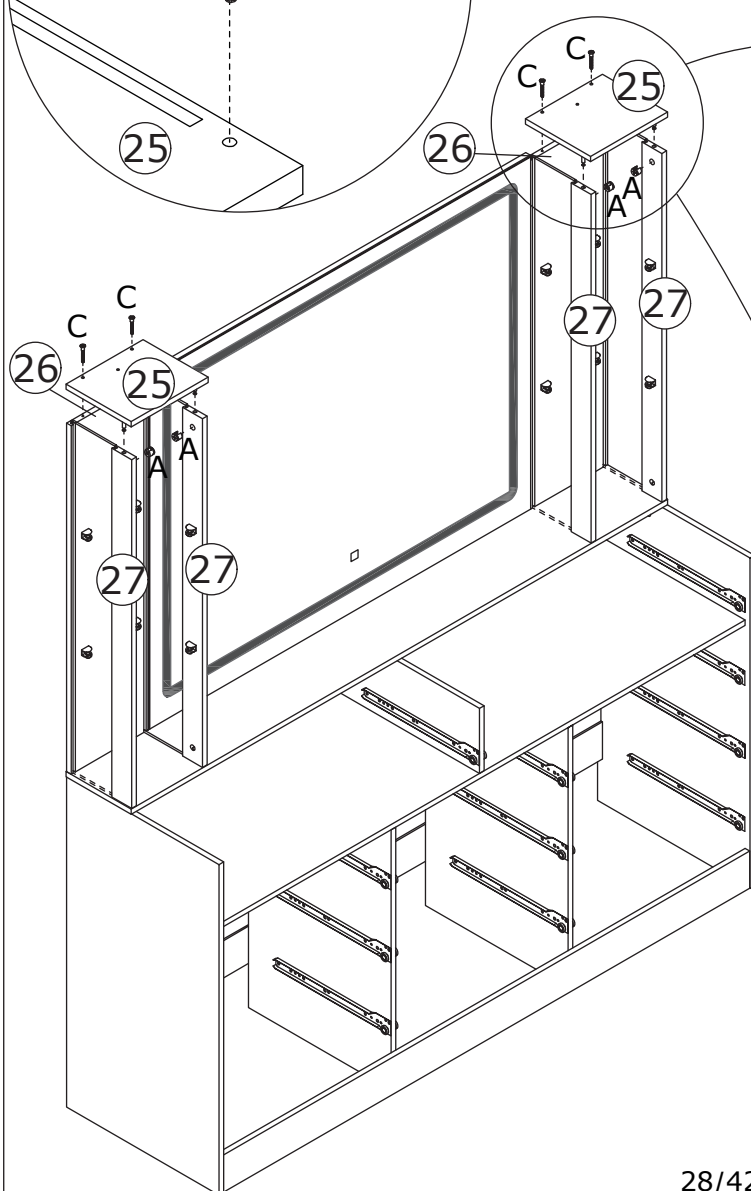
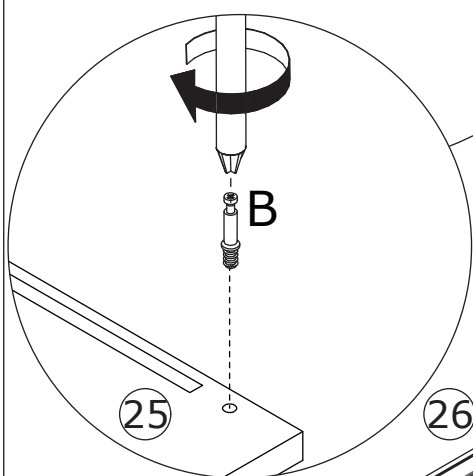


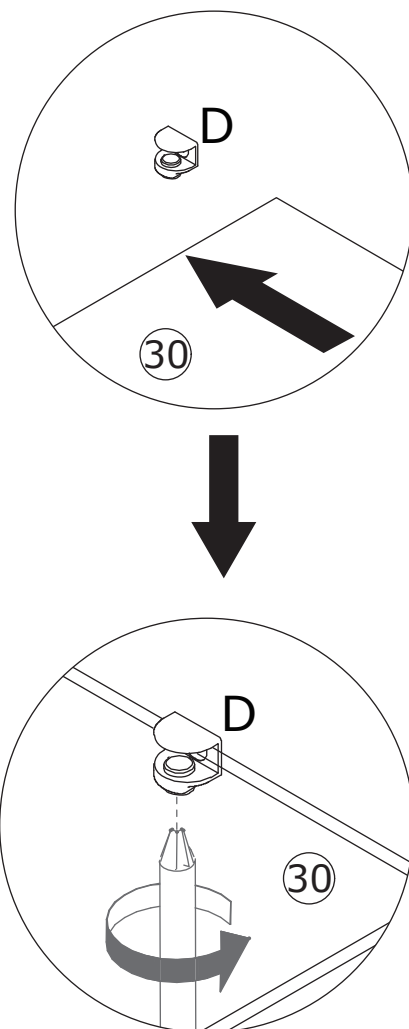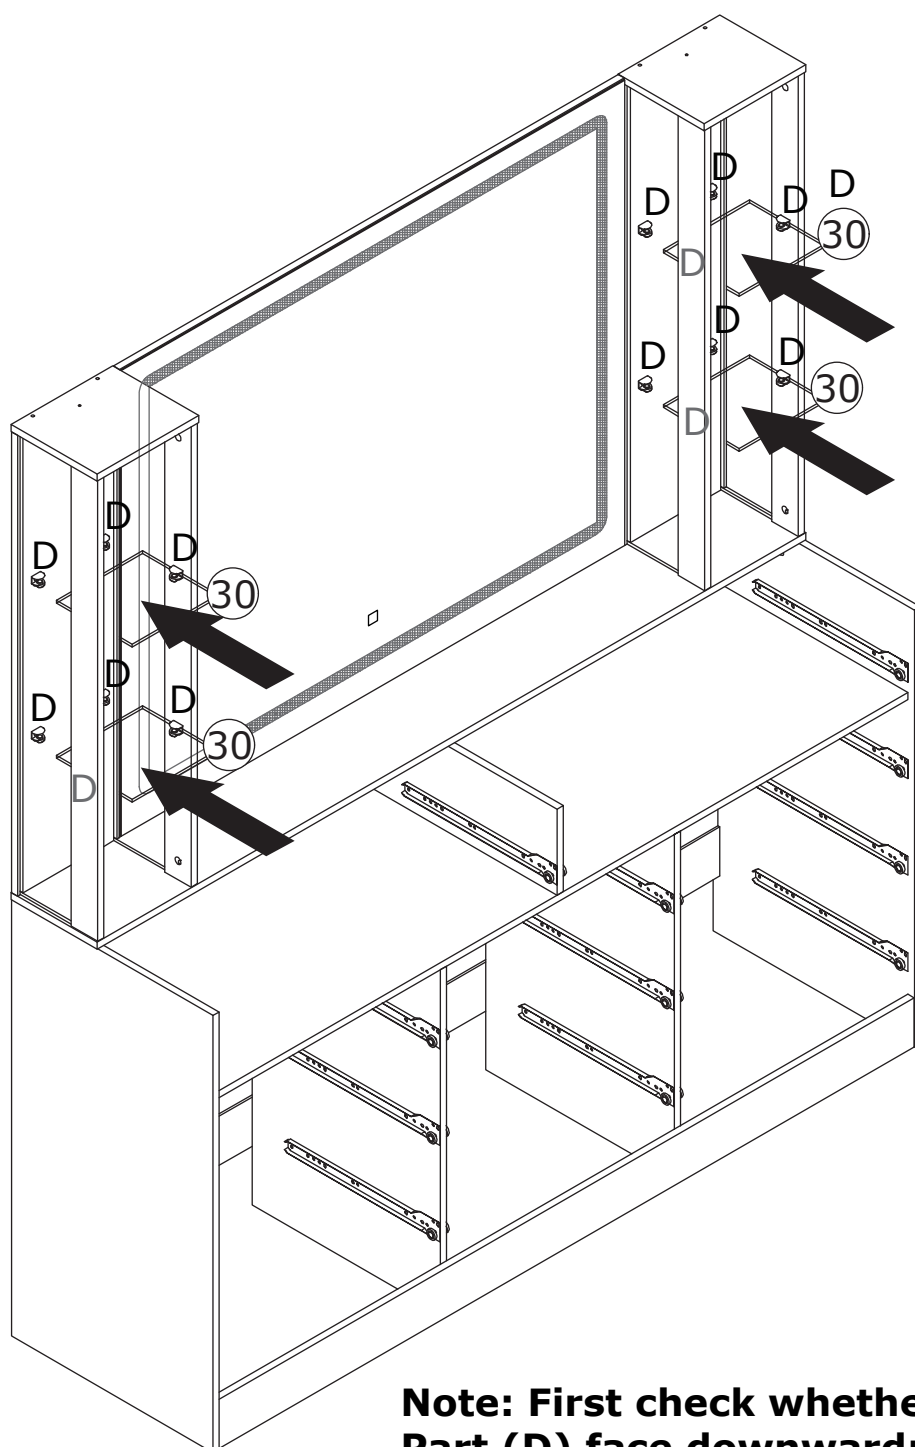


Note: First check whether the screw holes of Part (D) face downward; adjust if necessary. Insert the glass shelf (30) into part (D), then tighten the screws to secure the glass shelves.

23

  Q x 2





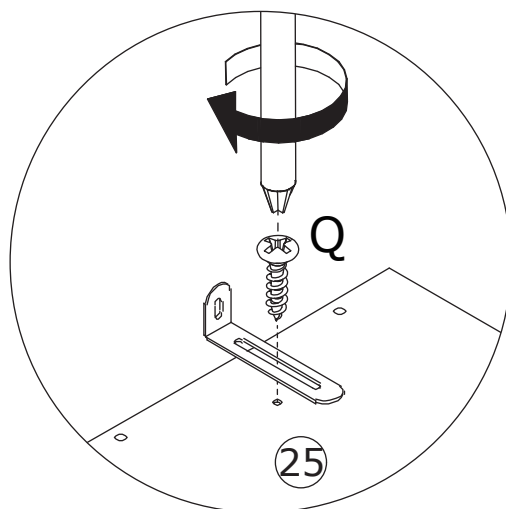



Secure part (Q) to Panel 25.

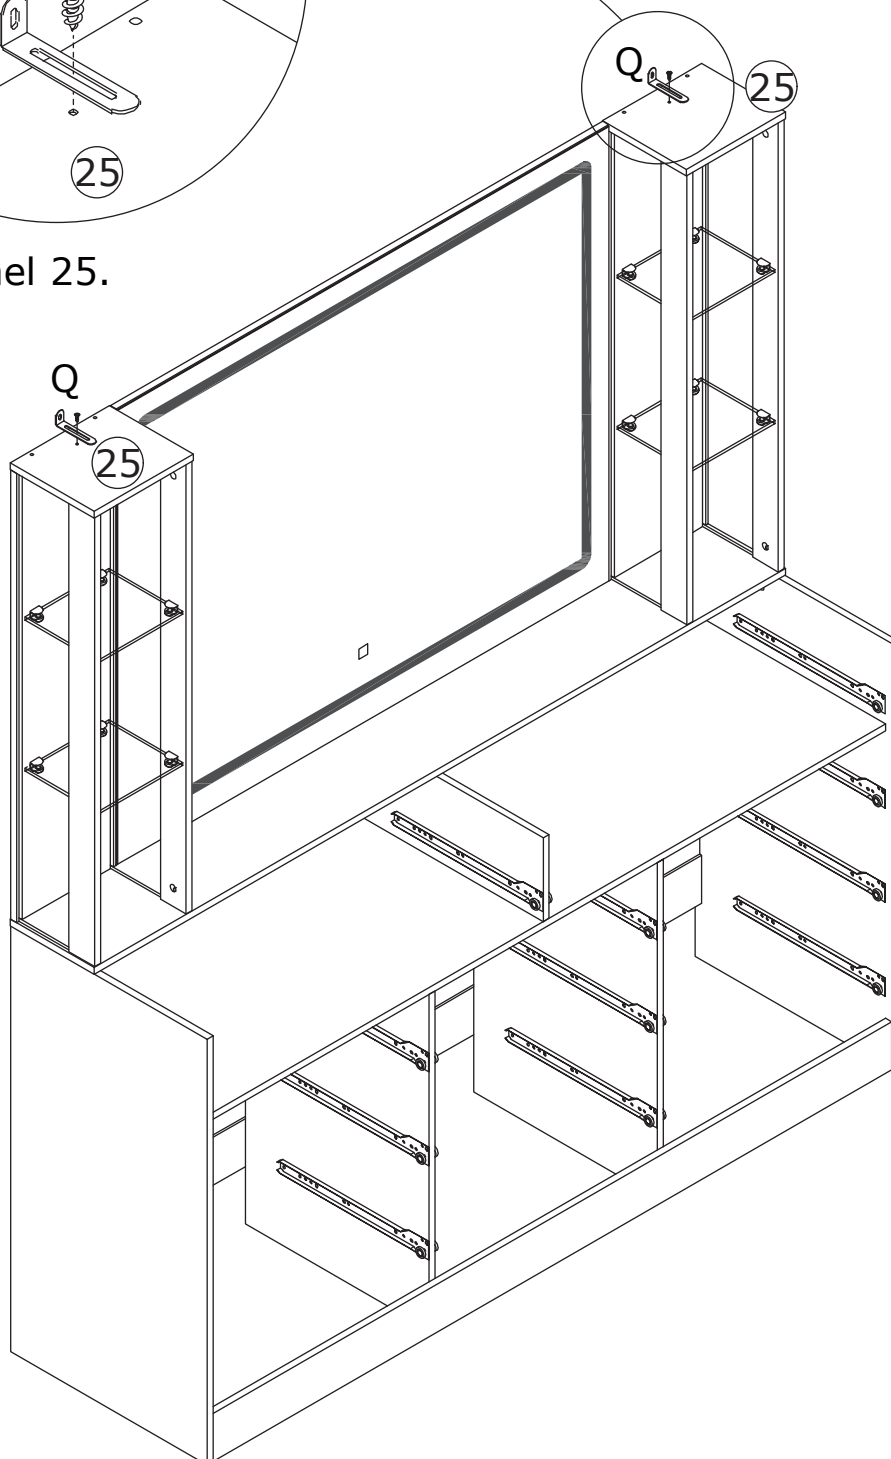 


24

      
Q x 2

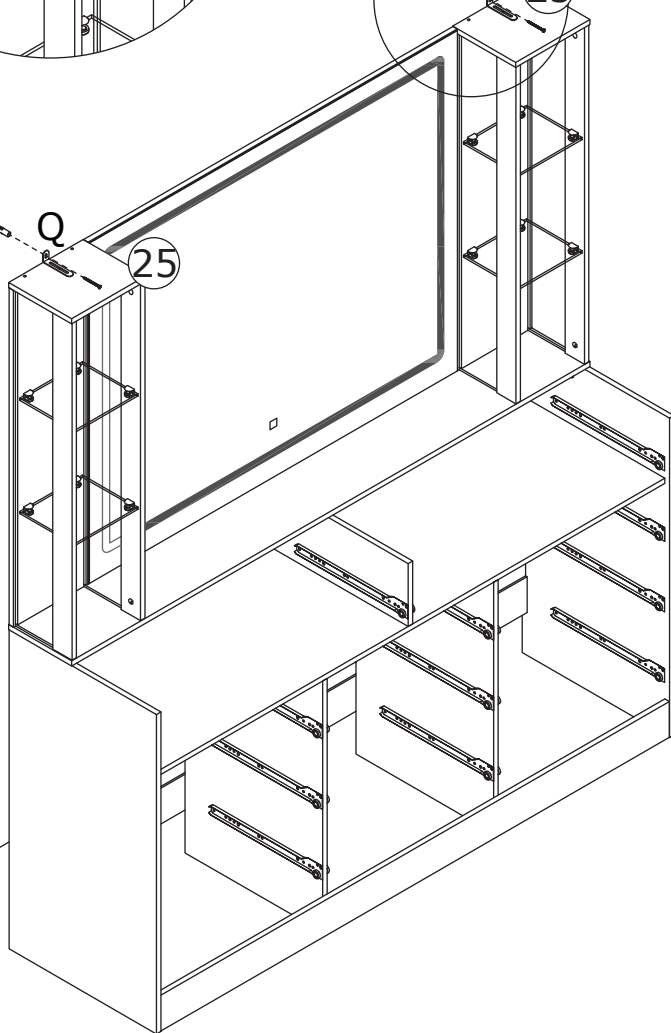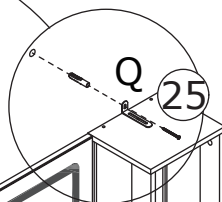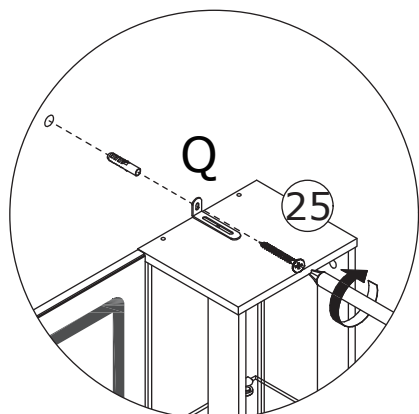

 
1.

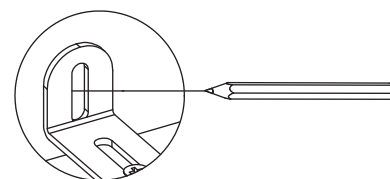

 
2.

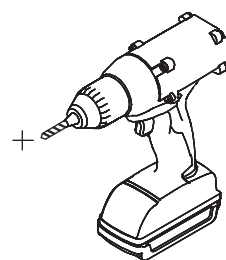

 3.


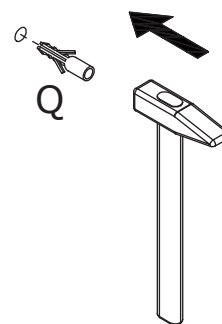


 
4.

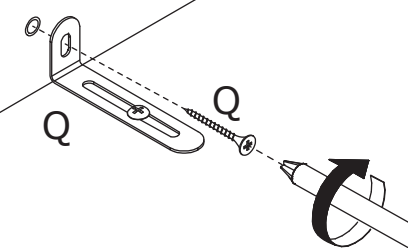

Install the anti-tip device as shown.

  
25

B x 44  Ø 7 x 40 mm	E x 11 	F x 11  M4 x 16 mm	
--	---	---	---

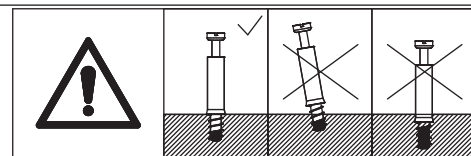 

Screw eccentric bolt (B) onto Panels 11, 12, 13, 14 and 15.

 Secure knob (E) using screw (F).

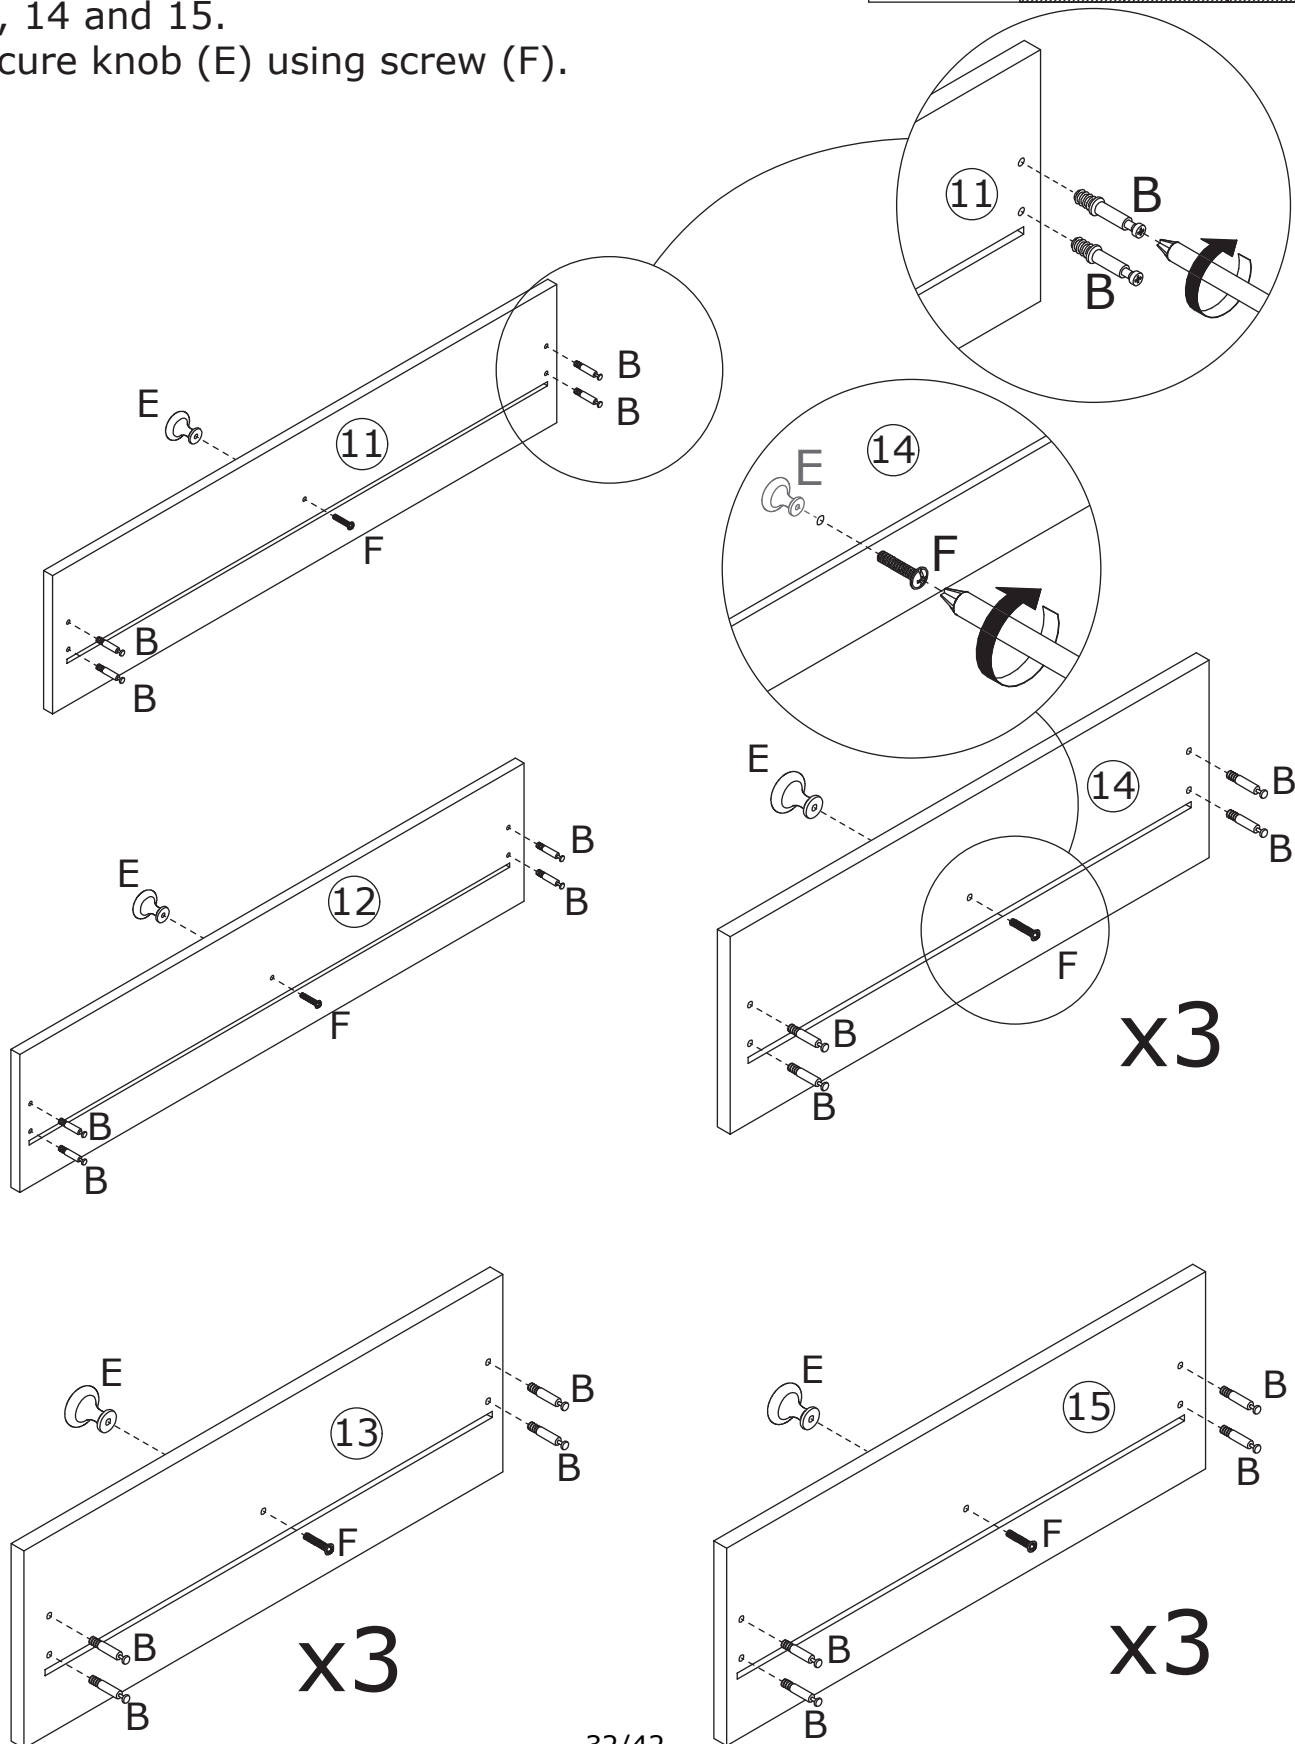

26

 
 
A x 44



Ø12 x 10 mm








Connect Panels 16 and 17 to Panels 11, 12, 13, 14 and 15, then tighten by turning cam lock (A) clockwise.

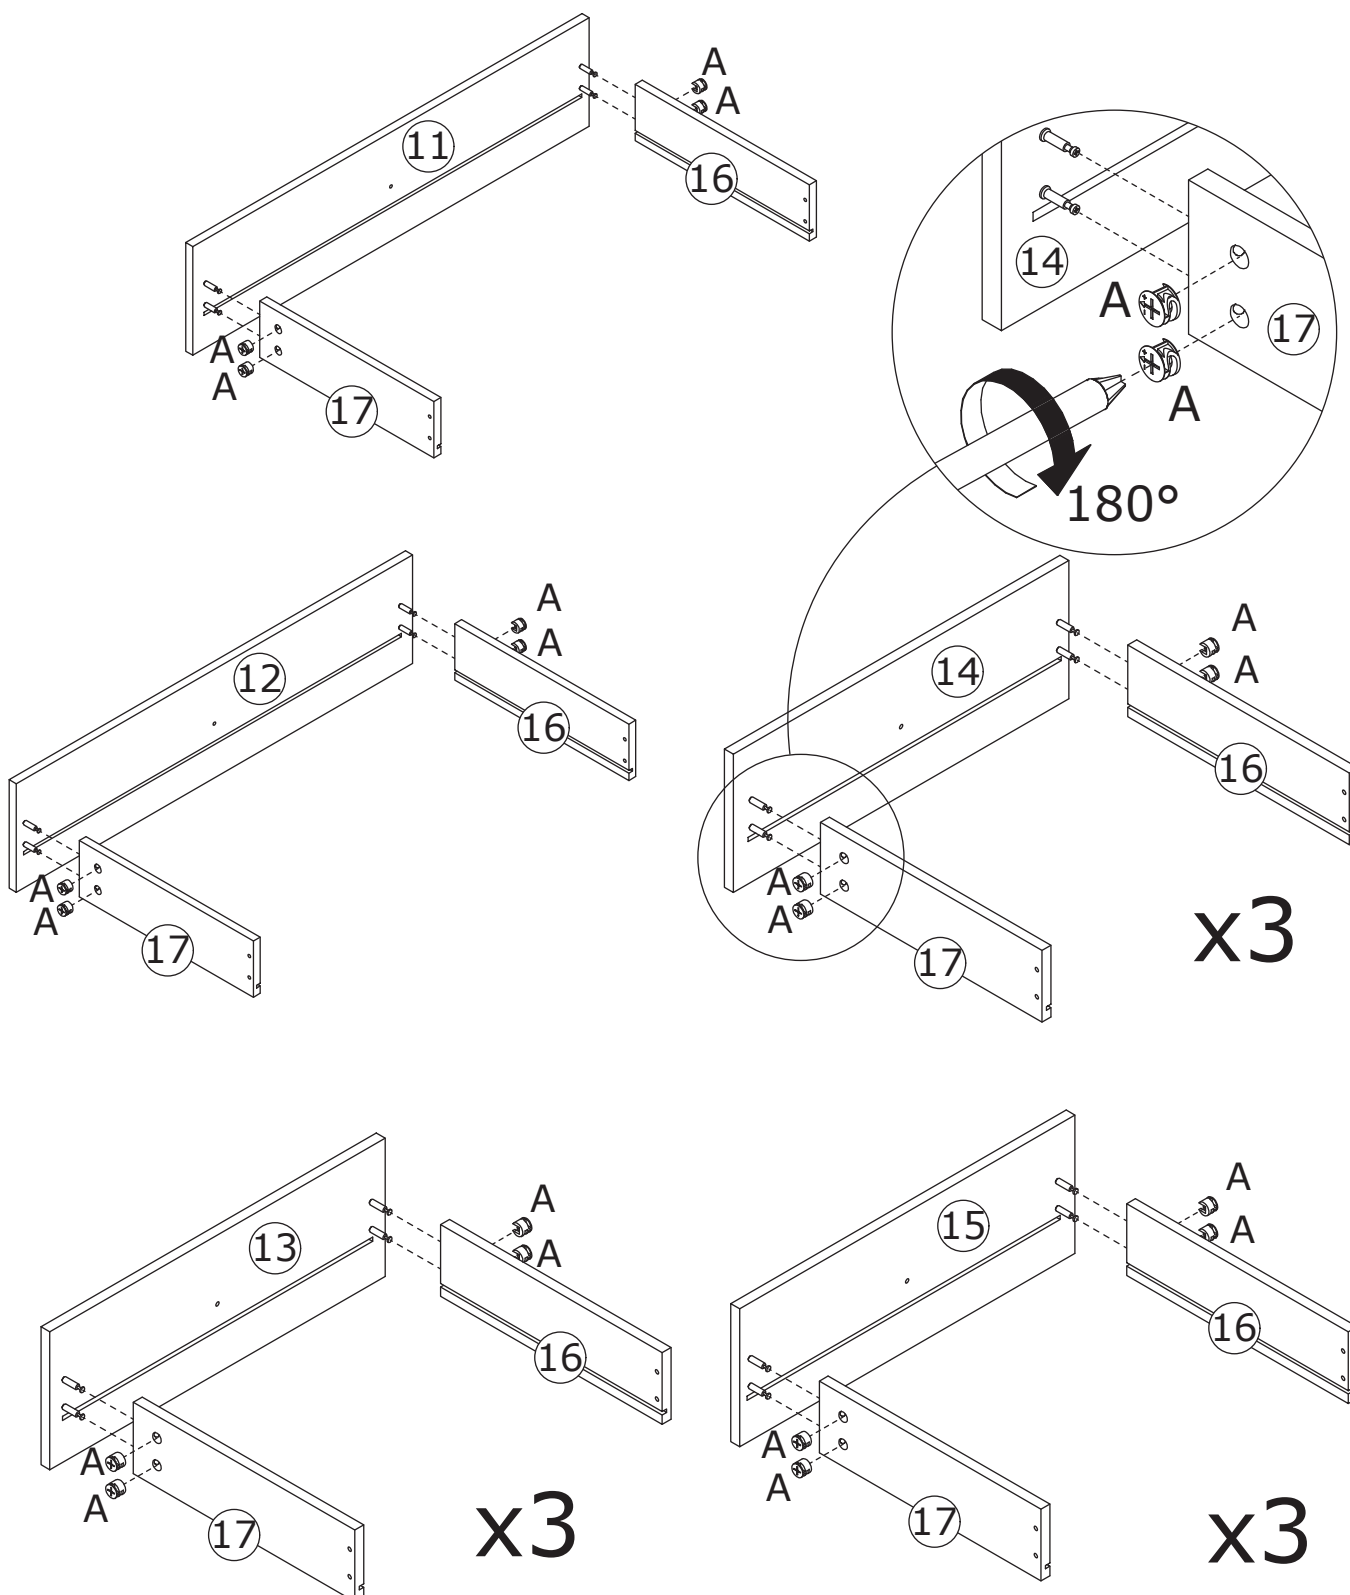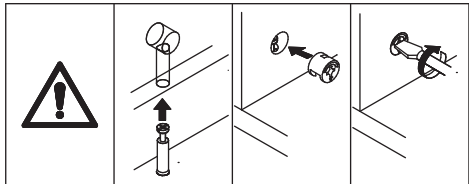

27

     Insert Panels 20 and 21 along the available slots.

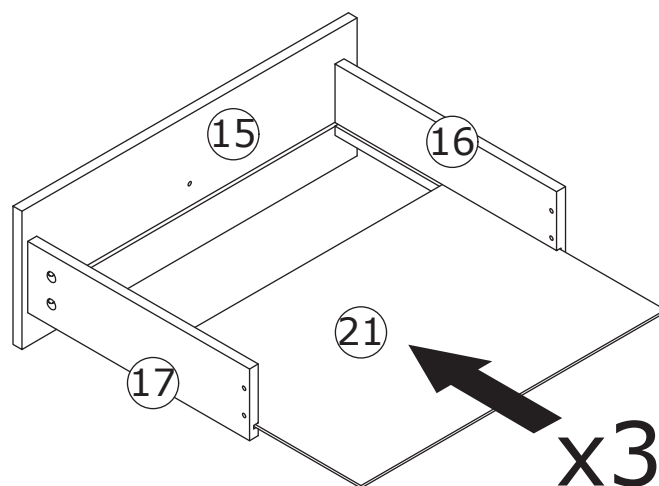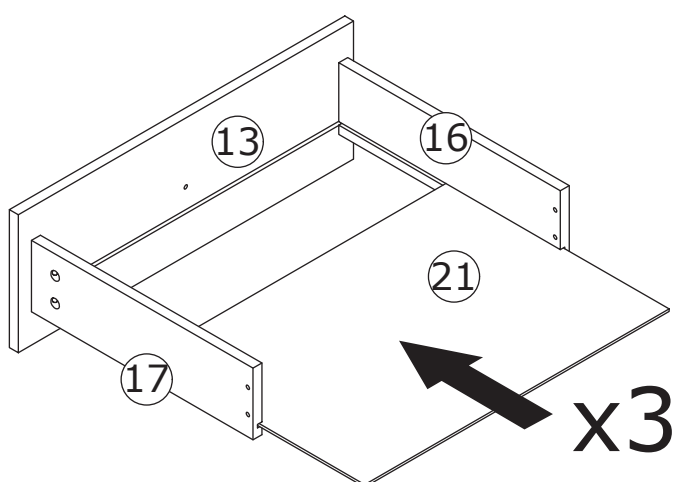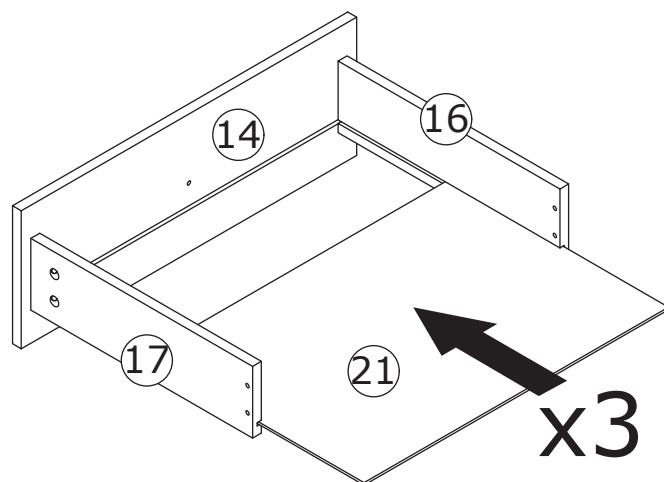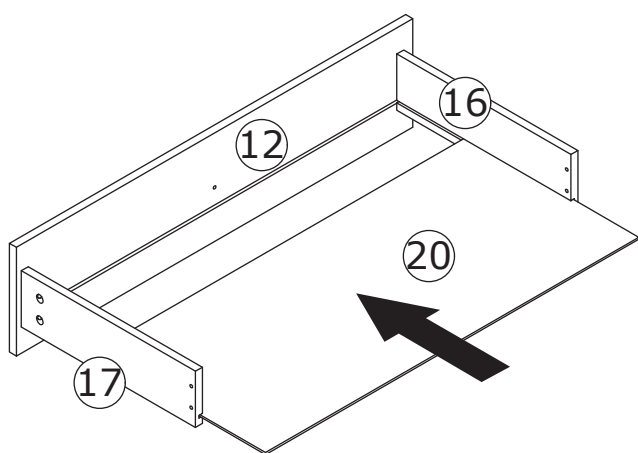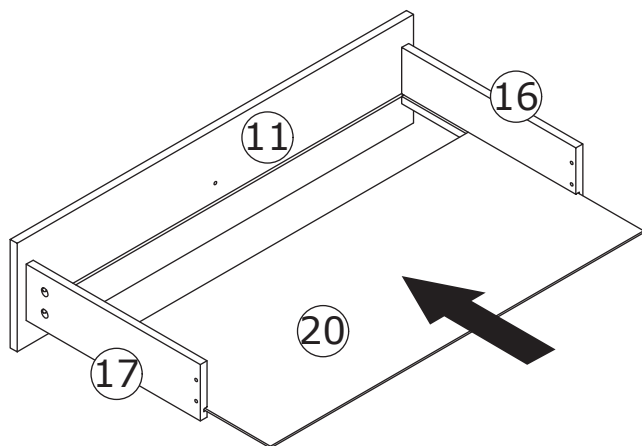







28

C x 44



M5 x 40 mm

      Secure Panels 18 and 19 to Panels 16 and 17 using screw (C).

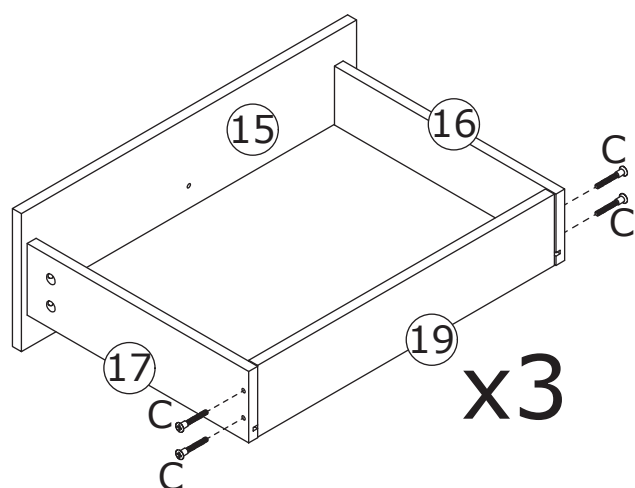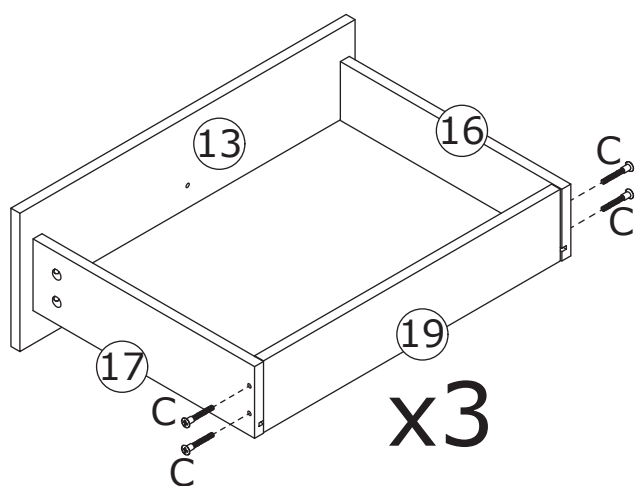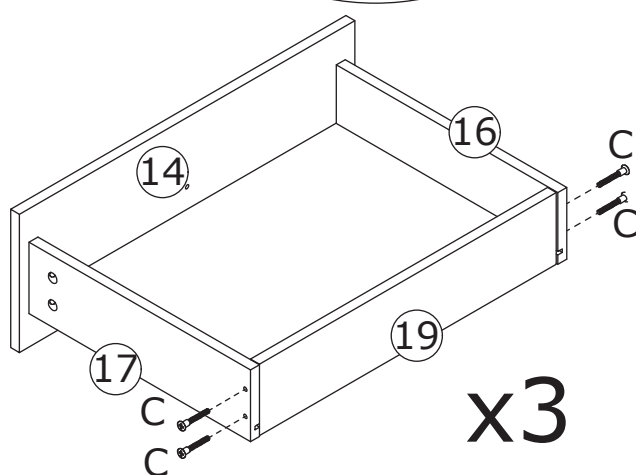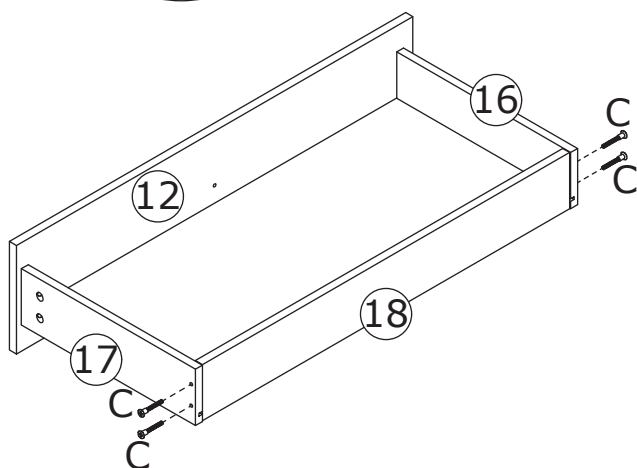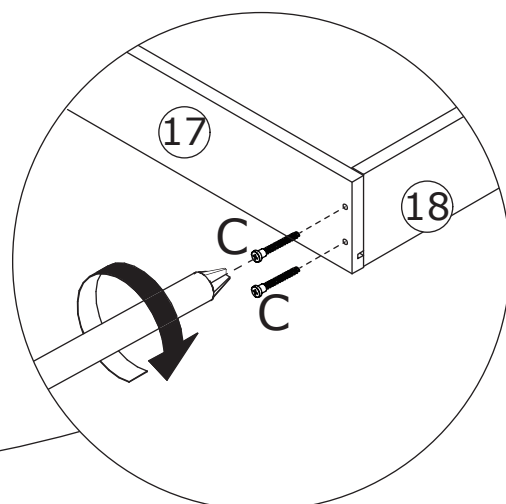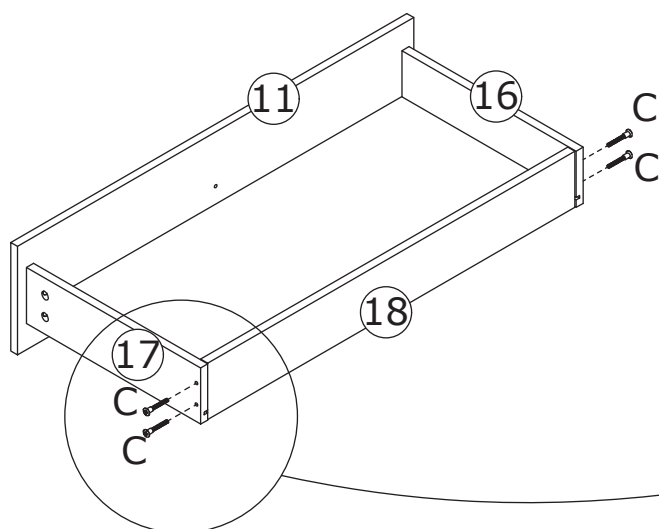


29

G x 44




M3 x 12 mm

 L-DL x 11




12"



 
L-DR x 11




12"

 

   
Secure slide rail (L-DR) and (L-DL) to Panels 16 and 17 using screw (G).

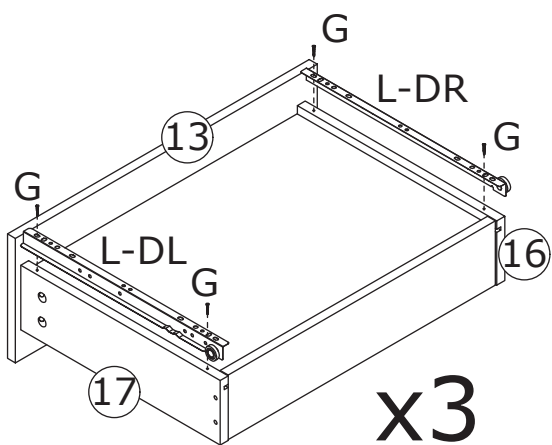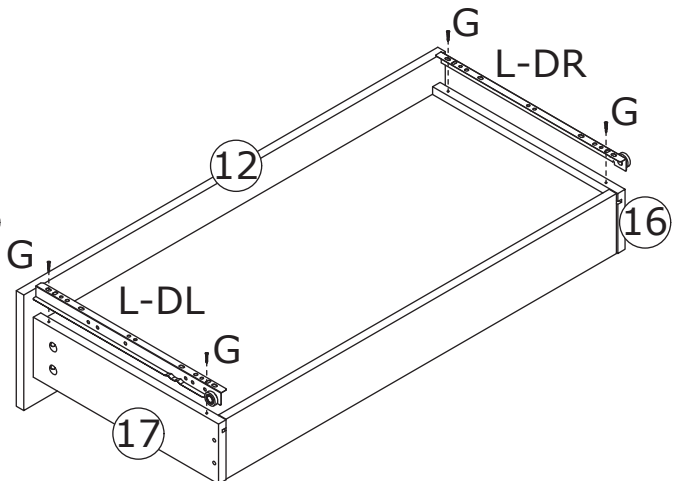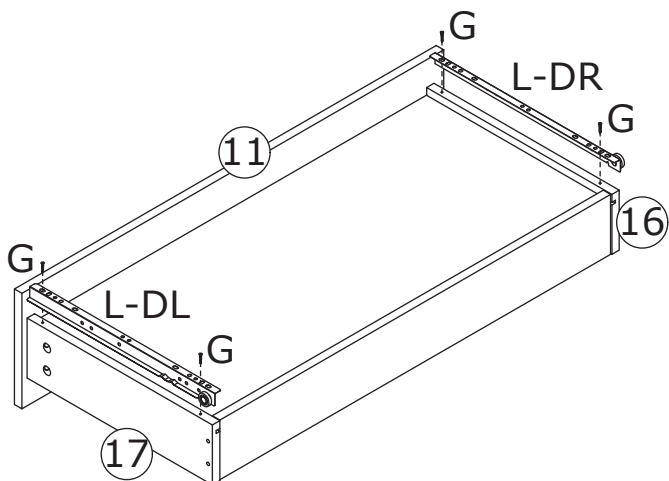


x3

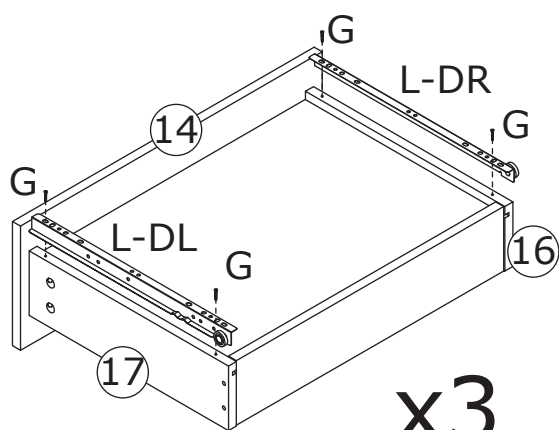 

x3

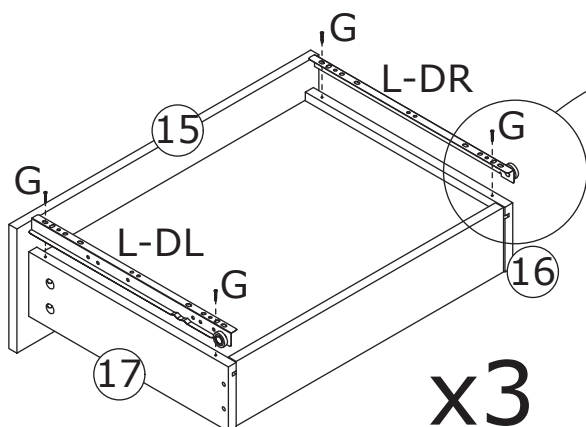 


x3

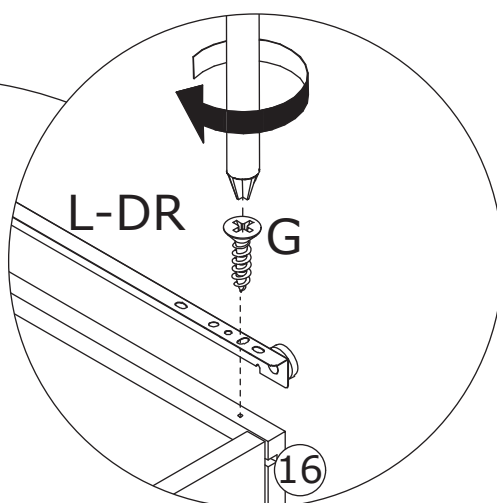 


30


 
Install the drawers into the combined unit as shown.

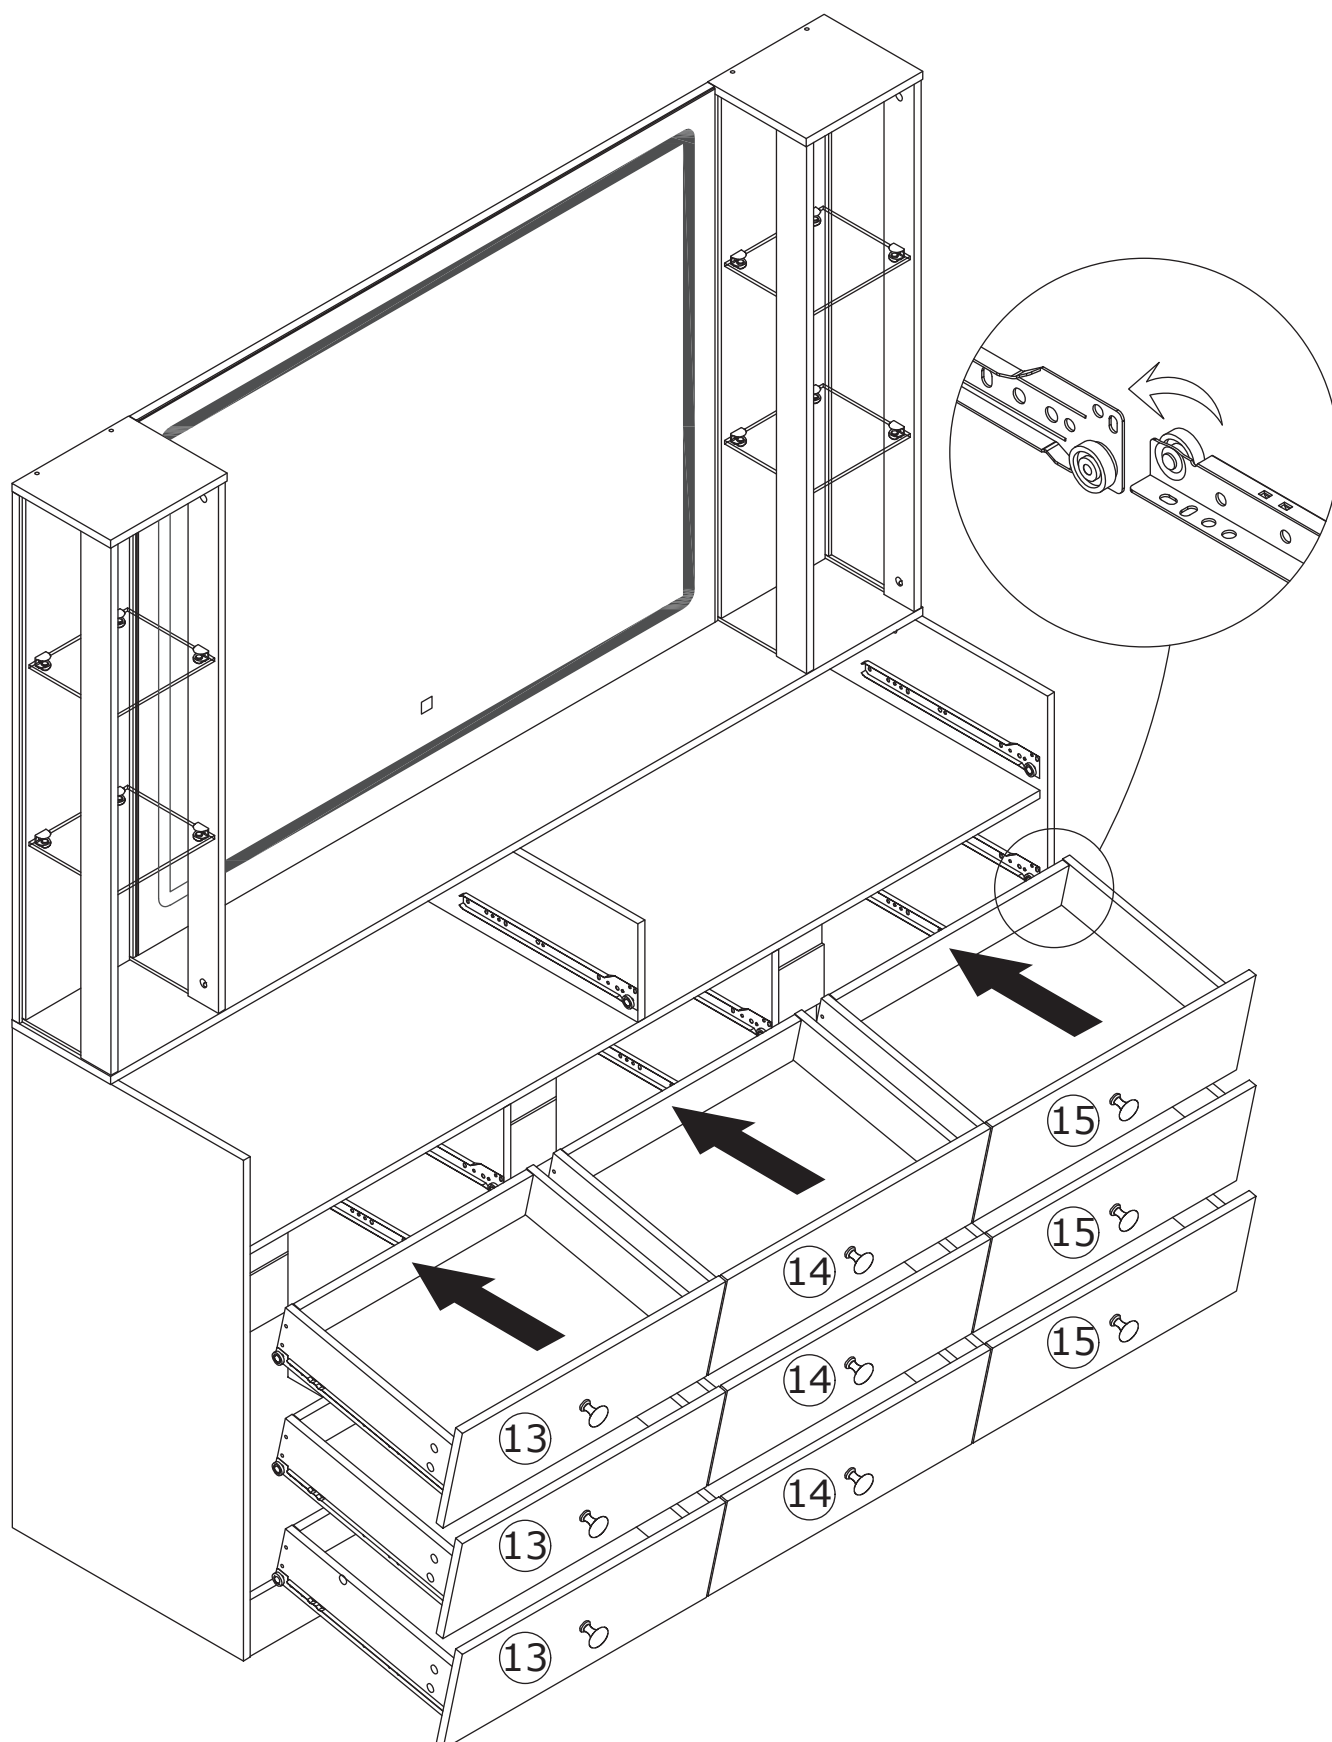


31

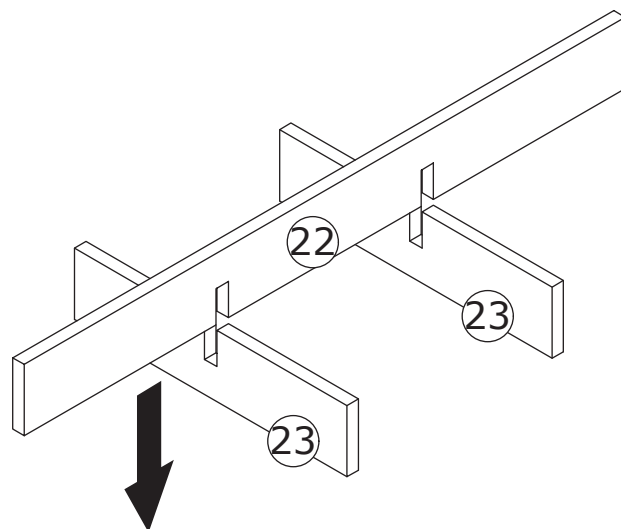 

   Install Panel 22 to Panel 23, then place it into the drawer.

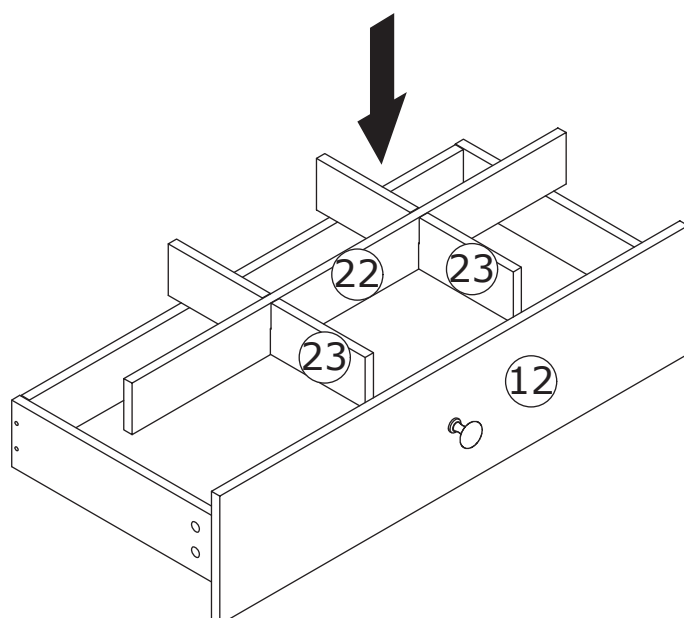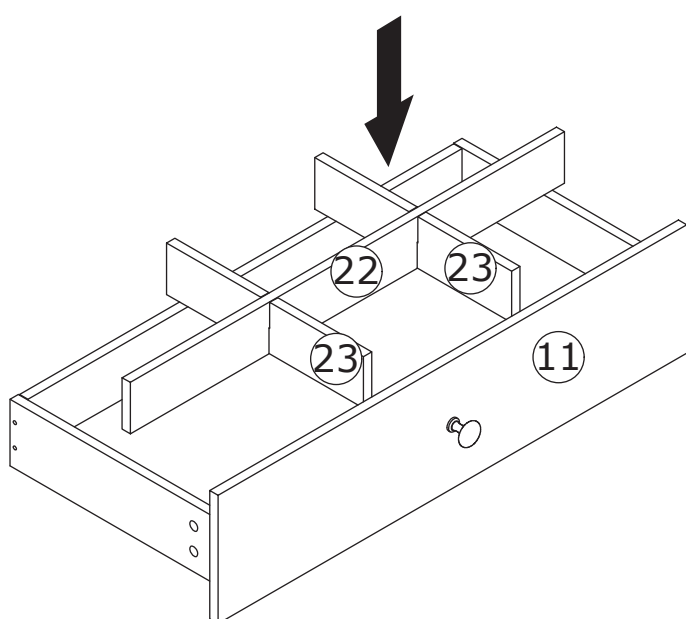

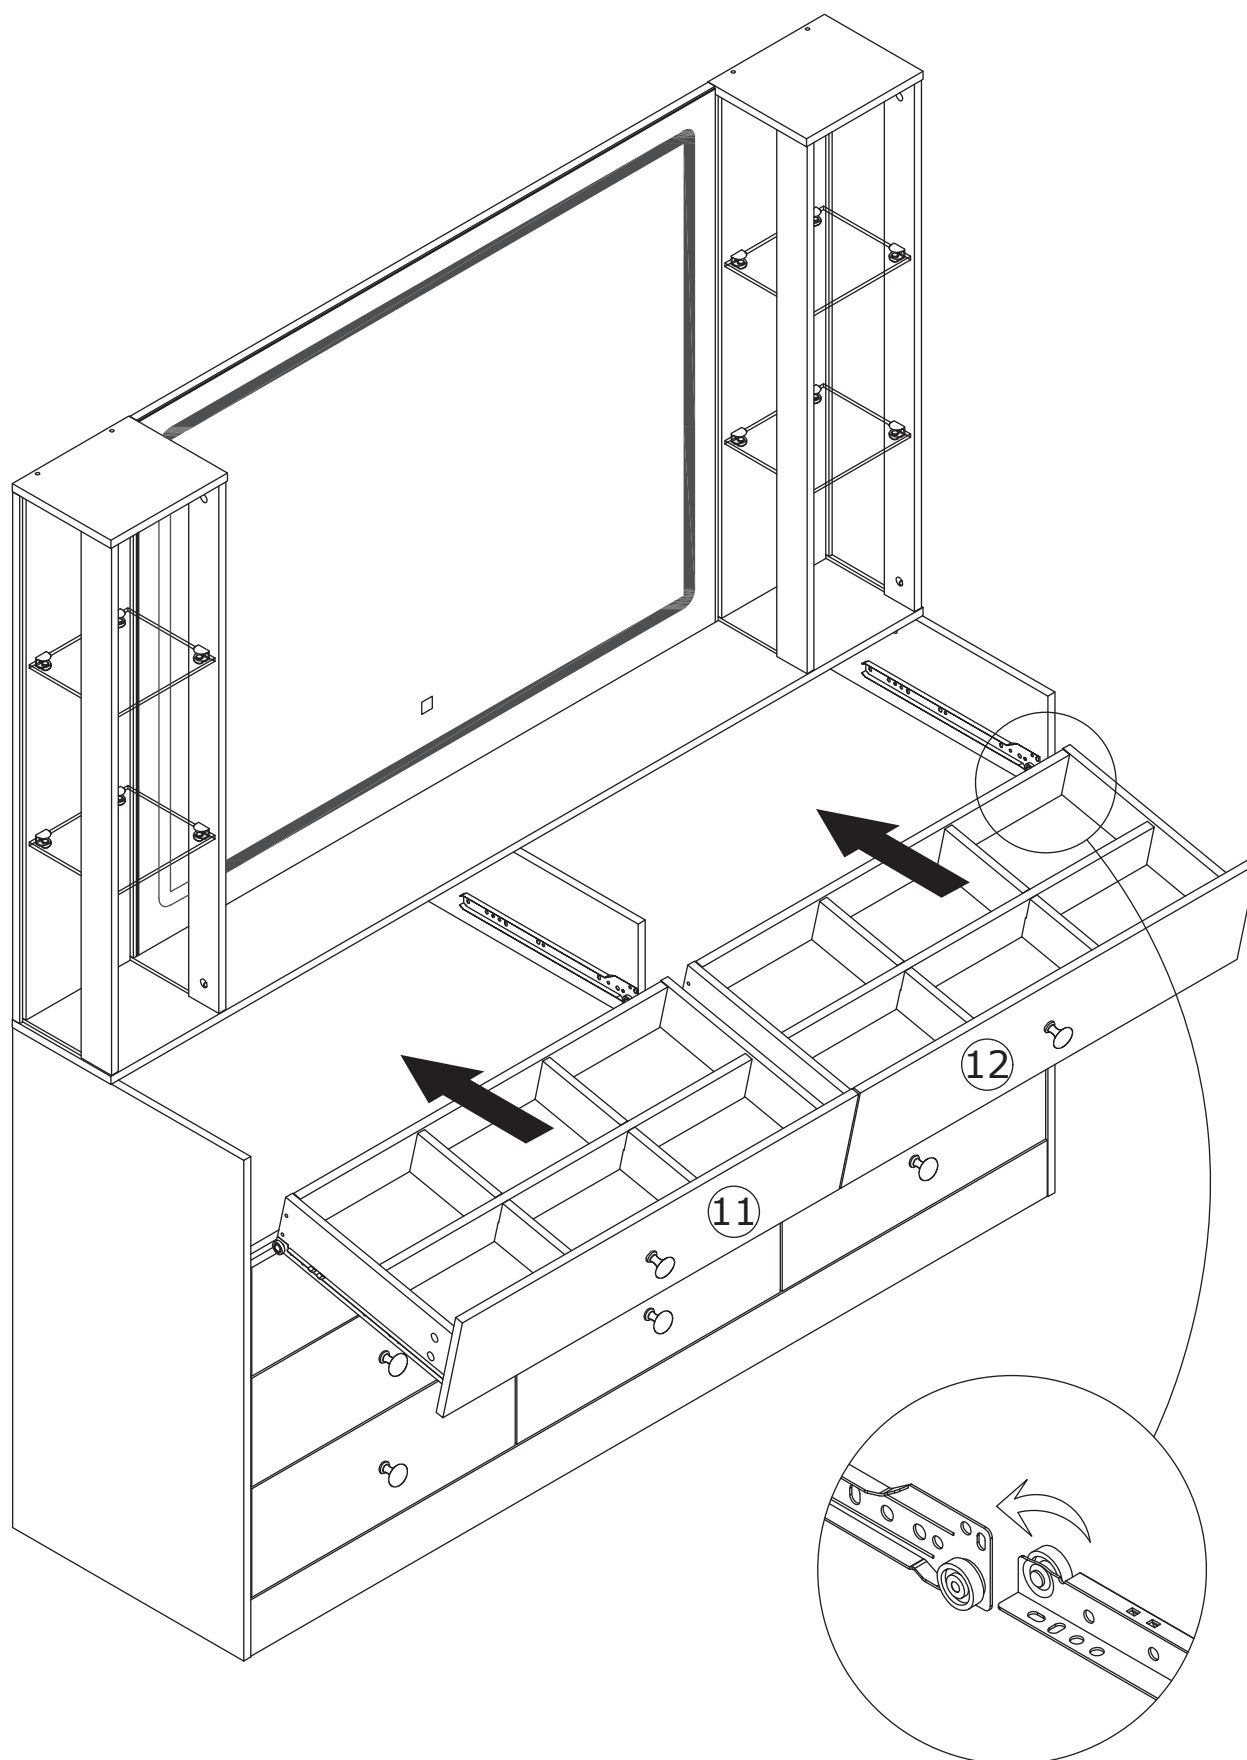


33

N x 6



Ø10 x 2 mm

 
Attach shim (N) to Panels 1, 2 and 3.

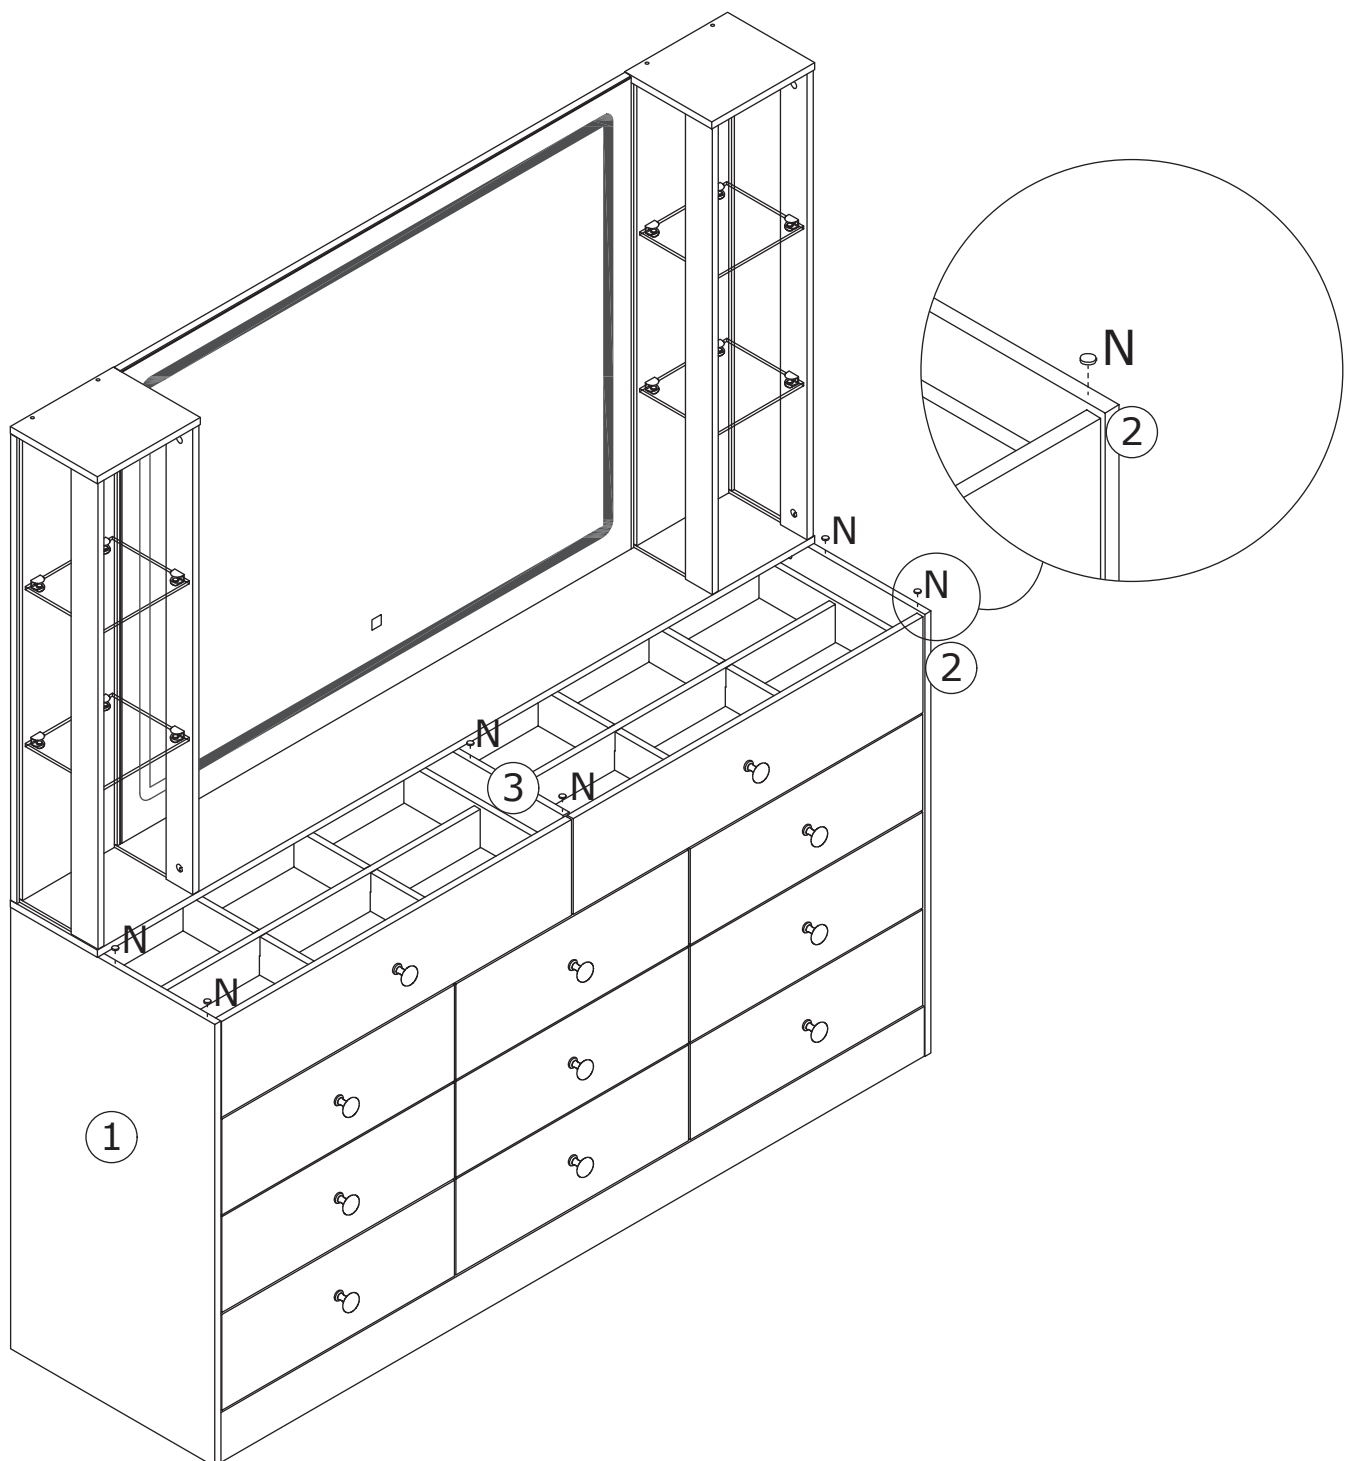

34


Install glass (28) onto the combined unit.

 Note: This step requires two or more adults to install.



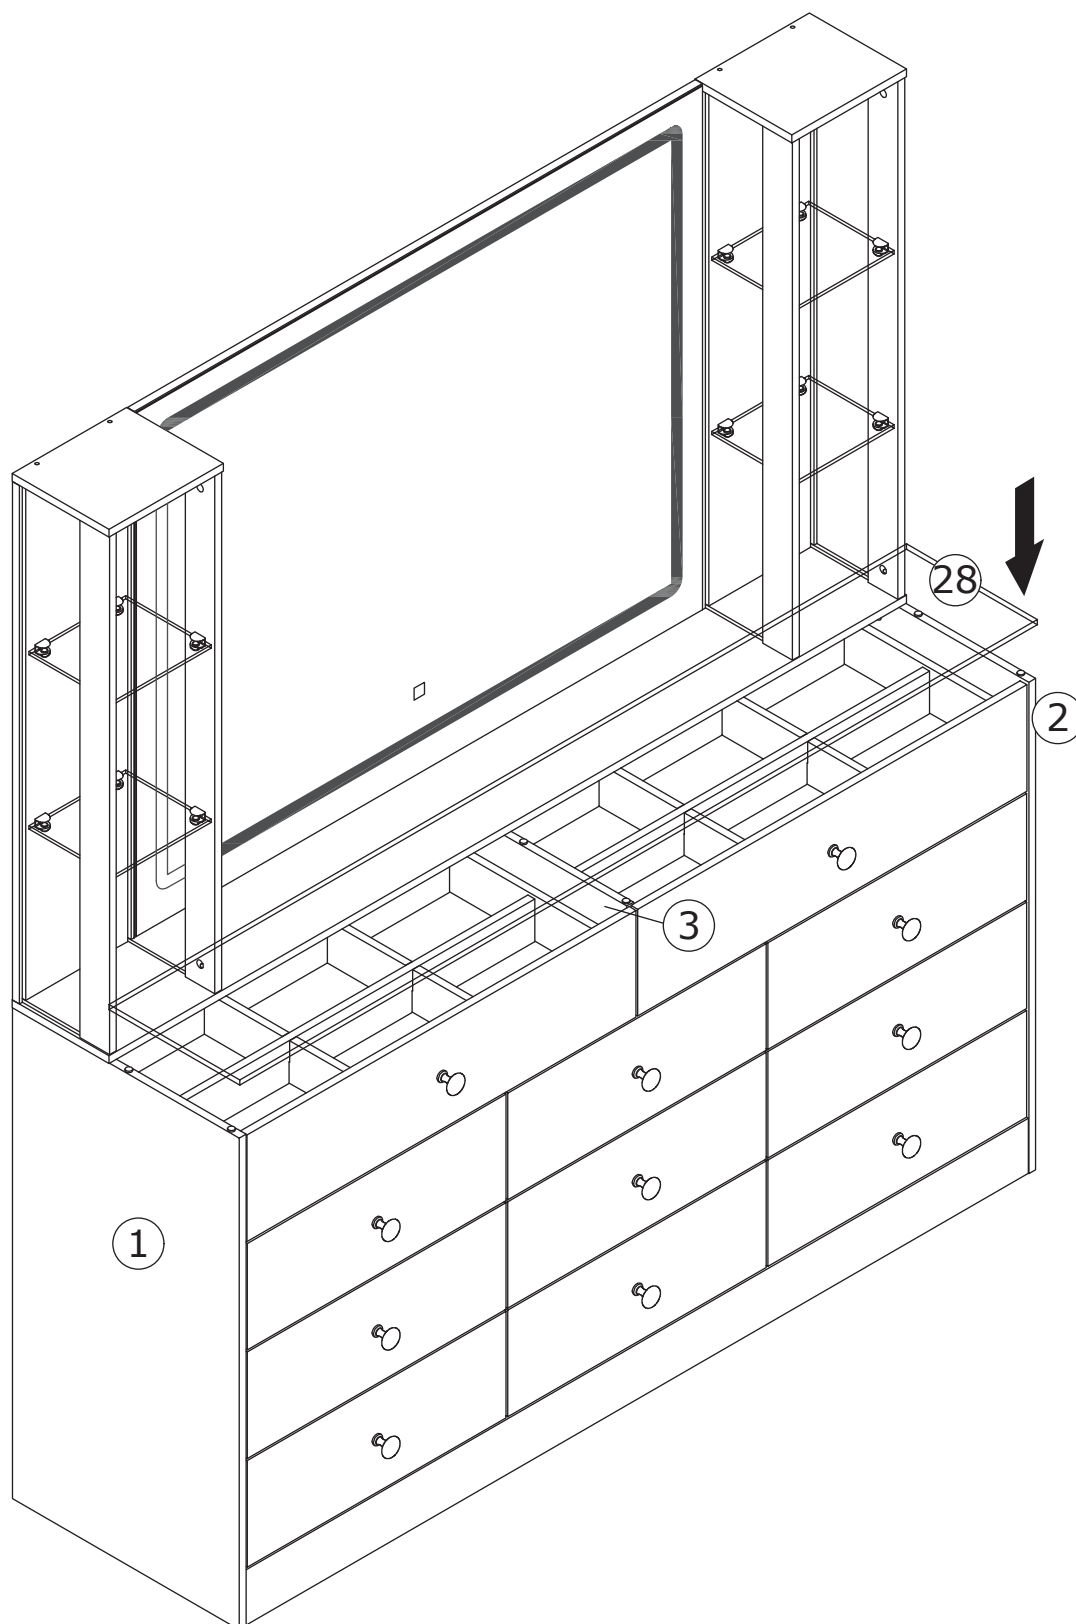


35

 
Power plug x 1



   Connect the power cable
with light connectors.

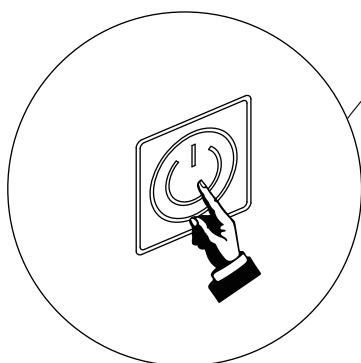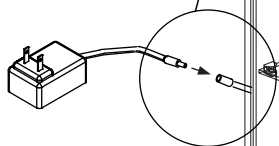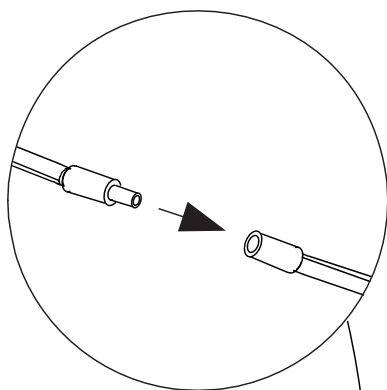

 Touch lightly to change
color, press and hold to
adjust the brightness.

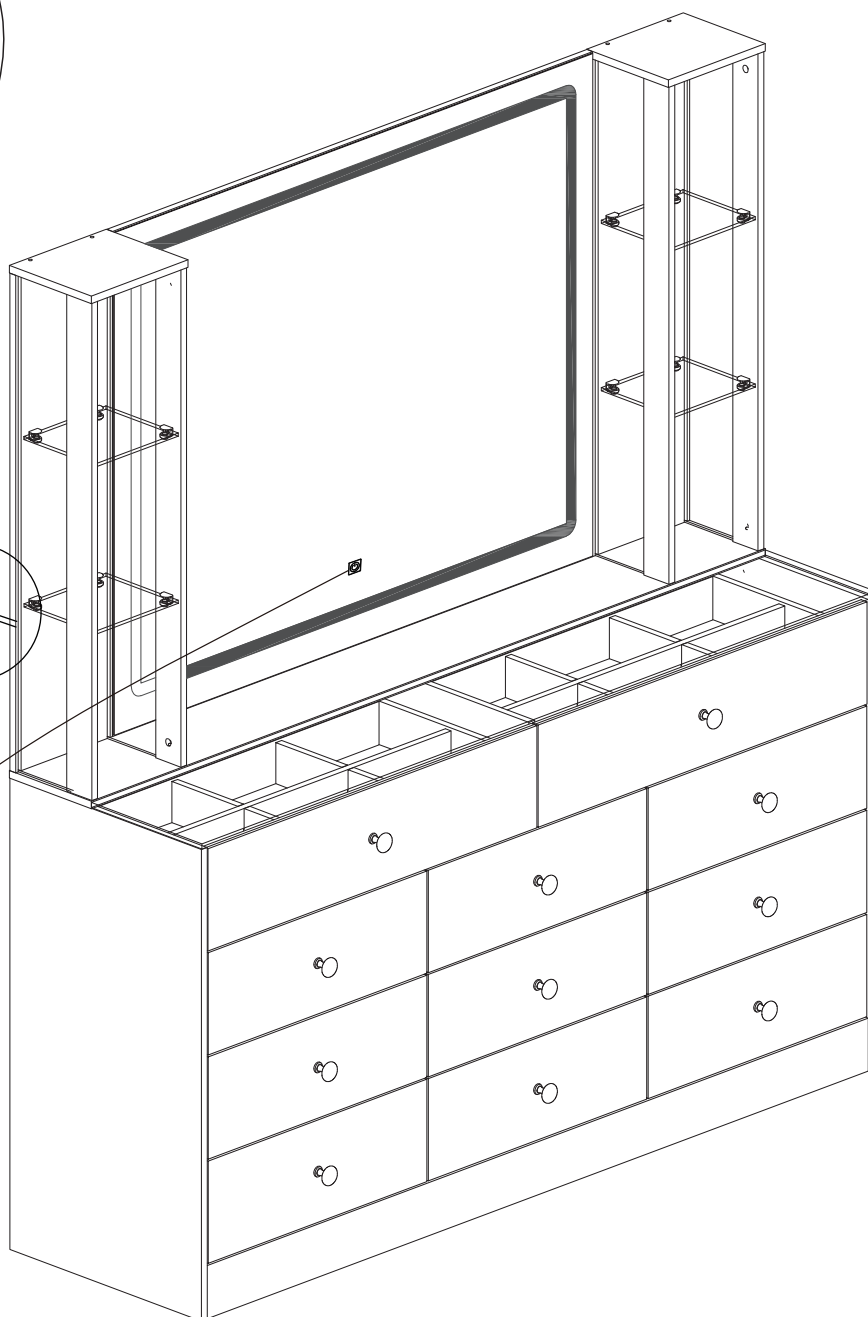

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.