

IMPORTANT INSTRUCTIONS DO NOT DESTROY



Thank you for purchasing a
CAROMIO Heated product.


TABLE OF CONTENTS

SET UP PROCEDURES.....	1	CARE AND CLEANING.....	4
CONTROLLER FEATURES	2	TROUBLESHOOTING.....	5
SAFETY ESSENTIALS.....	3	PRODUCT SPECIFICATIONS.....	9

SET UP PROCEDURES

STEP 1

 Connect Power Cord Connect power cord to the heating pad by matching the arrow on the power cord to the arrow on the connector. Once arrows are aligned, push cord into the connector until they are securely connected. You should feel it snap into position.

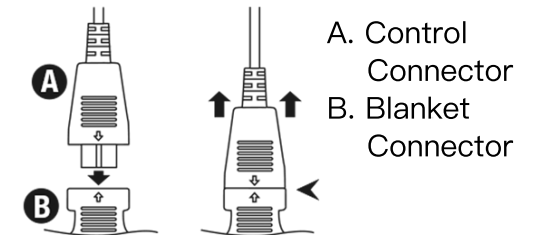


STEP 2


Plug Controller into the wall Once you have properly attached power cord to the connector, plug your heated pad into the wall.

CAUTION:

 - Do not plug main power cord into the wall outlet until you have completely set up your heated product per the instructions.
- Disconnected power cord from the wall before detaching controller cord from your heated product.
- Always make sure cords are not pinched between mattress, bed slats, furniture, wall, or any surface.
- This product has a polarized plug (one plug blade is wider than the other). To reduce the risk of electrical shock, if this plug does not fit in the outlet, reverse the plug. If it still does not fit, contact an electrician. Do not attempt to defeat this safety feature.

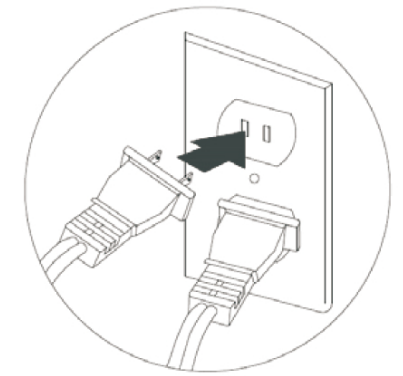

 NORTH AMERICAN MODELS WITH POLARIZED PLUGS:

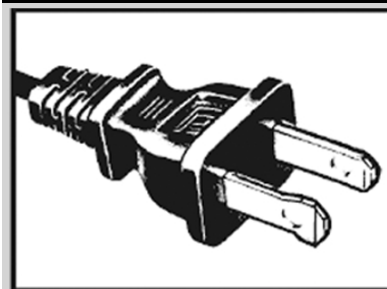

THIS APPLIANCE HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER). TO REDUCE THE RISK OF ELECTRIC SHOCK, THIS PLUG IS INTENDED TO FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN TO INSTALL THE PROPER OUTLET.

DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.

CONTROLLER FEATURES

AUTO SHUT OFF FEATURE Each controller will automatically shut off 2 hours after the controller is turned on. This is designed to provide added safety and conserve energy. To reactivate the heating feature simply press the button. To restart after a power outage simply press the button.

TO Use:

1 Push the button control to turn on. The controller will default to the lowest setting. Continue to press the button to adjust heat setting up. A light will illuminate the selected heat setting

2 To turn the control off, press the center button until no light is seen on the controller.

Caution: Always turn off the heated throw and disconnect the power cord from the outlet when not in use.



Setting up

- Never trap or pinch any of the electrical cords in any way. Make sure the cords are never rested between the mattress and box springs.
- The heated area of the warming blanket should always lie flat on top of the mattress to prevent overheating.
- If the plug does not fit into your outlet, contact a qualified electrician.
- Be sure that the power supply is used only on 120V, 60HZ Current Supply.
- Make sure the cord from the controller to your heated product is connected and locked tightly.
- NEVER use your blanket with an airbed, a pull-out sofa or mechanically adjusted bed.
- You may use this electric blanket with any sheets, mattress pads or other blankets but never in combination with any other electric blankets.

- The warming products should never be folded, balled up or bunched in any way when in use. May result in overheating and/or permanent wrinkling of the fabric.
- Do not use with generators, power converters, or inverters.

Care and Maintenance

- Be sure to read carefully the accompanying instruction booklet before using this bedding .
- Do not tuck in the wired area of this bedding.
- Never use pins in and around the warming product – They may damage the electric wiring.
- Cats, dogs and other pets should always be kept away from the product, as a sharp claw may result in damage to the heating element.
- Keep the controls always from drafty areas that may become damp or wet, such as an open window.

SAFETY ESSENTIALS

- Always turn off the electric current when the warming product is not in use, either by turn off the controller or unplugging from the wall outlet.
- Wrapping of the cord around the controls may damage the cord. Loop loosely when storing.
- NEVER iron your warming product.
- NEVER use dry cleaning fluid on this product. Cleaning solvents may damage the wiring insulation.
- If improper operation of this bedding is observed, discontinue its use immediately and consult the manufacturer or the dealer regarding its repair.
- Do not tuck the blanket or supply cord in a sofa or other furniture. All portions of the blanket or controller should be visible at all times.
- Wrapping of cord around the controller may damage the cord. Loop loosely when storing.
- Do not route electrical cords between the mattress and box spring. Do not allow the cords to be pinched.
- Do not use with rocking chairs, recliners, chair with casters or wheels or other furniture subject to movement.

CARE INSTRUCTIONS

To operate this warming product properly and safely, there are some critical safety precautions you need to follow. As with all electrical appliances, there is an inherent danger of overheating, fire or personal injury if the product is not used correctly. Please carefully read what follows before using the warming product.

Never use this warming product with:

- Infants or very small children;
- People with disabilities;
- Anyone who is immobile or cannot operate the controls properly;
- Anyone who is insensitive to heat (e.g. a person with poor circulation);
- Anyone who cannot or will not understand these directions.

WASHING INSTRUCTIONS

NEVER DRY CLEAN OR USE BLEACH. BEFORE WASHING, DISCONNECT ALL CORDS.

Do not dry-clean this bedding. Cleaning solvents may have a deteriorating effect on the insulation of the heating element.

MACHINE WASHING

NEVER submerge cords or control unit. Place textile portion without cords in the washing machine. Machine wash warm on gentle or delicate cycle.

HAND WASHING

Washing your warming product by hand is the best way to make it last. To do this, disconnect all cord(s). Wash your textile separately by hand in a tub of lukewarm(100°F) water using a small amount of mild laundry soap or detergent. Soak for 5 minutes. Next, gently work the textile up and down for five more minutes. NEVER rub or scrub. Rinse thoroughly in cool water until all traces of soap or detergent are gone. Squeeze excess water out by hand, NEVER twist. Do not use a wringer.

IMPORTANT INSTRUCTIONS

DRYING INSTRUCTIONS

NEVER USE COMMERCIAL DRYERS AT THE LAUNDROMAT-- THEY MAY BE EXTRA HOT AND COULD DAMAGE THE WIRING. DO NOT IRON. DO NOT PLUG IN UNTIL COMPLETELY DRY.

MACHINE DRY

To machine dry, put your product into a family washing machine and dryer on low heat below 40°C. Ensure that the textile has enough room to tumble freely. If blanket draws in during washing, while still damp gently stretch until it returns to its original size.

LINE DRY

You can line dry, simply by draping the warming blanket over two parallel clotheslines or a shower rod with the head and foot ends down. Do not reconnect warming products until they are completely dry. Do not use clothes pins that can pinch wires.

STORAGE

Store as you would any other bedding, folded in a dry place.

Q: The light on my contrller does not light up.

A: Assure that all the wire connections are tight and that the power cord is connected to an “energized” socket (try a lamp to verift that the outlet is working properly)

Q: The controller is lit but the heating pad does not heat up.

A: Test the product by folding the textile over on itself and turning on the controller. Ensure that controller lamp is lit. After approximately five minutes, carefully feel between the layers. Never leave the product turned on and folded up for more than a few minutes.

IMPORTANT INSTRUCTIONS

Q: Can I sit or lie on my heating pad?

A: Just sitting or lying on the heating pad will not harm it. Jumping on it or other similar abuse may damage it.

Q: Can this be plugged into a power strip?

A: Yes, you can. This is through the wire to the power board for use.

Q: My heating pad works fine but then seems to shut off.

A: The 2 hour automatic shutoff feature may have activated. Simply push the button again and your heating pad will heat for an additional ten hours or until you turn it off. If ten hours have not elapsed, check that all your connections are tight and the wall outlet is not turn off.

Q: My power supply cord sparked at the wall outlet when I plugged it in.

A: Yes, many electric appliances will sometimes “snap” due to the inrush of electricity when first plugged in. This is completely normal and nothing to be concerned about it.

Q: Why is my controller warm?

A: A small amount of heat is produced when transferring power from the wall to the blanket. This warmth is completely normal and is nothing to be concerned about.

Q: What type of plug do this have?

A: The heating pad plug is a normal plug, Which only be used in the house, Do not attempt to modify this plug.

PRODUCT SPECIFICATIONS

Model	HP170-001/HP170-002
Name	Heating Pad
Input	AC 120Vac/60Hz
Rated	135W
Heating	WARM - LOW - MED - HIGH
Default	2H
Product	17inches x 33inches
Material	100% Polyester
Heating Levels	PTC+NTC
Power Cord Length	2.75 Meters/108inches
Temperature	115°F-145°F/45°C-62°C
Storage Conditions	Laid out clean and dry

Email :support@caromio.net

Made in China

DANGER

TO REDUCE THE RISK OF BURNS, ELECTRIC SHOCK, AND FIRE, THIS PRODUCT MUST BE USED IN ACCORDANCE WITH THE FOLLOWING INSTRUCTIONS

1. DO NOT USE WHILE SLEEPING.
2. DO NOT USE ON AN INFANT.
3. THIS WARMER IS NOT TO BE USED BY OR ON AN INVALID, SLEEPING OR UNCONSCIOUS PERSON, OR A PERSON WITH POOR BLOOD CIRCULATION UNLESS CAREFULLY ATTENDED.
4. DO NOT USE ON AREAS OF INSENSITIVE SKIN.
5. BURNS CAN OCCUR REGARDLESS OF CONTROL SETTING, CHECK SKIN UNDER WARMER FREQUENTLY.
6. NEVER USE WARMER WITHOUT COVER IN PLACE.
7. DO NOT USE PINS OR OTHER METALLIC MEANS TO FASTEN THIS WARMER IN PLACE.
8. DO NOT STAND ON, SIT ON OR CRUSH WARMER – AVOID SHARP FOLDS.
9. NEVER PULL THIS WARMER BY THE SUPPLY CORD.
10. DO NOT USE THE CORD AS A HANDLE.
11. CAREFULLY EXAMINE INNER COVER BEFORE EACH USE. DISCARD THE WARMER IF INNER COVERING SHOWS ANY SIGNS OF DETERIORATION.
12. LOOP CORD LOOSELY WHEN STORING, TIGHT WRAPPING MAY DAMAGE CORD AND INTERNAL PARTS.
13. READ AND FOLLOW ALL INSTRUCTIONS ON BOX OR PACKED WITH WARMER BEFORE USING.

Email :support@caromio.net

Made in China