 


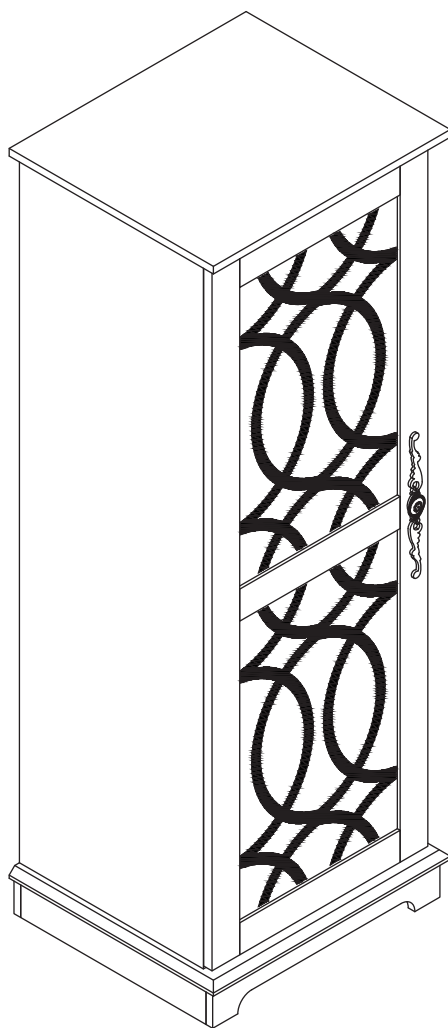

ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.



BEFORE STARTING

 
 
Before Using Product

- Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.

WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.
- Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.

QUICKFIT

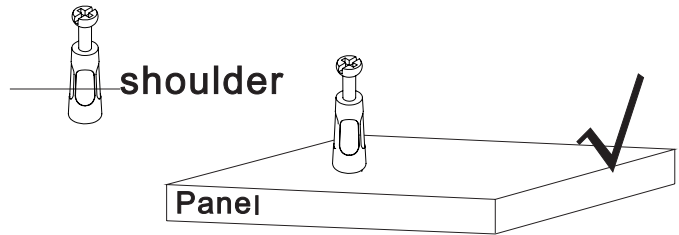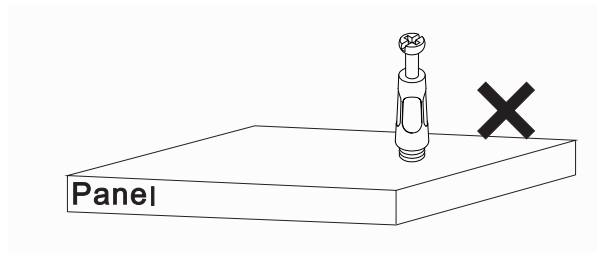


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

 CAM LOCK

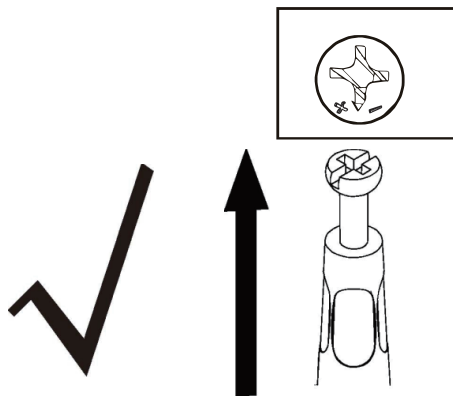


CORRECT

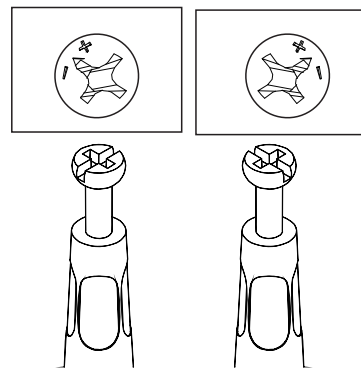 


WRONG

 When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.

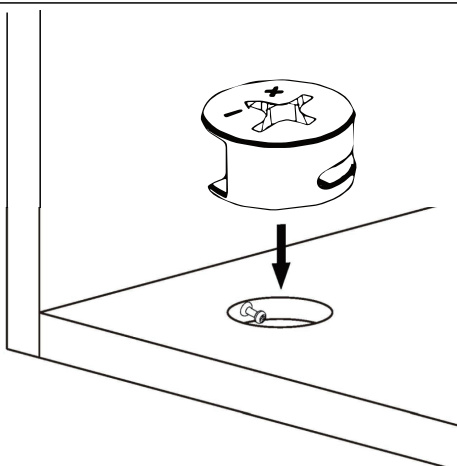

 
Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.

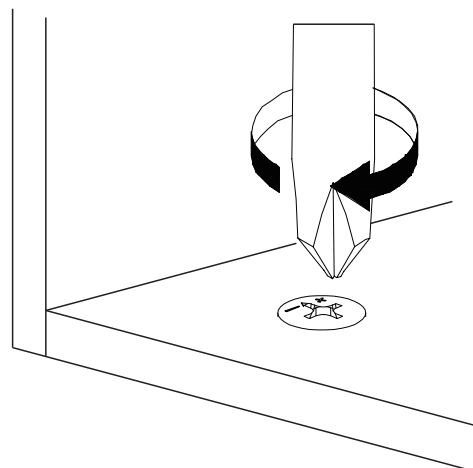

Turn cam lock clockwise to tighten.

Adjusting the doors / Réglage des portes / Ajuste de las puertas


FRONT VIEW | VUE DE FACE | VISTA FRONTAL

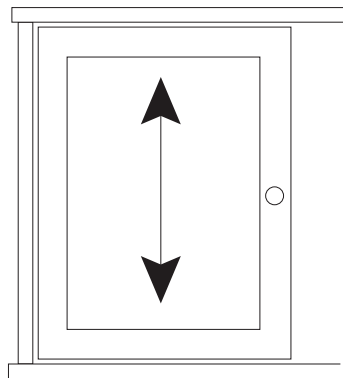 

UP AND DOWN
Use screws to adjust the gaps at the top and bottom of door.


HAUT ET BAS
Utilisez des vis pour ajuster les espaces en haut et en bas de la porte.

 ARRIBA Y ABAJO
Use tornillos para ajustar los espacios en la parte superior e inferior de la puerta.

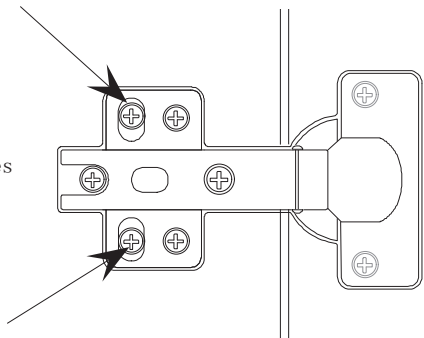

rt


FRONT VIEW | VUE DE FACE | VISTA FRONTAL

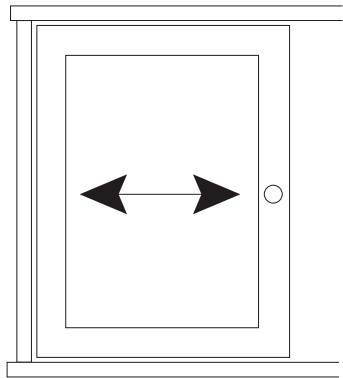 

LEFT AND RIGHT
Use screw to adjust the gaps at left and right of the door.


GAUCHE ET DROITE
Utilisez la vis pour ajuster les écarts à gauche et à droite de la porte.

 IZQUIERDA Y DERECHA
Use un tornillo para ajustar los espacios a la izquierda y a la derecha de la puerta.

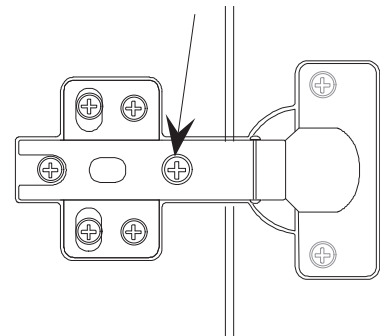

rt


TOP VIEW | VUE DE HAUT | VISTA SUPERIOR

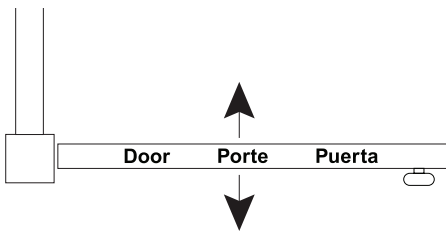 

IN AND OUT
Use screw to move the door in or out.


DEDANS ET DEHORS
Utilisez la vis pour déplacer la porte vers l'intérieur ou vers l'extérieur.

 DENTRO Y FUERA
Use un tornillo para mover la puerta hacia adentro o hacia afuera.

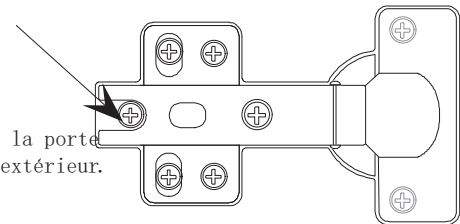


1

 x1

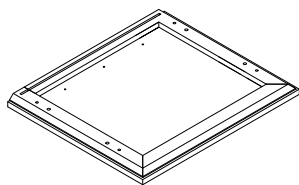


2

 x1

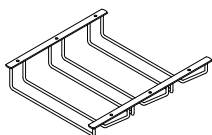


3

 x1




4

 x1

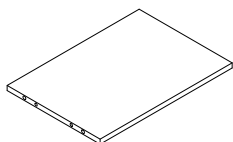


5

 x2

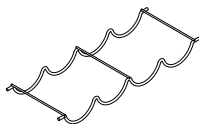


6

 x2

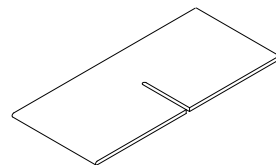


7

 x1

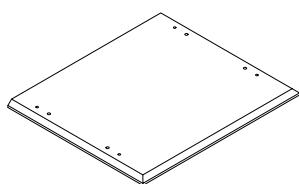


8

 x1

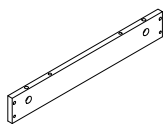


9

 x1

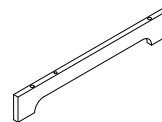


10

 x2




11

 x1

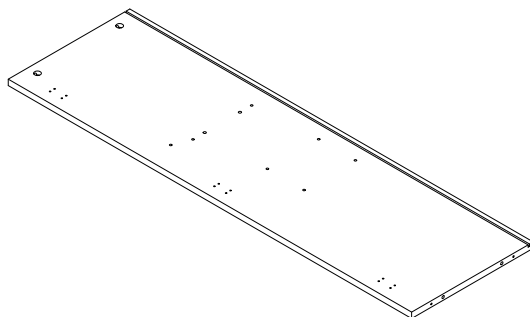

12

 x1

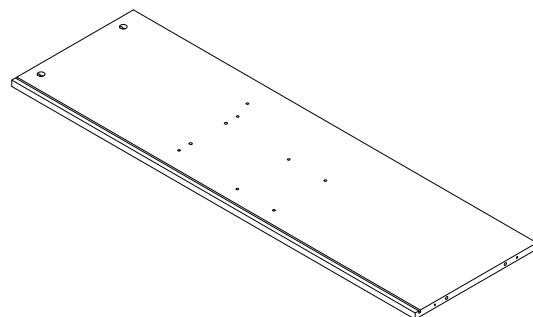


13

x1








14

 
x1

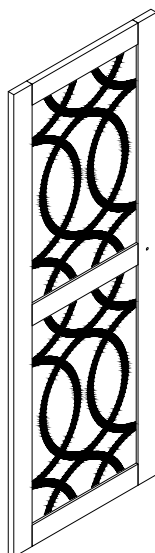


Hardware List

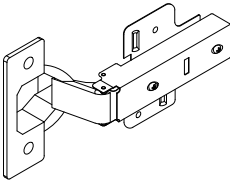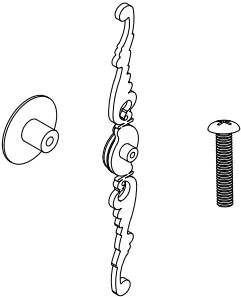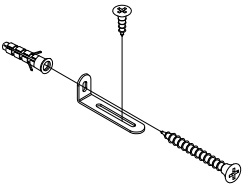     
A		Ø6*34mm	20+2 pcs
B		Ø15*9.5mm	20+2 pcs
C		Ø6*30mm	24+2 pcs
D		Ø3.5*12mm	6 pcs
E		Ø4*40mm	4 pcs
F			3 pcs
G			1 set
H		Ø3*17mm	6 sets
I		Ø3.5*15mm	18+2 pcs
J			2 sets
			1 pc

 Explosion Diagram

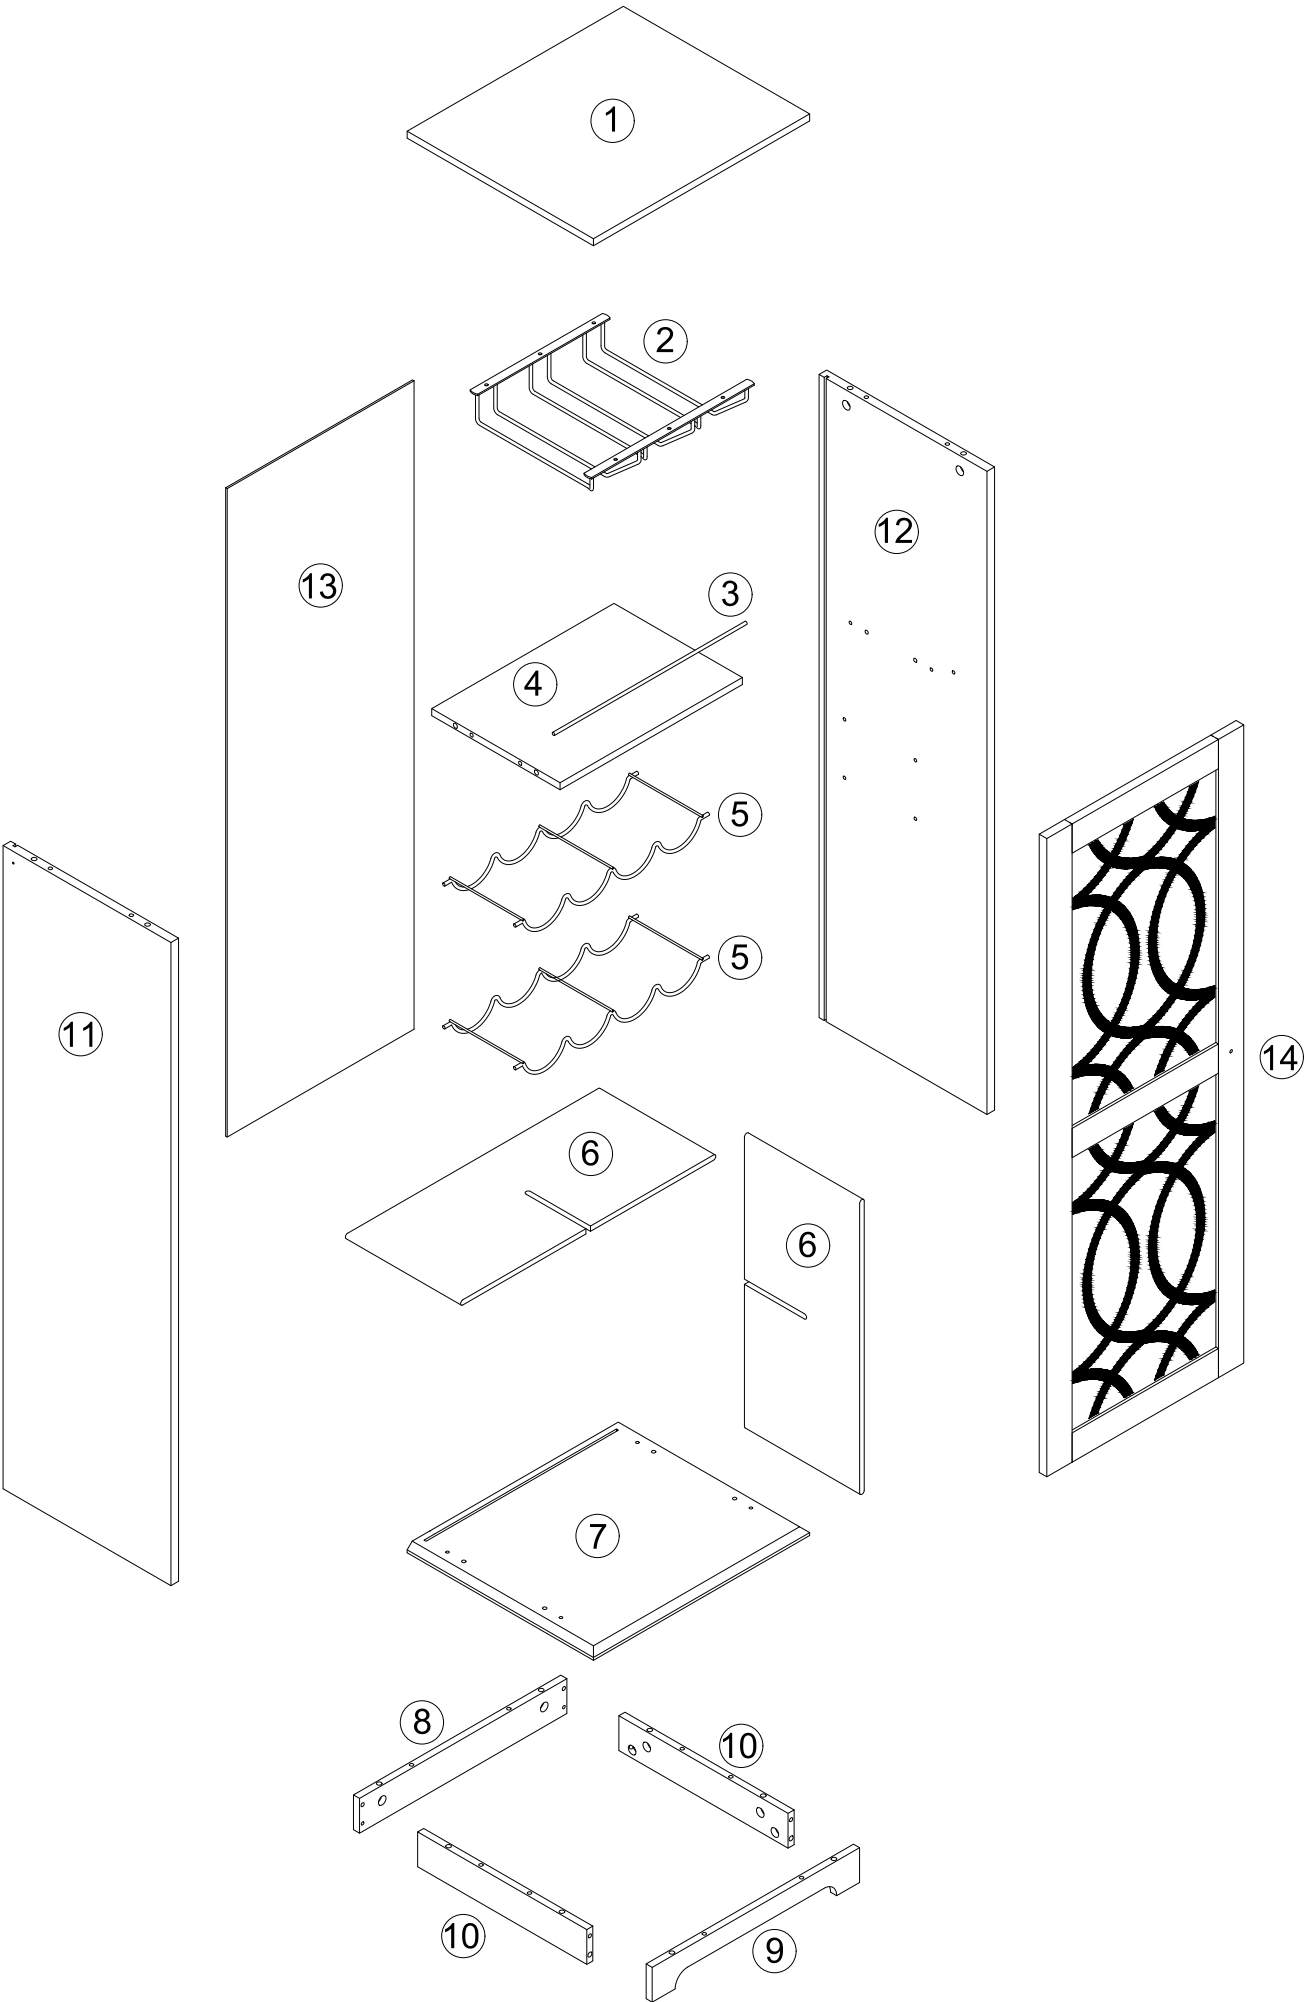


  
STEP 1

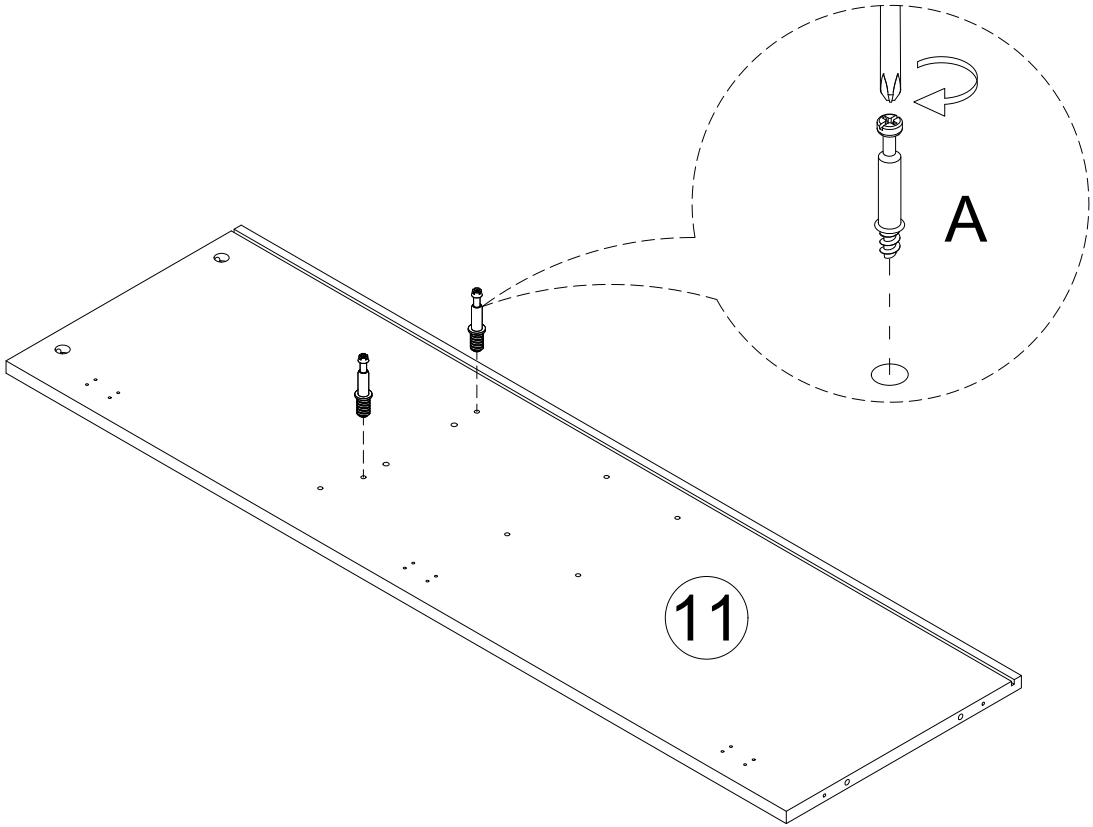



	A x 2pcs
--	-----------------

  STEP 2

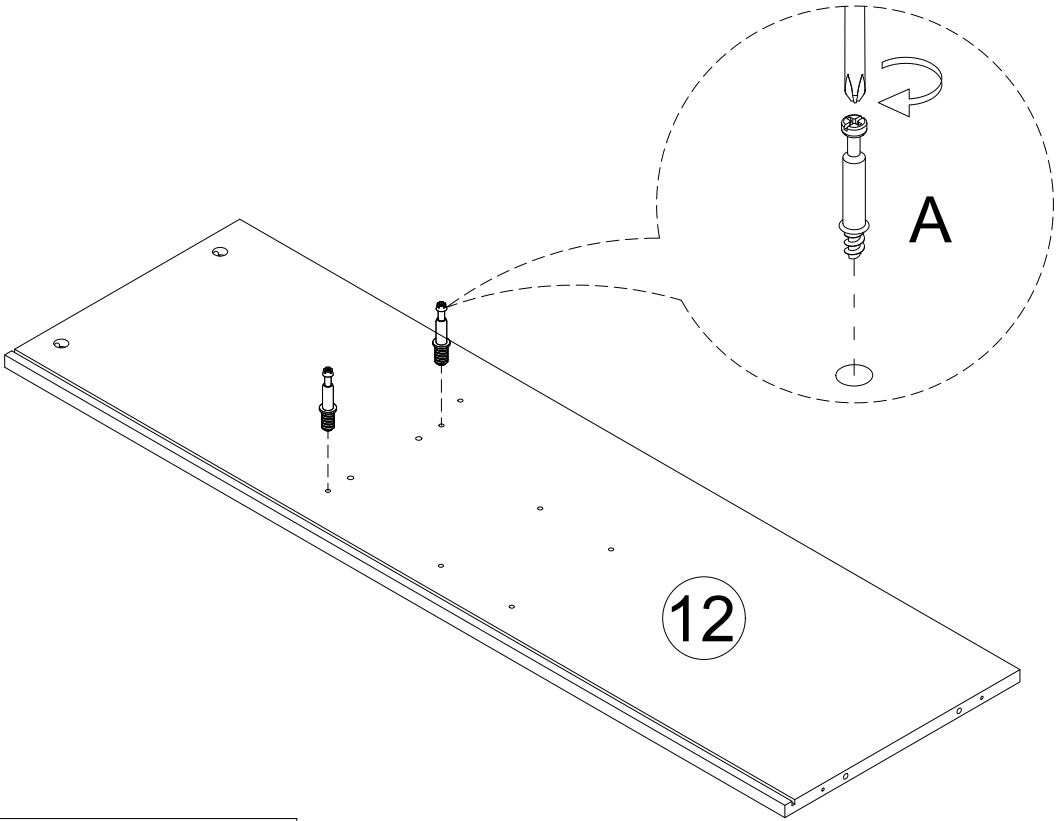



	A x 2pcs
--	-----------------

  STEP 3

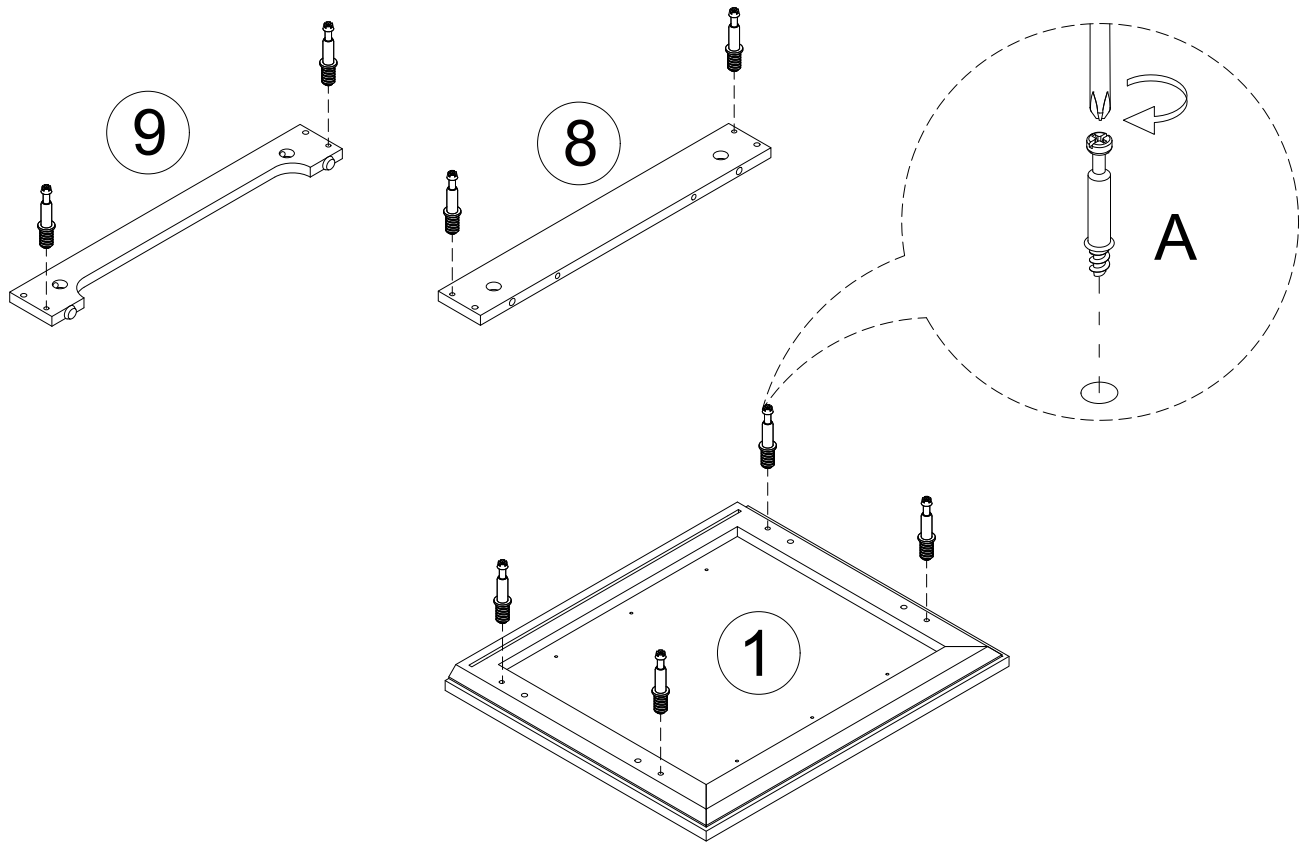


A x 8pcs

 
 
STEP 4

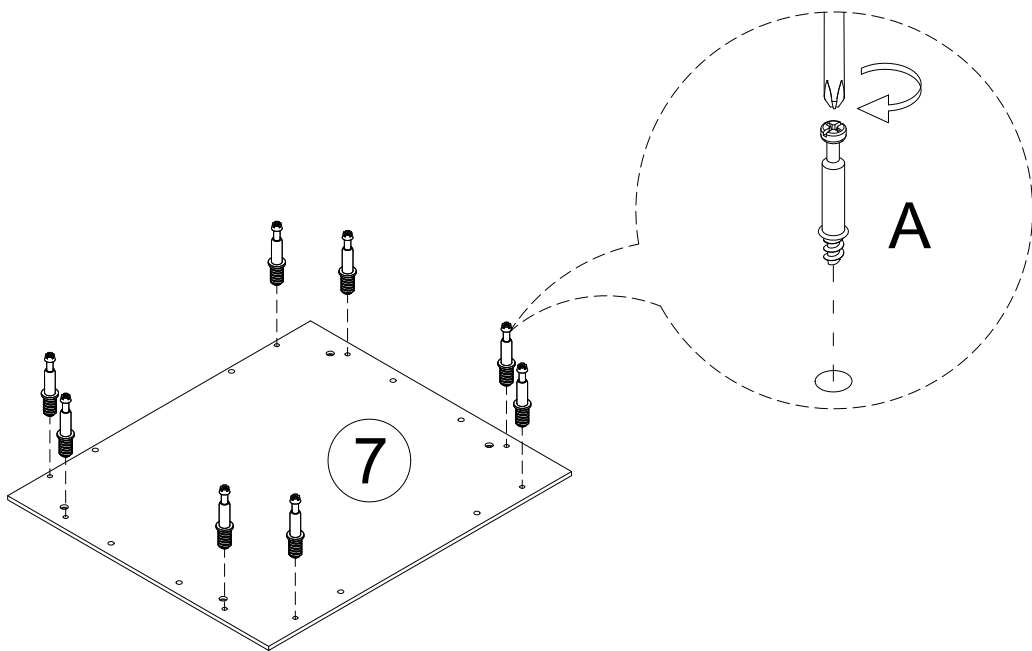


A x 8pcs

   
STEP 5

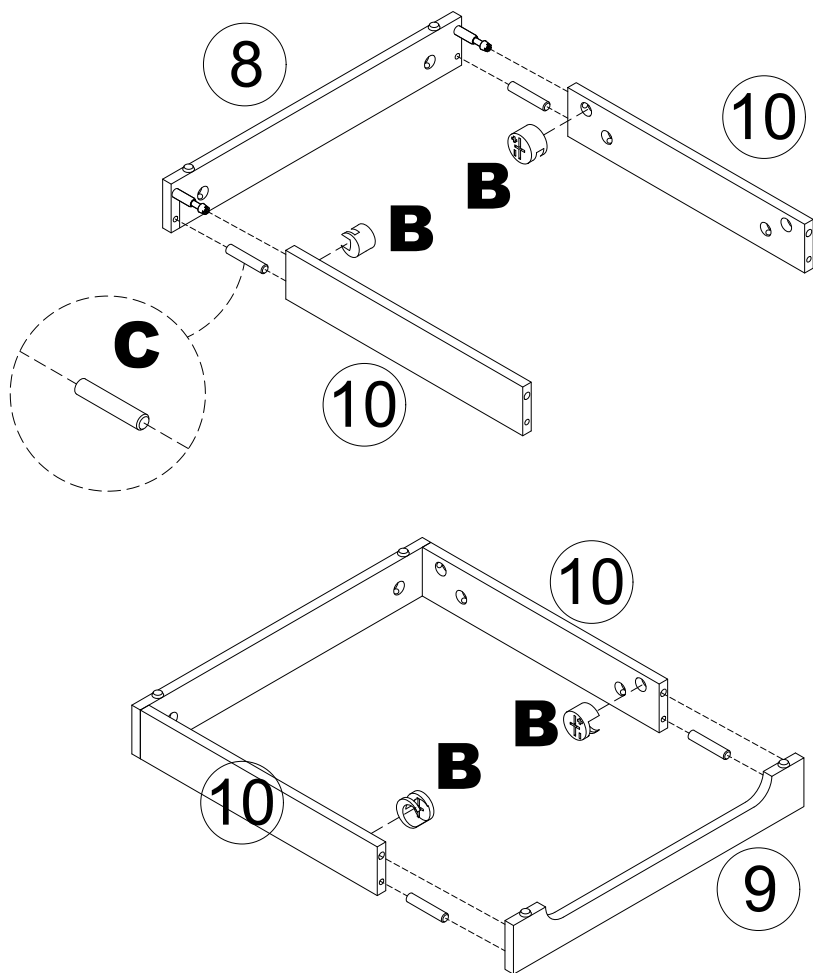



	C x 4pcs
	B x 4pcs

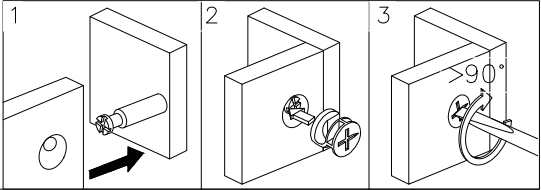 

  
STEP 6

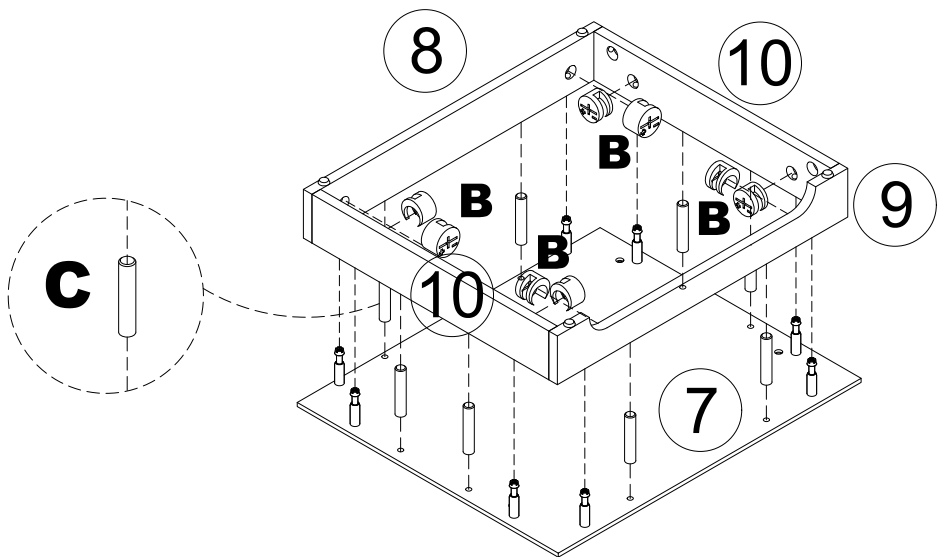



	C x 8pcs
	B x 8pcs

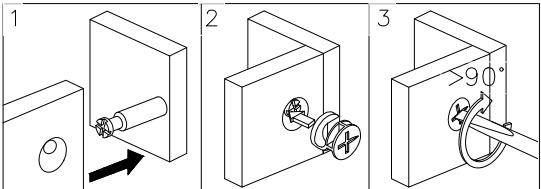 

  
STEP 7

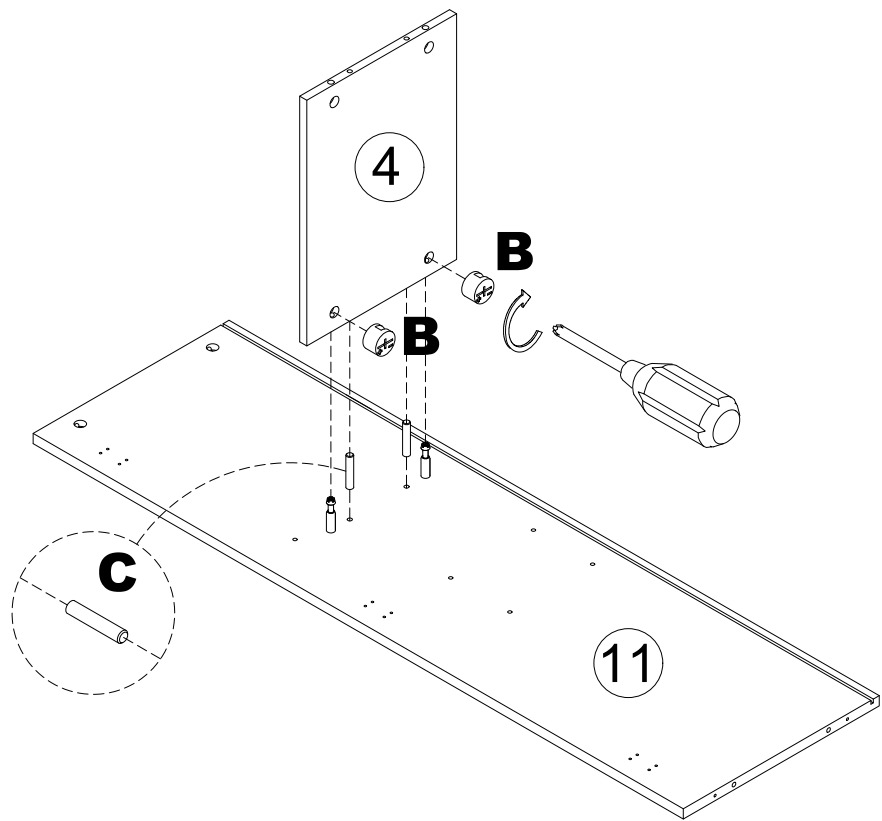



	C x 2pcs
	B x 2pcs

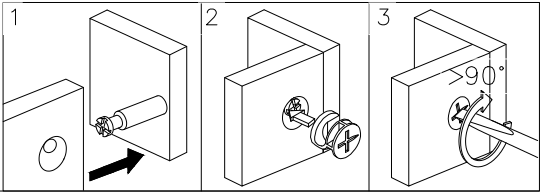 

  
STEP 8

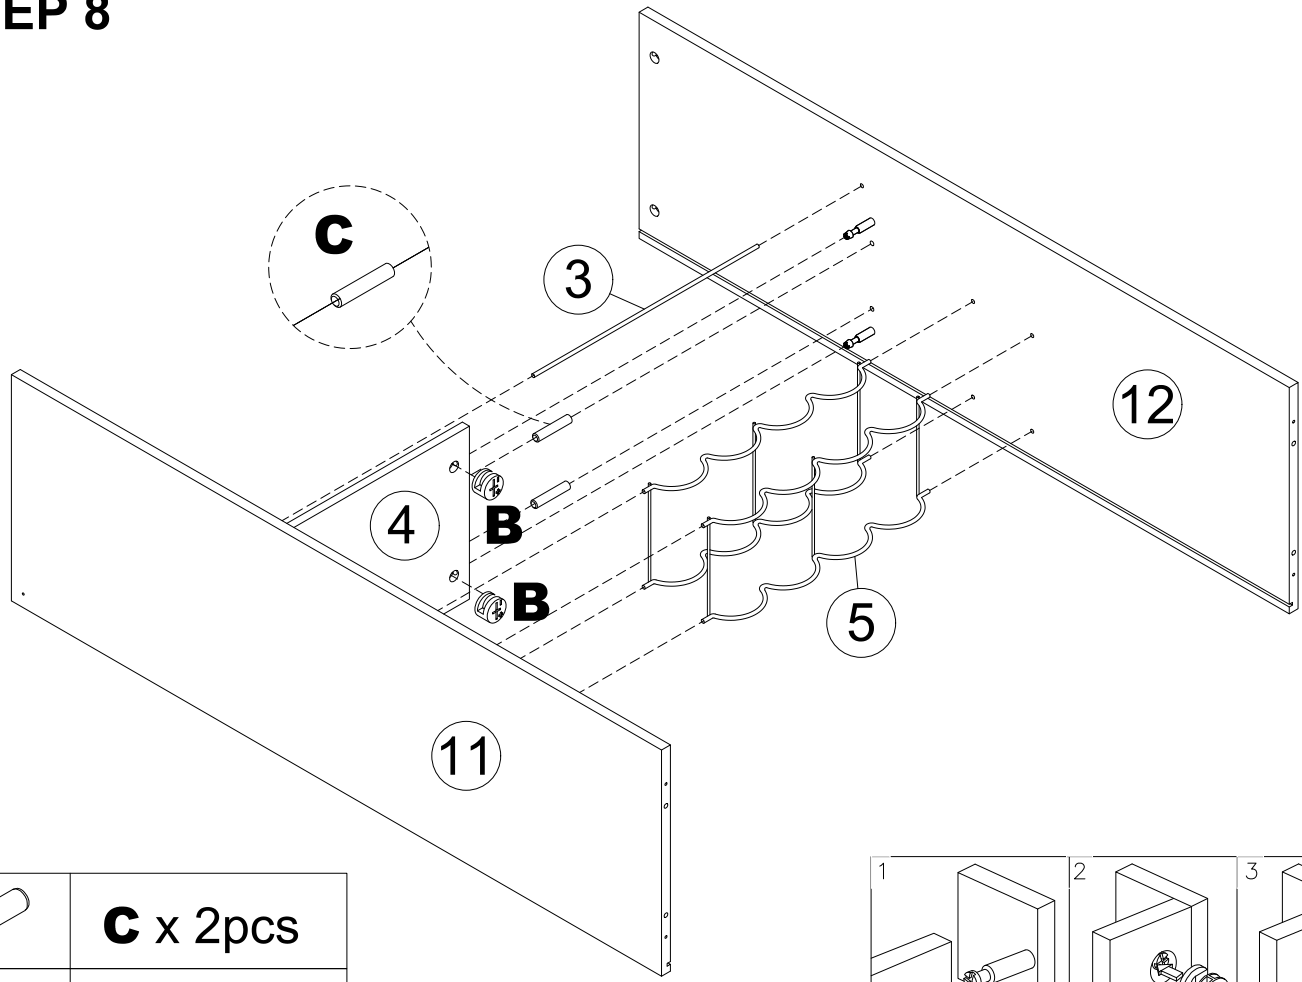


	C x 2pcs
	B x 2pcs

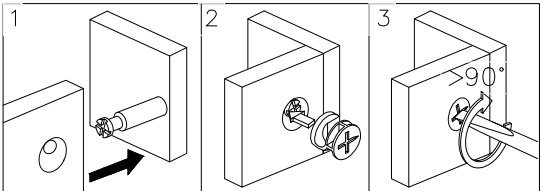 


  
STEP 9

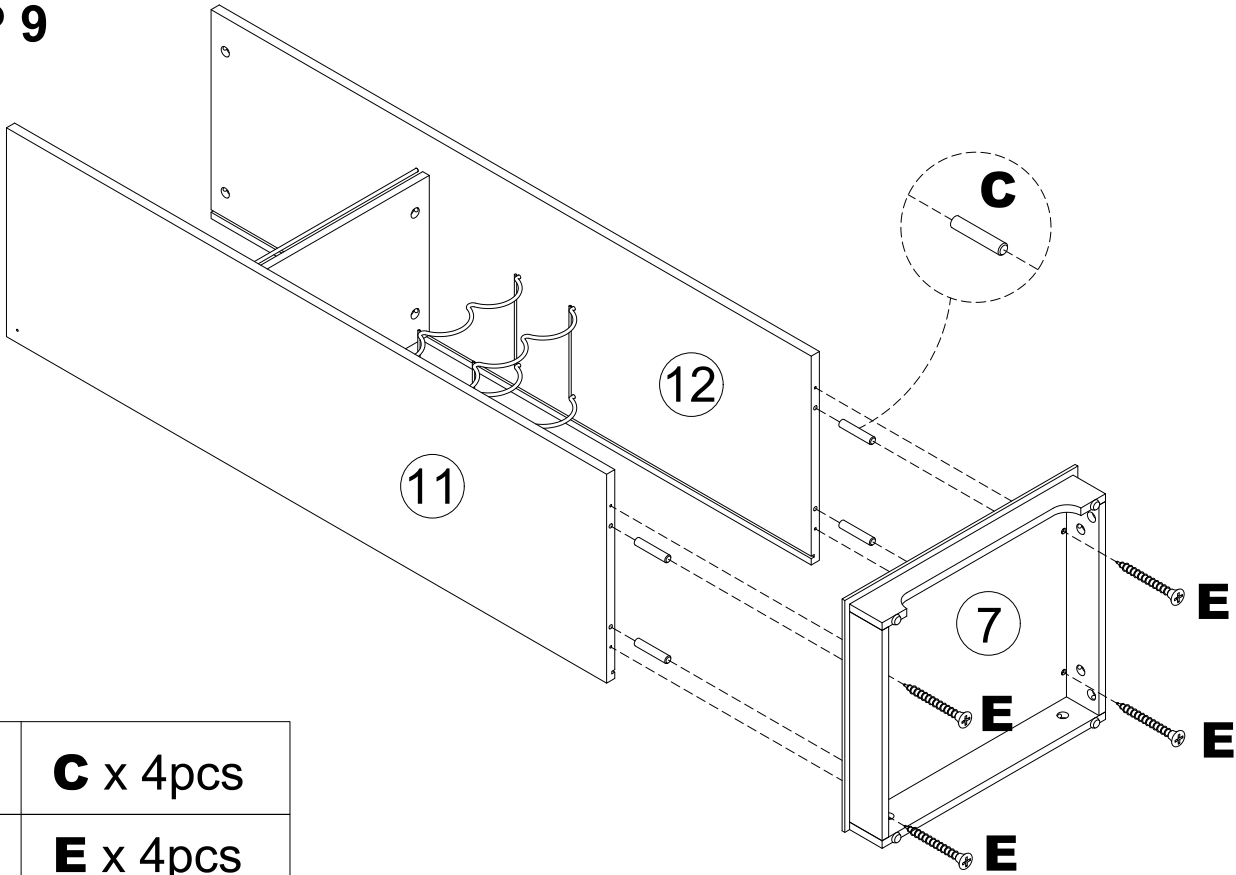


	C x 4pcs
	E x 4pcs

  STEP 10

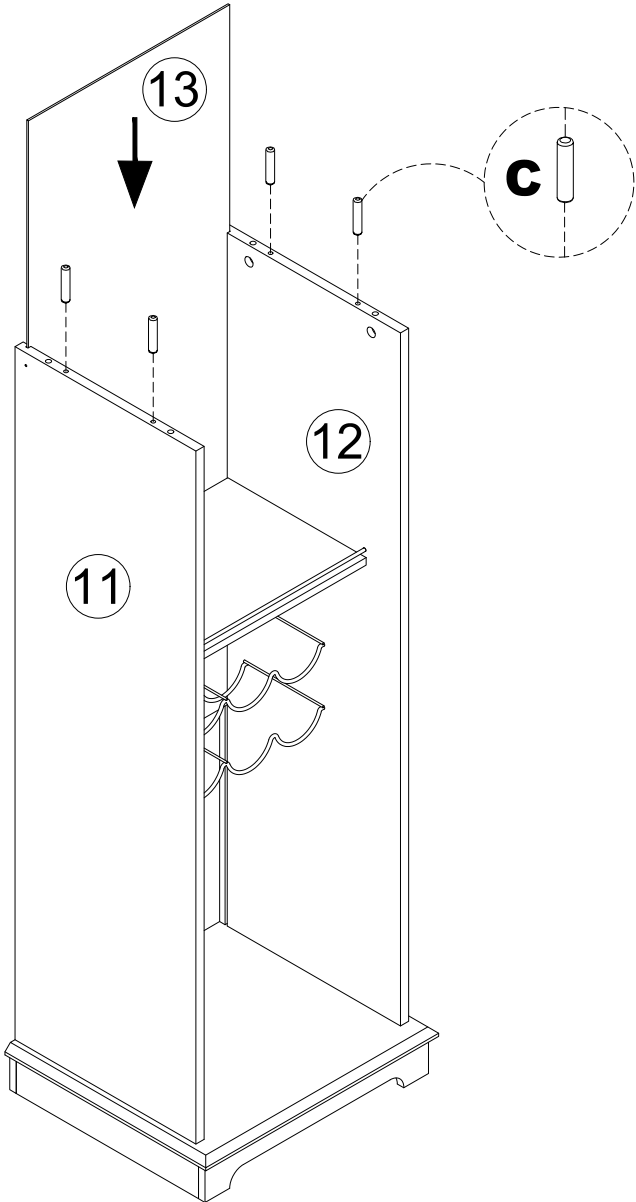


	C x 4pcs
--	-----------------

 STEP 11

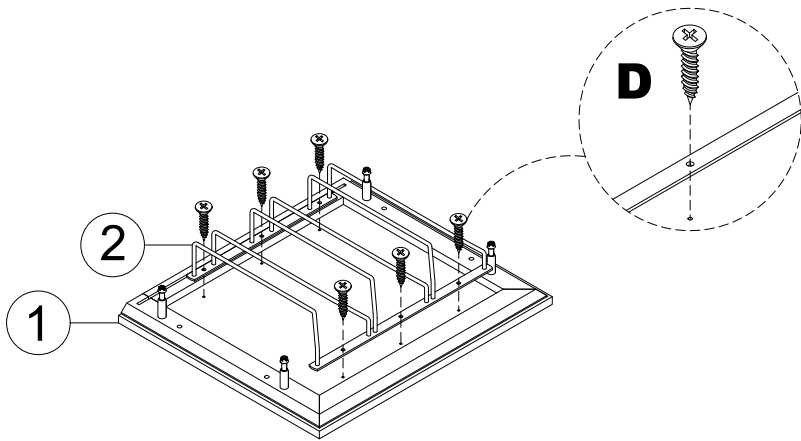


	D x 6pcs
---	-----------------

 
STEP 12

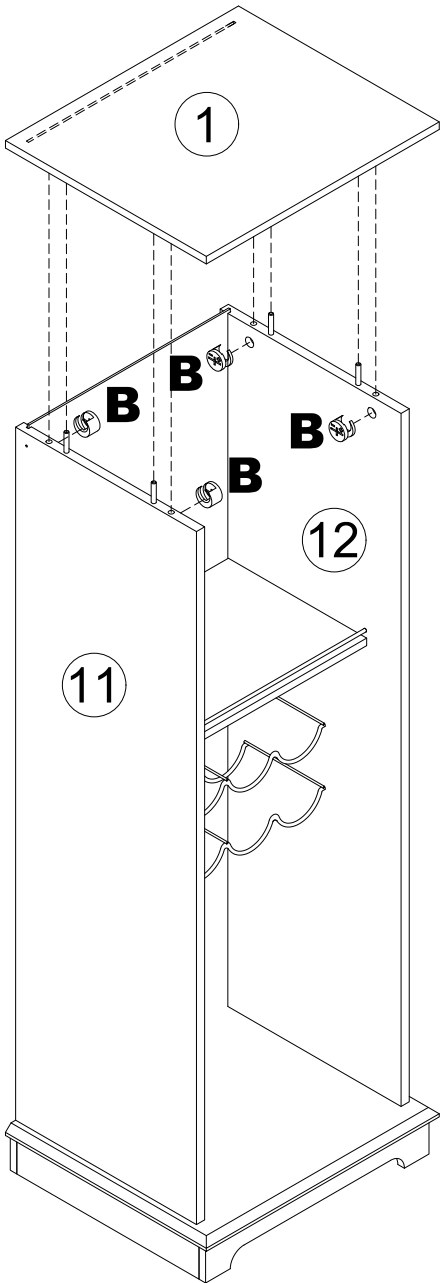


	B x 4pcs
--	-----------------

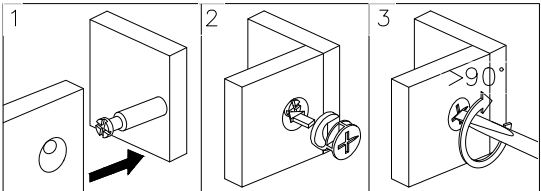 


  STEP 13


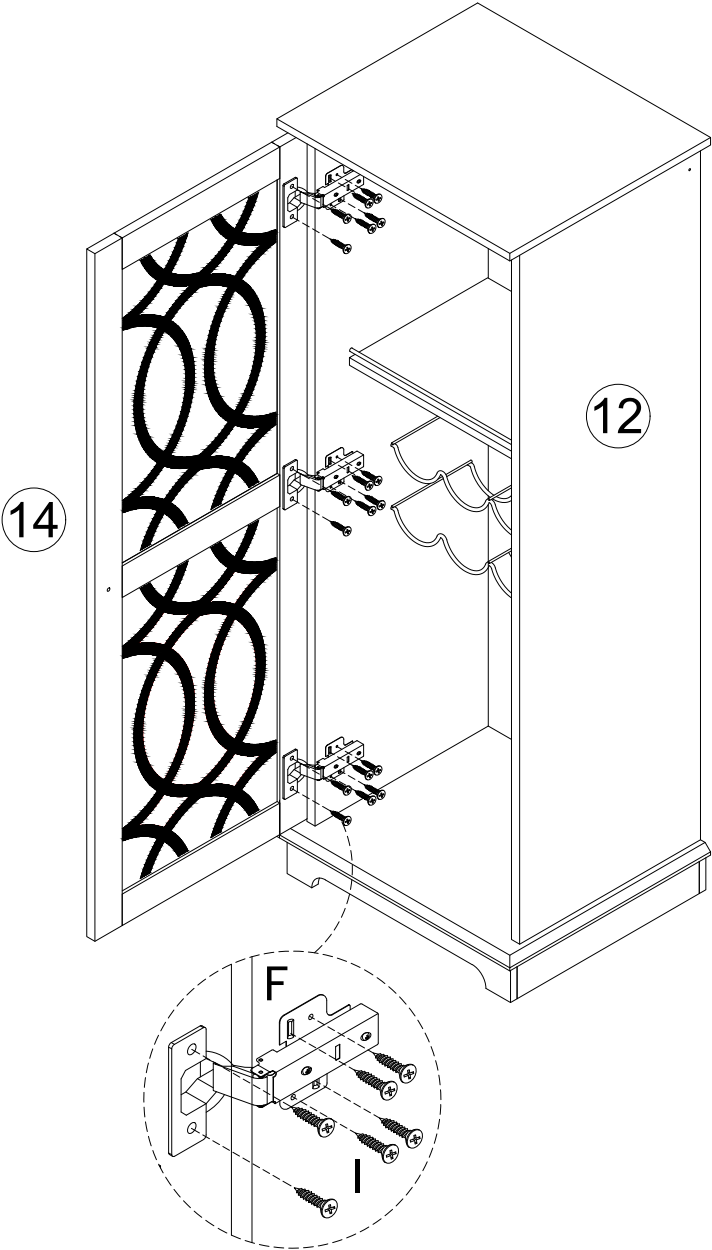


	I x 18pcs
	F x 3pcs




 
STEP 14

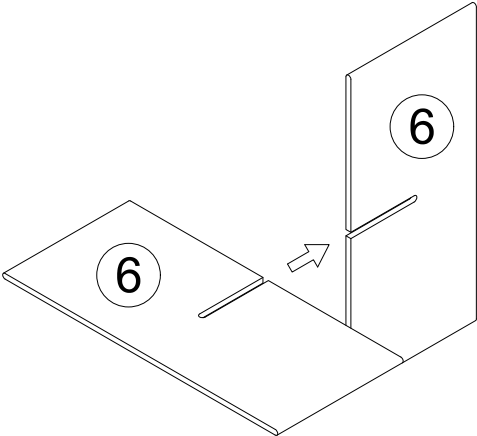

  STEP 15

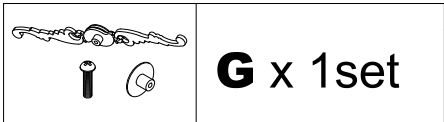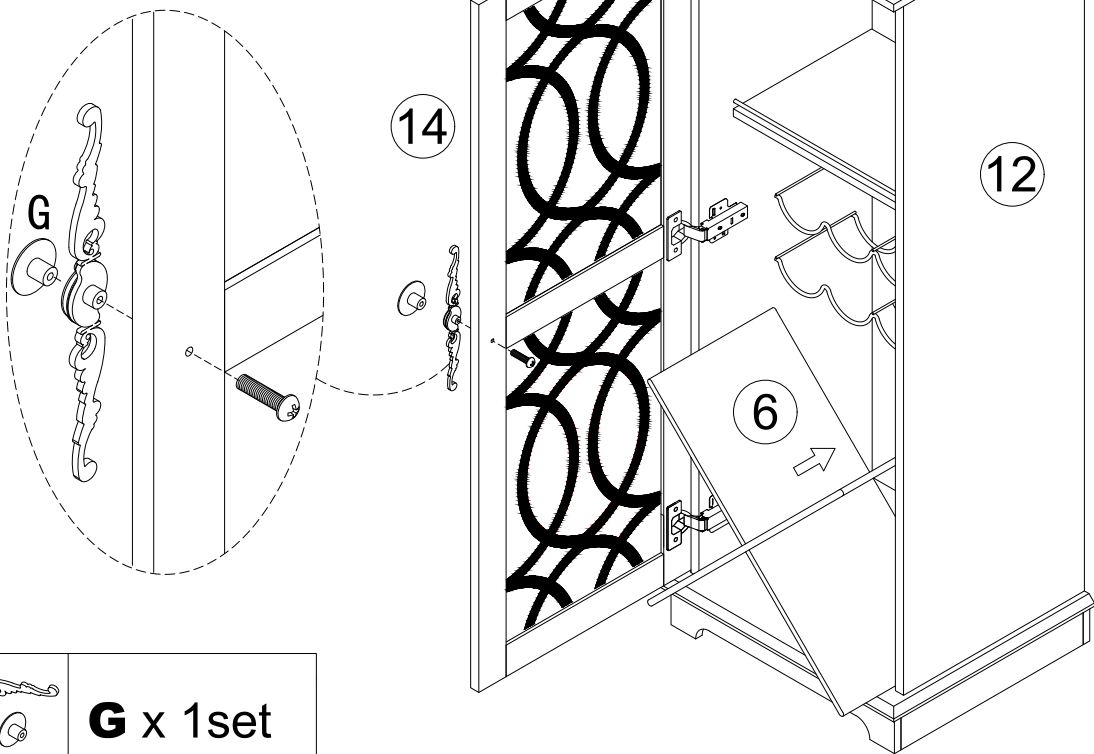

    
STEP 16 Be sure to install back plate buckle to prevent the cabinet from shaking.

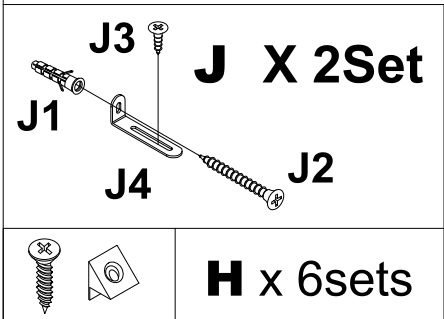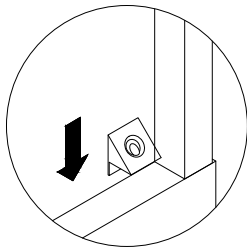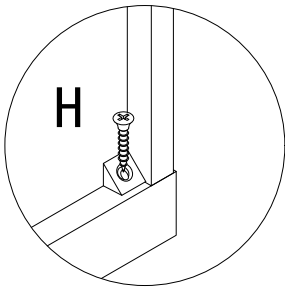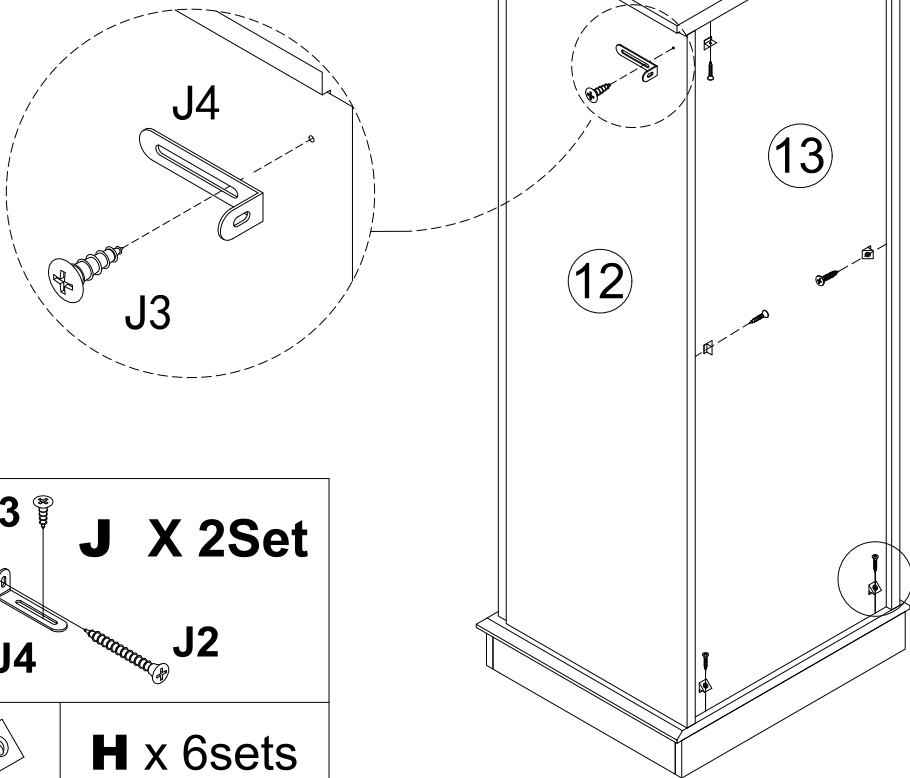

STEP 17


WARNING

 Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

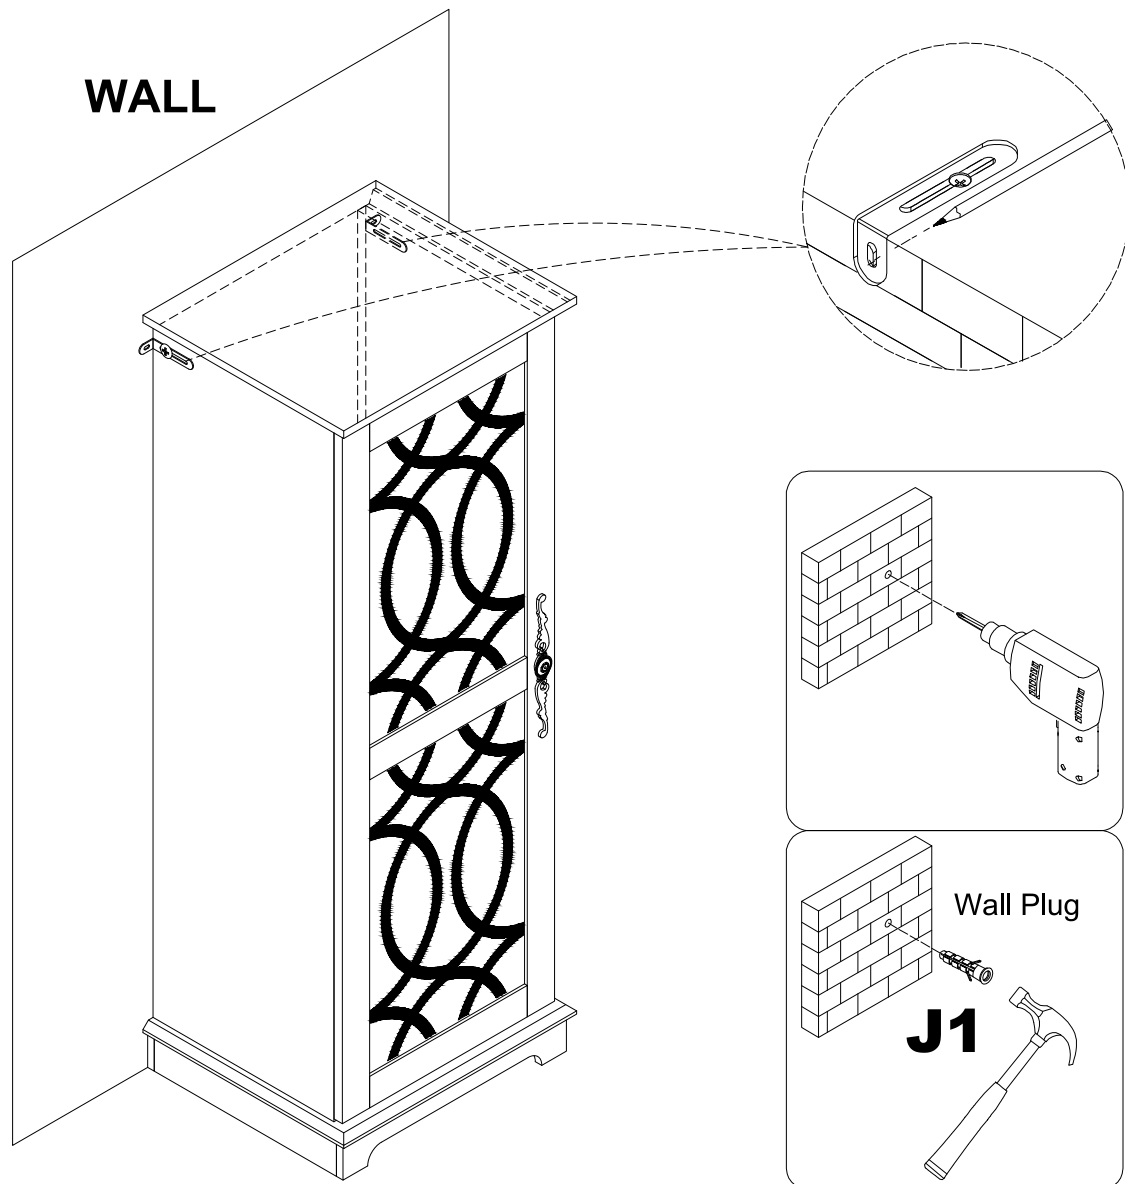

Note: Follow step

 Drill a hole in the wall, then hammer the J1 into the wall with a hammer.

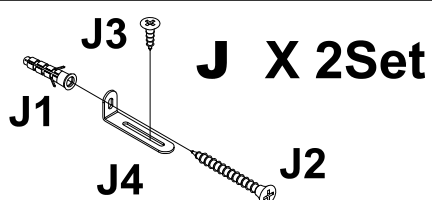

STEP 18

Note:Follow step
Link J4 and J1 with a J2 using a screwdriver,and assembly it tightly.

