


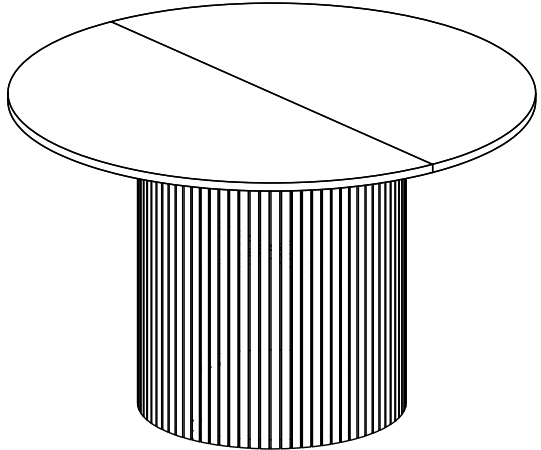


Ax2	Bx2	Cx2	Dx4	Ex2
Fx8	Gx6	Hx8 8x30mm	Ix20 6x14mm	Jx1

SPARE(Ersatzteile)


Fx1	Hx1 8x30mm	Ix1 6x14mm		

Step1

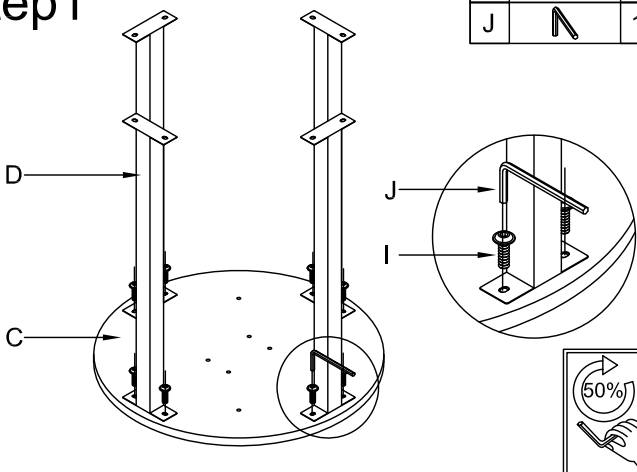


I		8
J		1

Step2

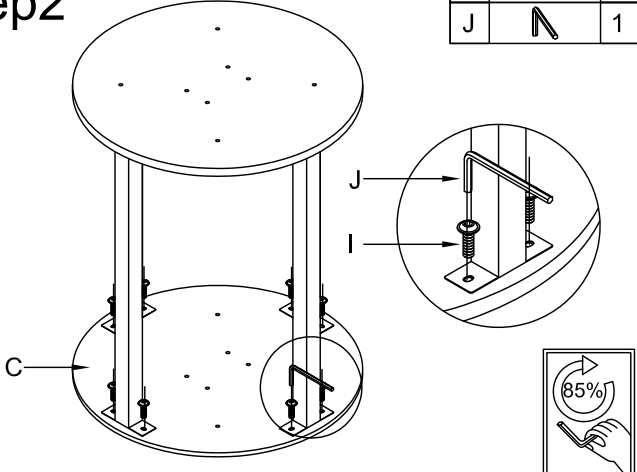


I		8
J		1

Step3

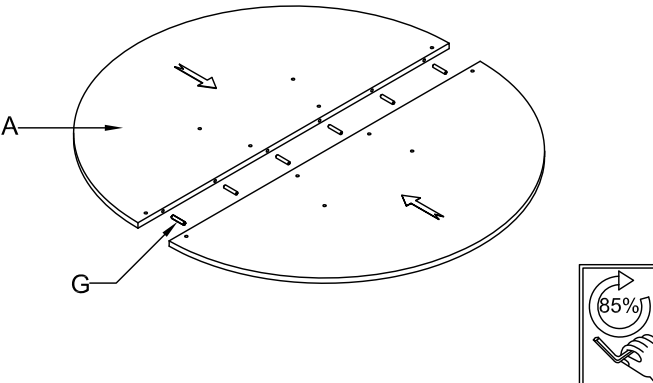


G		6
---	--	---

Step4

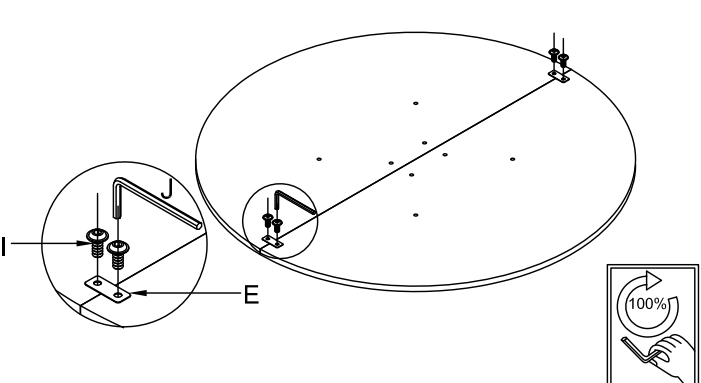

E		2
I		4
J		1

Step5

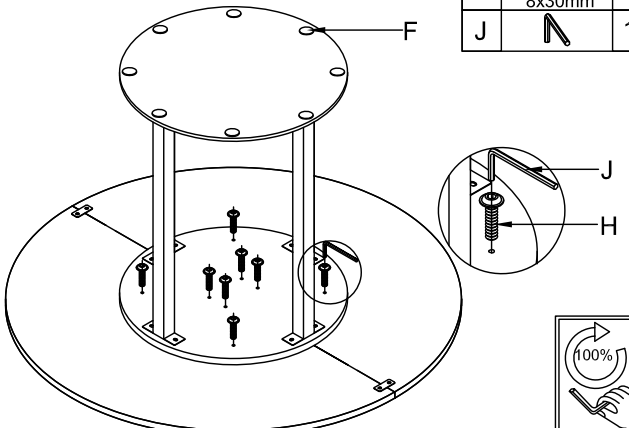

F		8
H		8
J		1

Step6

