 


ASSEMBLY INSTRUCTION

Component List

LABEL	SPARE PARTS	DESCRIPTION	QTY
H1		Gas Lift	1
H2		Base	1
H3		Seat	1
H4		Decoration circle	1
H5			5

Assembly Steps

--	--

NOTE:

Over max.load (300lb) may cause damage to the chair.