



INSTRUCTION MANUAL



FLOOR FAN

MODEL: A56-FF-001-20-CH

45CM, 110VV~, 50Hz, 100W

PLEASE READ THIS INSTRUCTION MANUAL BEFORE USE AND
RETAIN IT FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS

Before using the device, read this instruction manual carefully. Please keep this manual, warranty, receipt and, if possible, the carton and inner packaging.

1. Before connecting the appliance to the power supply, check that the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the appliance.
2. To avoid shock hazard, never allow the fan to come into contact with water.
3. Do not leave the device switched on without supervision.
4. Leave the device unplugged if it is unused and unattended, or when folding, disassembling or cleaning.
5. Ensure that the fan is switched off from the supply mains before removing the guard.
6. This appliance should not be used for purposes other than stated in the instructions accompanying this appliance.
7. This appliance must only be used for household purposes. All other uses are considered improper and as a result dangerous.
8. This appliance is not designed for commercial use.
9. Do not use the device outside.
10. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
11. This appliance is not intended for use by children or other persons without assistance or supervision if their physical sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.
12. The device should not be used by children. Keep the device and its cord away from children. Children should not play with the device.
13. Never use the device if power cord or plug are damaged. If the power cord is damaged, it must be replaced by the manufacturer, a service technician or a similarly qualified person in order to avoid a hazard.
14. Do not try to repair the device yourself or modify it in any way. All repairs should be performed at an authorized service center. Otherwise, the device loses warranty.
15. Do not allow the cord to hang over the corner of the table or counter, or be in contact with a hot surface, or be tangled.
16. Do not operate the device with wet hands or move it when it is plugged in.

17. Using accessories that are not recommended by the manufacturer may result in fire, electric shock or personal injury.
18. **Never insert fingers, pencils, or any other object through the grill or mesh when the fan is running.**
19. **Carefully with long hair, the rush of air can suck them in!**
20. Unplug the appliance before moving it from one place to another.
21. Always use on a on a firm and flat surface to prevent it from falling over.
22. Do not use the appliance without the protective grill or mesh.
23. Do not attempt to force the grill or mesh in order to make the fan turn or stop.
24. It is not advisable to expose people (esp. babies or older peoples) to a continuous cold air stream for a long time.
25. After use, switch off the device and disconnect it from the power supply by removing the plug from the socket.
ATTENTION: When removing the plug from the socket, do not pull on the cord.
26. The plug must be removed from the electrical socket after use, in the event of equipment failure and before cleaning.

ATTENTION: The user bears sole responsibility for damages resulting from improper use of equipment or use not in accordance with the operating instructions.


BEFORE FIRST USE

1. Unpack the product and keep all of the packaging until you are sure the device is undamaged and working properly.
2. Read the instruction manual carefully before the first use.
3. Take the product out of the packaging. Store and dispose all of the packaging in a responsible way. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.
4. **Before each use, check that the product is not damaged or worn. Do not use the product if any part of it is damaged.**

ASSEMBLING INSTRUCTIONS


1. Remove the packaging material from the fan control box.
2. Place the spacers on the mounting screws on the two extremities of the fan body.
3. Insert the base tube on the mounting screws.
4. Tighten the outer nuts to the fan base.

NOTE: When installing the control box make sure the electrical wires are located on the outside of the base.

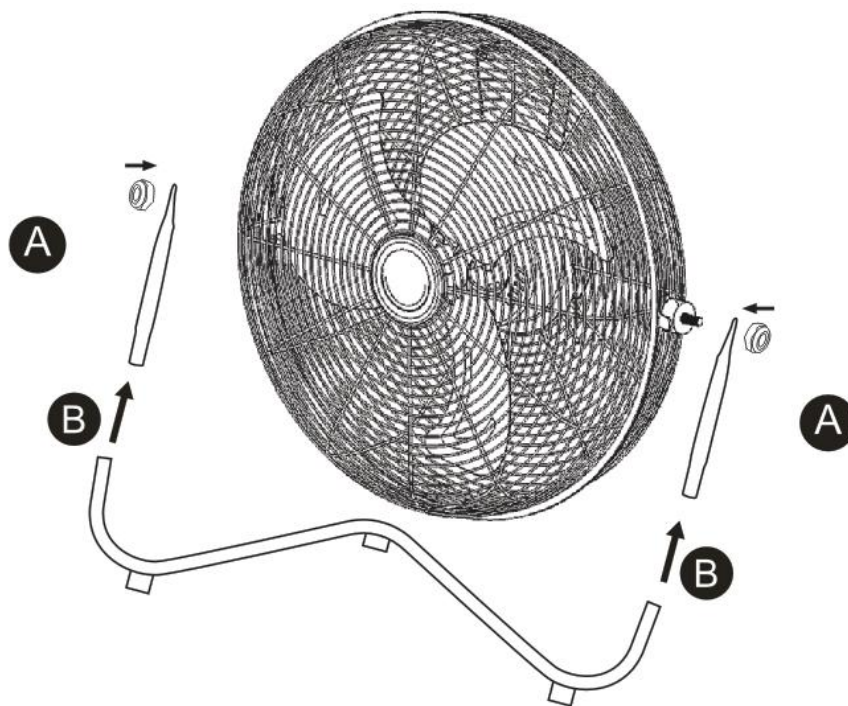

HOW TO USE

1. The device must be completely assembled before use.
2. Place the fan on a horizontal, dry surface.
3. Plug the power cord into 220-240 V AC, 50 Hz wall outlet.
CAUTION: The device might be switch on only when the guard (mesh) is completely closed.
4. The 3 speeds system is designed to give you maximum flexibility and to meet all your air circulation needs. 1-2-3 speed settings can be used for most of your requirements. High speed (level 3) should only be necessary in exceptional circumstances.
5. Select the desired speed by using the rotary control switch on the back of the device.

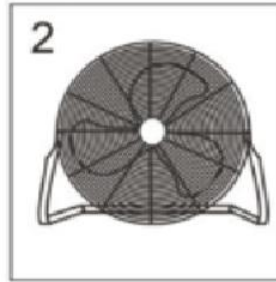

1. Low speed
2. Medium speed
3. High speed

6. Adjust to your desired air stream by tilting the fan assembly to the required position.
7. To turn off the fan, set the knob in the 0 position.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT USE THIS FAN WITH ANY SOLD STATE SPEED CONTROL DEVICE.

MAINTENANCE AND STORAGE

1. Before cleaning turn off the device (position 0) and disconnect the power cord from the socket.
2. Use only a soft, damp cloth to clean the fan.
3. Do not place the fan in water and never allow water to drip into the motor housing.
4. Do not use gasoline, paint thinner or other chemicals to clean the fan.
5. To clean the fan blades, remove the front cover and wipe the blades and cover.
6. Reassemble the fan by snapping the front cover (grill) into place.
7. Store the fan in its original box or cover the fan to protect it from dust.
8. Store it in a cool, dry place.
- 9.

DISPOSAL OF PACKAGING

The materials from the product packaging are suitable for use as a secondary raw material and are marked with the recycling symbol. Disposal of the packaging should be made in accordance with local regulations.

The packaging materials should be protected from children as they constitute a source of danger.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



In accordance with the provisions of the Act of 29 July 2005 on waste electrical and electronic equipment, it is forbidden to dispose of wasted equipment marked with a crossed-out wheellie bin symbol.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

In order to obtain information on where and how environmentally safe recycling of this product, household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.