


INSTALLATION


Product Manual

Version: 150320US-01-26A-XD

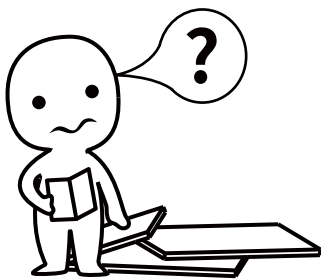


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

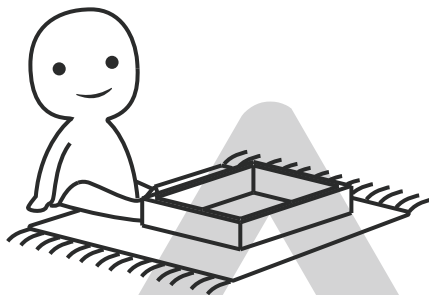



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

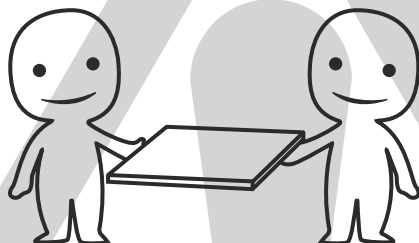

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

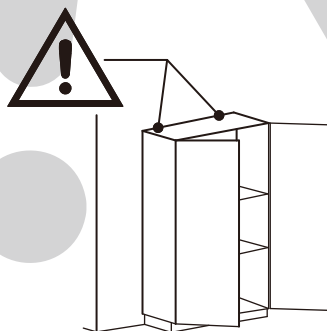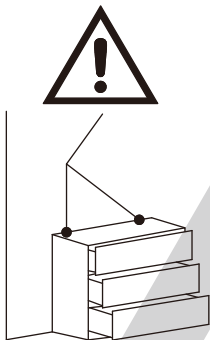

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


 
 
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




Please prepare the following tools

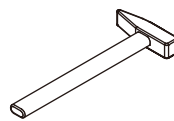


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 54+4



Ø 6 x 35 mm

 B x 67+4



Ø 15 x 10 mm

C x 41+4



Ø 6 x 30 mm

D x 38+2



Ø 4 x 35 mm

E x 72+4



 
Ø 3 x 12 mm

F x 56+4




Ø 4 x 14 mm


G x 4



H x 3

 

J x 4

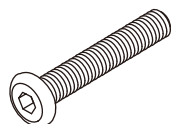


Ø 6 x 50 mm

K x 17



Ø 6 x 10 mm

 L x 6



Ø 8 x 40 mm

 
M x 6



N x 6



O x 8



P x 10+1














Ø 4 x 14 mm


Q x 4




Ø 4 x 18 mm

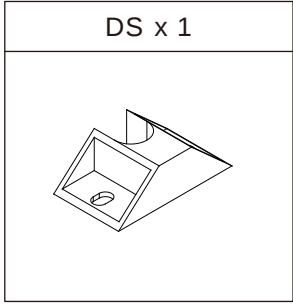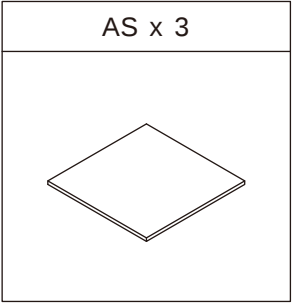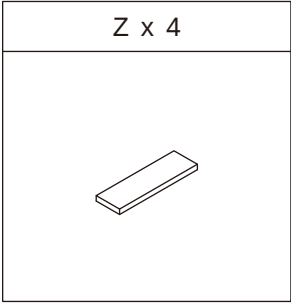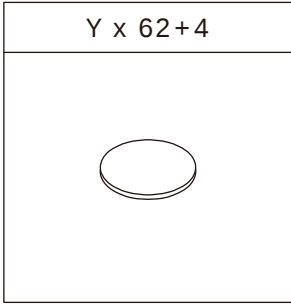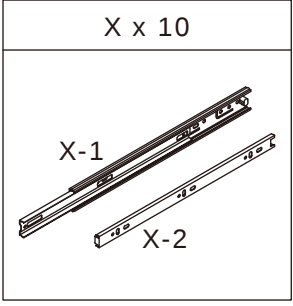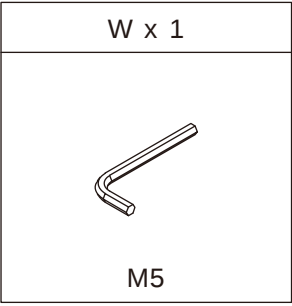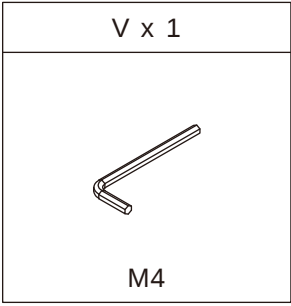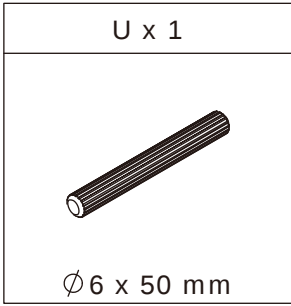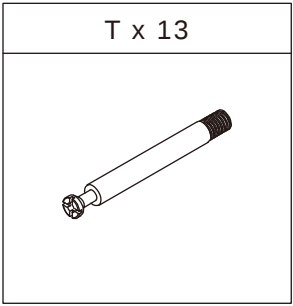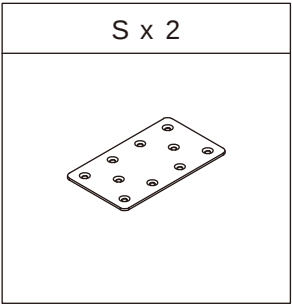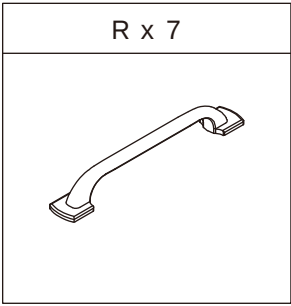


③ x1

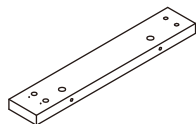


④ x1

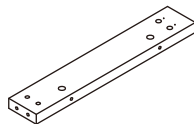


⑤ x2

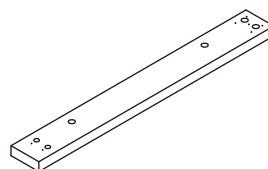


⑥ x2

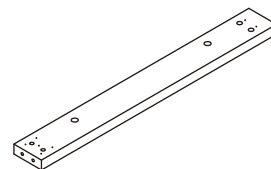


⑦ x3

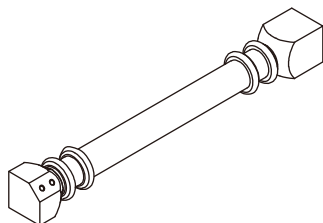


⑧ x1

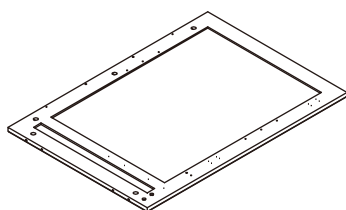


⑨ x1

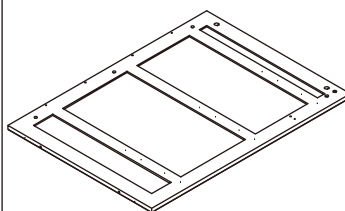


⑩ x1

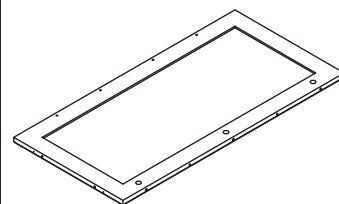


⑪ x1

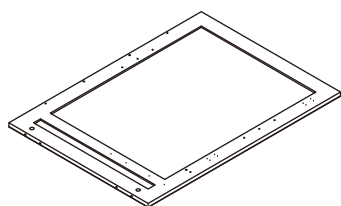


⑫ x1

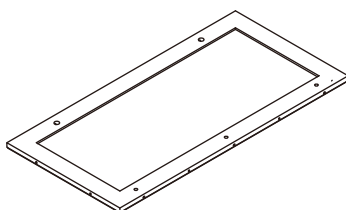


⑬ x1

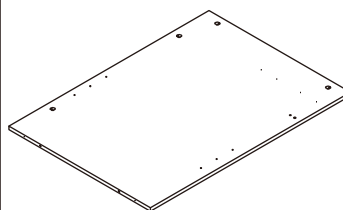


⑭ x1

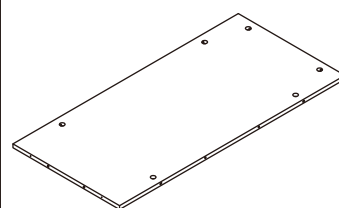


⑮ x1

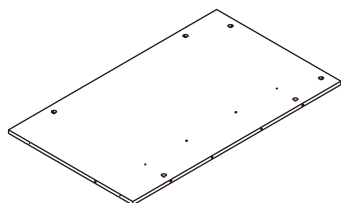


⑯ x1

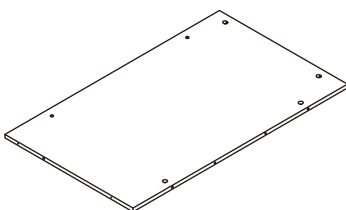


⑰ x1

 


⑱ x1

 


⑲ x1

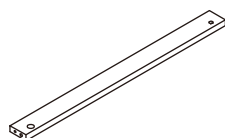


⑳ x1



















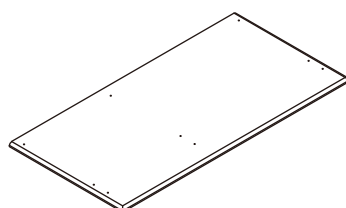



㉑ x1

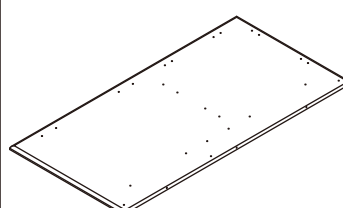

㉒ x2

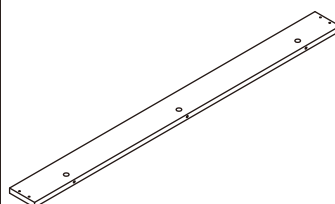

    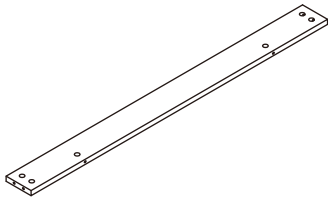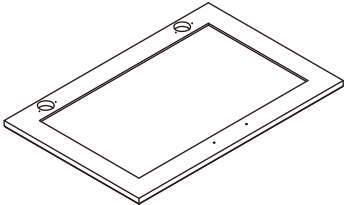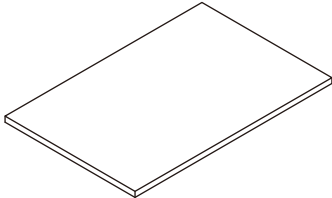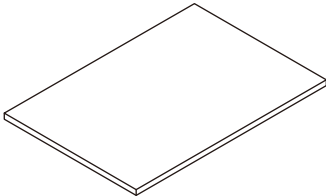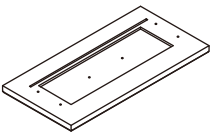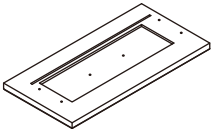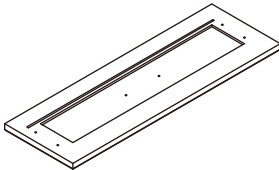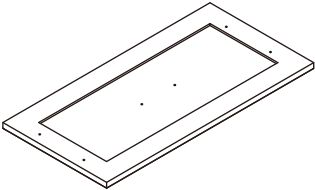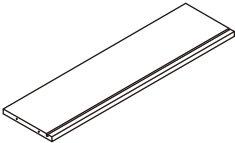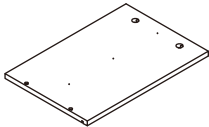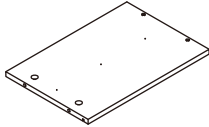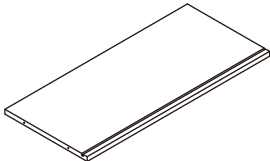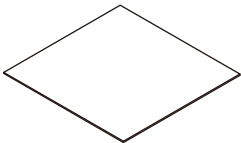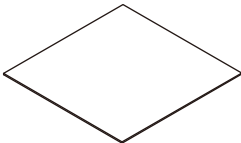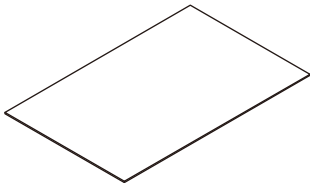②3 x2 	②4 x2 	②5 x1 	②6 x1 
②7 x1 	②8 x1 	②9 x1 	③0 x2 
③1 x3 	③2 x3 	③3 x1 	③4 x1 
③5 x1 	③6 x2 	③7 x2 	③8 x2 
③9 x1 	④0 x1 	④1 x3 	
6/63			

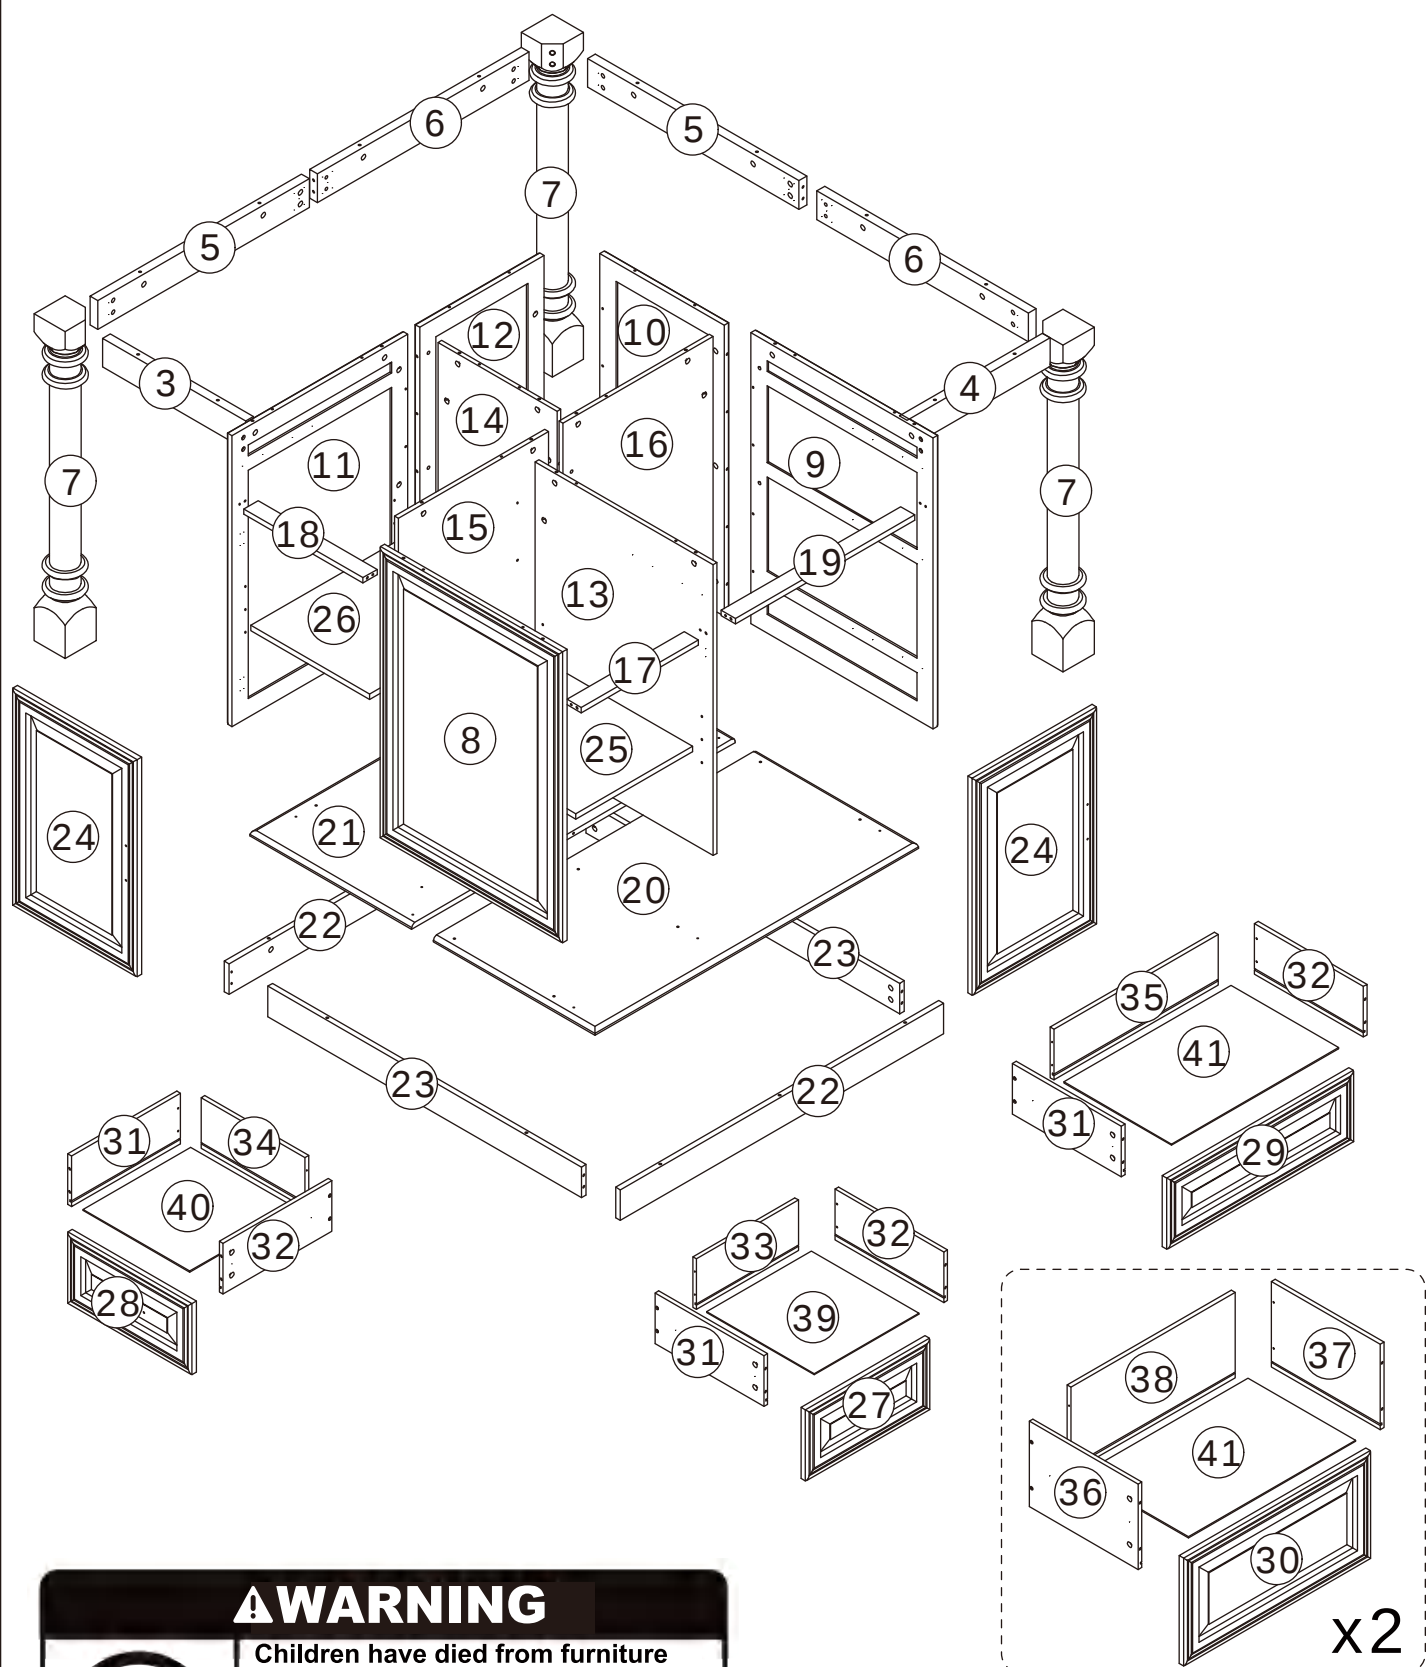


⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


*This is a permanent label.
Do not remove!*

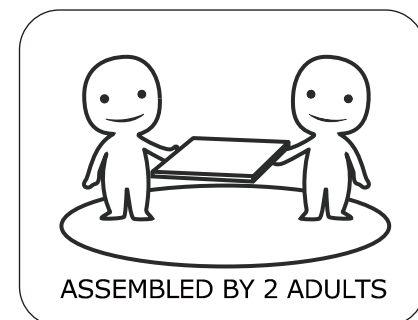




**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.





Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

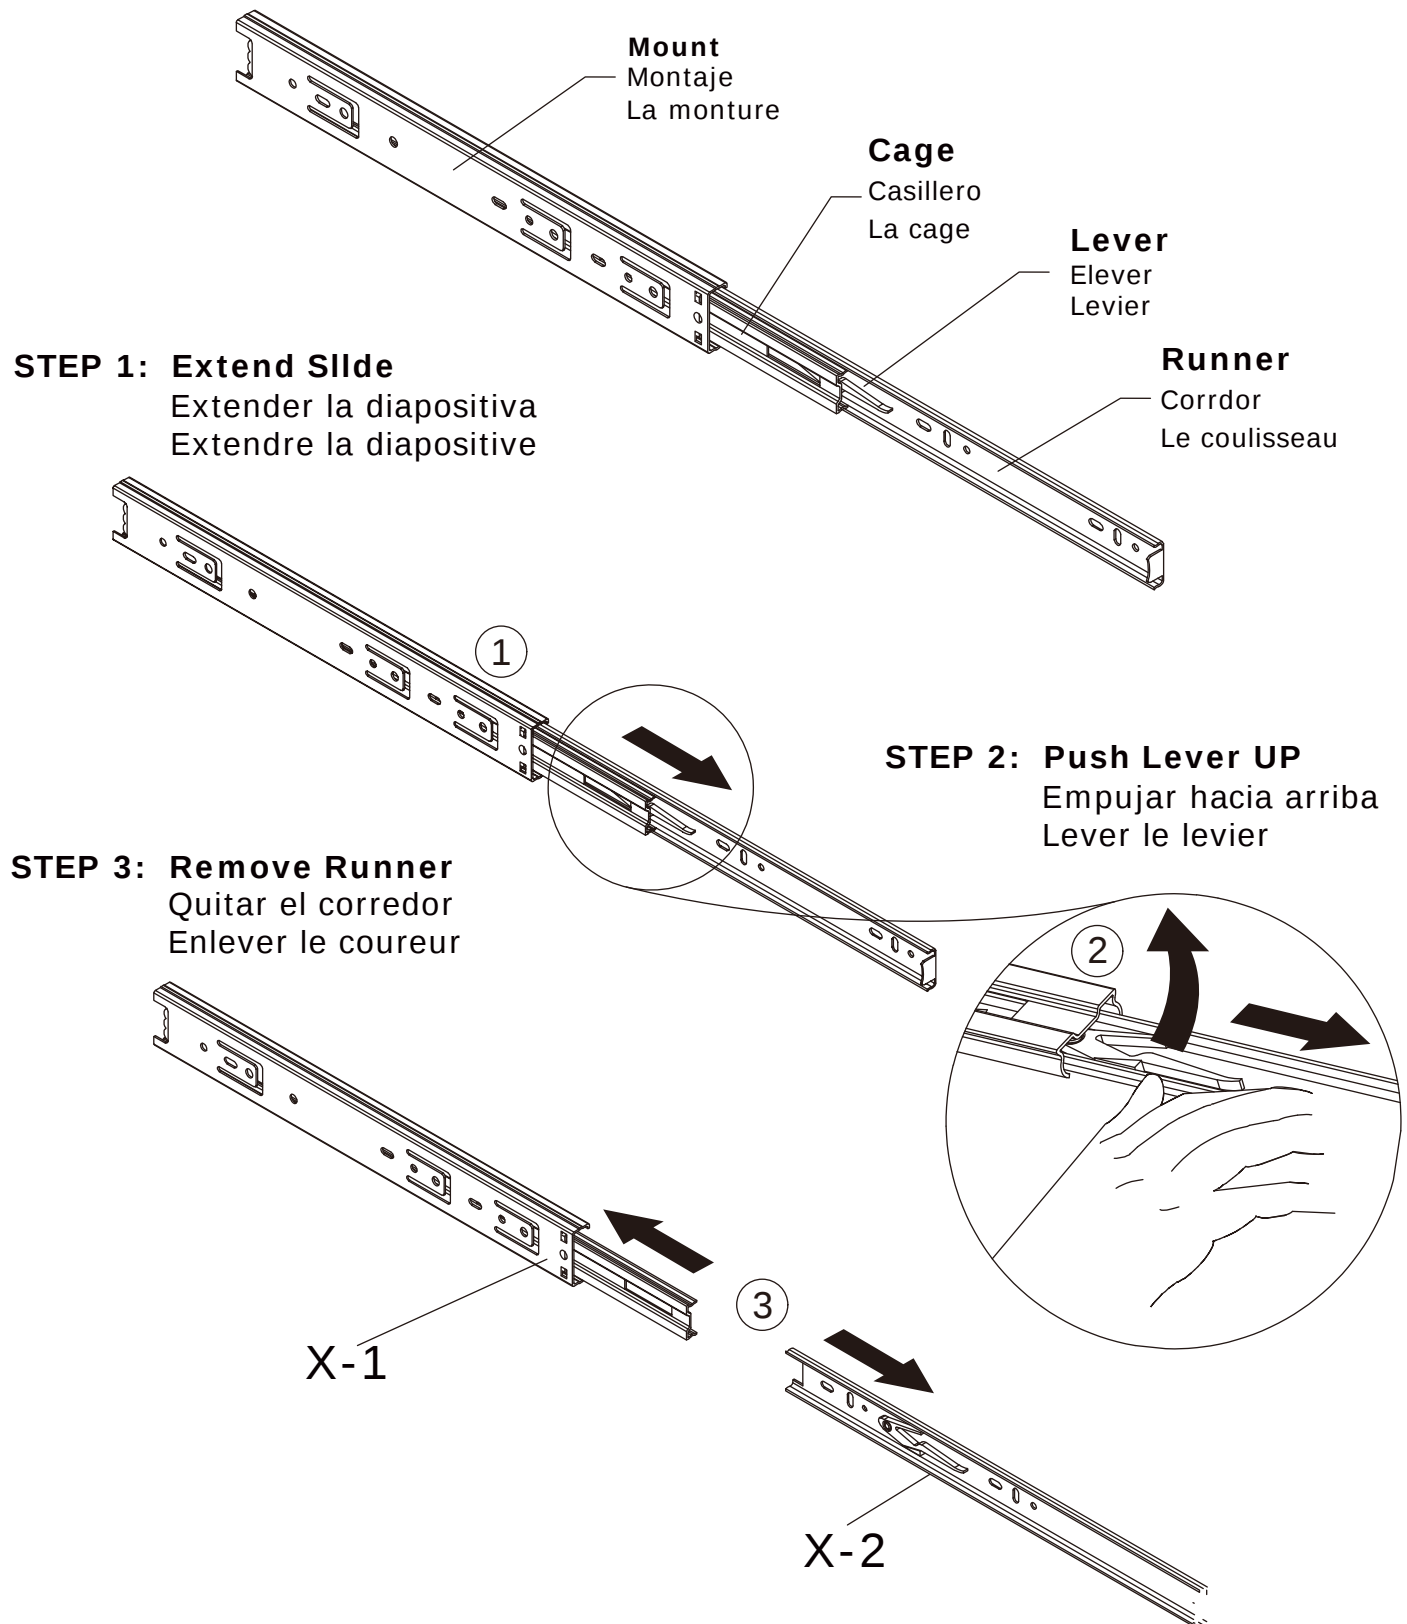



1

 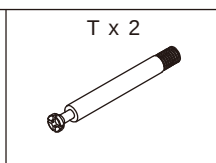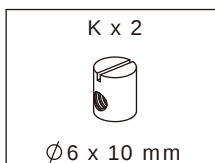



First, install nut (K) onto board 16, then screw rod (T) into board 16.

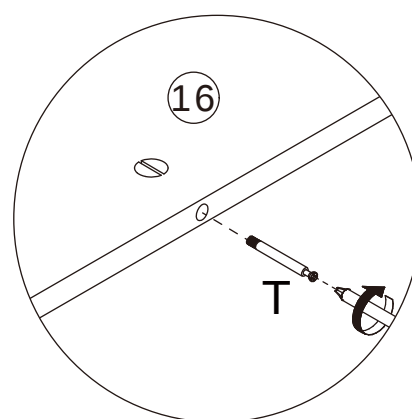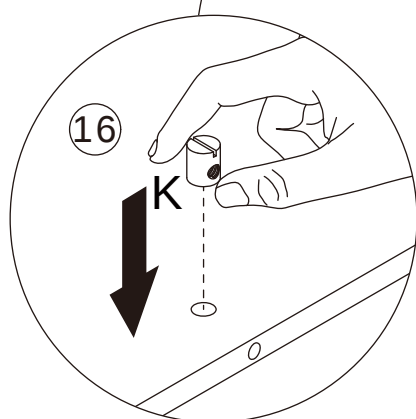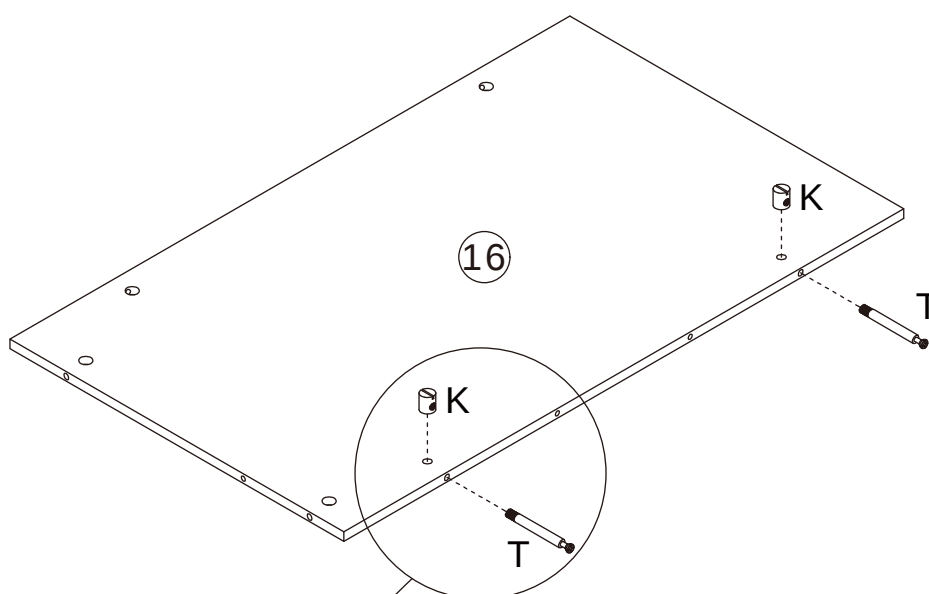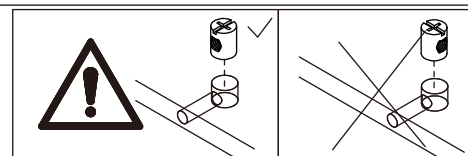



2

 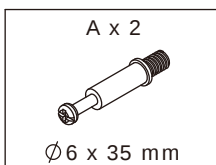

Flip the board over, screw eccentric rod (A) onto board 16.

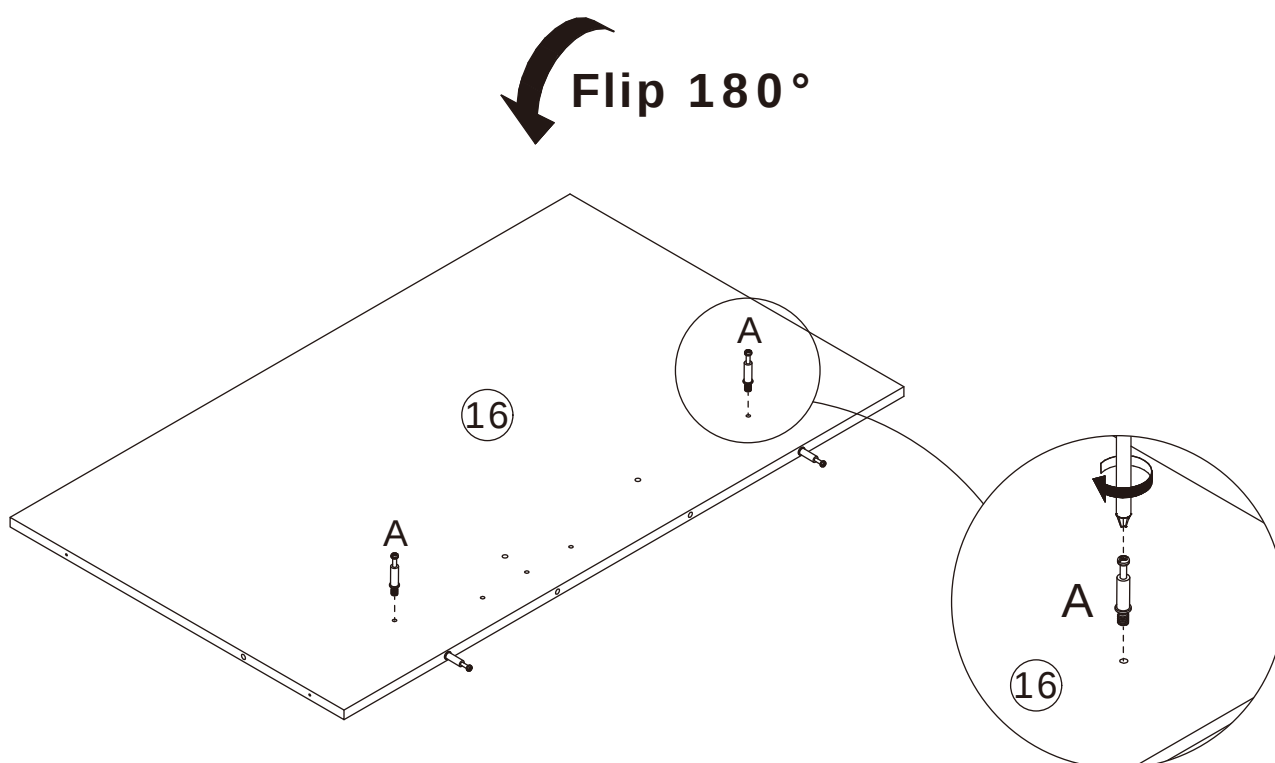
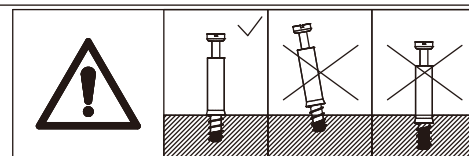


3

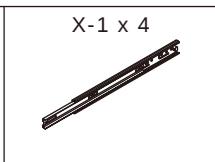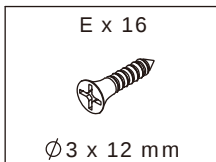


Secure slide rail (X-1) to board 13 using screw (E).

Then flip the board over and secure the slide rail.

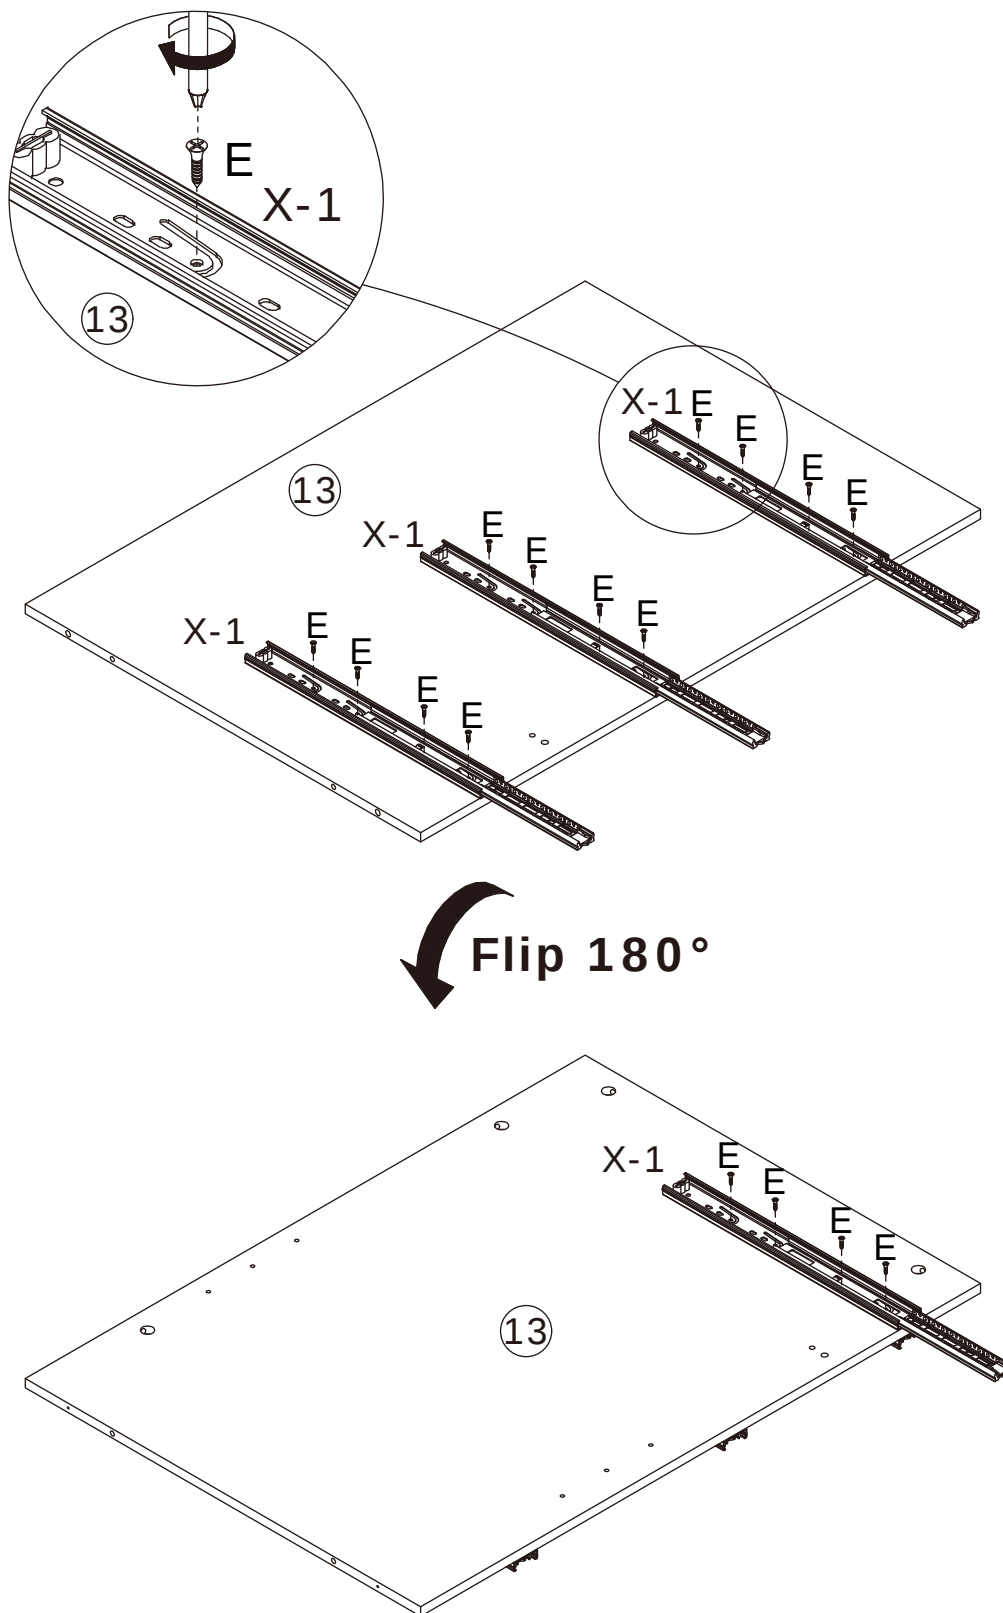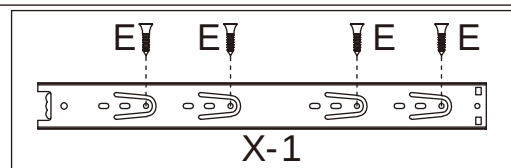




4

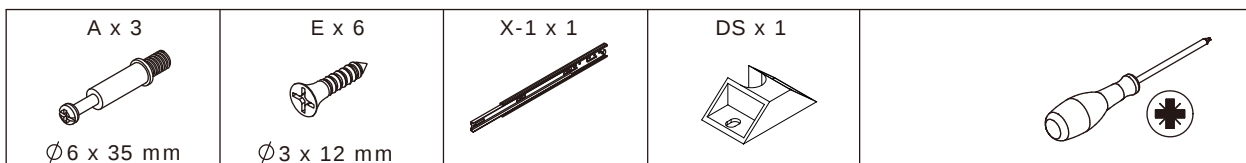




Secure slide rail (X-1) to board 15 using screw (E), and screw eccentric rod (A).

Then flip the board over, secure the slide rail and screw eccentric rod (A).







Use screw E to secure plastic part DS to board No. 15.

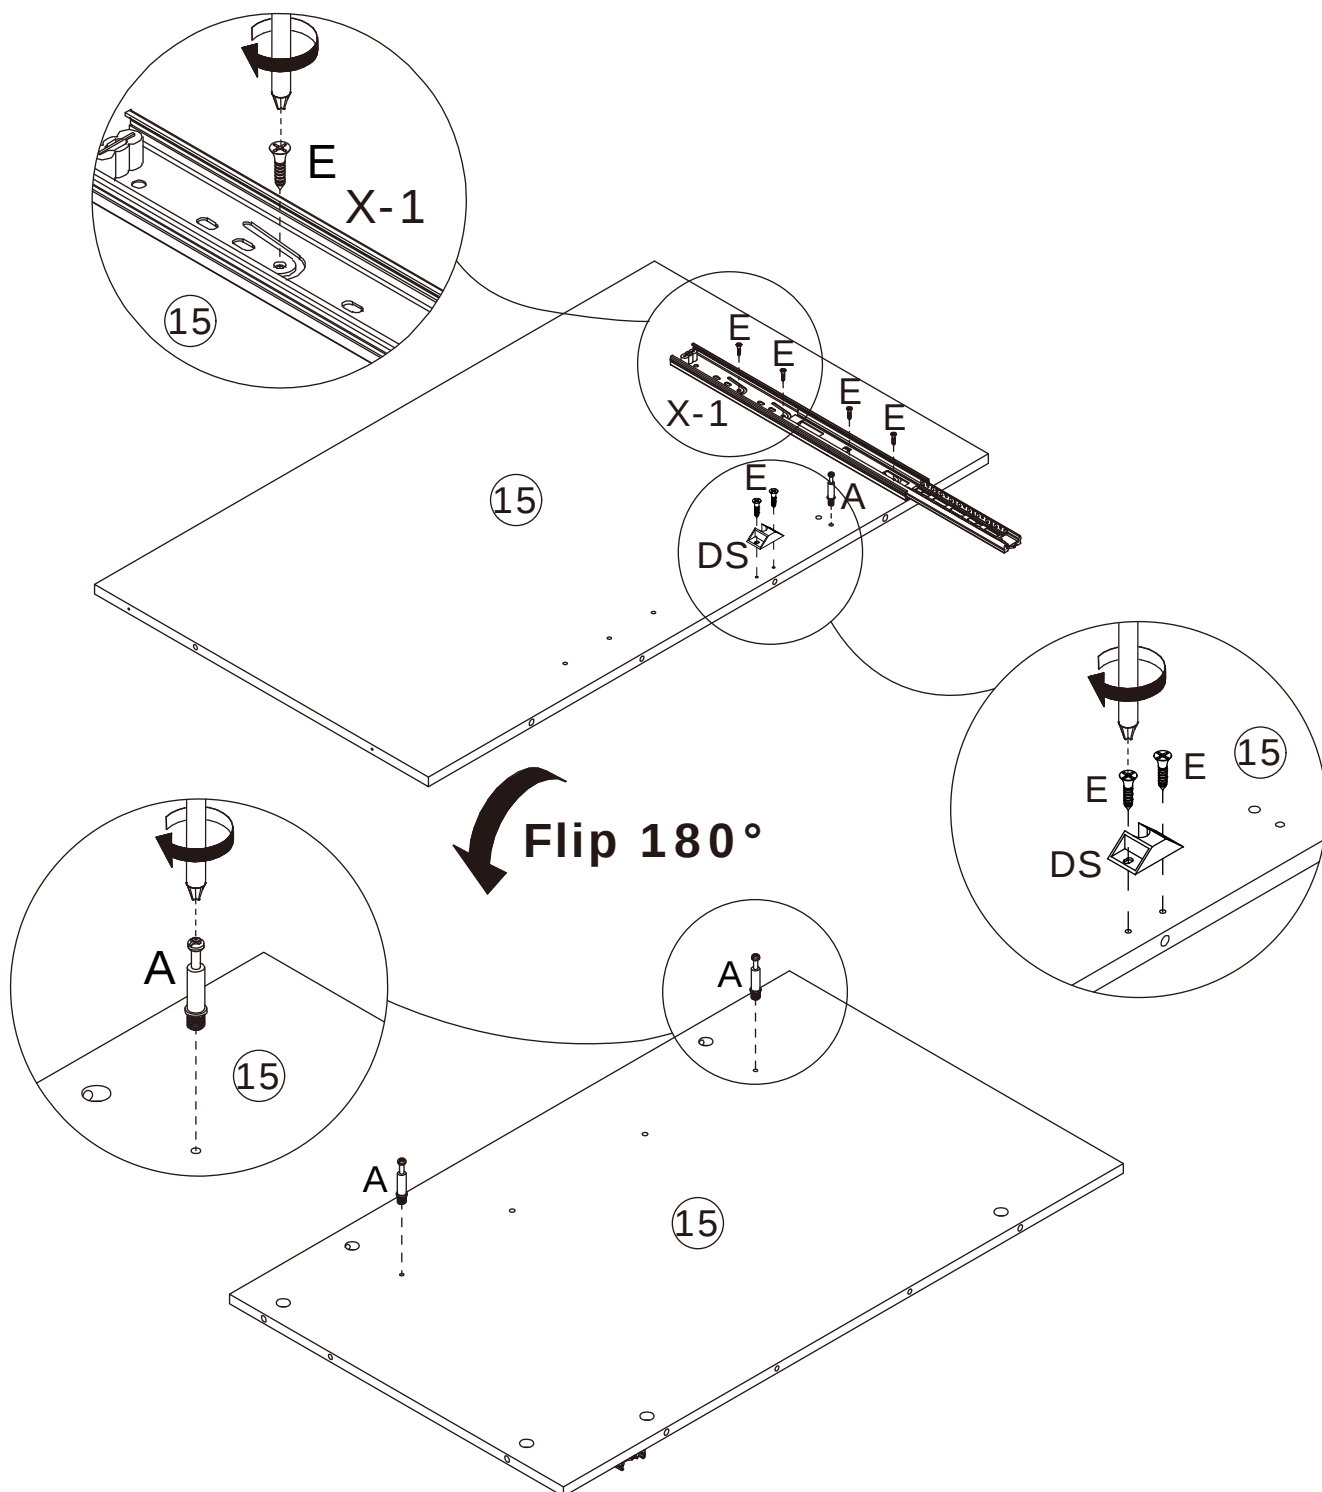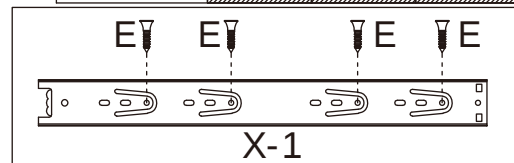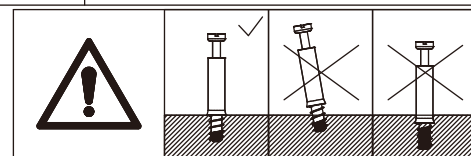



5

 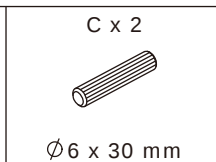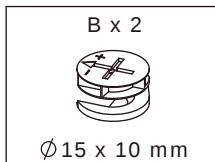





Connect board 14 to board 16 using wooden dowel (C), then tighten by turning cam lock (B) clockwise as shown.

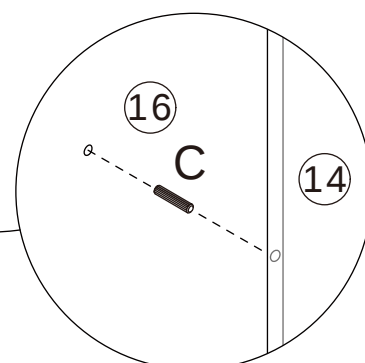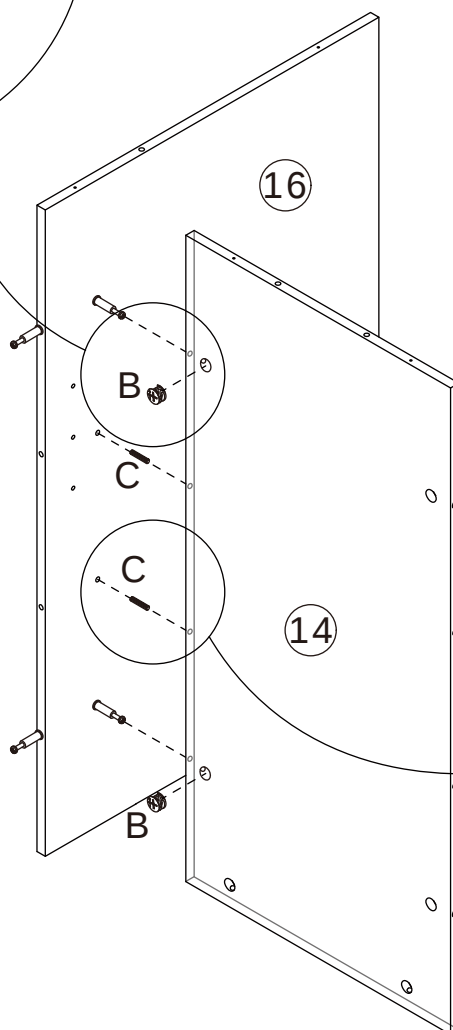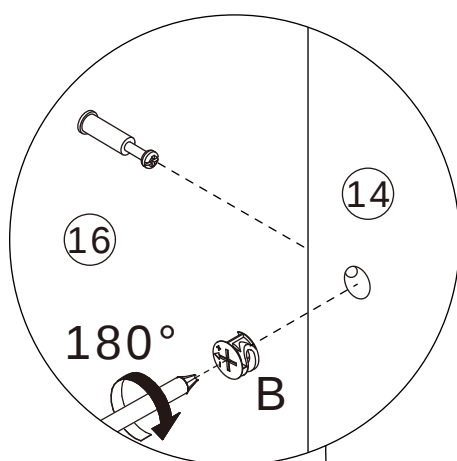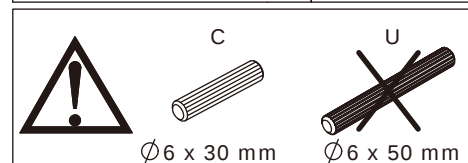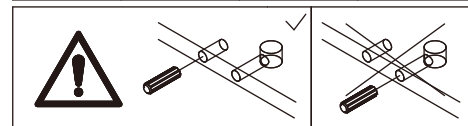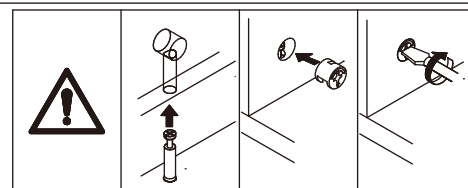




6

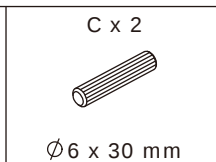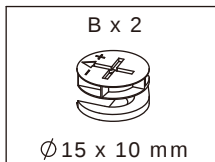







Connect board 15 to board 16 using wooden dowel (C), then tighten by turning cam lock (B) clockwise as shown.

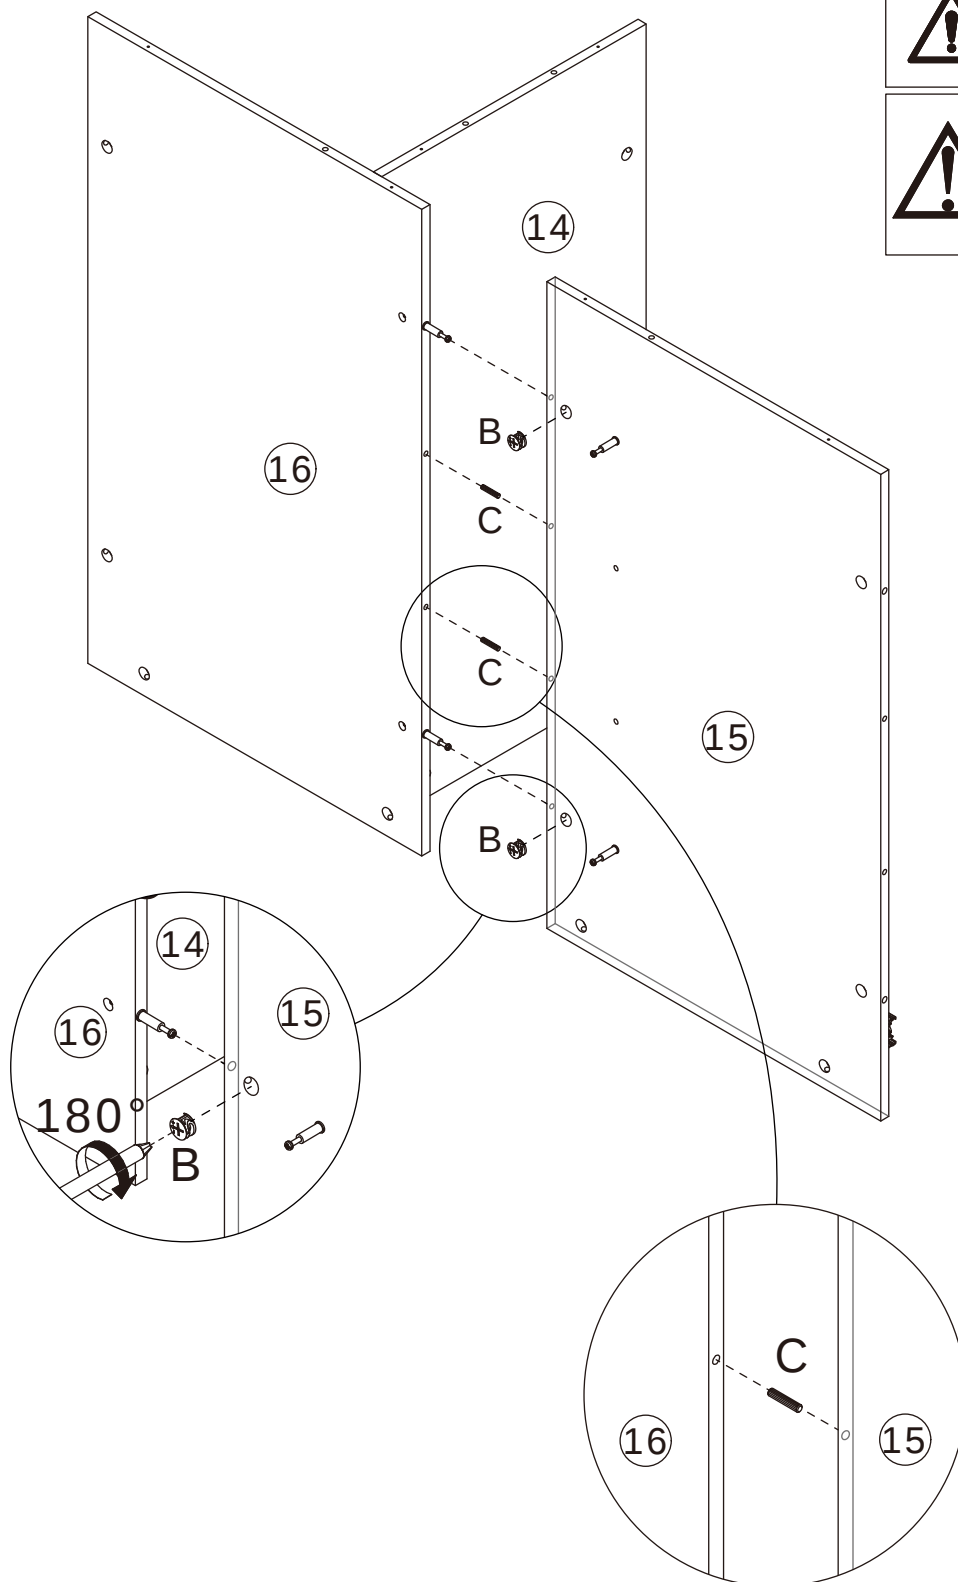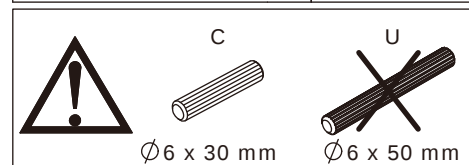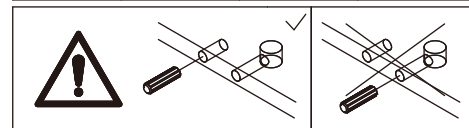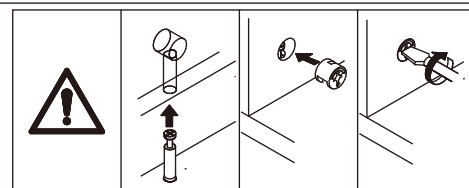


7

 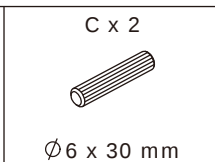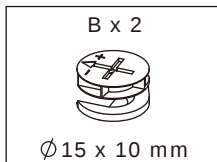




Connect board 13 to board 15 using wooden dowel (C), then tighten by turning cam lock (B) clockwise as shown.

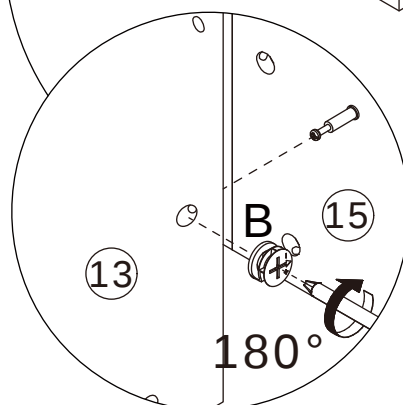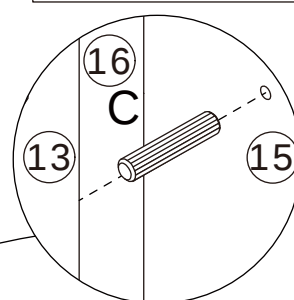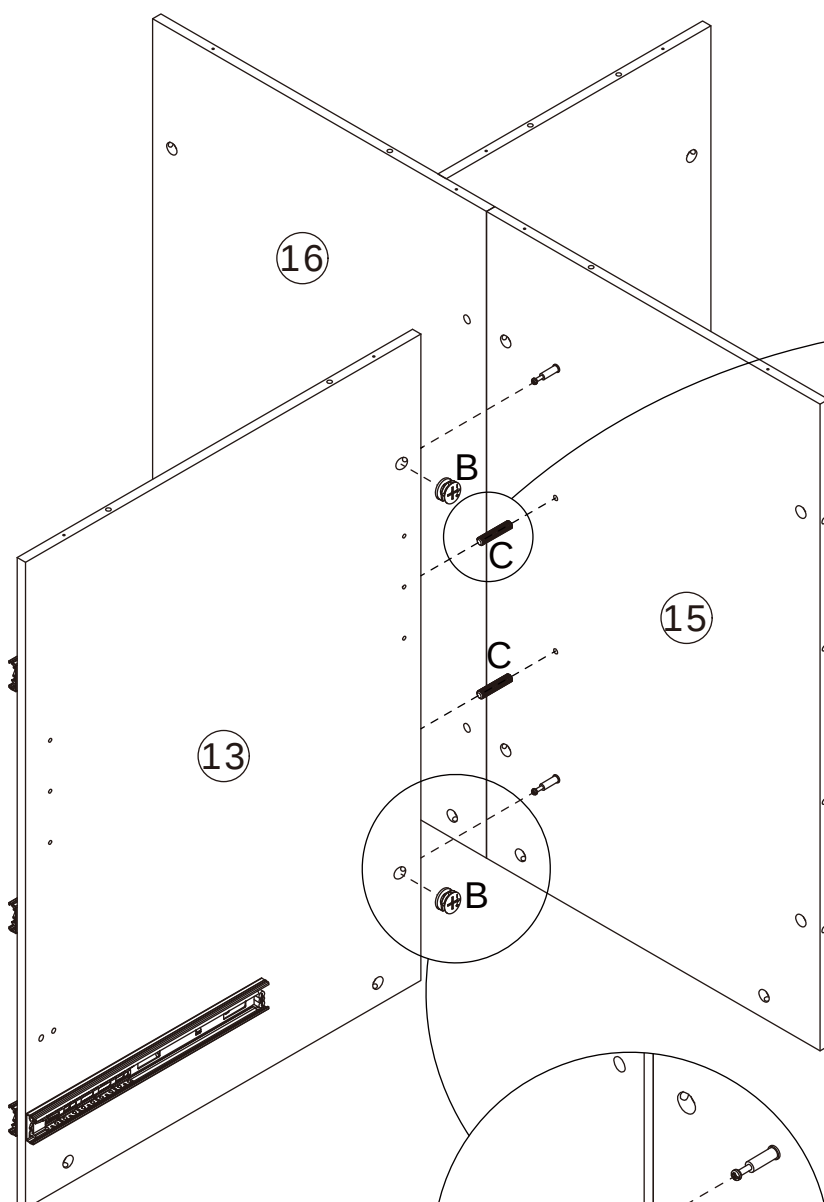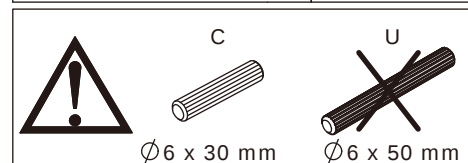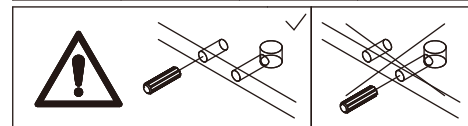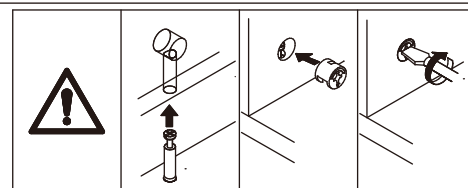



8

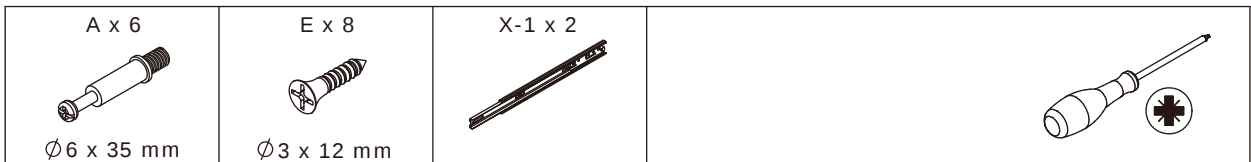

Secure slide rail (X-1) to boards 8 and 11 using screw (E).
Screw eccentric rod (A) onto boards 8 and 11.

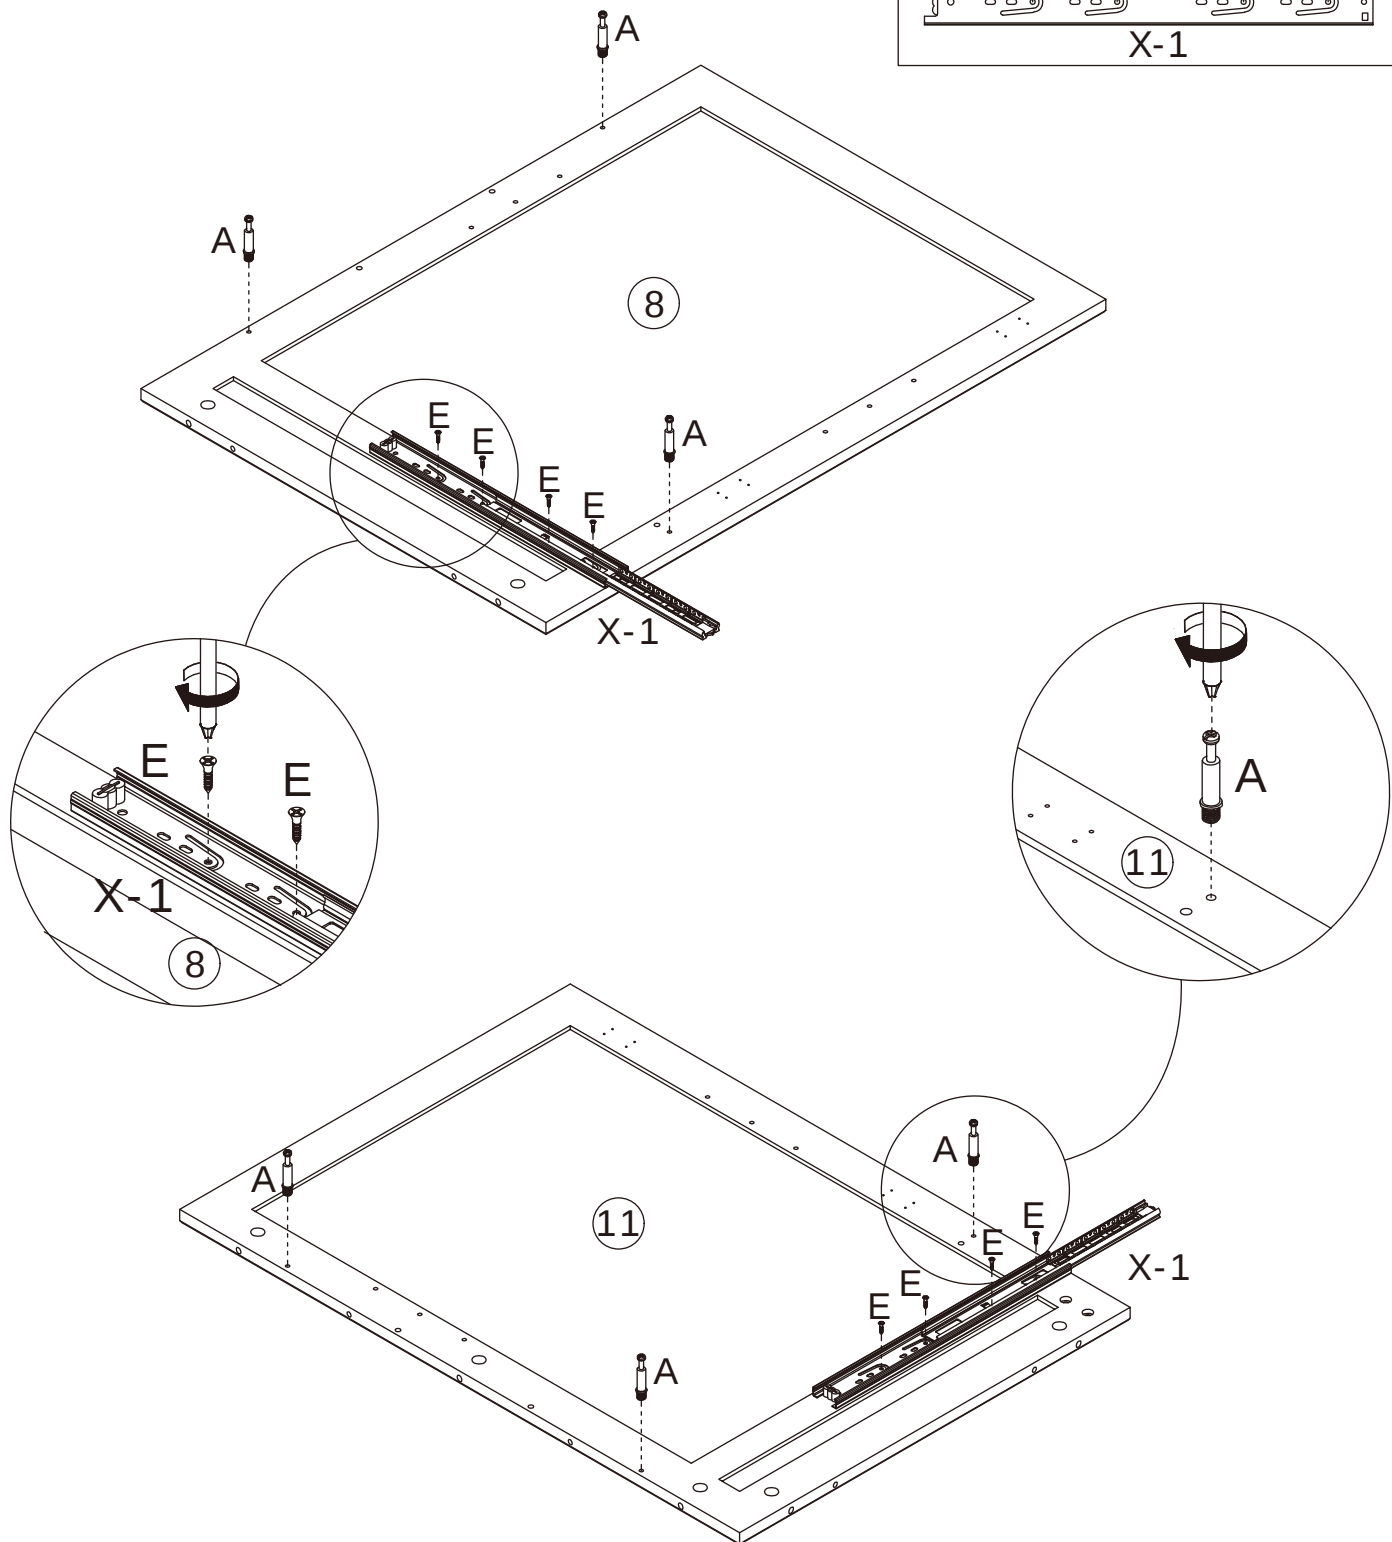
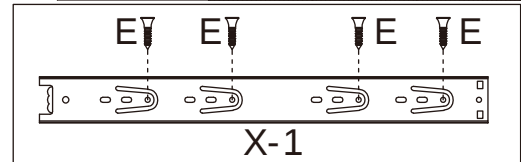
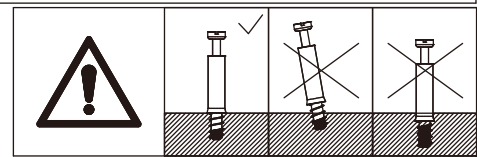


9

 
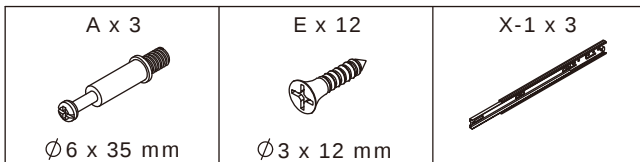


Secure slide rail (X-1) to board 9 using screw (E).






Screw eccentric rod (A) onto board 9.

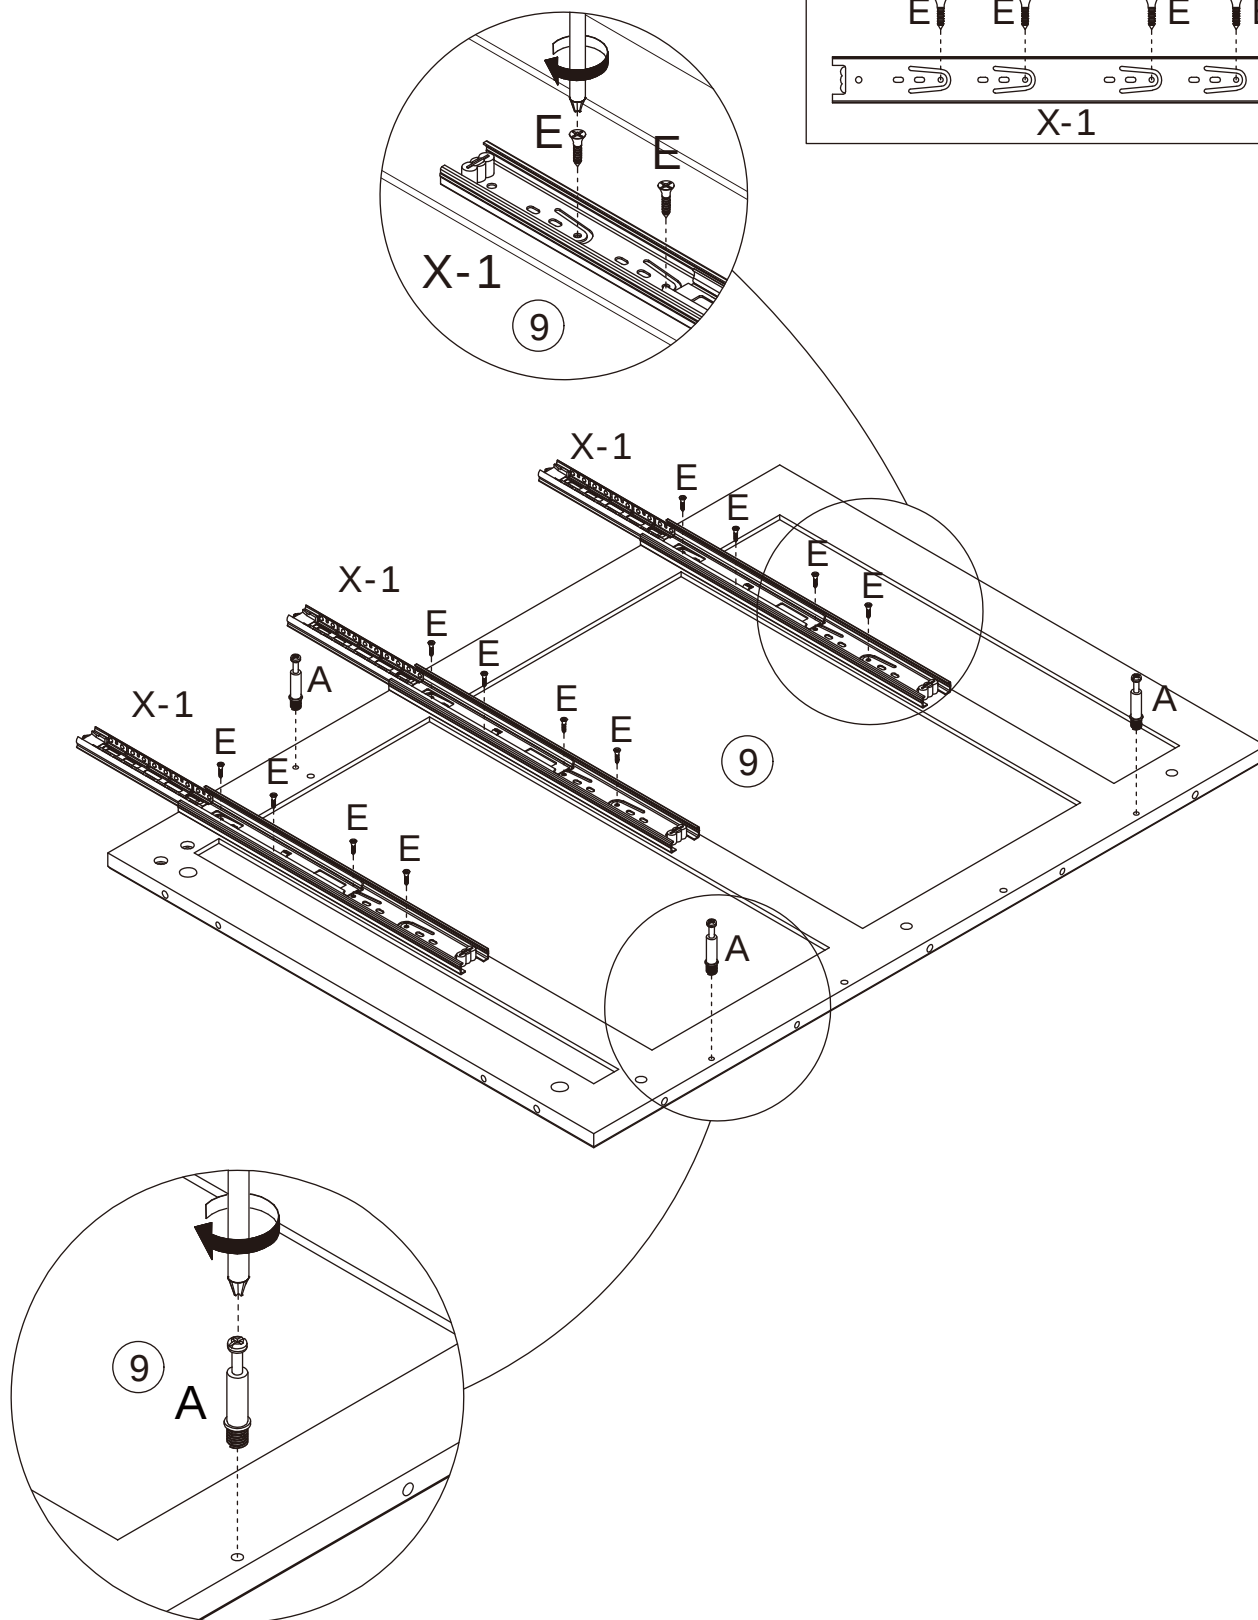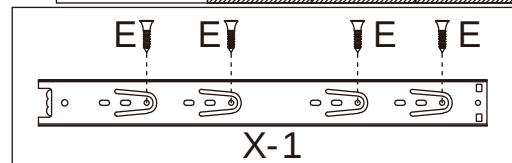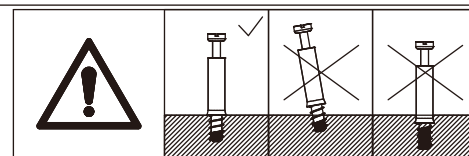



10

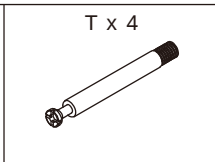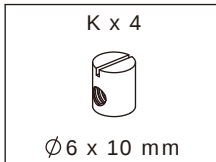



First, install nut (K) onto boards 19 and 9, then screw rod (T) into boards 19 and 9.

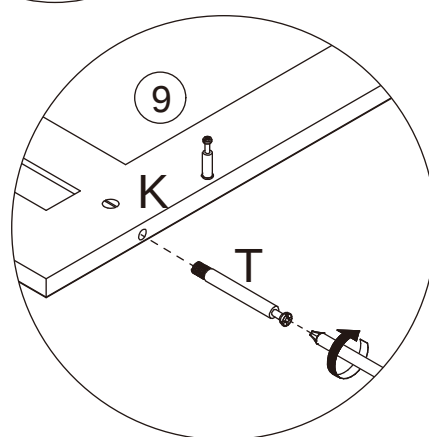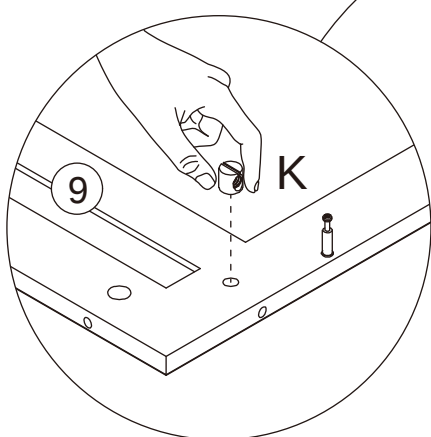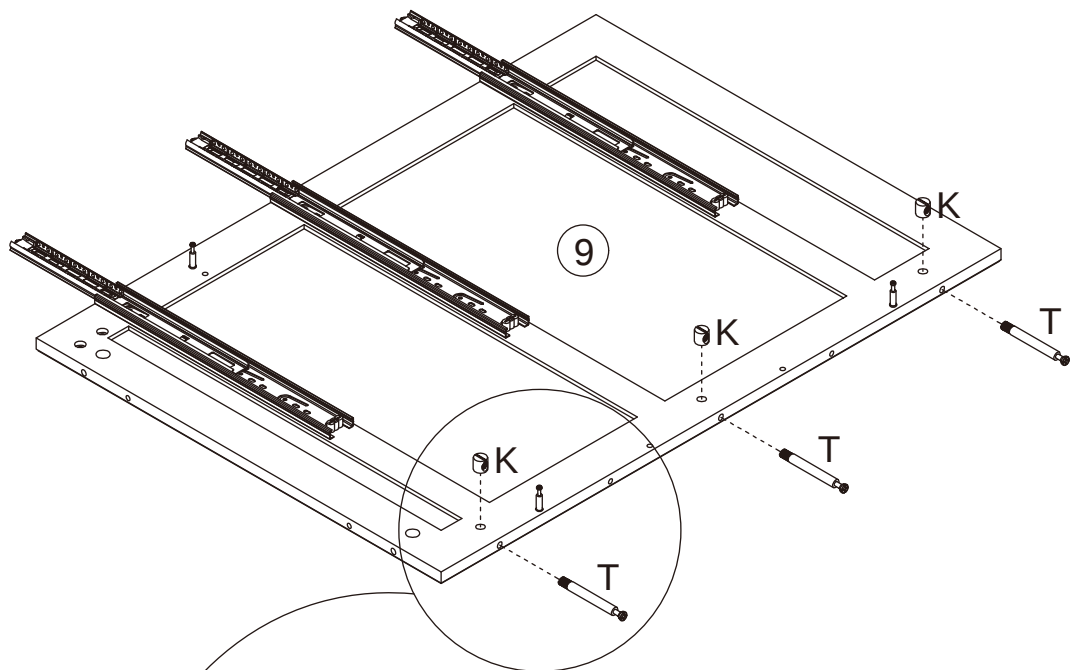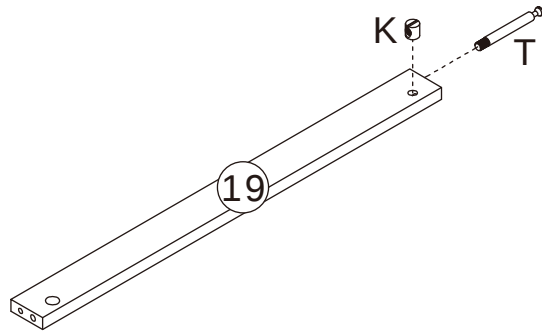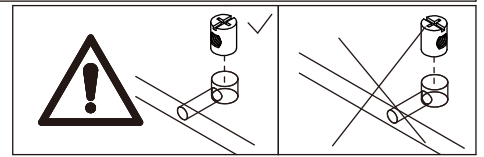



11

 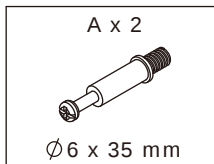



Screw eccentric rod (A) onto board 10.

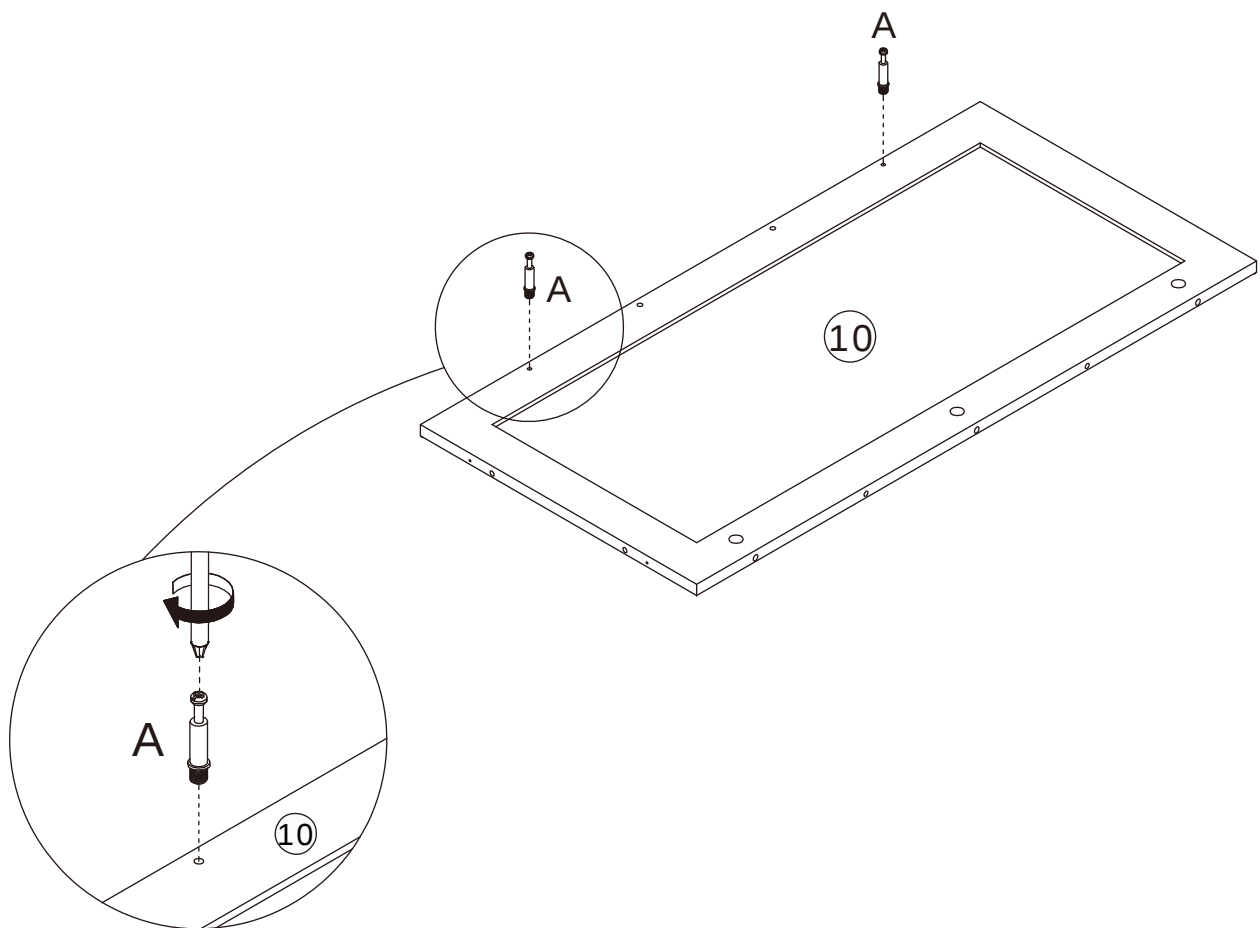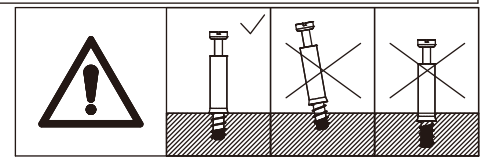

12

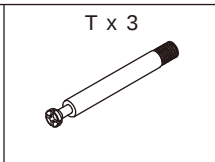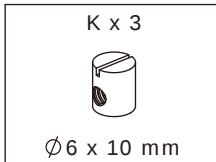

First, install nut (K) onto board 12, then screw rod (T) into board 12.

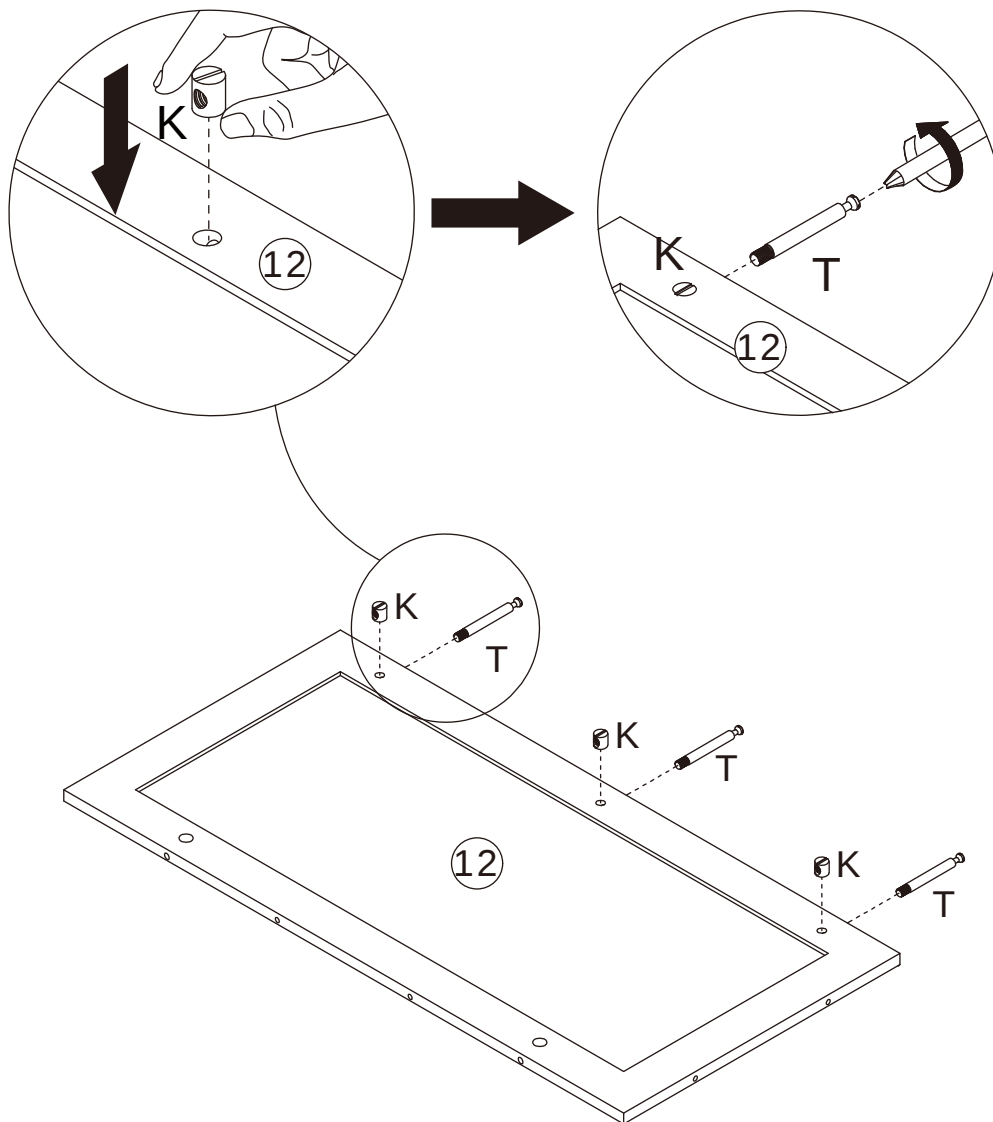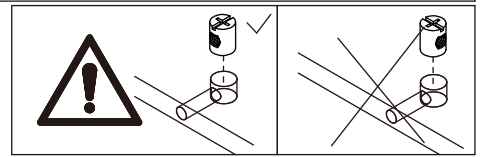

13

B x 3

 


Ø 15 x 10 mm





C x 2



Ø 6 x 30 mm



Connect board 9 to board 10 using wooden dowel (C), then tighten by turning cam lock (B) clockwise as shown.

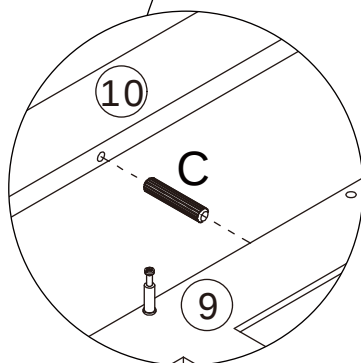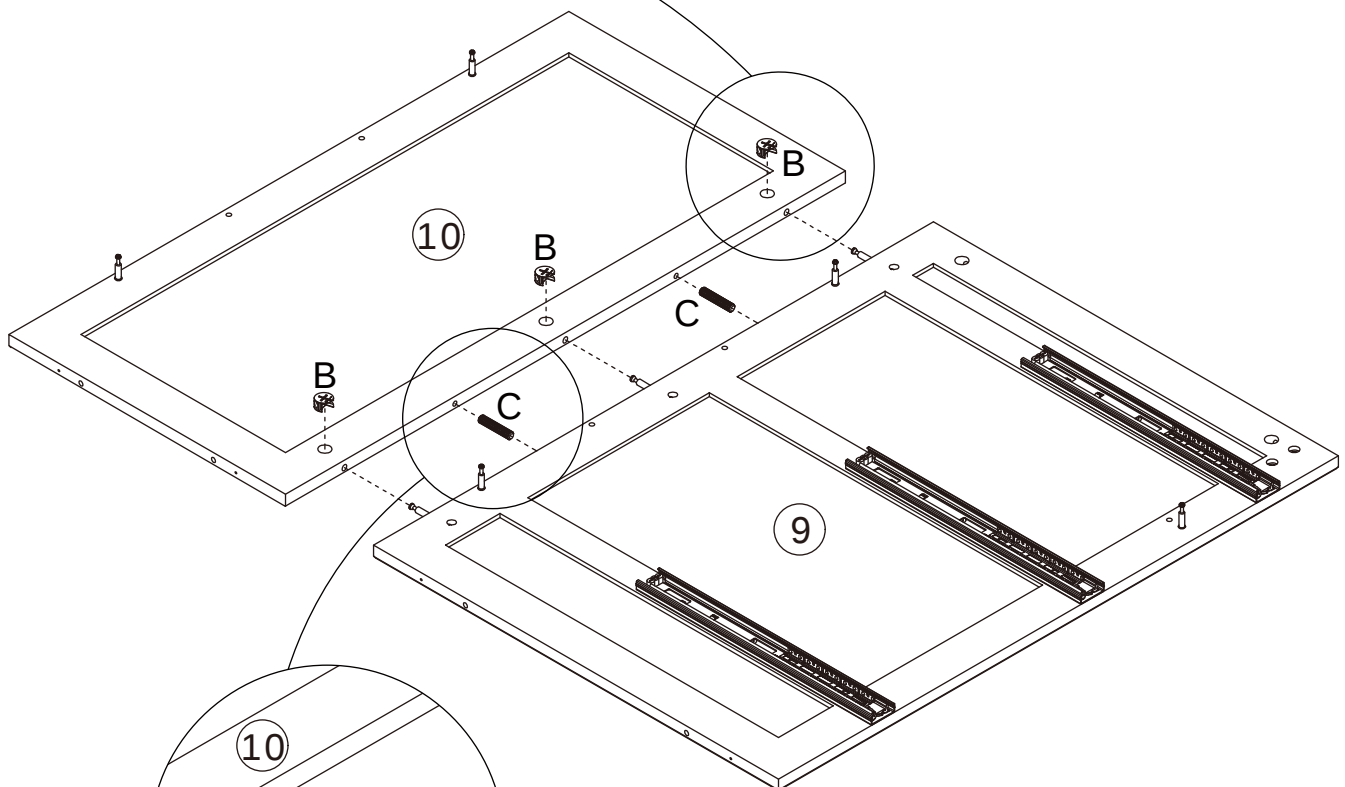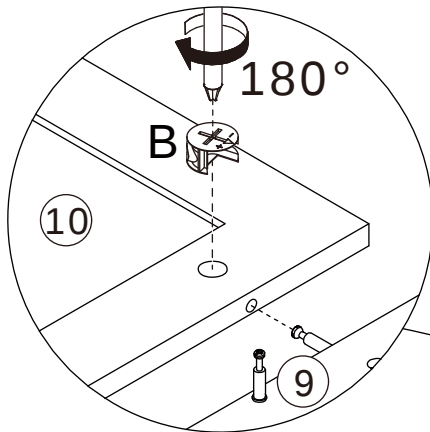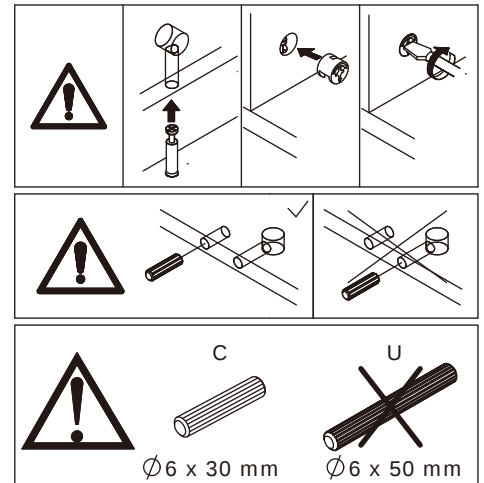

14

B x 3

 


Ø 15 x 10 mm





C x 2



Ø 6 x 30 mm



Connect board 11 to board 12 using wooden dowel (C), then tighten by turning cam lock (B) clockwise as shown.

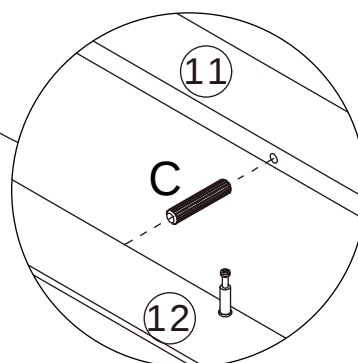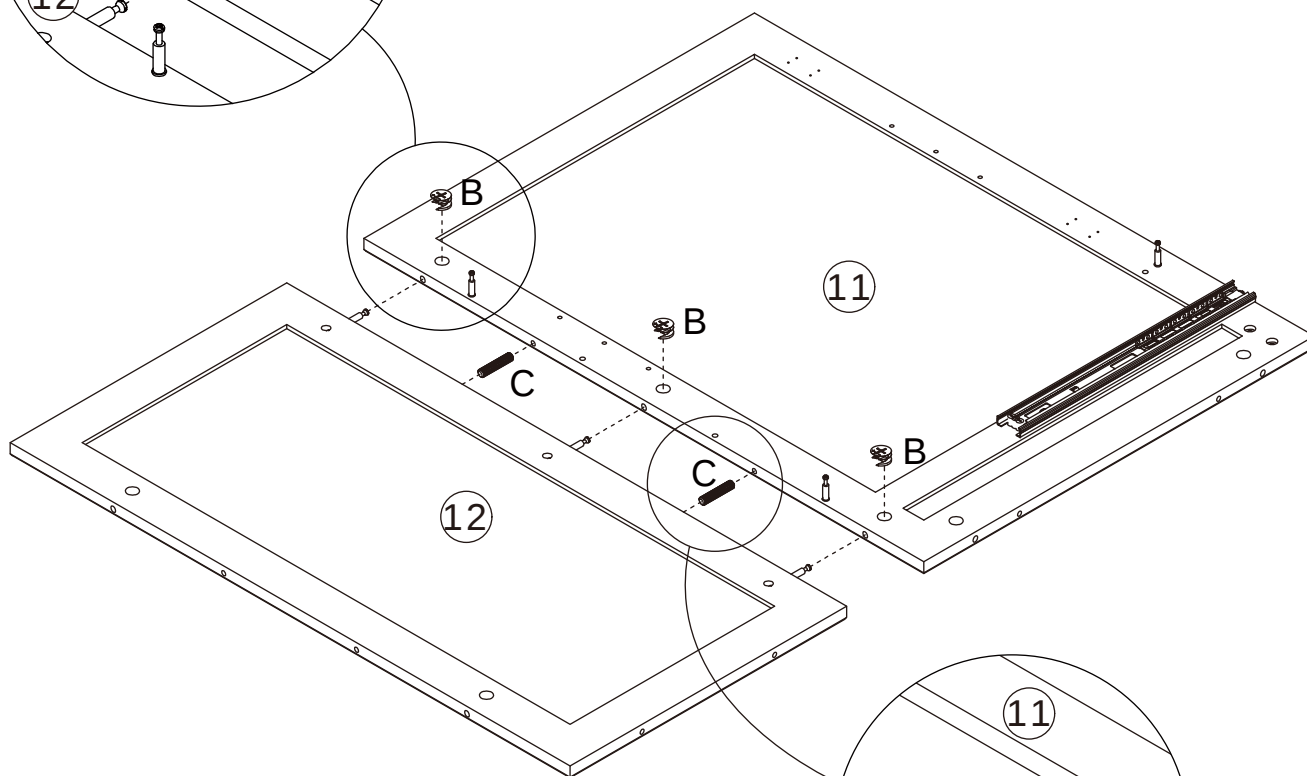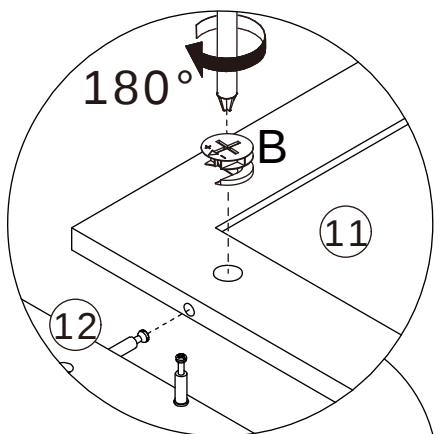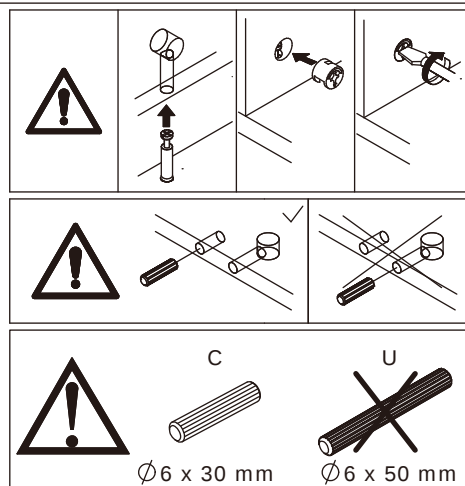

15

B x 1

 


Ø 15 x 10 mm



C x 1




Ø 6 x 30 mm





Connect board 8 to board 17 using wooden dowel (C), then tighten by turning cam lock (B) clockwise as shown.

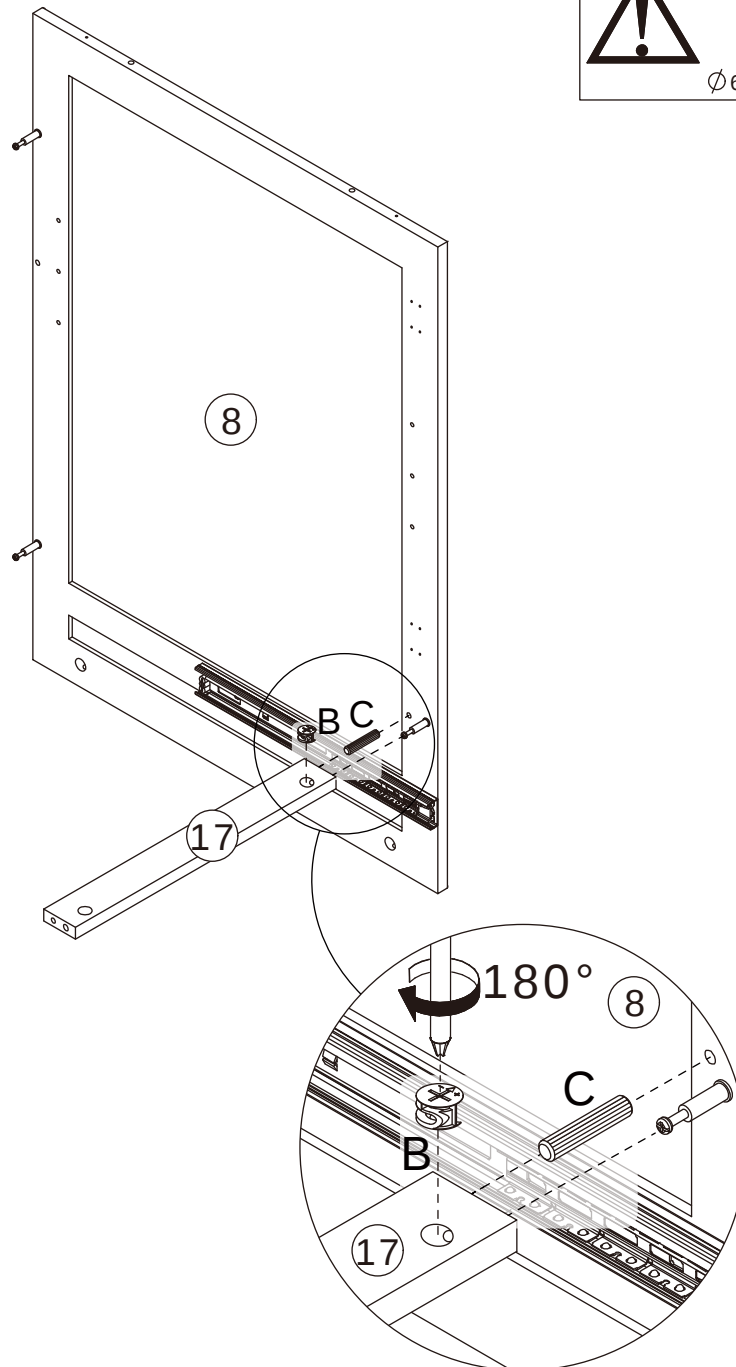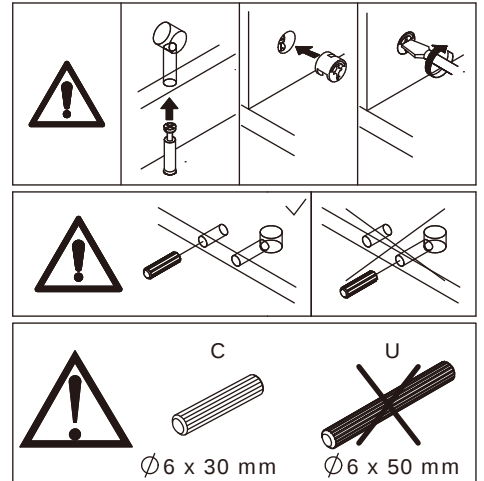

16

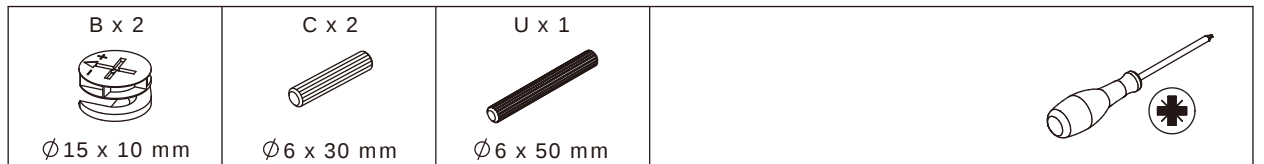

Connect board 8 to board 15 using wooden dowel (C), then tighten by turning cam lock (B) clockwise as shown.

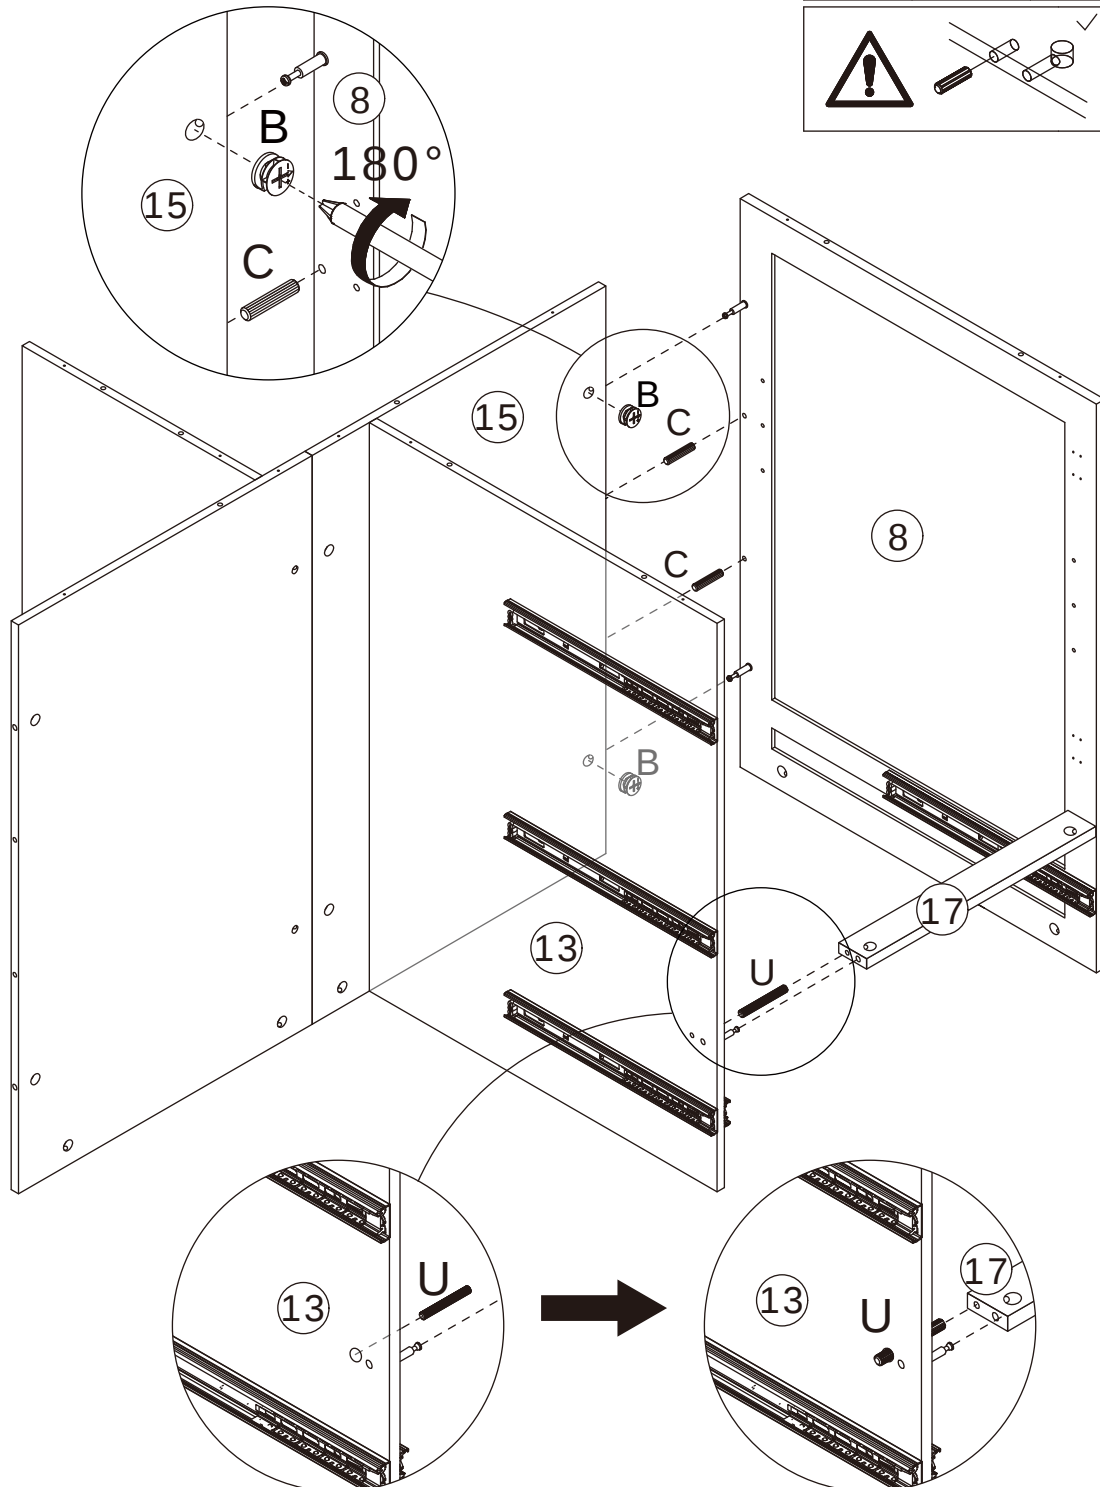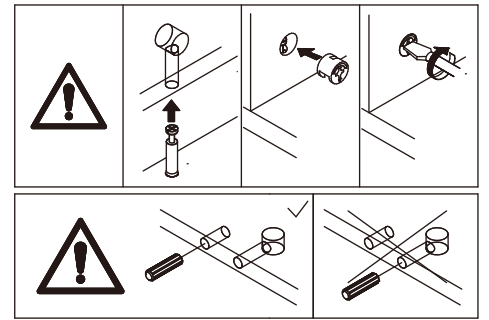

Connect board 17 to board 13 using wooden dowel (U), then tighten by turning cam lock (B) clockwise as shown.

17

B x 4

 


Ø 15 x 10 mm



C x 4



Ø 6 x 30 mm



Connect boards 11 and 12 to boards 18, 14, and 15 using wooden dowel (C), then tighten by turning cam lock (B) clockwise as shown.

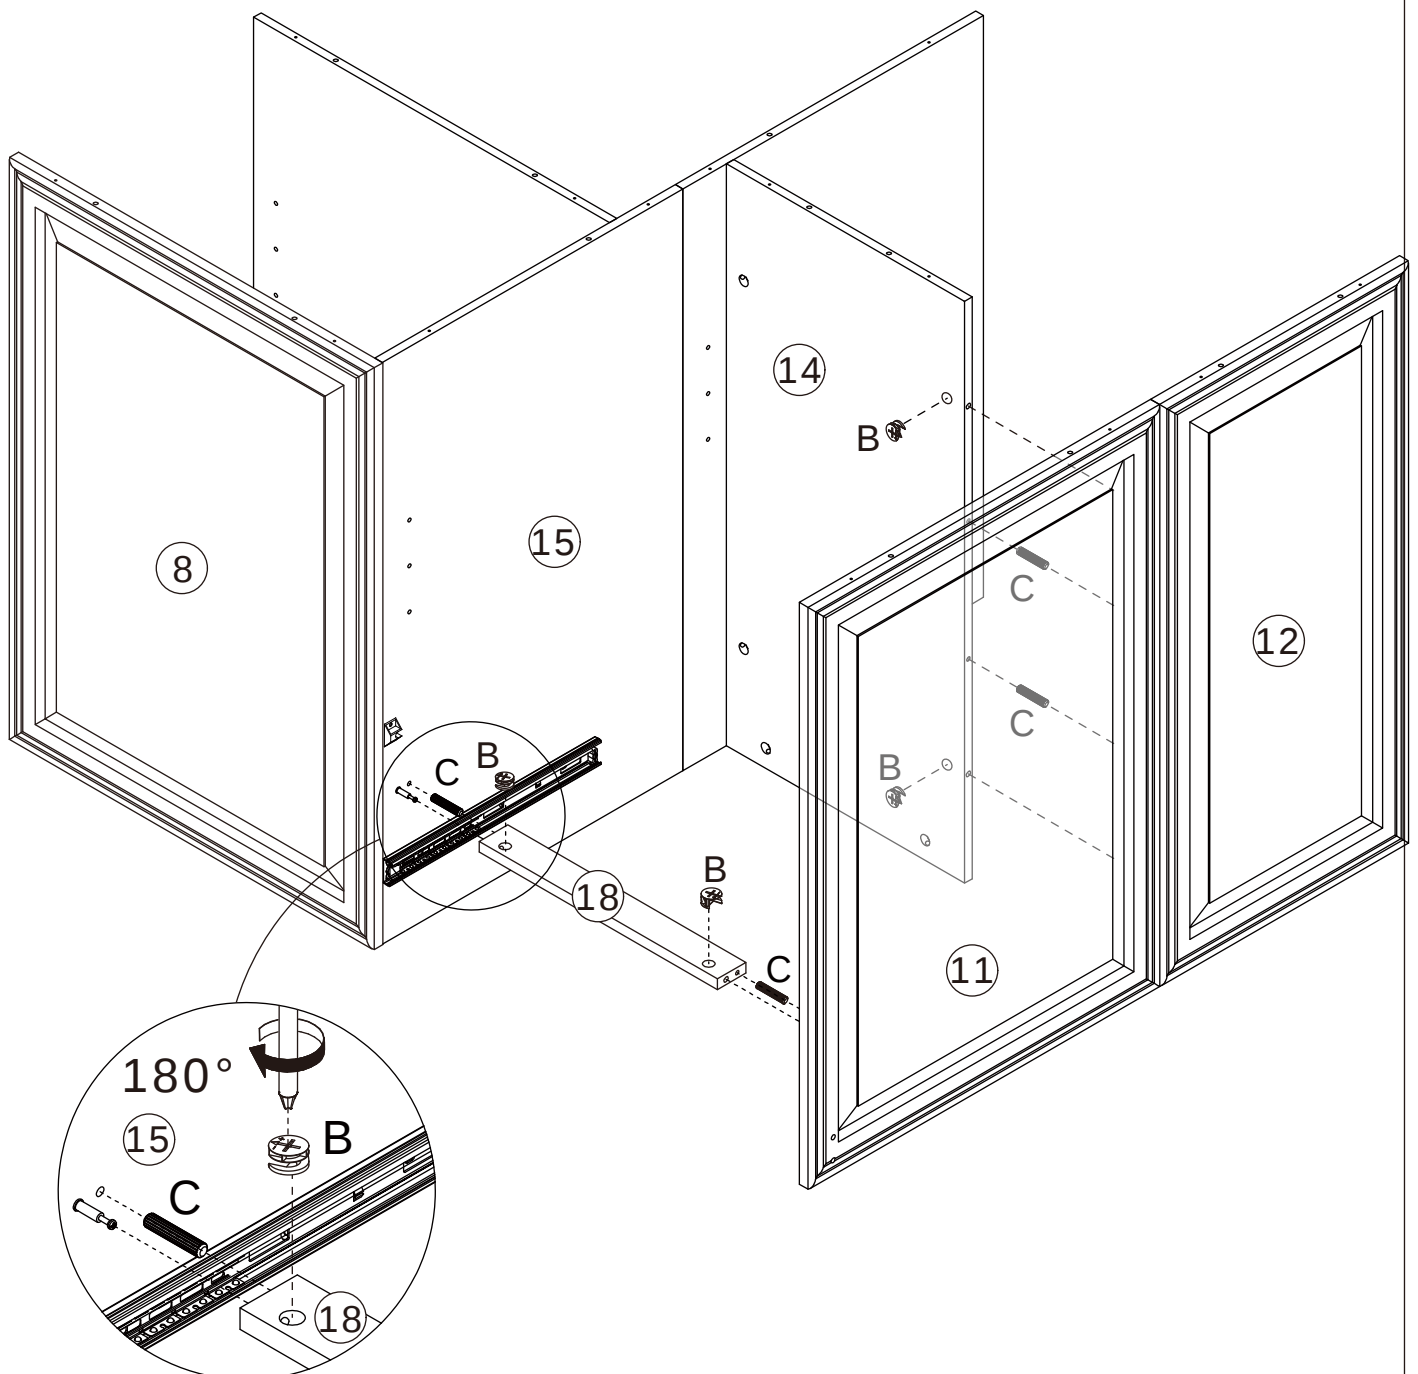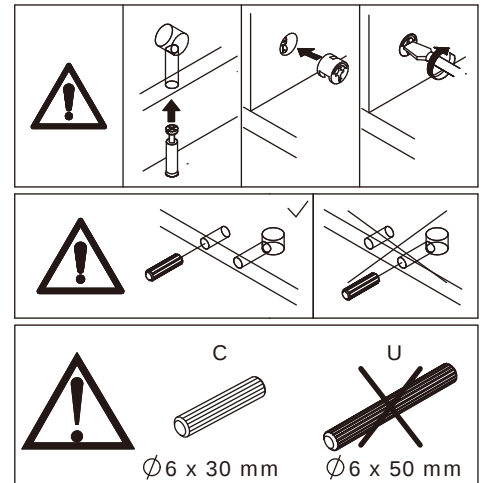

18

B x 6

 


Ø 15 x 10 mm



C x 5




Ø 6 x 30 mm




Connect boards 9, 10, and 19 to boards 12, 16, and 14 using wooden dowel (C), then tighten by turning cam lock (B) clockwise as shown.



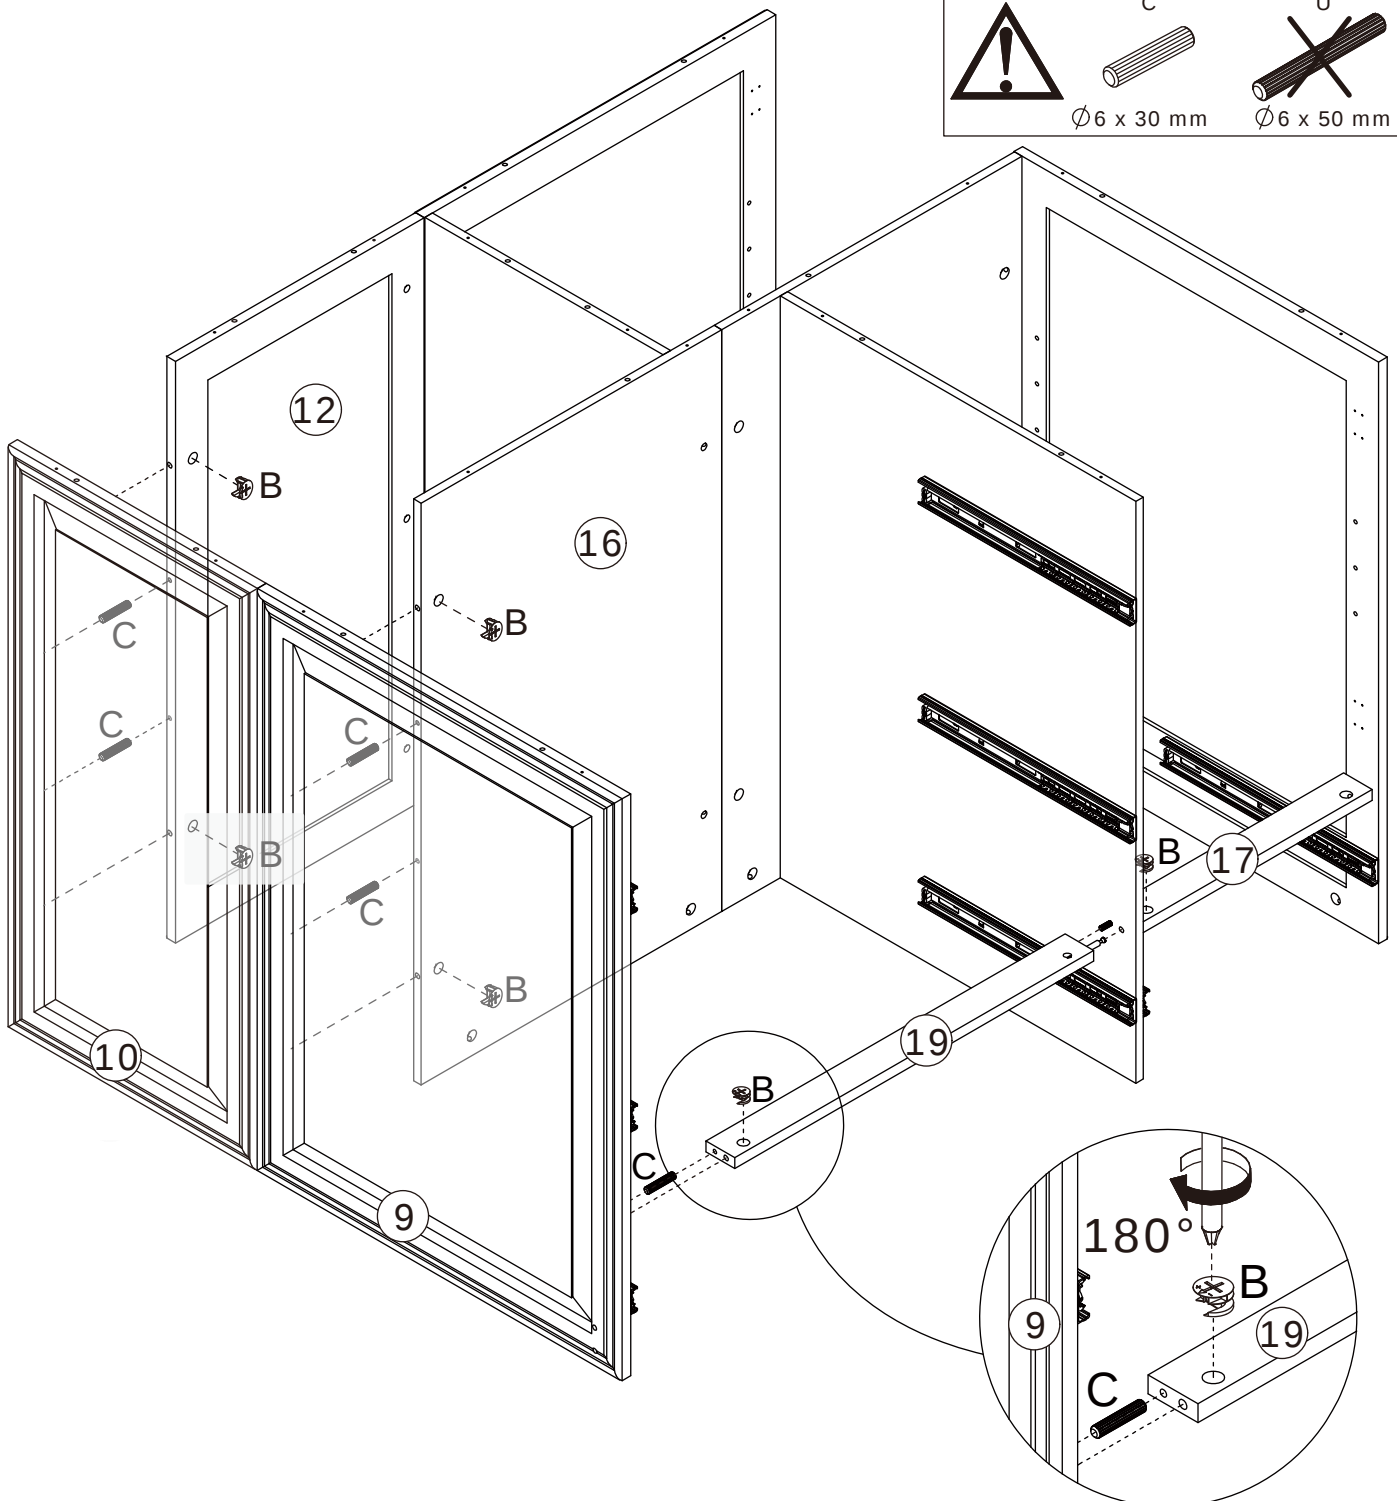
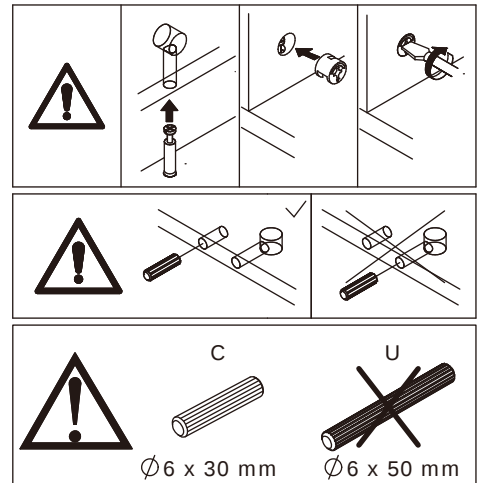


19

 
A x 10

  Ø6 x 35 mm

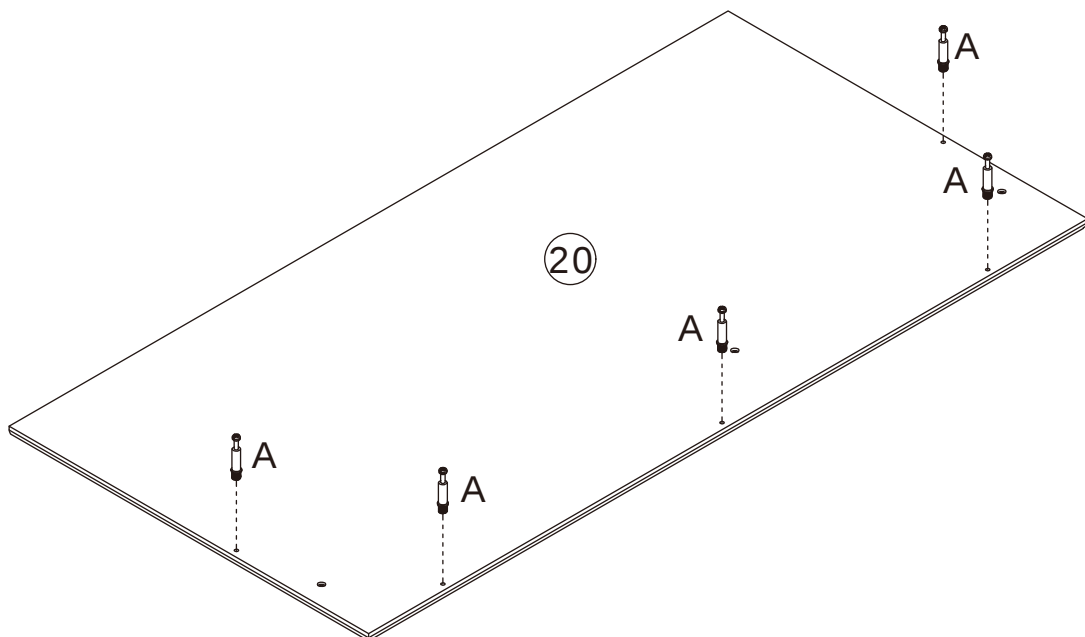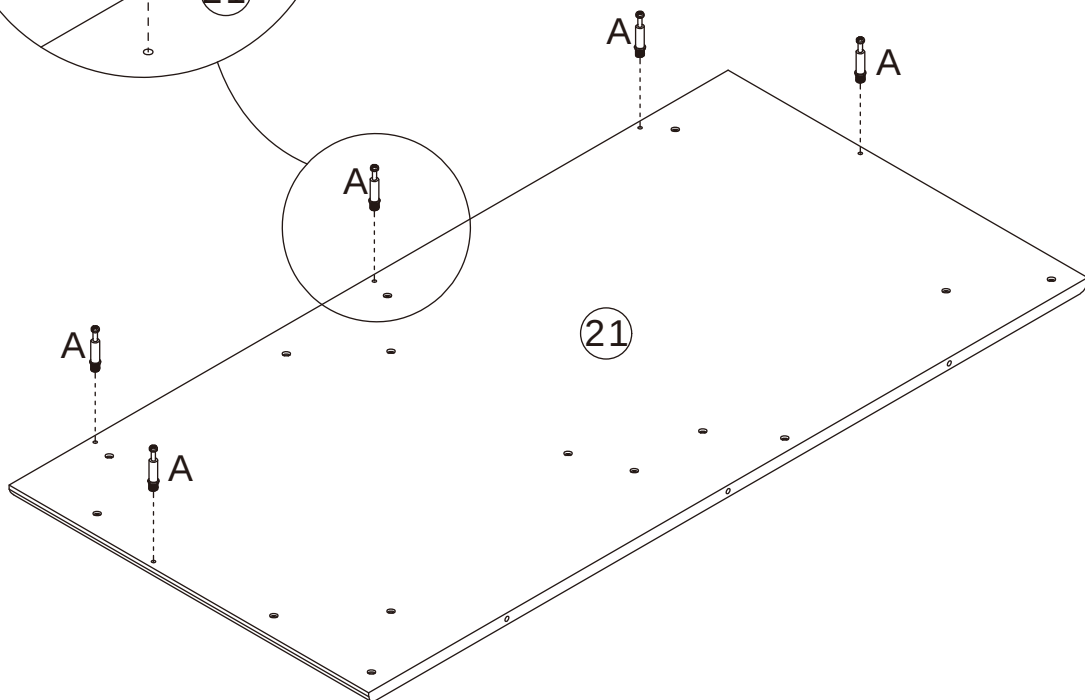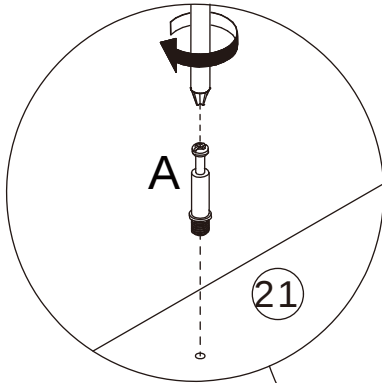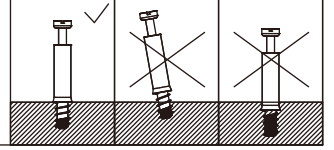



Screw eccentric rod (A) onto boards 20 and 21.

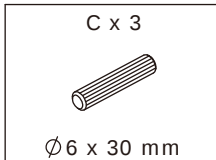

20




Connect board 20 to board 21 using wooden dowel (C).

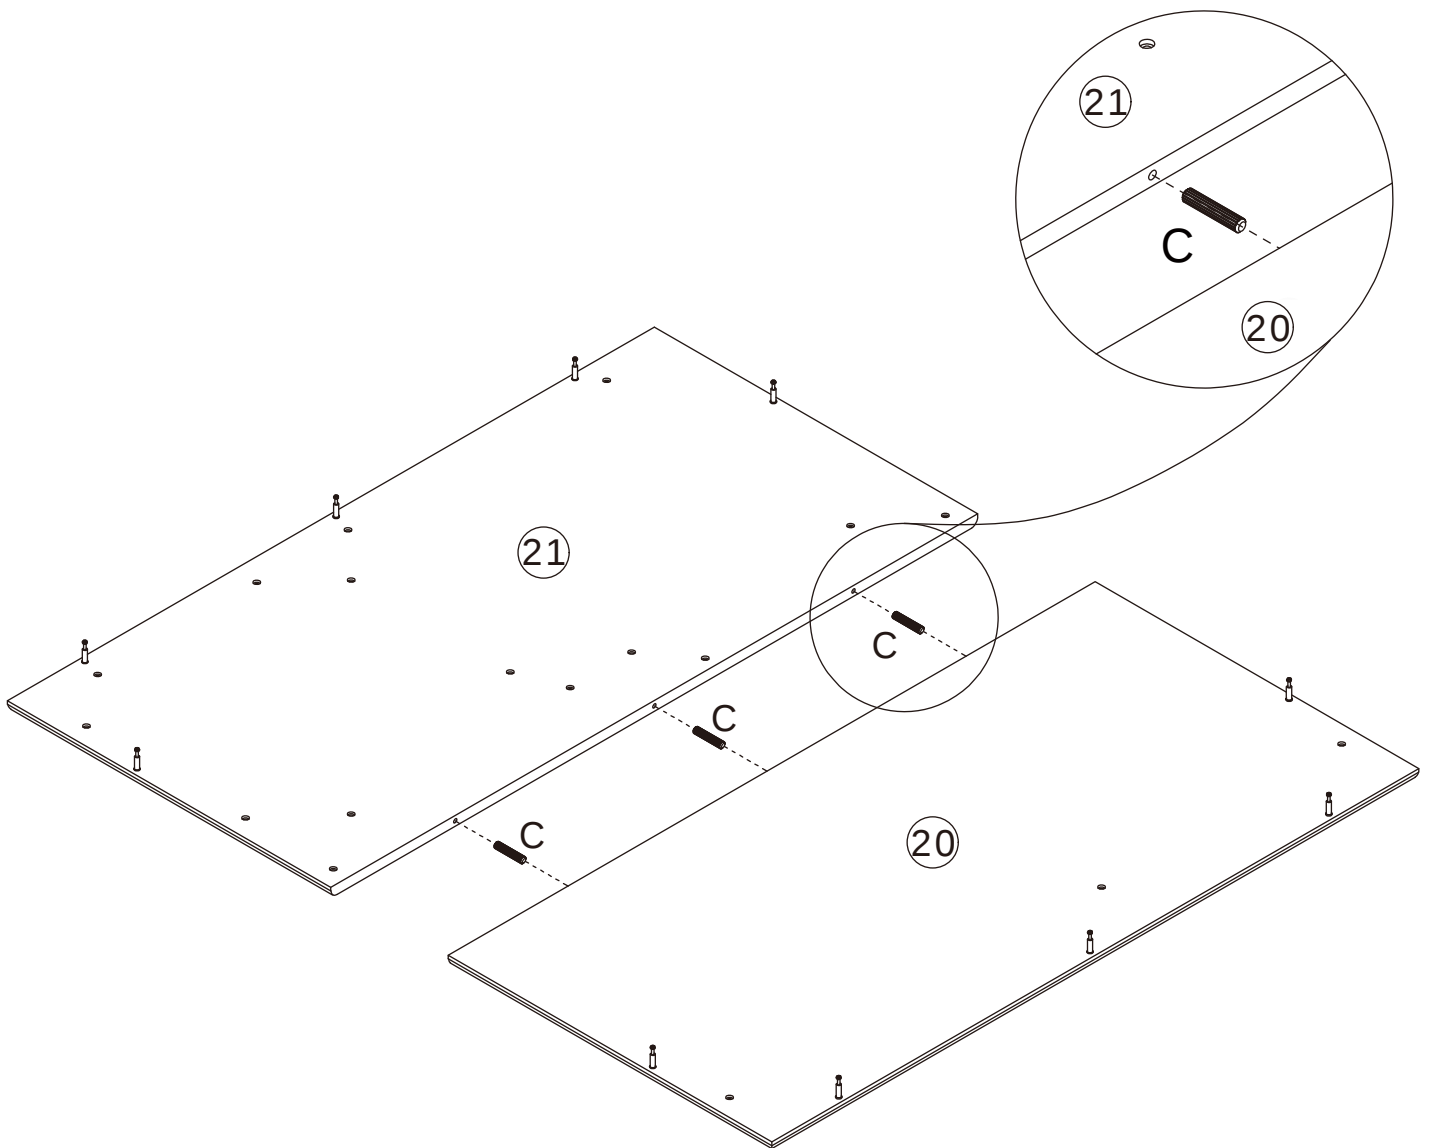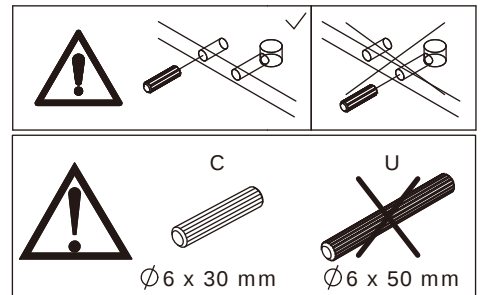

21

 C x 16




Ø6 x 30 mm




D x 18



 Ø6 x 30 mm




  Connect boards 20 and 21 to the assembled unit using wooden dowel (C), and secure them with screw (D).

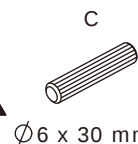




Ø6 x 30 mm





Ø6 x 50 mm

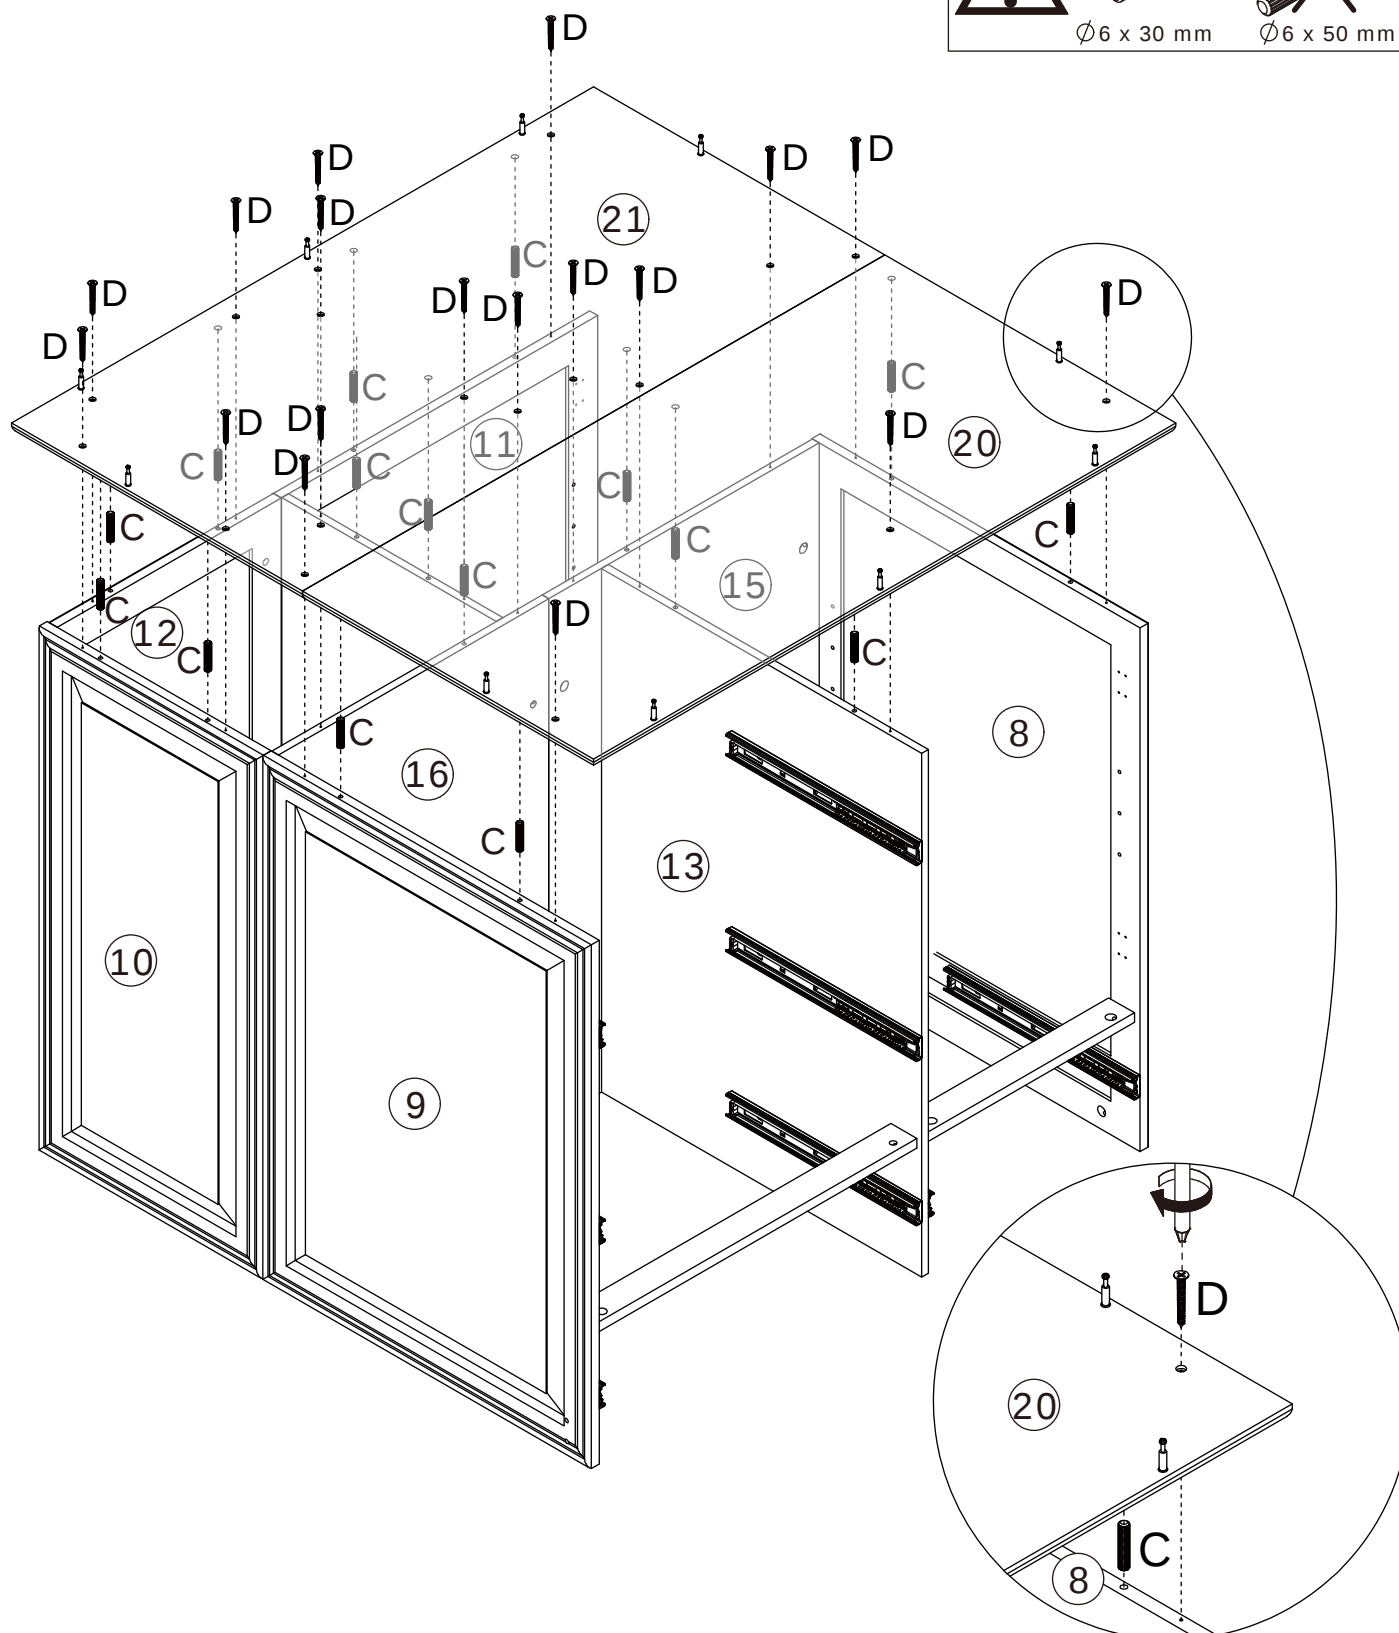



22

 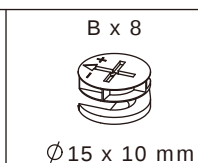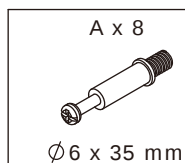

 

Screw eccentric rod (A) onto board 22.
Connect boards 22 and 23, then tighten by
turning cam lock (B) clockwise as shown.

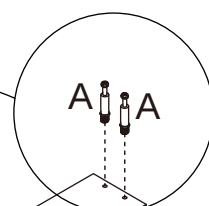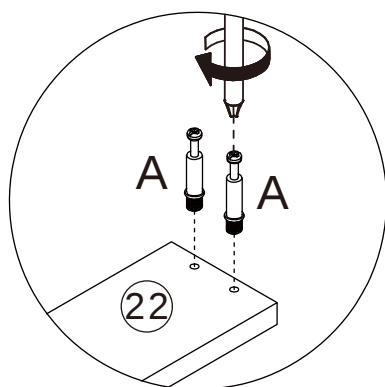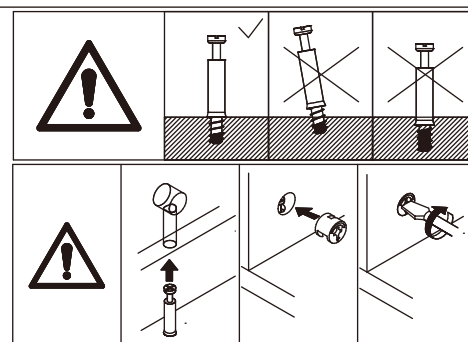



x2

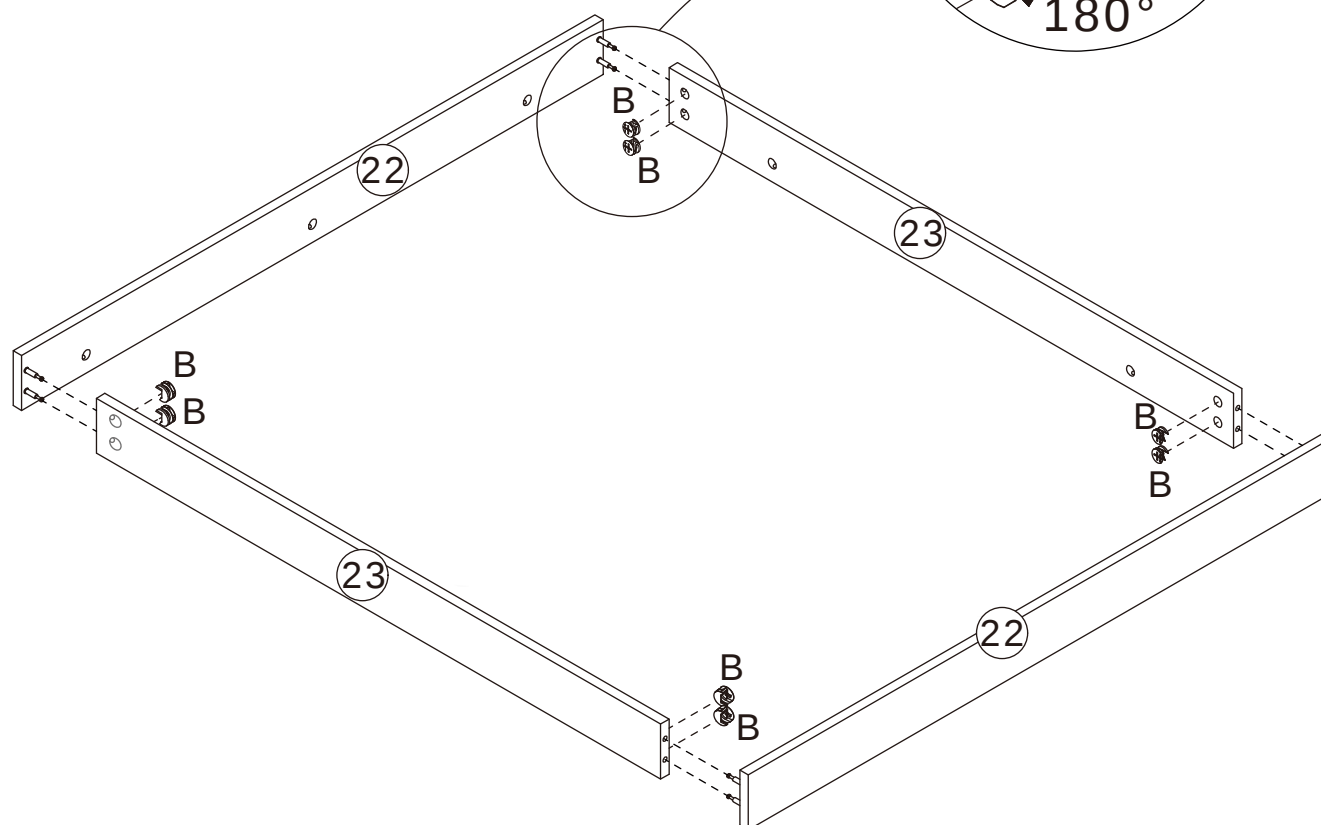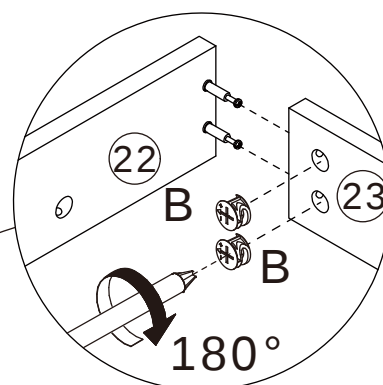

23

 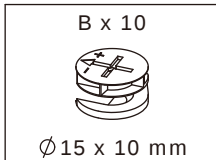


Attach the assembled components to boards 20 and 21, then tighten by turning cam lock (B) clockwise as shown.

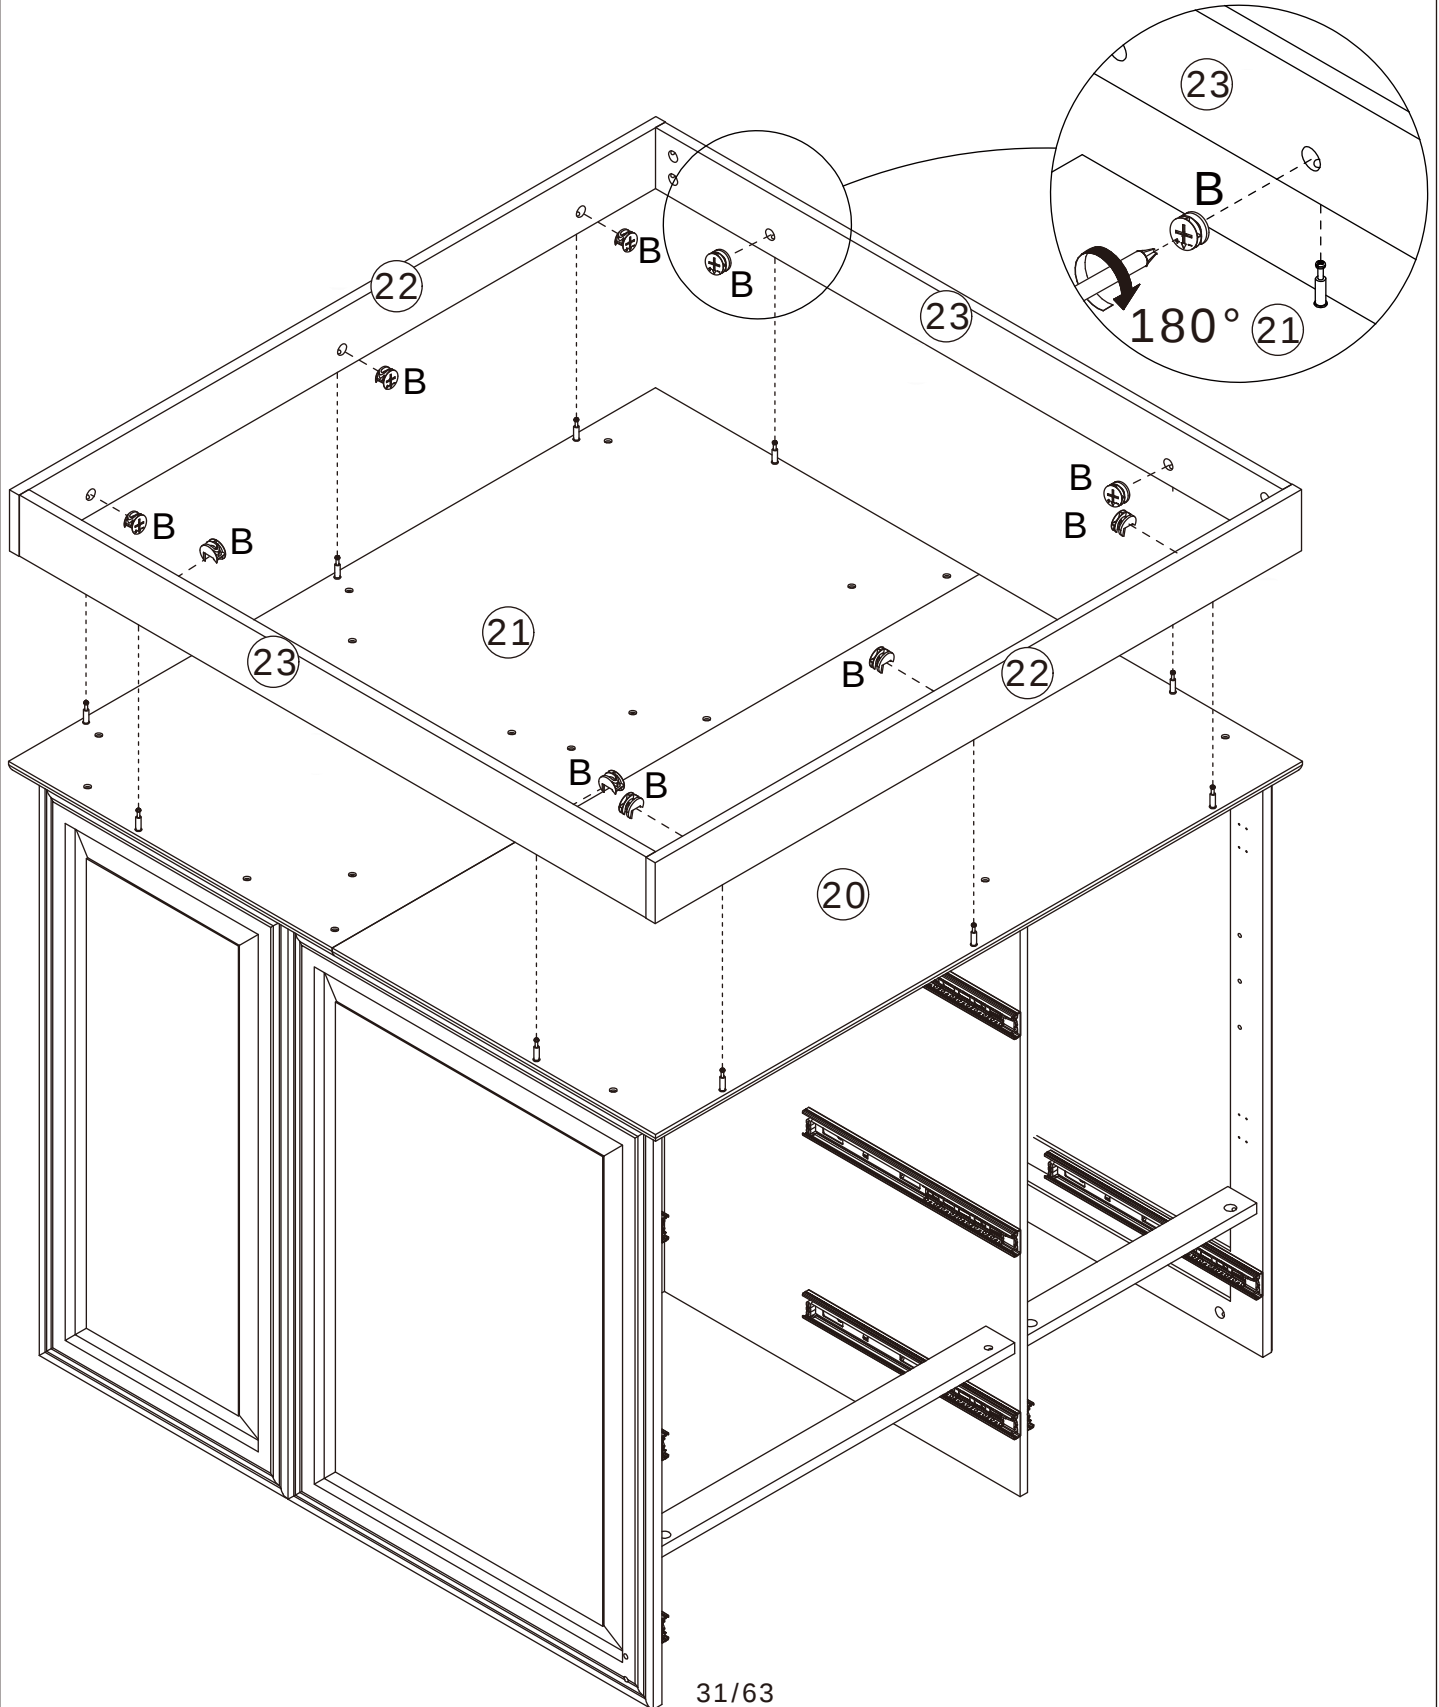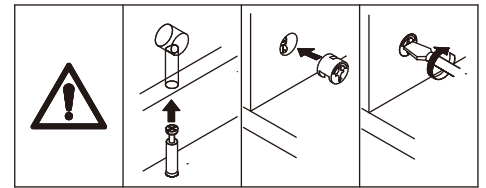


24



 
Z x 4





Apply non-slip pad (Z) to the bottom of the unit.

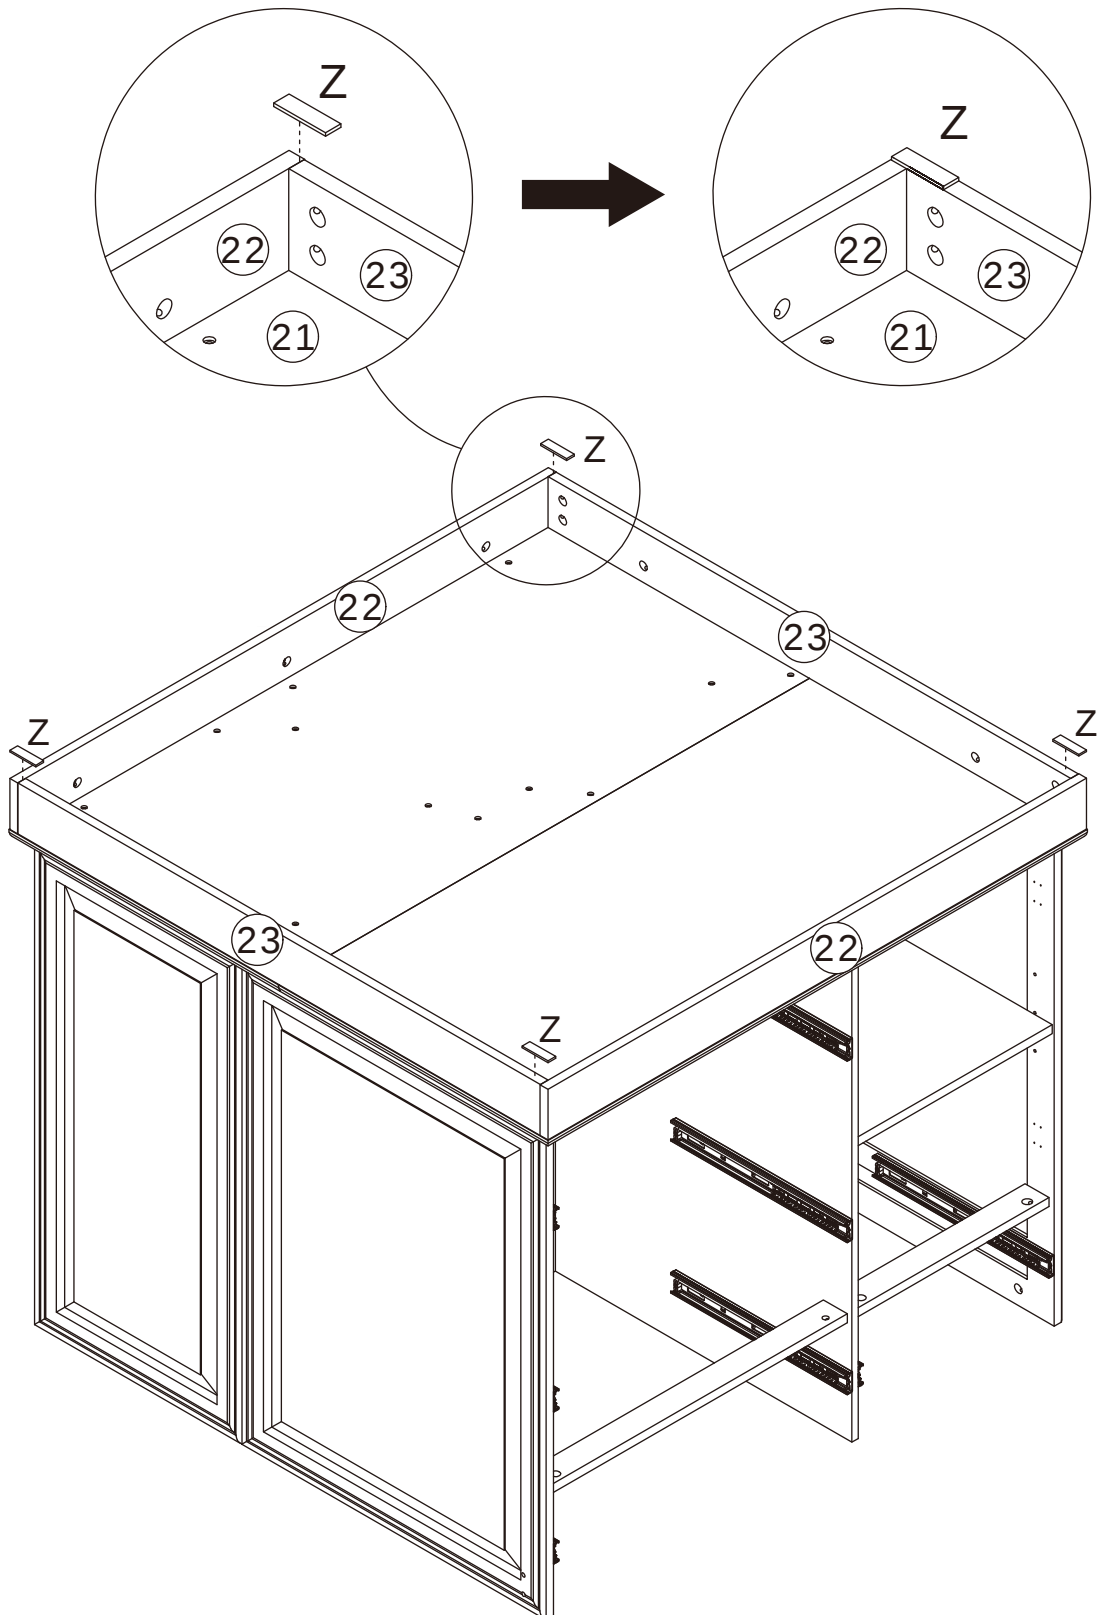

25

   F x 4  Ø 4 x 14 mm	H x 1 	K x 4  Ø 6 x 10 mm	T x 4 	
---	--	---	---	---

First, install nut (K) onto board 6, then screw rod (T) into board 6.
Secure part (H) to boards 5 and 6 using screw (F).

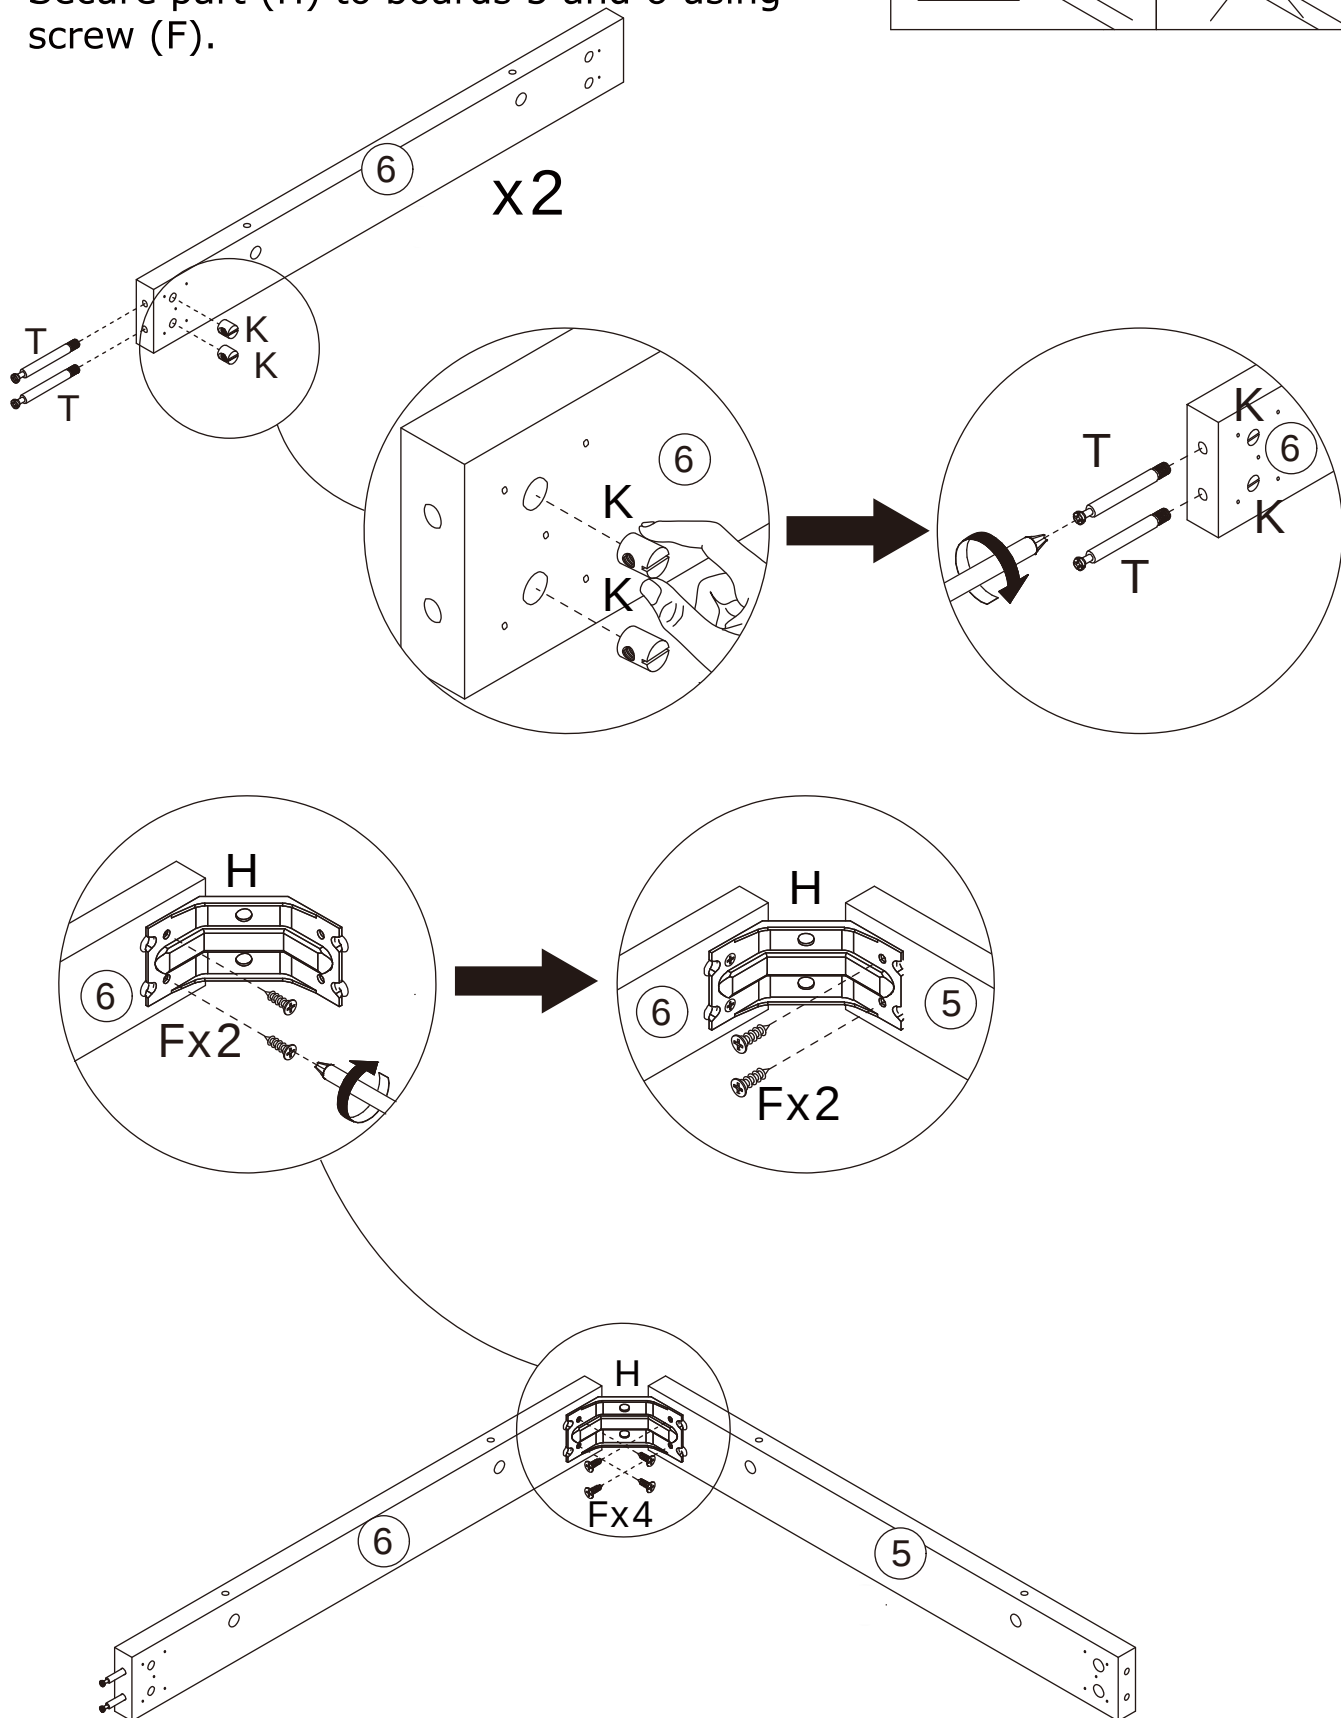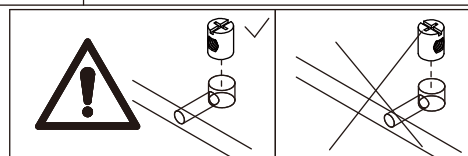



26

F x 8




Ø4 x 14 mm

  H x 2



Secure part (H) to boards 4, 6 and 3, 5, respectively, using screw (F).

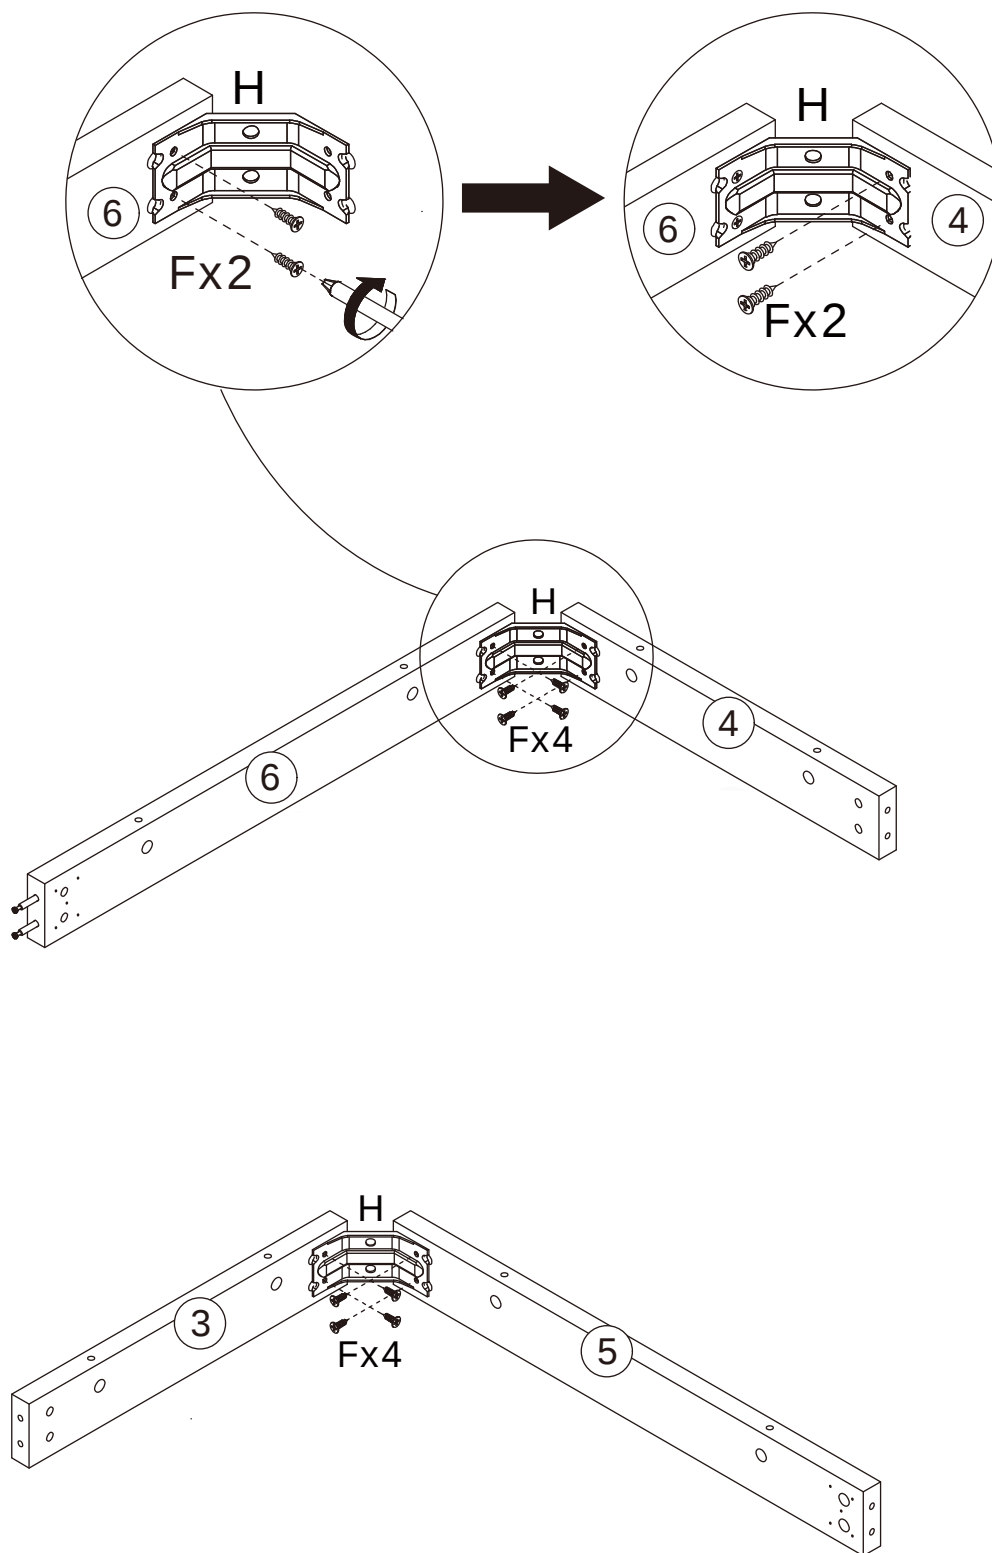

27

L x 4



Ø8 x 40 mm

M x 4



N x 4



 
W x 1



M5

Secure boards 3, 5, 4, 6 and part (H) to leg support 7 using washer (N&M) and screw (L).


L



M



N

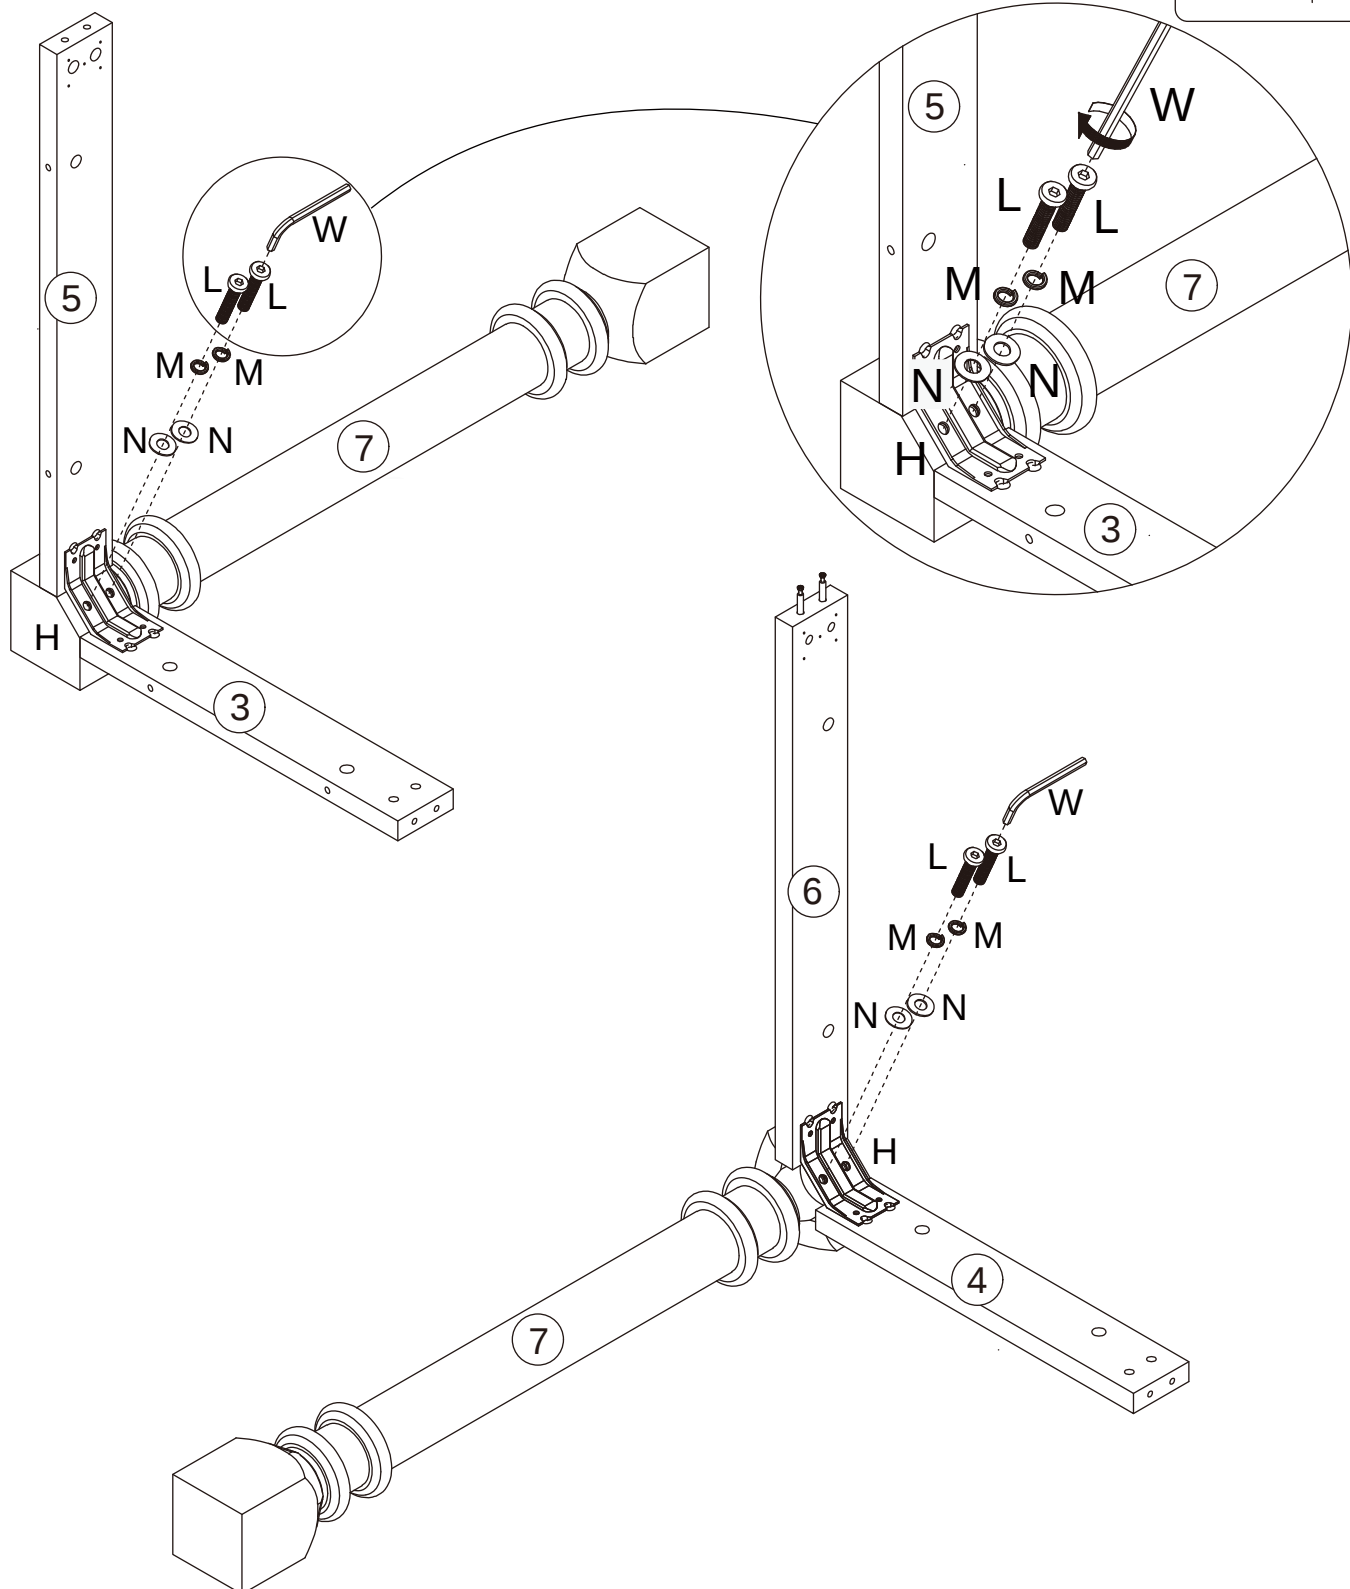

28

L x 2



Ø8 x 40 mm

M x 2



N x 2



 
W x 1



M5

Secure boards 5, 6 and part (H) to leg support 7 using washer (N&M) and screw (L).


L



M



N

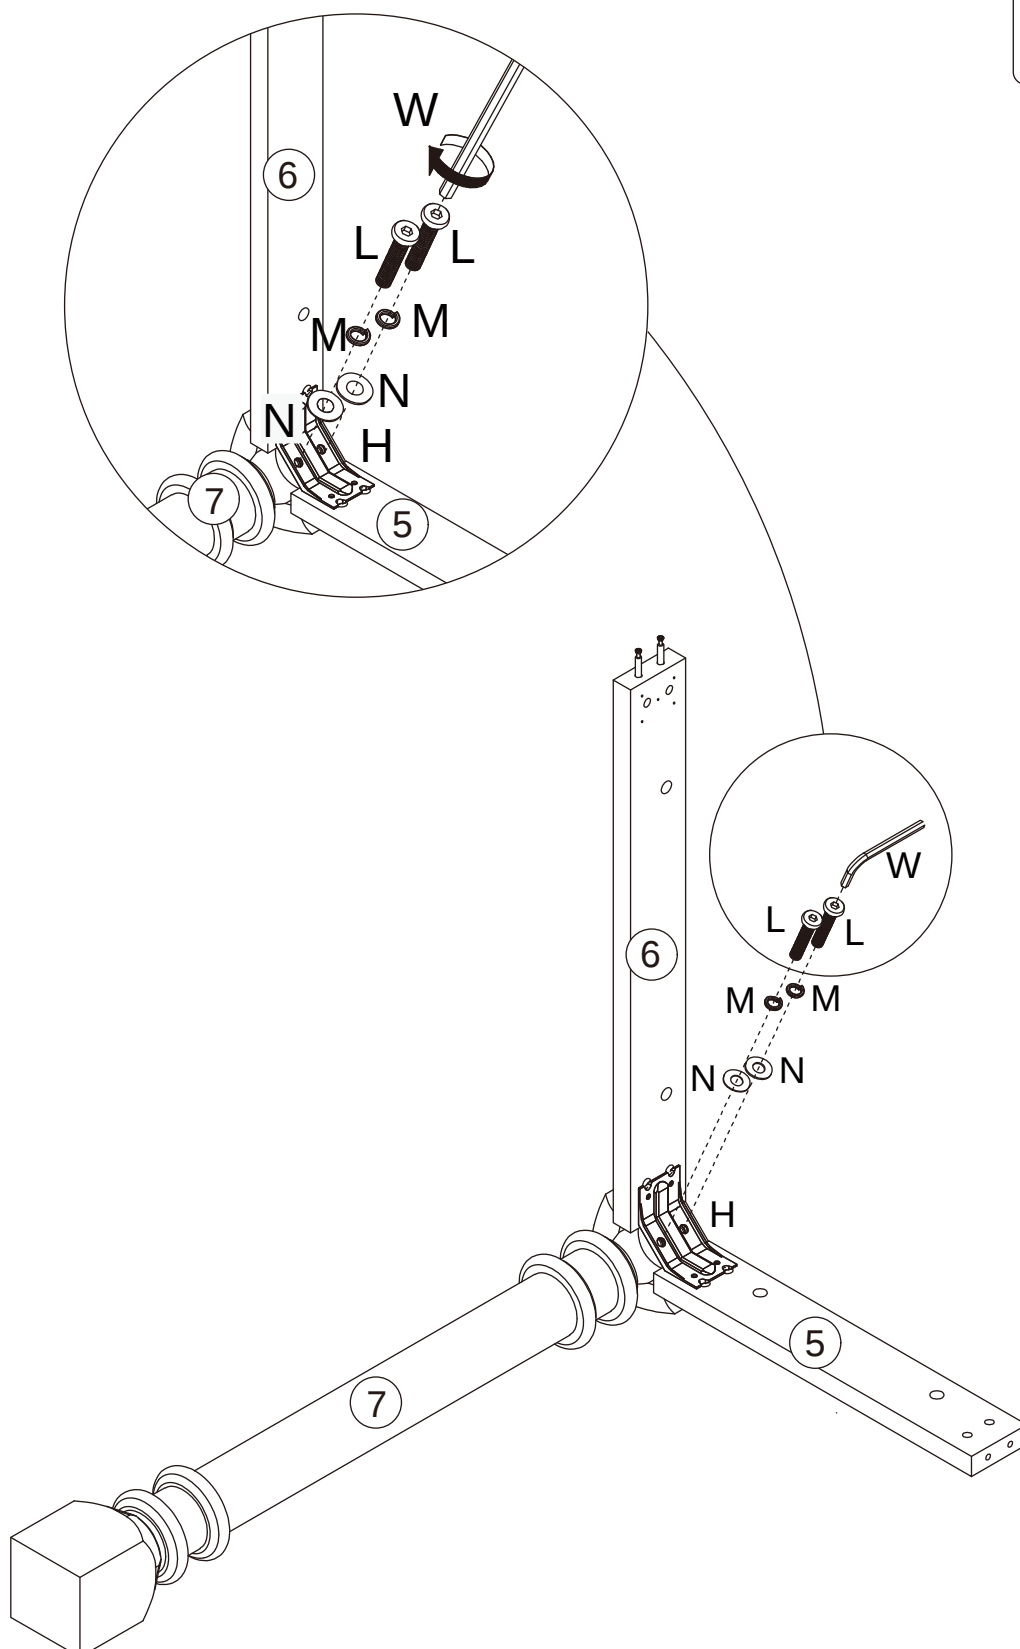


29



AS x 3







Apply non-slip pad (AS) onto leg support 7.

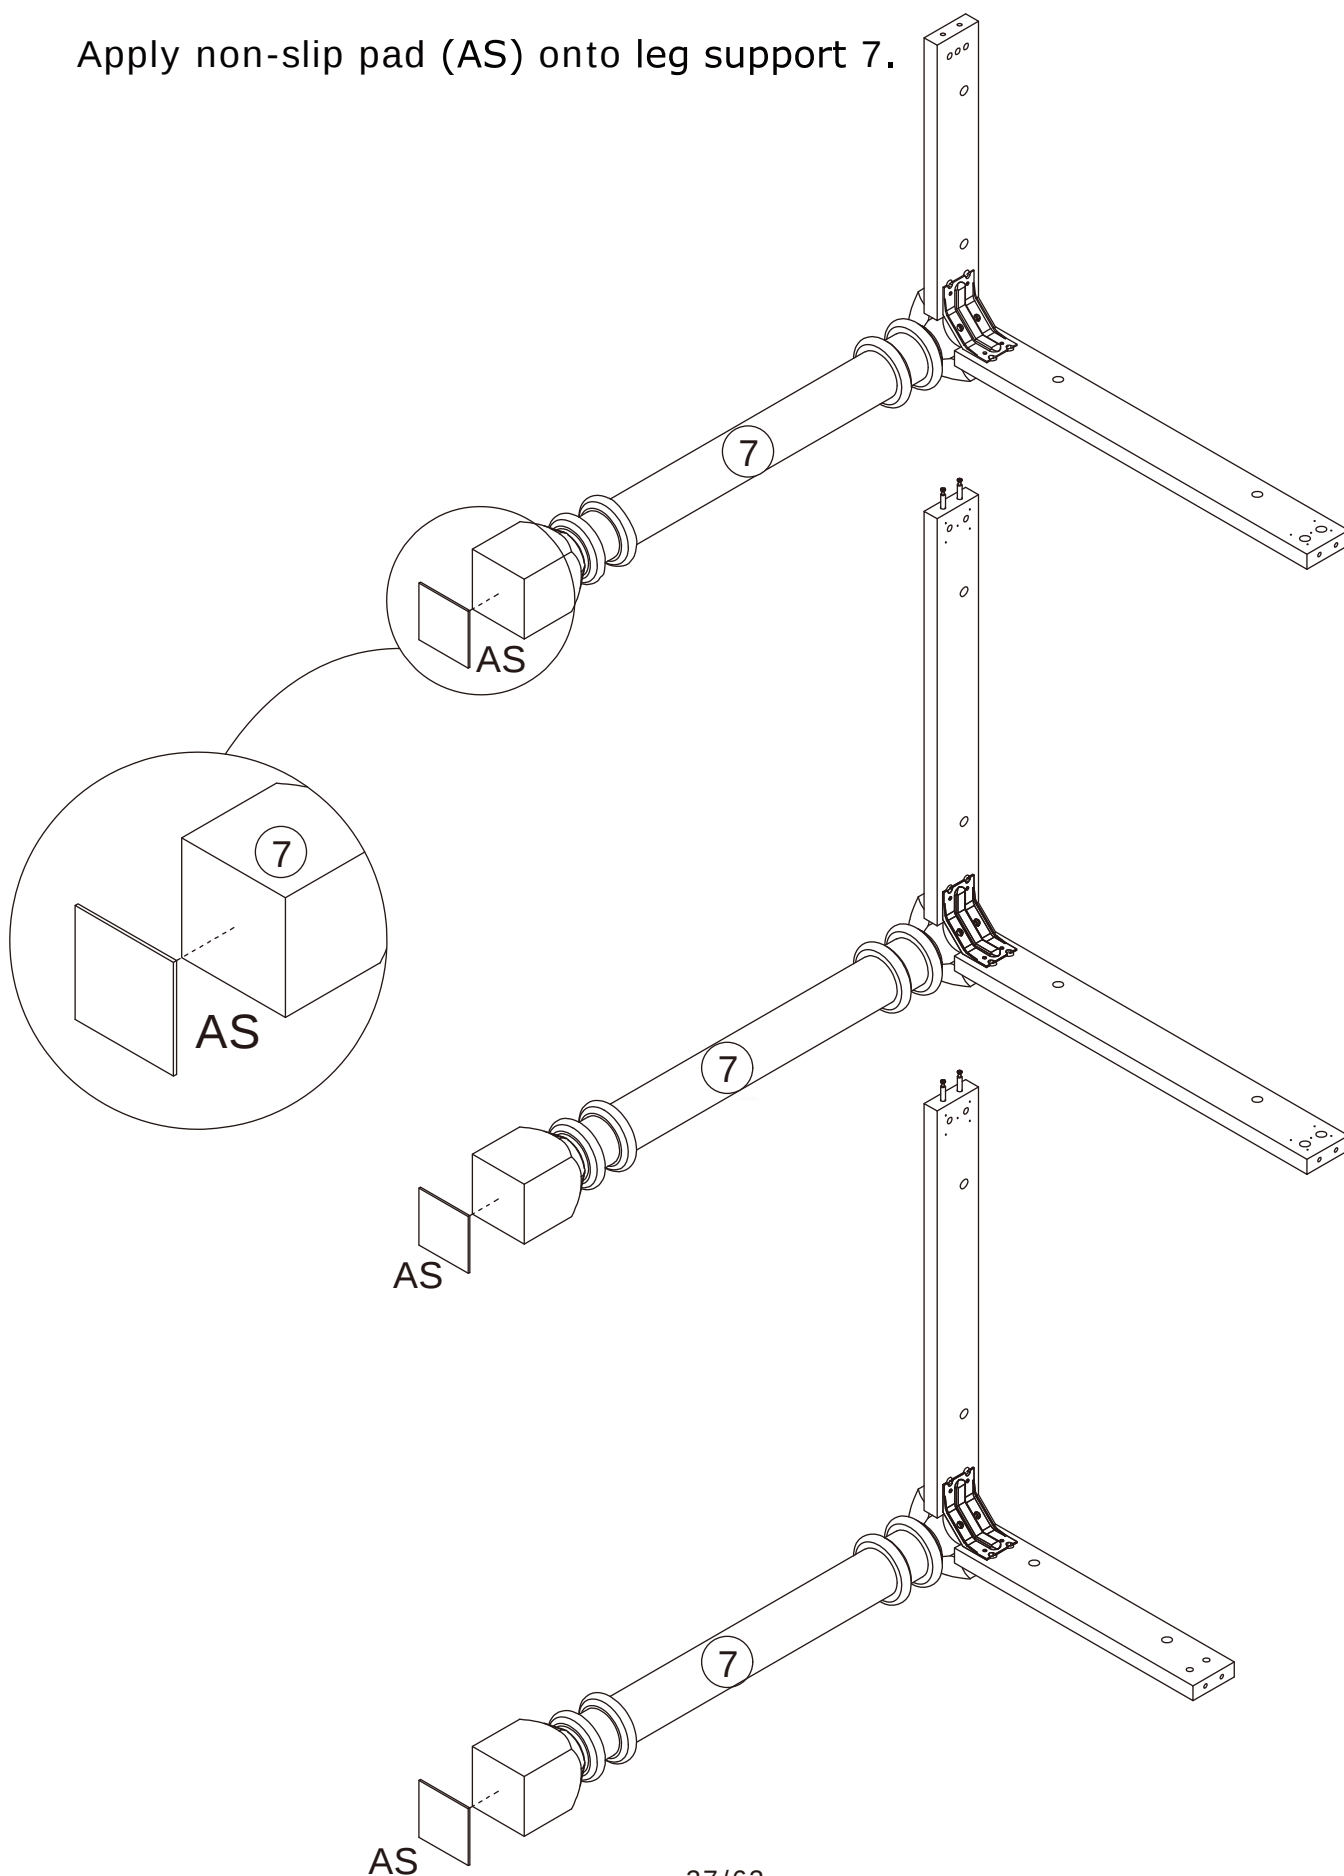

30

  J x 2  Ø 6 x 50 mm	K x 2  Ø 6 x 10 mm	V x 1  M4	
---	---	--	--

First, install nut (K) onto board 4.
Secure board 4 to board 9 using screw (J).

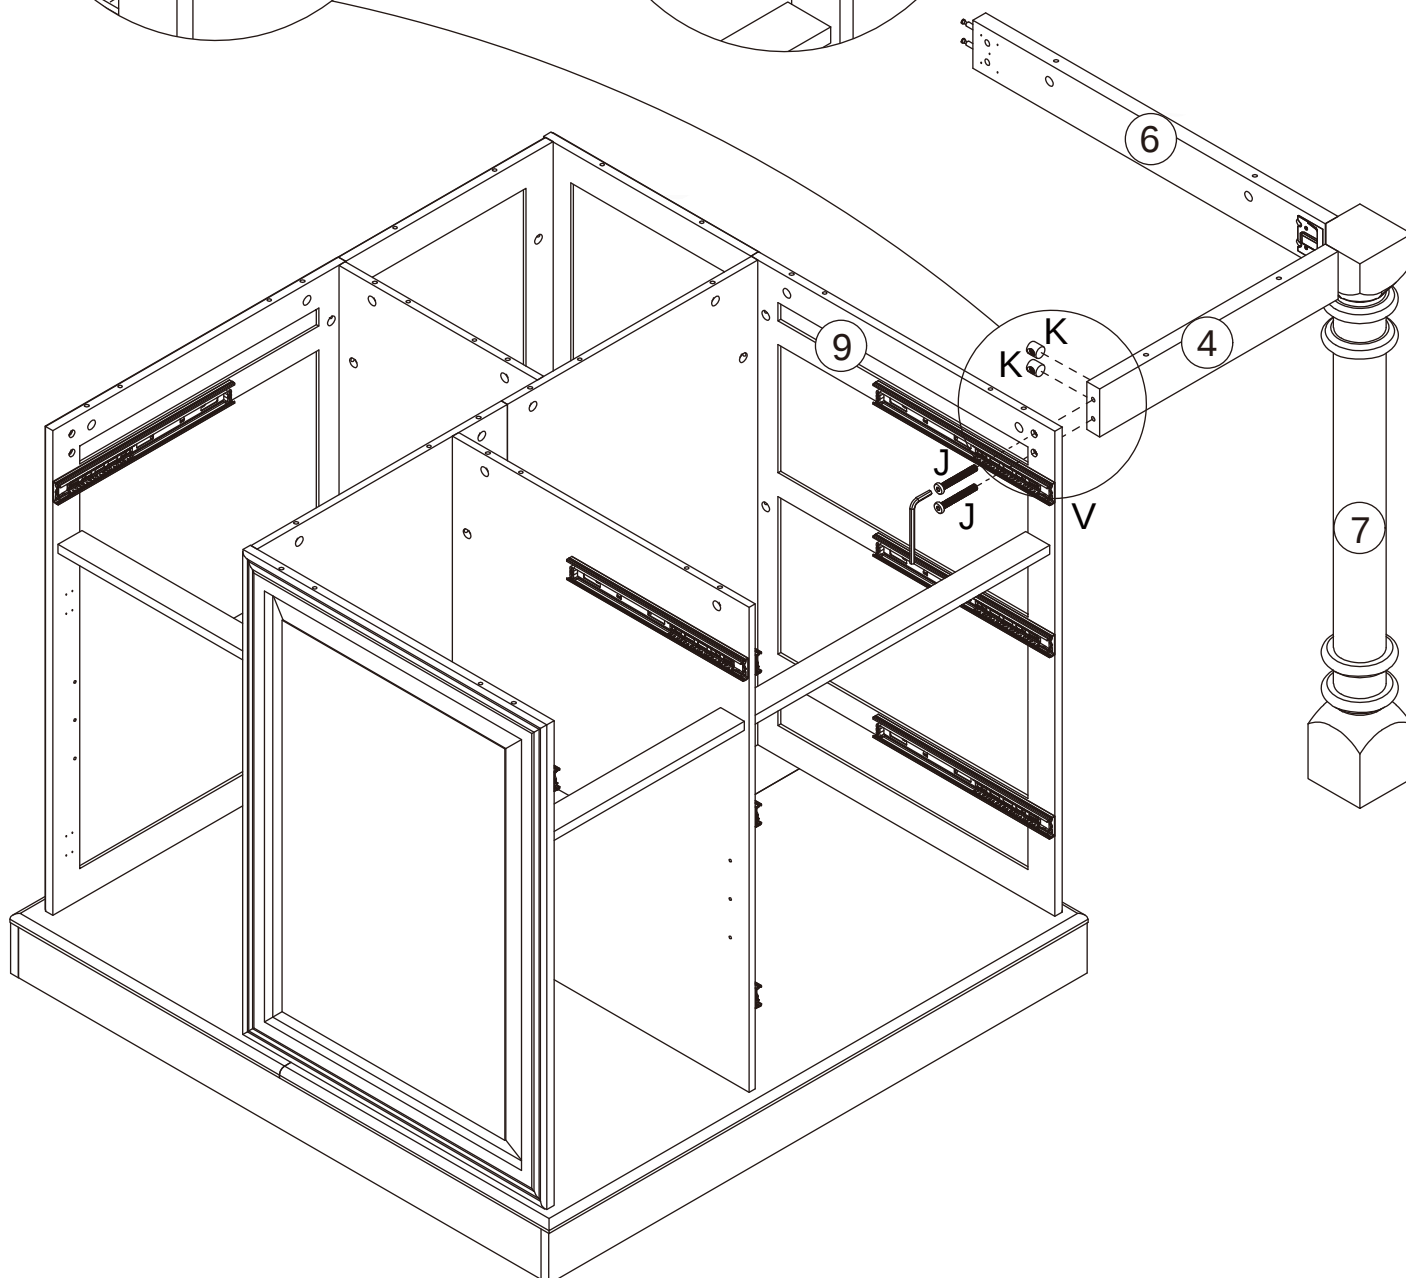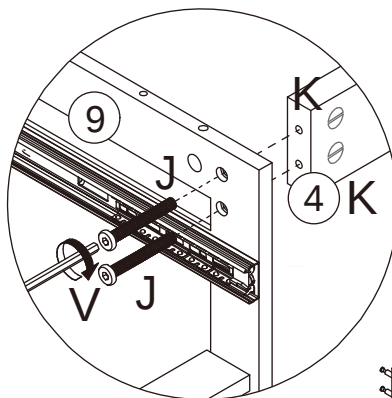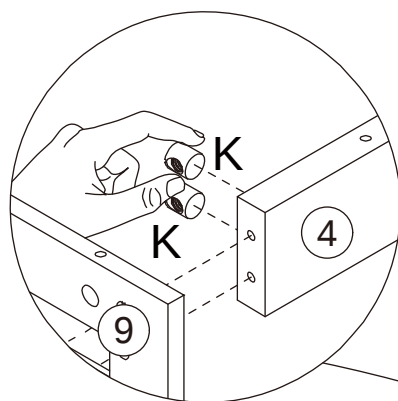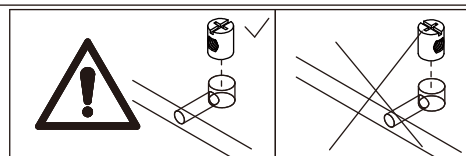


31



B x 2



 Ø 15 x 10 mm



Connect boards 5 and 6, then tighten by turning cam lock (B) clockwise as shown.

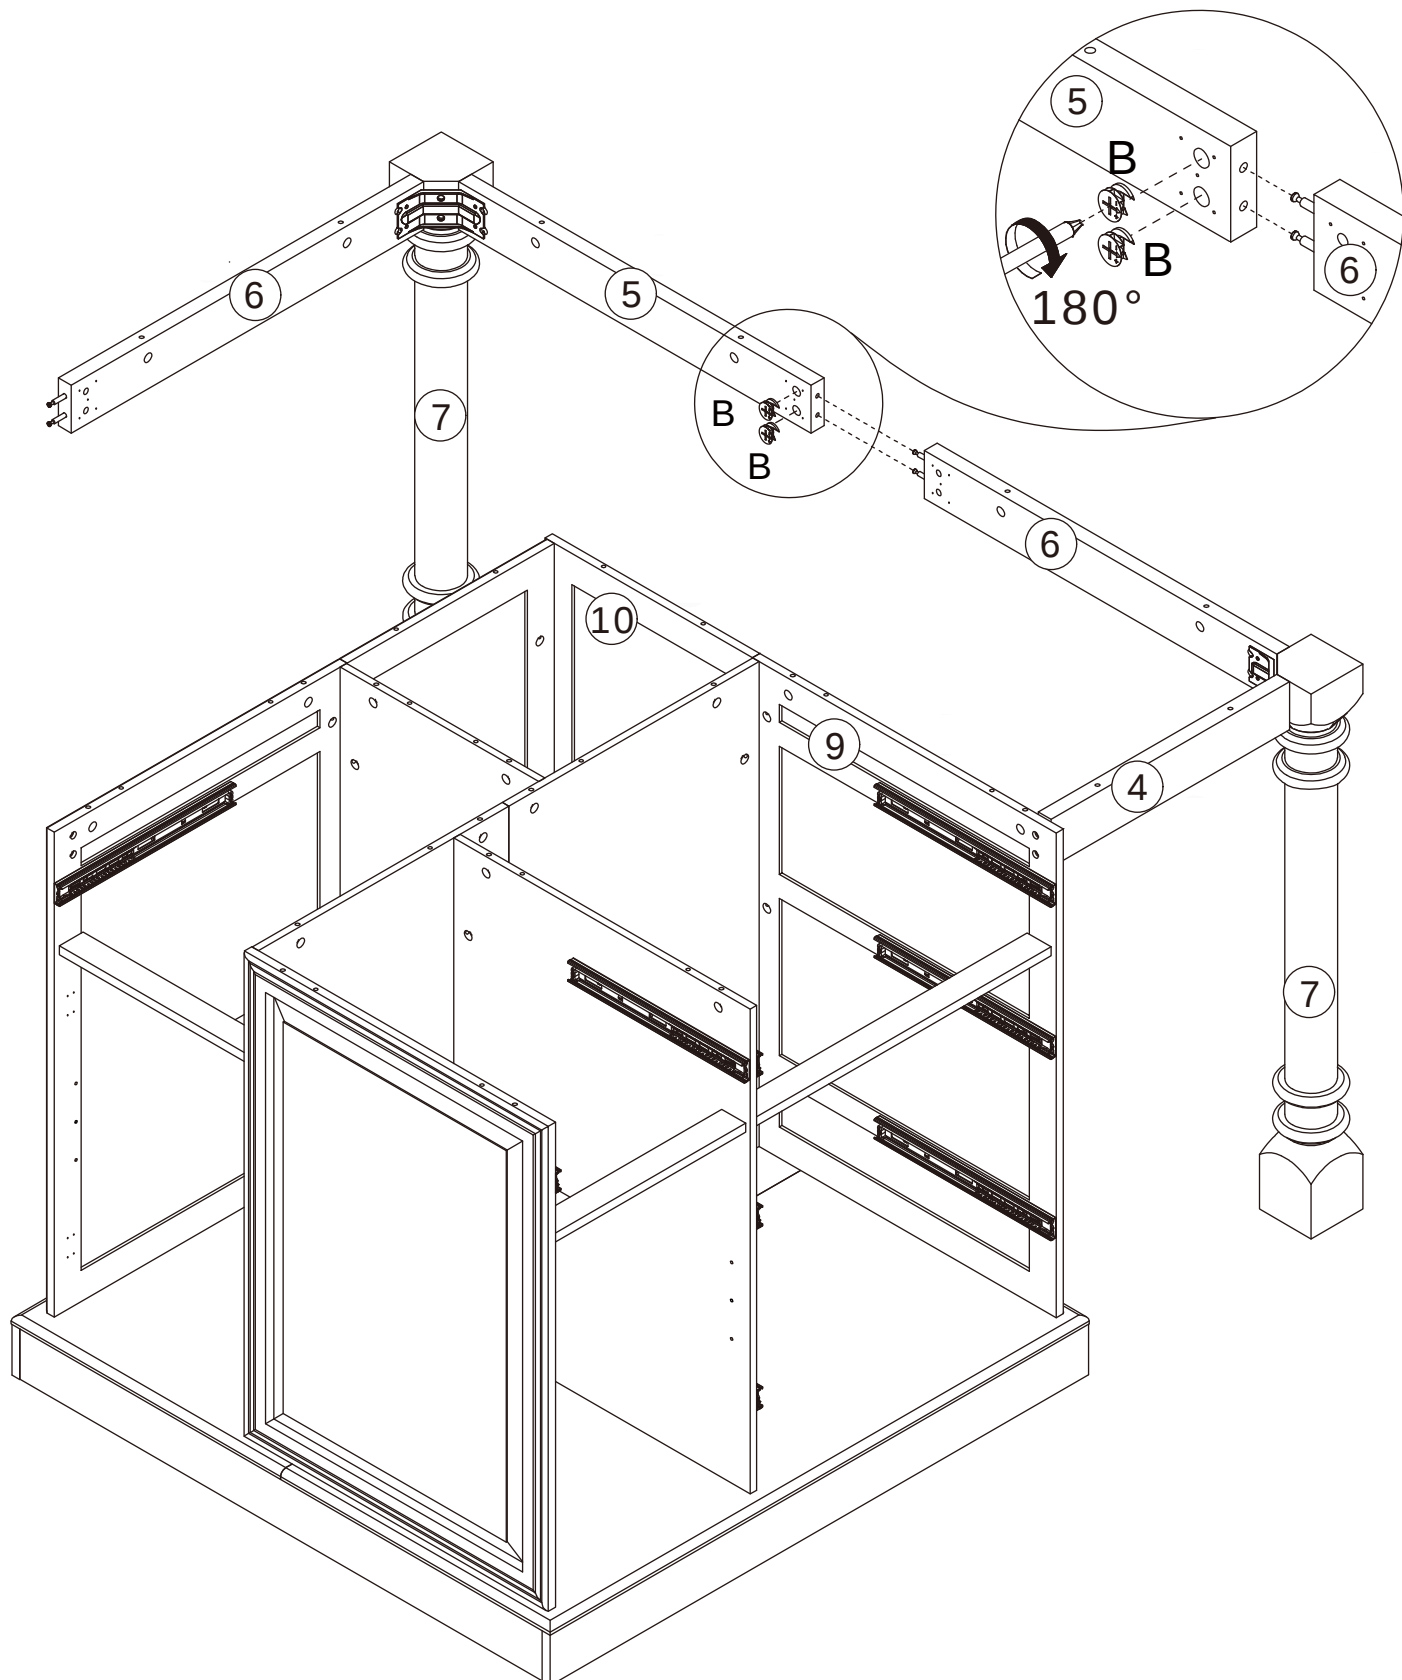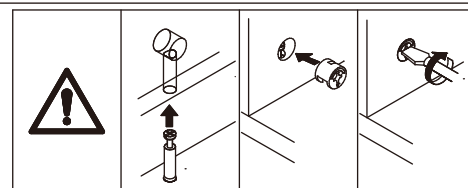


32



B x 2




 
Ø 15 x 10 mm





Connect boards 5 and 6, then tighten by turning cam lock (B) clockwise as shown.

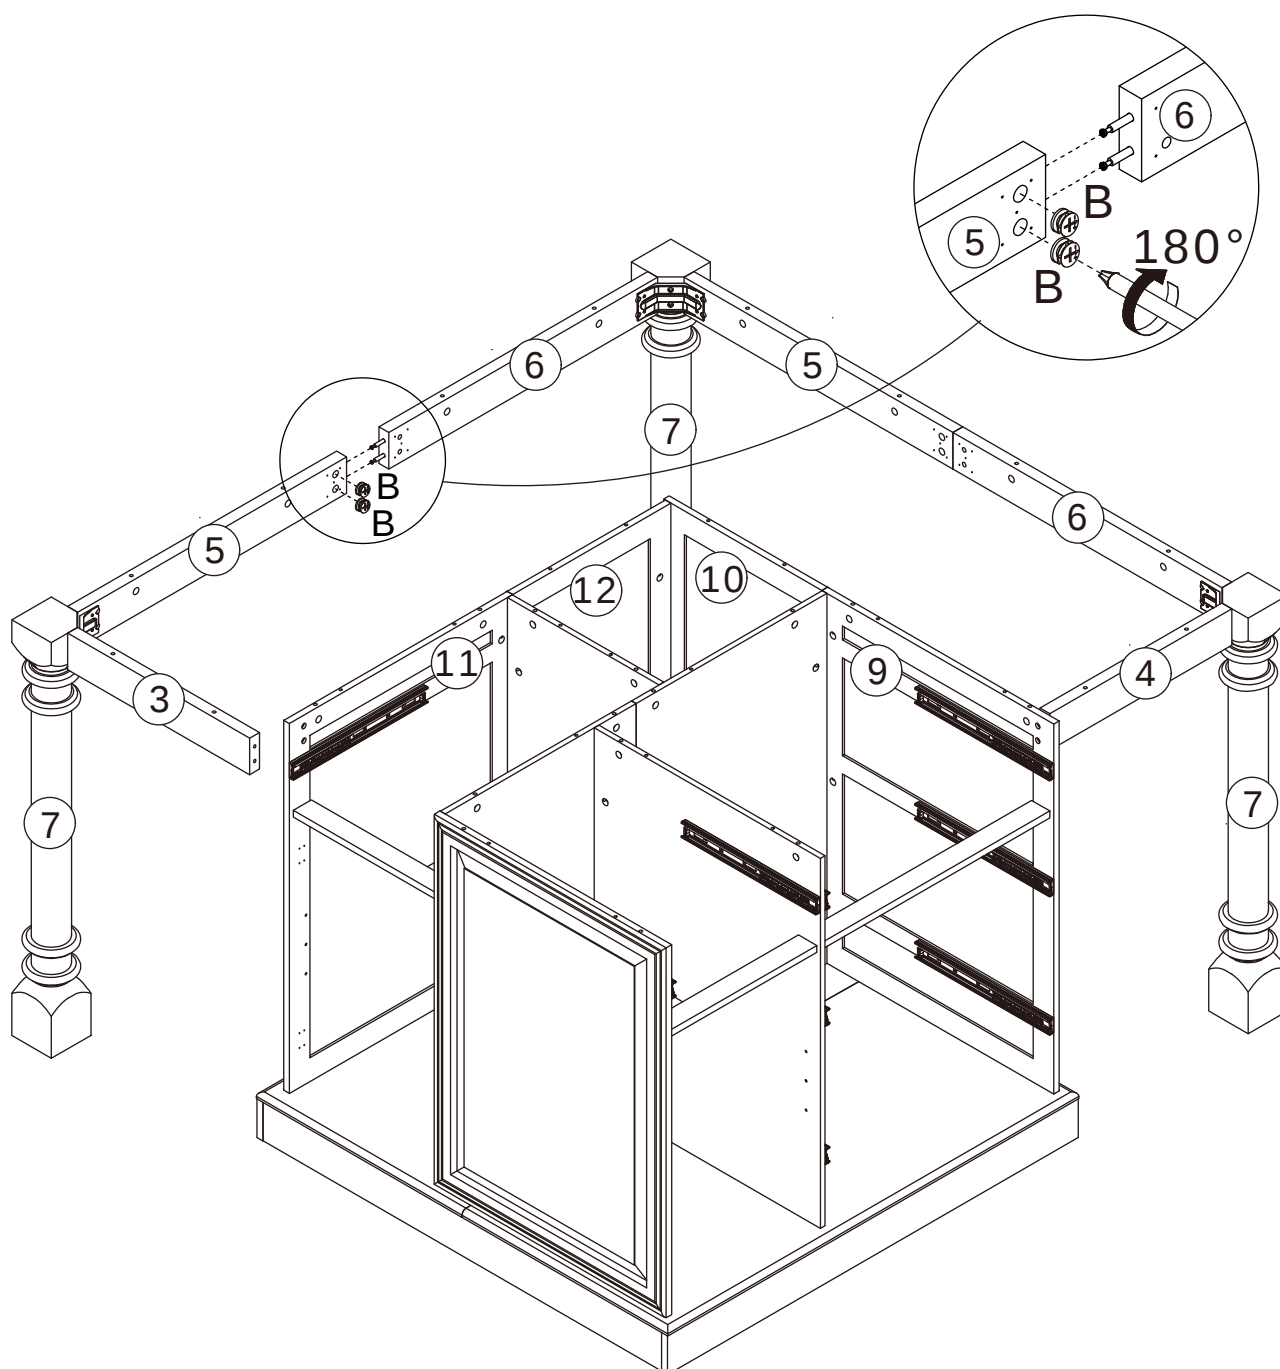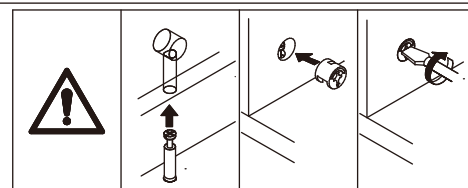

33

  J x 2  Ø 6 x 50 mm	K x 2  Ø 6 x 10 mm	V x 1  M4	
---	---	--	--

First, install nut (K) onto board 3.
Secure board 3 to board 11 using screw (J).

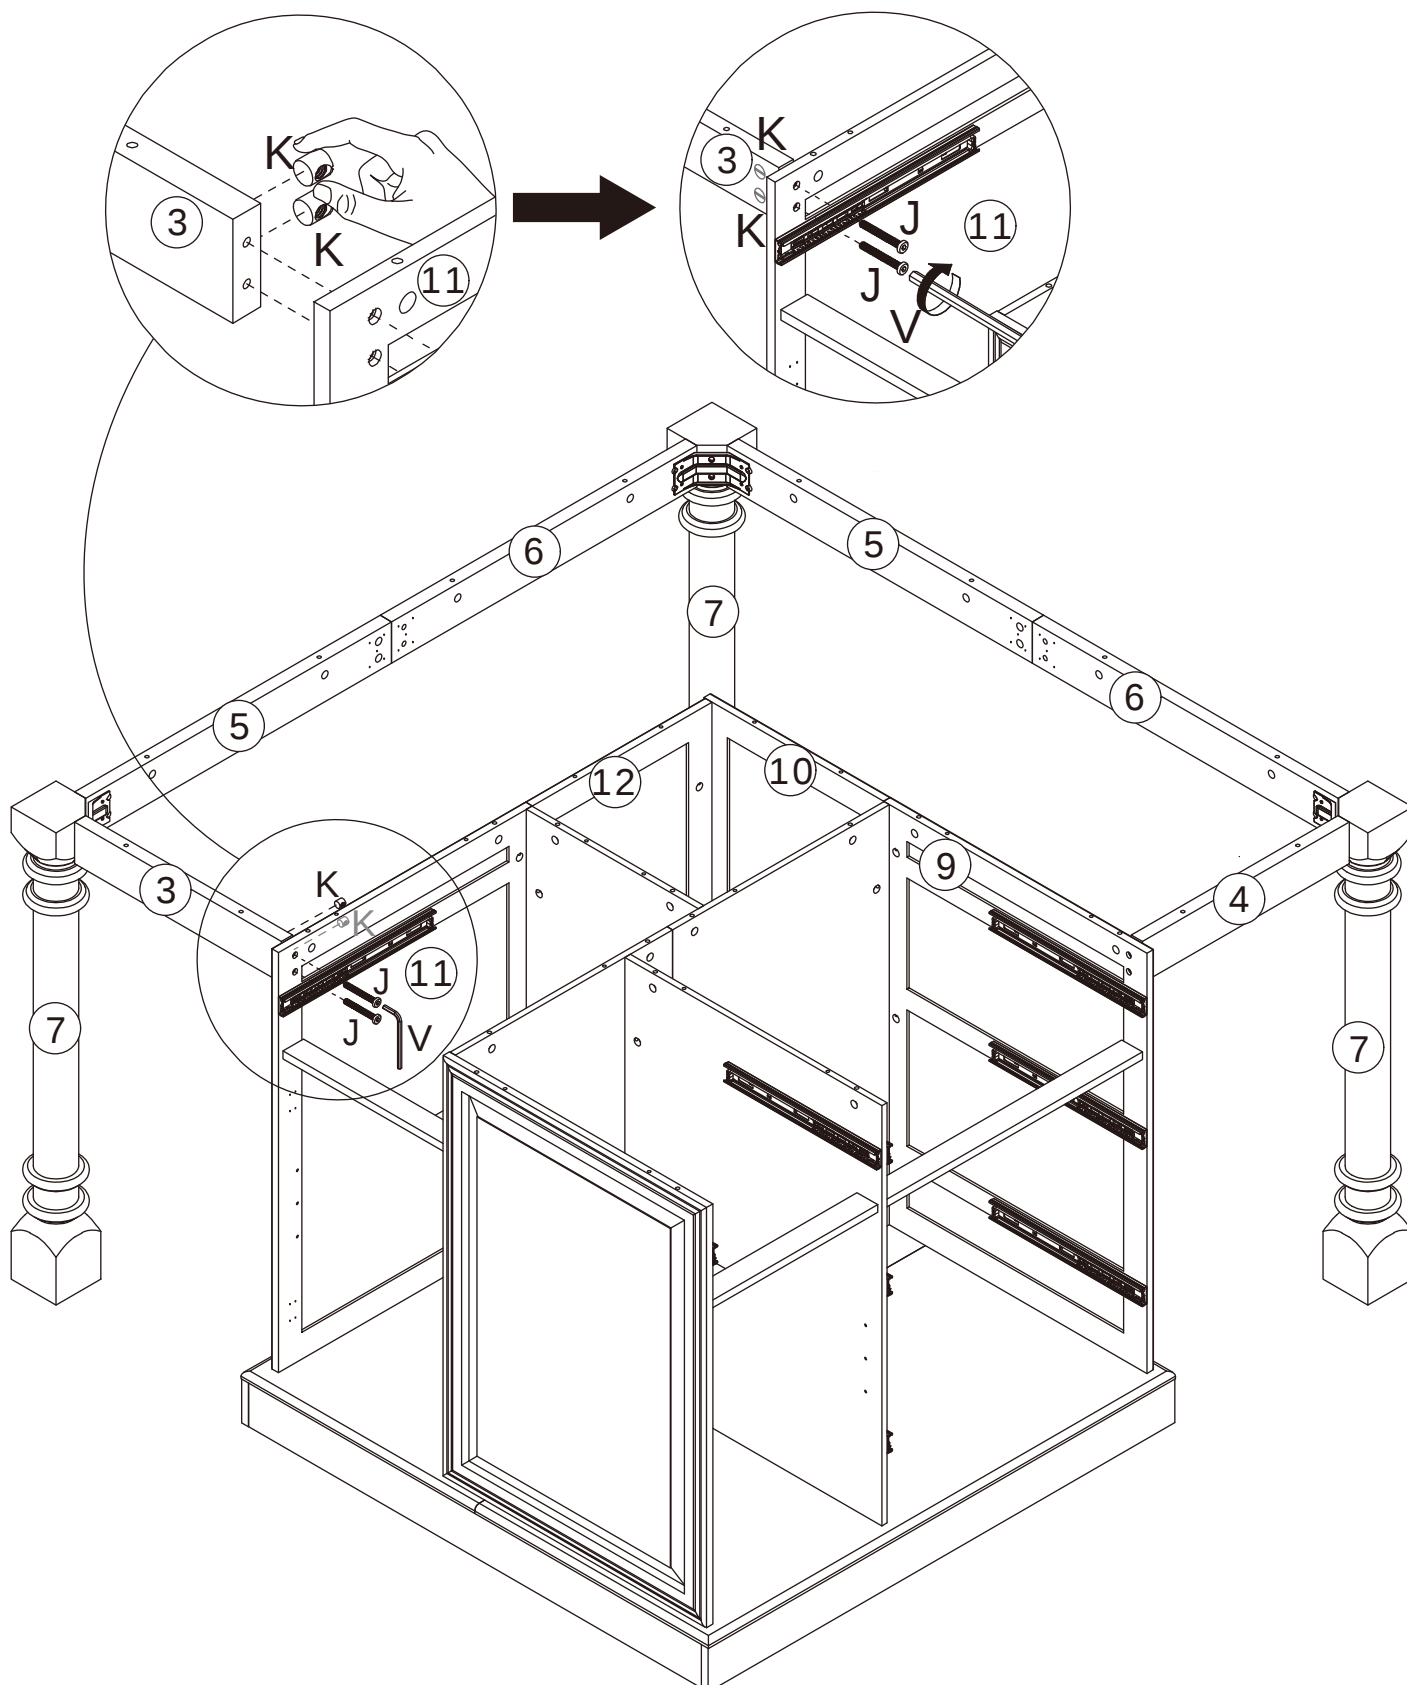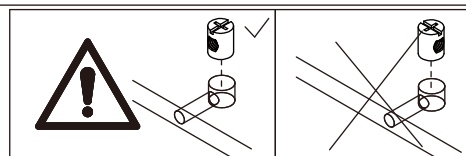


34

F x 20




Ø 4 x 14 mm


 
S x 2





Secure iron sheet (S) to boards 5 and 6 using screw (F).

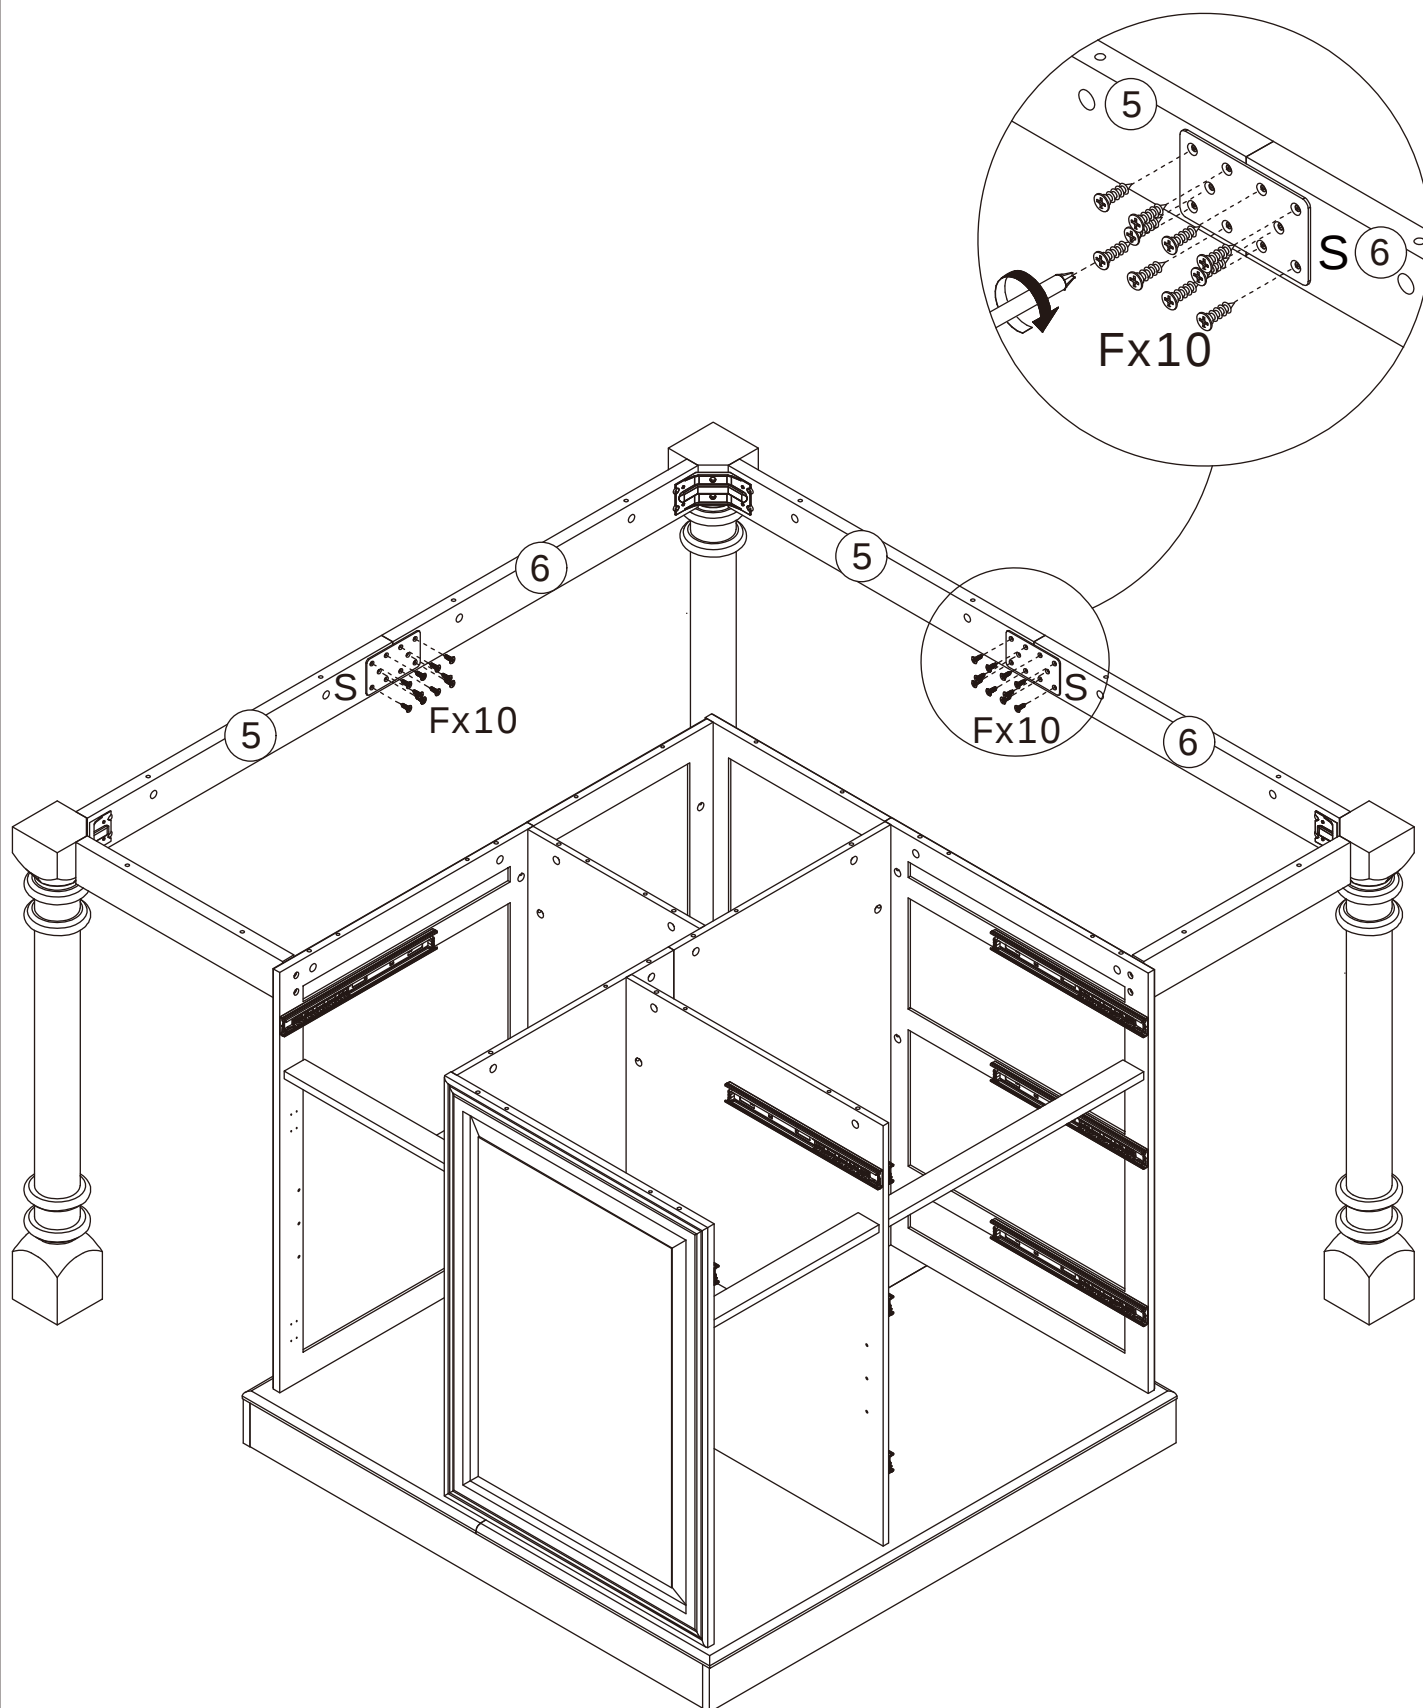



35

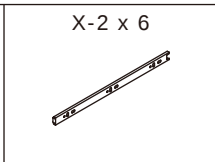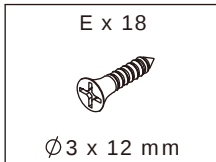



Secure slide rail (X-2) to boards 31 and 32 using screw (E).

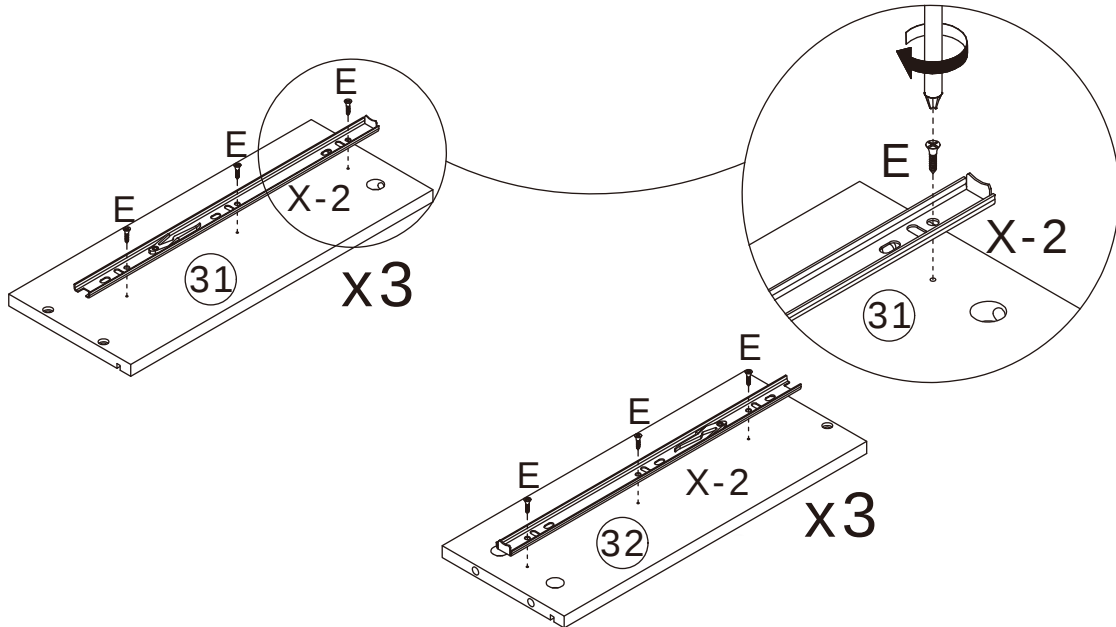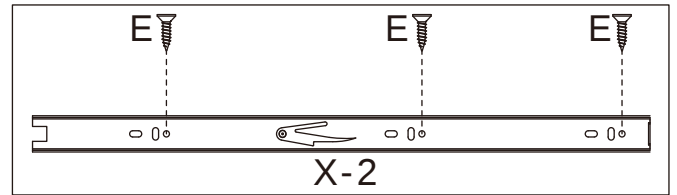


36

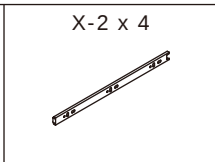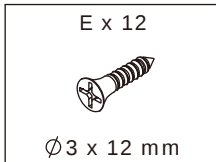



Secure slide rail (X-2) to boards 36 and 37 using screw (E).

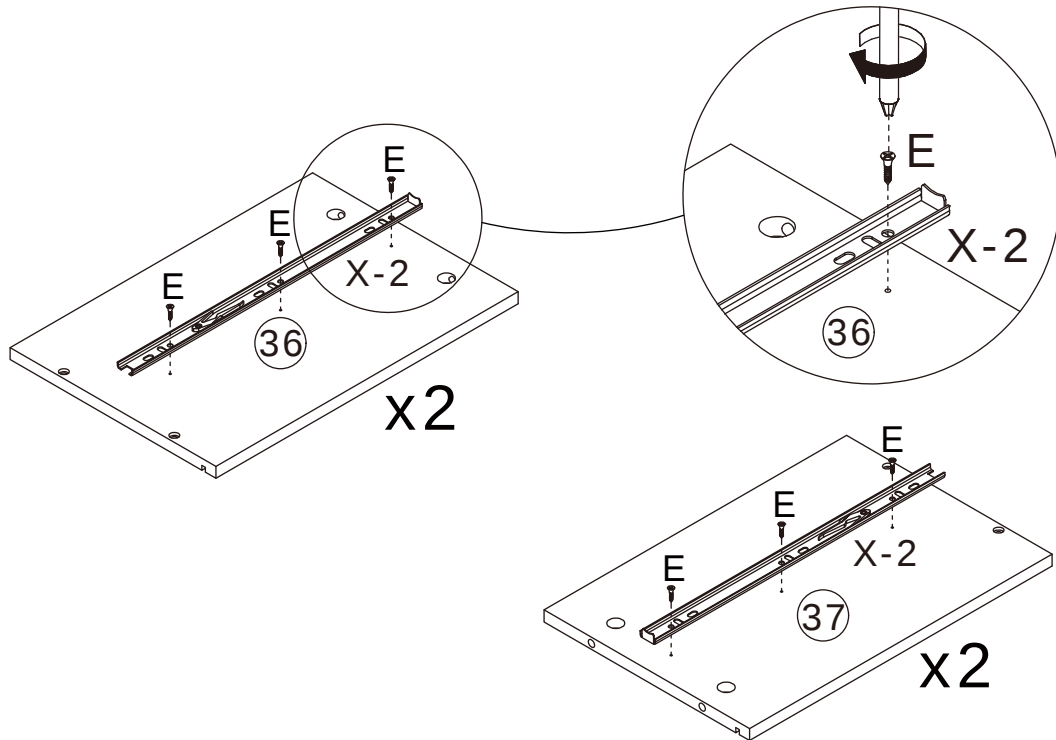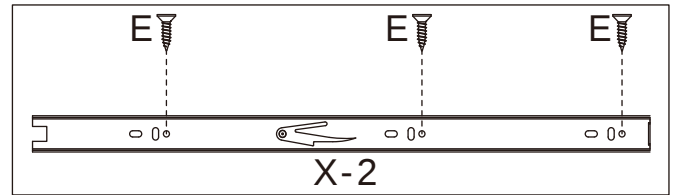


37

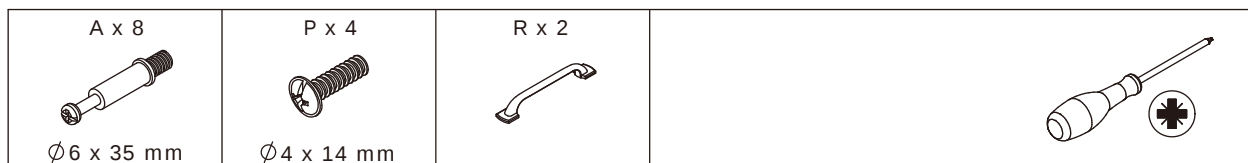



Screw eccentric rod (A) onto boards 27 and 28.

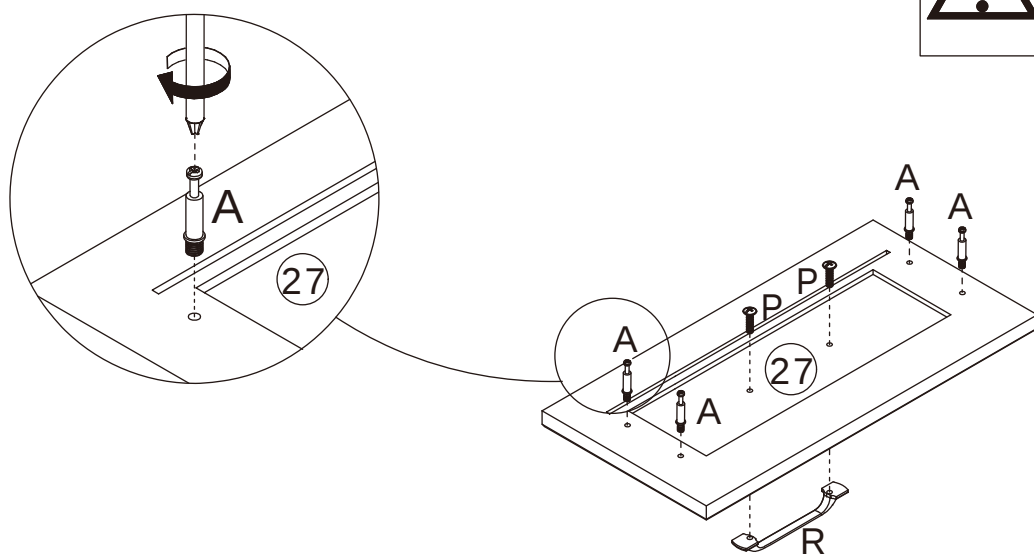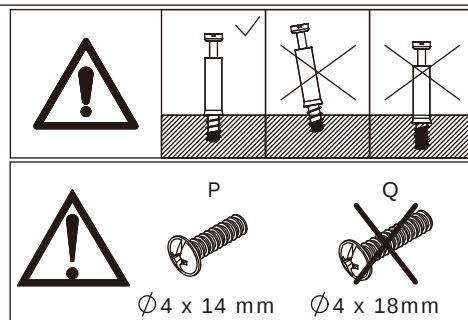


Secure handle (R) to boards 27 and 28 using screw (P).

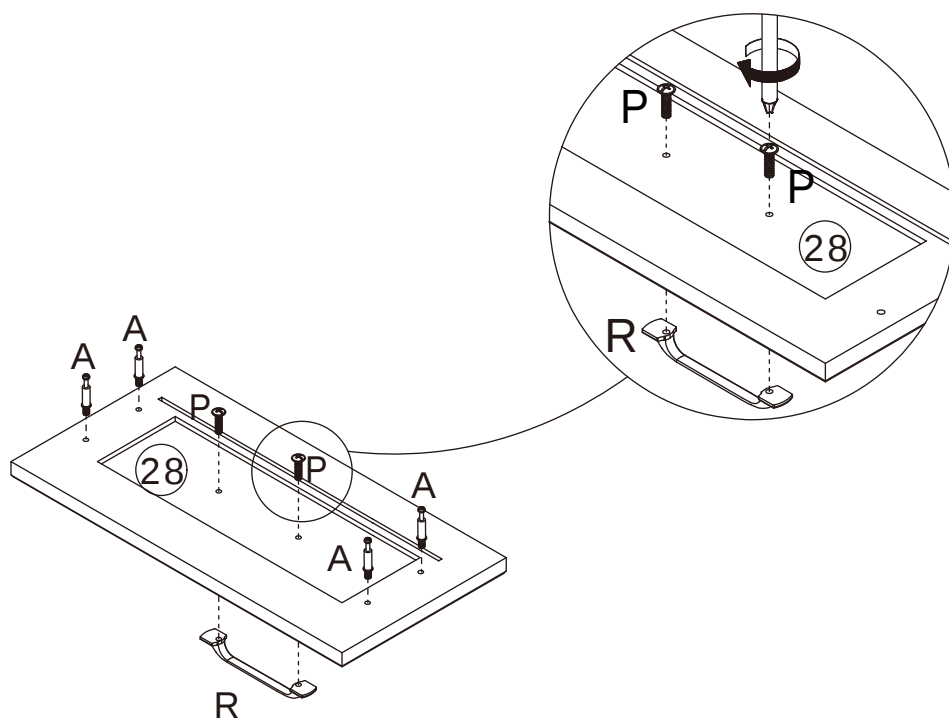

38

 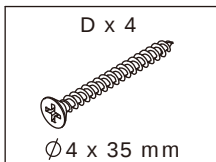


Secure boards 31 and 32 to board 33 using screw (D).

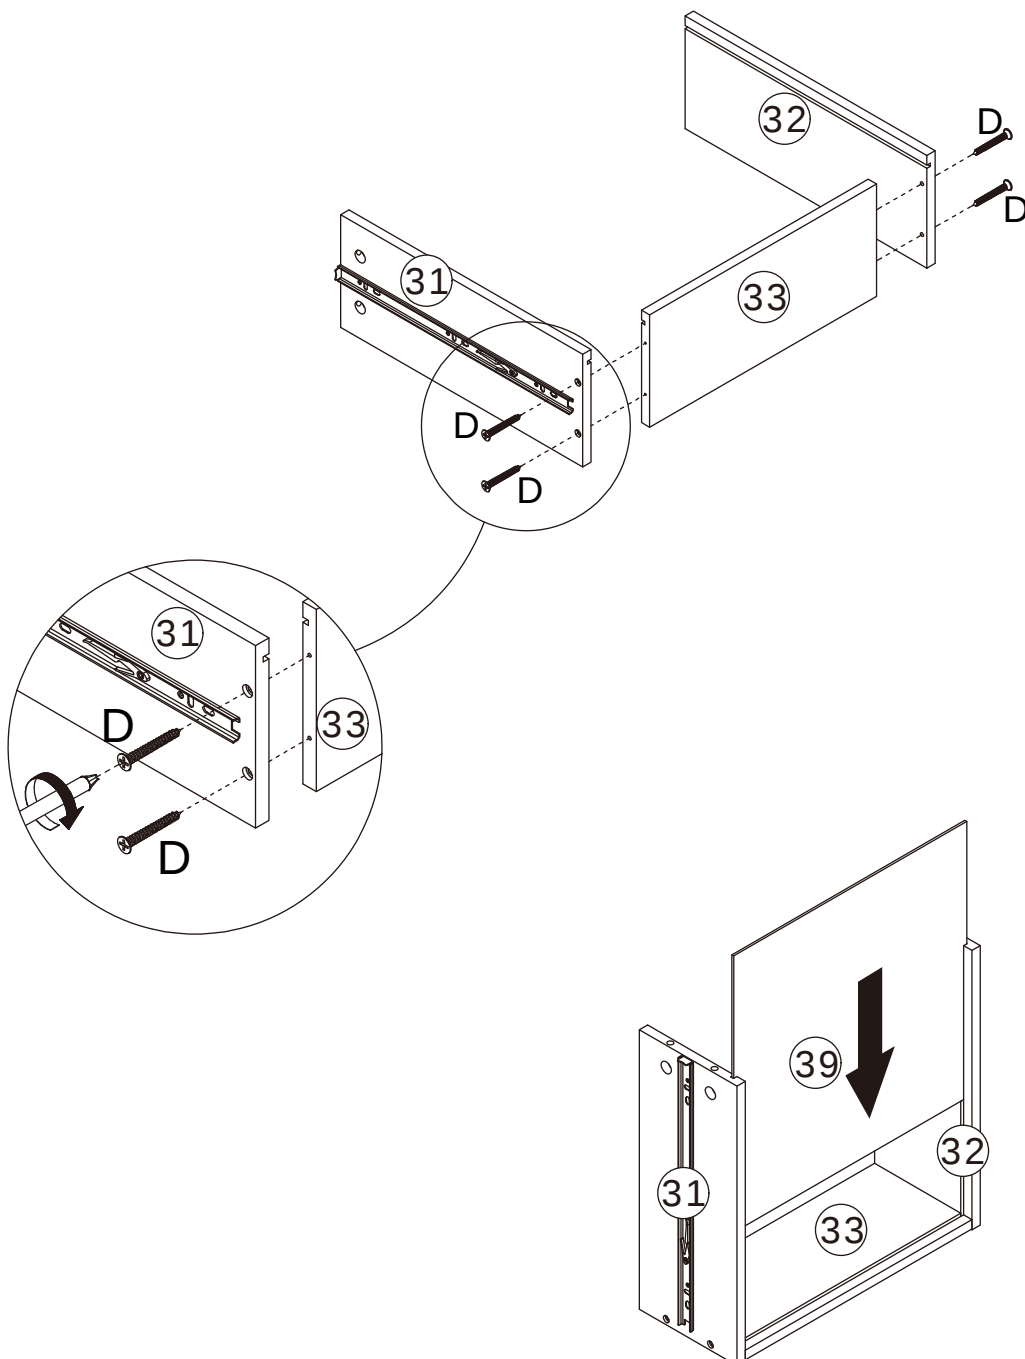


Insert board 39 along the available grooves.

 
39



Secure boards 31 and 32 to board 34 using screw (D).

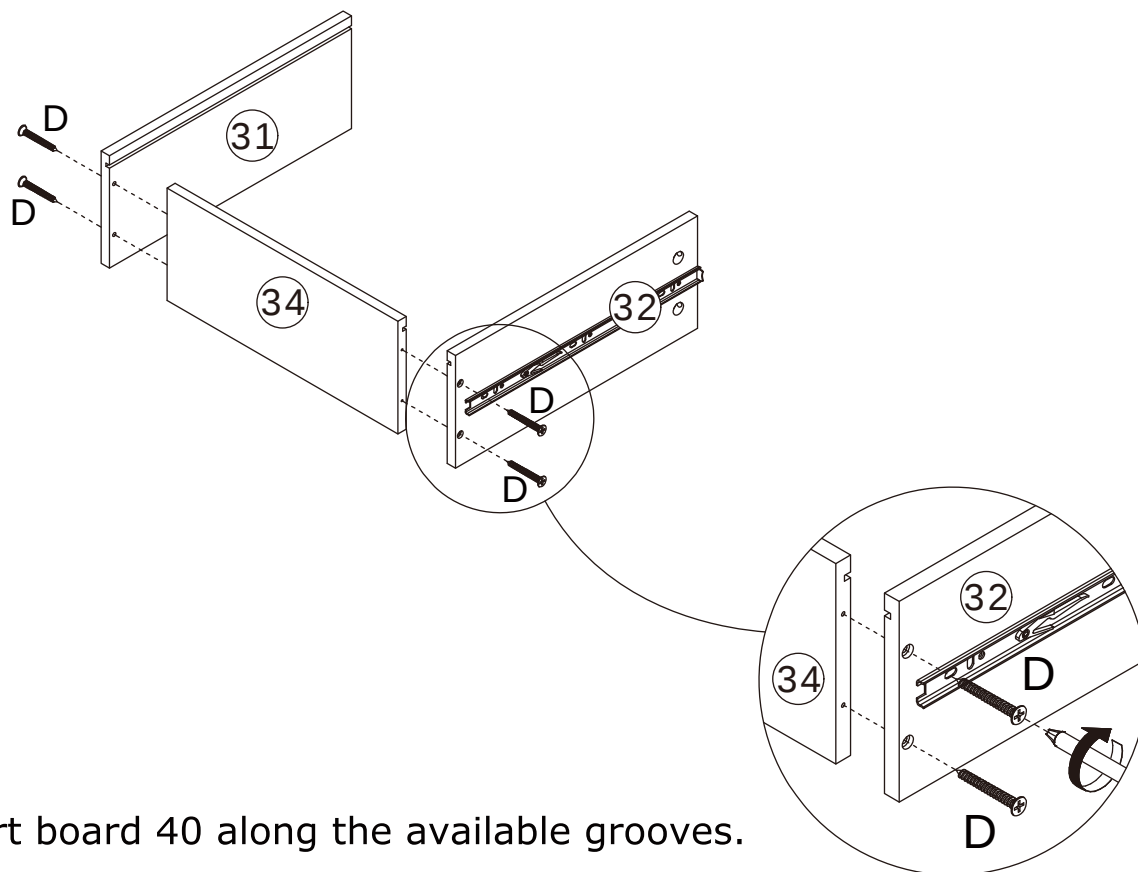

Insert board 40 along the available grooves.

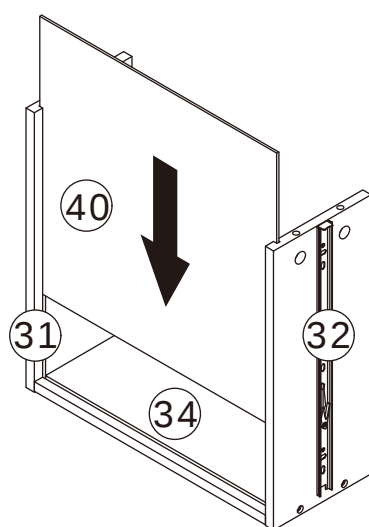


40





B x 8



 
Ø 15 x 10 mm





Connect boards 27 and 28 to boards 31 and 32, respectively, then tighten by turning cam lock (B) clockwise as shown.

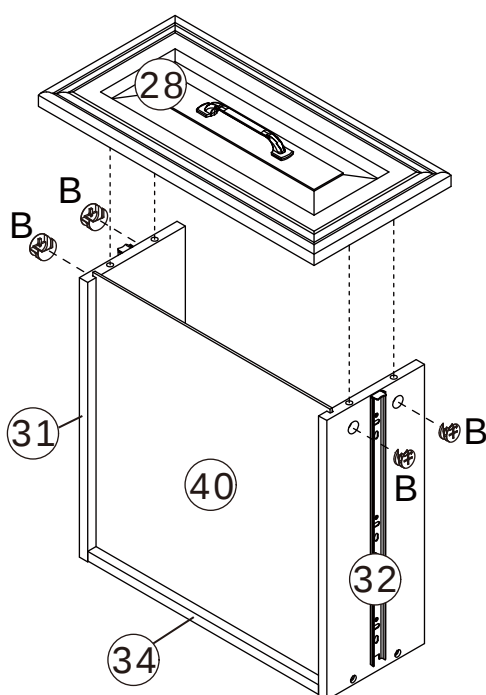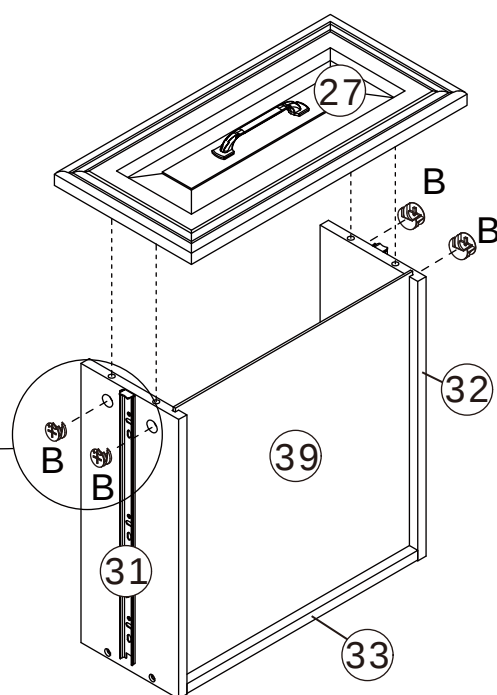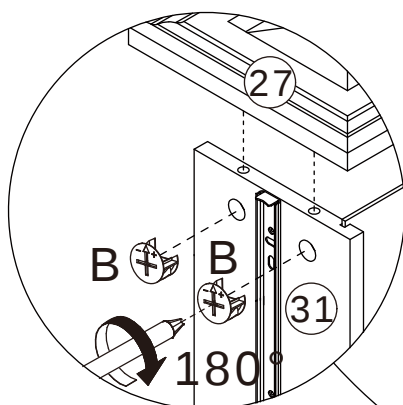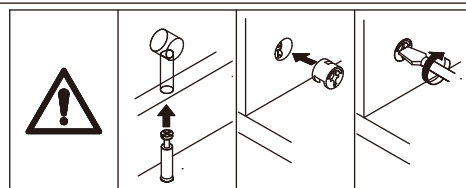


41

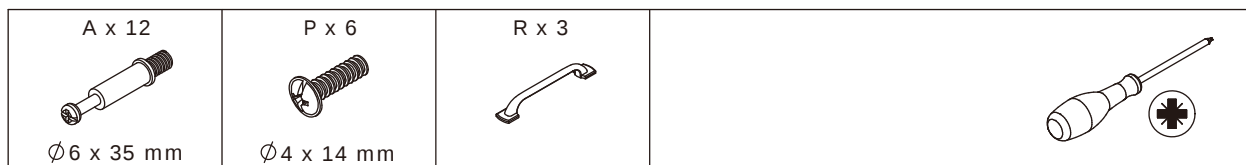

Screw eccentric rod (A) onto boards 29 and 30.

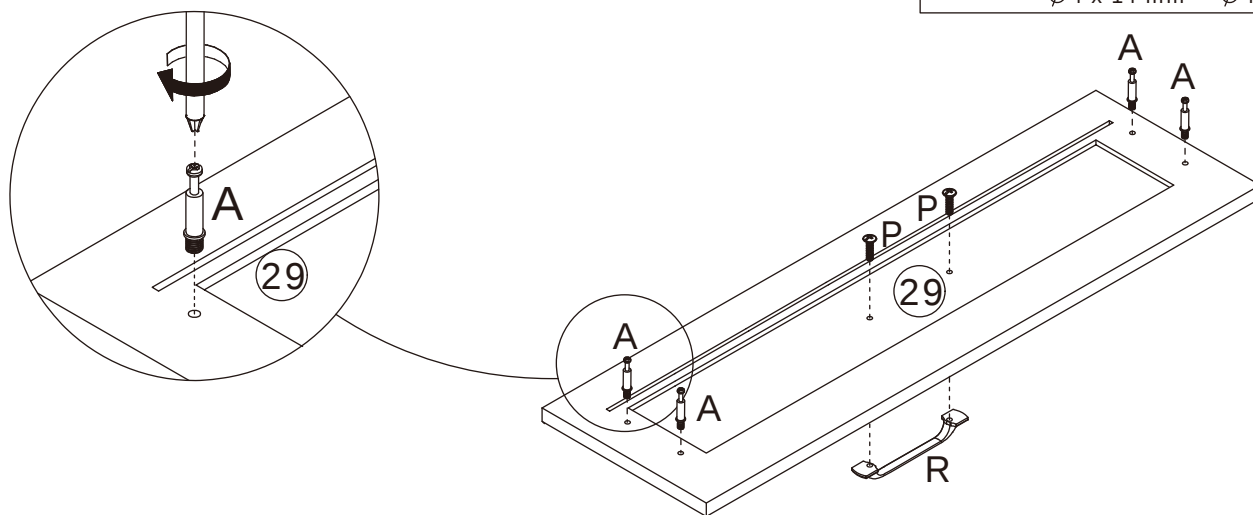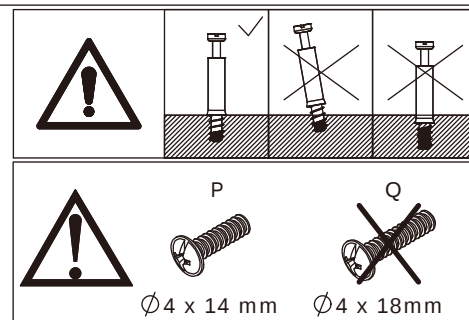


Secure handle (R) to boards 29 and 30 using screw (P).

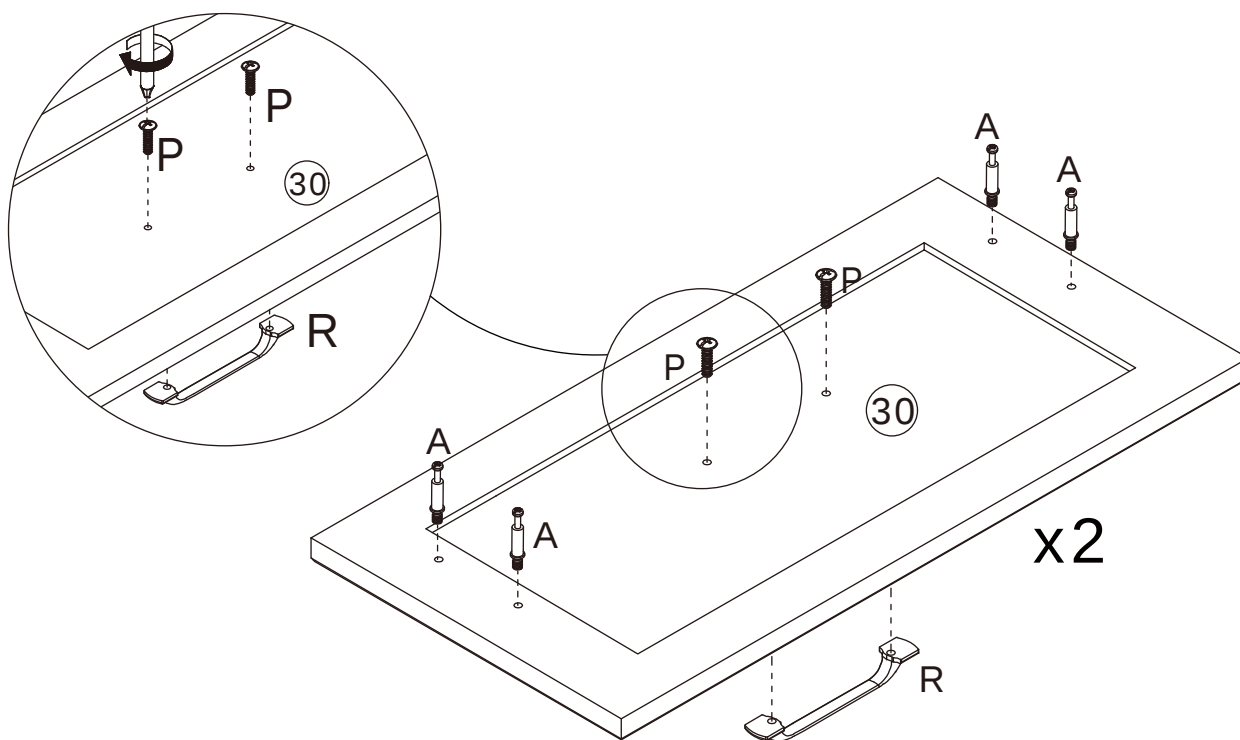


42

 
D x 4
Ø4 x 35 mm



Secure boards 31 and 32 to board 35 using screw (D).

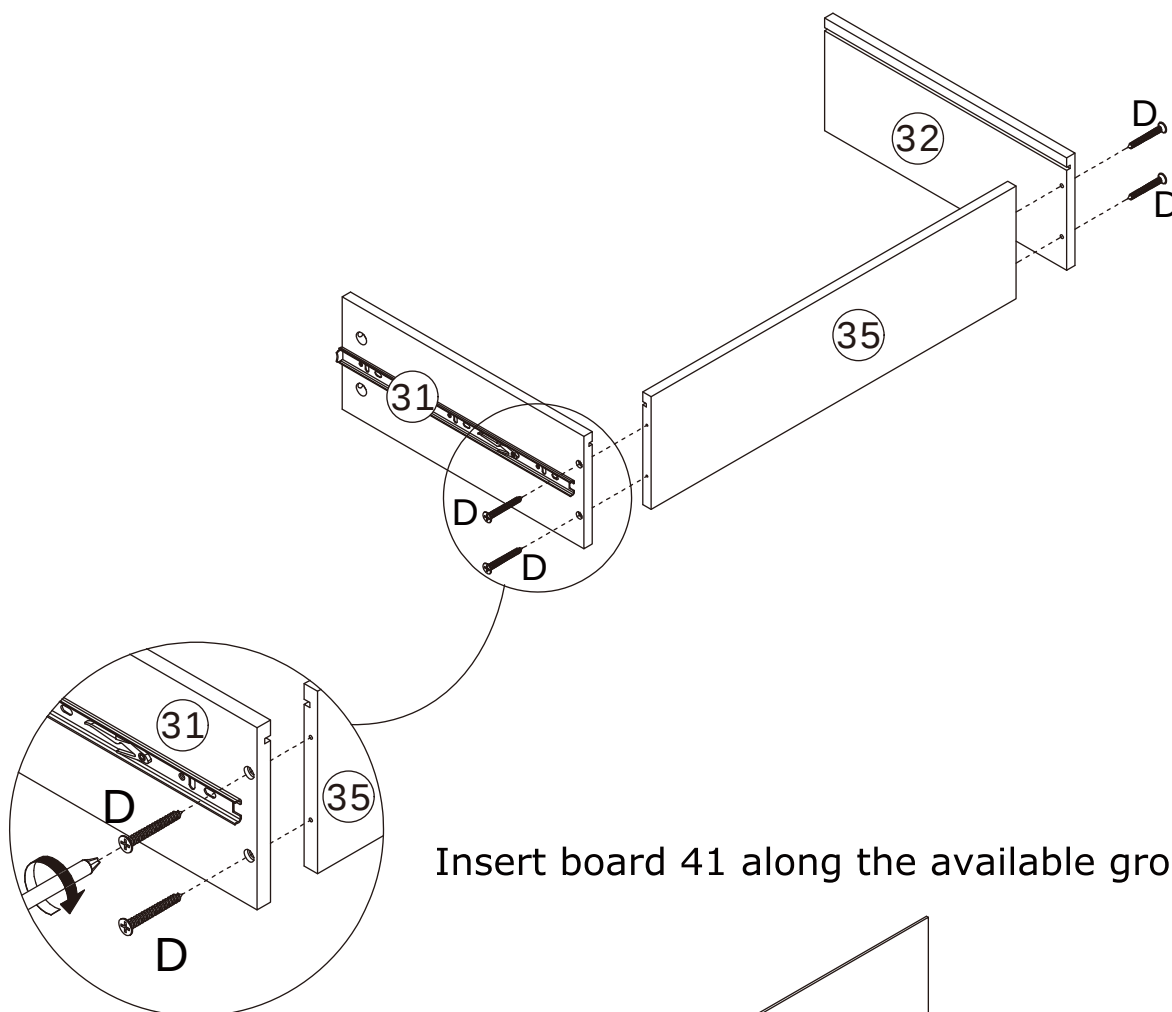


Insert board 41 along the available grooves.


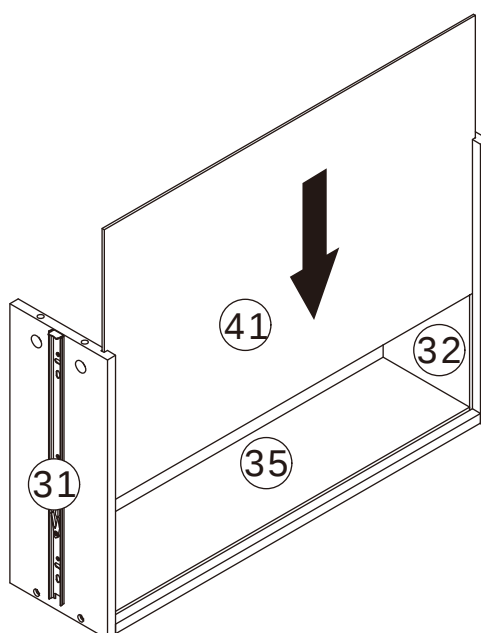


43

 
D x 8
Ø4 x 35 mm



Secure boards 36 and 37 to board 38 using screw (D).

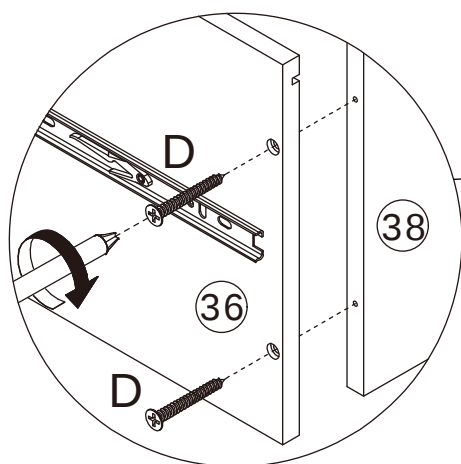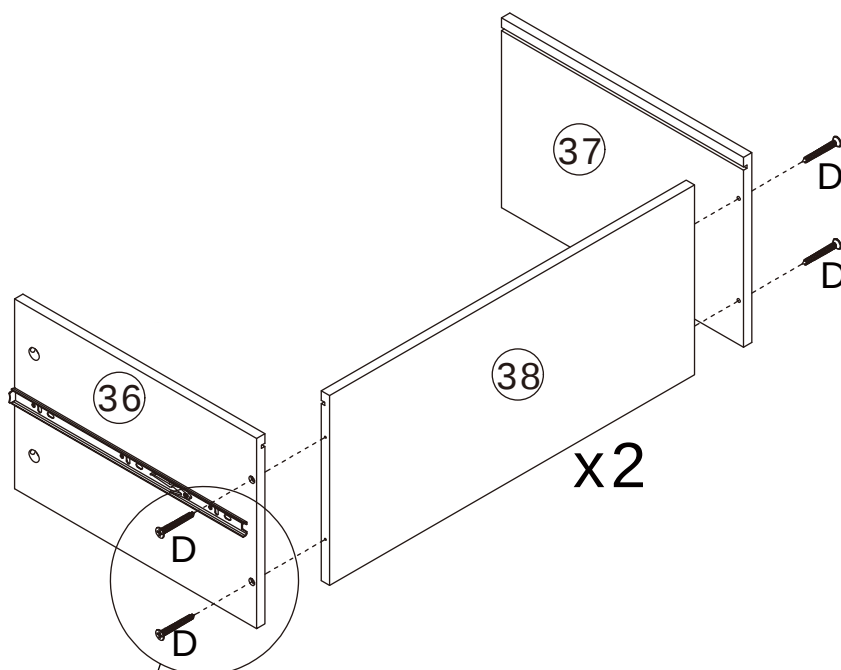

Insert board 41 along the available grooves.

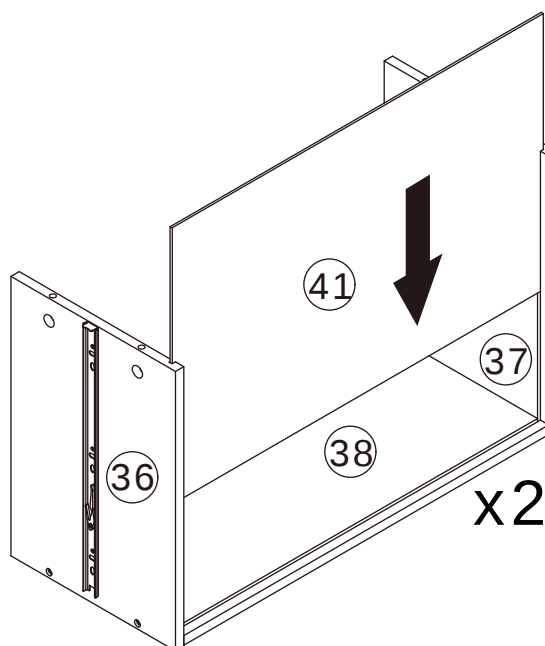


44




B x 12



 Ø 15 x 10 mm




Connect board 29 to boards 31 and 32, then tighten by turning cam lock (B) clockwise as shown.

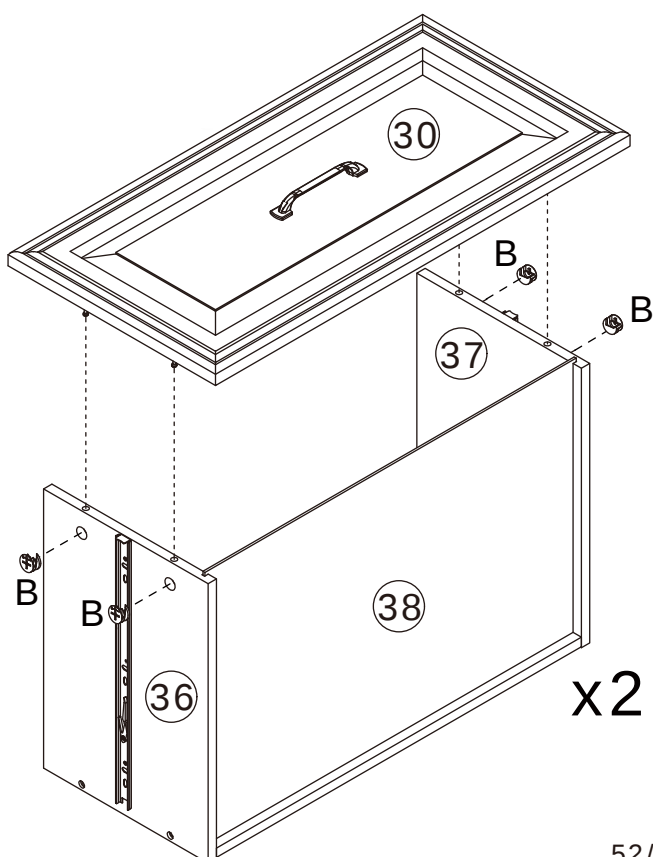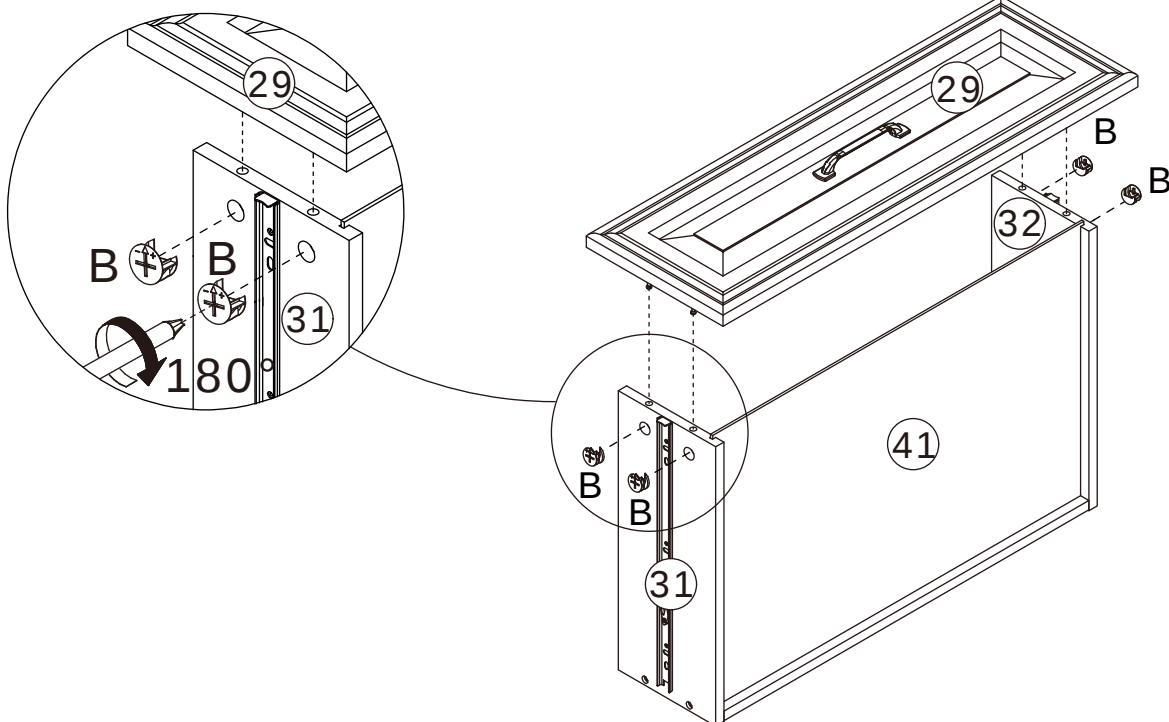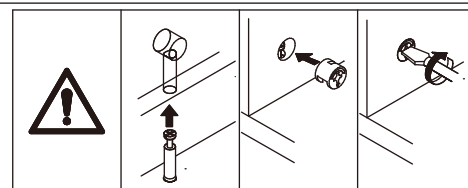

Connect board 30 to boards 36 and 37, then tighten by turning cam lock (B) clockwise as shown.

45

Insert the drawers.

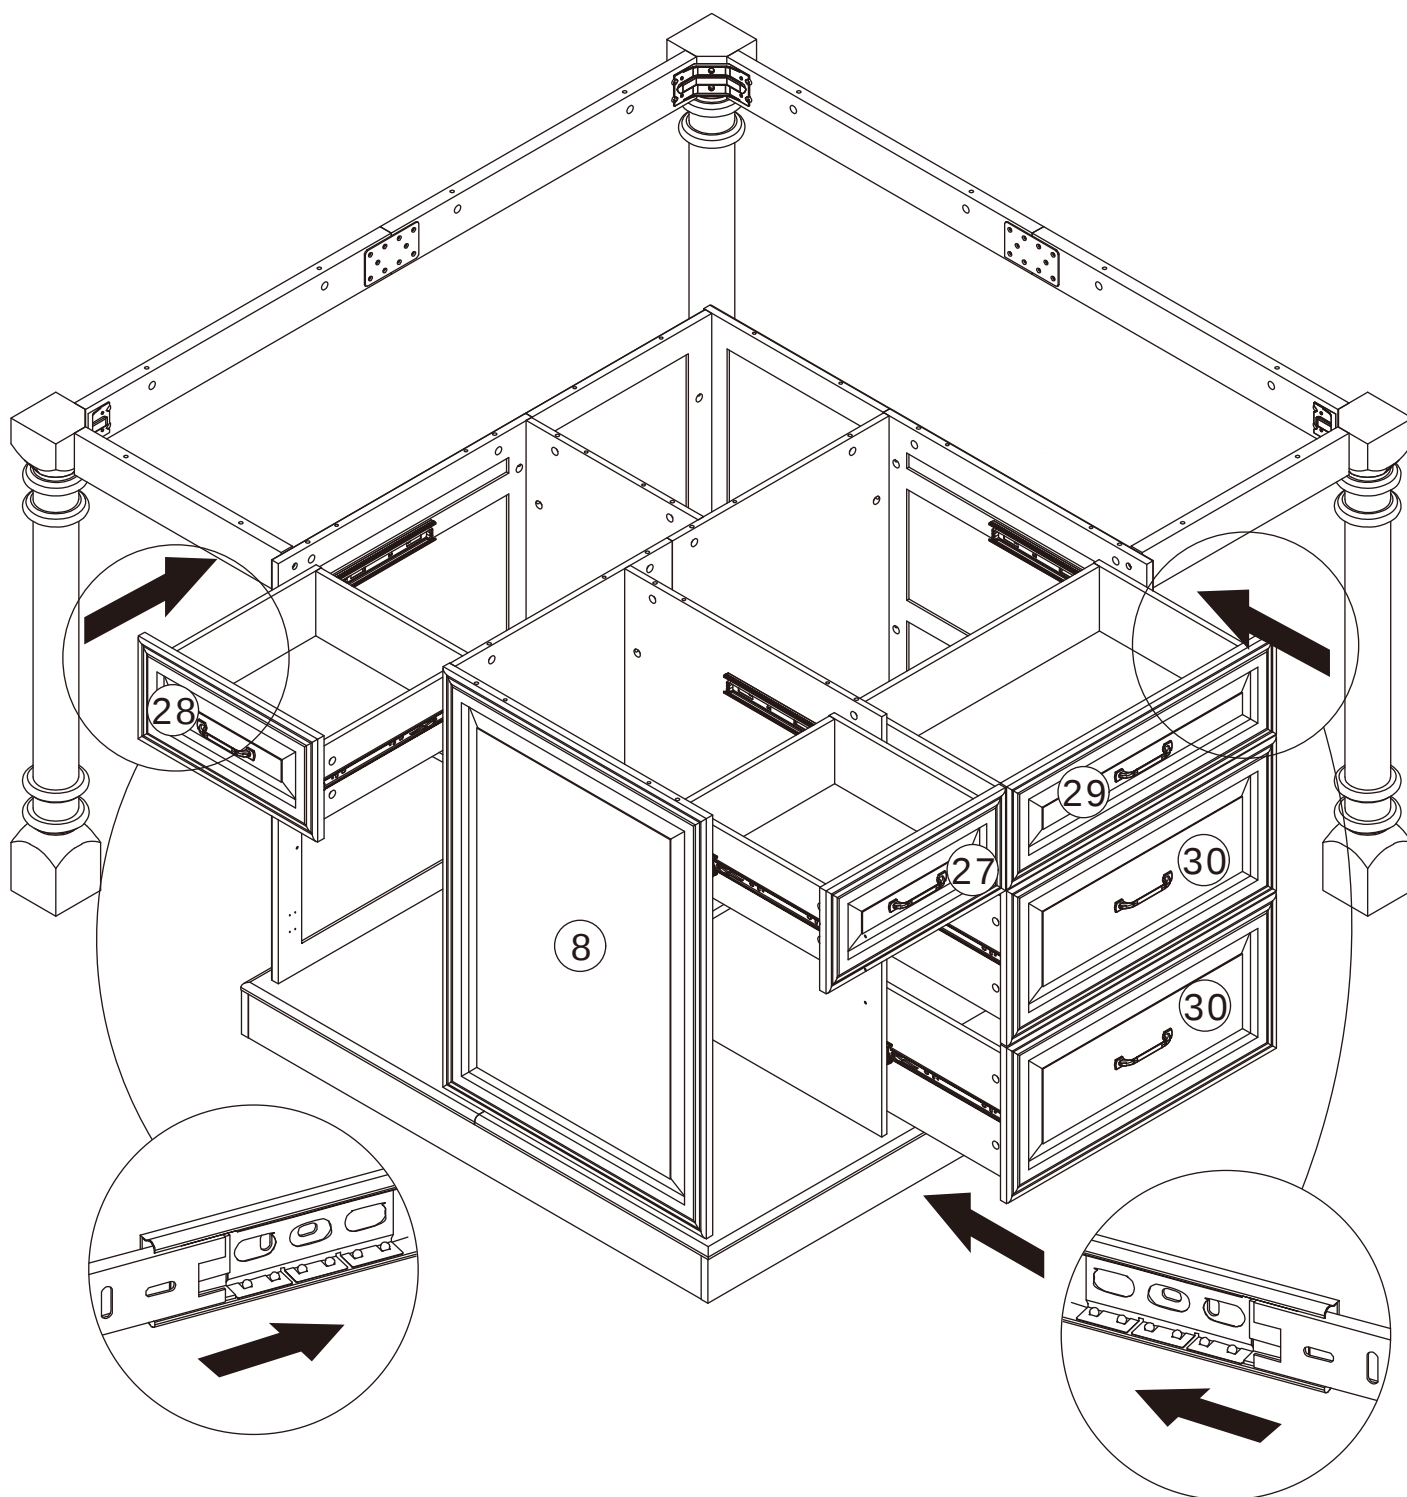


46

O x 8



Insert pin (O) into board 11, 15, and 13, then place boards 26 and 25 on.

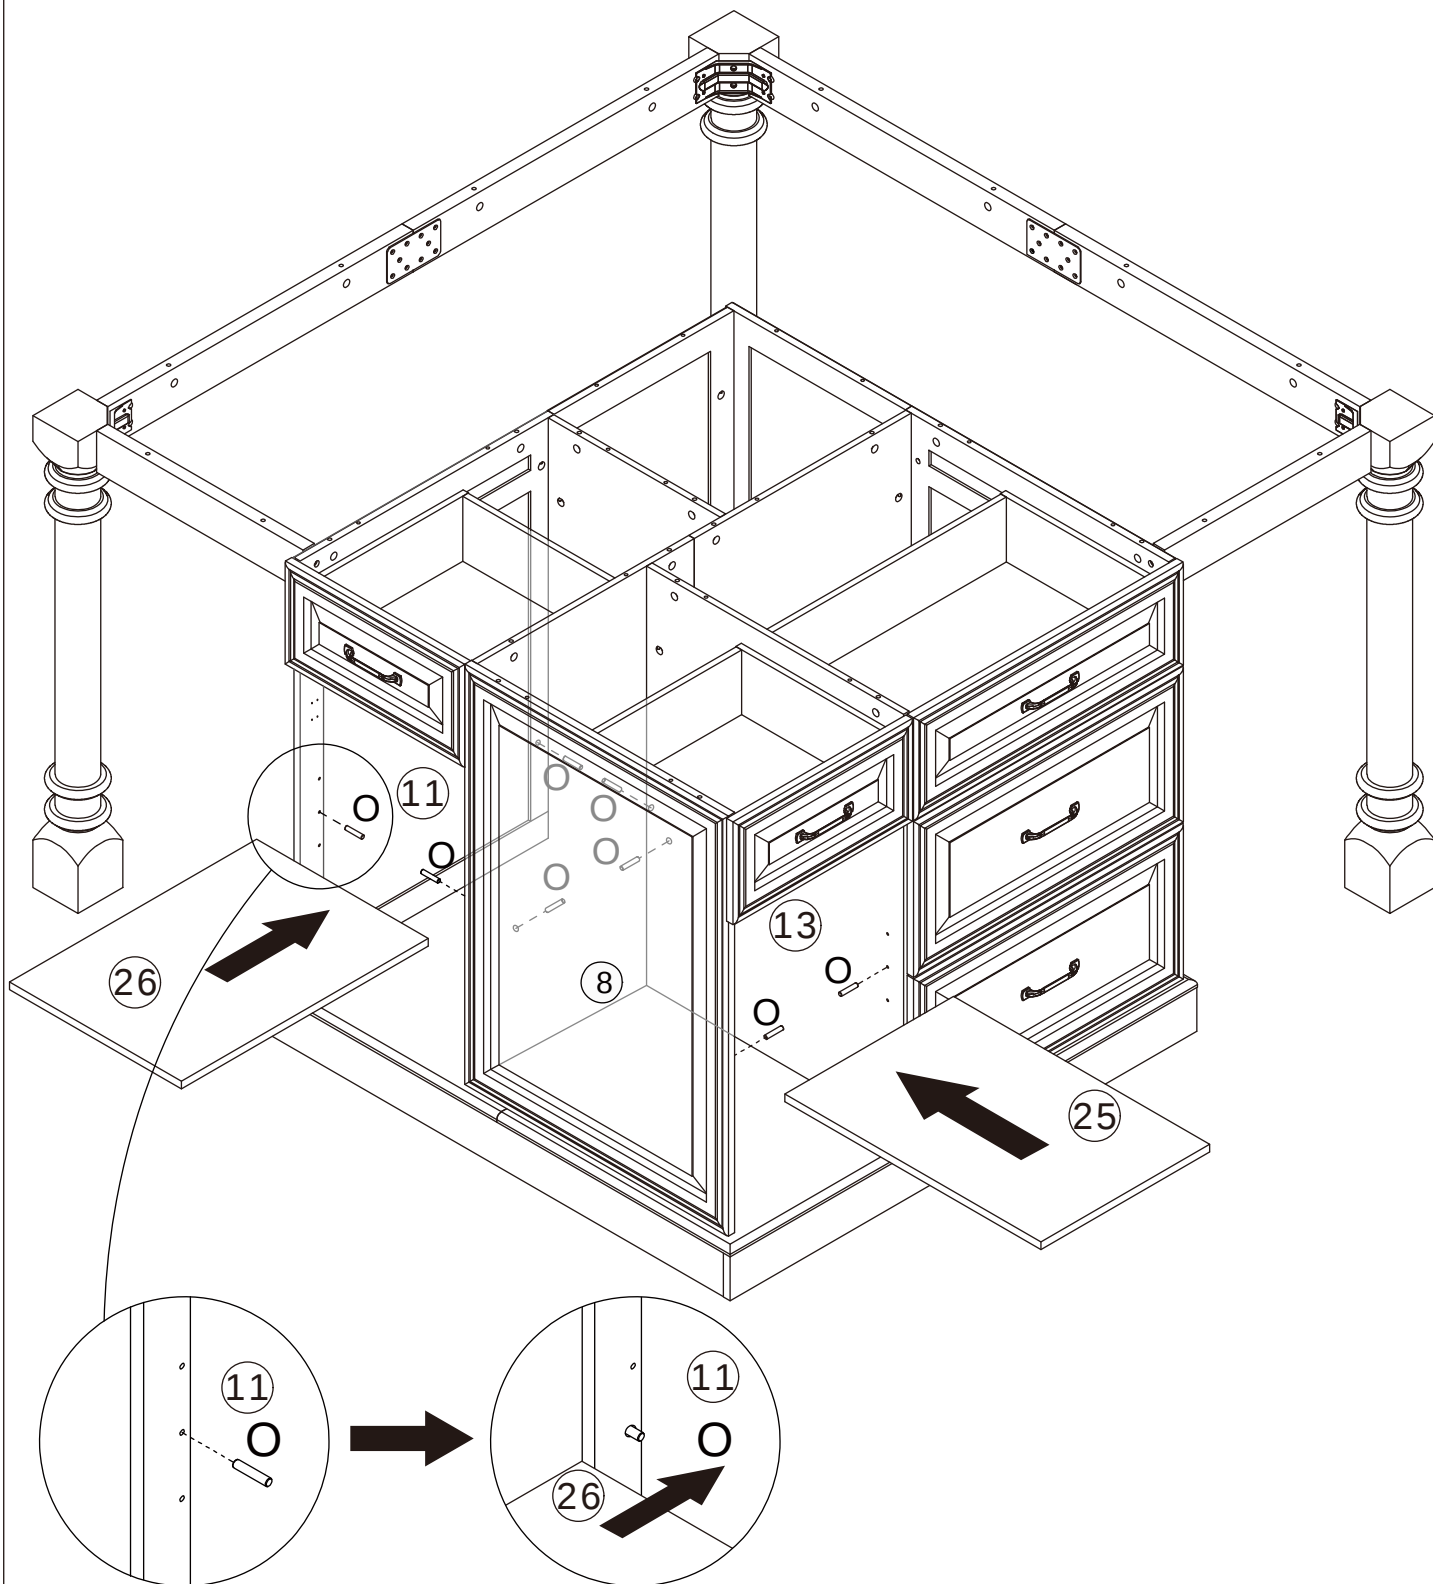

47

F x 8



Ø4 x 14 mm

G x 4

 


Q x 4



Ø4 x 18 mm

R x 2







Secure hinge (G) to board 24 using screw (F).
Secure handle (R) using screw (Q).



Ø4 x 14 mm



Ø4 x 18mm

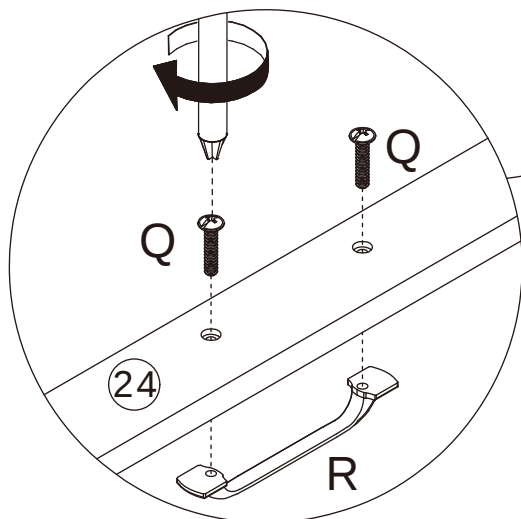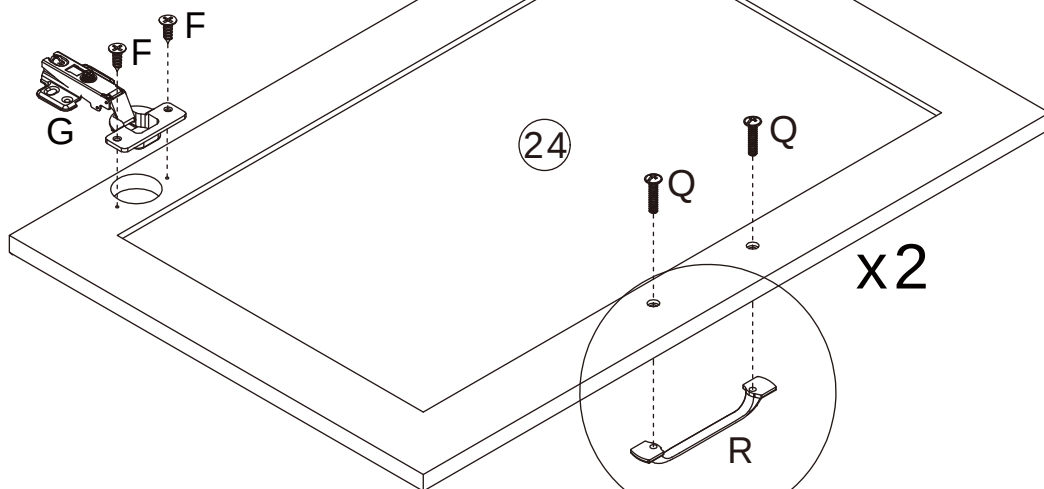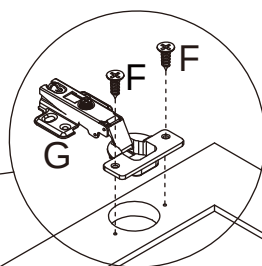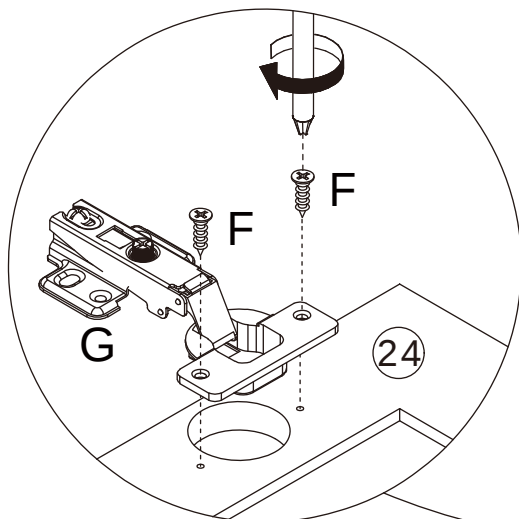


48

F x 16





Ø 4 x 14 mm


 
Y x 62




Secure board 24 to the cabinet via hinges using screw (F).

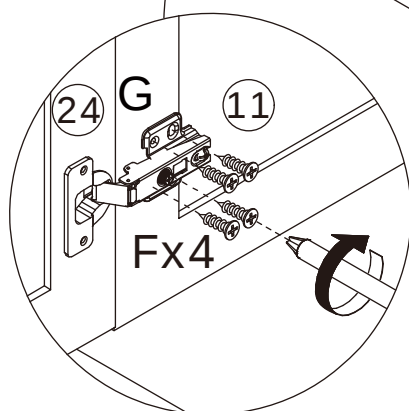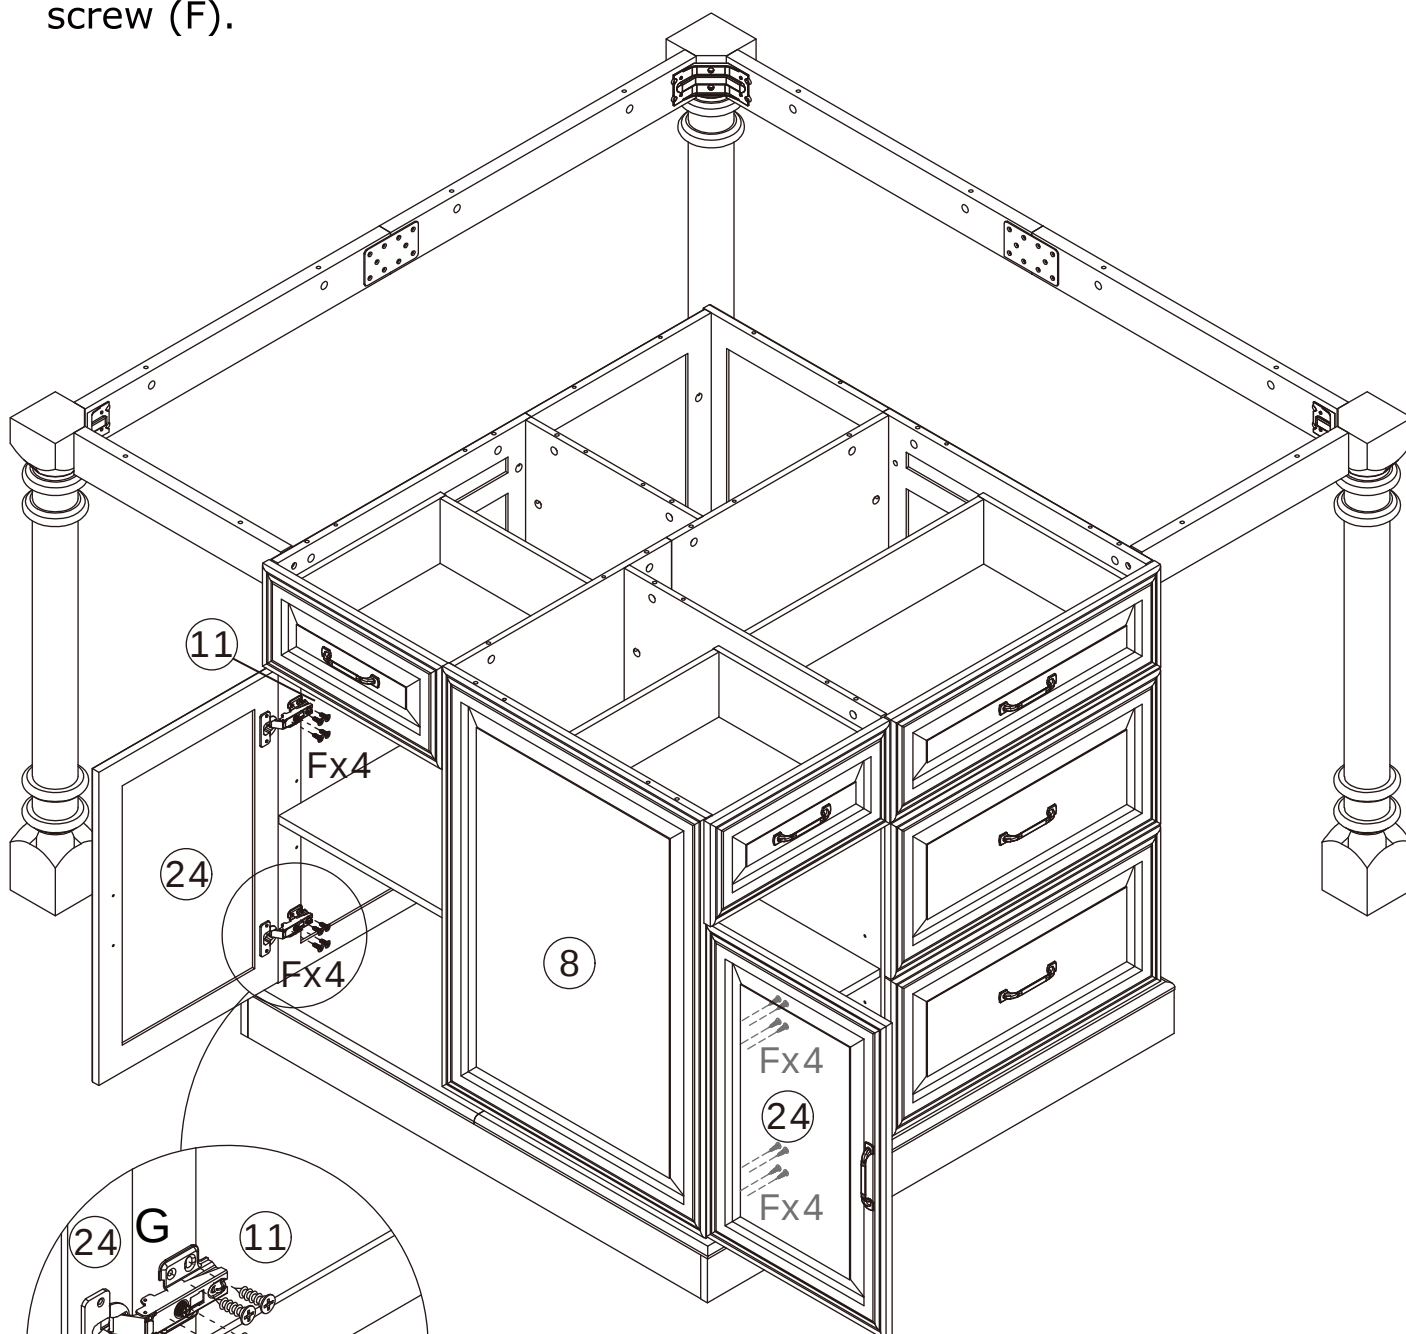

 Cover the exposed B/K with a Y-hole sticker








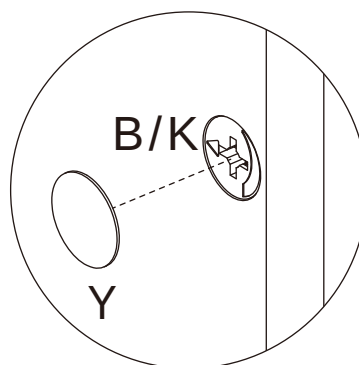
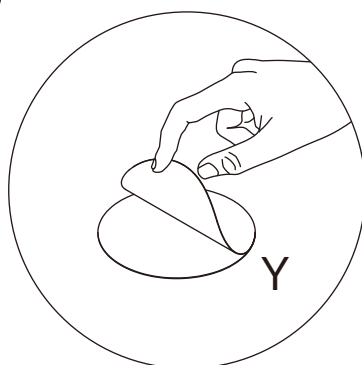




If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.


Or you can search this link to view the teaching video.

<https://youtu.be/n0Lb36SoODM>

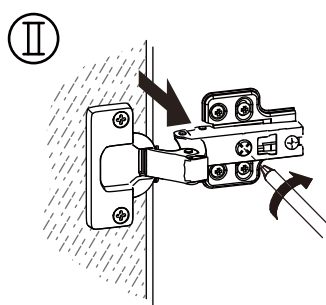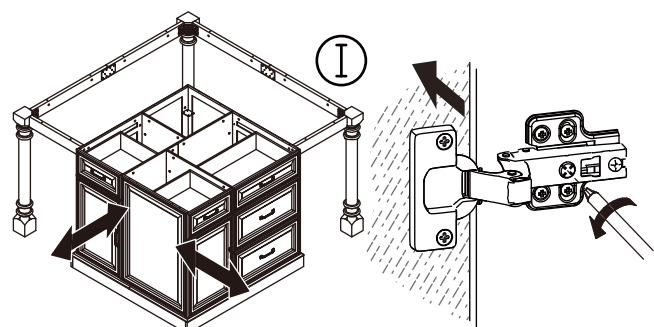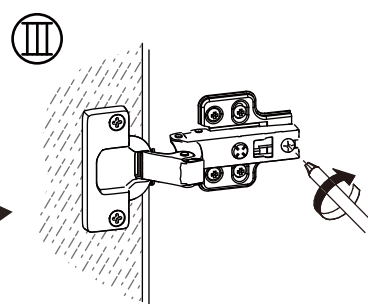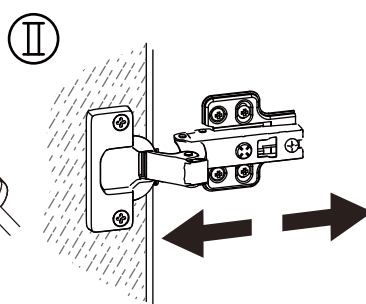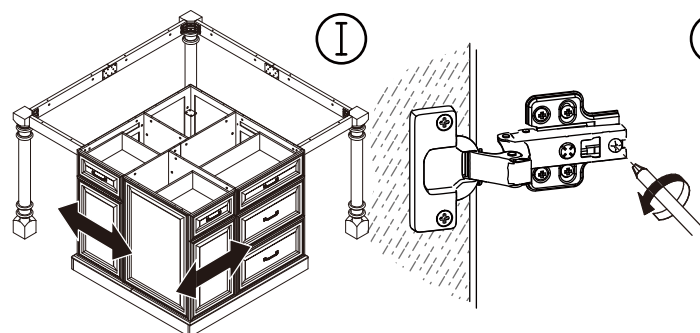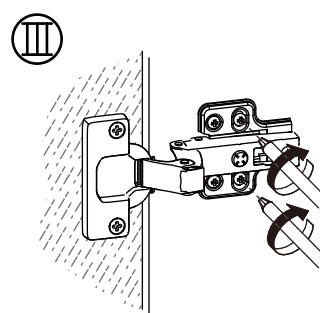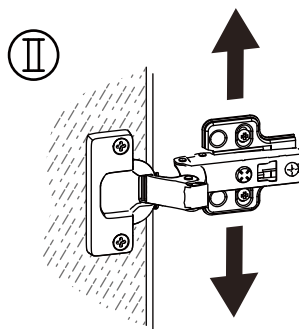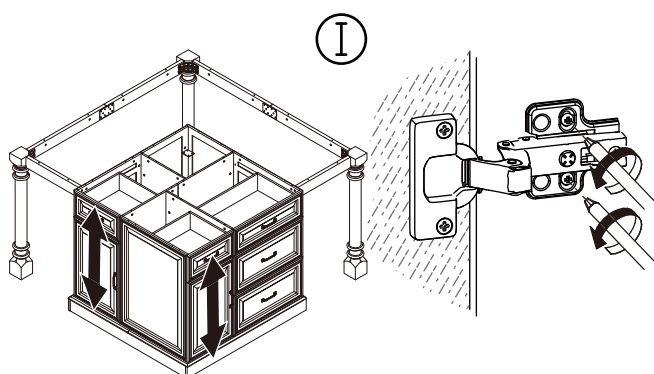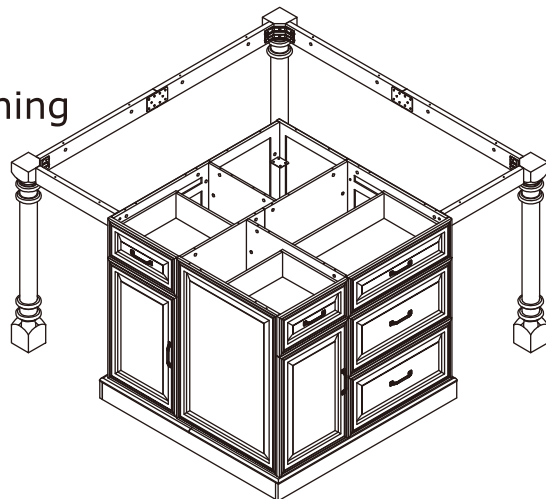


50

 
CS x 3




Ø8 x 40 mm

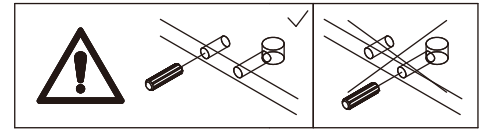



If a desktop is purchased, follow the subsequent steps to install the desktop.

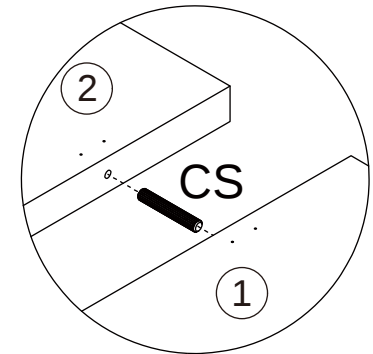



Connect boards 1 and 2 using wooden dowel (CS).

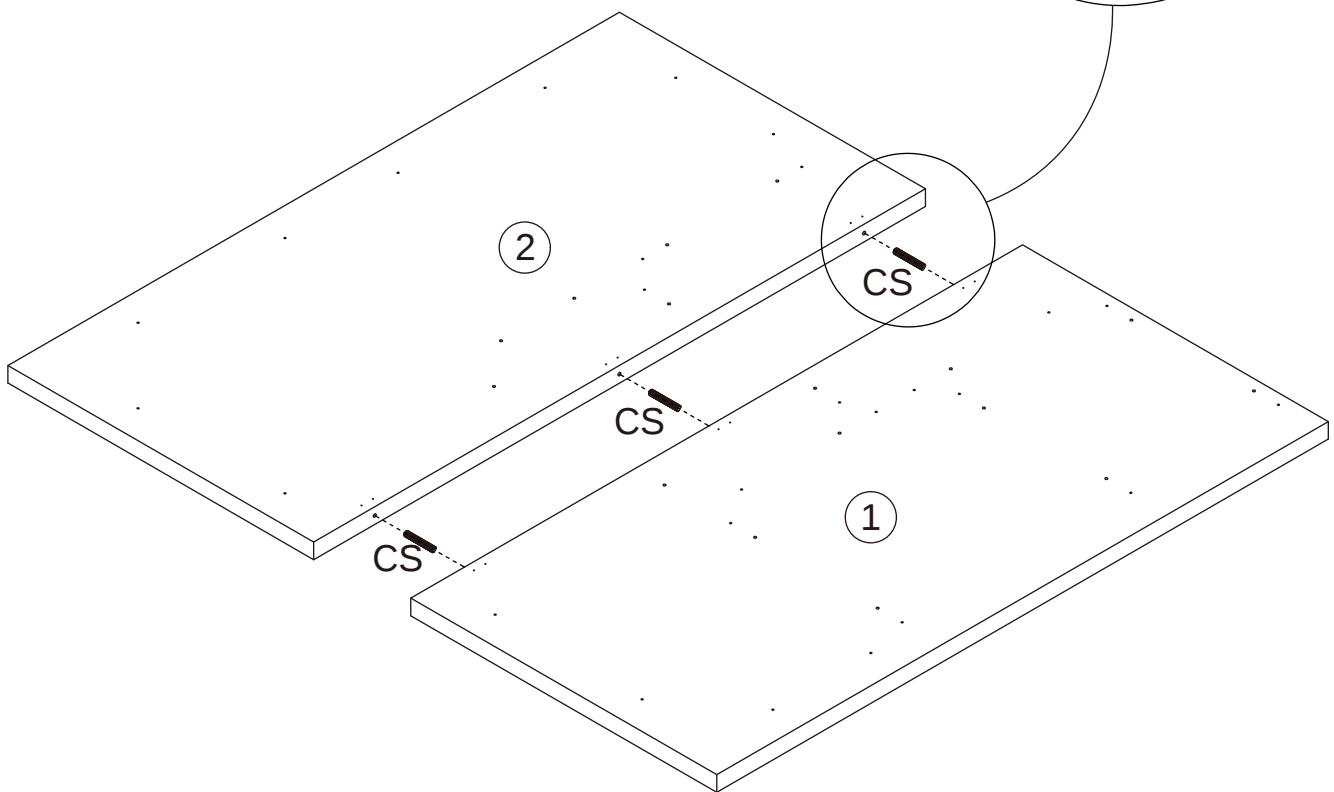

51

 
 
A x 26  Ø 6 x 35 mm	F x 12  Ø 4 x 14 mm	BS x 3 	
--	--	---	---

Screw eccentric rod (A) onto boards 1 and 2.
Secure iron sheet (BS) to boards 1 and 2
using screw (F).

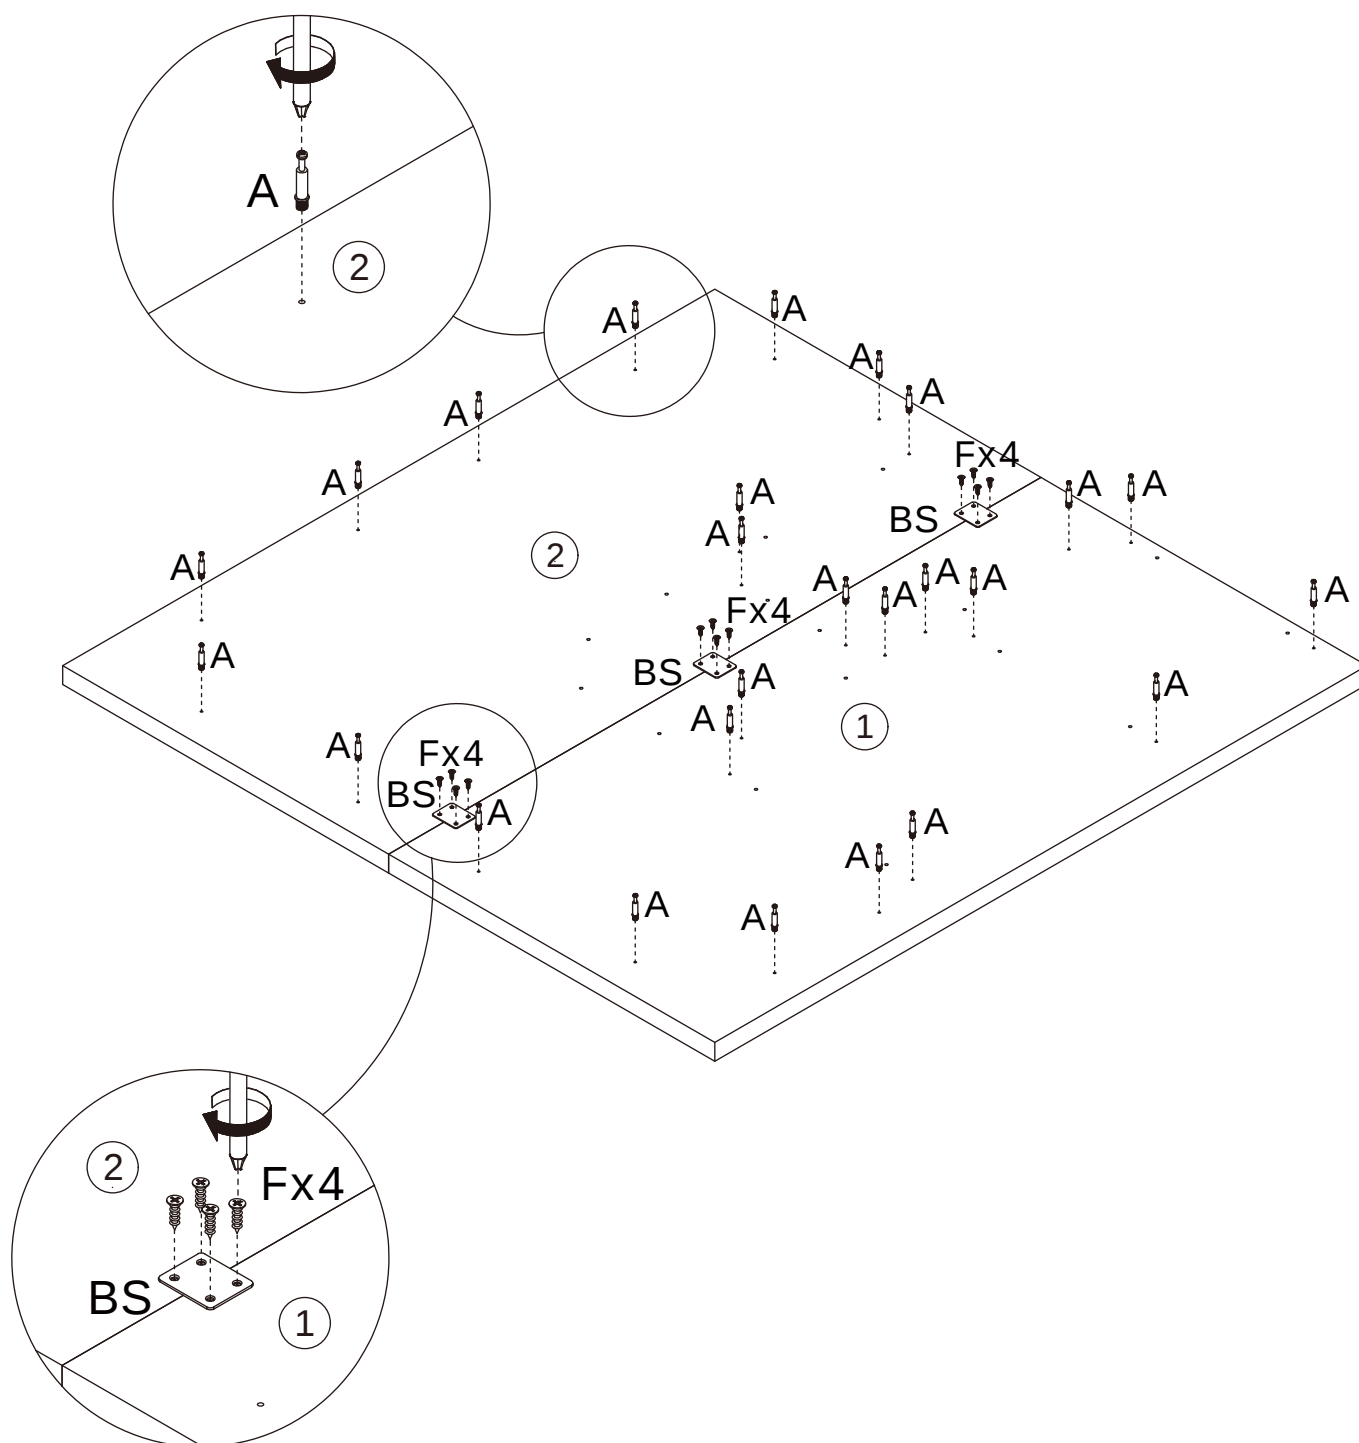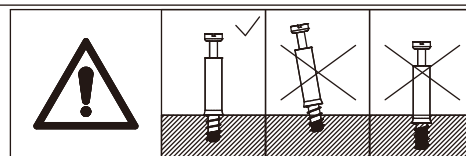

52

Pull out the drawers as shown.

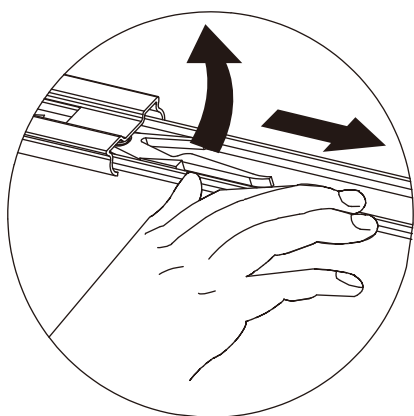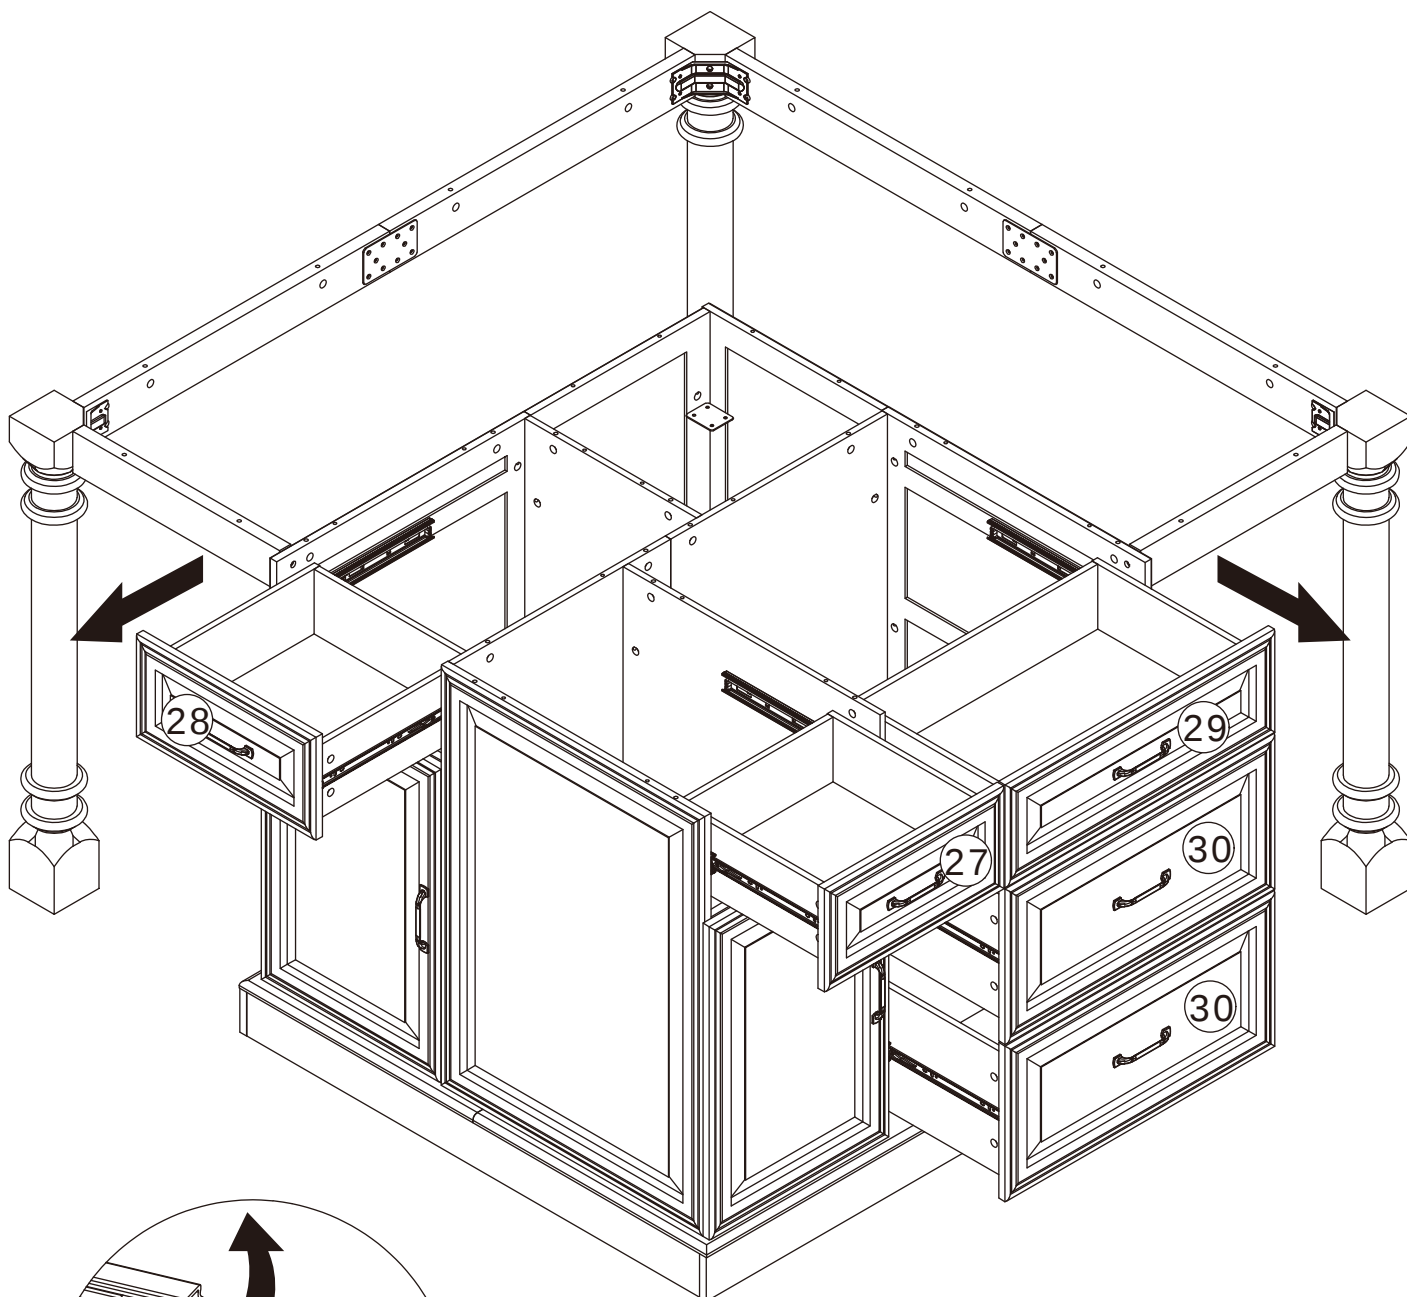




53

C x 16



Ø6 x 30 mm

   
Insert wooden dowel (C) into boards 8, 9, 10, 11, 12, 13, 14, 15, and 16.



Ø6 x 30 mm



Ø6 x 50 mm

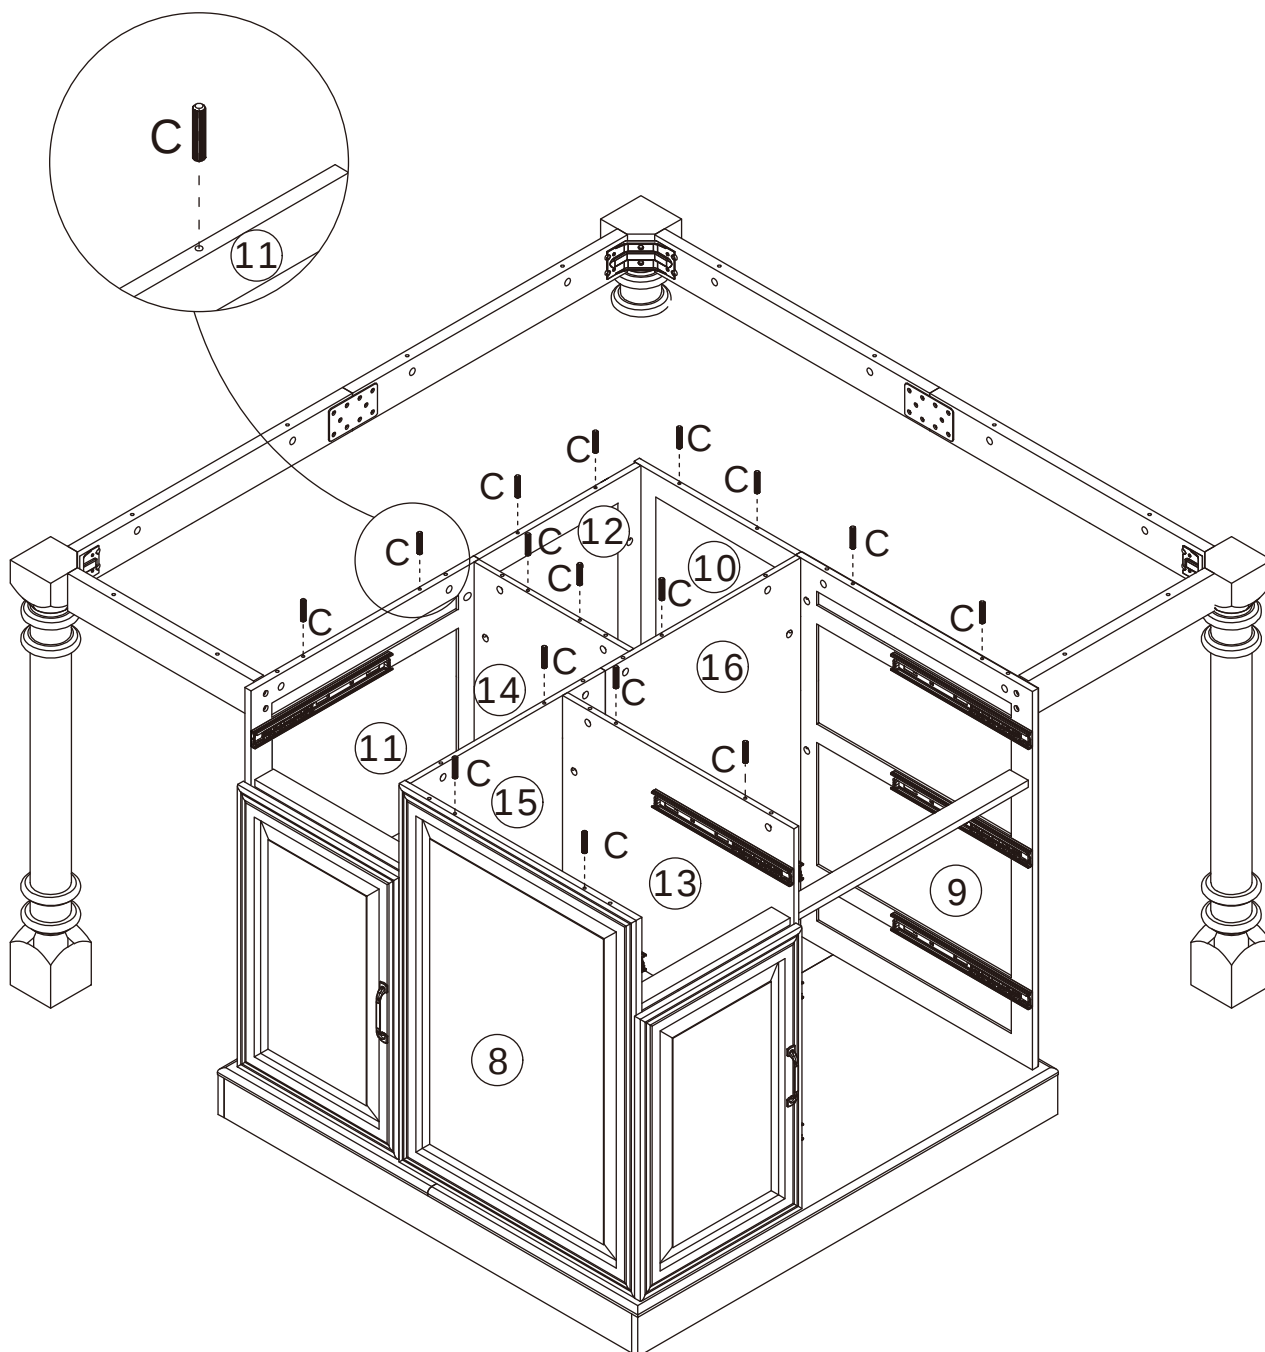


54



B x 26



 Ø 15 x 10 mm



Attach the desktop to the cabinet, then tighten by turning cam lock (B) clockwise as shown.

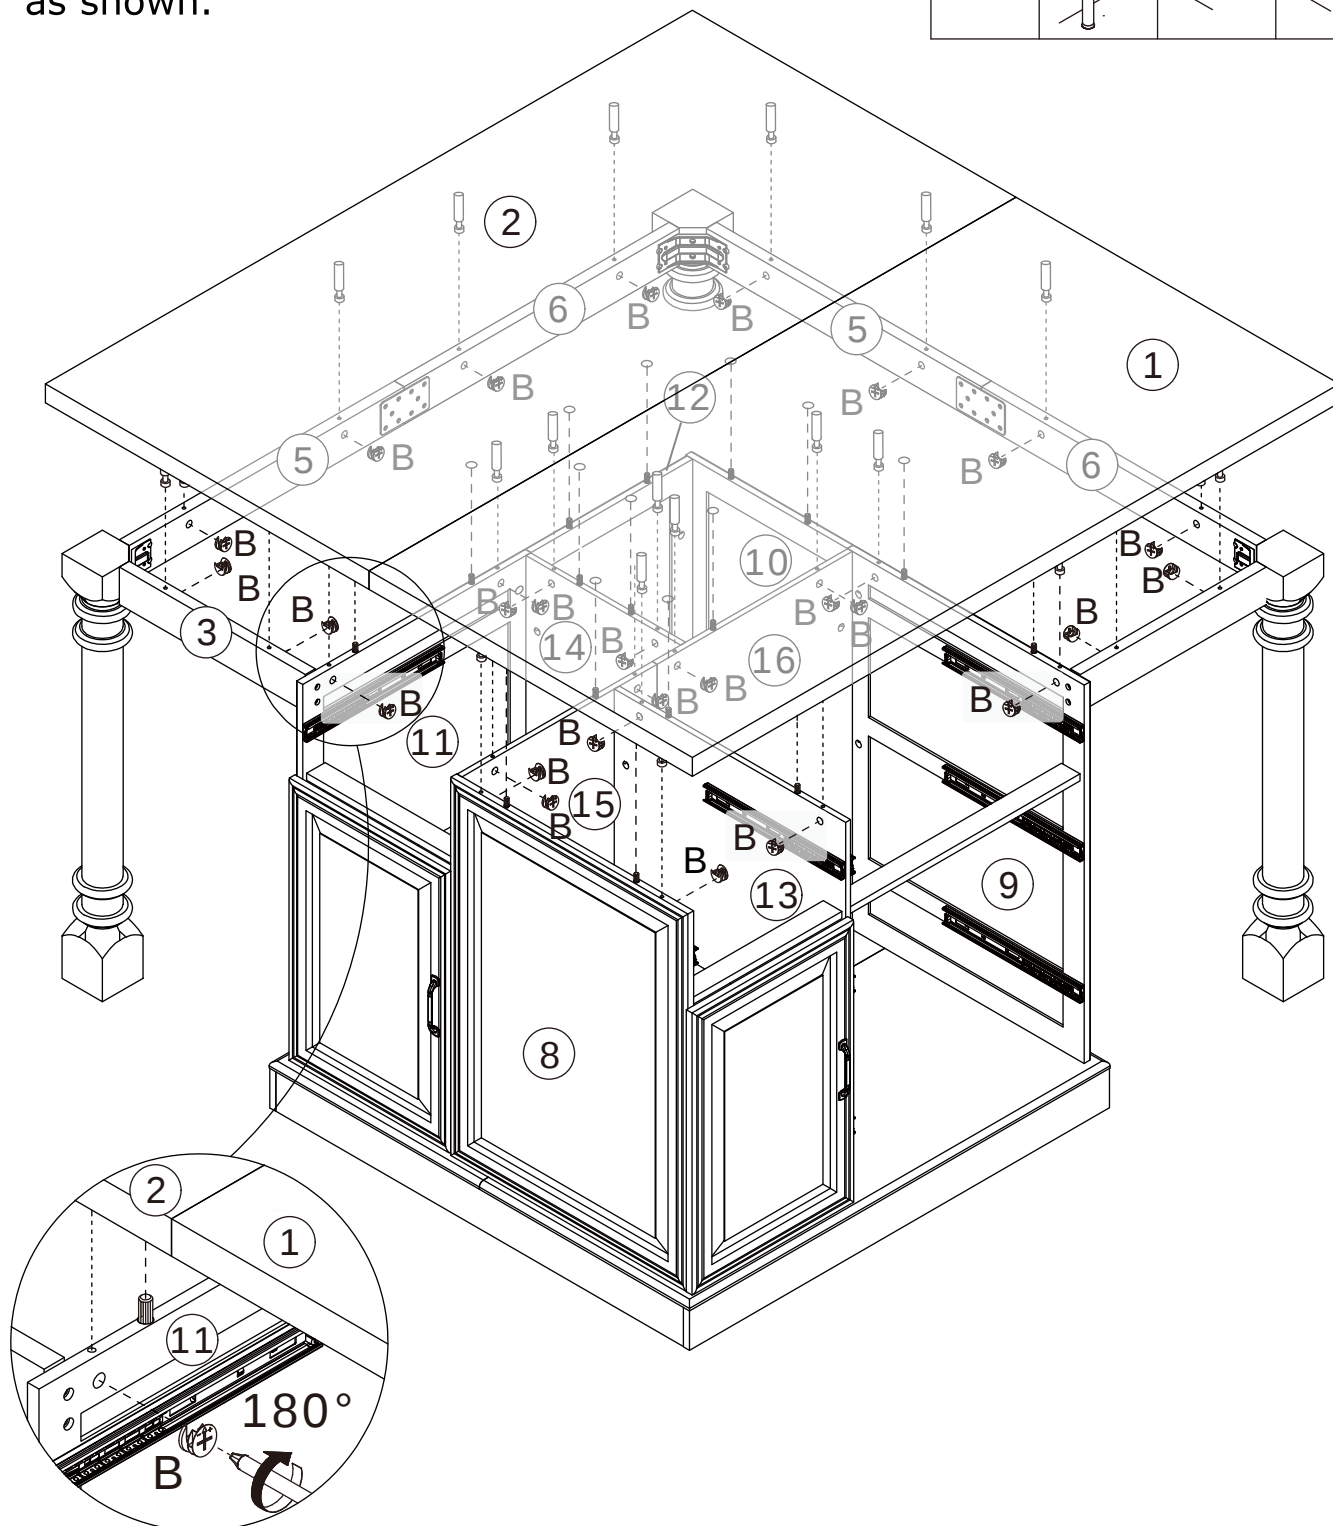
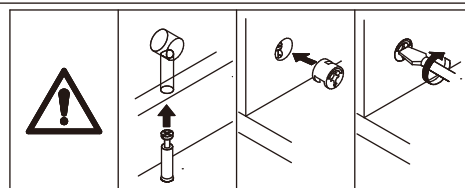


55



Y x 26



Insert the drawers.

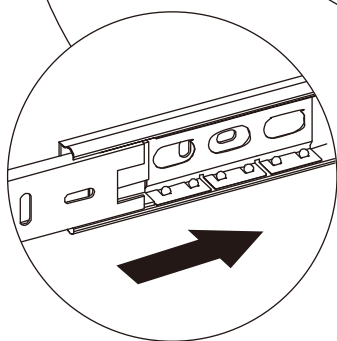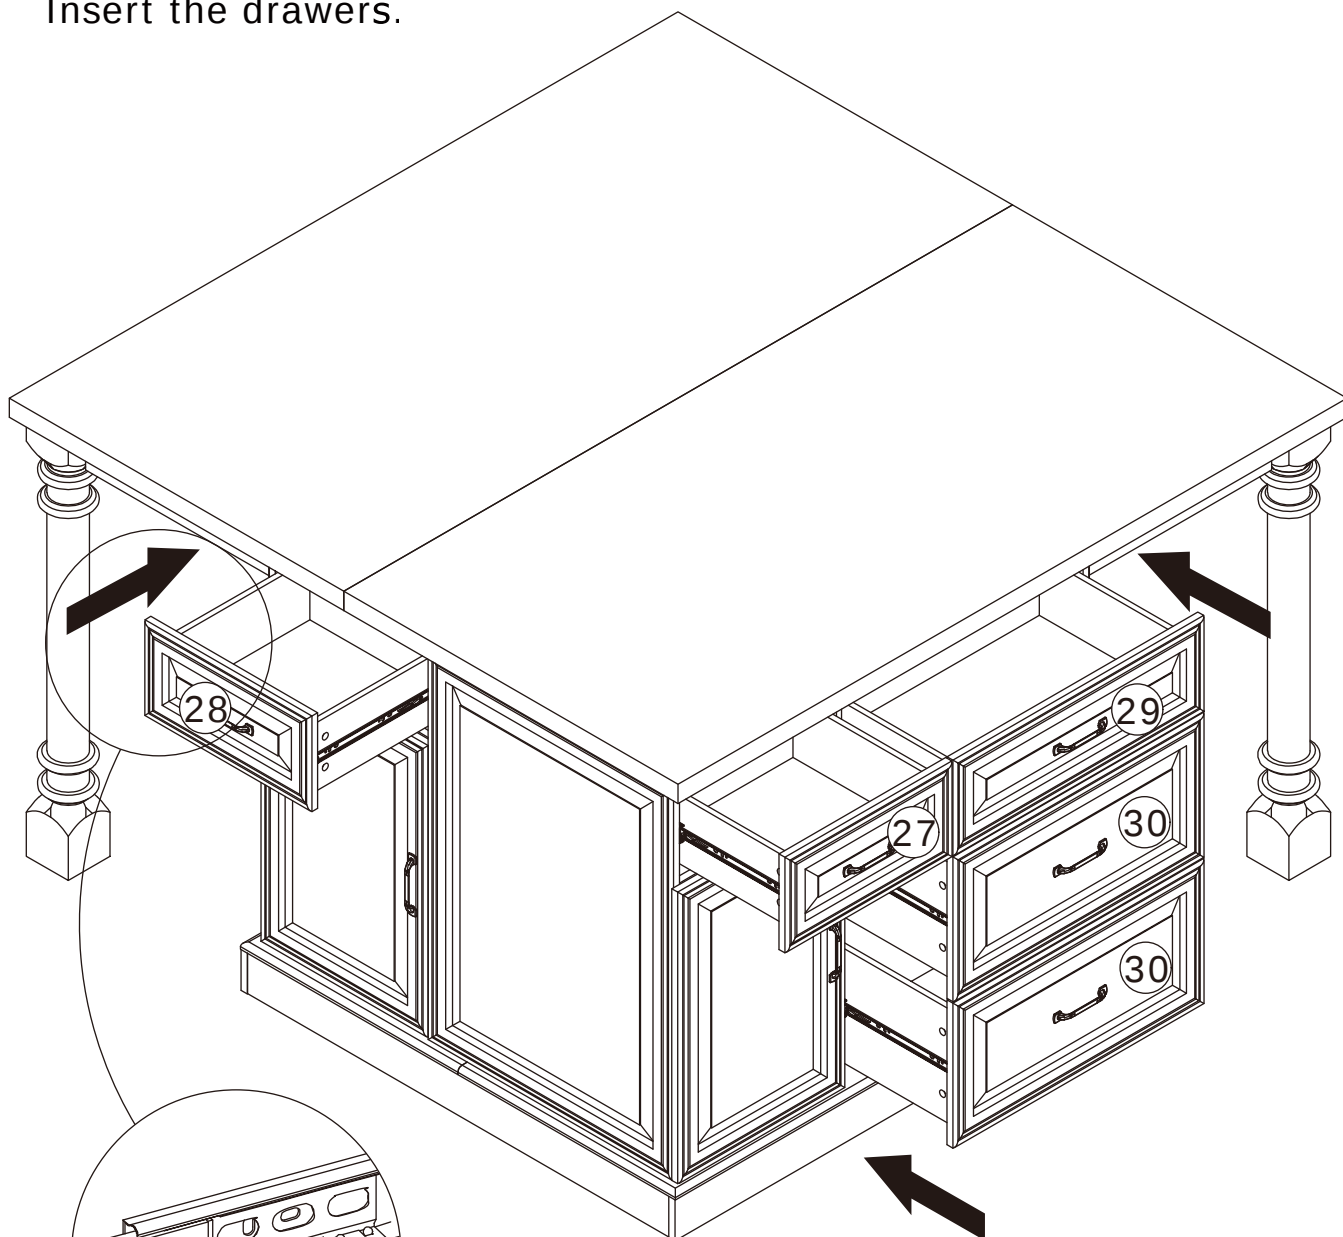

Cover the exposed holes with sticker (Y).

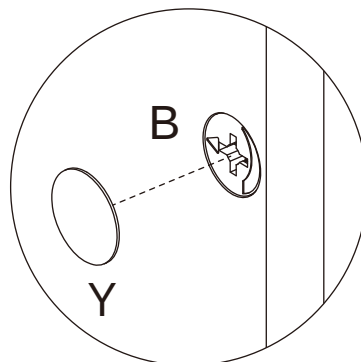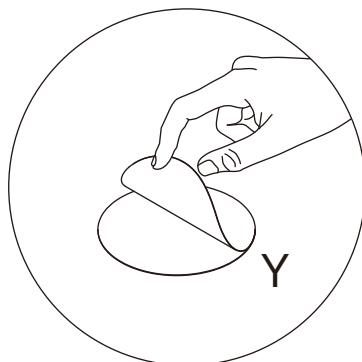

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068