 
 




Sideboard

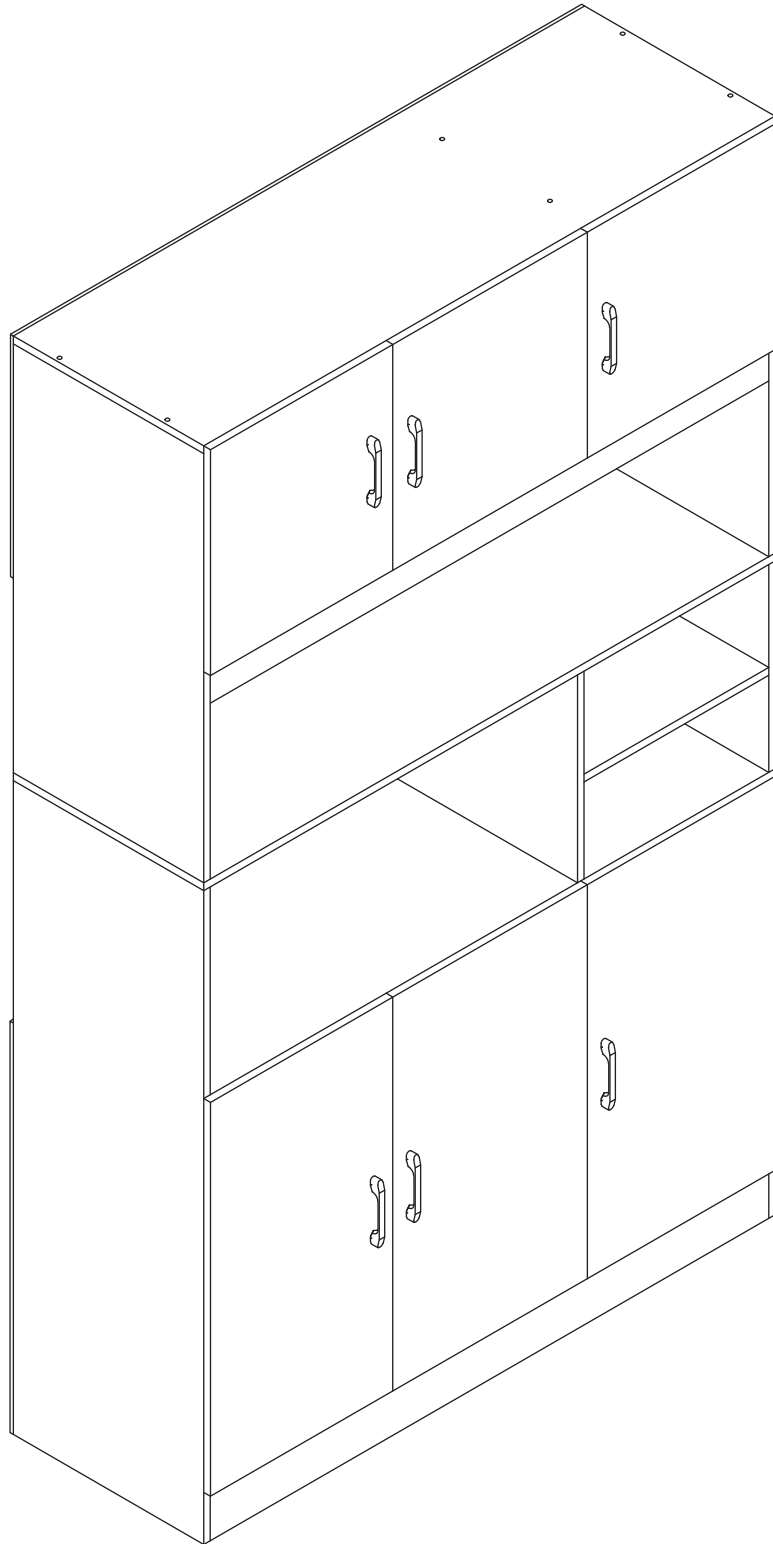

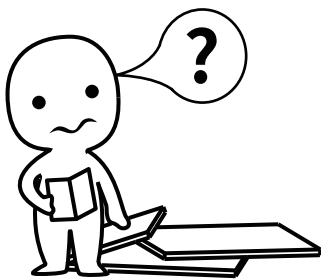


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

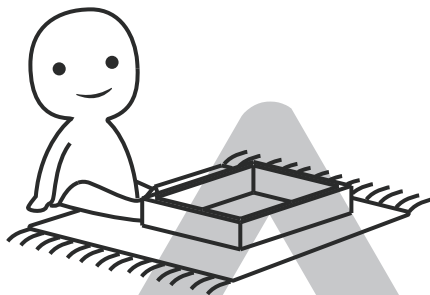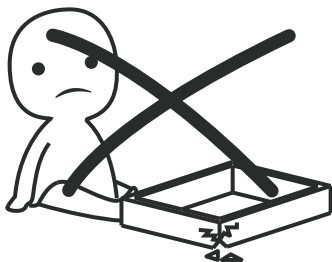



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

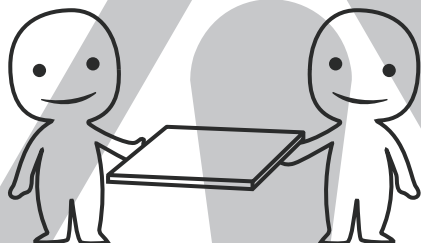

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

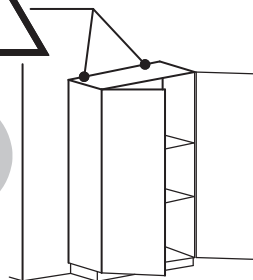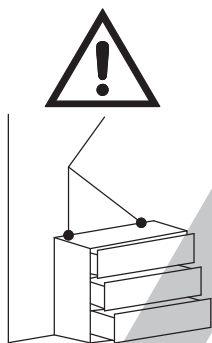

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

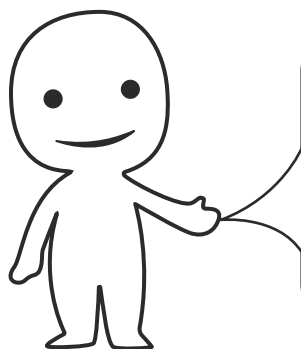


Please prepare the following tools

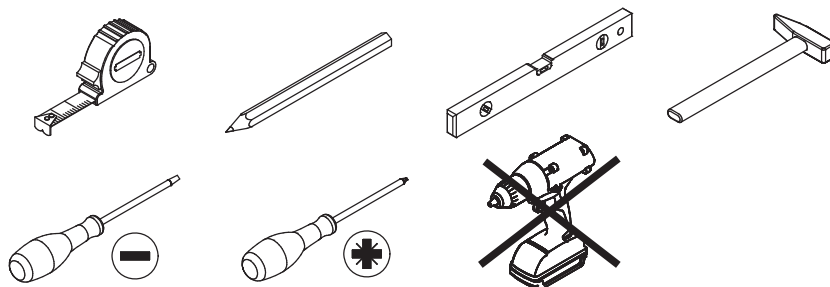 



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 65 Ø 6 x 40 mm	B x 65 Ø 15 x 13 mm	C x 56 Ø 6 x 30 mm	F x 12 Ø 4 x 35 mm
G x 40 Ø 2 x 16 mm	H x 8	I x 4	K x 80 Ø 4 x 14 mm
L x 6	M x 12 Ø 4 x 20 mm	N x 5 6 x 20 mm	P x 4
Q x 8	R x 8		


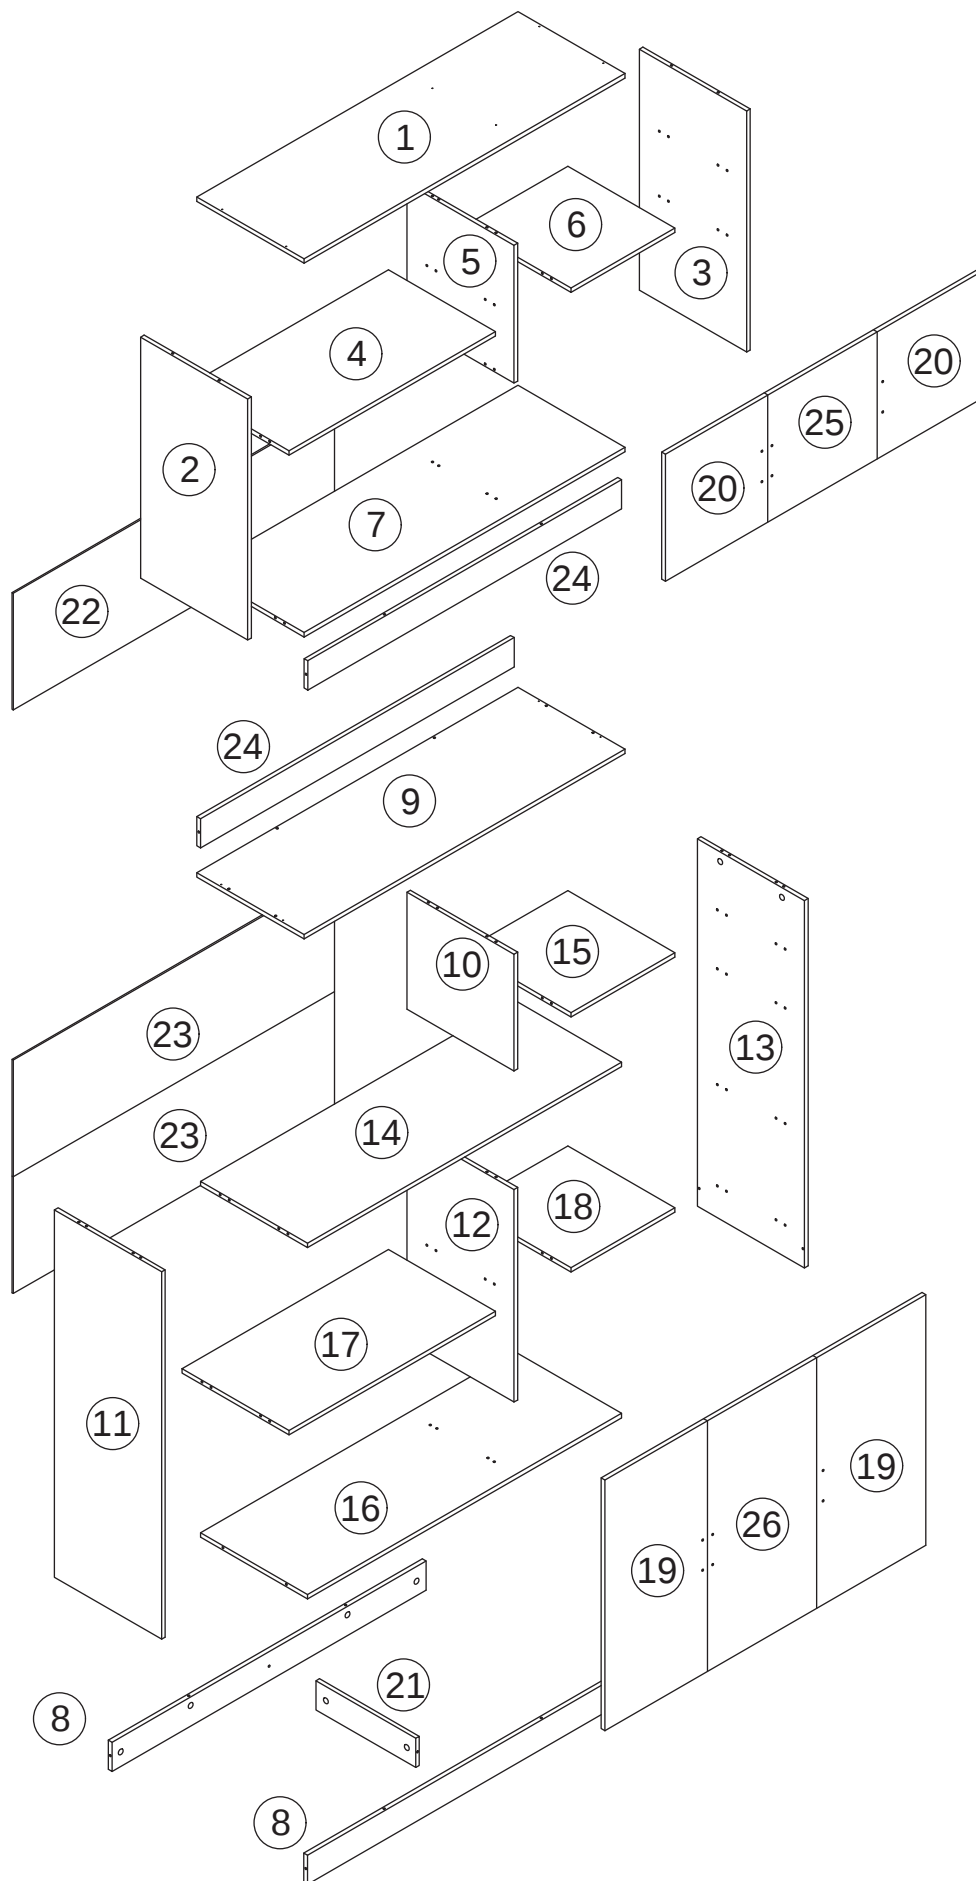 


This product have all reserved holes. Please install hardware components in the correct reserved holes according to the figure and written instructions. Do not drill holes by yourself.

  
1

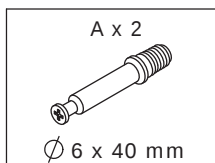

 
 
Insert quickfit screw(A) into corresponding holes in two plate 8 with a screwdriver as shown.

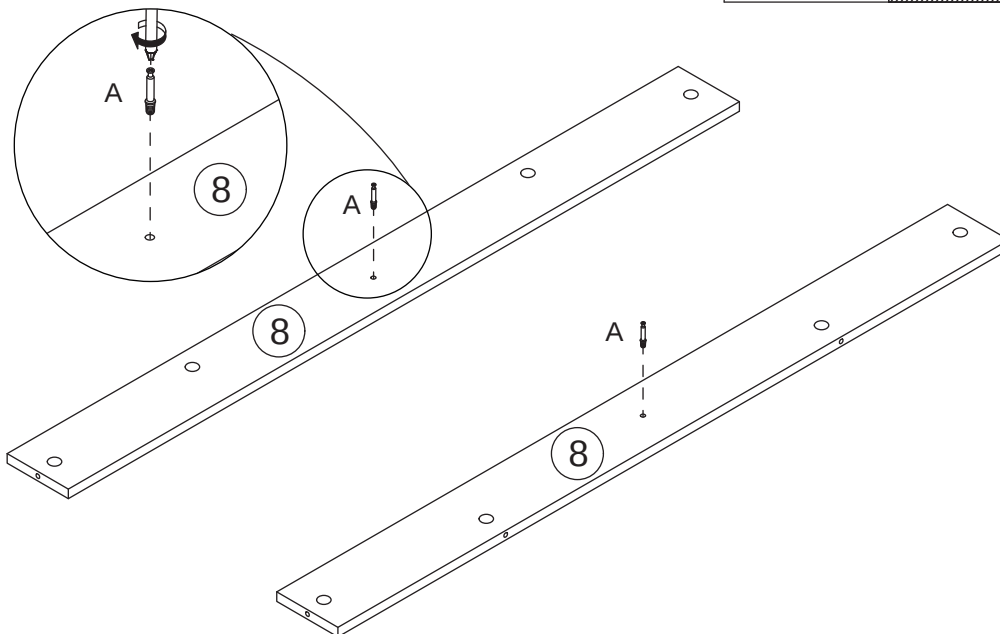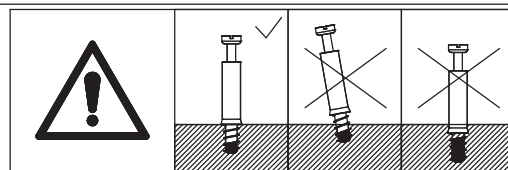





2

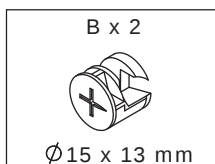 

  Connect plate 8 with plate 21, put cam lock(B) into holes in plate 21 and turn clockwise to tighten as shown.


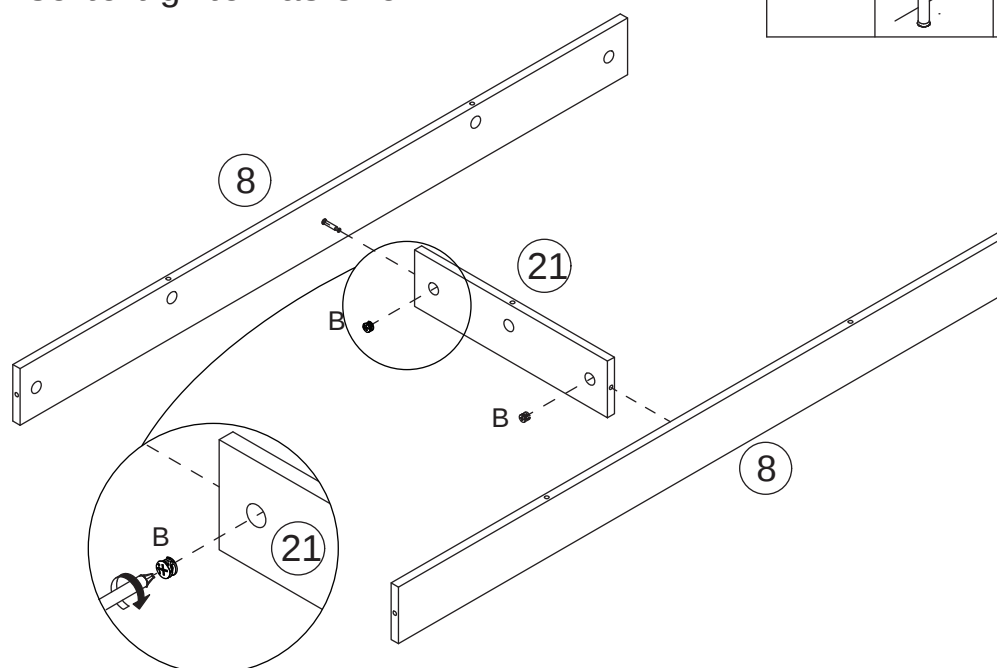
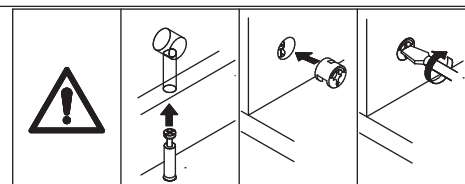


3

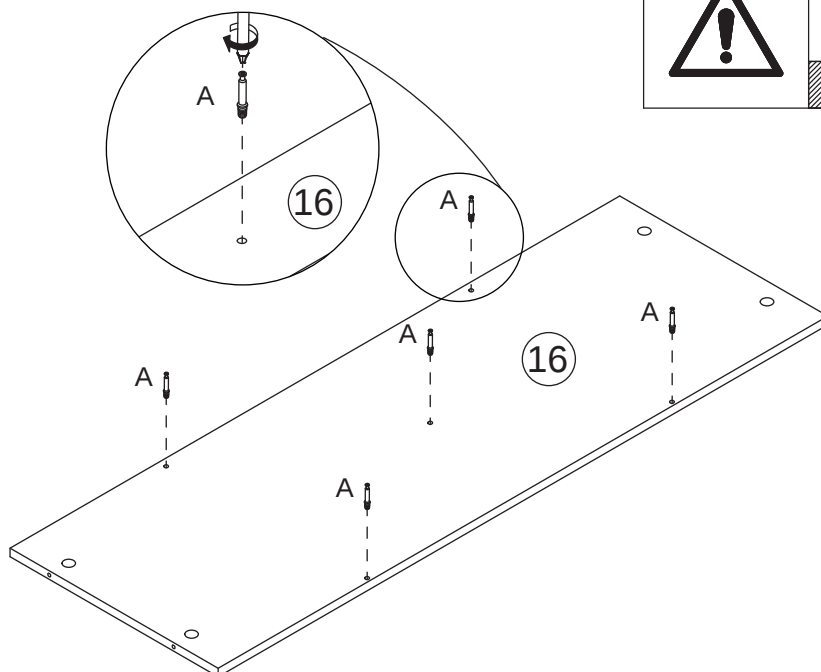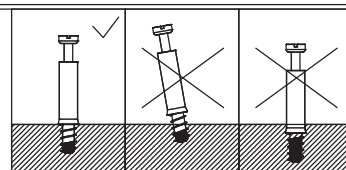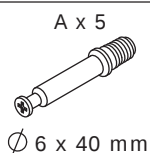    


Insert quickfit screw(A) into corresponding holes in plate 16 with a screwdriver as shown.

  
 
4

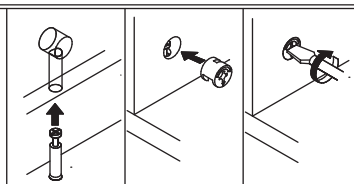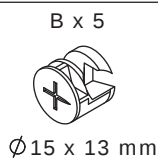


 
Attach the component to plate 16, put cam lock(B) into holes in plate 21,8 and turn clockwise to tighten as shown.

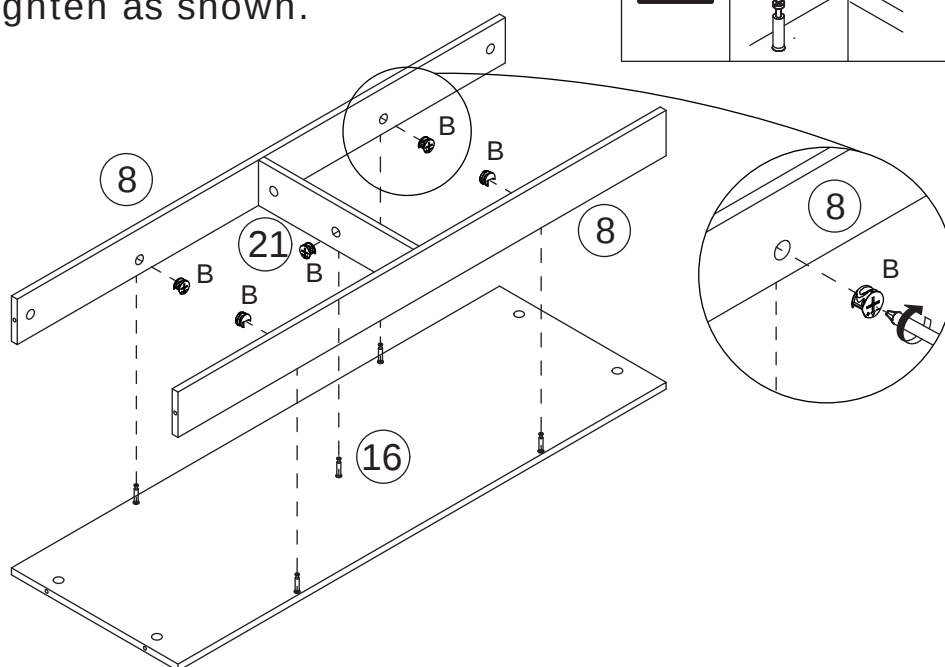






5

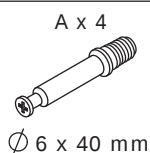  

  Insert quickfit screw(A) into corresponding holes in plate 12 at first.
Flip the plate, insert quickfit screw(A) as well.



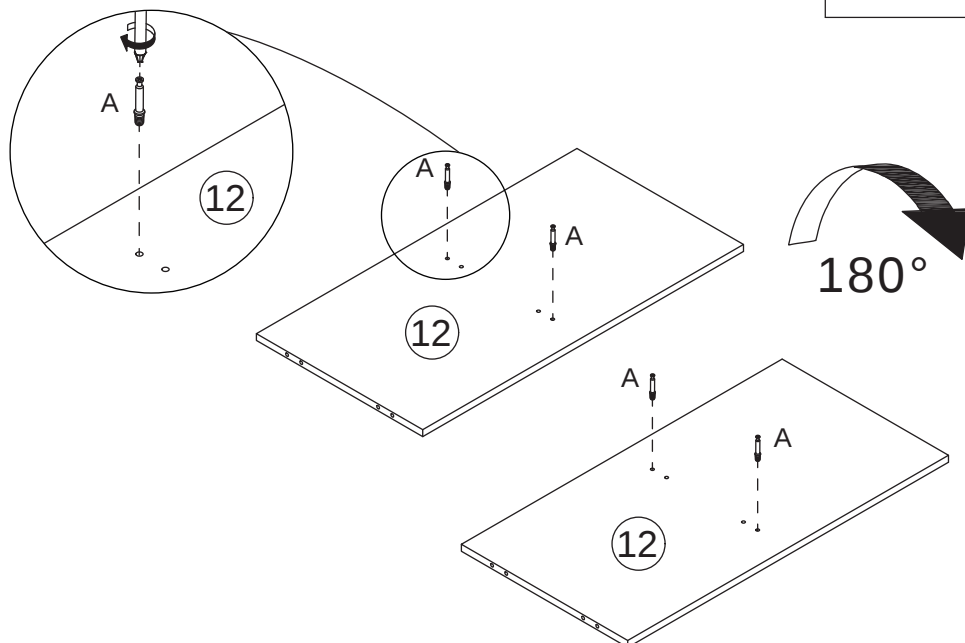
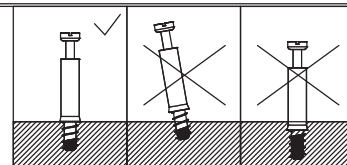


6

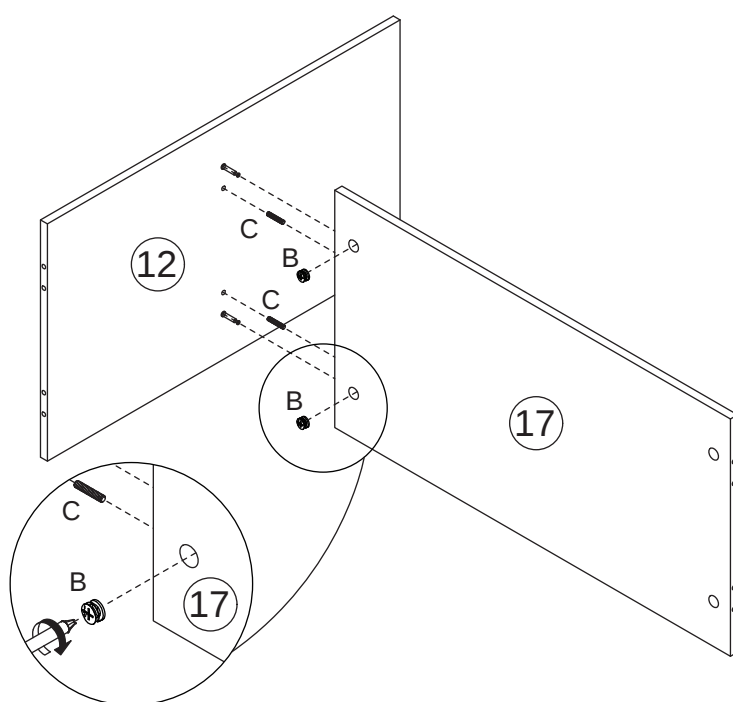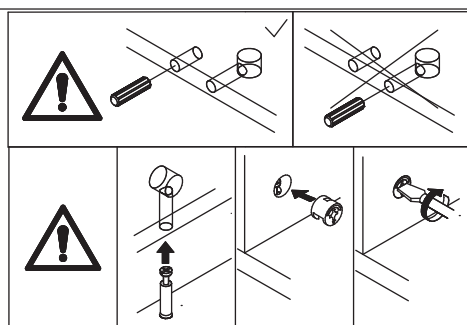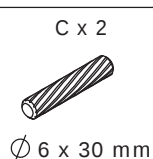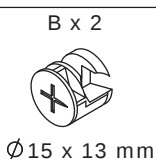     



Attach plate 17 to plate 12 with wooden dowel(C), put cam lock(B) into holes in plate 17 and turn clockwise to tighten as shown.

    7

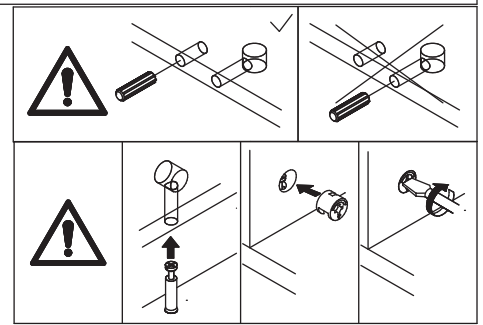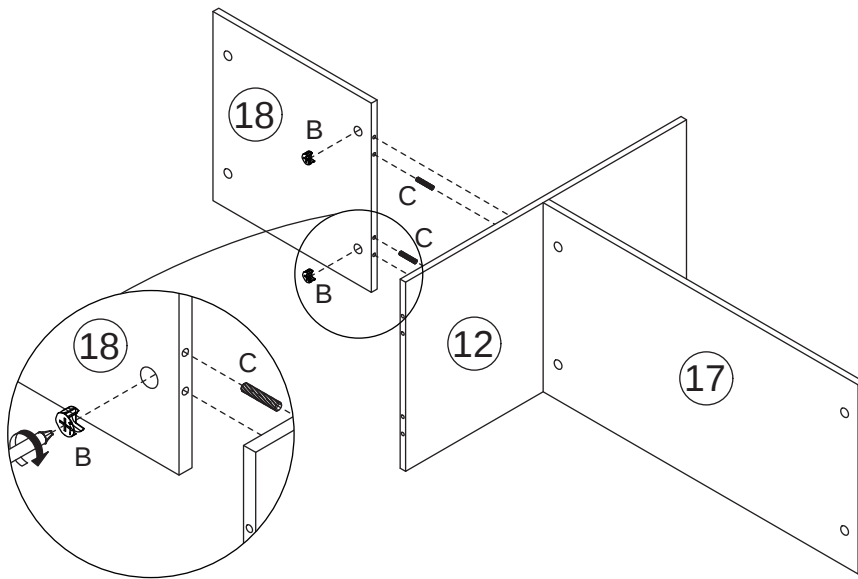
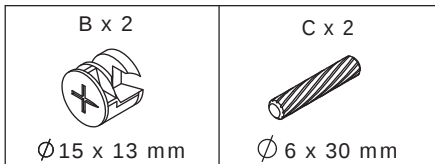


Attach plate 18 to plate 12 with wooden dowel(C), put cam lock(B) into holes in plate 18 and turn clockwise to tighten as shown.

  8

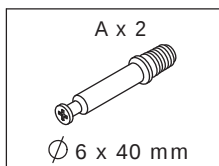

  Insert quickfit screw(A) into corresponding holes in plate 16 as shown.

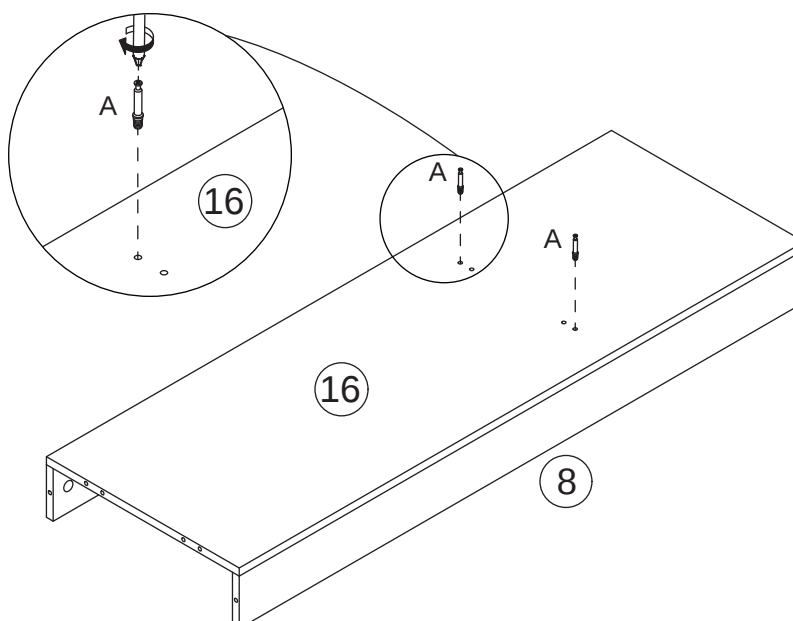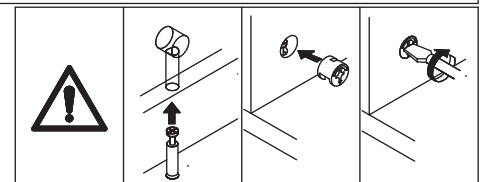

9

B x 2

 
 
 


Ø 15 x 13 mm

C x 2




Ø 6 x 30 mm

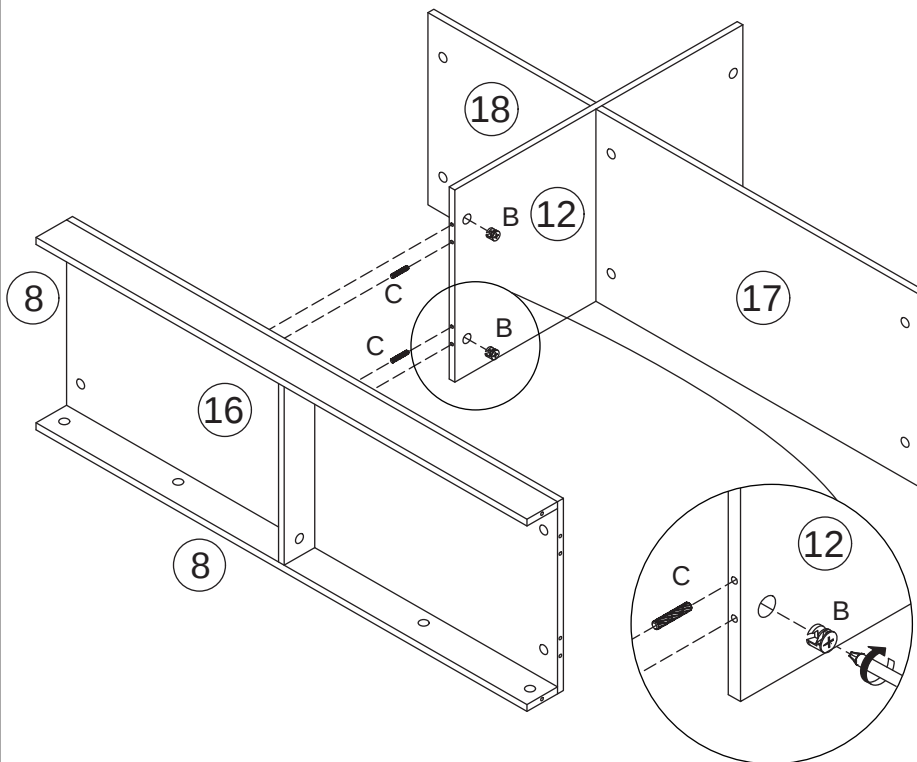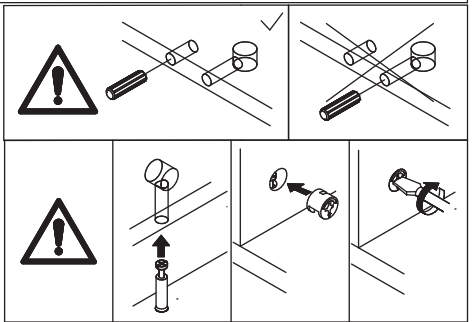




Attach plate 16 to plate 12 with wooden dowel(C), put cam lock(B) into holes in plate 12 and turn clockwise to tighten as shown.

10

 A x 4





Ø 6 x 40 mm

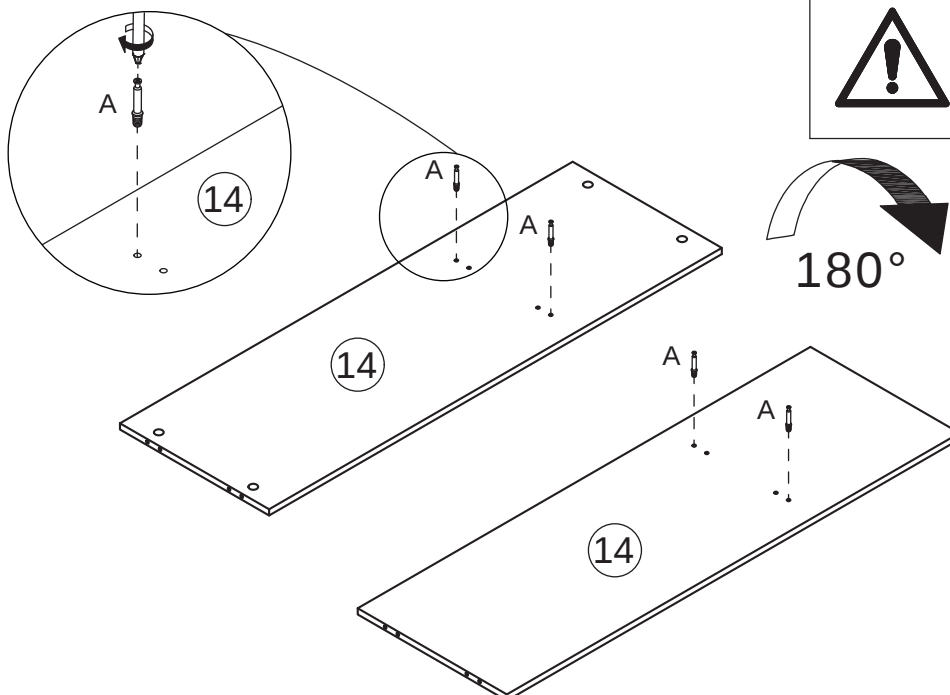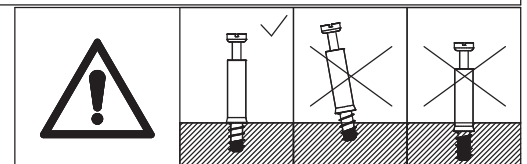  
 


Insert quickfit screw(A) into corresponding holes in plate 14 at first. Flip the plate, insert quickfit screw(A) as well.

  
11

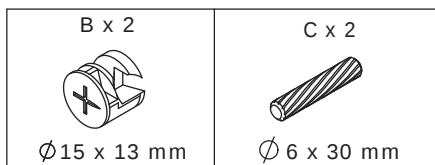

 
 
Attach plate 14 to plate 12 with wooden dowel(C), put cam lock(B) into holes in plate 12 and turn clockwise to tighten as shown.

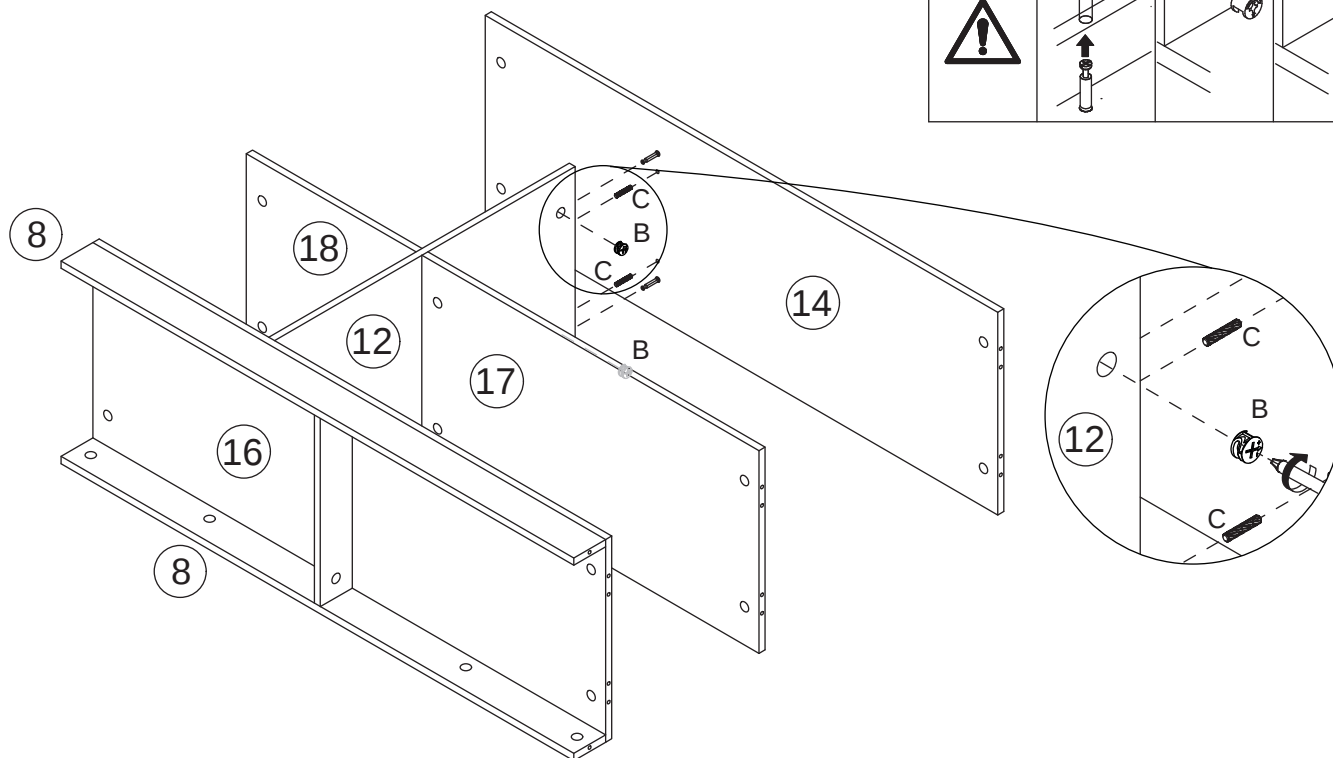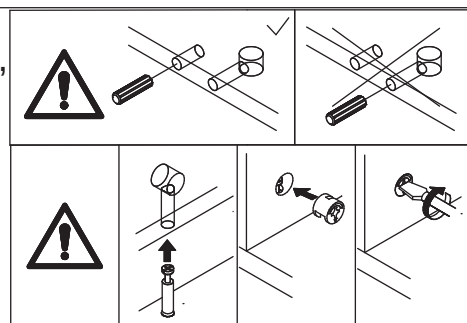

12

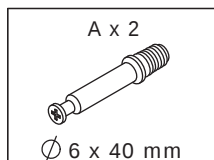 

  Insert quickfit screw(A) into corresponding holes in plate 10 as shown.

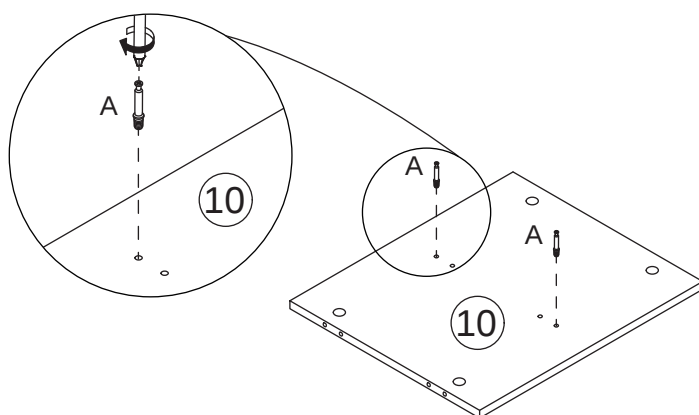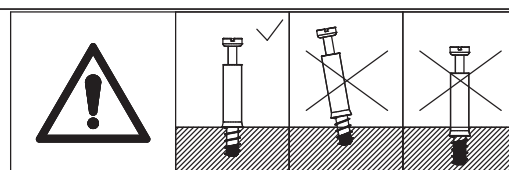

13

B x 2

 
 
 


Ø 15 x 13 mm

C x 2



Ø 6 x 30 mm

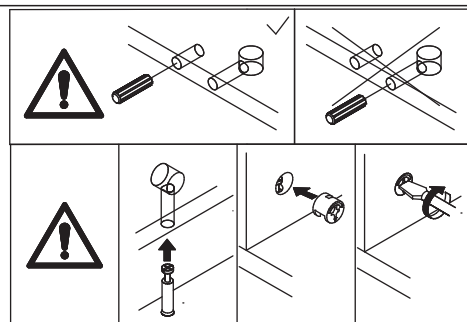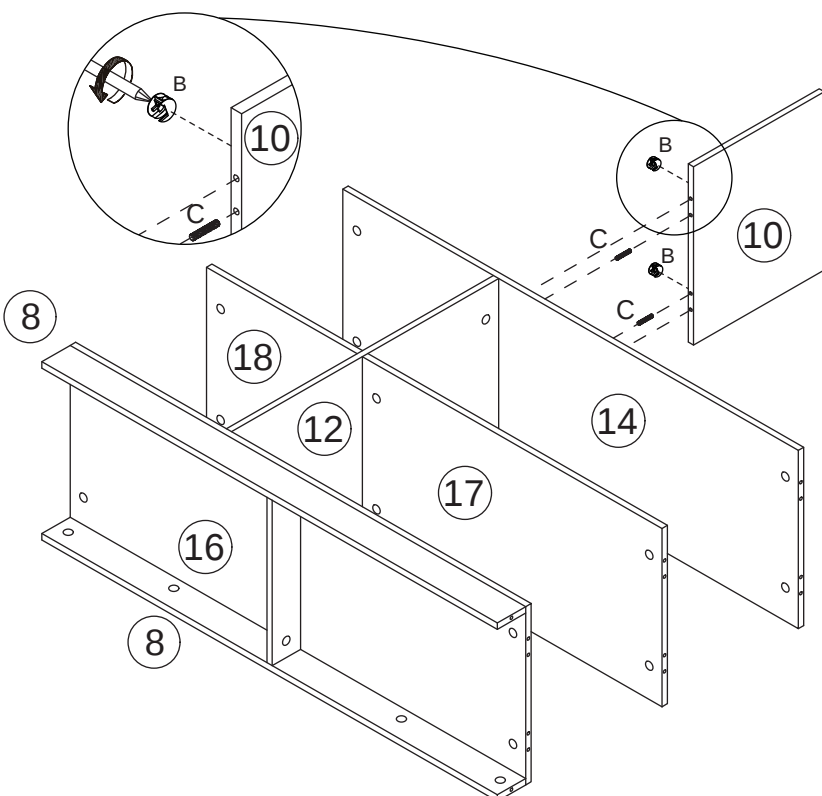

Attach plate 10 to plate 14 with wooden dowel(C), put cam lock(B) into holes in plate 10 and turn clockwise to tighten as shown.

14

B x 2

 
 
 


Ø 15 x 13 mm

C x 2





Ø 6 x 30 mm

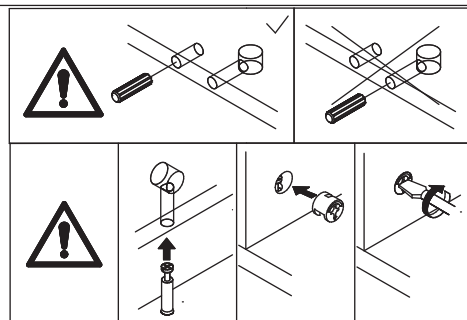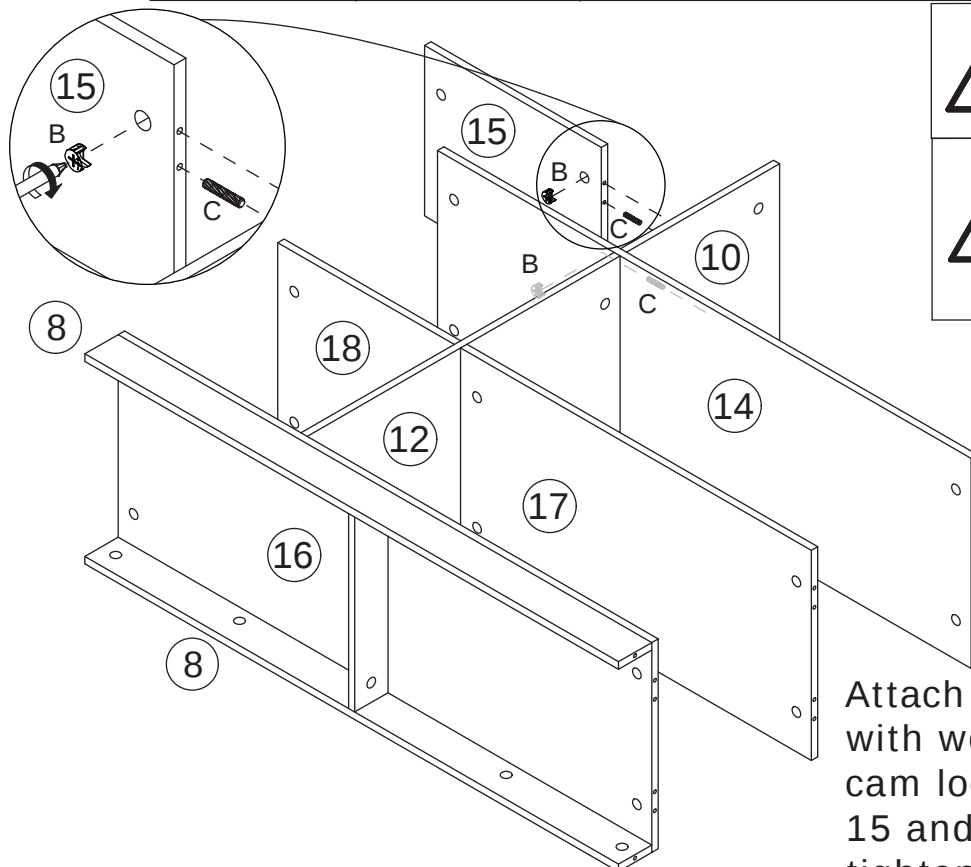



Attach plate 15 to plate 10 with wooden dowel(C), put cam lock(B) into holes in plate 15 and turn clockwise to tighten as shown.

 
 
15

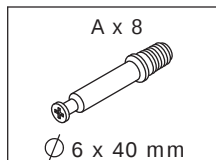

 
 
Insert quickfit screw(A) into corresponding holes in plate 11 as shown.

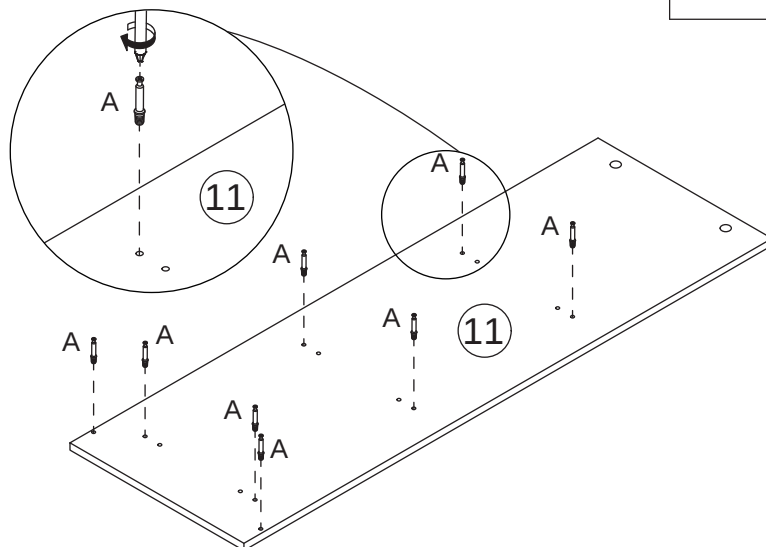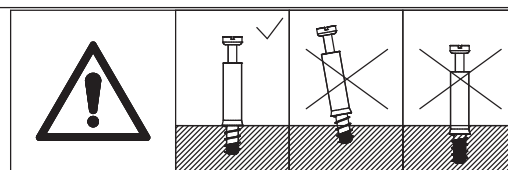





16

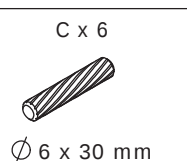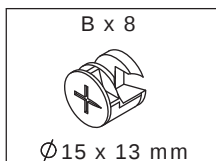  

  Attach plate 11 to plate 8,16,17 and 14 with wooden dowel(C), put cam lock(B) into holes in plate 8,16,17,14 and turn clockwise to tighten as shown.



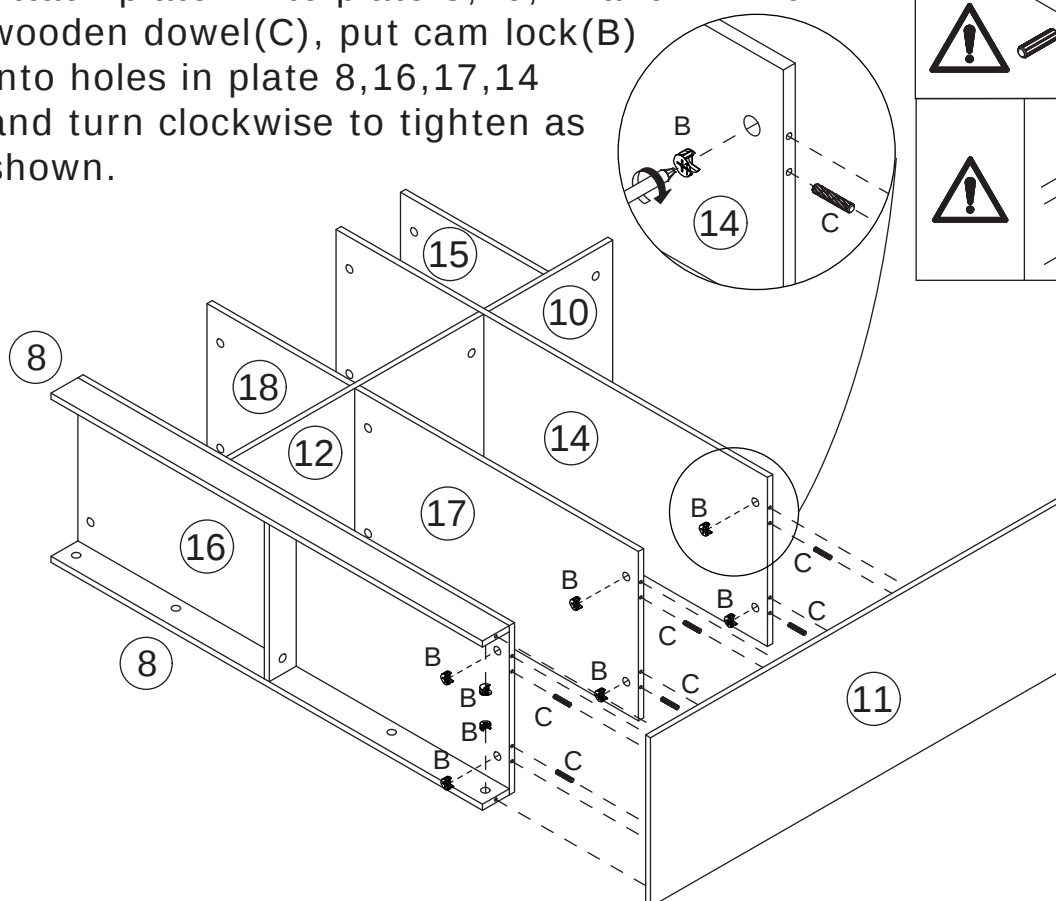
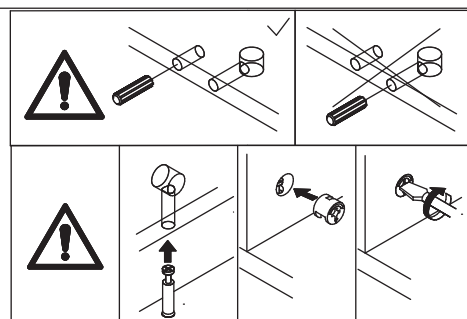


17

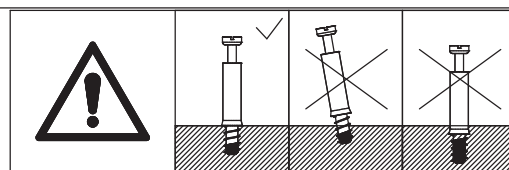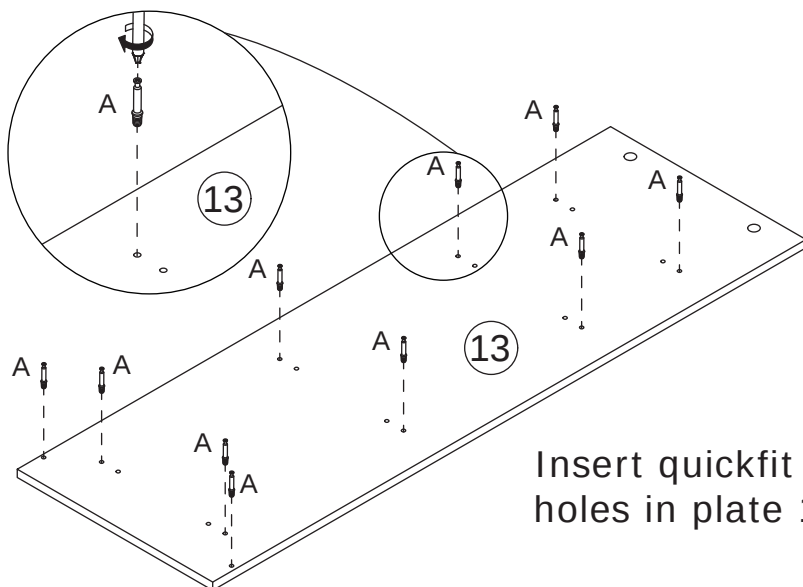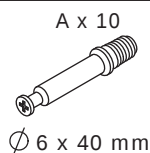    



Insert quickfit screw(A) into corresponding holes in plate 13 as shown.

    18

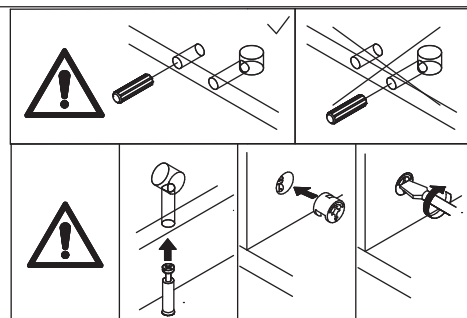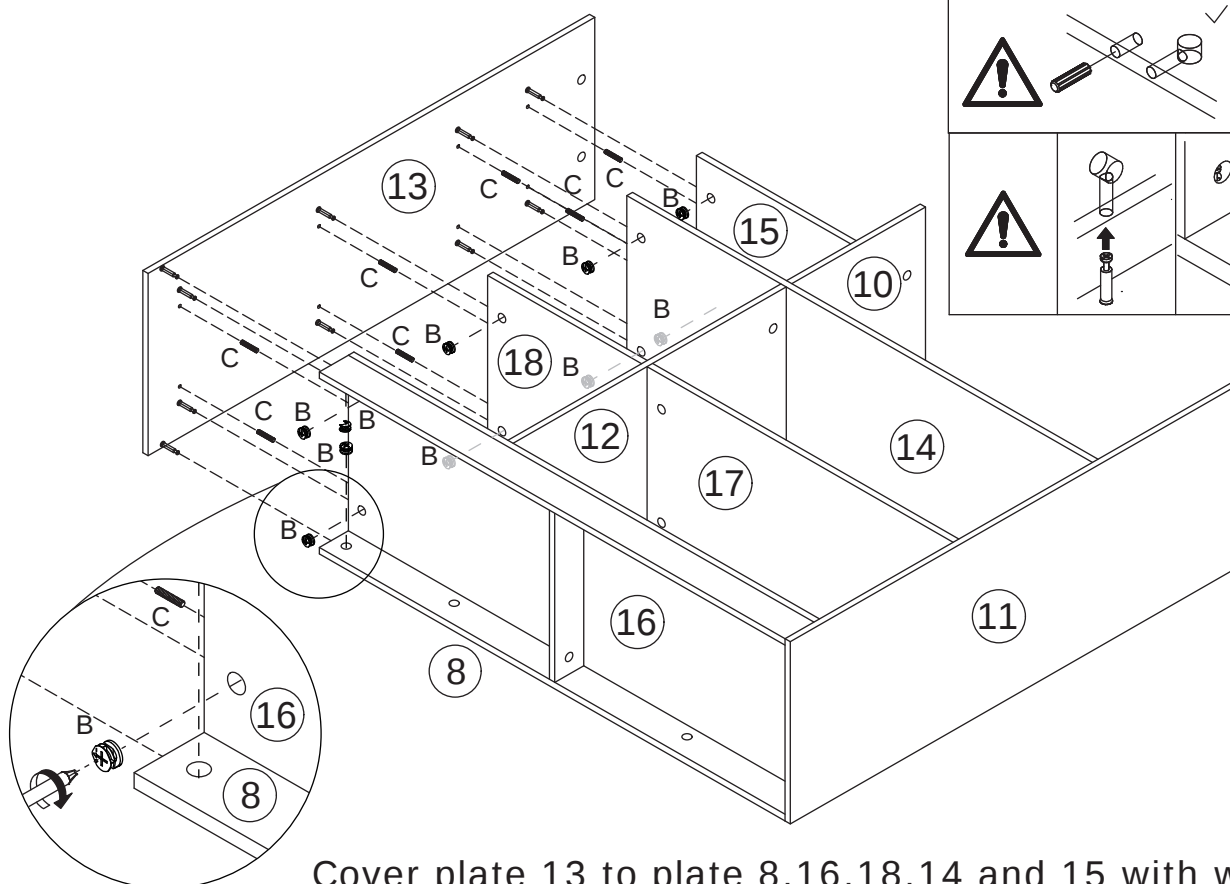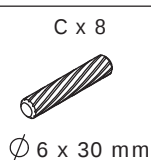
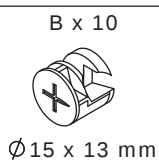


Cover plate 13 to plate 8,16,18,14 and 15 with wooden dowel(C), put cam lock(B) into holes in plate 8,16,18,14, 15 and turn clockwise to tighten as shown.



 
 
19

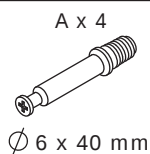

  Insert quickfit screw(A) into corresponding holes in plate 7 at first.
Flip the plate, insert quickfit screw(A) as well.





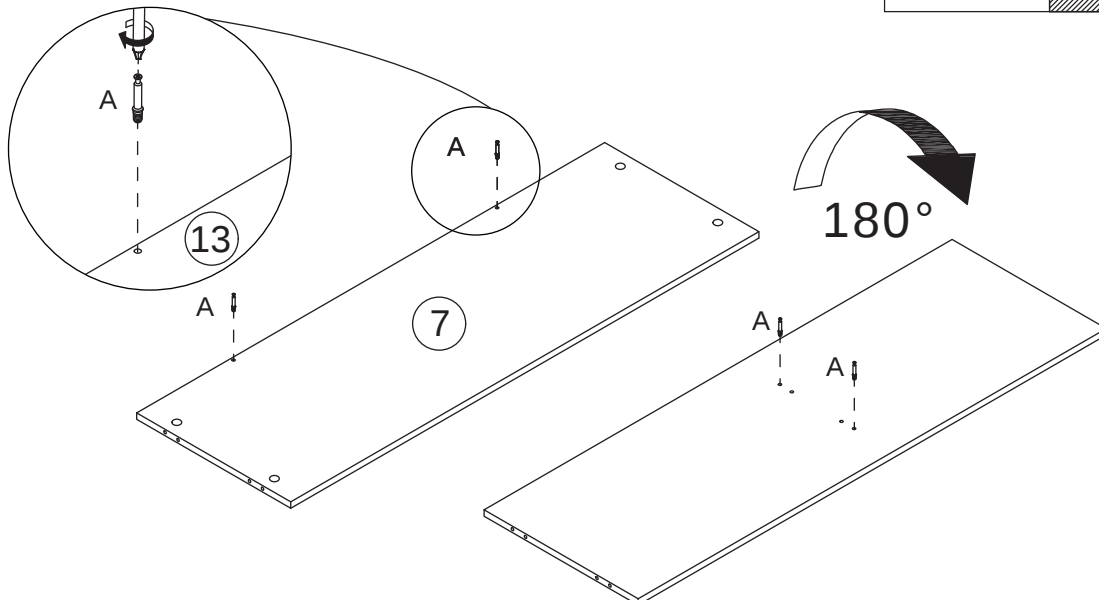
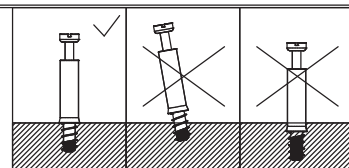


20

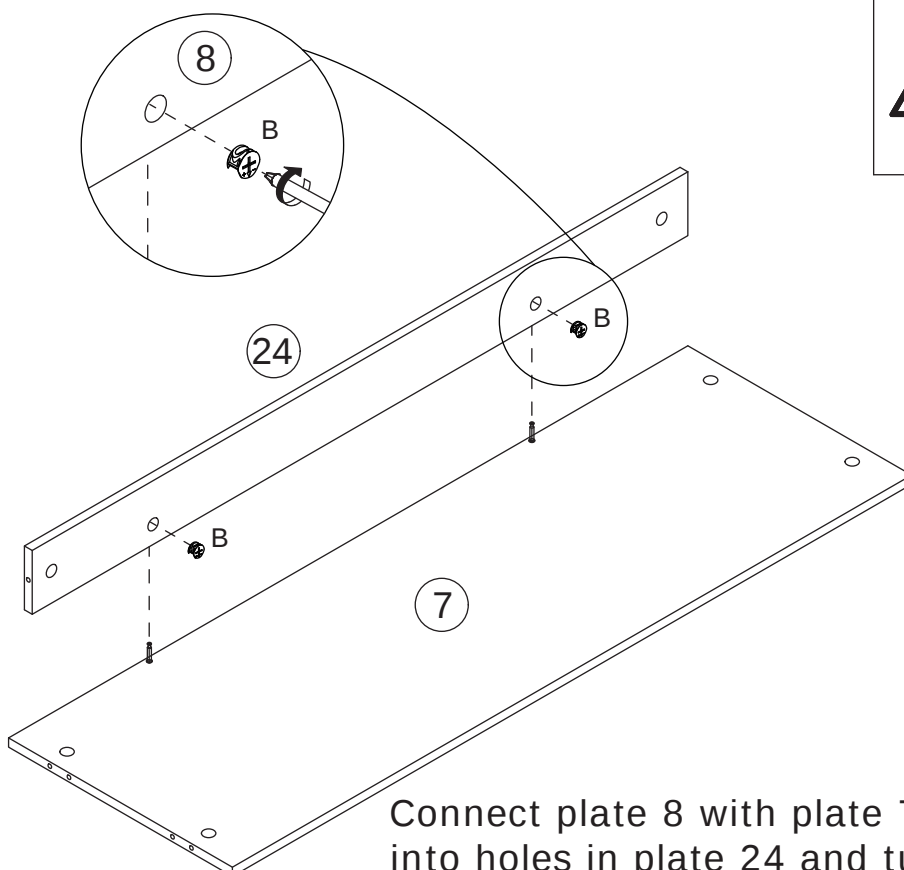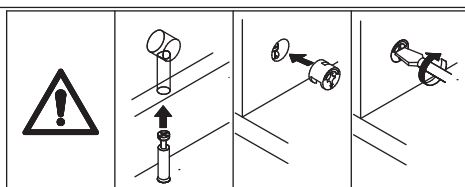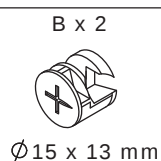    





Connect plate 8 with plate 7, put cam lock(B) into holes in plate 24 and turn clockwise to tighten as shown.

      21

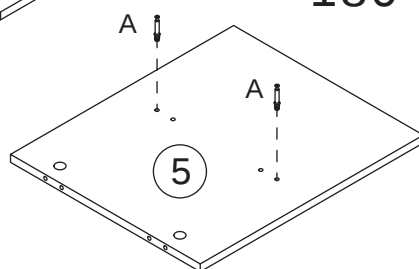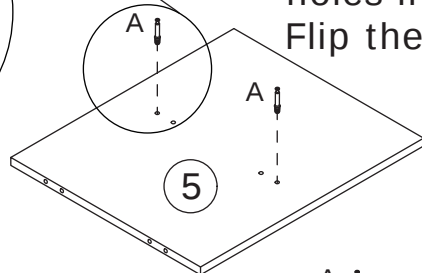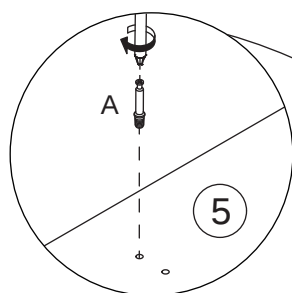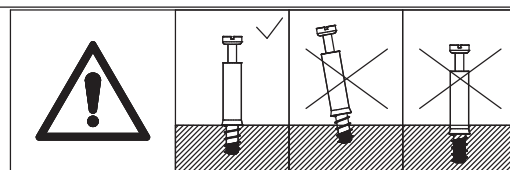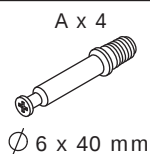

Insert quickfit screw(A) into corresponding holes in plate 5 at first.
Flip the plate, insert quickfit screw(A) as well.

    22

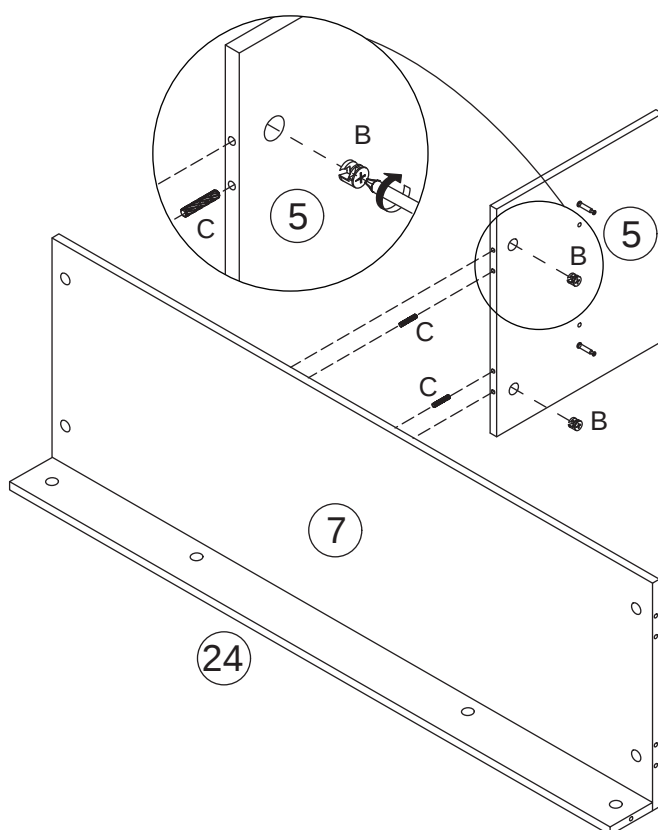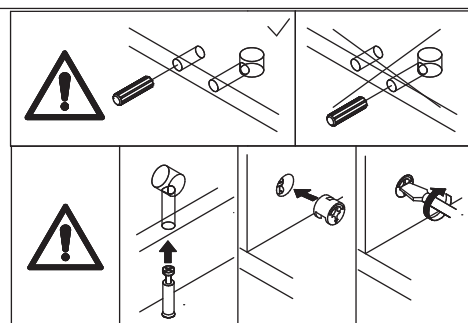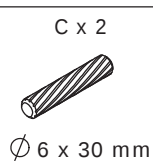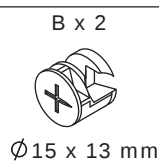

Attach plate 5 to plate 7 with wooden dowel(C), put cam lock(B) into holes in plate 5 and turn clockwise to tighten as shown.

23

B x 2

 
 
 


15 x 13 mm

C x 2



Ø 6 x 30 mm

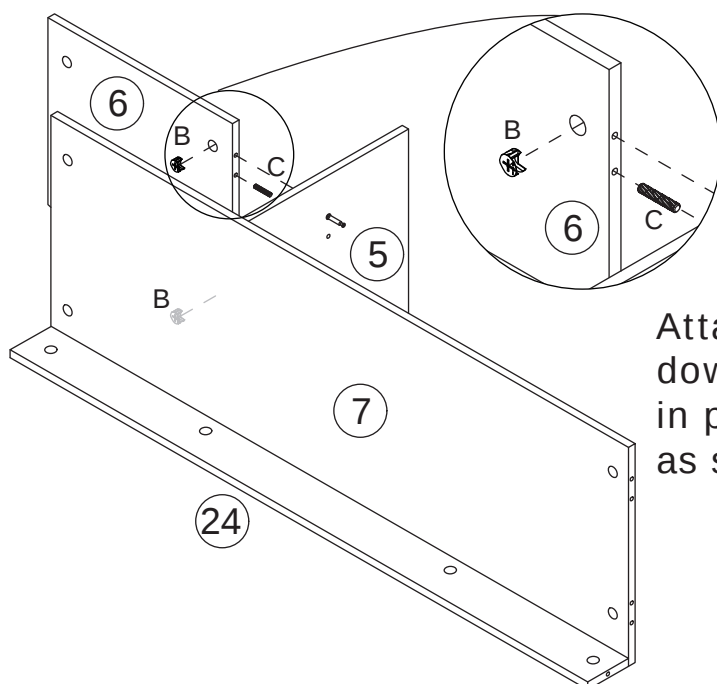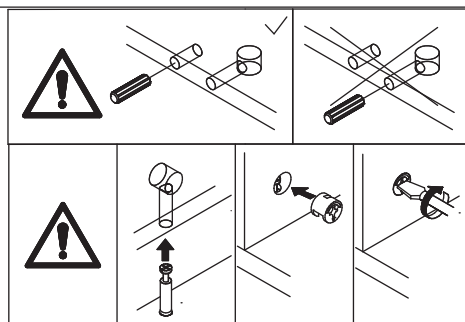

Attach plate 6 to plate 5 with wooden dowel(C), put cam lock(B) into holes in plate 6 and turn clockwise to tighten as shown.

24

B x 2

 
 
 


Ø15 x 13 mm

C x 2






Ø 6 x 30 mm

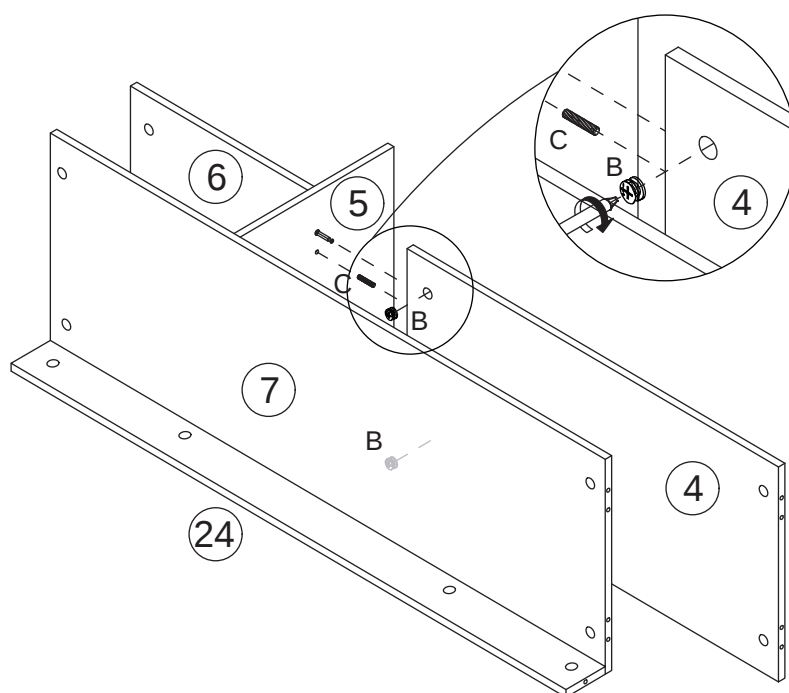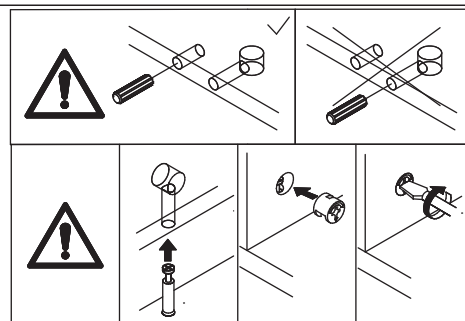





Attach plate 4 to plate 5 with wooden dowel(C), put cam lock(B) into holes in plate 4 and turn clockwise to tighten as shown.

   25

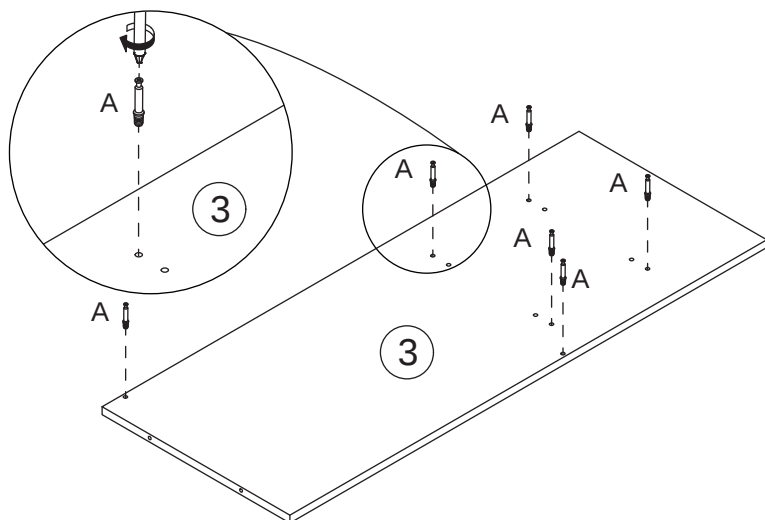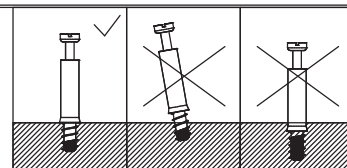






Insert quickfit screw(A) into corresponding holes in plate 3 as shown.

    26

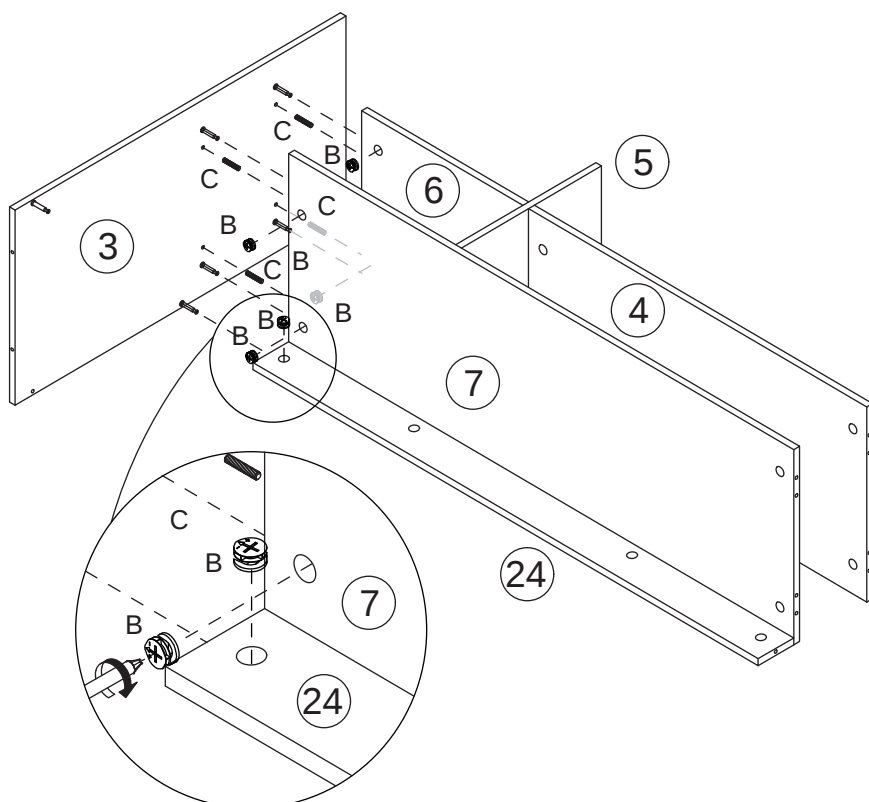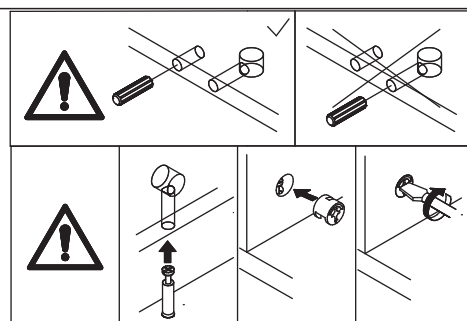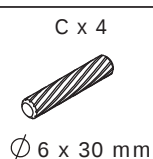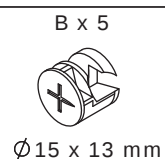




Cover plate 3 to plate 24,7 and 6 with wooden dowel(C), put cam lock(B) into holes in plate 24,7,6 and turn clockwise to tighten as shown.

     27

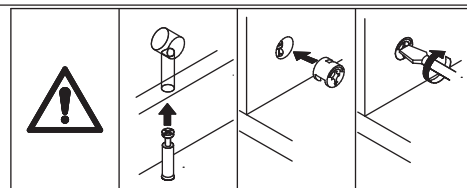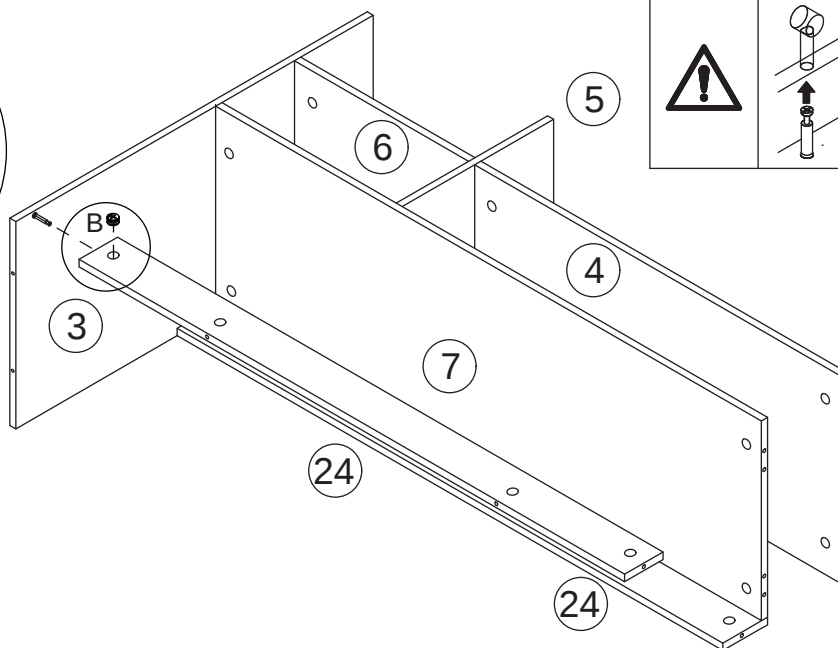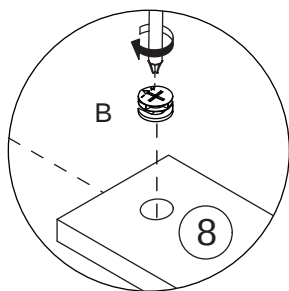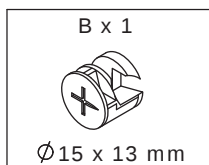

Attach plate 24 to plate 3, put cam lock(B) into holes in plate 3 and turn clockwise to tighten as shown.

   28

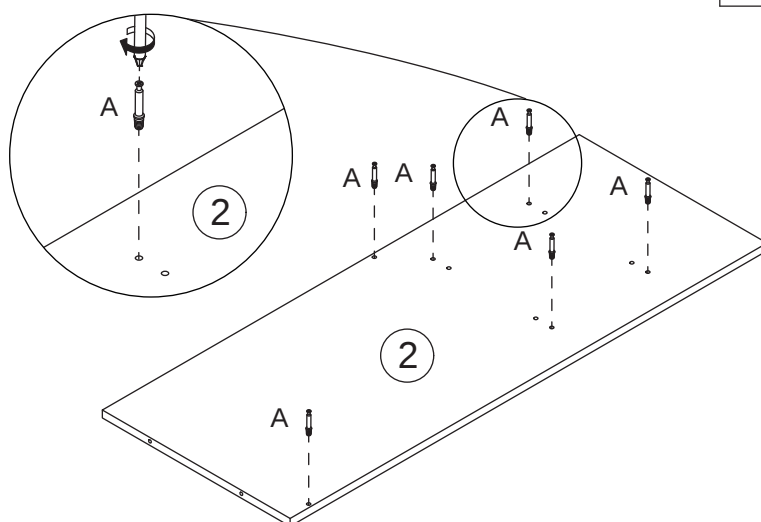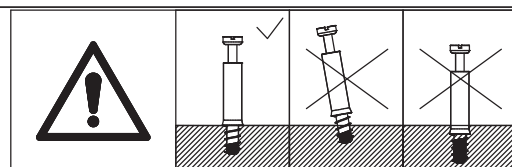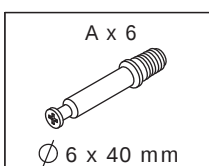

Insert quickfit screw(A) into corresponding holes in plate 2 as shown.

29

B x 6

 
 


Ø15 x 13 mm

C x 4



Ø6 x 30 mm

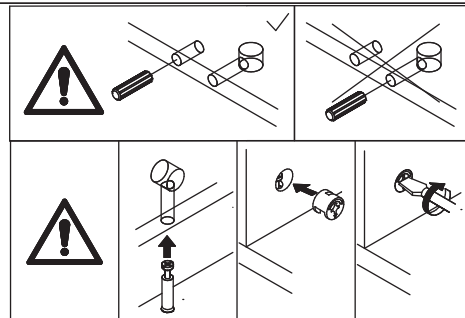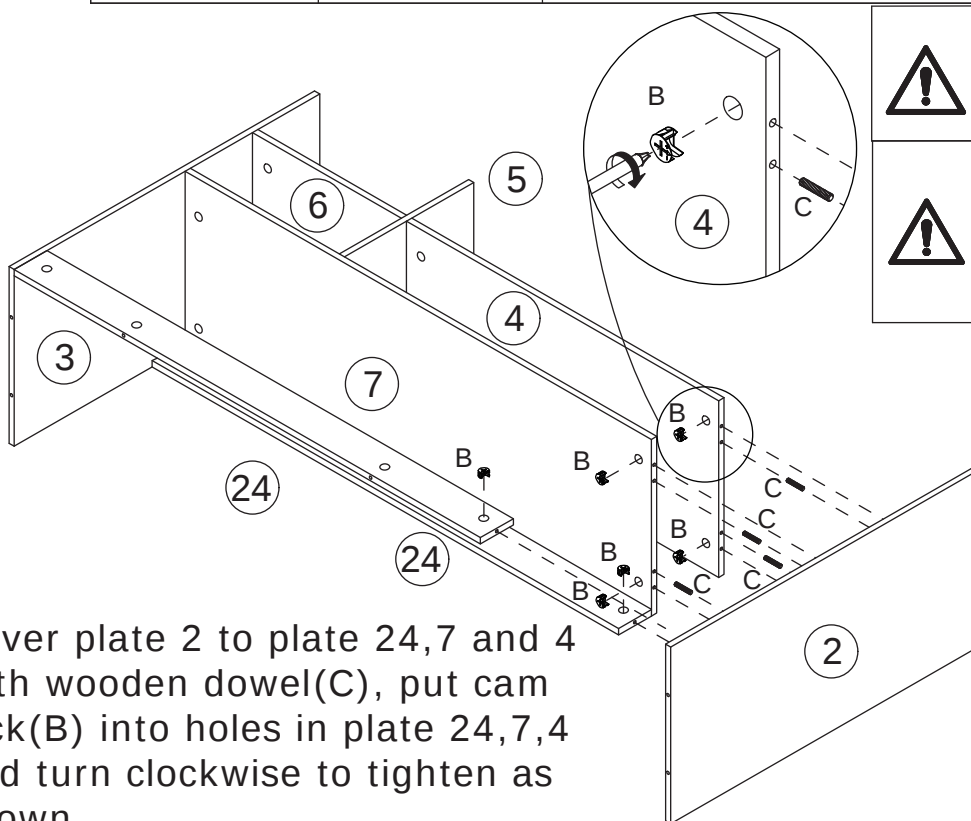

Cover plate 2 to plate 24,7 and 4 with wooden dowel(C), put cam lock(B) into holes in plate 24,7,4 and turn clockwise to tighten as shown.

30

F x 6

 
 


Ø4 x 35 mm

C x 6





Ø6 x 30 mm

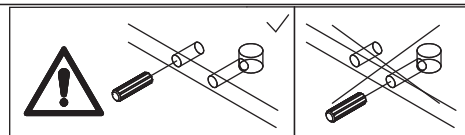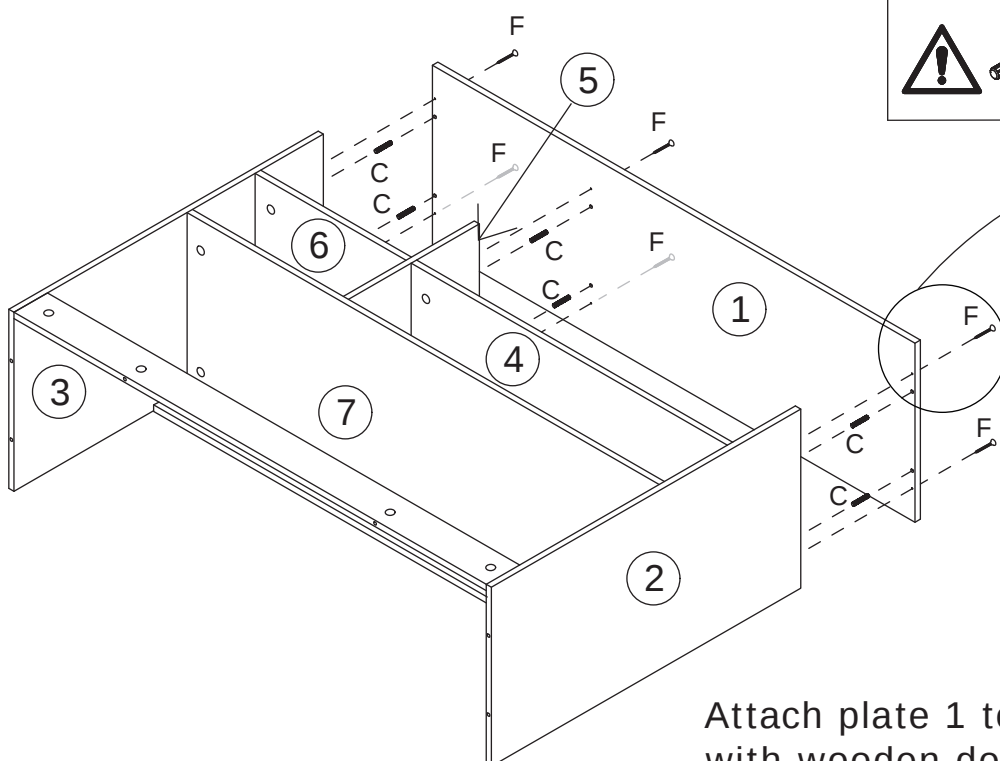

Attach plate 1 to plate 3,5 and 2 with wooden dowel(C), then fix using screw(F) as shown.

  31

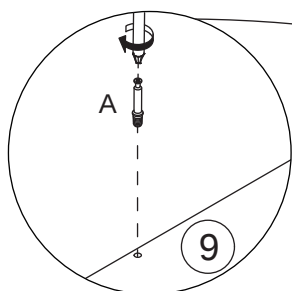


9


A



 9

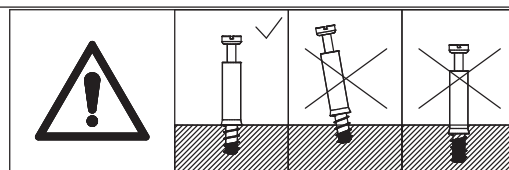

180°





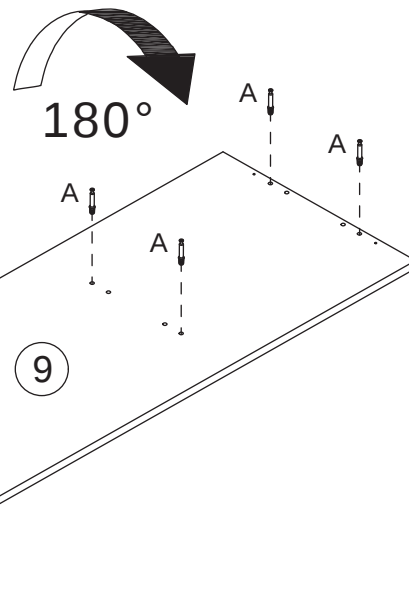 


9

Insert quickfit screw(A) into corresponding holes in plate 9 at first.

Flip the plate, insert quickfit screw(A) as well.

     32

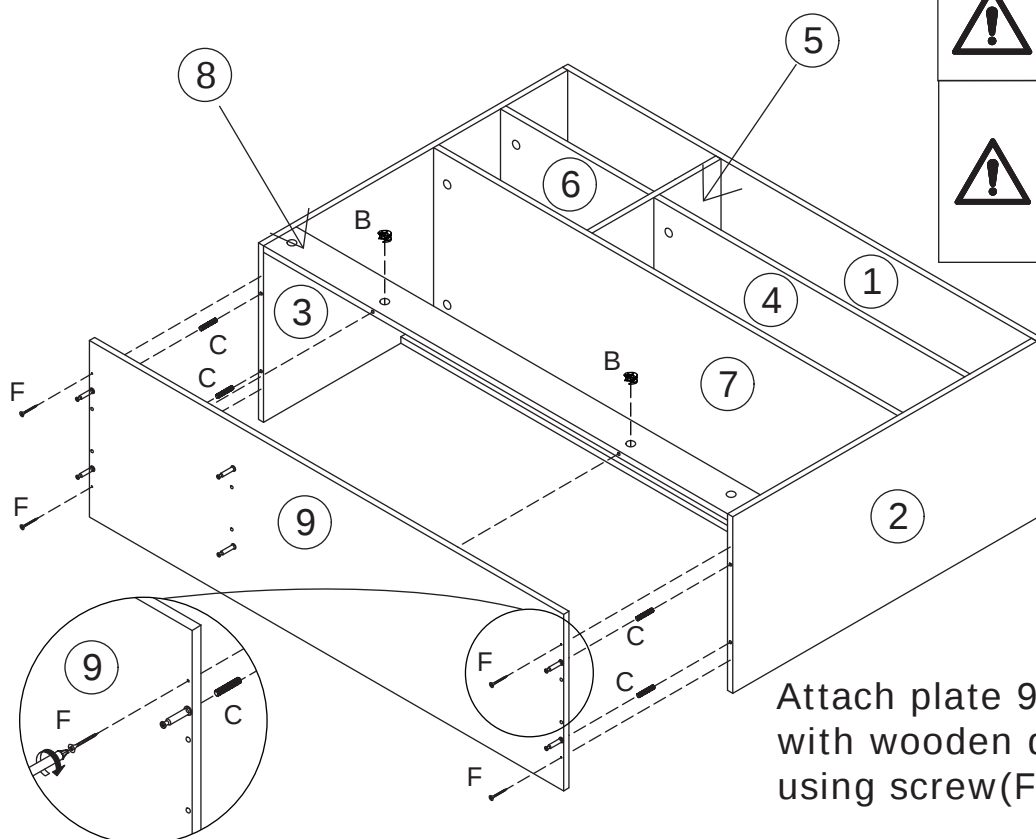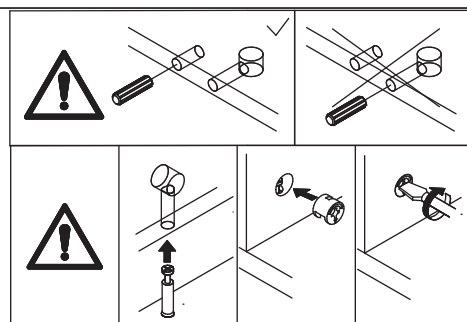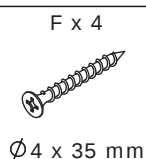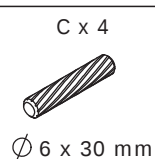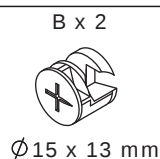

Attach plate 9 to plate 3,24 and 2 with wooden dowel(C), then fix using screw(F) as shown.

33

B x 6

 
 


Ø 15 x 13 mm


C x 6



Ø 6 x 30 mm

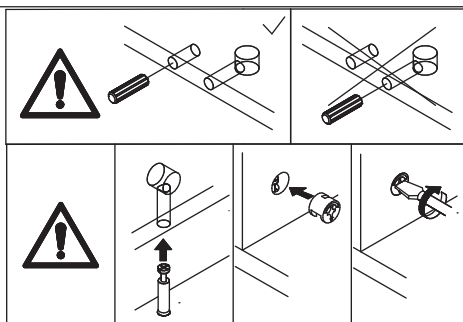


 Connect the two assembled components with wooden dowel(C), put cam lock(B) into holes in plate 15,10,11 and turn clockwise to tighten as shown.

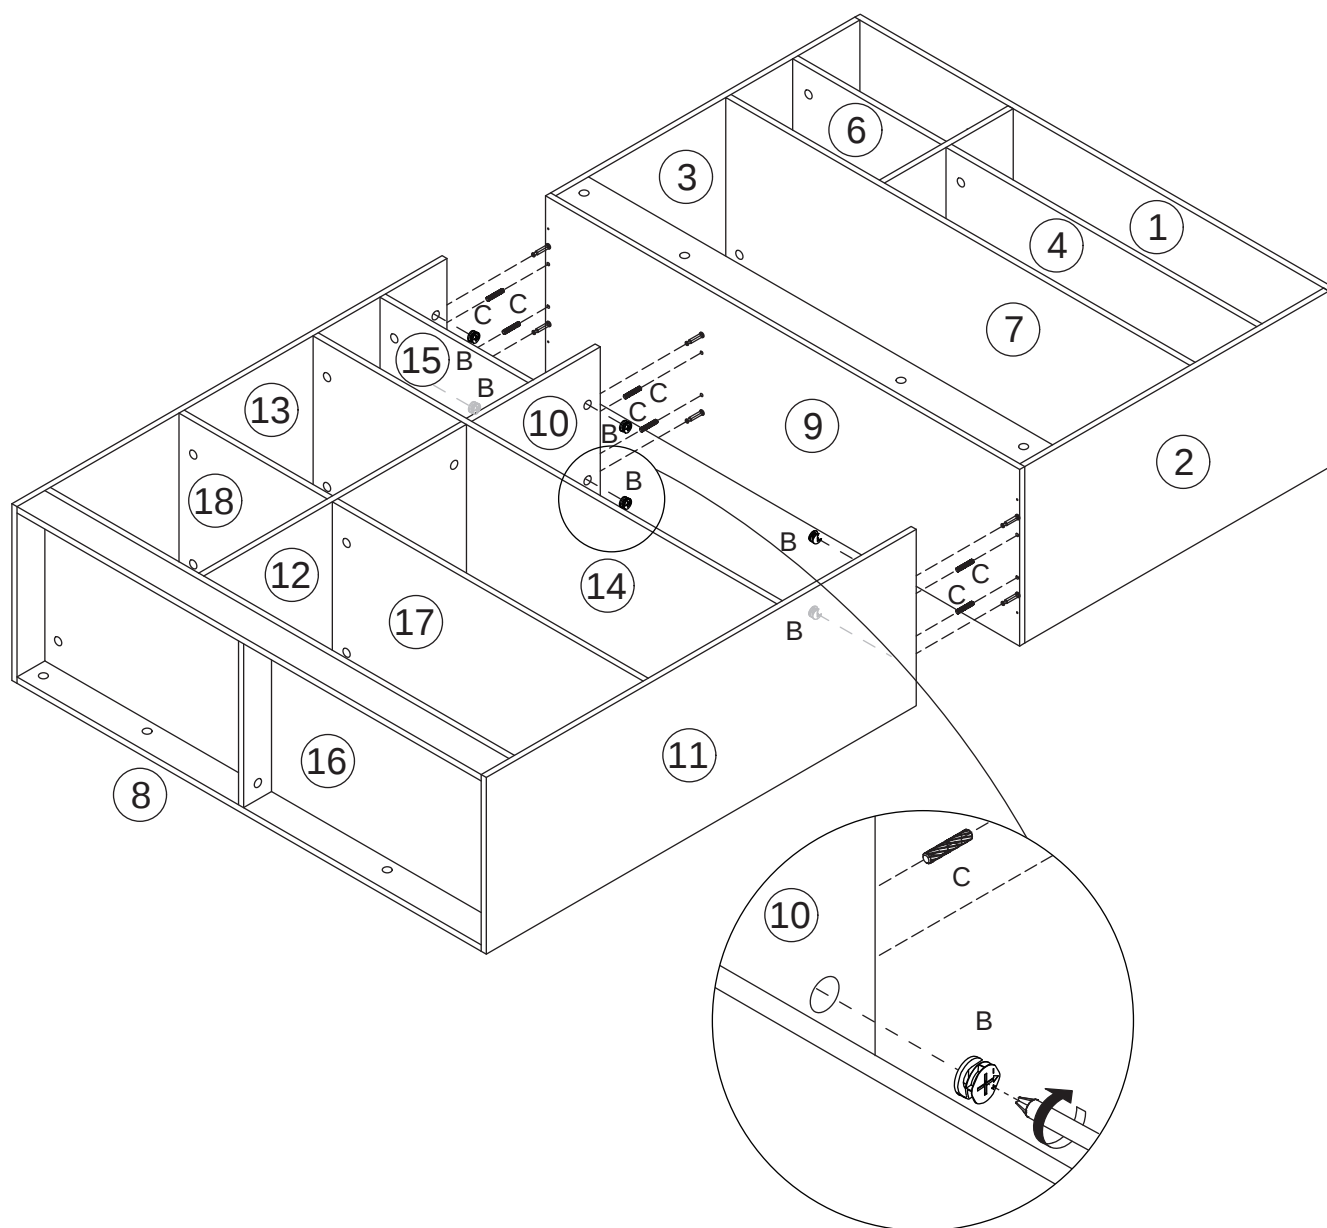

34

 
B x 40



N x 5




 6 x 20 mm






Fix back plate 22 and 23 using nail(G) as shown.

 Fix each plate 23 together using part(N) with nail(G) as shown.


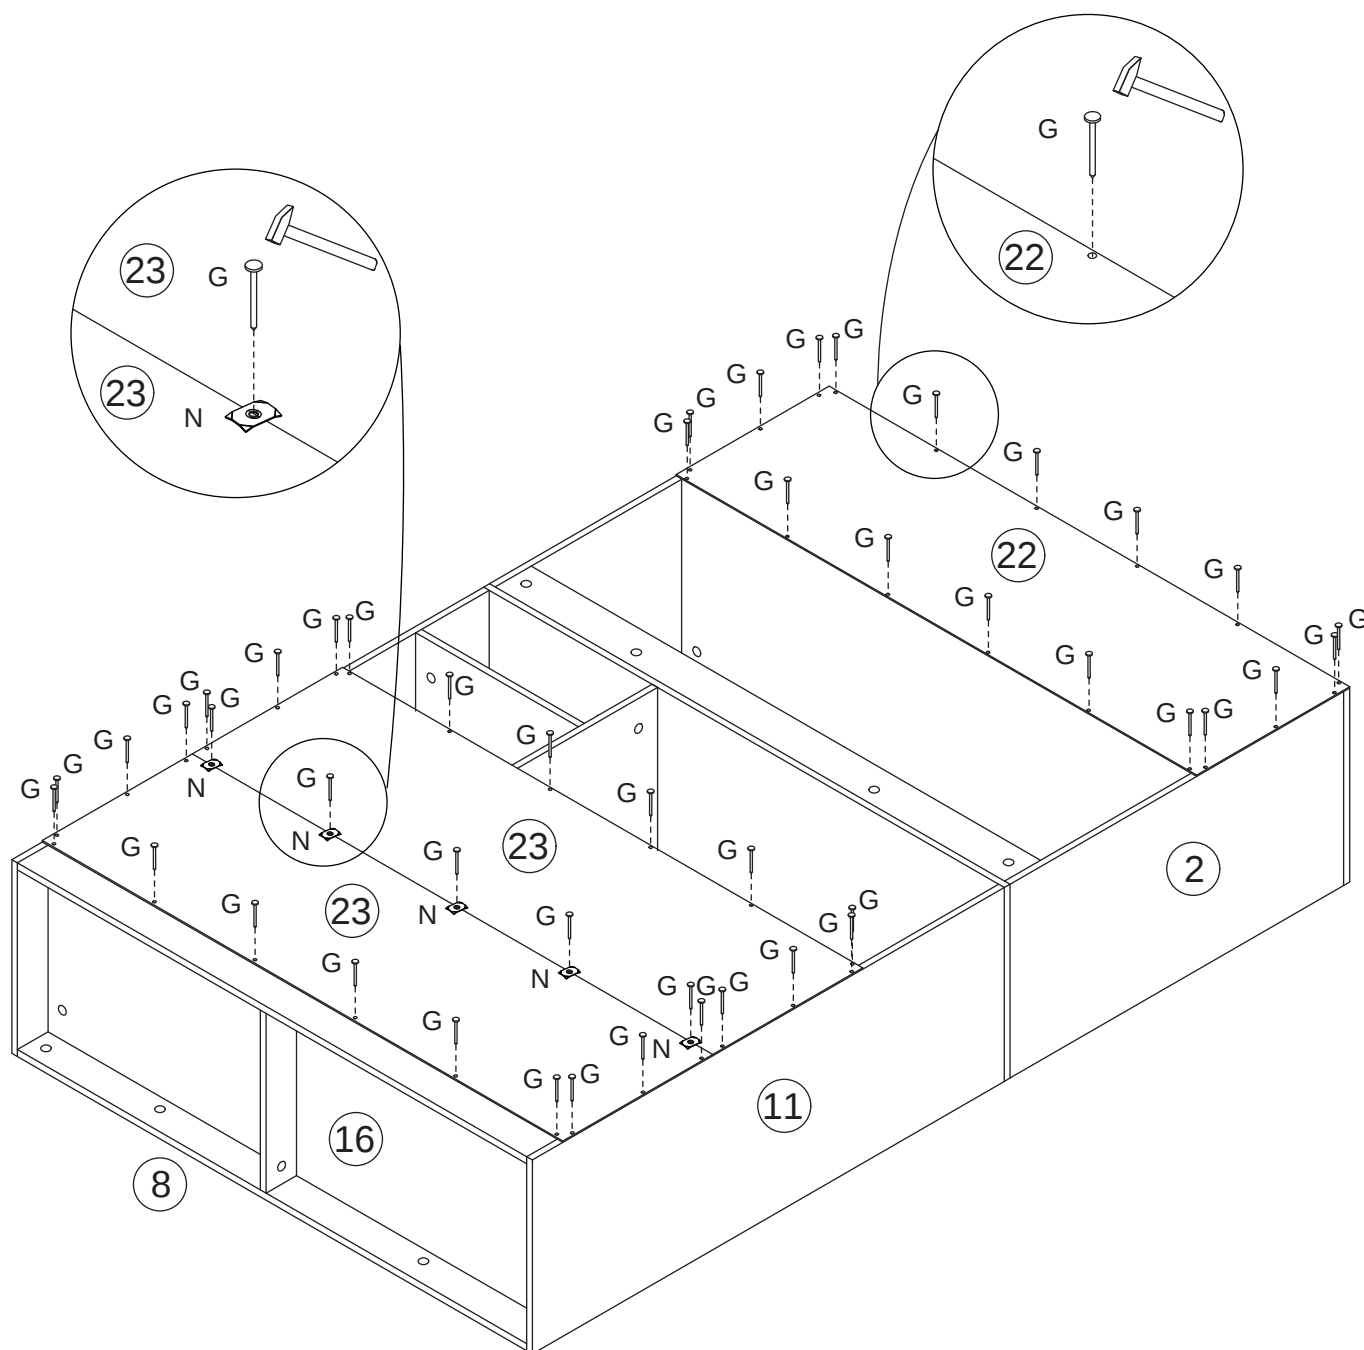


35

  
H x 4 	K x 8  Ø 4 x 14 mm	L x 2 	M x 4  Ø 4 x 20 mm
--	---	--	---

 


  Fix hinge(H) to plate 20(x2) using screw(K) as shown.
Fix handle(L) using screw(M).

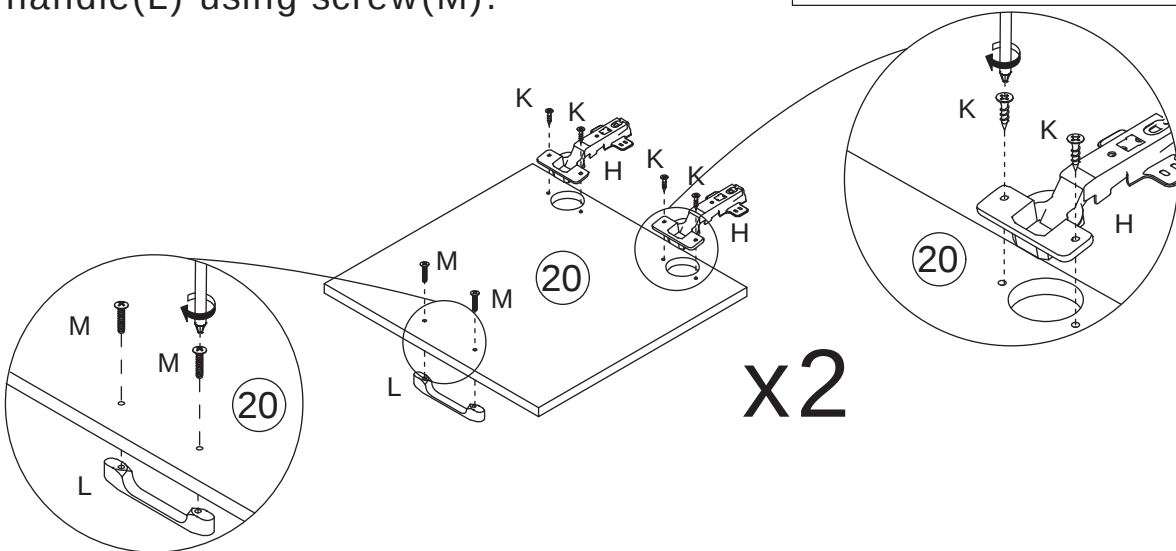
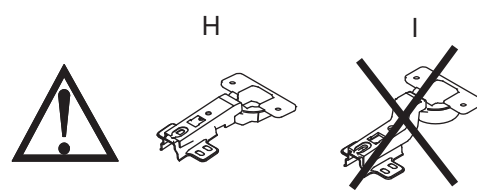


36


 
I x 2 	K x 4  Ø 3.5 x 12 mm	L x 1 	M x 2  Ø 4 x 20 mm
--	---	--	---

 

  Fix hinge(I) to plate 25 using screw(K) as shown.
Fix handle(L) using screw(M).

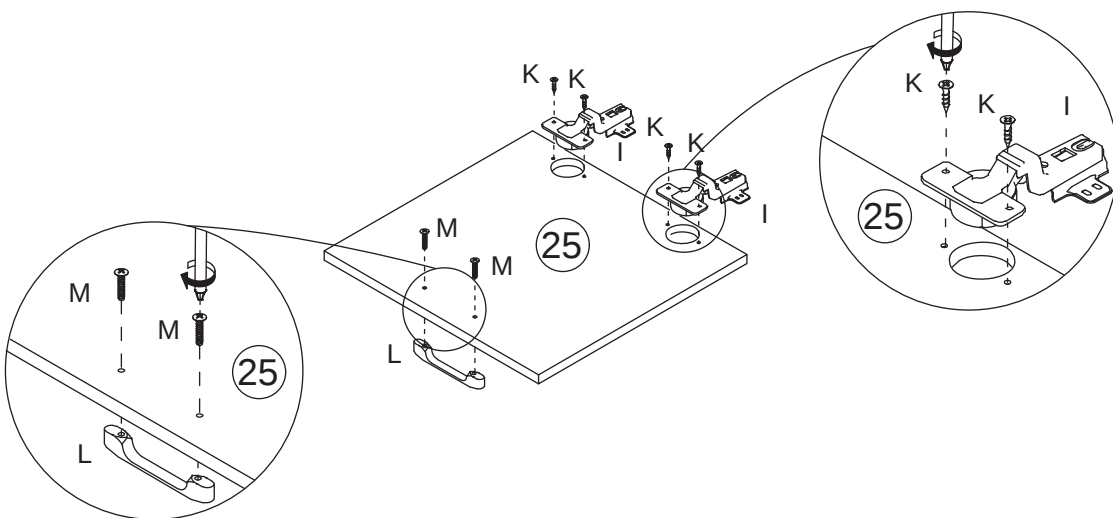
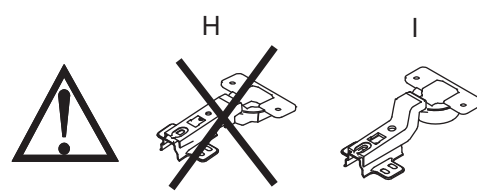


37

 
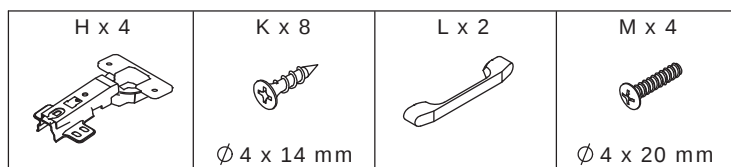 


Fix hinge(H) to plate 19(x2) using screw(K) as shown.

  Fix handle(L) using screw(M).

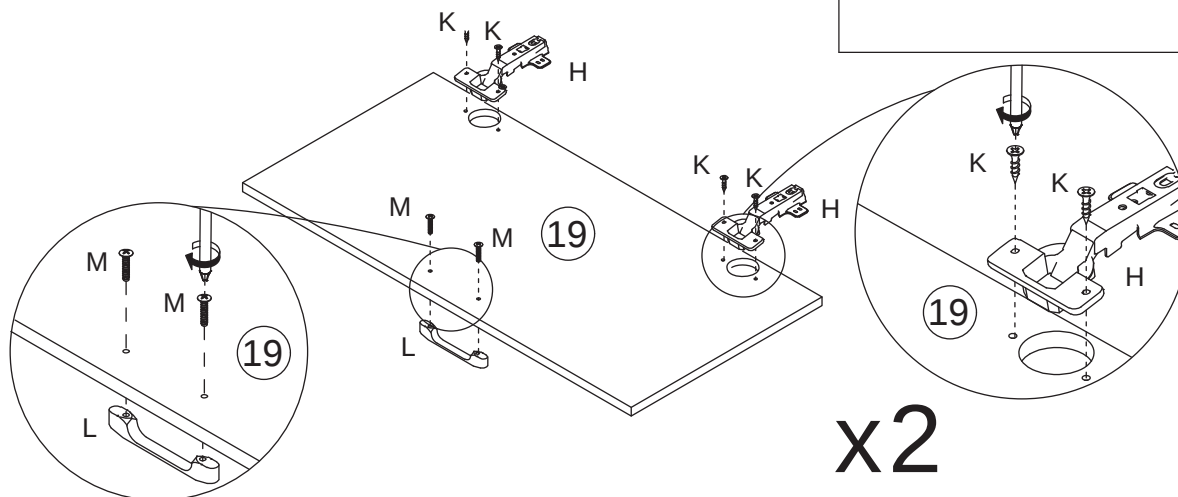
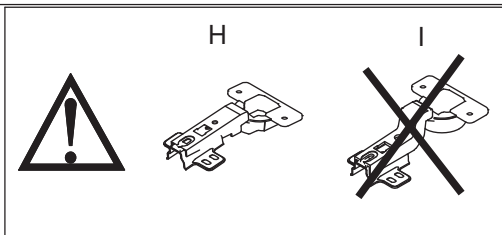


38

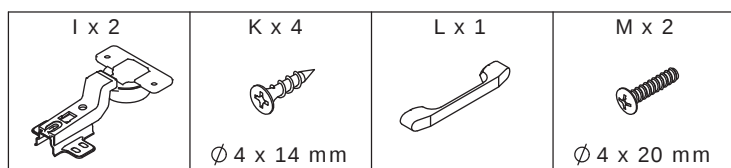  

Fix hinge(I) to plate 26 using screw(K) as shown.

  Fix handle(L) using screw(M).

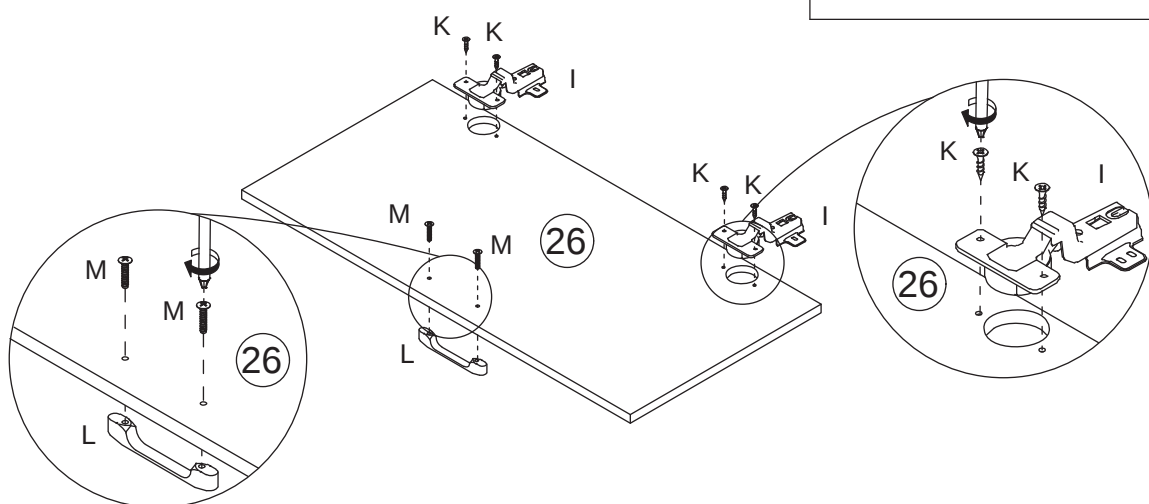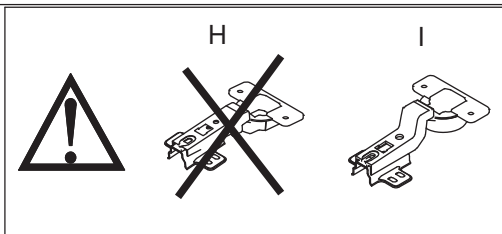


39


K x 48




 Ø 4 x 14 mm













 
 
Attach plate 20,25 to upper cabinet; plate 19,26 to lower cabinet by fixing hinge using screw(K) as shown.

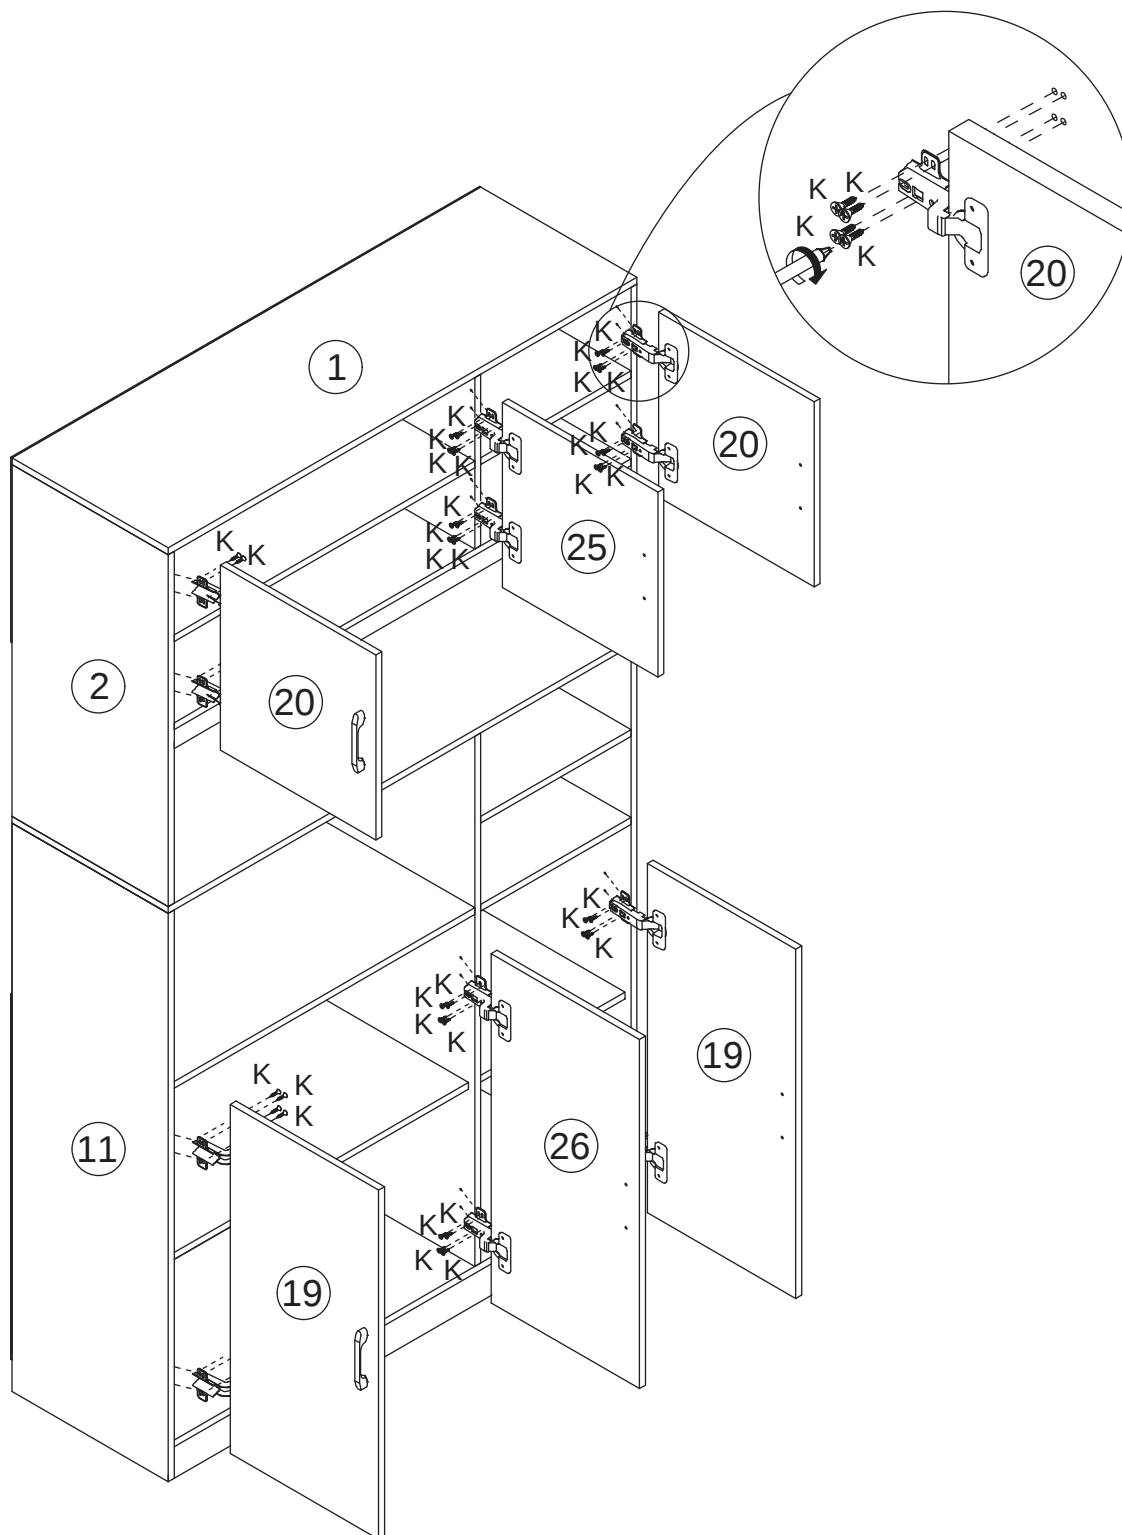



More detailed hinge adjustment modes:

            - 1) After the screw connecting the cabinet body is turned out anticlockwise, the gap between the whole door frame and the upper and lower parts can be adjusted. After adjustment, screw in the screw clockwise;
- 2) After the screw at the end of the hinge is turned out anticlockwise, the gap between the whole door frame and the front and back of the cabinet can be adjusted. After adjustment, the screw can be turned in clockwise (it can be turned out to the movab

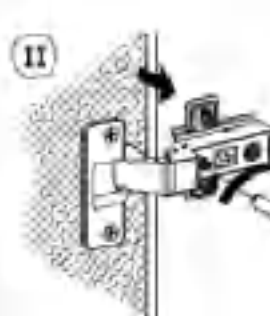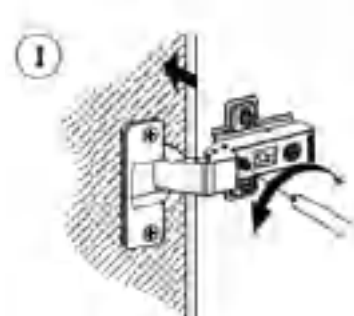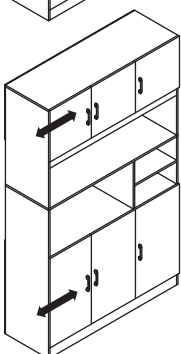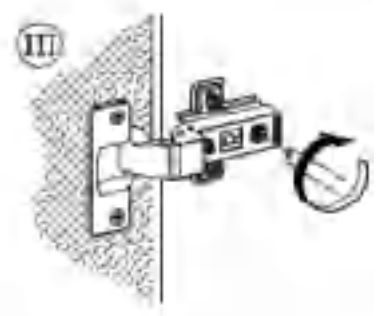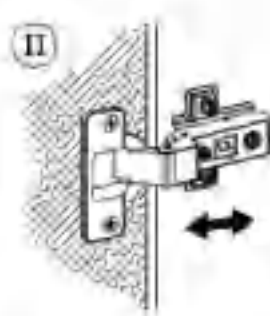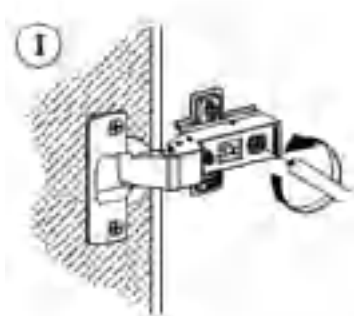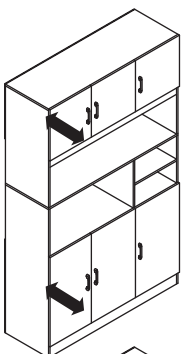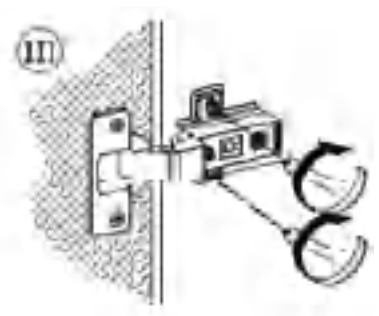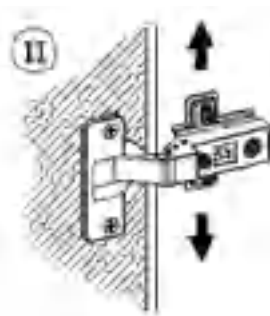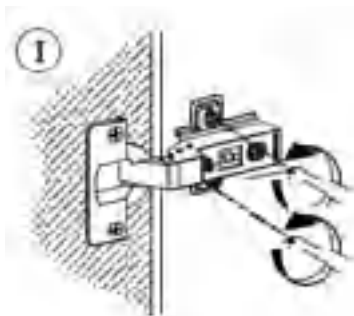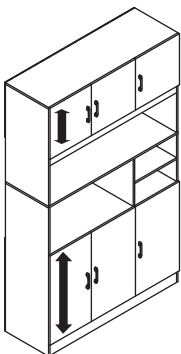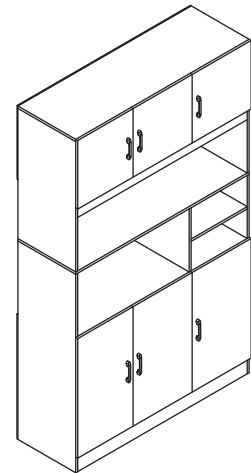

41

K x 8



 
 
 
 
 
 
 
 
Ø 4 x 14 mm

P x 4



Q x 8	
	

R x 8	
	

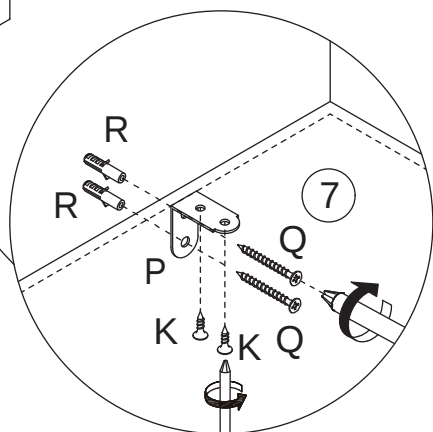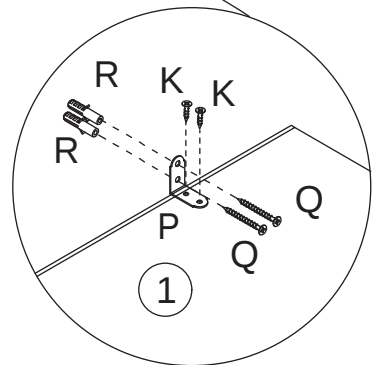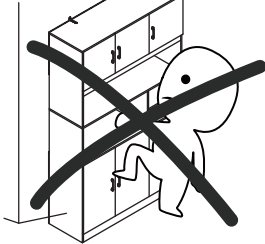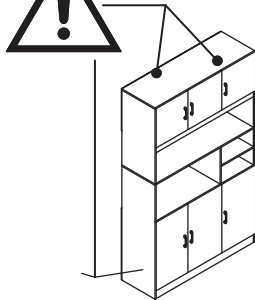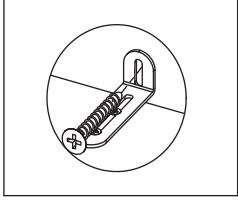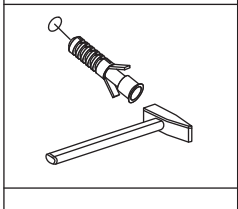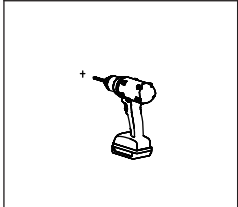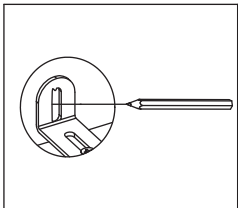

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.