



Portable Tripod Stand

Assembly Guide



PARTS LIST: (1) Tripod Stand (1) Tripod rope piece (3) Stakes with Rope & Carabiner

Make sure that all pieces are included prior to assembling your stand.

Fig. 1



Fig. 2

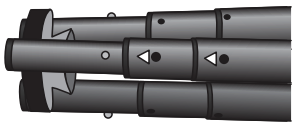


Fig. 3

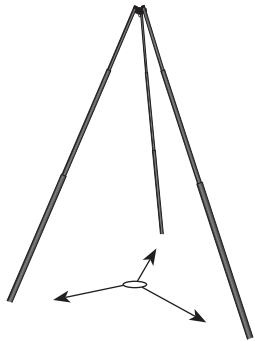


Fig. 4



Fig. 5


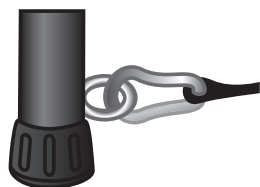


Fig. 6

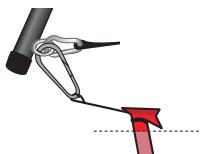

Step 1: Lay the tripod flat on the ground (see fig. #1)

Step 2: Slide the legs out to the fully extended position by pressing in on the locking button at the top of the unit (see fig. #2). The legs are comprised of 3 separate sections: ensure that all three legs are fully extended and that the tabs are locked in position.


Step 3: Stand the tripod up on a non-slip level surface. Spread the legs of the tripod apart to create the largest possible base (see fig. #3). The Tripod legs should be extended out in equal length for the best stability.

Step 4: Locate the lever located on the top of the tripod where the three legs come together (see fig. #4). On this piece is a locking mechanism that secures the legs in the spread position. Rotate the mechanism fully to the right (LOCK) position to secure legs in place.

Step 5: Locate the rope piece with 3 branches. Attach carabiners to the middle tether rope and clip to the hoops on one of the legs, repeat for all 3 legs (see fig. #5). Full view see (fig. #7).

Step 6: Attach stake carabiners to hoops on tripod legs and push stake into ground. If ground is hard a small hammer may be necessary. Make sure legs and stakes are secure and stable. (see fig. 6)

Your tripod is now ready for your Hammaka Hammock Chair

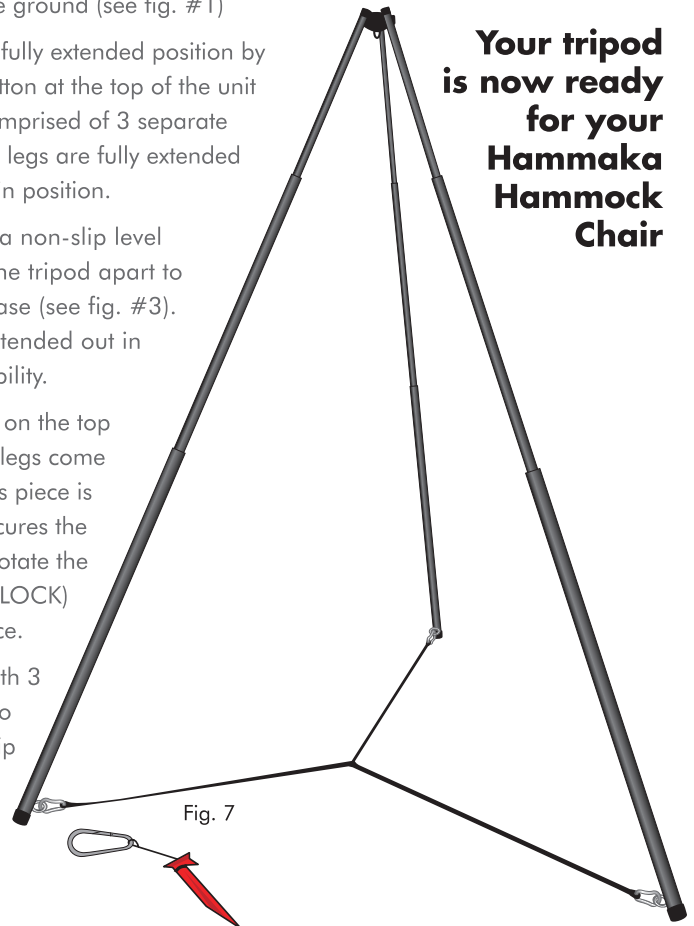

CAUTION!

DO NOT JUMP OR BOUNCE IN THE HAMMAKA PORTABLE TRIPOD; DOING SO MAY CAUSE SERIOUS INJURY OR DEATH!

The Hammaka Portable Tripod maximum weight capacity is 350 lbs. Do not exceed maximum weight capacity. Inspect hooks, and hardware before each use for rust or loosening that makes this product unsafe to use. If the functionality of the hardware has been compromised in any way do not use this product as doing so may cause serious injury or death. It may be necessary to tighten the hardware each time before using the product due to hot or cold weather conditions. Inspect the overall condition of this product before each use. Children should not use the Portable Tripod without adult supervision.

WARRANTY AND CARE INSTRUCTIONS **One year warranty.**

For maximum life of this product Hammaka recommends putting the item indoors when you are located in extreme weather conditions. Check all connections to make sure they are secure each time before and periodically while using the product. Check that the hardware has not rusted. Hammaka recommends using a rust inhibitor available at your local hardware store to prolong the life of the hardware when leaving it outdoors.

Clean with mild soap and warm water, scrubbing when necessary.

