 


# Assembling Instruction

## Generating Drawings

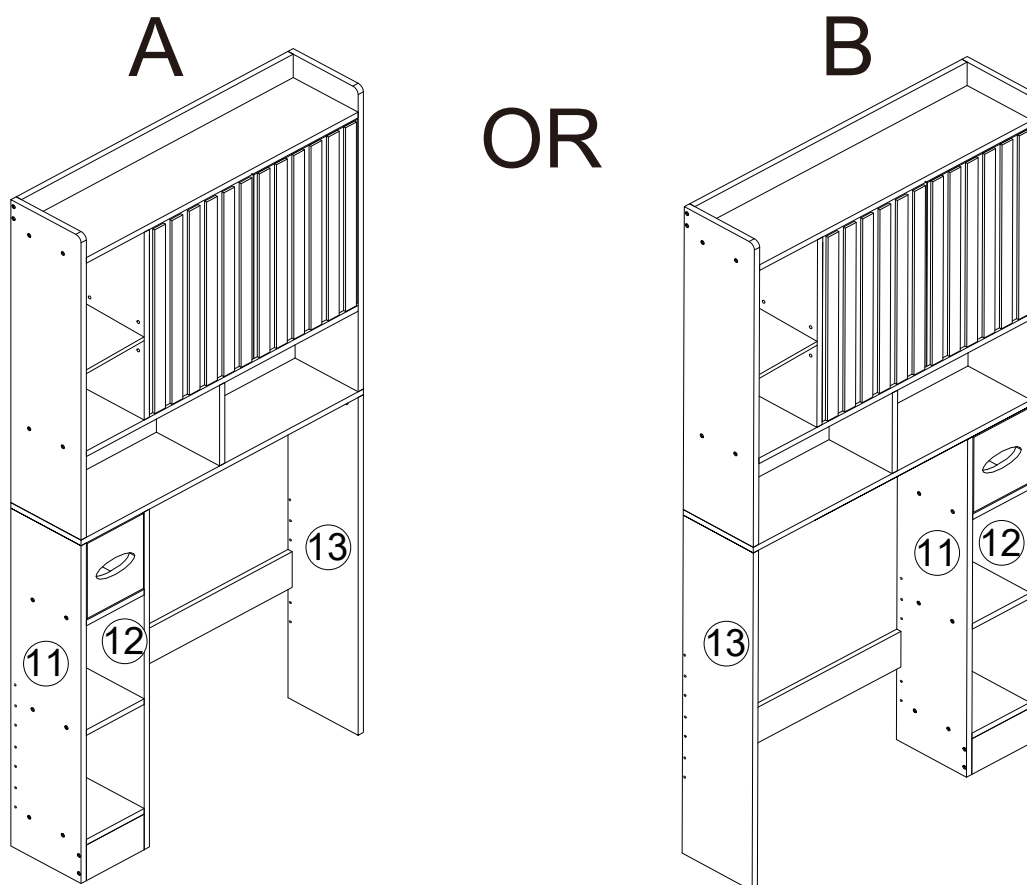

Install the shelf in either side as needed, please reference step 9 14 15 16 18

## ATTENTION

If there is any missing, please kindly send us messages to let us know the name of missing part regarding to the first page of instructions.

We will send replacement to you asap. We are concerned about each customer's experience, if there is any loss or damage, please contact us at any time, we will provide effective solutions.

 
Customer service

Please attach your Order ID so that we can assist you better.

 


# General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- VI. A Phillips head screwdriver is required for the assembly of this product .

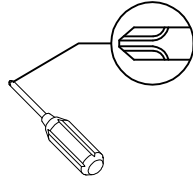 


- VI. Power tools should not be used to assemble this product .

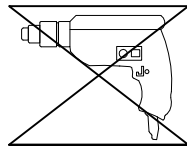

- VII. Concealed hinges are three-way adjustable.

# Parts List

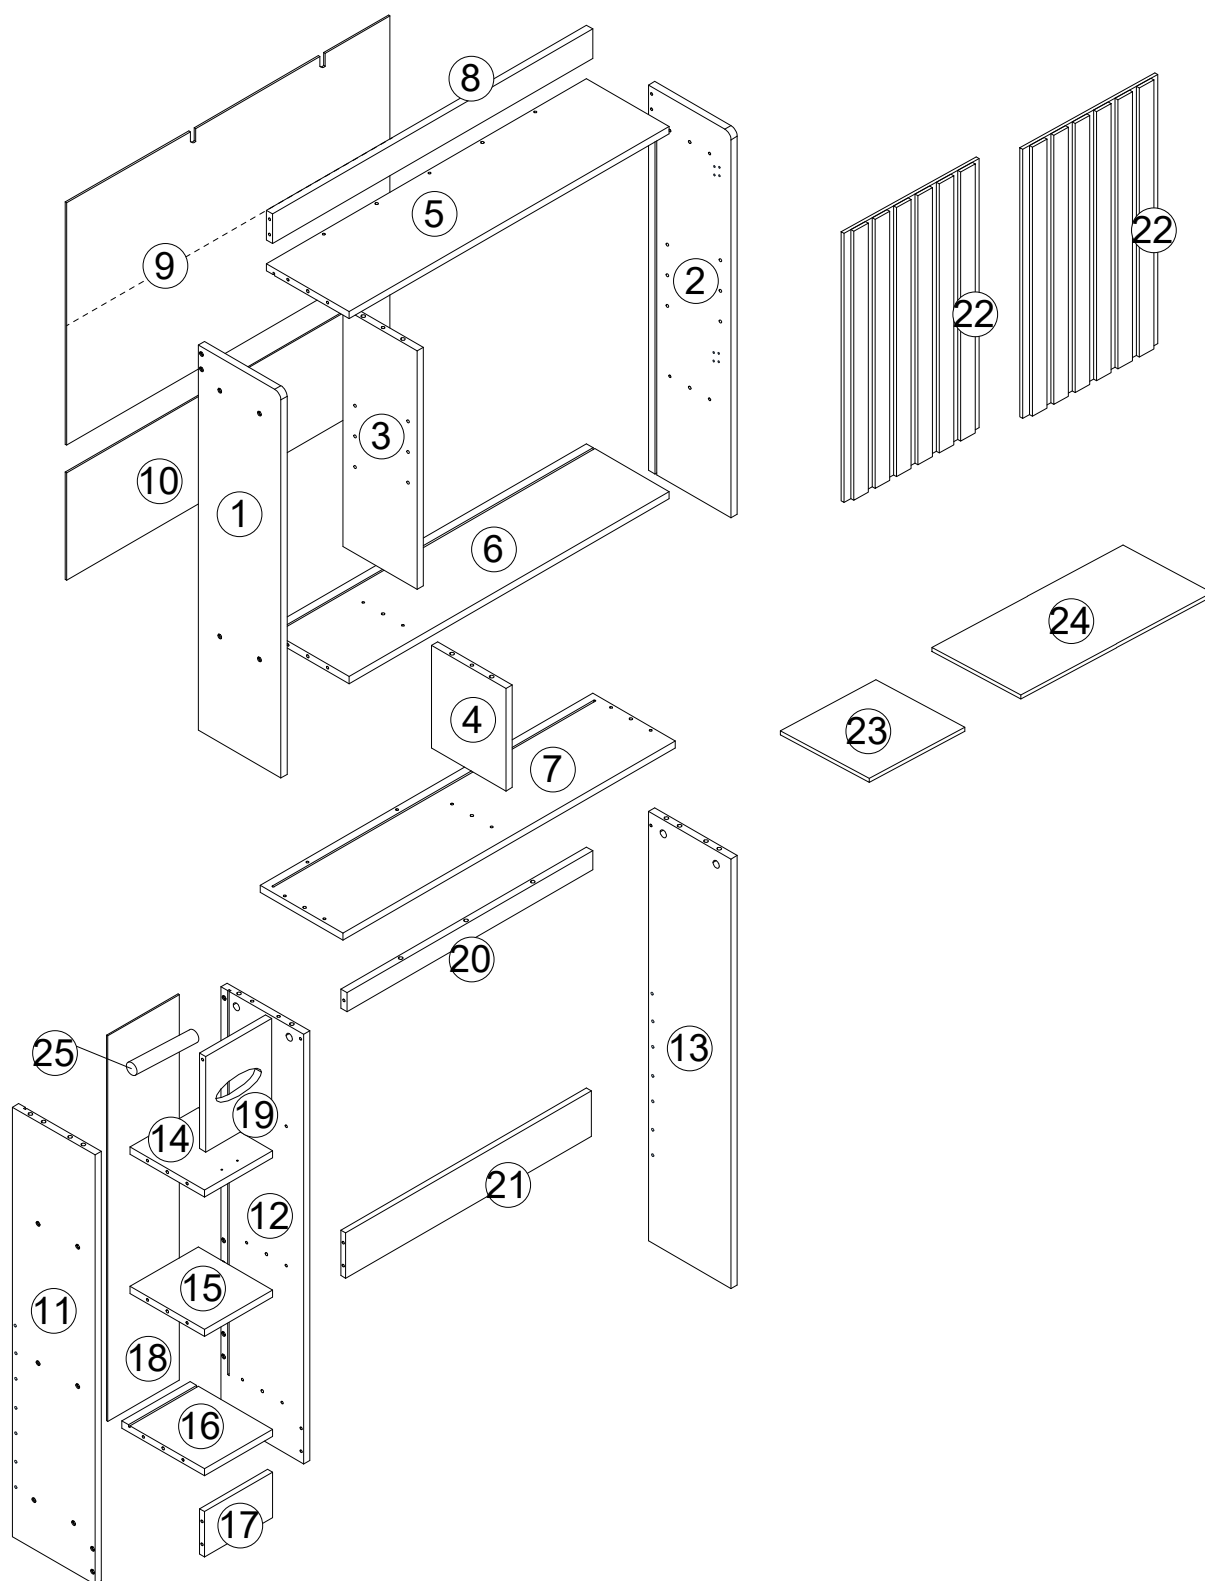

 
# HARDWARE PACK CONTENT

**A**



 
8X  
(+1)

**B**

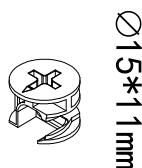

8X  
(+1)

**C**

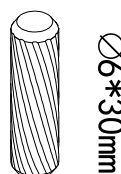

 
26X  
(+2)

**D**



 
4X  
(+1)

**E**

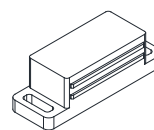

1X

**F**



 
1X

**G**



44X  
(+3)

**H**



M3

1X

**I**



2X

**J**



 
12X  
(+1)

**K**



14X  
(+1)

**L**



 
2X

**M**



7X  
(+1)

**N**



 
2X

**O**



4X  
(+1)

**P**



4X

**Q**



24X  
(+2)

**R**



8X

**X**

 


1X

**T**



8X

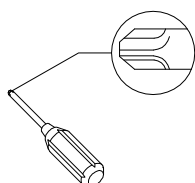




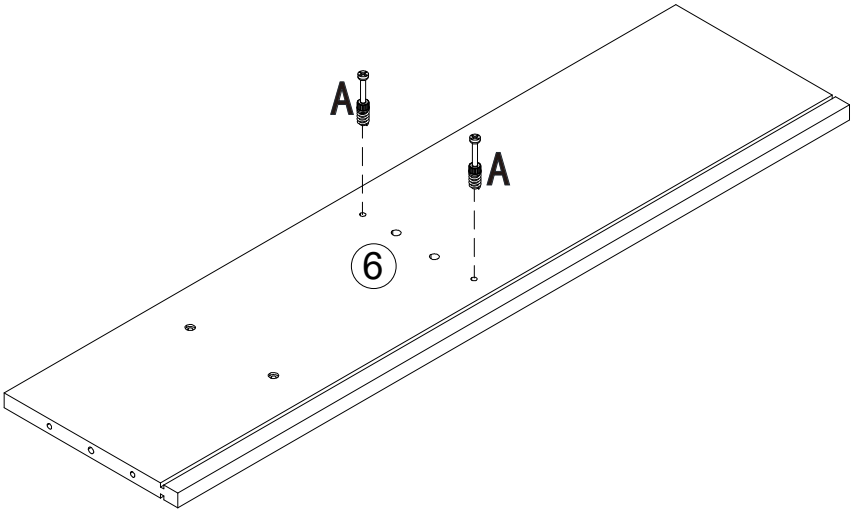 
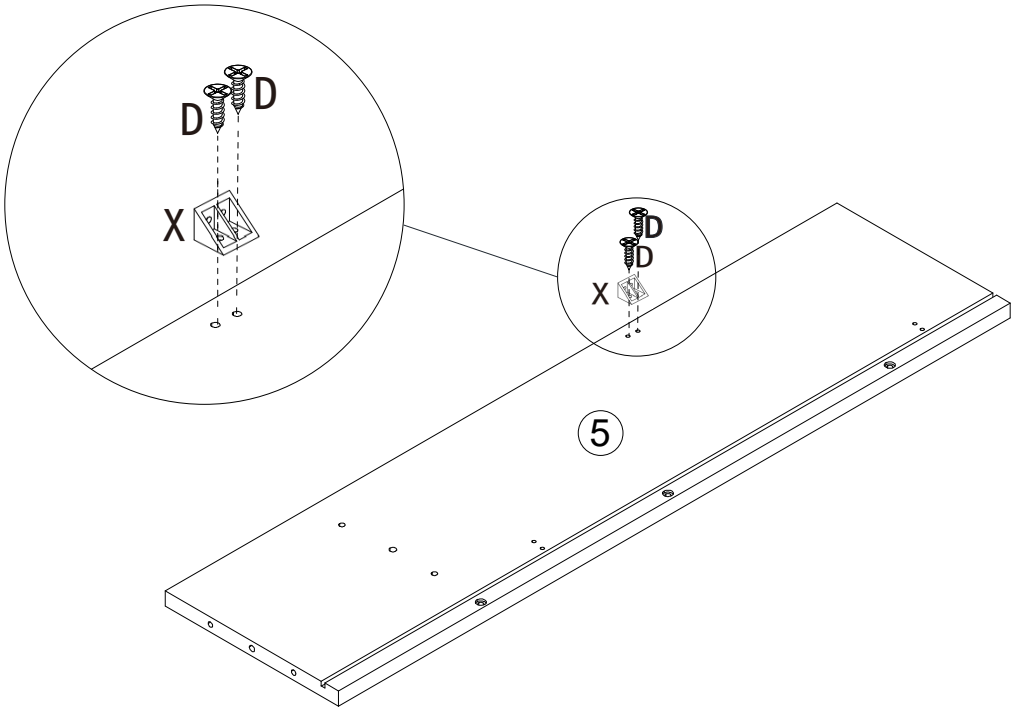 
Philips head screwdriver required for assembly  
(not included)

The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.





 
Step 1

A	D	X
		
X2	X2	X1



 


 
## Step 2

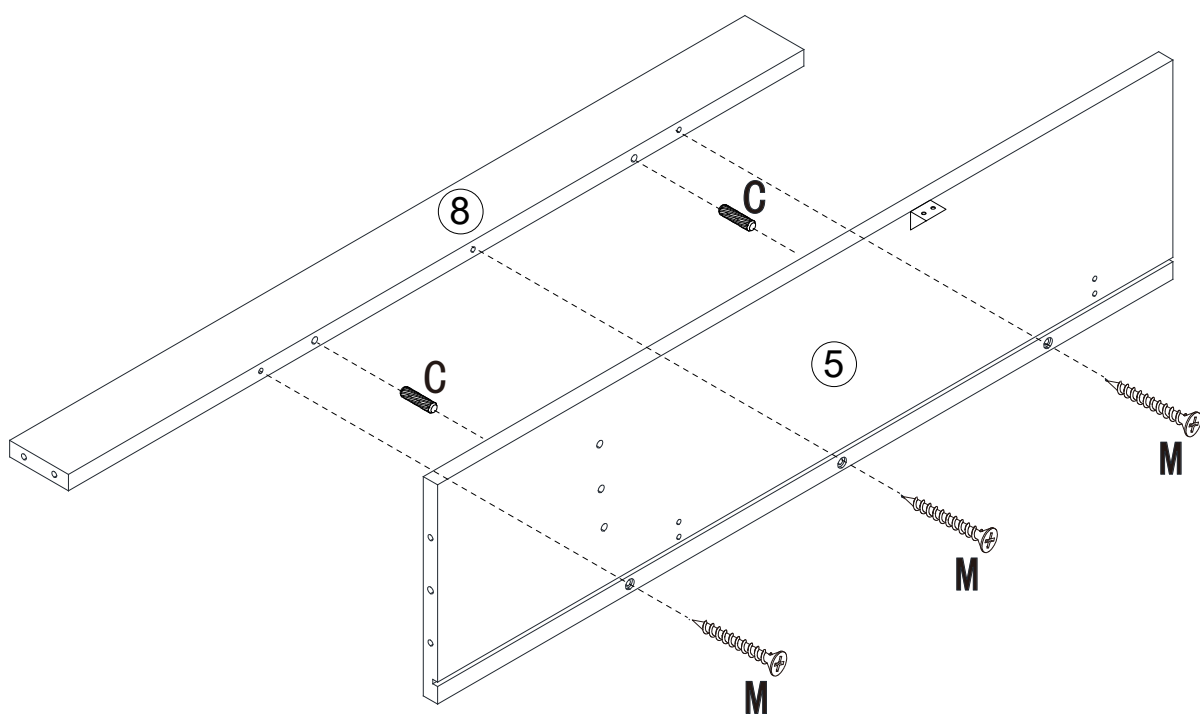C	M
	
X2	X3



 


 
# Step 3

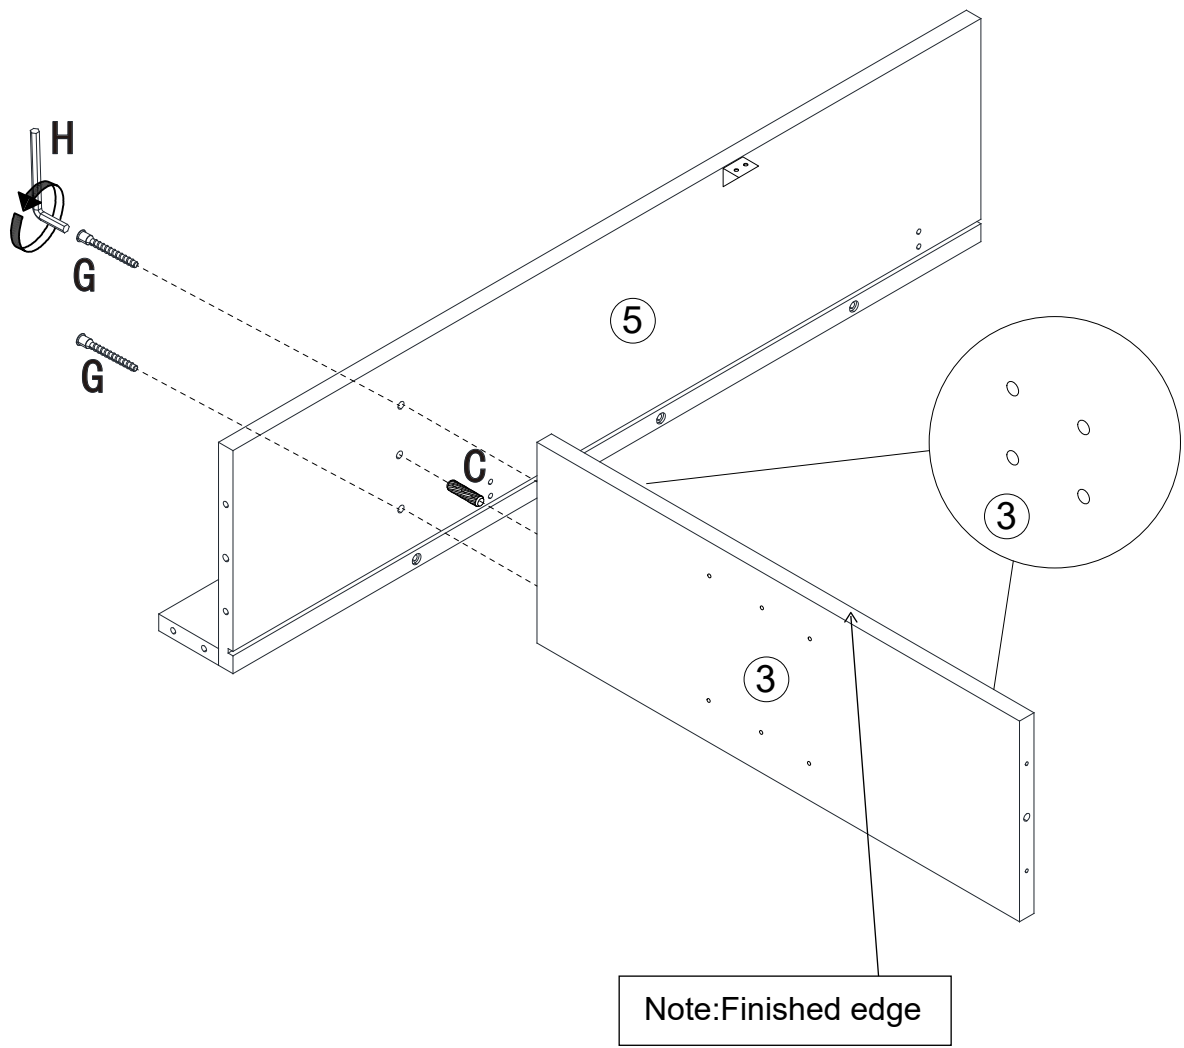C	G	H
		
X1	X2	X1

 




 
 
## Step 4

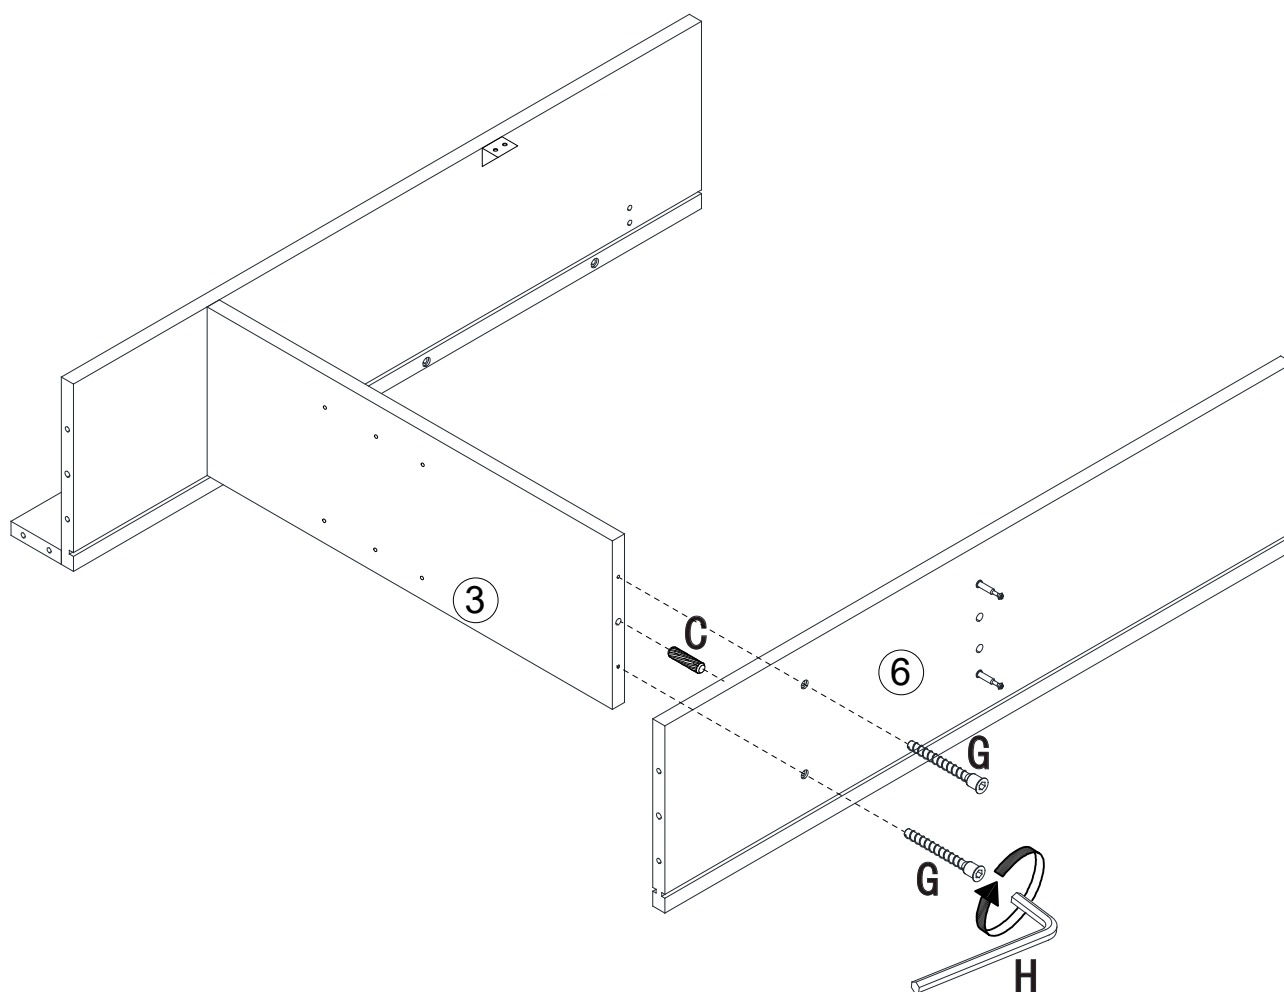C	G	H
		
X1	X2	X1



 


 
# Step 5

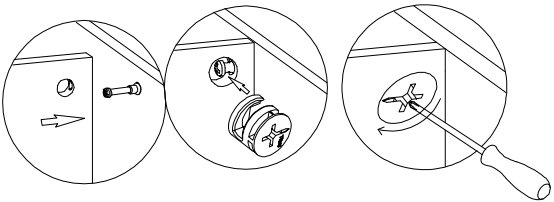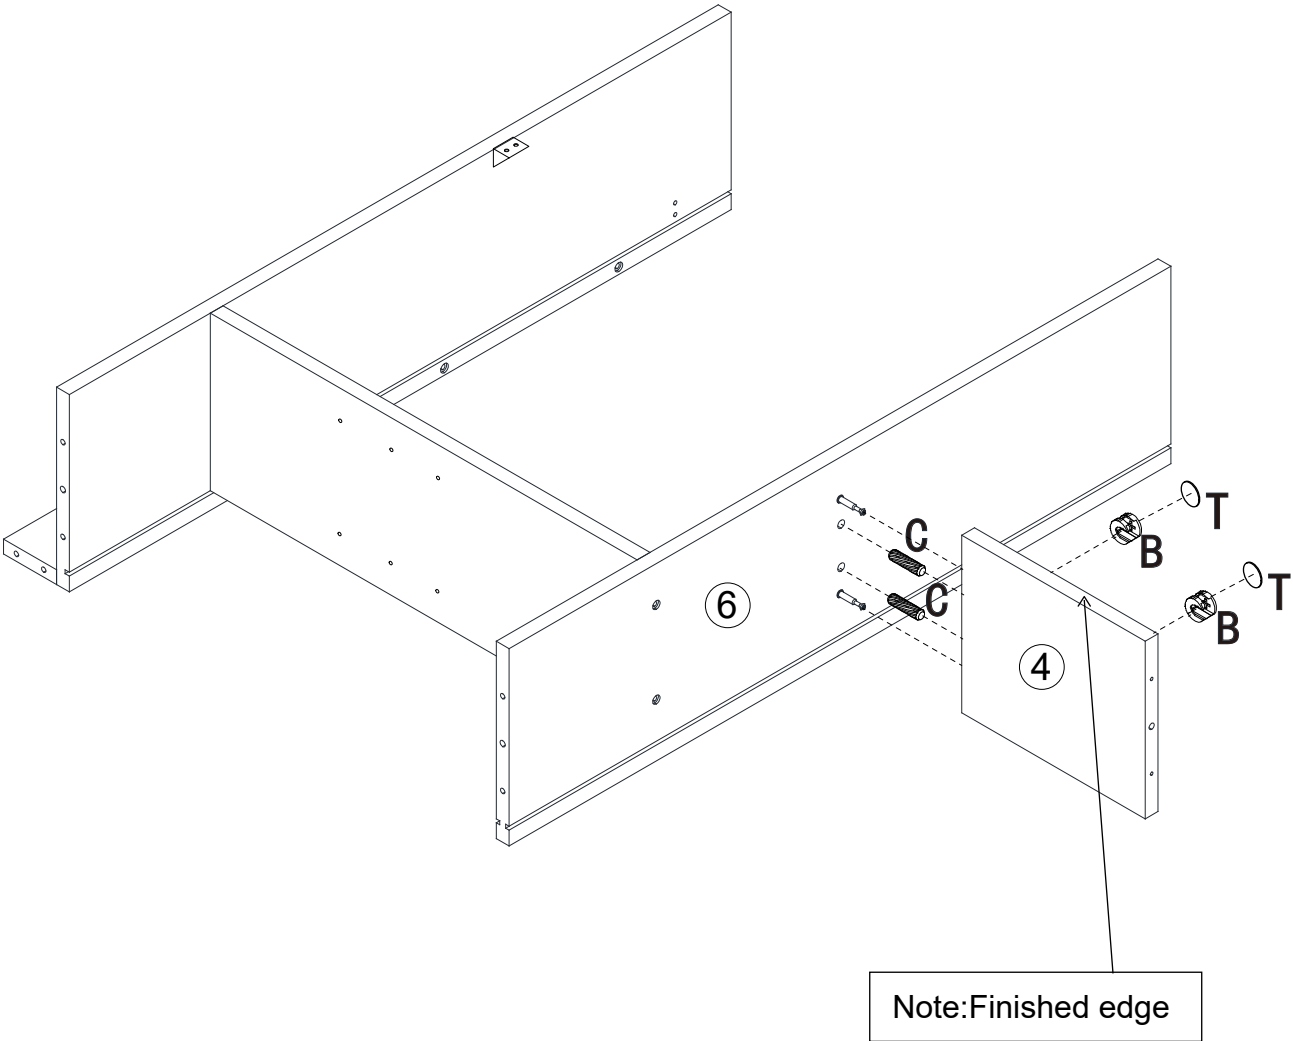B	C	T
		
X2	X2	X2



## Step 6

 
C	G	H
		
X2	X6	X1

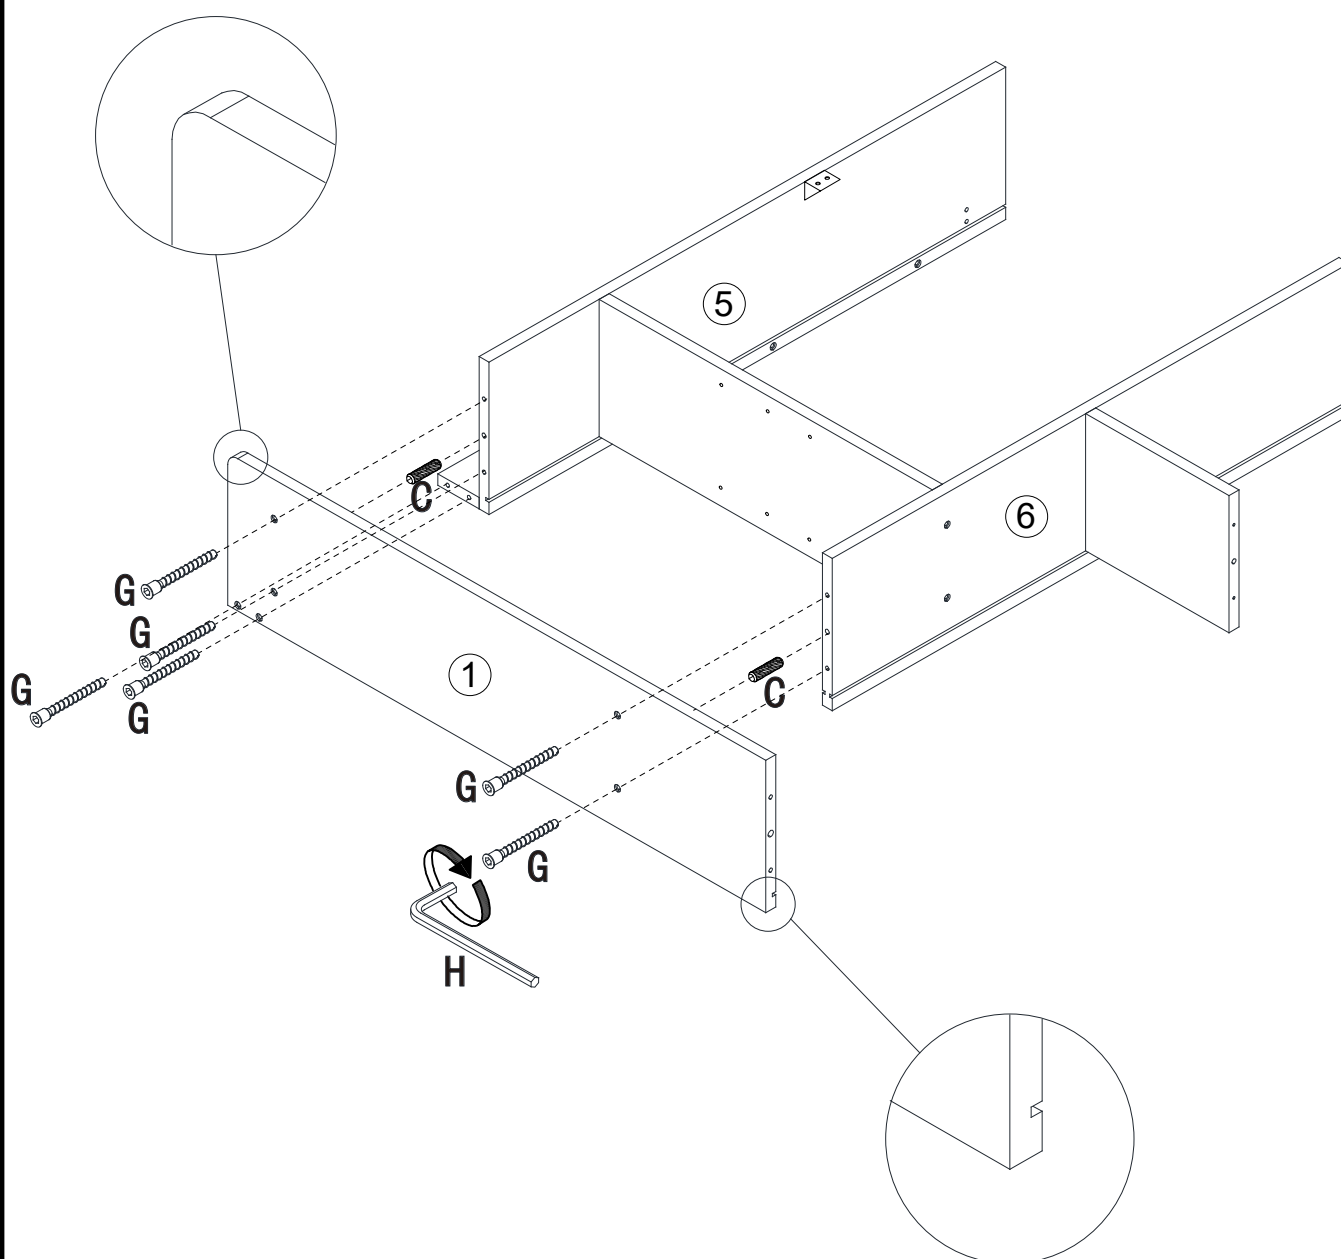

 



 
Pay attention to the position of slot.

 
 
## Step 7

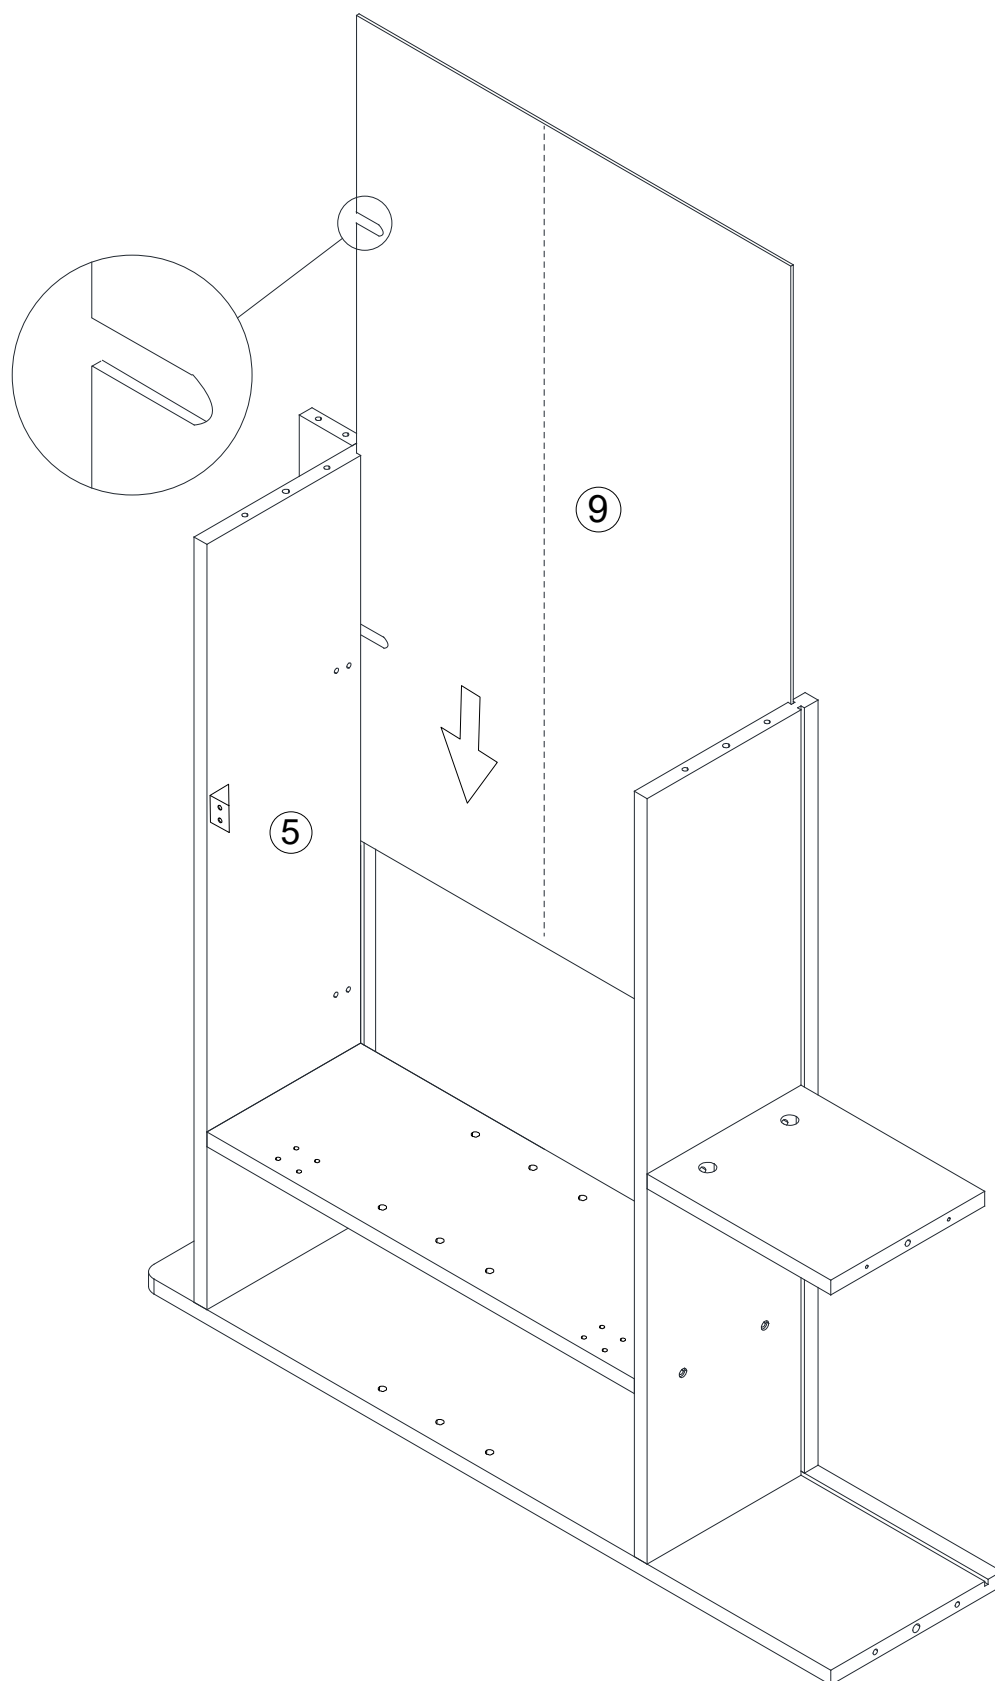Note: The U-shaped slot should be toward #5 board.



Step 8

 
 
 
N	O	C	G	H
				
X2	X4	X2	X6	X1

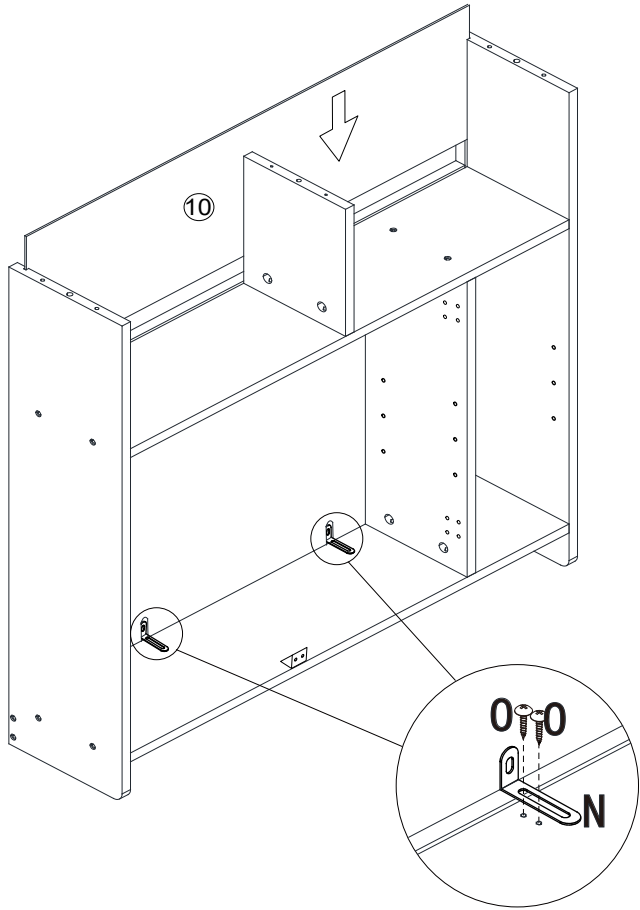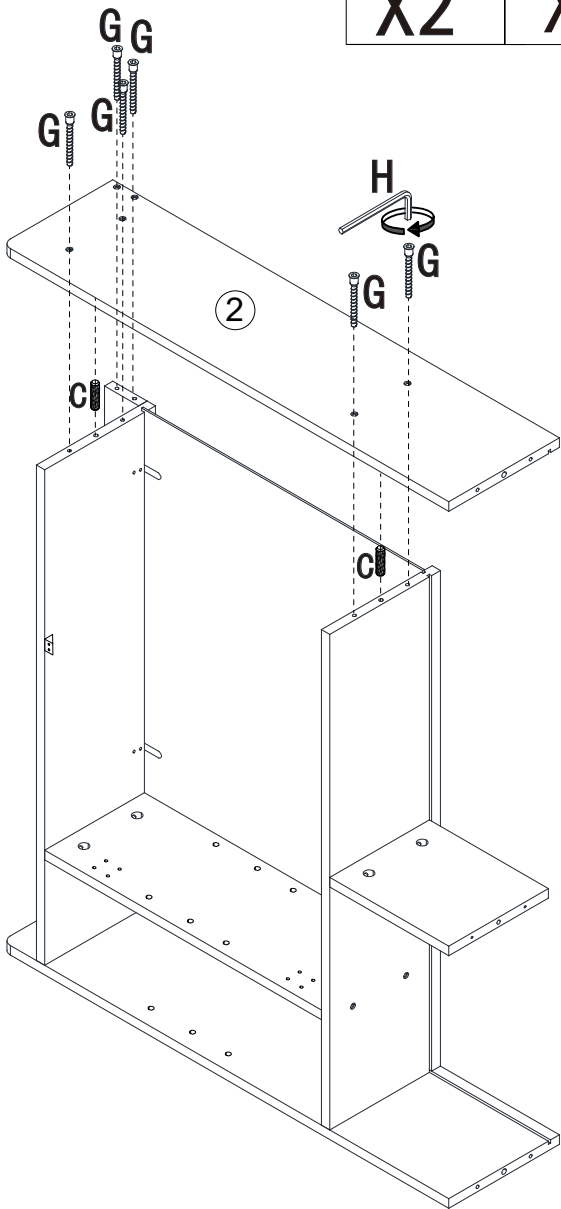

 
 


## Step 9

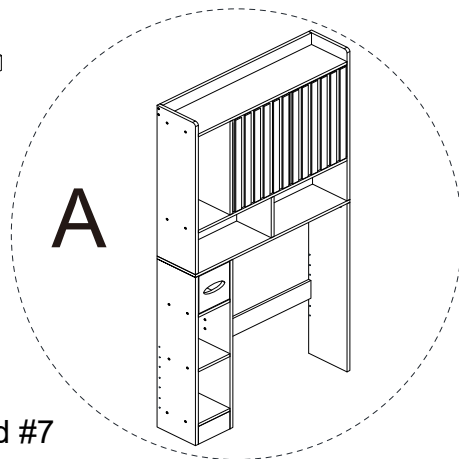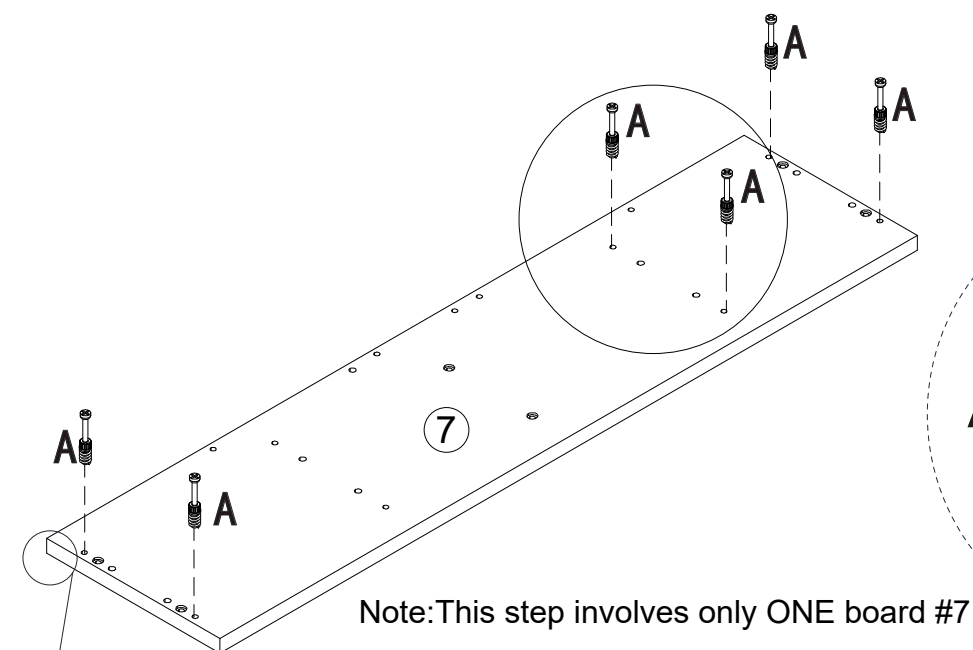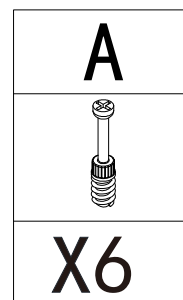

 
Note: Positions of camdowels A in the middle differ between STYLE A and STYLE B

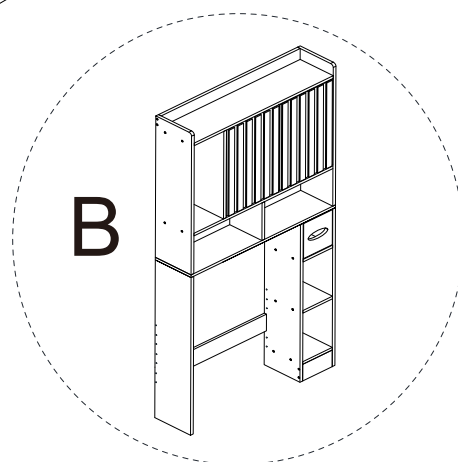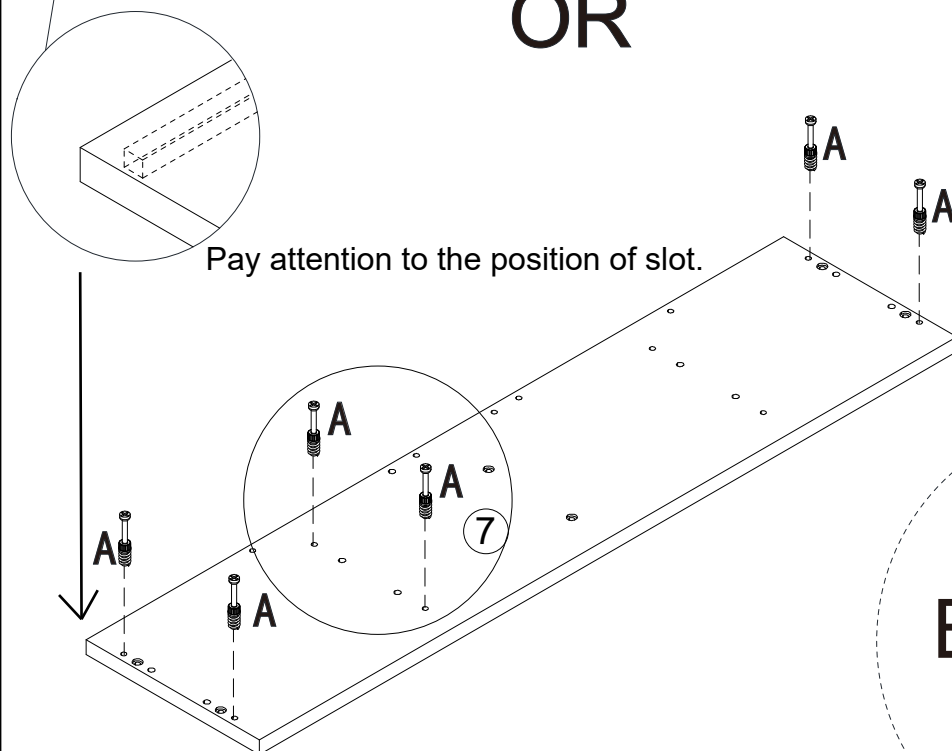

 
OR




 



## Step 10

 
 
C	G	H
		
X3	X6	X1

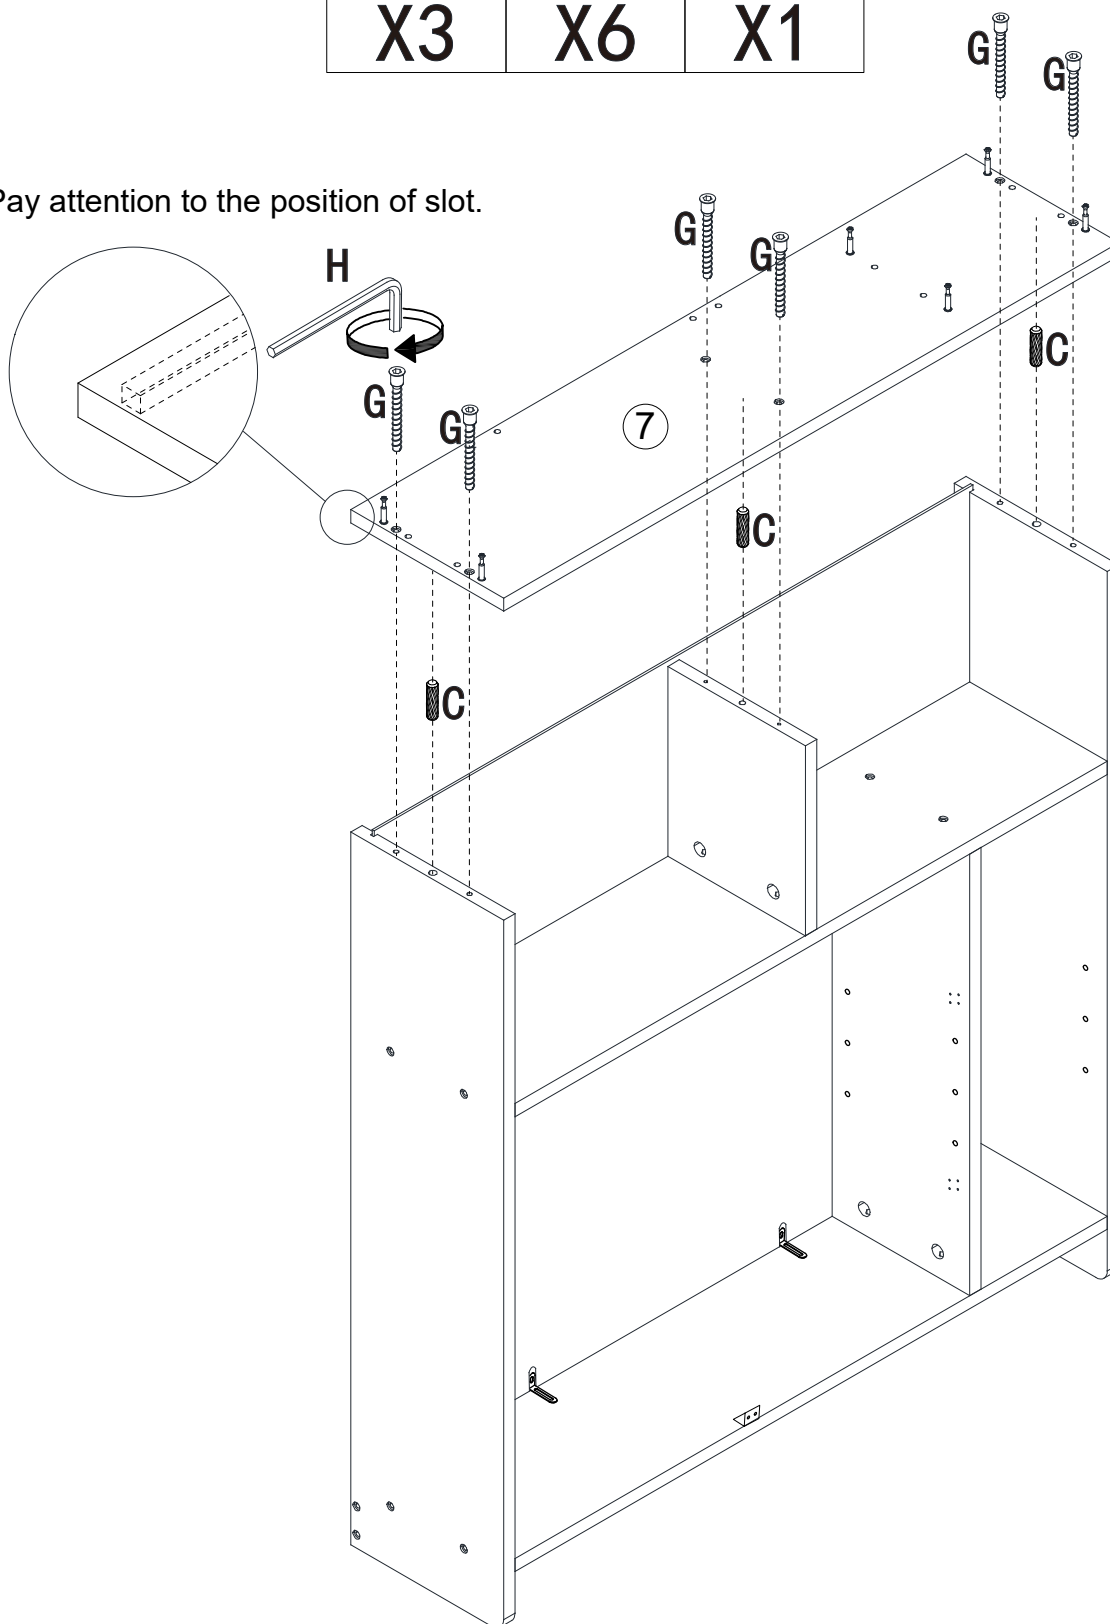Pay attention to the position of slot.



 


Step 11

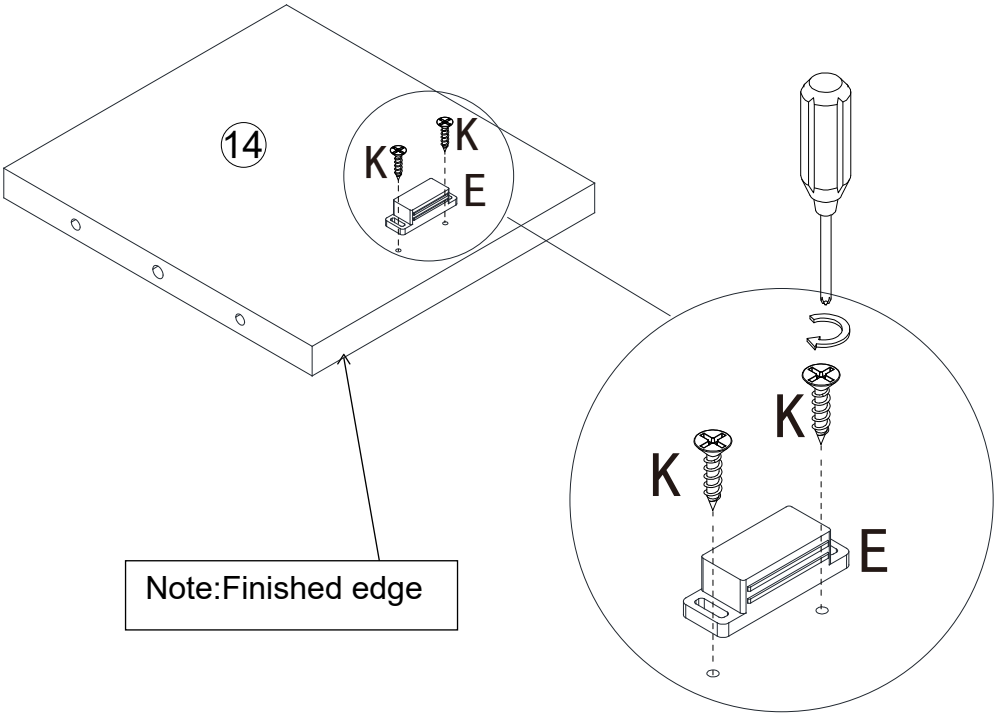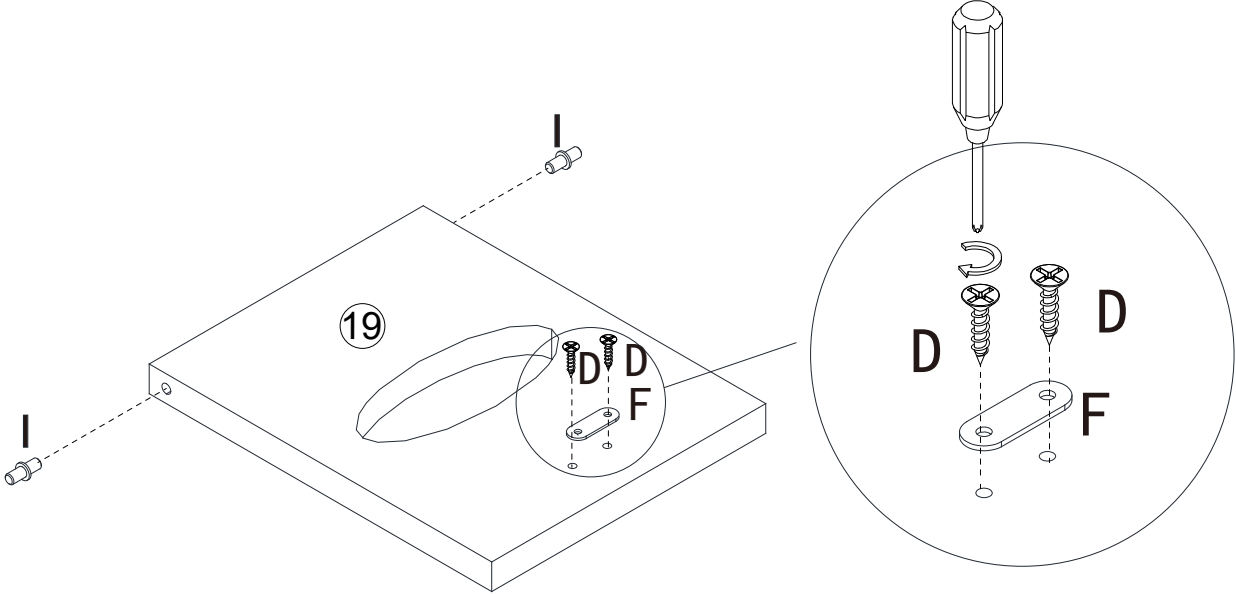D	E	F	I	K
				
X2	X1	X1	X2	X2

 


# Step 12

C	G	H
		
X3	X8	X1

Note: The magnet should be outward

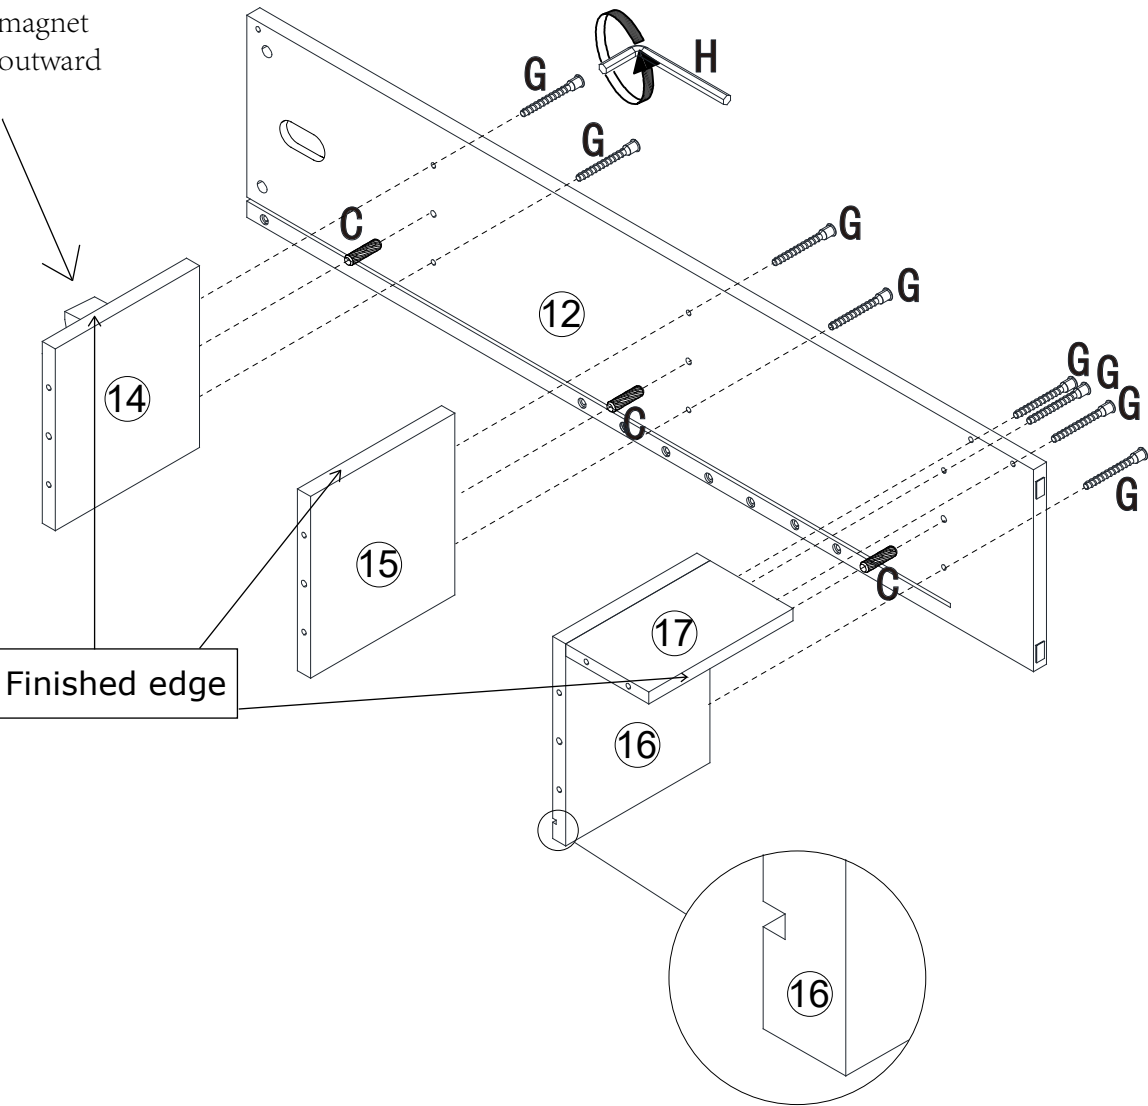

 
Note: Finished edge

 
 


Pay attention to the position of slot.

## Step 13


 
Note: To install or remove the toilet paper rod, angle it slightly to avoid the U-shaped slots that hold it in place.

 
 
C	G	H
		
X3	X8	X1

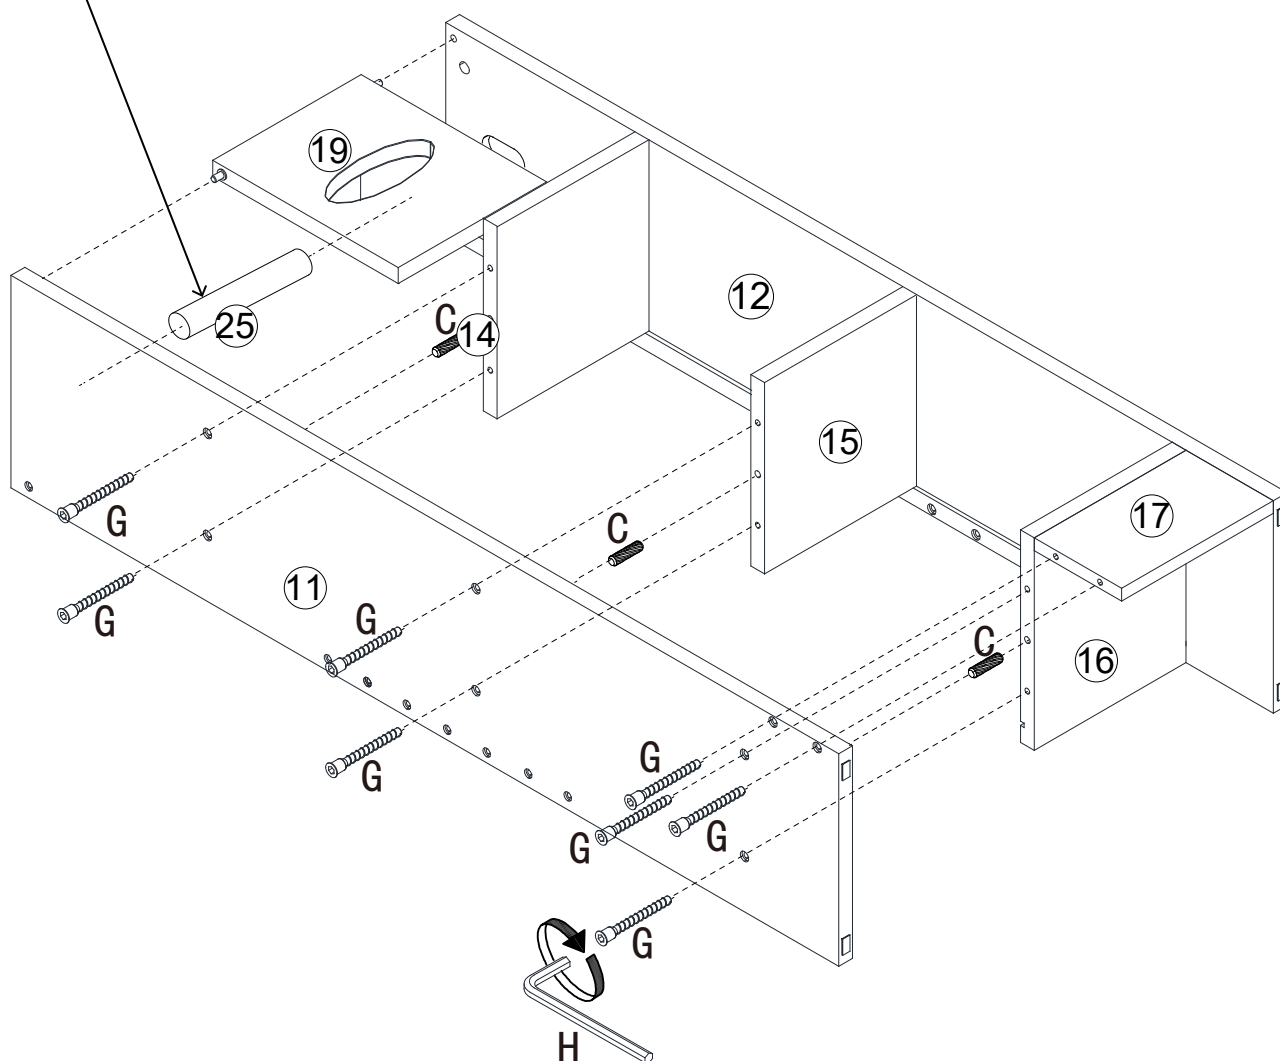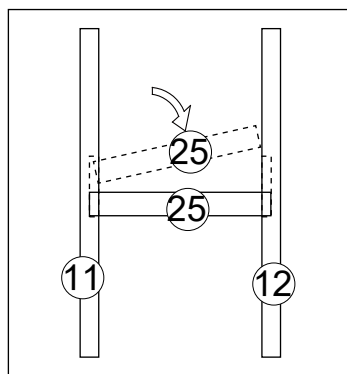

 
 
# Step 14

Note: Position boards #20 and #21 according to STYLE A or B, and set the height of #21 as needed before installation.

 
 
G	H
	
X3	X1

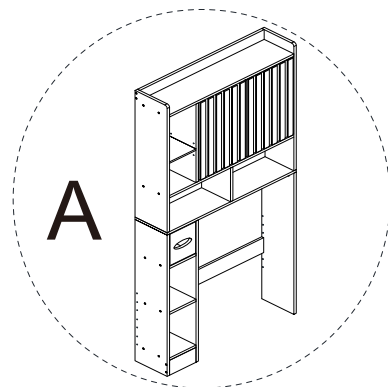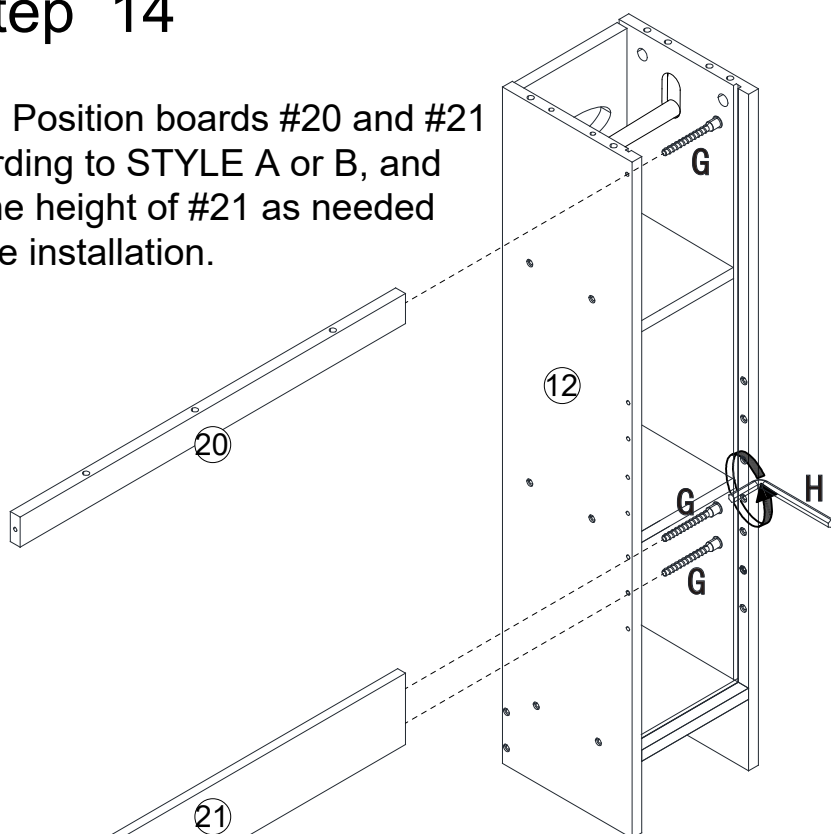

 
 
OR

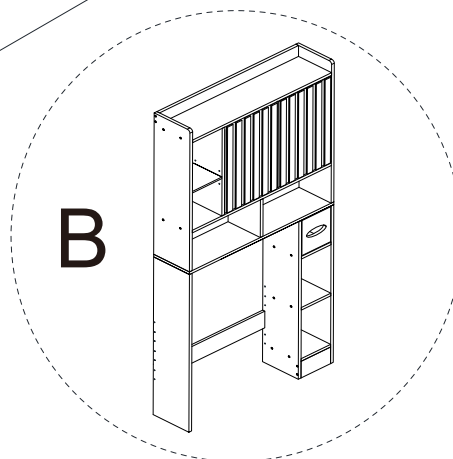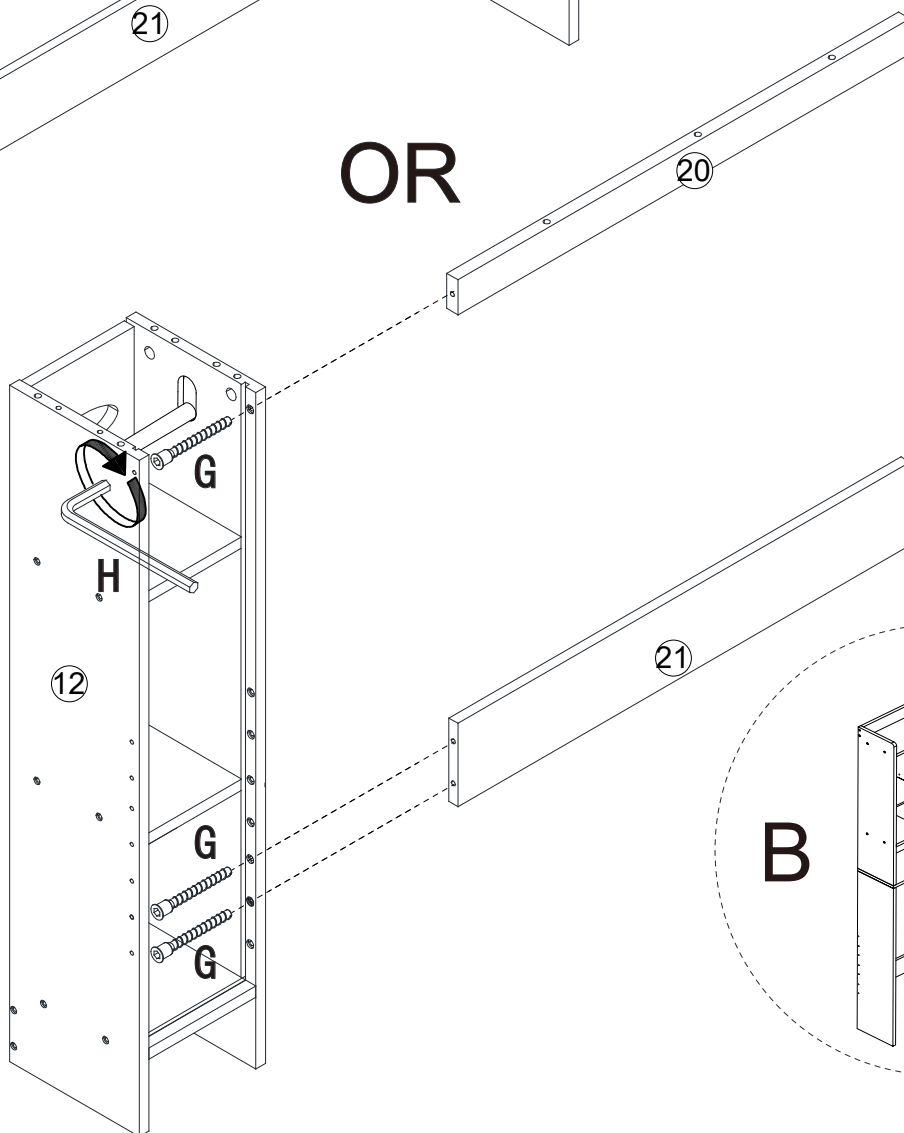

## Step 15

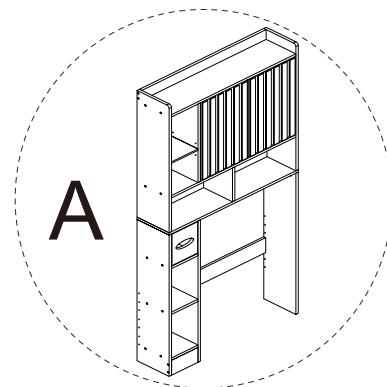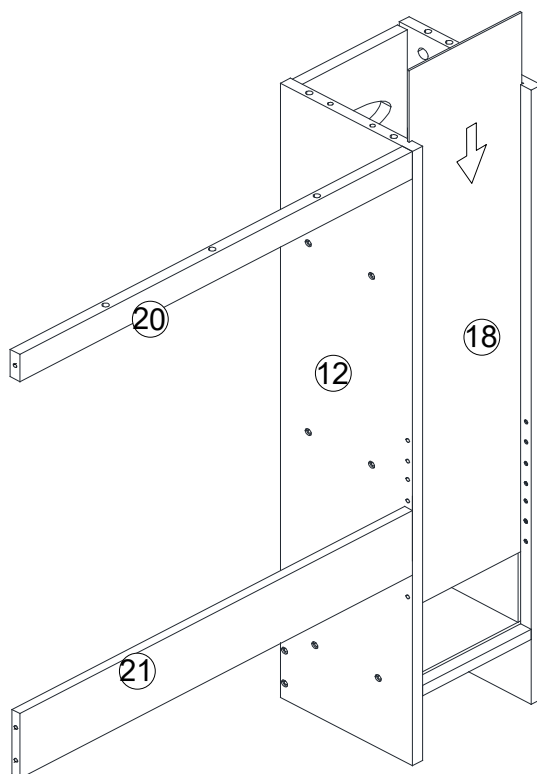 


OR

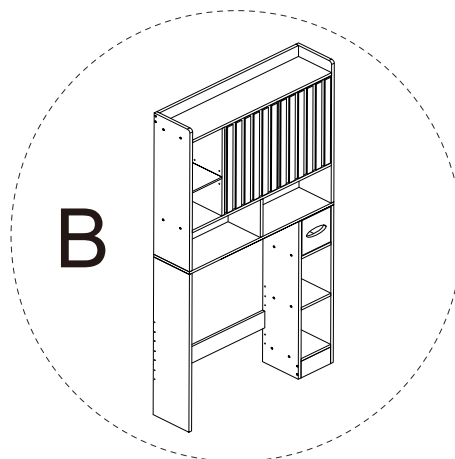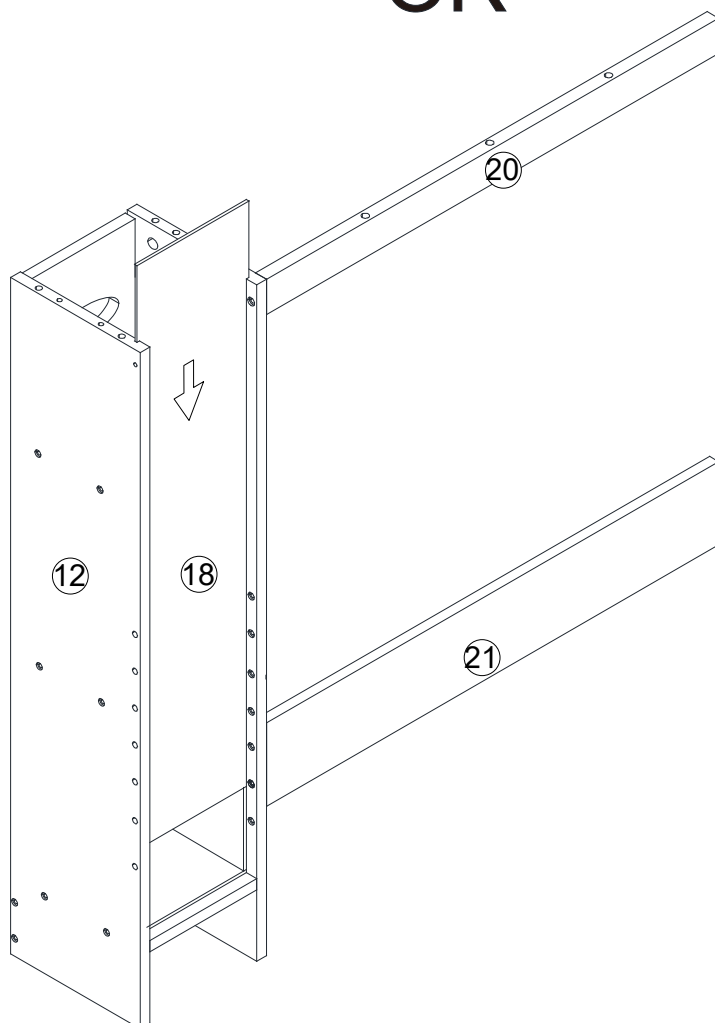

Step 16

 
A

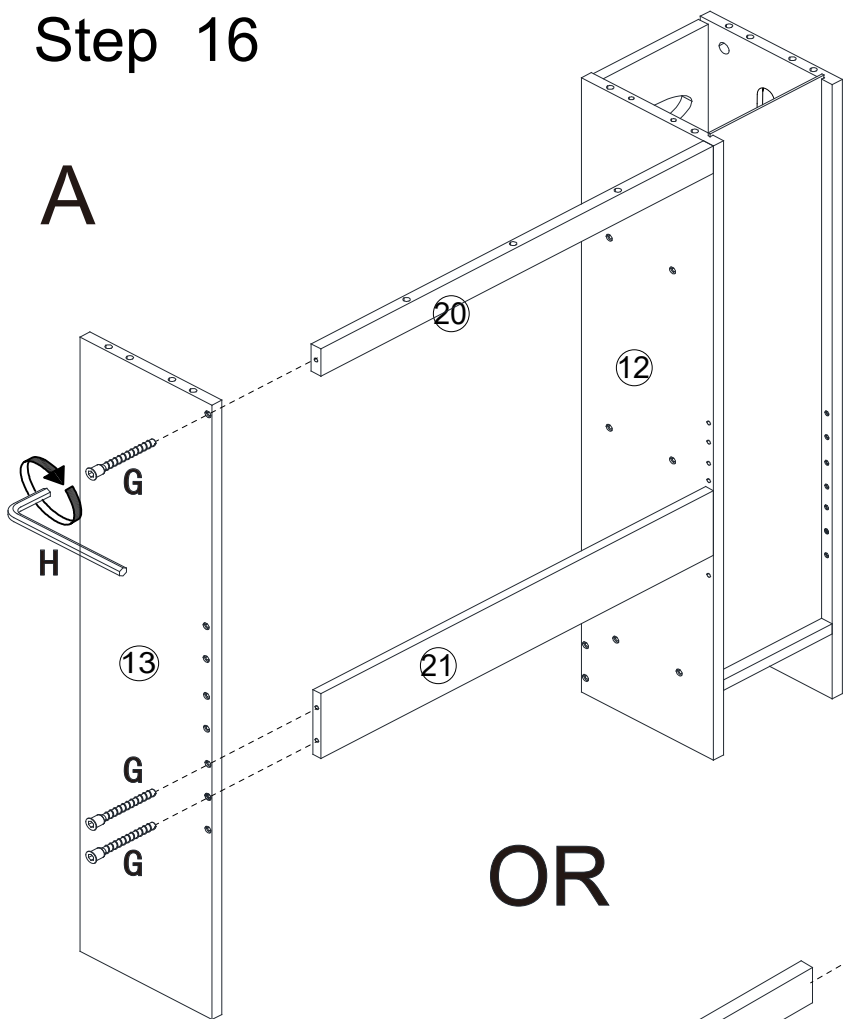

G	H
X3	X1

OR

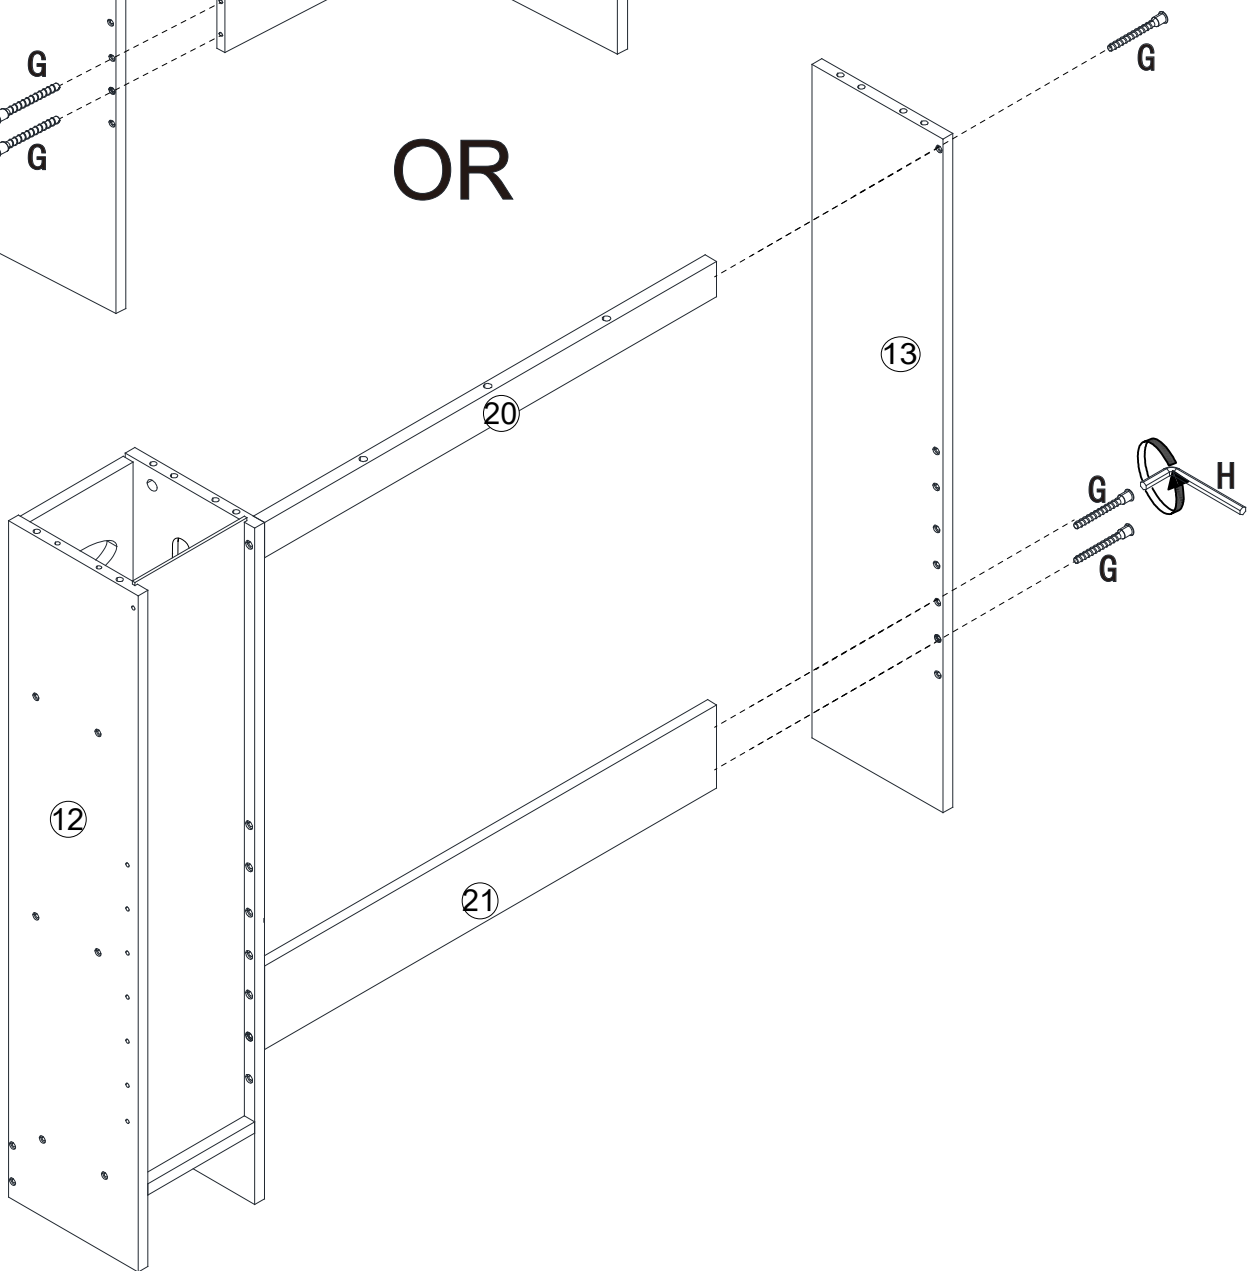


B

 
 




# Step 17


 

Note: This step is recommended for two people to complete together.

 
B	C	T
		
X6	X7	X6

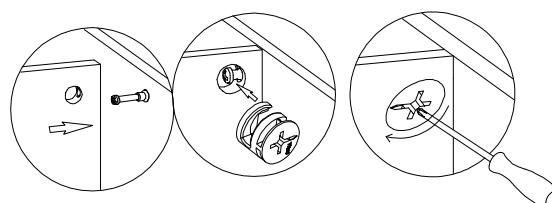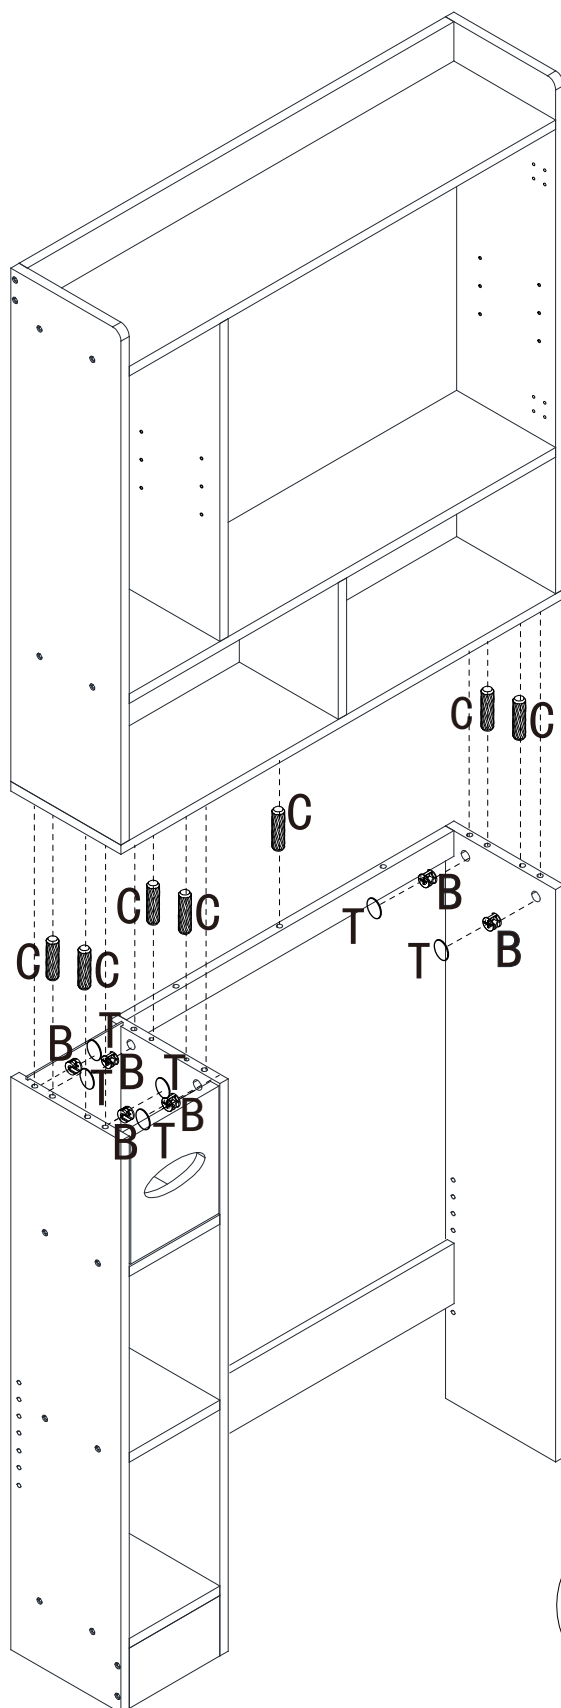



# Step 18

 
 
Note:M screw positions differ between STYLE A and STYLE B.

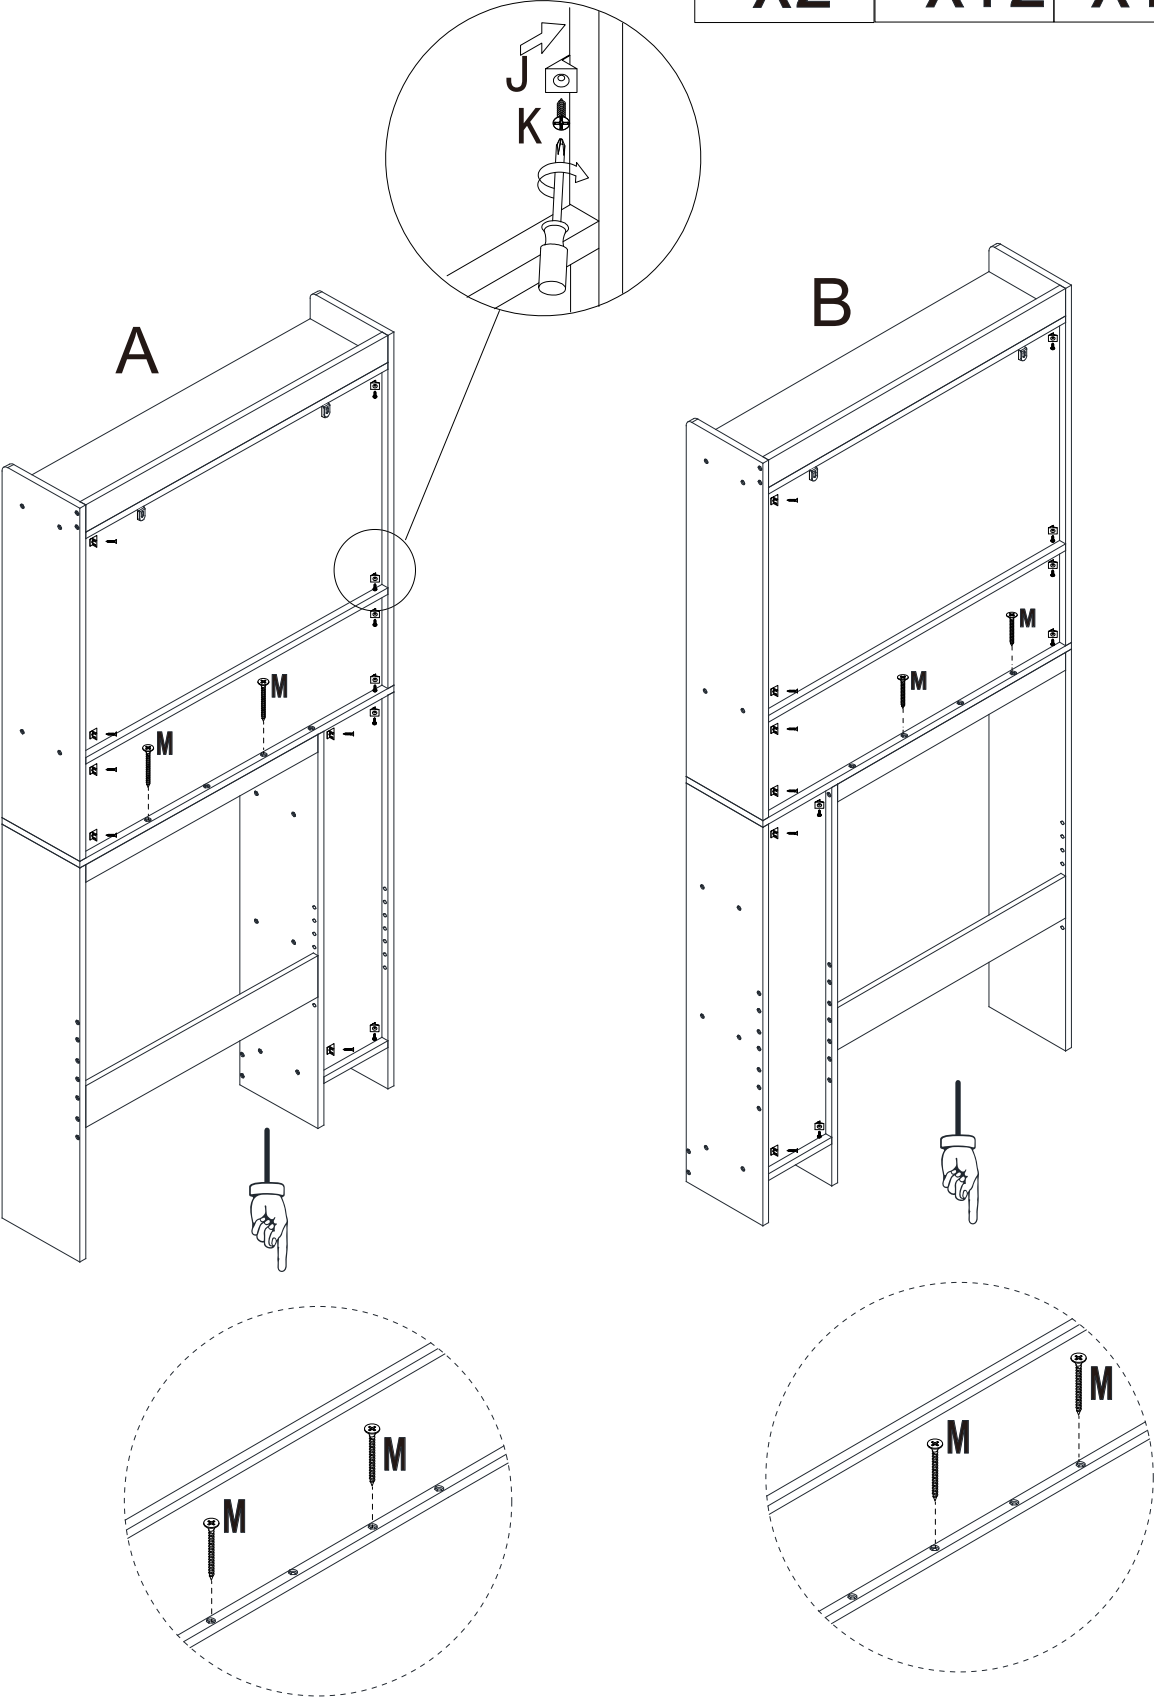M	J	K
		
X2	X12	X12



 
Step 19

 
L	M
	
X2	X2

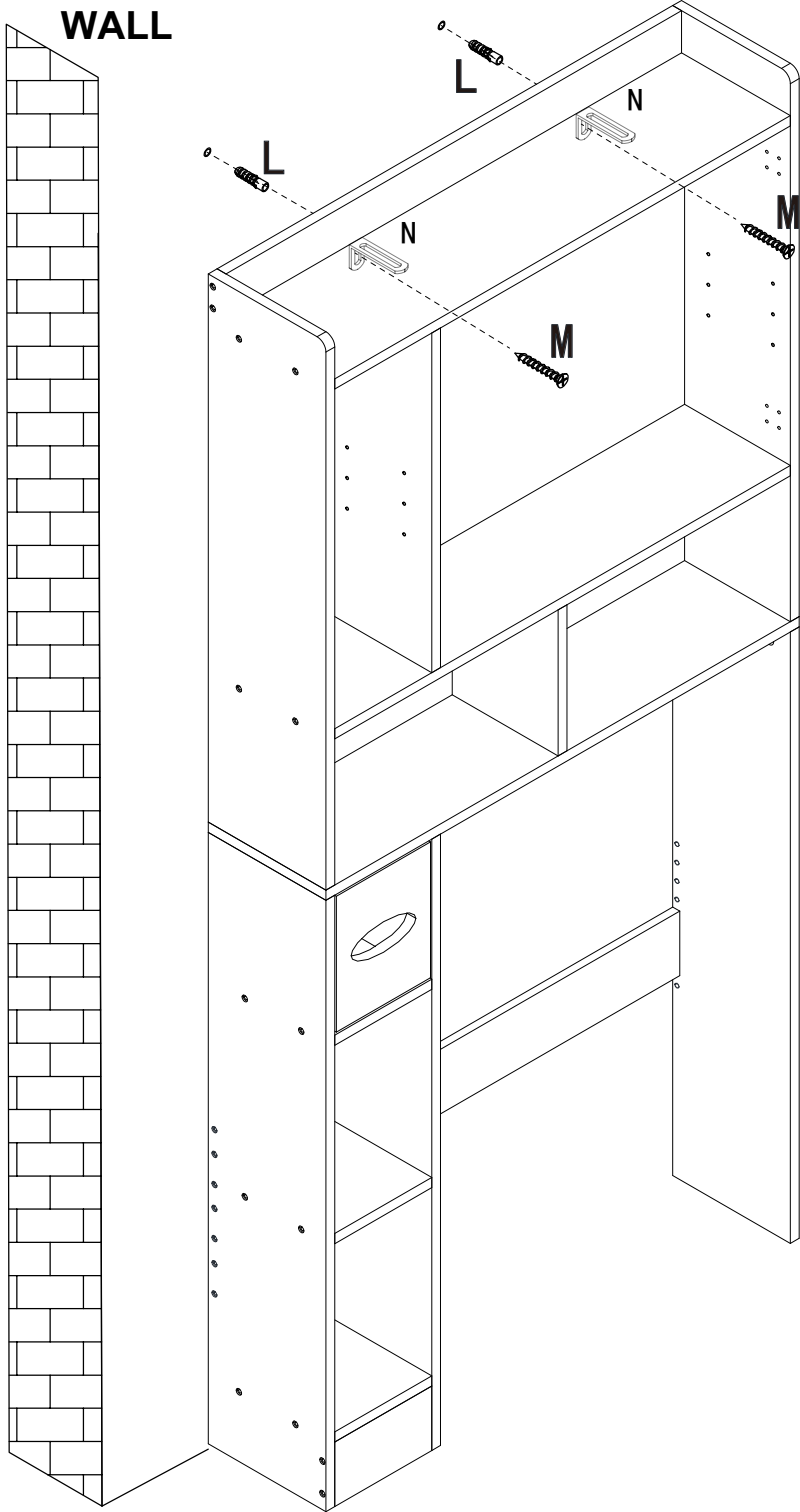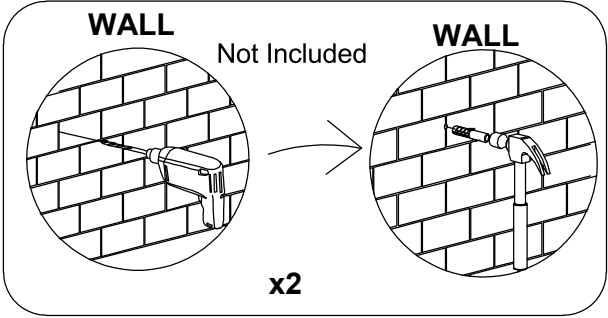

 
 
 
NOTE: According to the distance between the cabinet and the wall, adjust the #N fitting to the appropriate position, and then tighten all the screws on the #N fitting.

Step 20

R

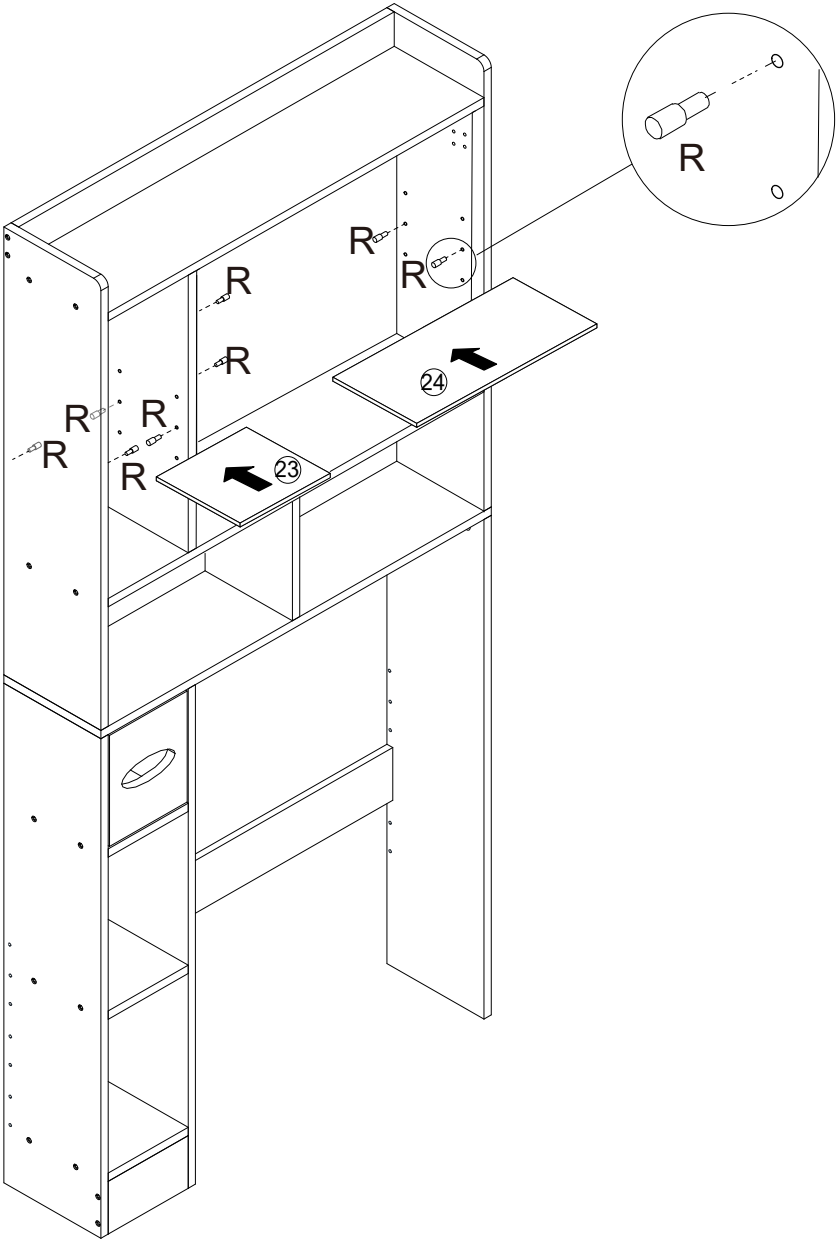X8

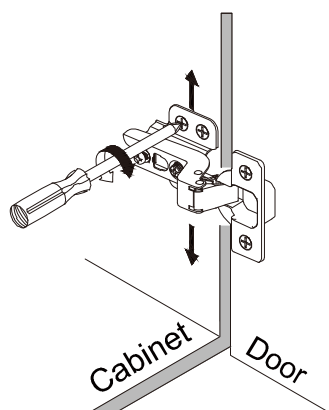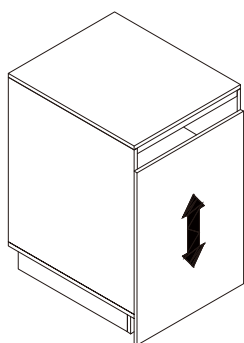 
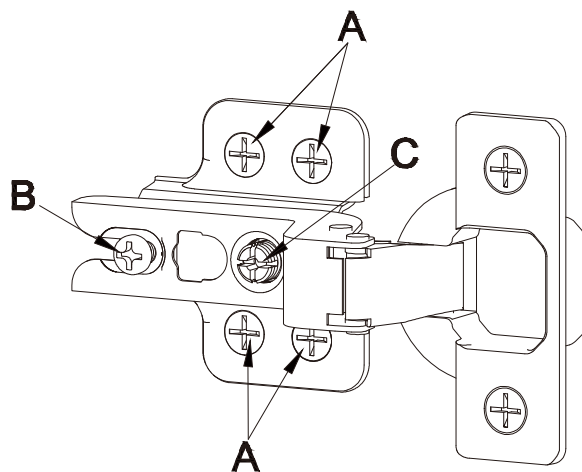 


## Step 21



 
 
### To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

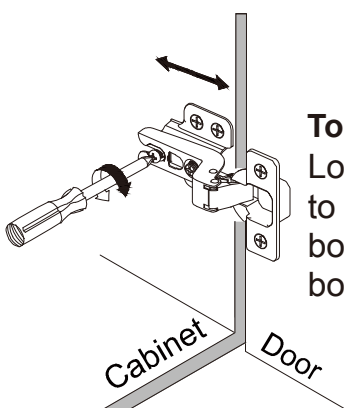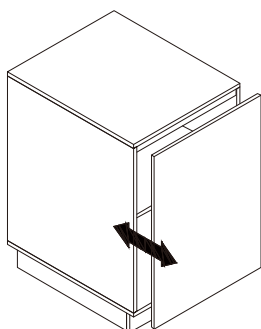

### To adjust depth.

 
 
Loosen screw "B" on both hinges and move the door to suit. If the door doesn't move, turn screw "C" on both hinges 1-2 turns and try again. Finally, tighten both screw "B" and reset both screw "C".

 
 
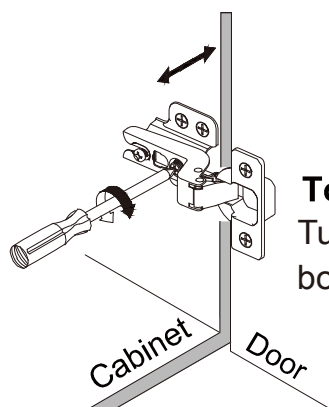 
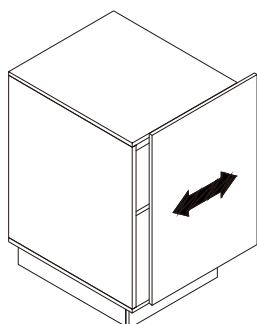 


### To adjust side ways.

Turn screw "C" clockwise or counterclockwise on both hinges until the door is in the desired position.

 
# Step 22

P	Q
	
X4	X16

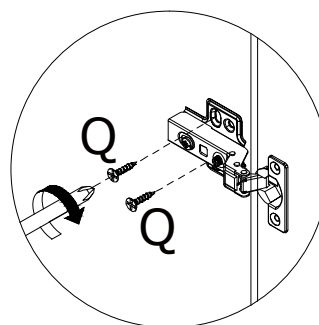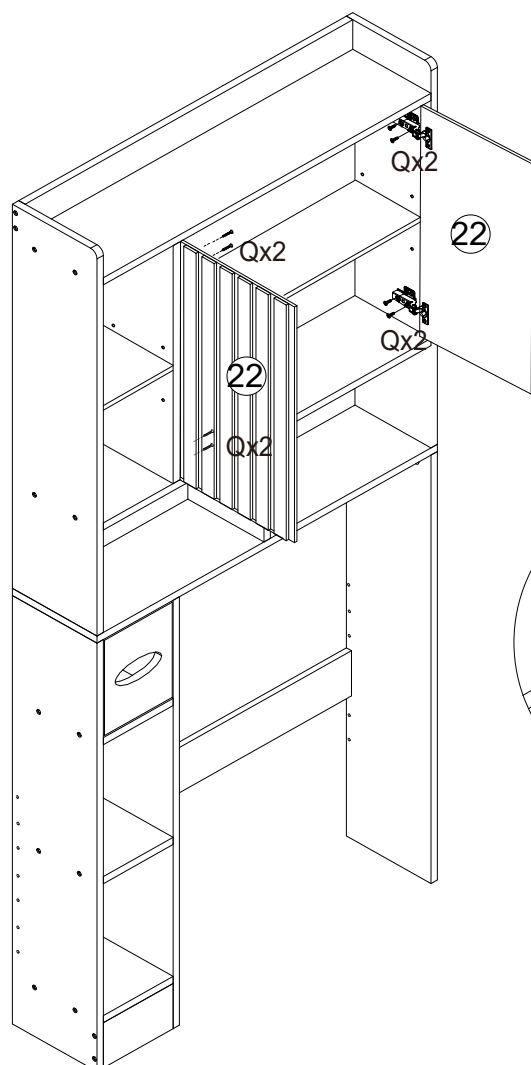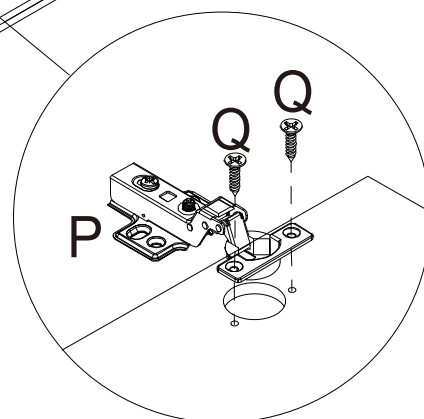 
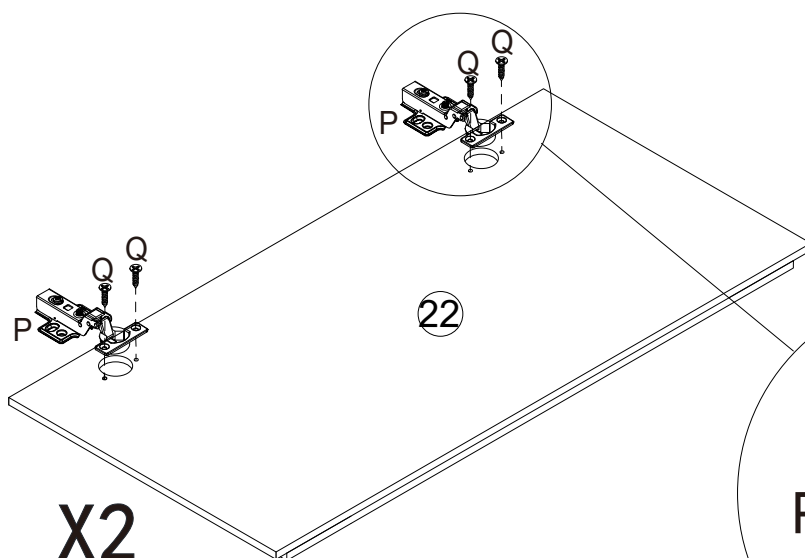 


## Step 23

 
Q



X8

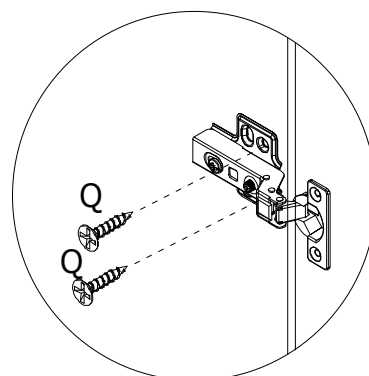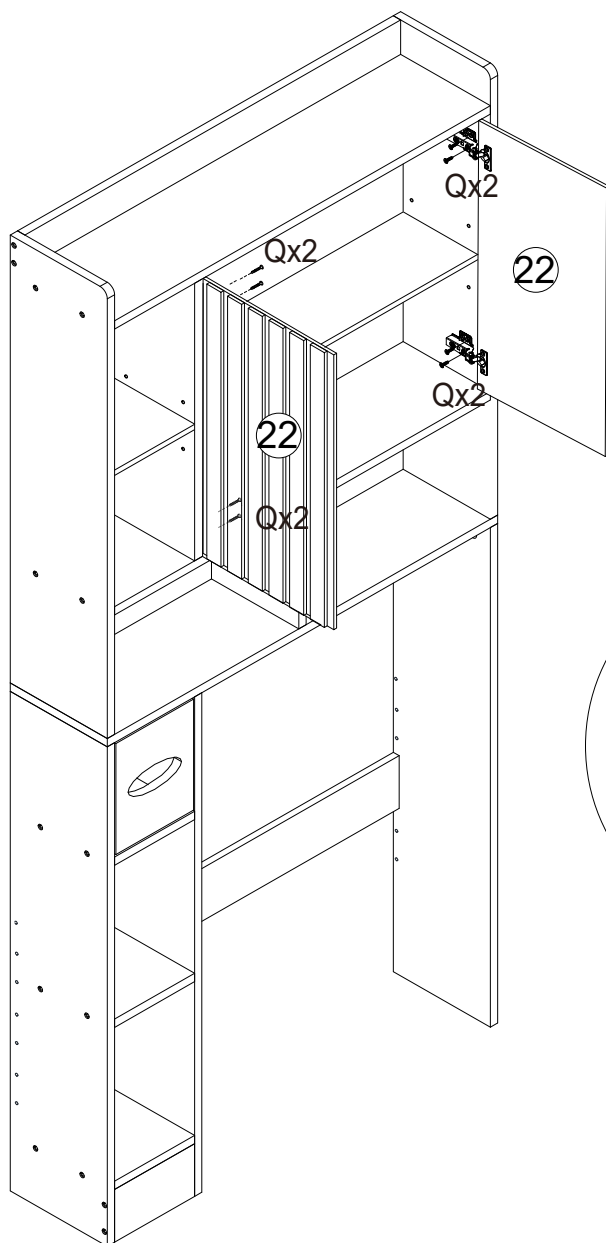

## Step 24

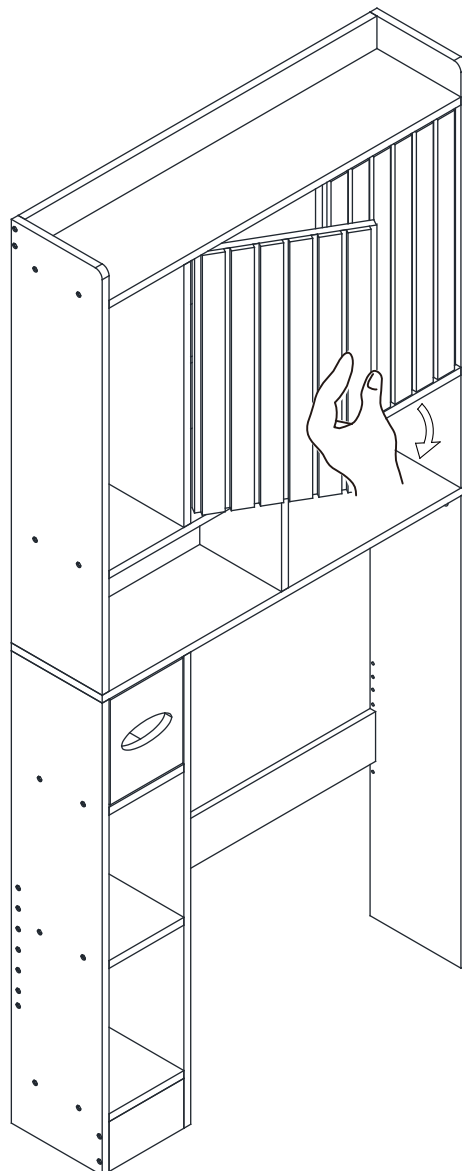

**PULL**

### **⚠ WARNING / AVERTISSEMENT / ADVERTENCIA**



**Children have died from furniture tipover. To reduce the risk of furniture tipover:**

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.  
Do not remove!*

**Des enfants sont décédés à cause du basculement du meuble. Pour réduire le risque de la chute du meuble :**

- TOUJOURS installer la quincaillerie antibasculement fournie.
- NE JAMAIS mettre un téléviseur sur ce produit.
- NE JAMAIS laisser les enfants se tenir debout, grimper ni s'accrocher sur les tiroirs, les portes ou les tablettes.
- NE JAMAIS ouvrir plus d'un tiroir à la fois.
- Placer les articles les plus lourds sur les tiroirs inférieurs.

*Cette étiquette est permanente.  
Ne pas retirer !*

**Los niños han muerto por el vuelco de los muebles. Para reducir el peligro de el mueble se vuelca:**

- SIEMPRE instale la restricción para vuelco proporcionada.
- NUNCA ponga un televisor en este producto.
- NUNCA permita que los niños se paren, se suban o se cuelguen de los cajones, puertas o repisas.
- NUNCA abra más de un cajón a la vez.
- Coloque los artículos más pesados en los cajones inferiores.

*Esta es una etiqueta permanente.  
¡No quitar!*