

В



2

Installation


1 Attaching the mounting bracket to the 2 Making the electrical connections

on the outlet box.

Outlet box.
Place the mounting bracket (AA) over the outlet box(not included) so that the holes on the mounting bracket (AA) align with the screw holes

 \frown

Screw the outlet box screws (BB) through the holes on the mounting bracket (AA) into the screw holes on the outlet box.

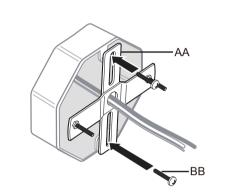


3 Securing the light fixture

□ Secure the light fixture (A) to the junction box by placing it over the pre-installed support screws on the mounting unit (AA) and securing it with the cap nuts (DD).

4 Installing the light bulbs

- Remove the pre-installed steel rings (EE) from the light fxture (A), add the glass shades (B) and re-secure the steel rings (EE).
- Install three 100-watt max. medium-base flament bulbs(not included).

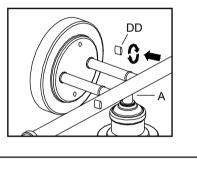

Connect the copper wire from the light fixture (A) to


□ Connect the black to black (power), the white to white (neutral) and copper wire to ground wire with the wire nuts (CC) and secure them with electrical tape (not

NOTE: If the wires from the fixture are the same color, attach the side with markings or letters to the black (positive) wire and the other to the white (neutral) wire.

the mounting unit (AA) by securing it with the

pre-installed ground screw.

included).

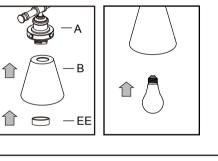

Maintenance

□ Before attempting to clean the fixture, disconnect the power to the fixture by turning the breaker off or removing the fuse from the fuse box.

 \square

Care and Cleaning

- Clean the fixture with a soft, dry cloth.
- \Box Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
The bulb will not light.	The bulb is burned out.	Replace the light bulb.
	The power is off.	Ensure the power supply is On.
	There is a faulty wire connection.	Check the wiring.
	The circuit breaker is off.	Ensure the circuit breaker is in position.
The fuse blows or circuit breaker trips when the light is turned on.		Check the wire connections. Contact a qualifed electrician.



3

公 差 MM	基本尺寸 MM	
\pm 1.0	0~30	
±1.5	30~80	单 位: mm
± 2.0	80~315	材 质:70G书纸
± 2.5	315~700	
\pm 3.0	700~1300	
±4.0	1300~2500	
		$\bigcap_{i=1}^{n}$

