 




INSTALLATION

Product Manual

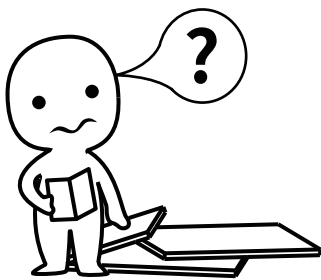


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

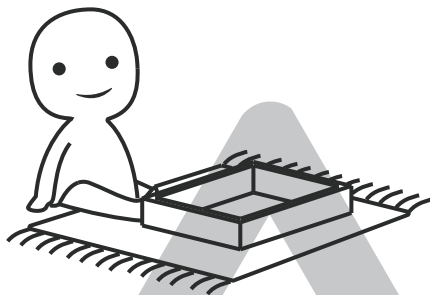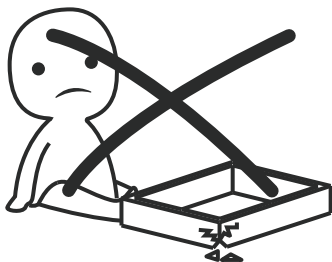



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

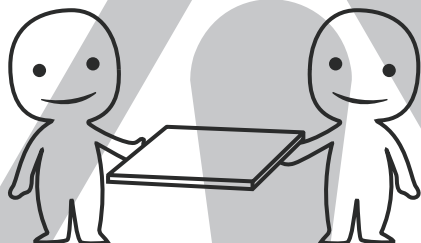

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

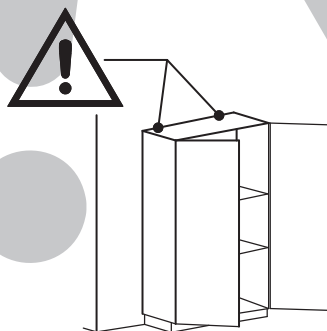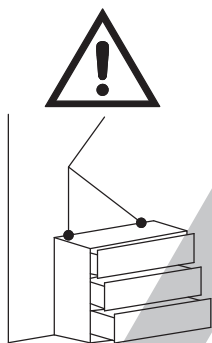

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

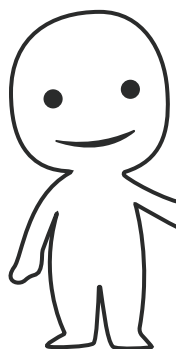


Please prepare the following tools

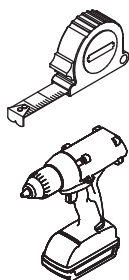    


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 50



CRA0635A

 B x 8




CRA0628A

C x 58




CRB1595A

 D x 51




CRF0830A

 E x 13



CRD0440A

 F x 16




CRD0430A

G x 38



CRE0312A

 H x 15




15.5 x 10 x 1.2 mm

J x 15




CRD0314A

 K x 4



DGA861A

 L x 4

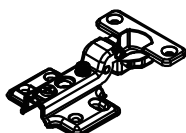


DGA861B

M x 48



CRD3514A

 N x 8




150 x 34 mm

P x 16



CRE0418A

 Q x 8

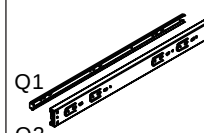

#4512 16 "

R x 32




CRD3512A

S x 2



53 x 24 x 12 mm

 T x 1




770 mm


U x 4



CRD0414A

  V x 2



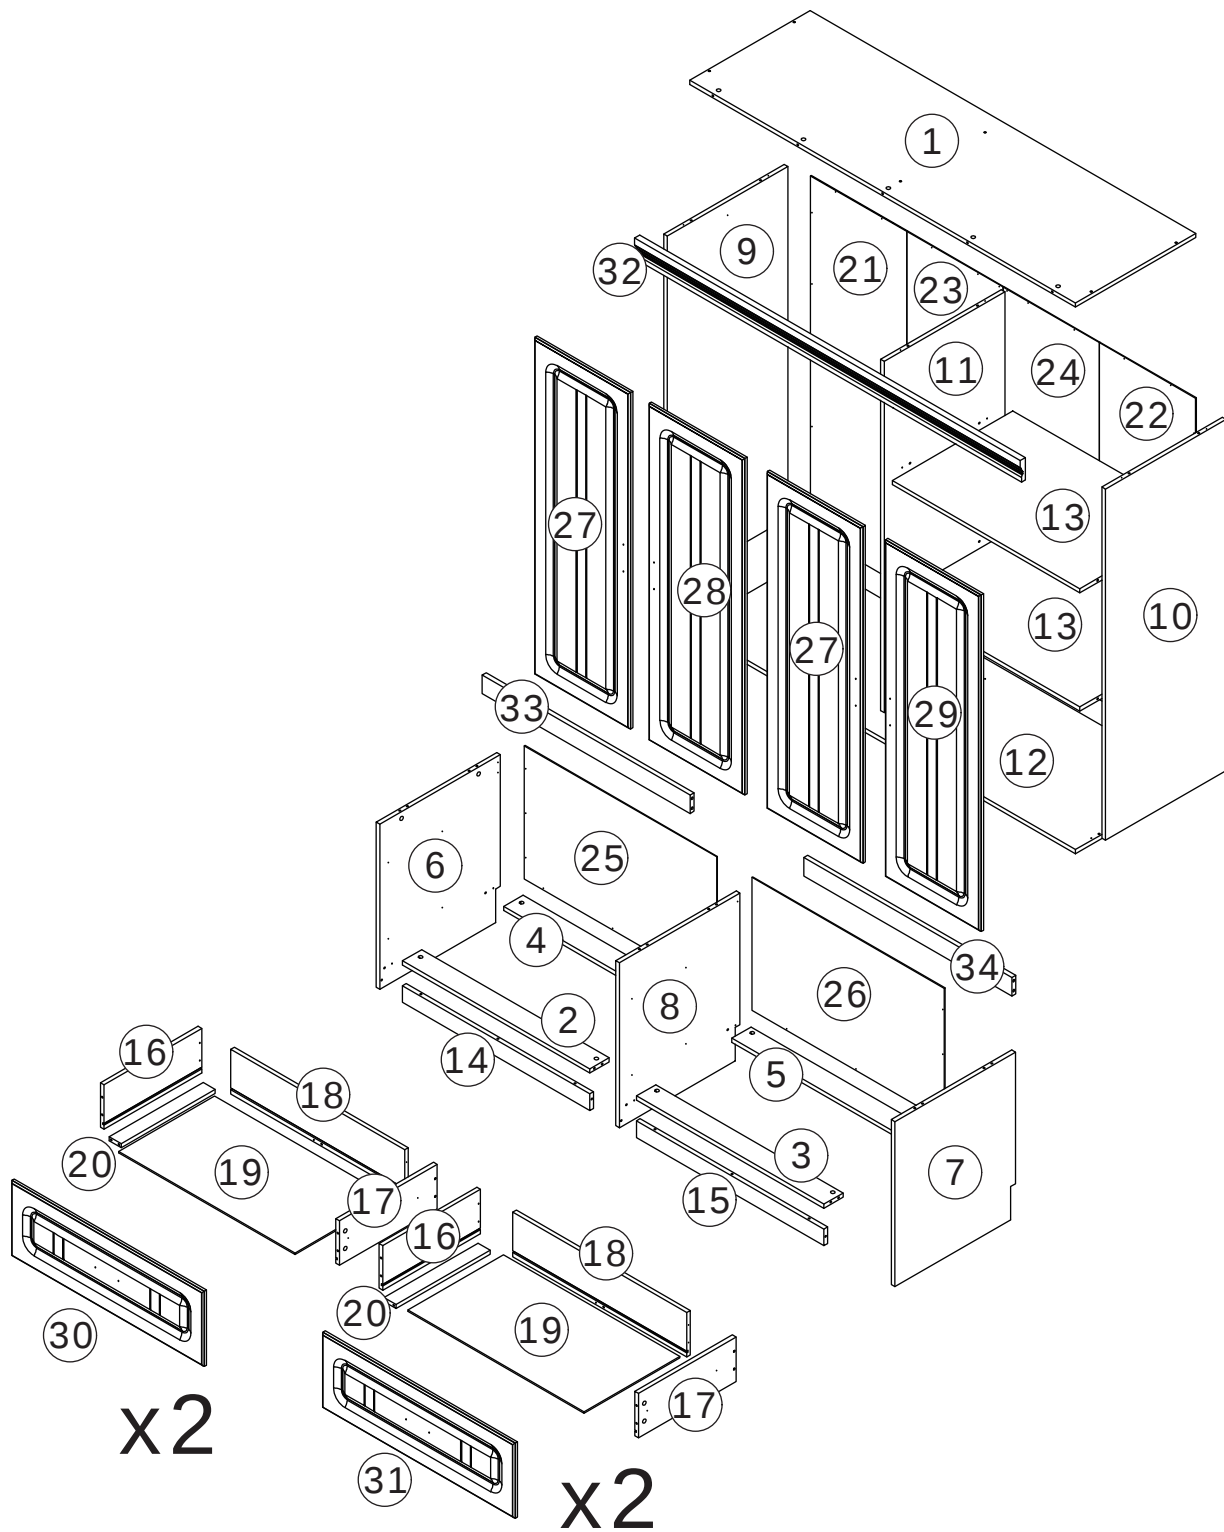


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

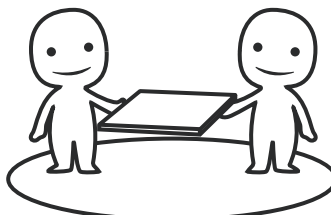


ASSEMBLED BY 2 ADULTS


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

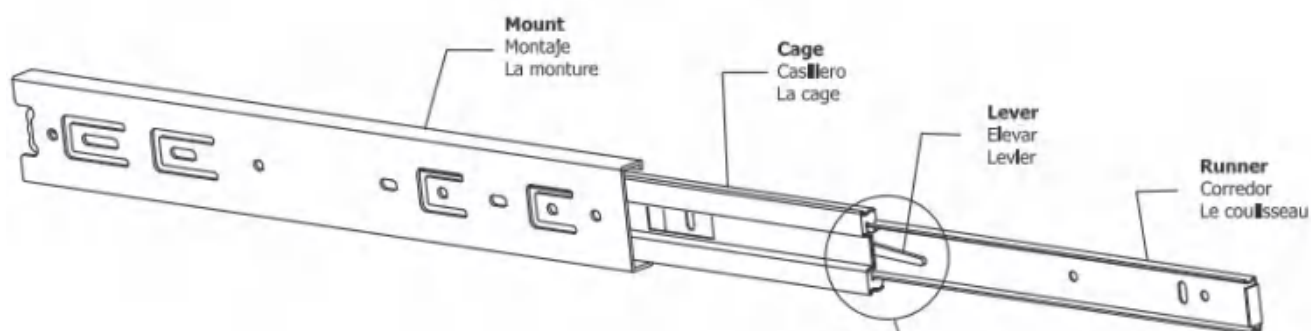

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

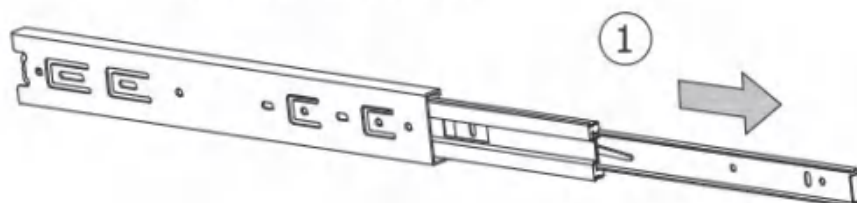


 
STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

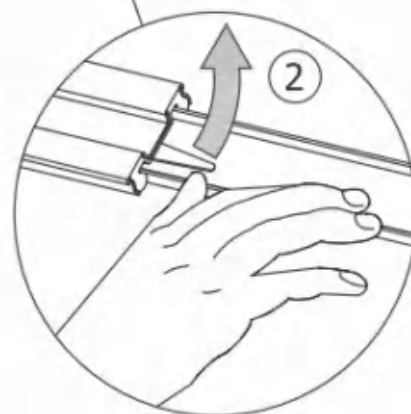



 
STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

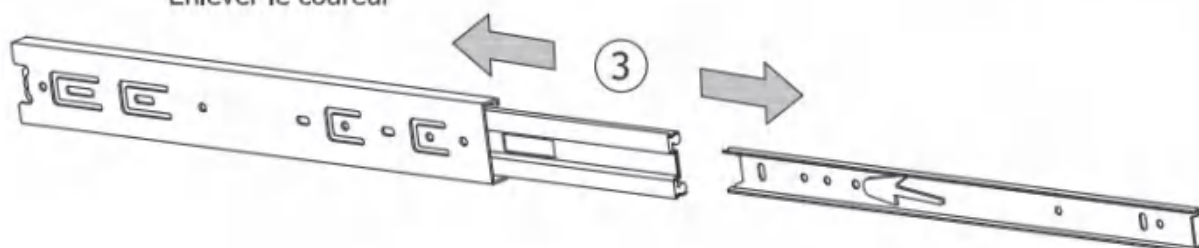




1

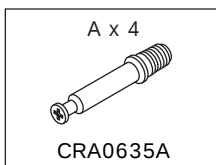  

   
Insert quickfit screw(A) into corresponding holes in plate 11 with a screwdriver as shown.

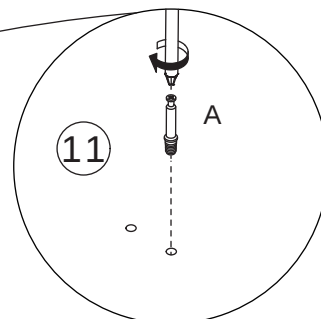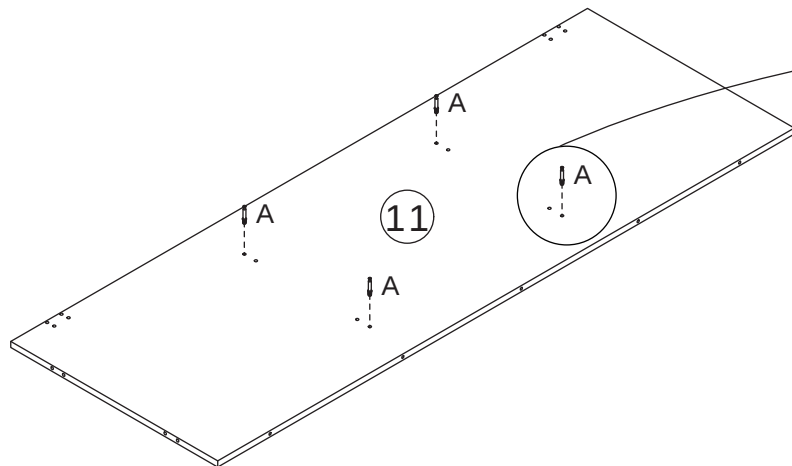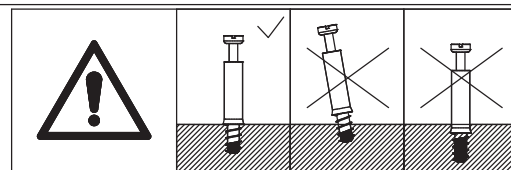


2

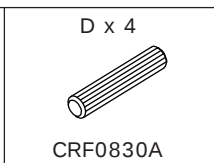   

 Attach plate 13 to plate 11 with wooden dowel(D) at first.
Put cam lock(C) into holes in plate 13 and turn clockwise to tighten as shown.

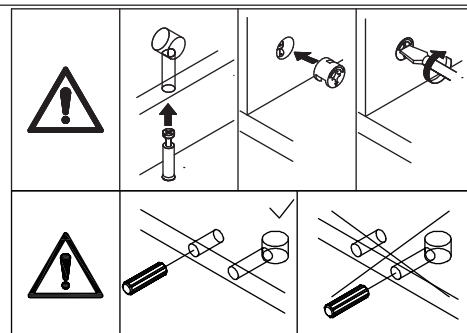


face up

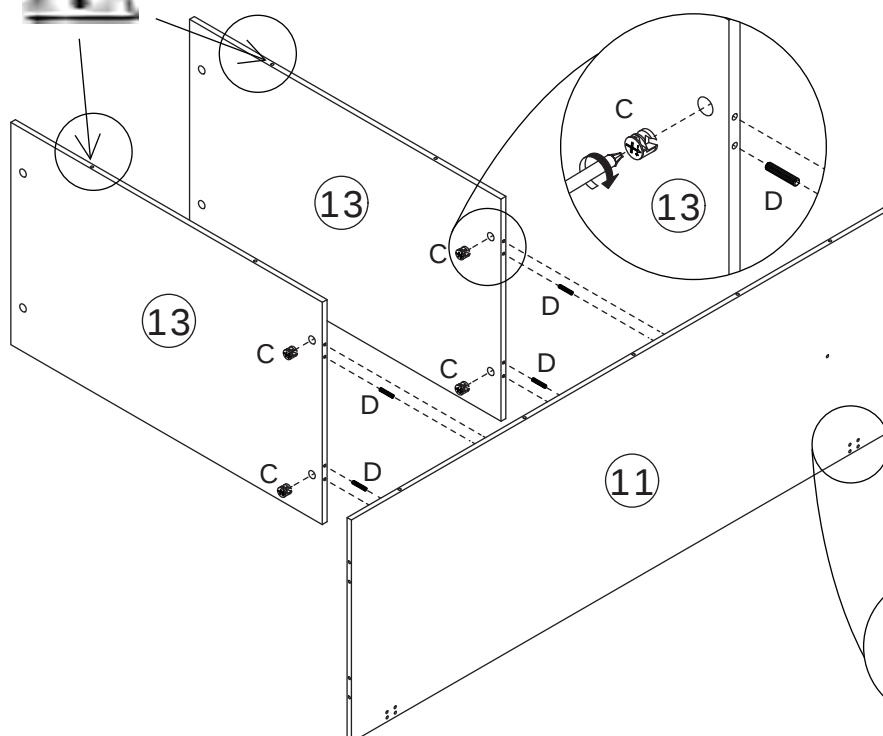 




The holes are facing down







 
3



   Insert quickfit screw(A) into corresponding holes in plate 10 with a screwdriver as shown.

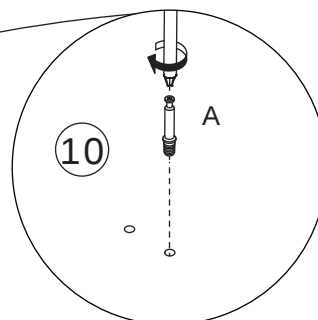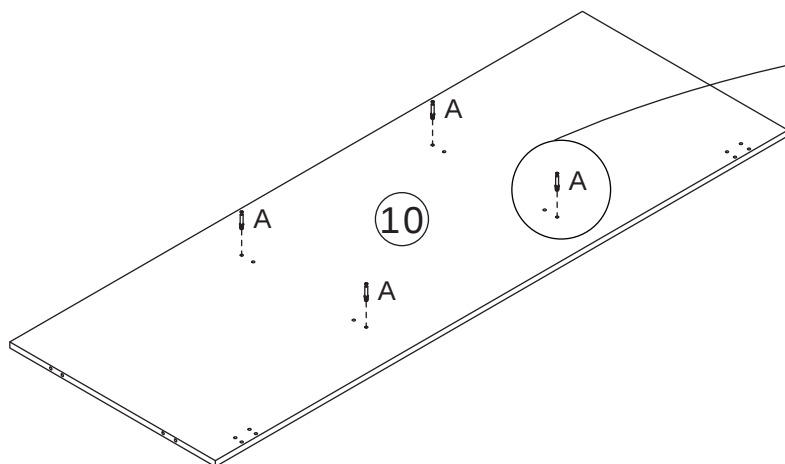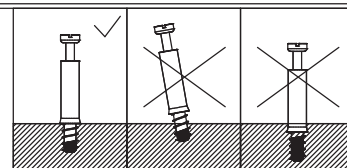

4

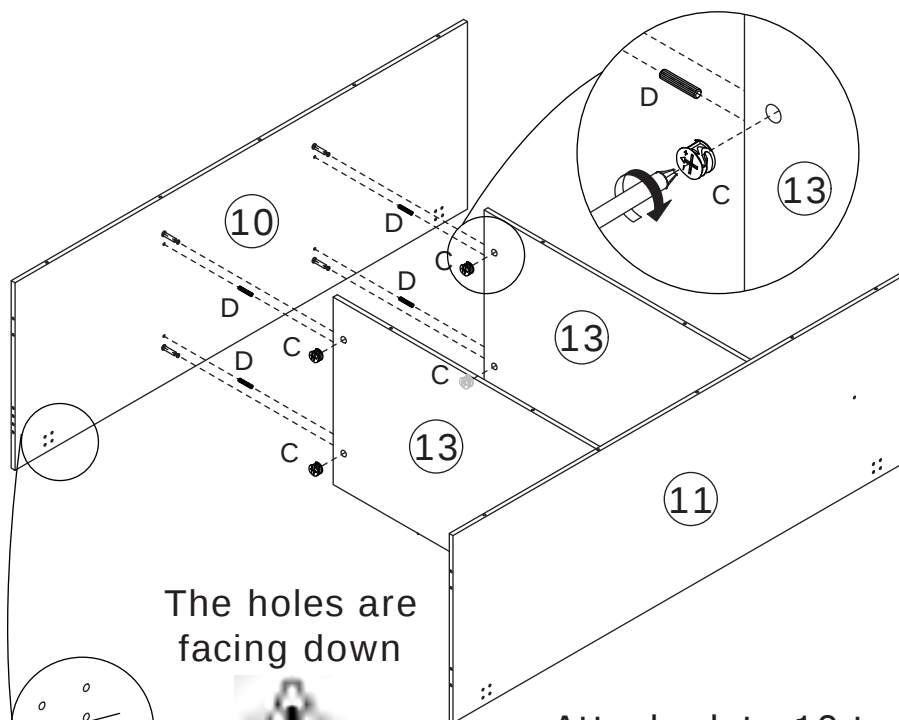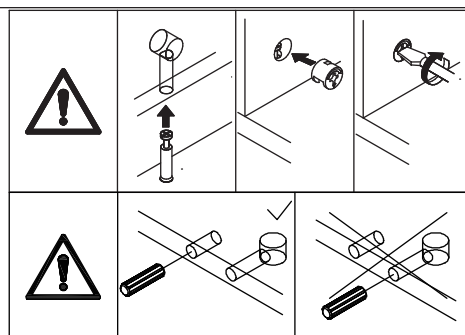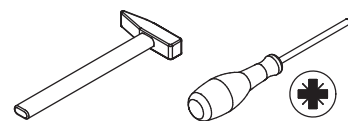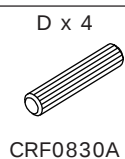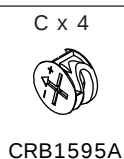     


The holes are facing down





Attach plate 10 to plate 13 with wooden dowel(D) at first.
Put cam lock(C) into holes in plate 13 and turn clockwise to tighten as shown.


 
5



  
Insert quickfit screw(A) into corresponding holes in plate 12 with a screwdriver as shown. Please pay attention to the holes where the accessories are inserted.

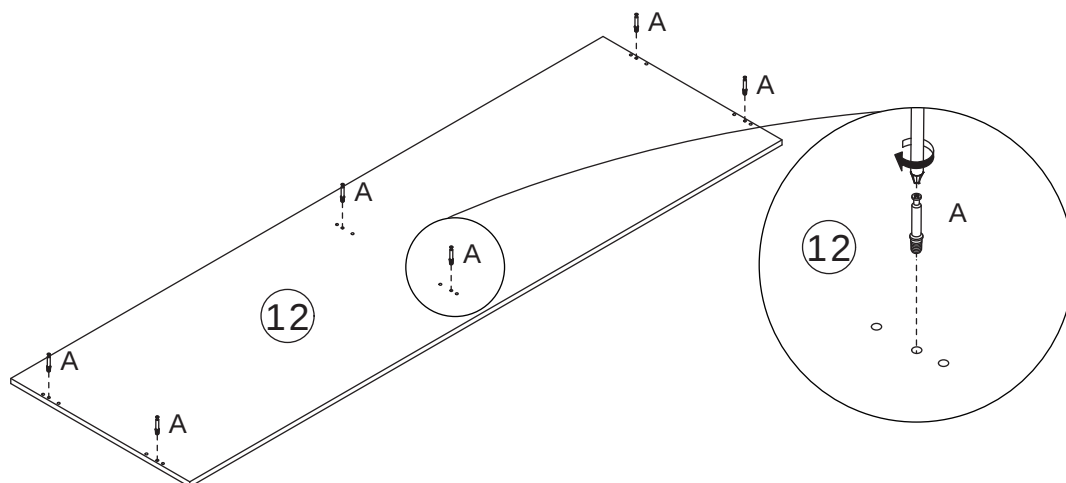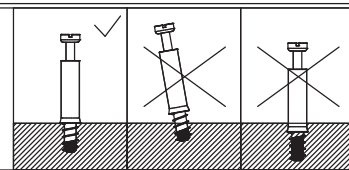


6

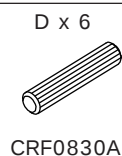  

 
Attach plate 12 to plate 10, 11 and 9 with wooden dowel(D), then fix using screw(E) as shown.

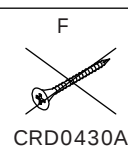

face up



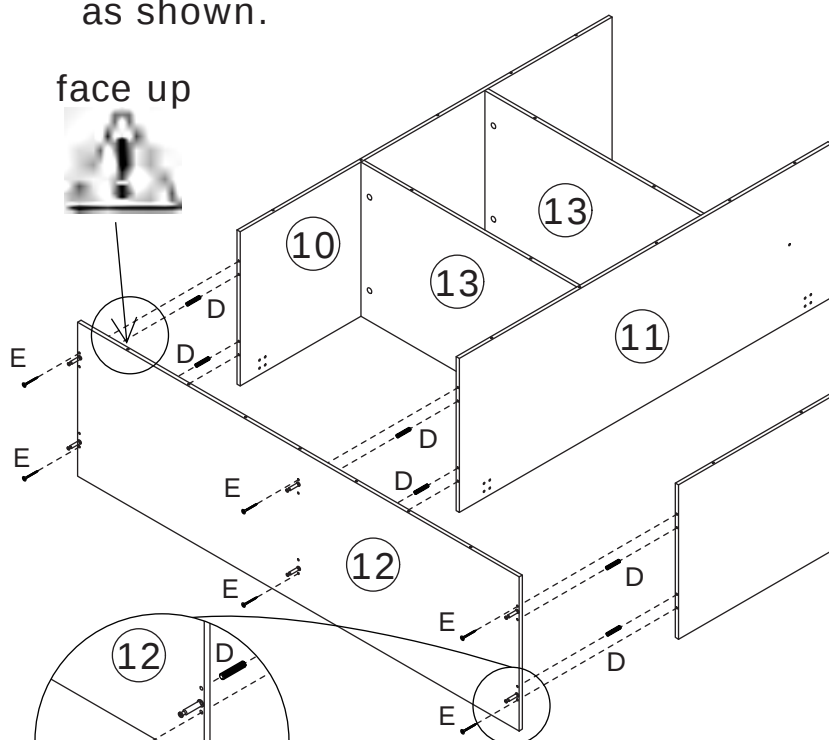 


The holes are facing down


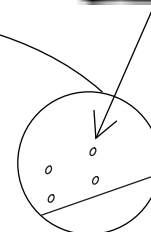 


Please pay attention to the holes where the accessories are inserted.

  
 
7

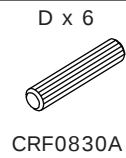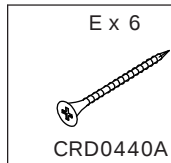

 
 
Attach plate 1 to plate 10, 11 and 9 with wooden dowel(D), then fix using screw(E) as shown.

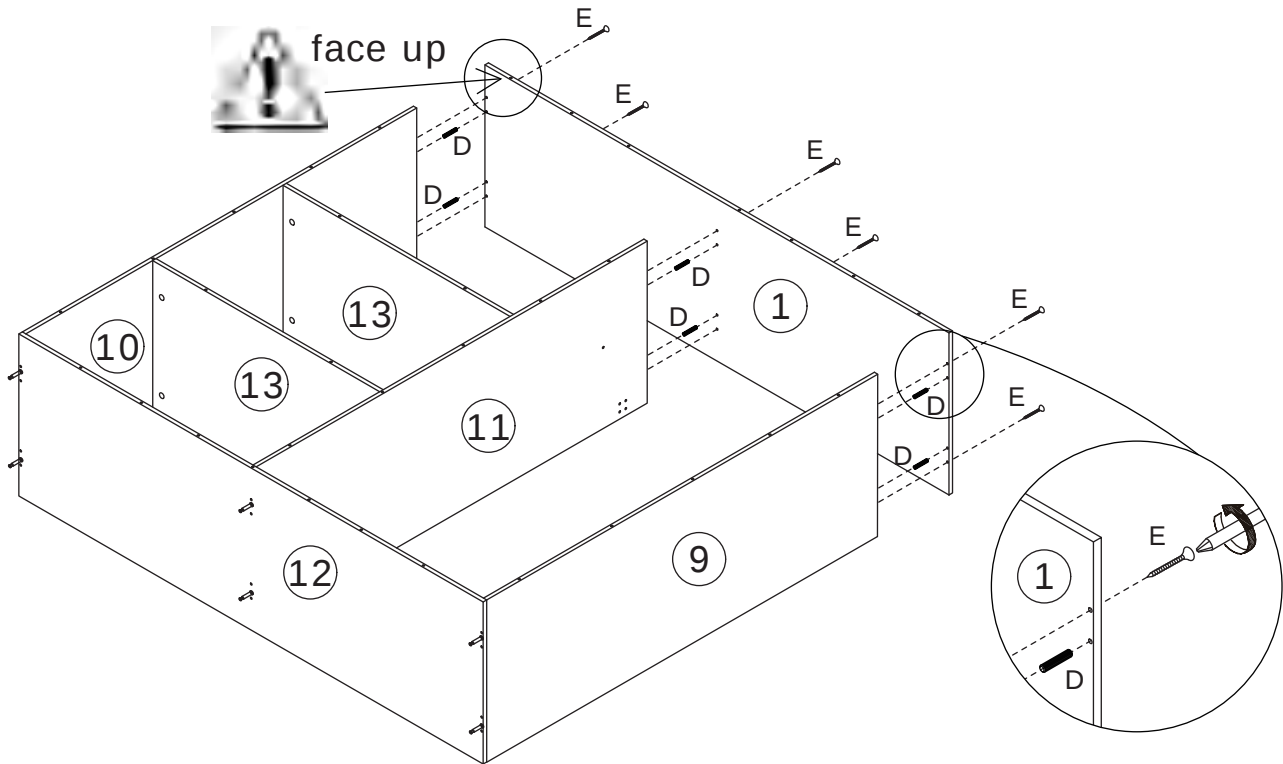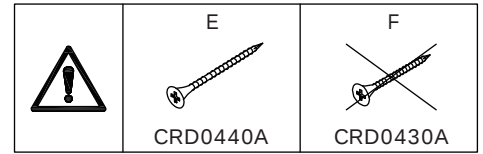

8

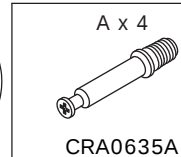  

  Insert quickfit screw(A) into plate 2 and 3 with a screwdriver as shown.

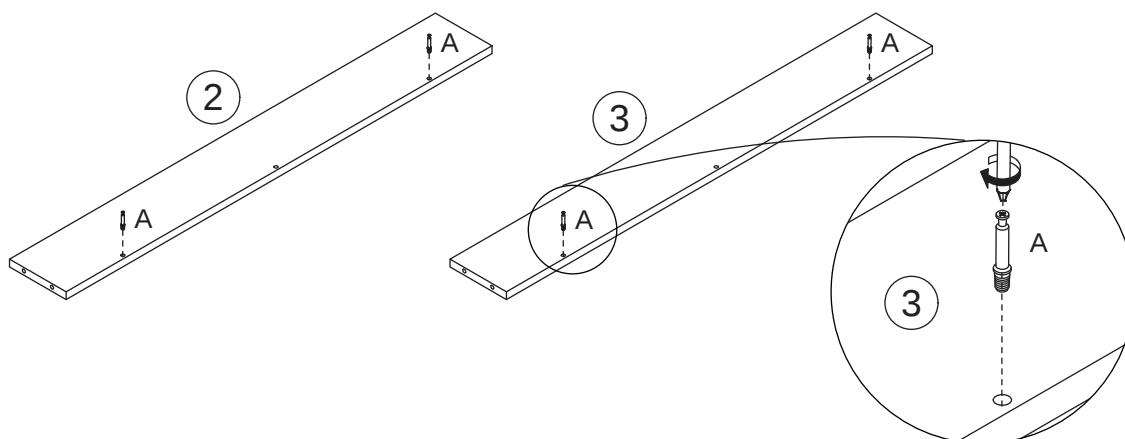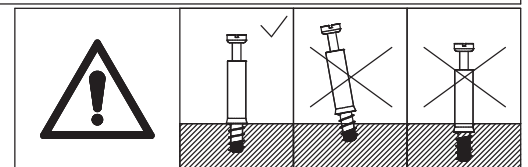


9

C x 4




CRB1595A

 D x 2





CRF0830A

 


Attach plate 2 to plate 14 with wooden dowel(D); put cam lock(C) into holes in plate 14 and turn clockwise to tighten as shown.

  Attach plate 3 to plate 15 with wooden dowel(D); put cam lock(C) into holes in plate 15 and turn clockwise to tighten as shown.

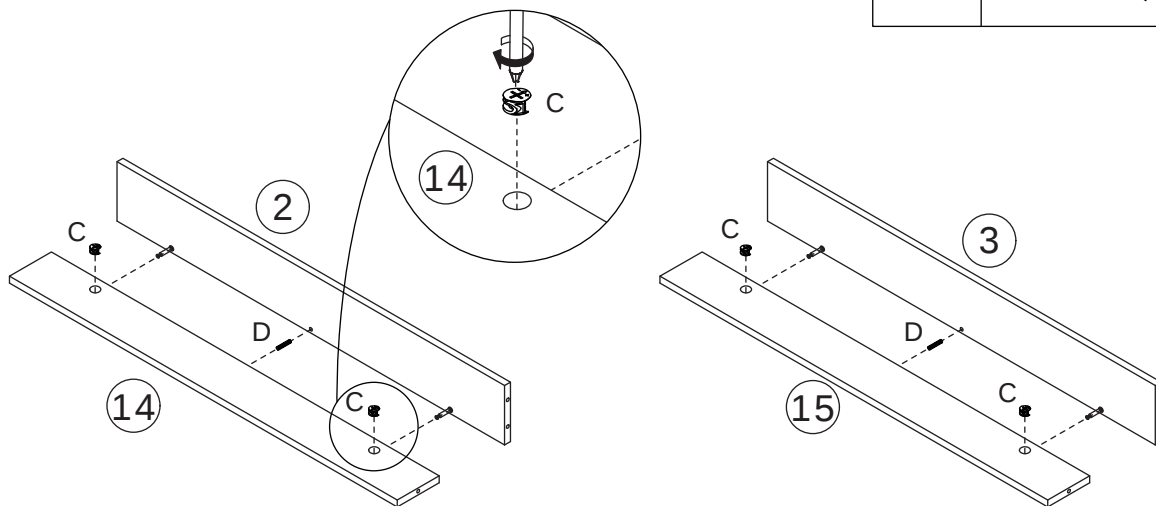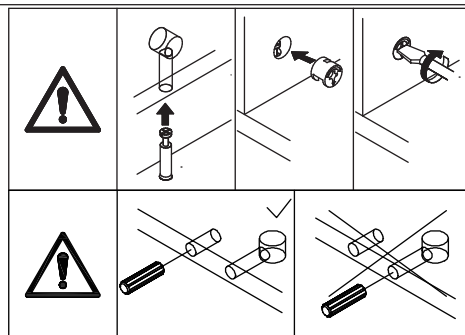

10

 A x 6



CRA0635A

Q x 4




#4512 16"



R x 8




 
CRD3512A



  Separate glide into two parts at first(Page 5). Fix slide rail(Q) to plate 6 and 7 using screw(R) as shown. Insert quickfit screw(A) into plate 6 and 7 as shown.

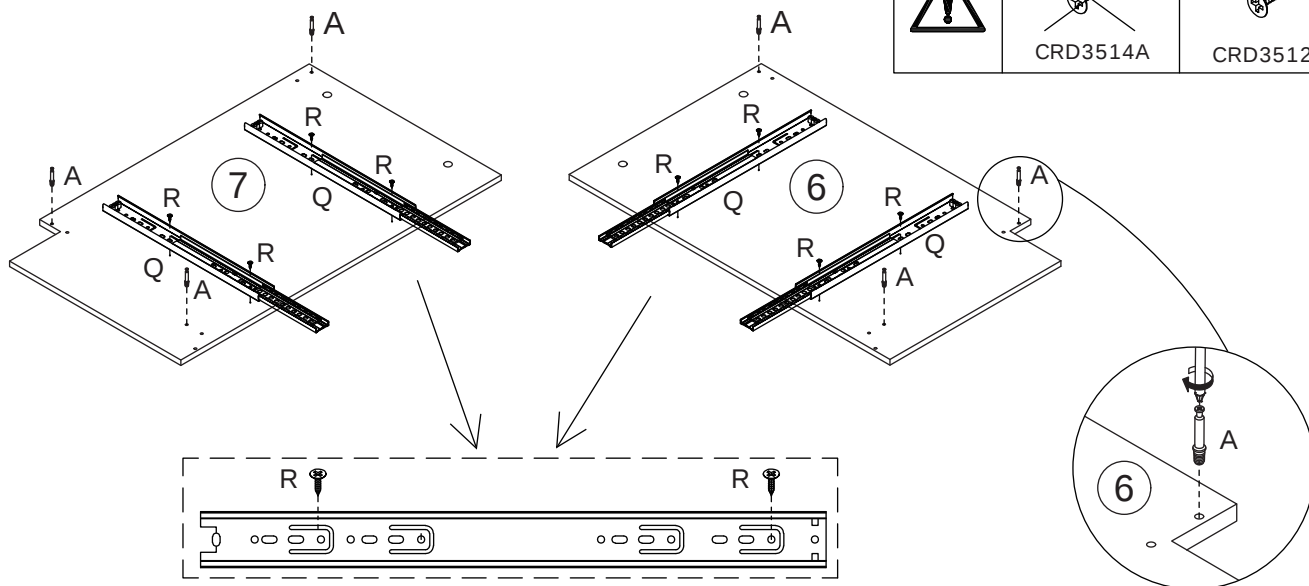
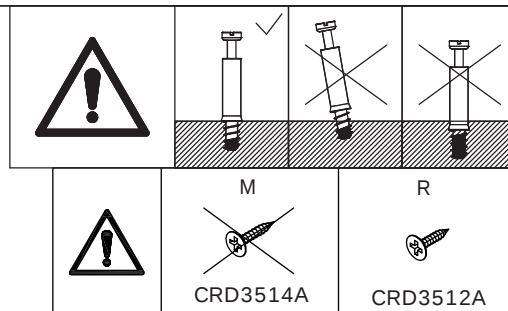


11



 
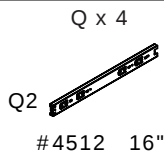 


Fix slide rail(Q) to plate 8 using screw(R) at first.

  Flip the plate, and fix slide rail(Q) as shown. Insert quickfit screw(A) into plate 8 as shown.

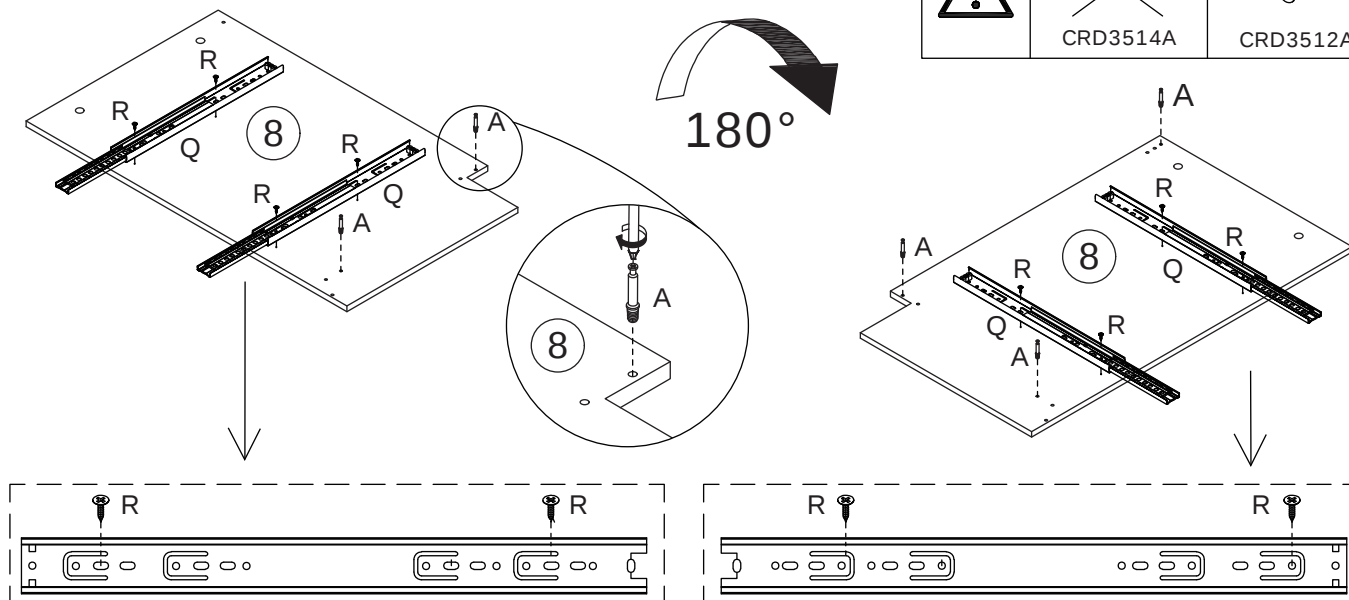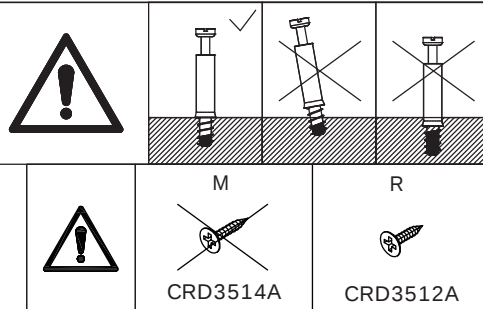


12

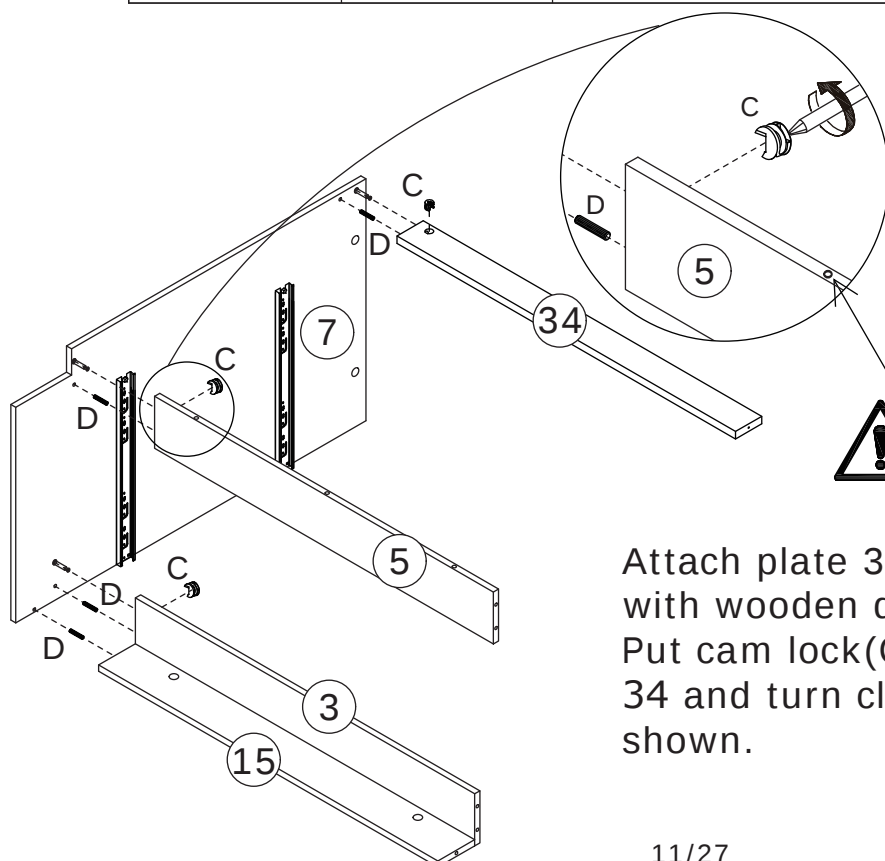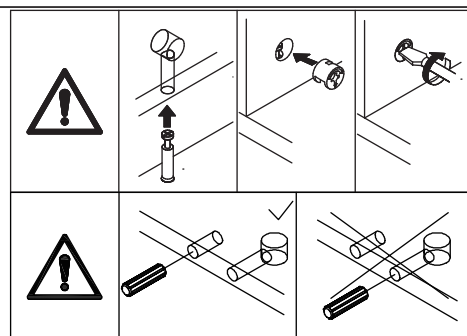  
 
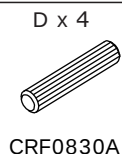 


the holes are facing up

Attach plate 3, 15, 5 and 34 to plate 7 with wooden dowel(D) at first. Put cam lock(C) into holes in plate 3, 5, 34 and turn clockwise to tighten as shown.

 13




C x 2 	D x 3 	E x 1 
CRB1595A	CRF0830A	CRD0440A

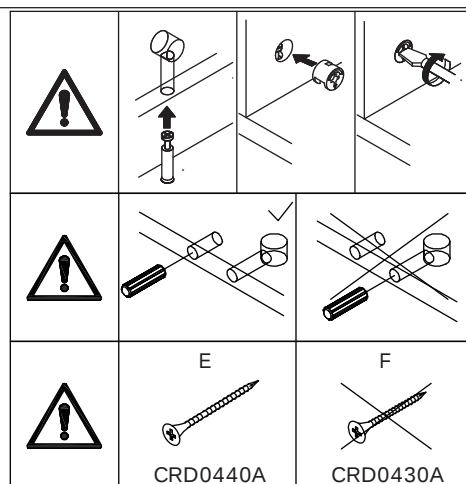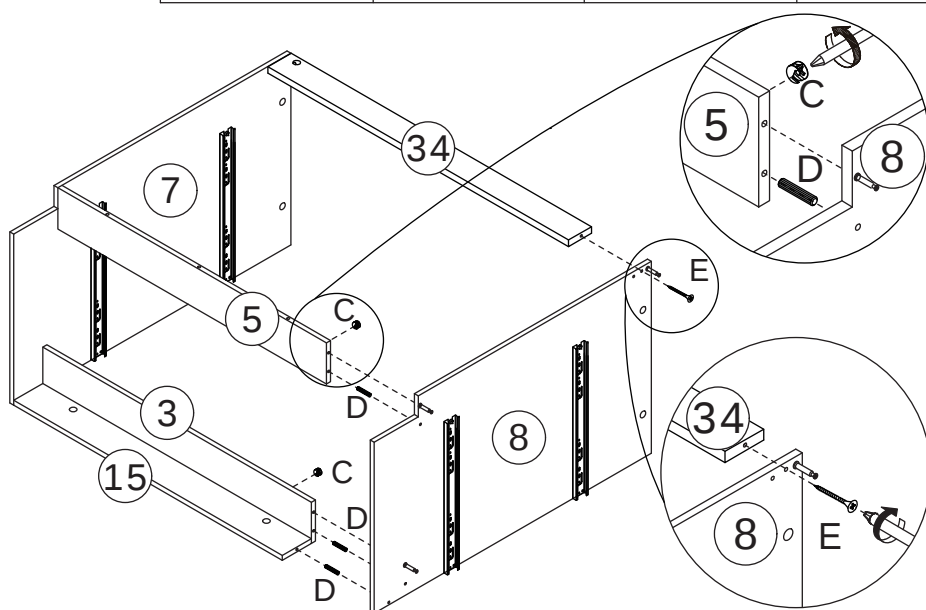   

Attach plate 3, 15 and 5 to plate 8 with wooden dowel(D) at first. Put cam lock(C) into holes in plate 3,5 and turn clockwise to tighten as shown. Fix plate 8 to plate 34 with screw(E) as shown.

14

C x 3 	D x 4 
CRB1595A	CRF0830A

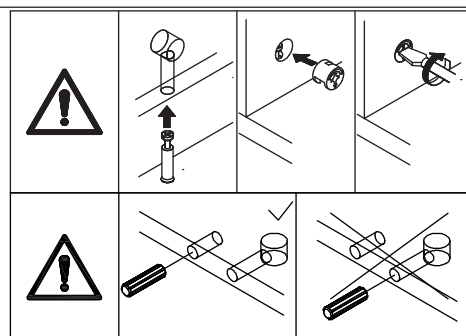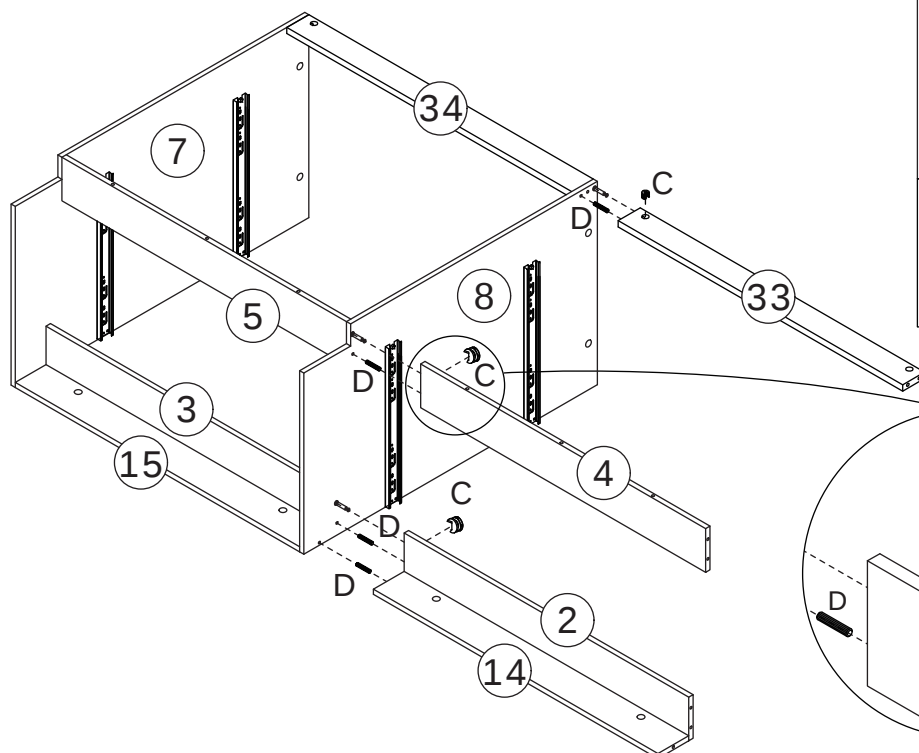   

Attach plate 2,14,4 and 33 to plate 8 with wooden dowel(D) at first. Put cam lock(C) into holes in plate 2,4,33 and turn clockwise to tighten as shown.


15

C x 3




CRB1595A

 D x 4






CRF0830A

 

Attach plate 6 to plate 4,2,14 and 33 with wooden dowel(D) at first.

   Put cam lock(C) into holes in plate 2,4,33 and turn clockwise to tighten as shown.

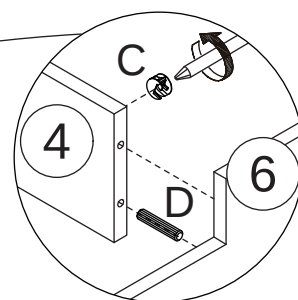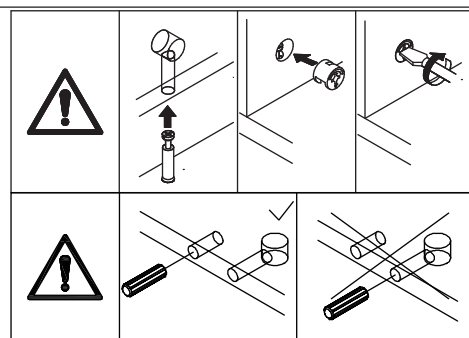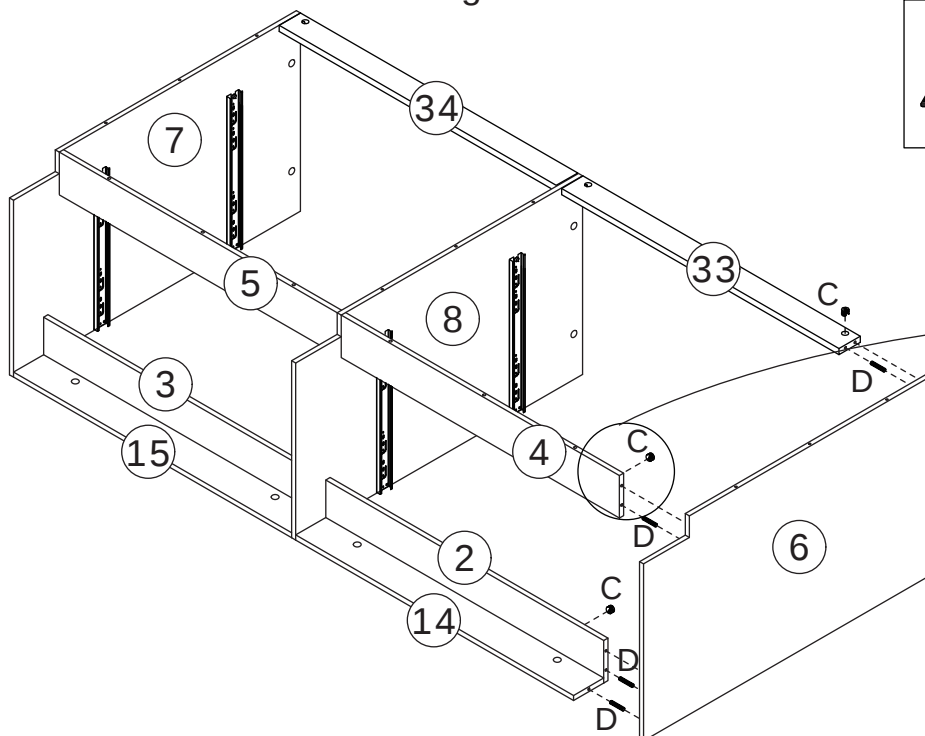


16

C x 6







CRB1595A

 D x 6



CRF0830A

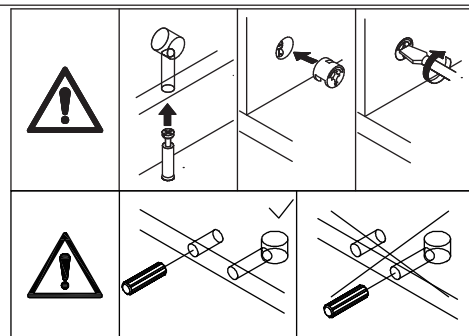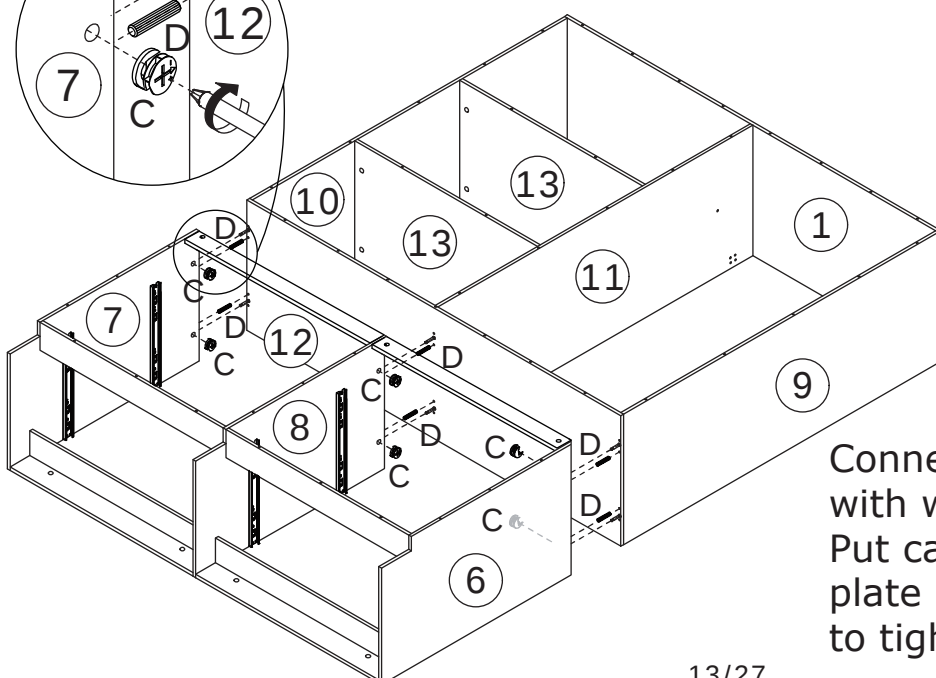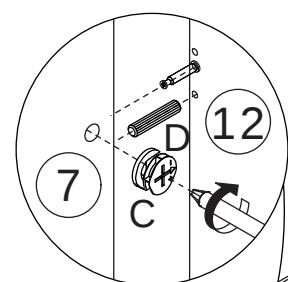    

Connect the two components with wooden dowel(D) at first. Put cam lock(C) into holes in plate 7,8,6 and turn clockwise to tighten as shown.

17

G x 38



CRE0312A

H x 15




15.5 x 10 x 1.2 mm

J x 15



 CRD0314A



J






CRD0314A

M



   CRD3514A

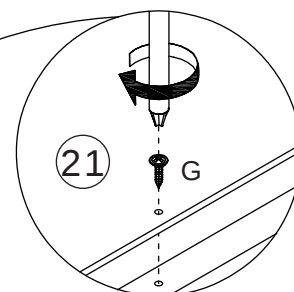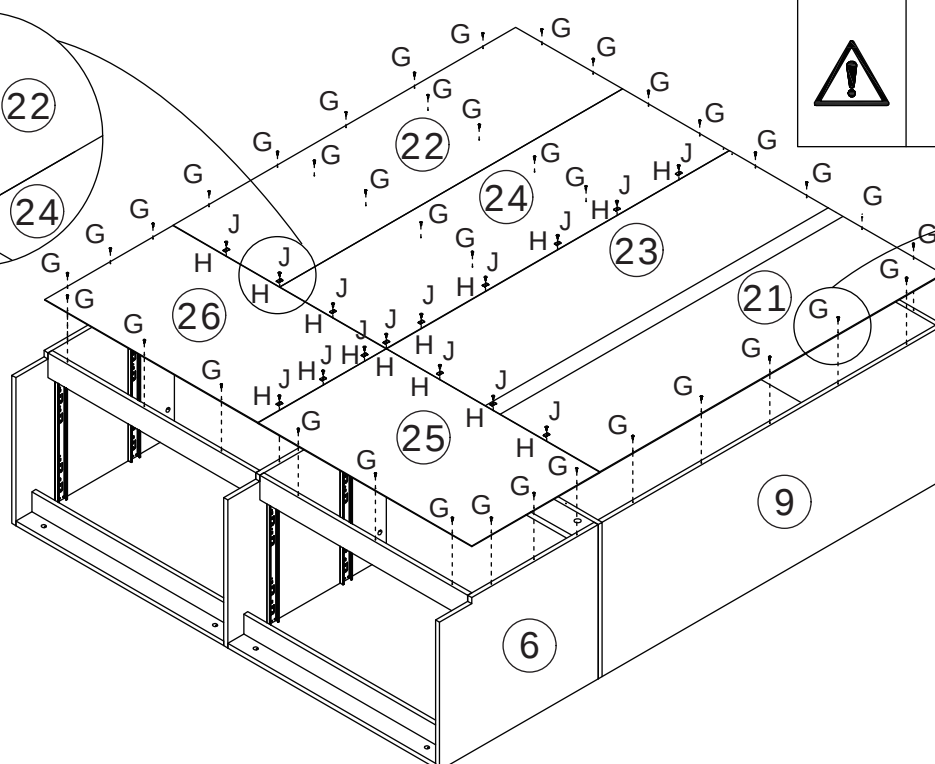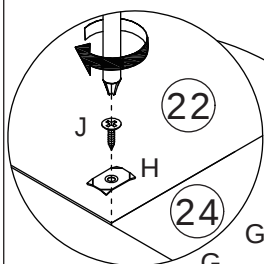


Fix back plate 21,22,23,24,25 and 26 using screw(G) at first.
Fix each plate together using iron sheet(H) with screw(J) as shown.

18



A x 5



 CRA0635A

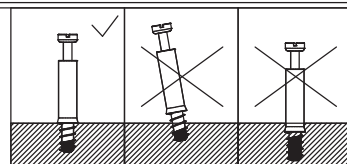

  Insert quickfit screw(A) into plate 32 as shown.



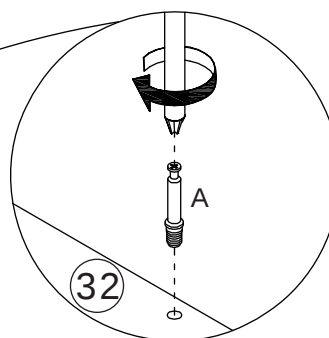
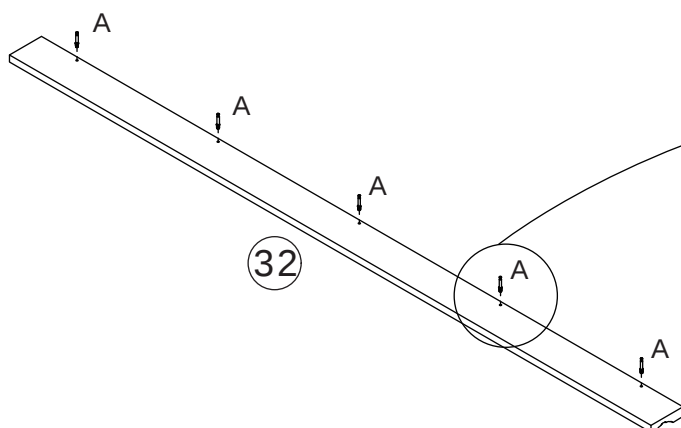


19

C x 5



    CRB1595A

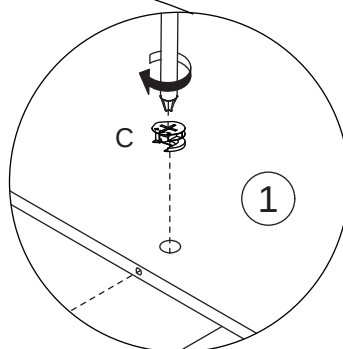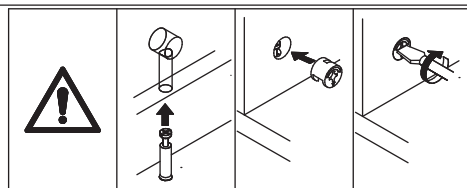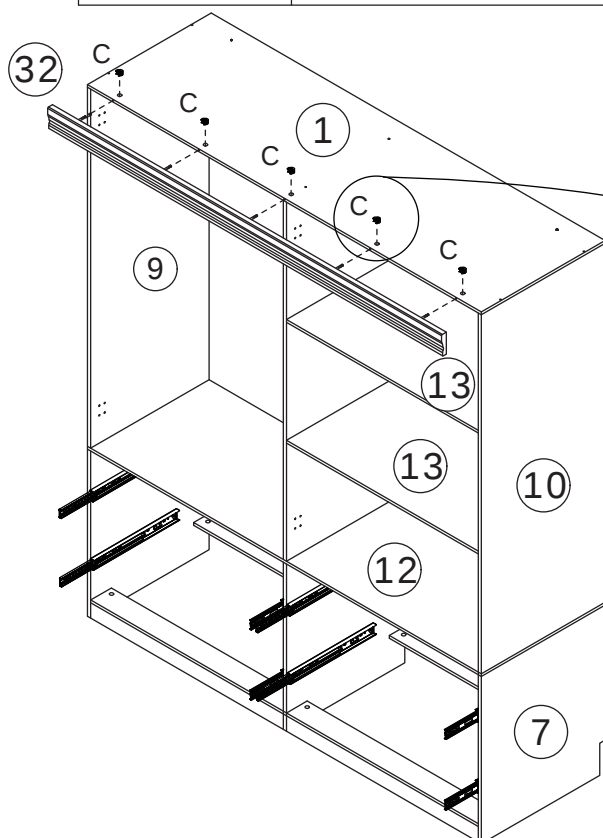

Attach plate 32 to plate 1 at first.

Put cam lock(C) into holes in plate 1 and turn clockwise to tighten as shown.

20

S x 2



53 x 24 x 12 mm

T x 1








770 mm

U x 4



     
CRD0414A

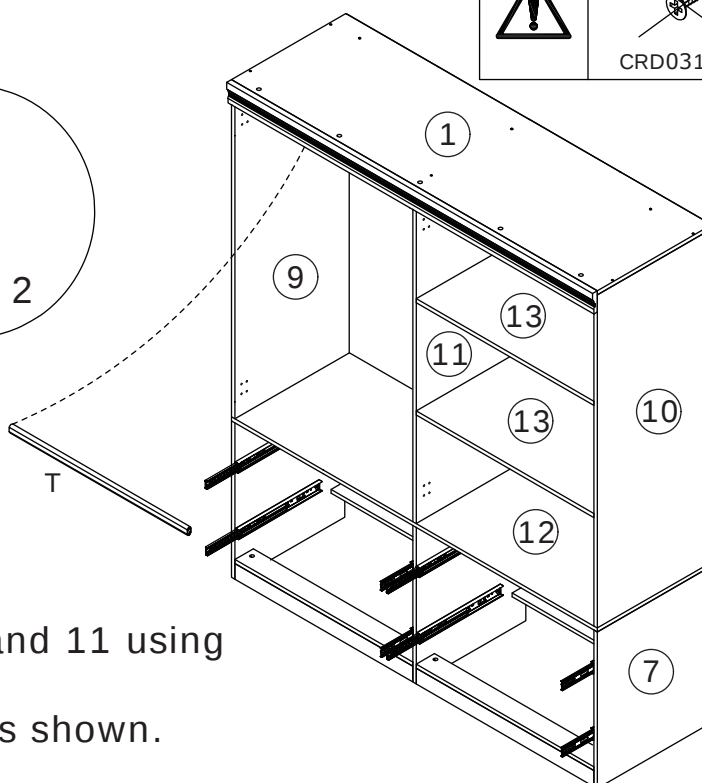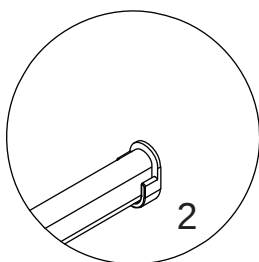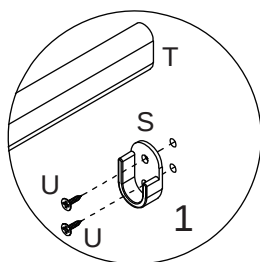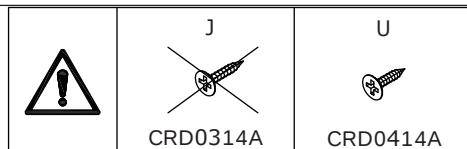


Fix part(S) to plate 9 and 11 using screw(U) as shown.

Place clothing rod(T) as shown.

 Please note, here are two different types of hinges.
The full coverage door hinges(K) are used on outermost door panel.
The curved door hinges(L) are used on the door panel in the middle of the cabinet.

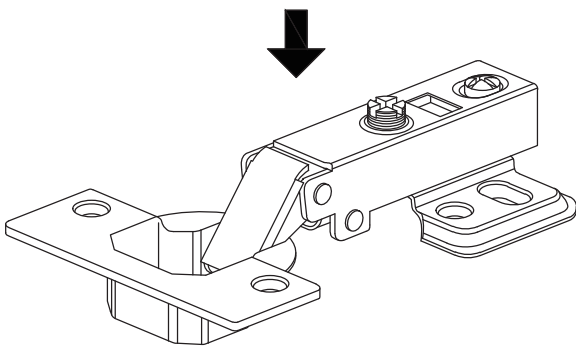
**K**

 Full overlay hinge

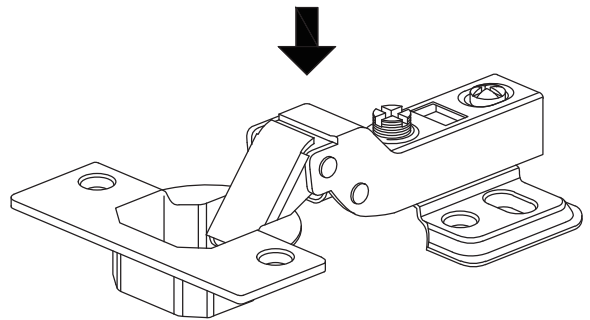**L**



Half overlay hinge

 22






Fix hinge(K) to plate 27 and 29 respectively using screw(M) as shown.

  Please note, hinge(K) is used in this step.

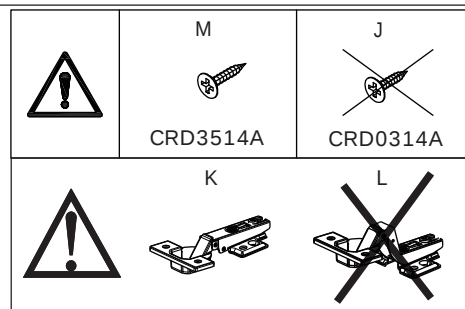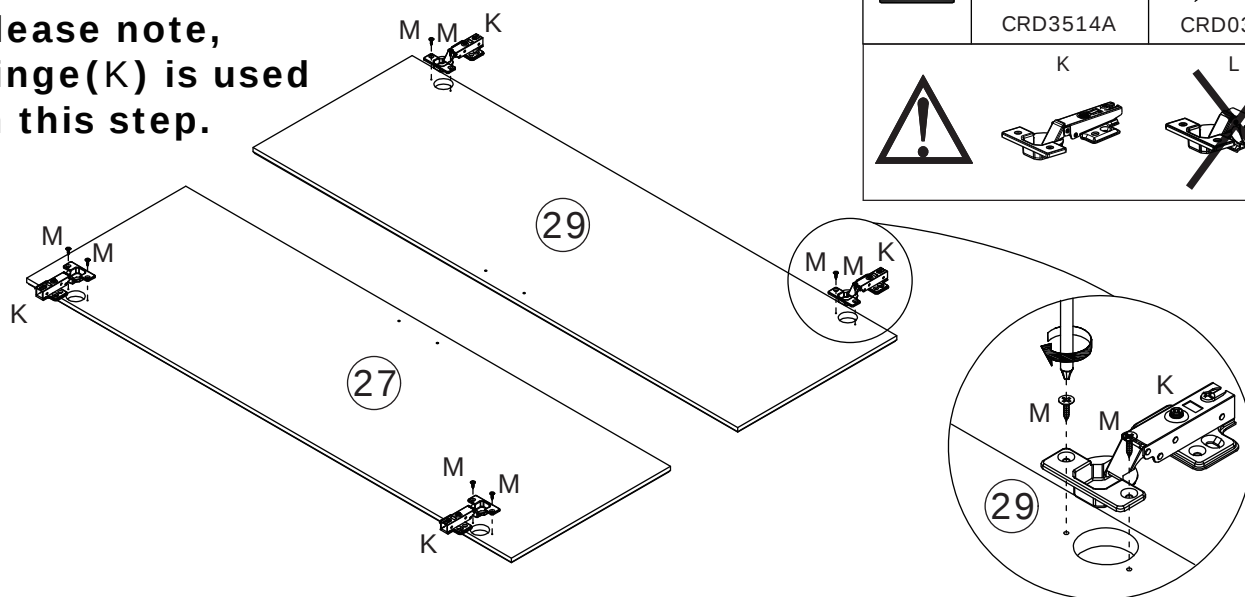

23

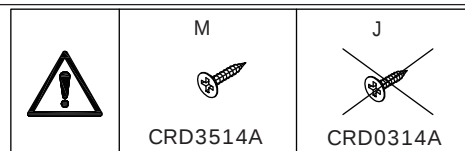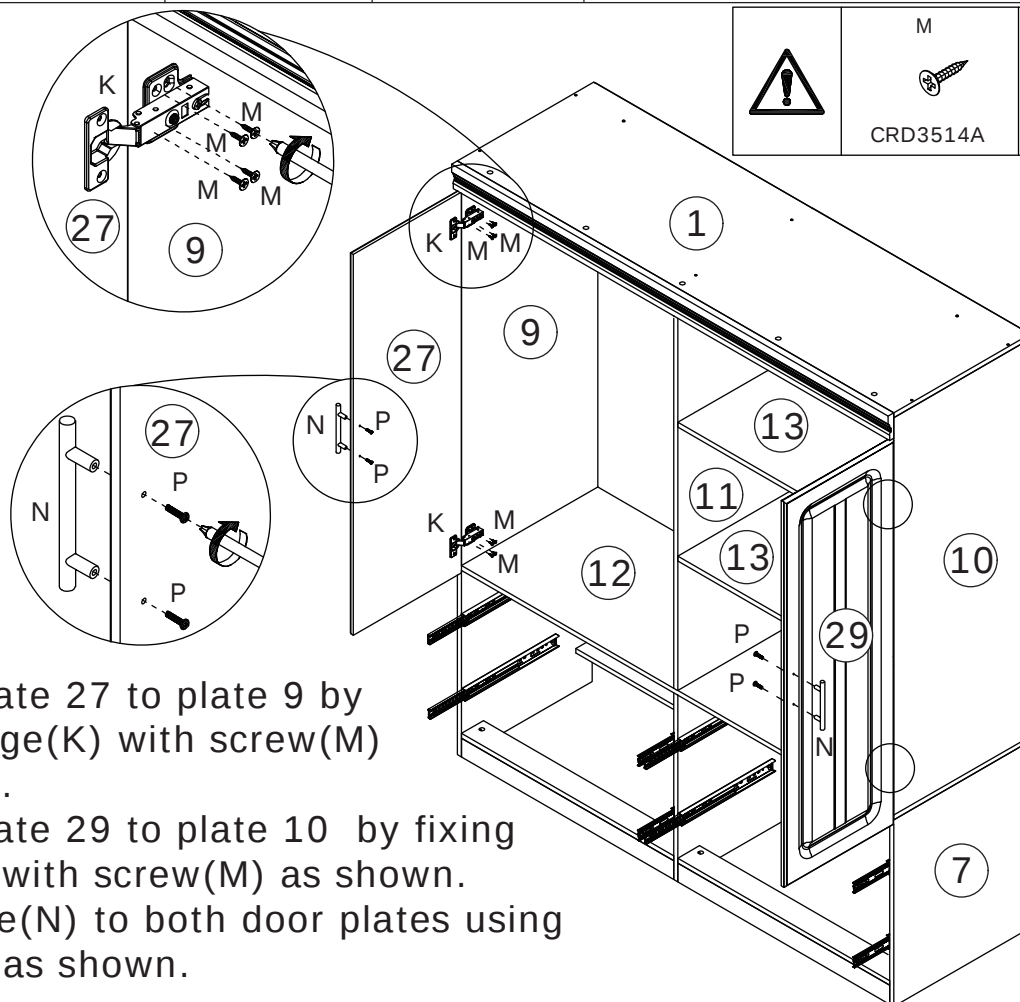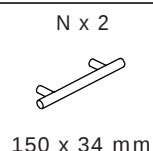   


Attach plate 27 to plate 9 by fixing hinge(K) with screw(M) as shown.


Attach plate 29 to plate 10 by fixing hinge(K) with screw(M) as shown.

Fix handle(N) to both door plates using screw(P) as shown.

 
24

L x 4  DGA861B	M x 8  CRD3514A		
---	--	--	---

 Fix hinge(L) to another plate 27 and 28 respectively using screw(M) as shown.

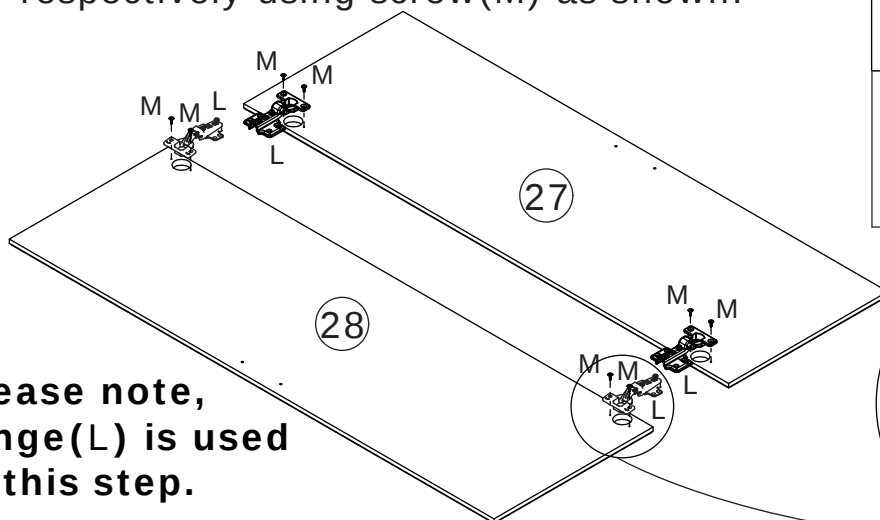

	M  CRD3514A	J  CRD0314A
		L 

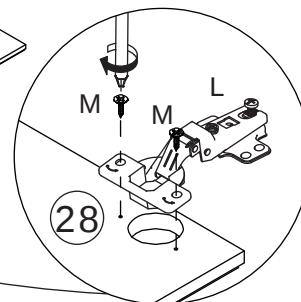 


**Please note,
hinge(L) is used
in this step.**

25


M x 8  CRD3514A	N x 1  150 x 34 mm	P x 2  CRE0418A	
---	--	--	--

	M  CRD3514A	J  CRD0314A
---	--	--

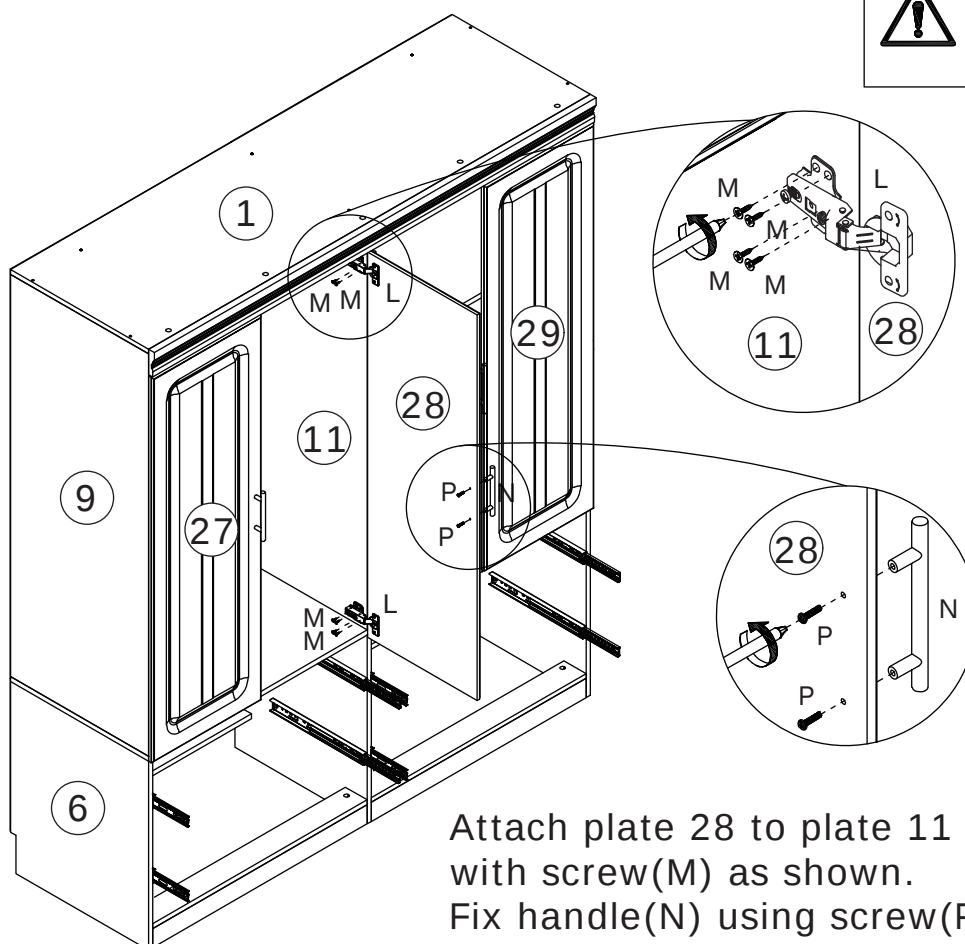 


Attach plate 28 to plate 11 by fixing hinge(L) with screw(M) as shown.
Fix handle(N) using screw(P) as shown.

 26


M x 8  CRD3514A	N x 1  150 x 34 mm	P x 2  CRE0418A	
--	---	--	---

	M  CRD3514A	J  CRD0314A
---	--	--

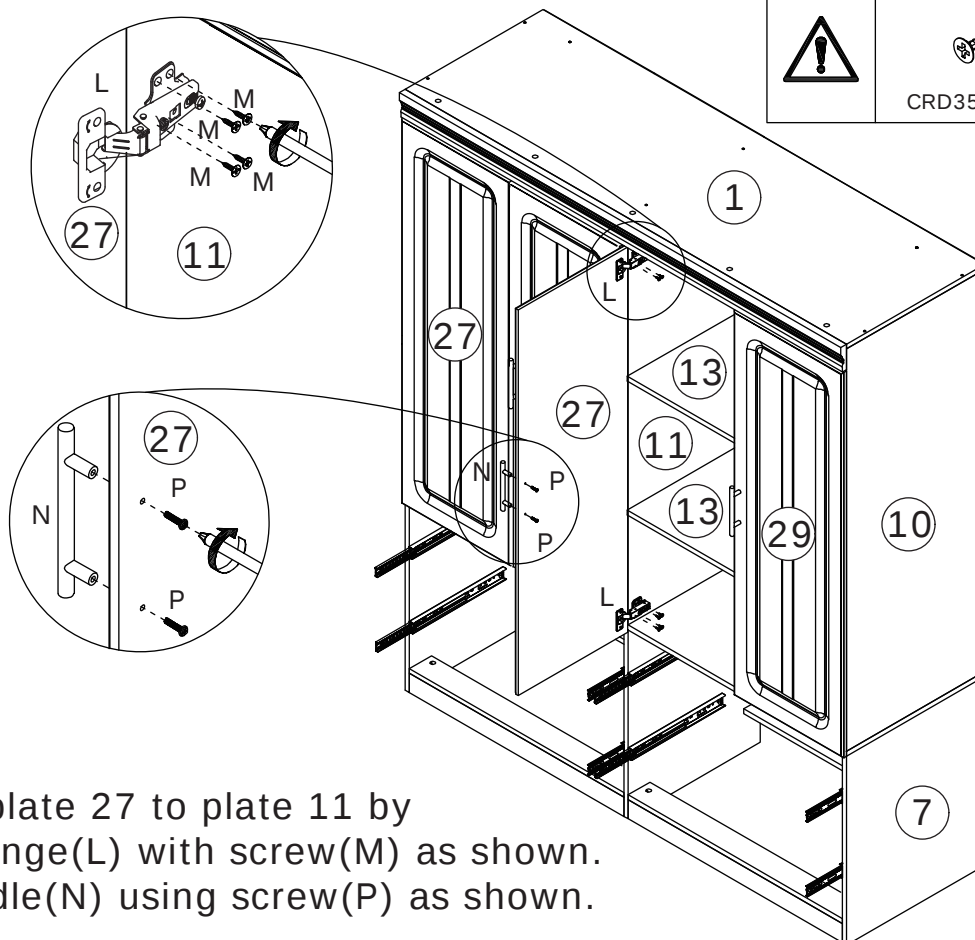 



Attach plate 27 to plate 11 by fixing hinge(L) with screw(M) as shown. Fix handle(N) using screw(P) as shown.

 27

Q x 8 Q1  #4512 16"	R x 16  CRD3512A	
--	---	---

Fix runner(Q) to plate 16 and 17 using screw(R) as shown.


	M  CRD3514A	R  CRD3512A
---	--	--

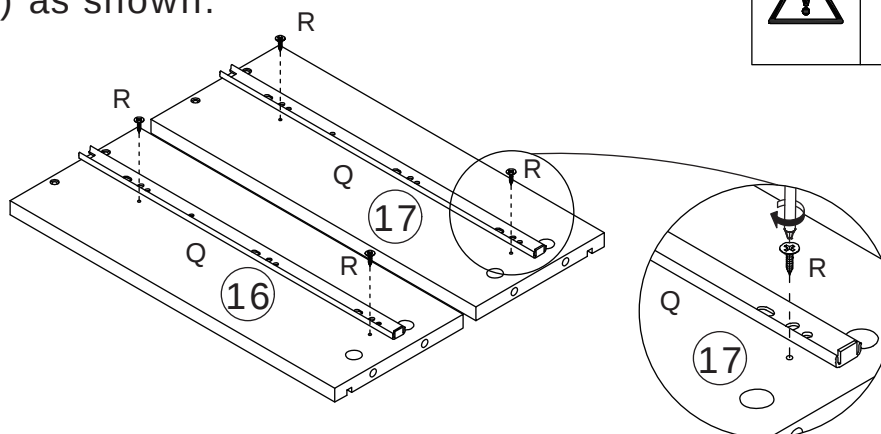  




x4

28

 B x 4



CRA0628A

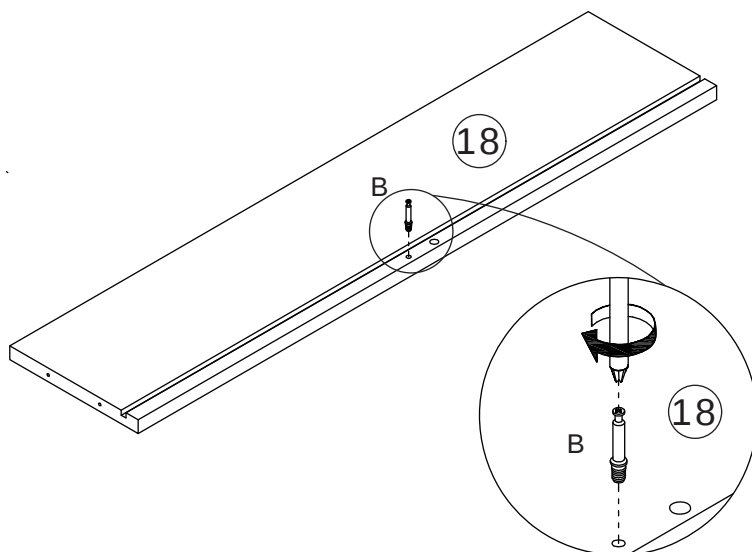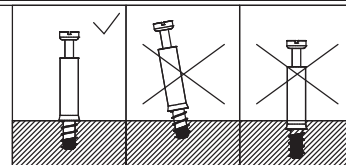   


x4

Insert quickfit screw(B) into plate 18 as shown.


29

 A x 16




CRA0635A

 
B x 4



CRA0628A

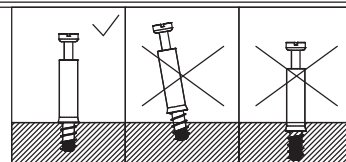 

 Insert quickfit screw(A) and (B) into plate 30 and 31 as shown.

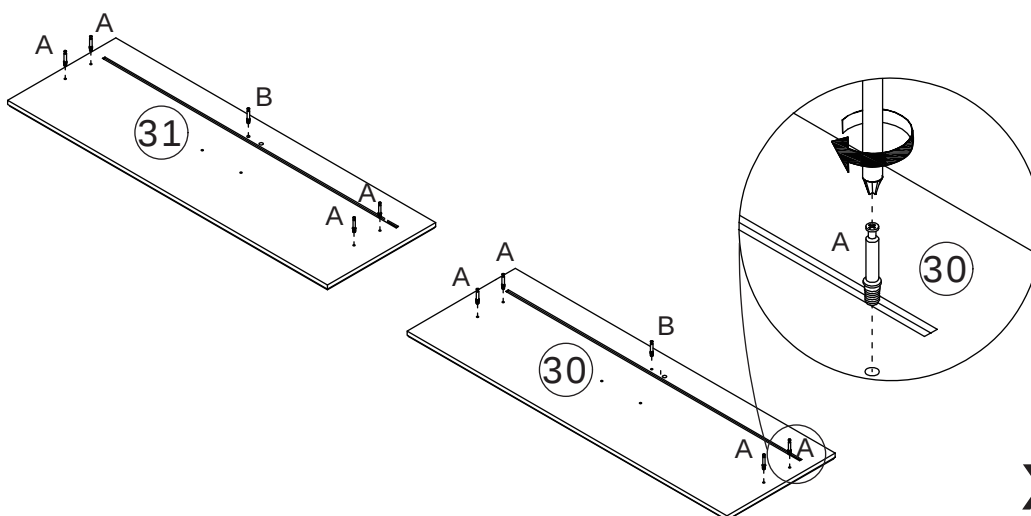

x2


30

C x 10




CRB1595A


 
D x 2



CRF0830A

 


  Attach plate 16, 17 and 20 to plate 30, and turn cam lock(C) clockwise to tighten as shown.

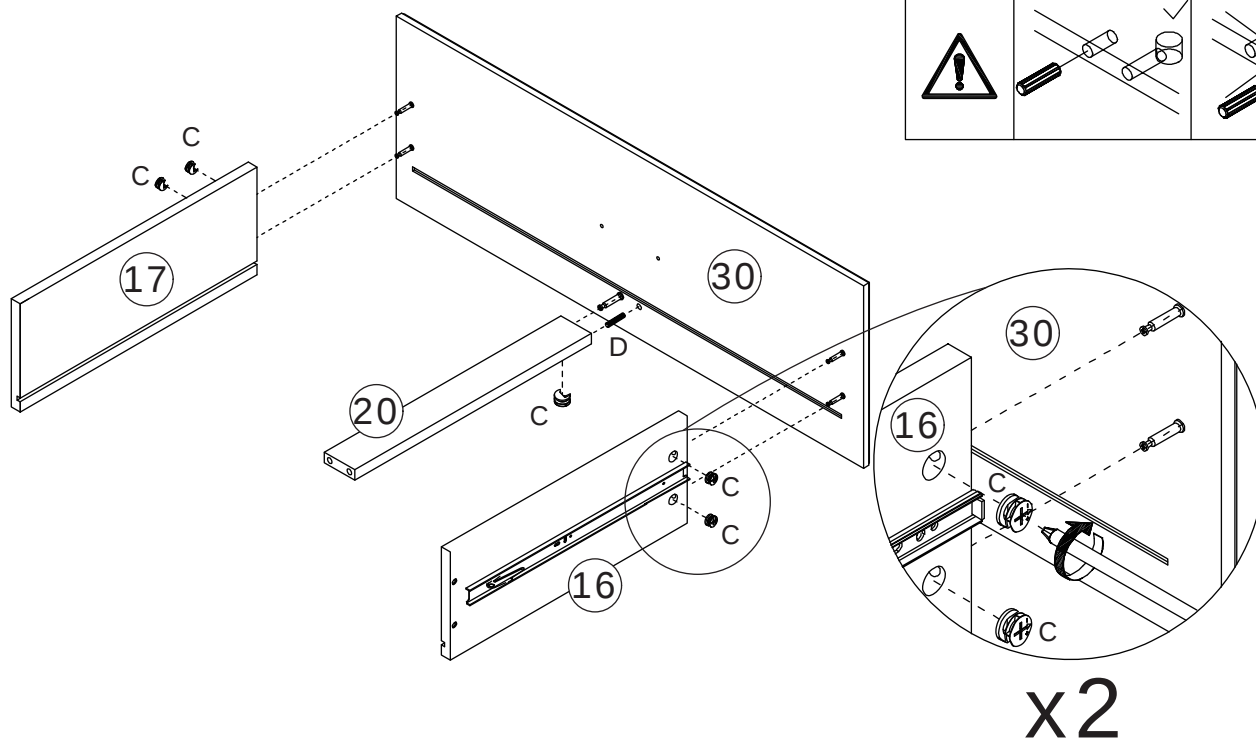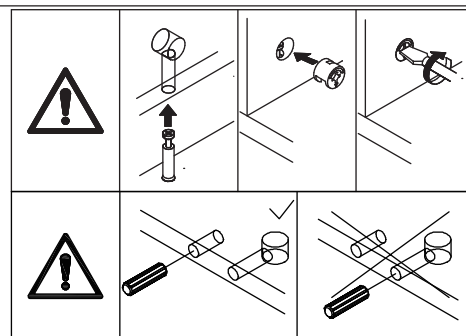



31

 Slide plate 19 along grooves as shown.


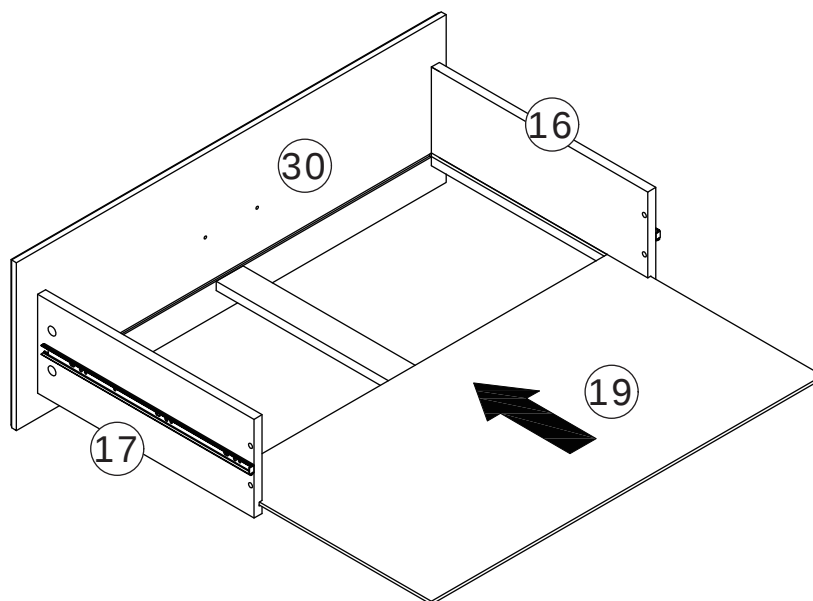


32

 C x 2  CRB1595A	D x 2  CRF0830A
--	--



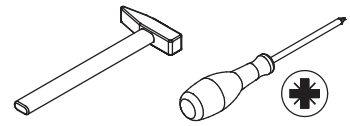 


  Attach plate 18 to plate 19 with wooden dowel(D), then turn cam lock(C) clockwise to tighten as shown.

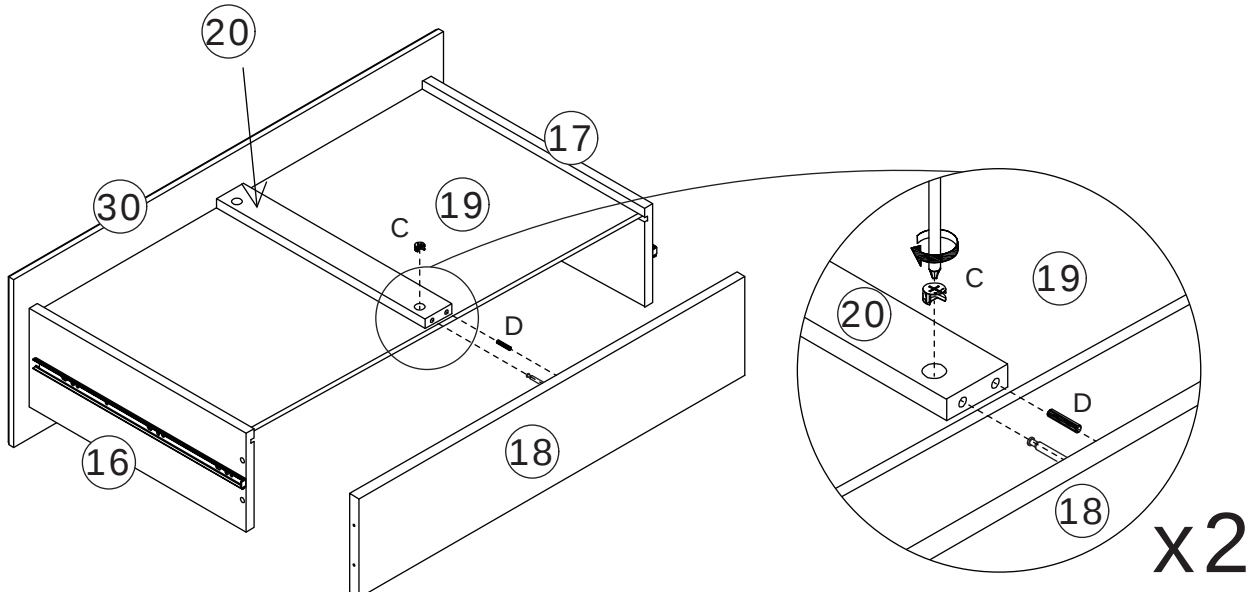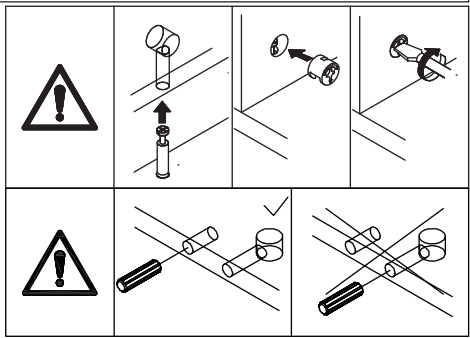

33

 
 
 
F x 8  CRD0430A
--

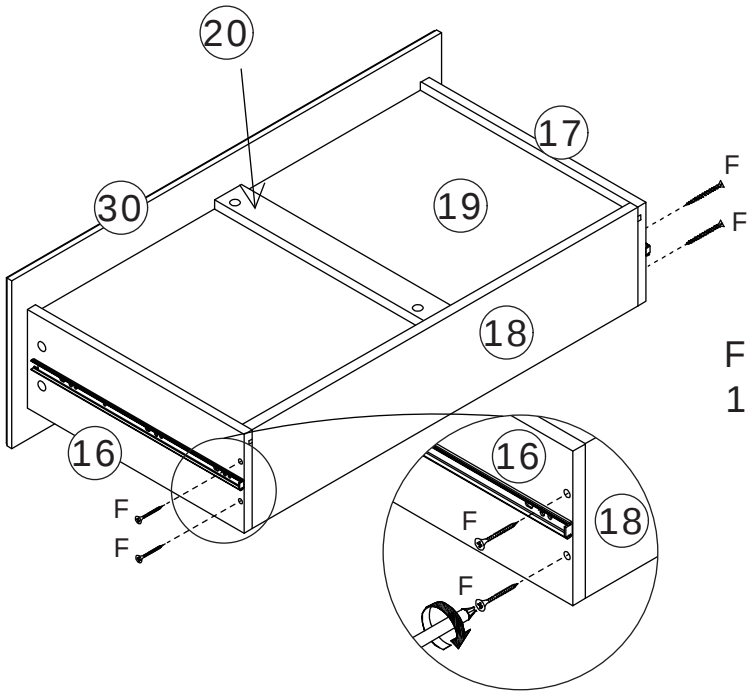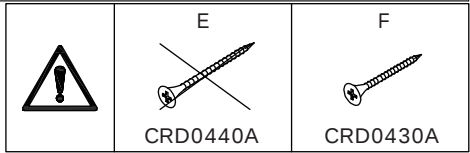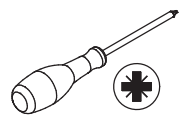


Fix plate 18 to plate 16 and 17 with screw(F) as shown.

x2

   34


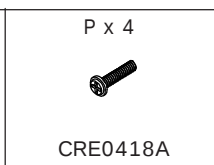
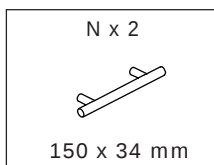


 Fix handle(N) to plate 30 using screw(P) as shown.


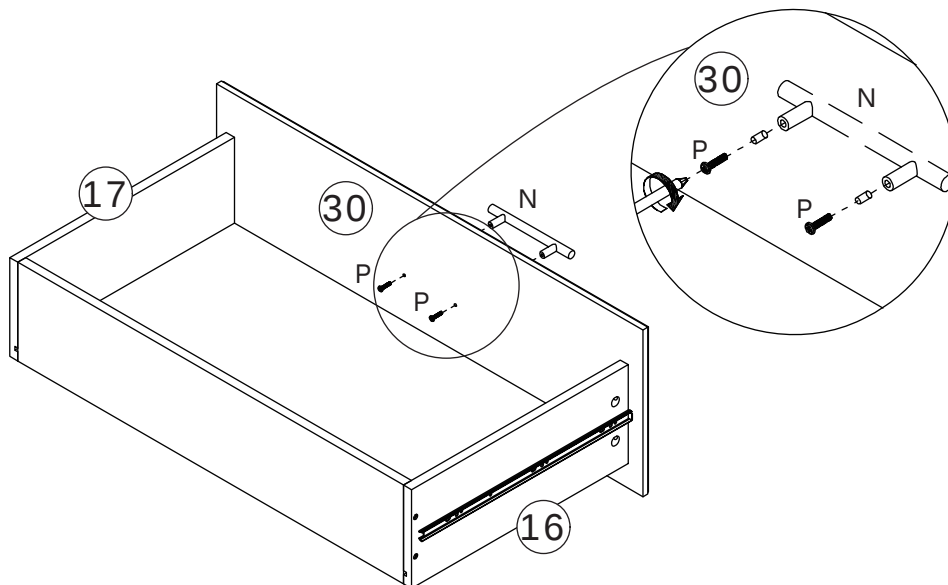


x2

   35

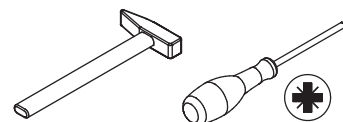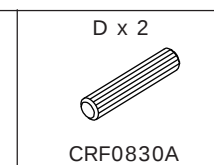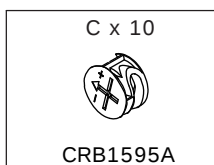

  
Attach plate 16, 17 and 20 to plate 31, and turn cam lock(C) clockwise to tighten as shown.

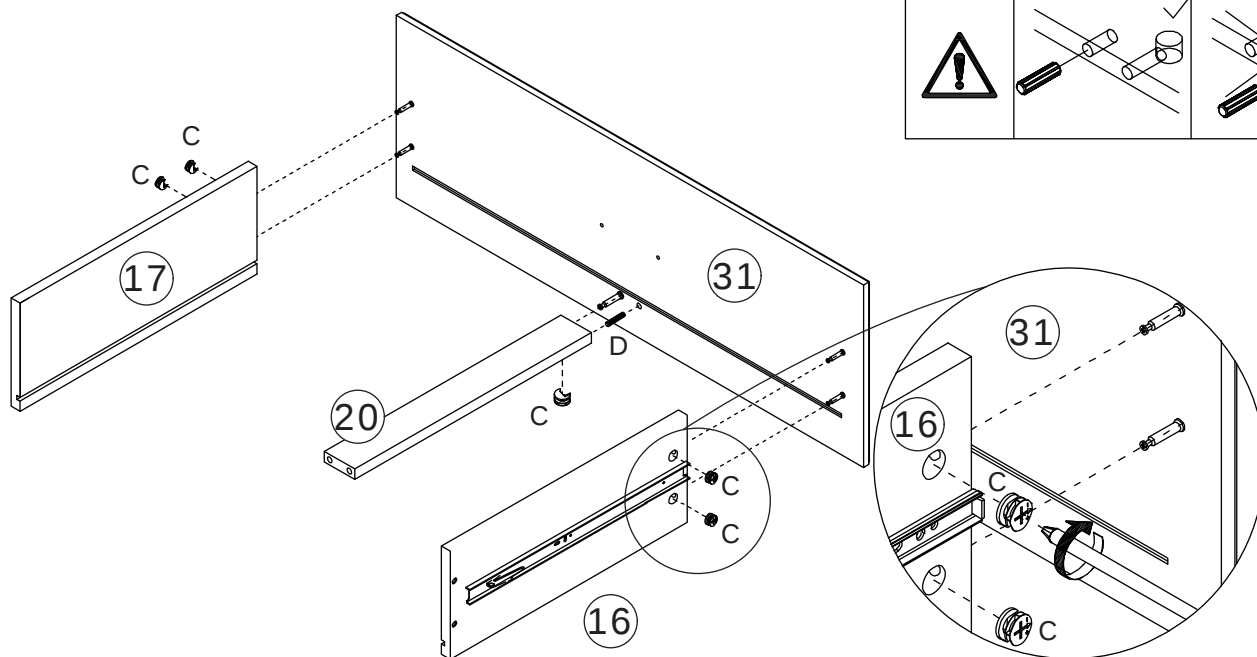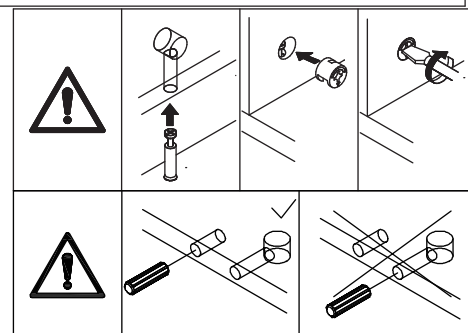

x2

36

 Slide plate 19 along grooves as shown.

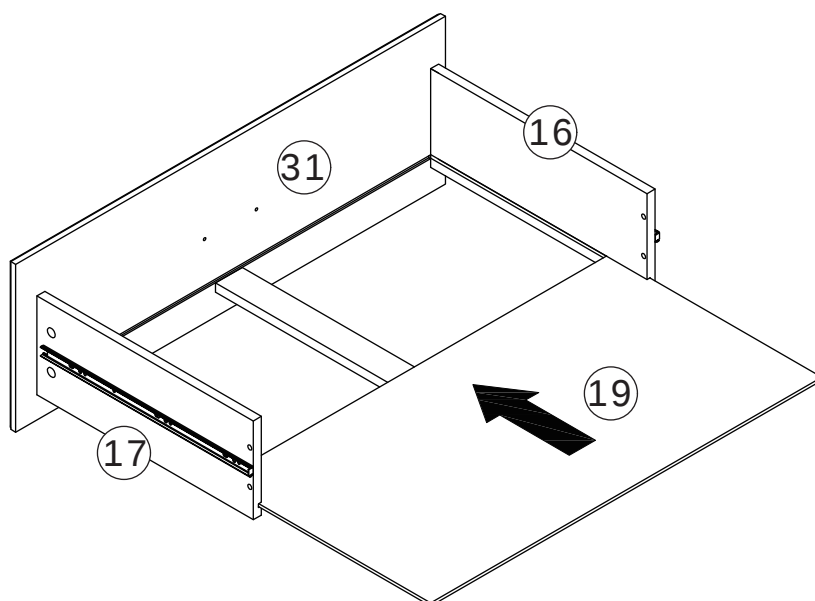

x2


37

C x 2




CRB1595A



 
D x 2



CRF0830A



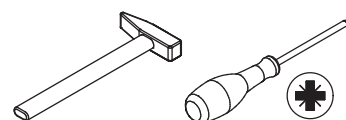 


   Attach plate 18 to plate 19 with wooden dowel(D), then turn cam lock(C) clockwise to tighten as shown.

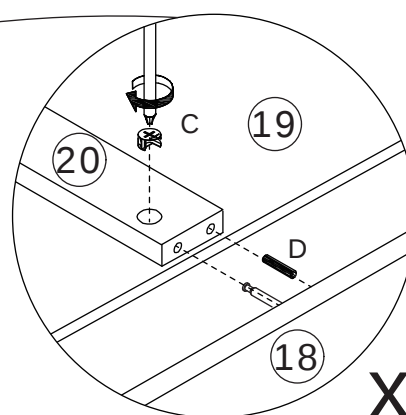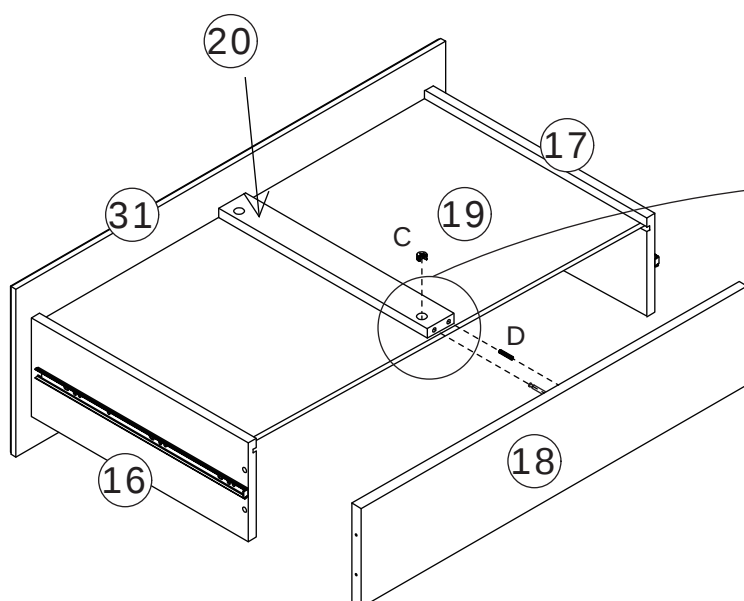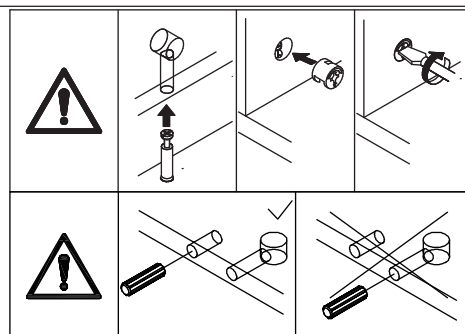

x2


 
 
 
38

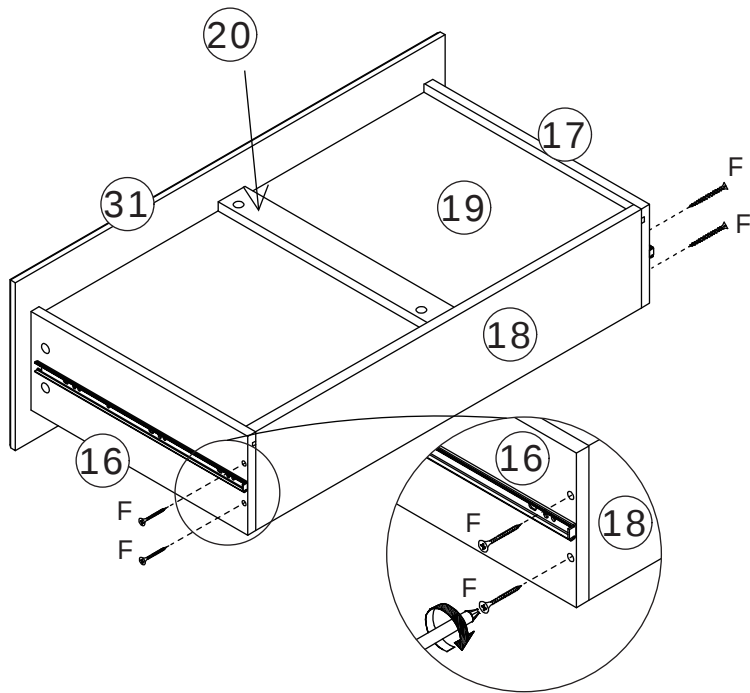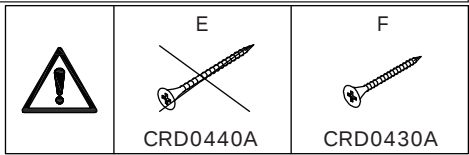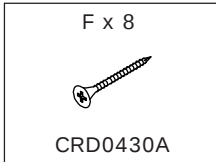

x2


Fix plate 18 to plate 16 and 17 with screw(F) as shown.

    39

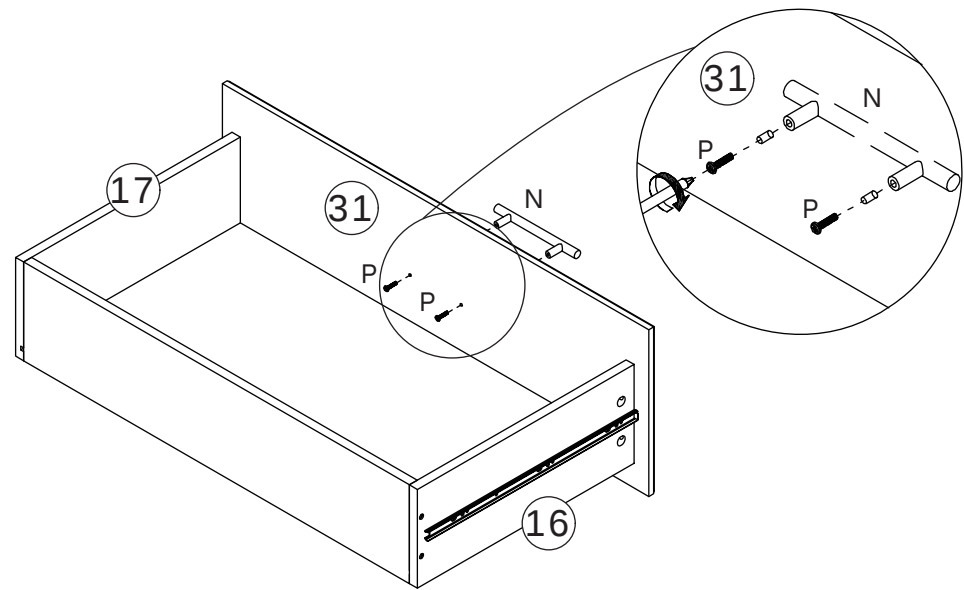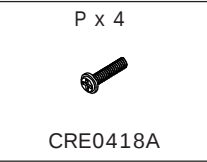
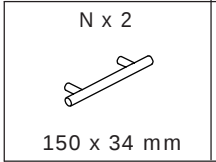


x2

 40








  Install anti-tipping device as shown.
Note: Draw panel 30 is on the left,
and draw panel 31 is on the right.

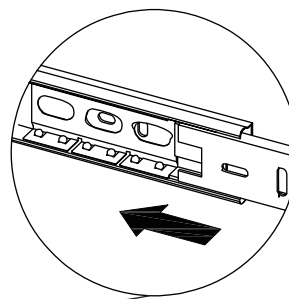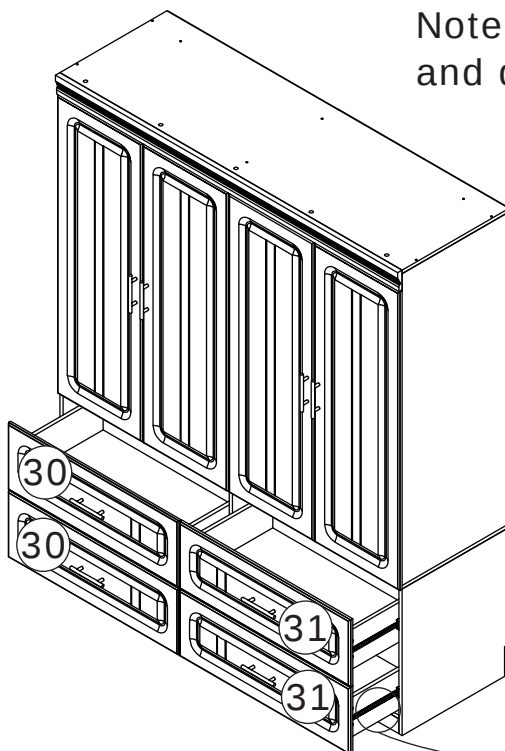














41

     V x 2

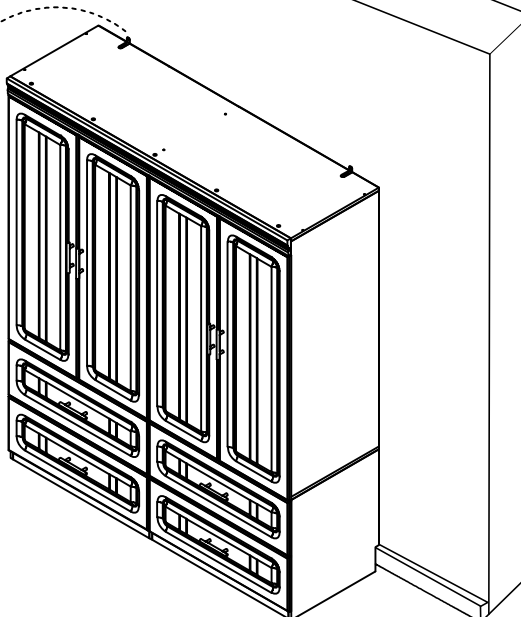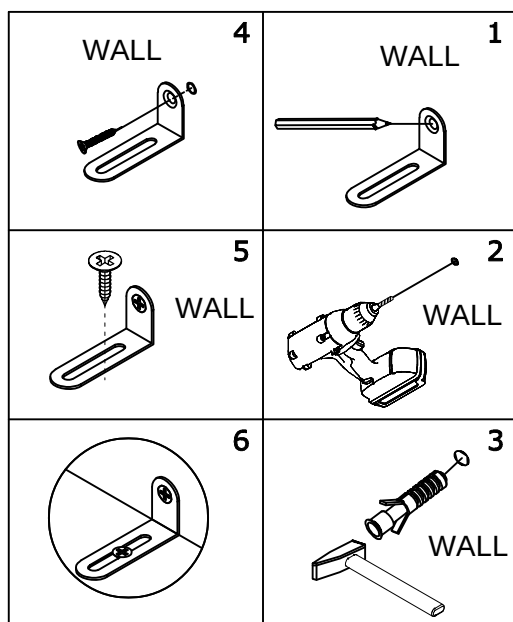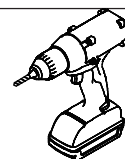

If doors are still not aligned if the hinges are properly correctly, please watch the video.
             
<https://youtu.be/n0Lb36SoODM>

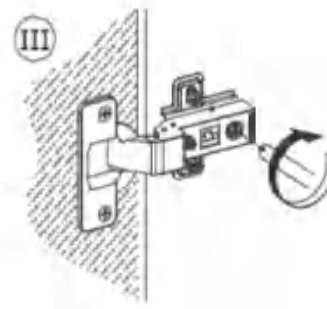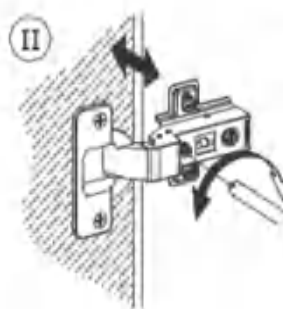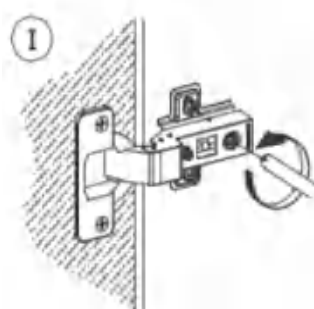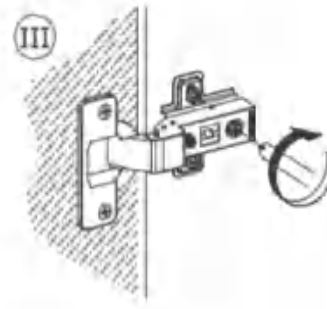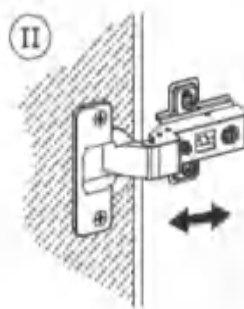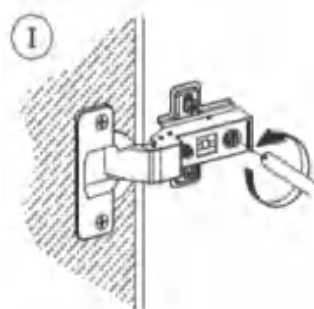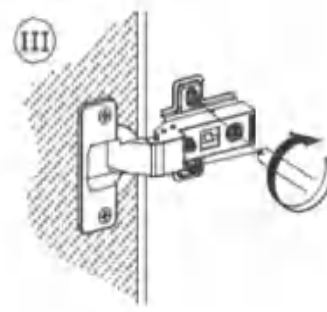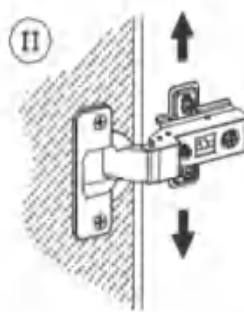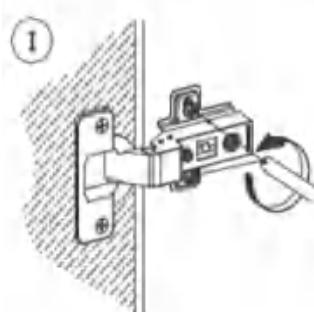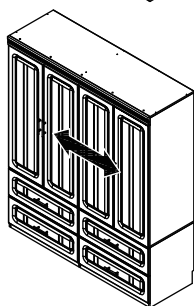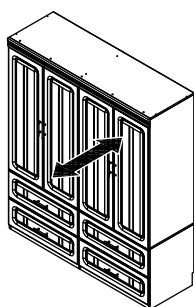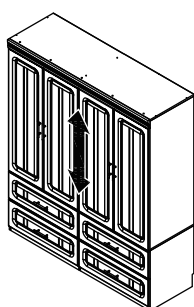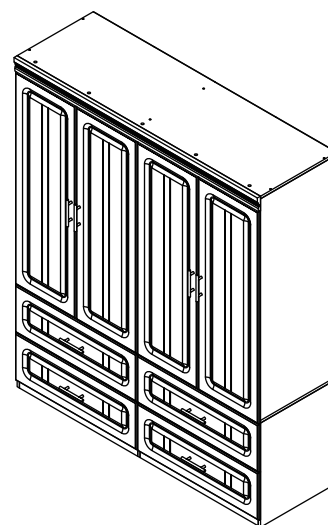

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

 
- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.



INSTALLATION

Product Manual

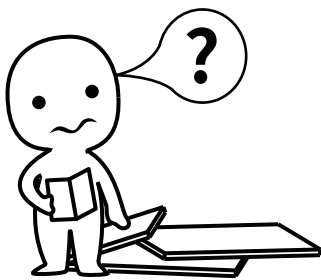


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

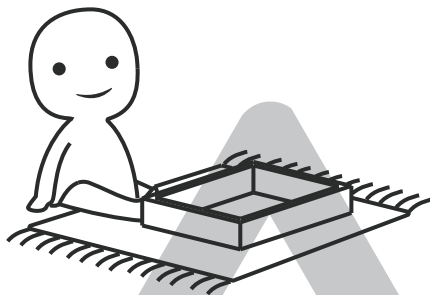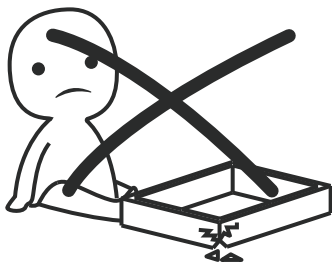



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

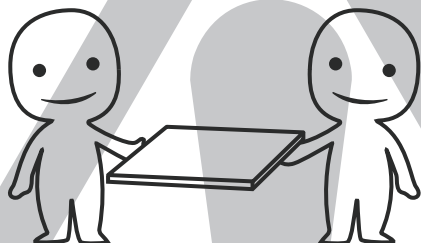

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

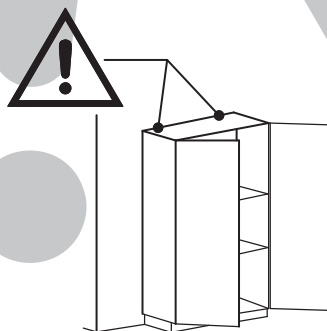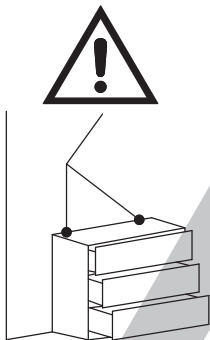

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

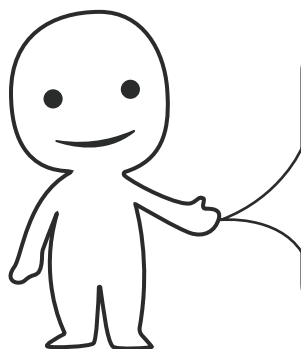


Please prepare the following tools

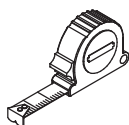    

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 17




CRA0635A

B x 17



CRB1595A

 C x 8



CRF0830A

D x 18




CRE0312A

E x 2




28 x 14 mm

 F x 4



DGA861A

 G x 4



DGA861B

H x 48



CRD3514A

J x 2



15.5 x 10 x 1.2 mm

K x 6



CRD0316A

L x 4




20 x 23 mm

M x 4



 CRE0418A

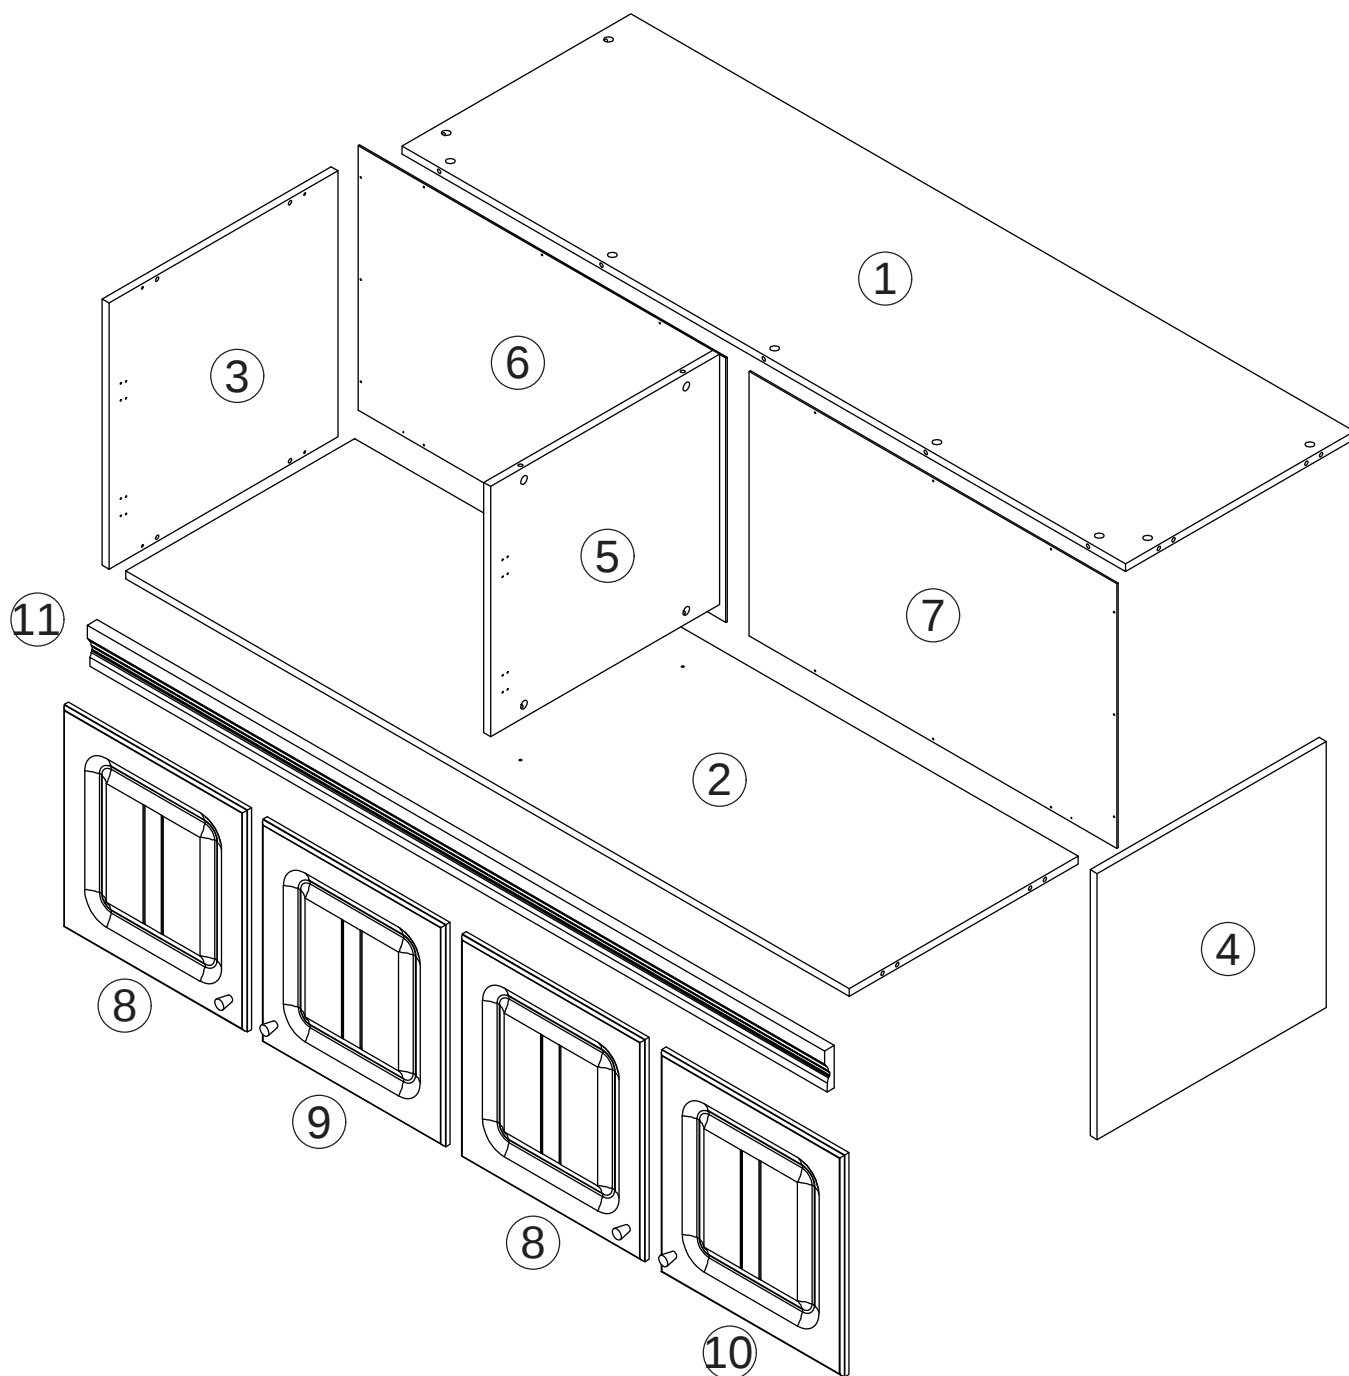


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


 
*This is a permanent label.
Do not remove!*

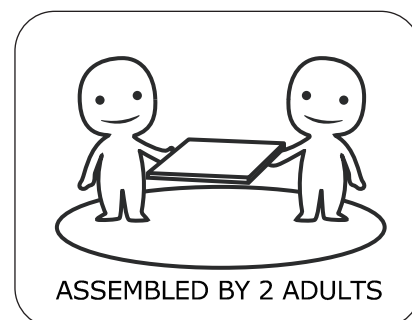



1

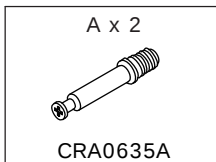  

  
Insert quickfit screw(A) into plate 1 with a screwdriver as shown.

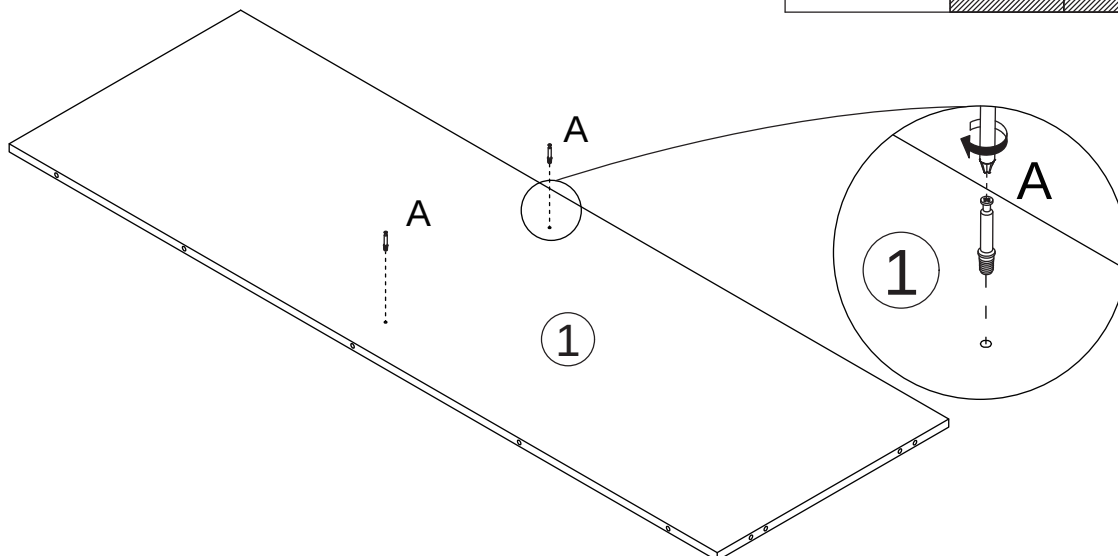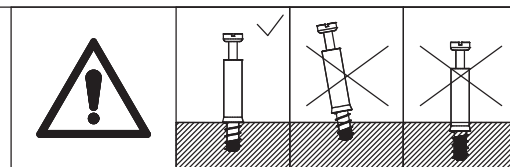


2

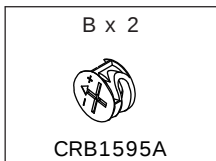  


 
Attach plate 5 to plate 1, put cam lock(B) into holes in plate 5 and turn clockwise to tighten as shown.

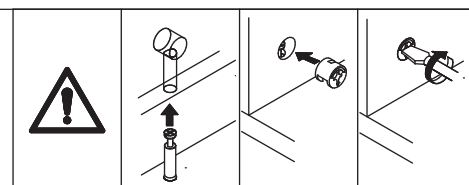



Facing in a same direction

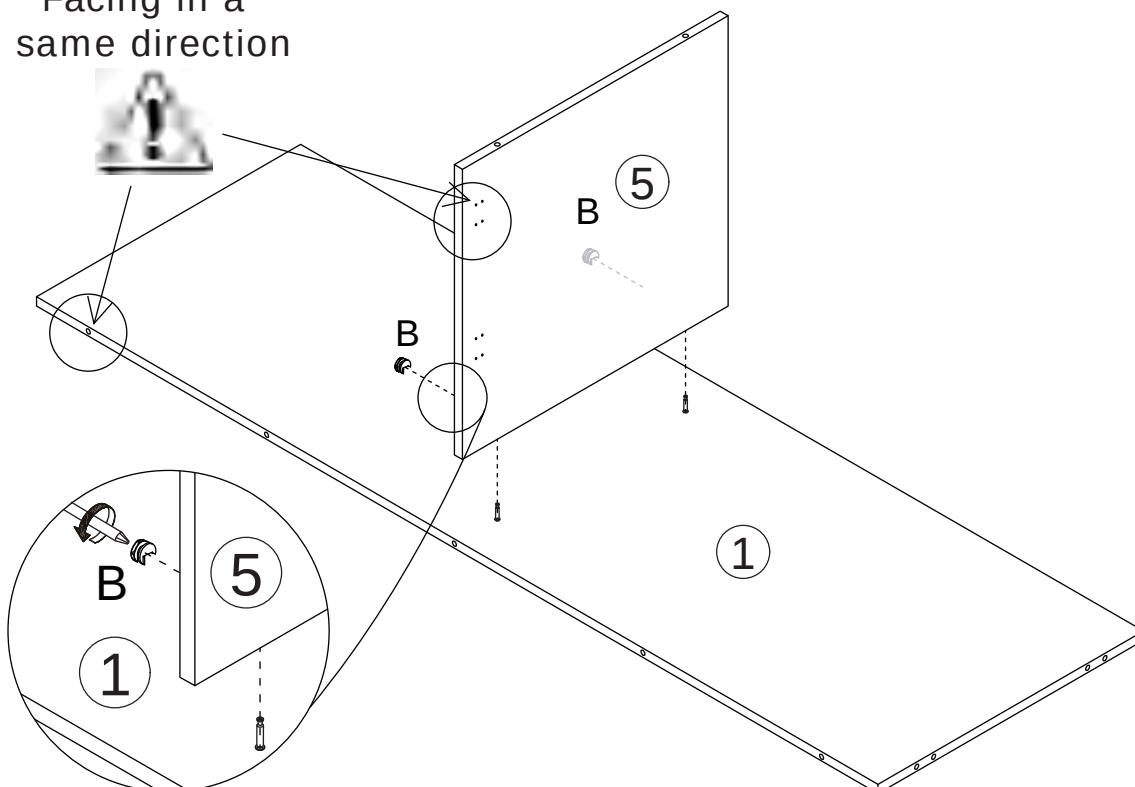 





3

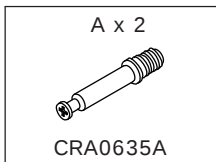  

  Insert quickfit screw(A) into plate 2 with a screwdriver as shown.

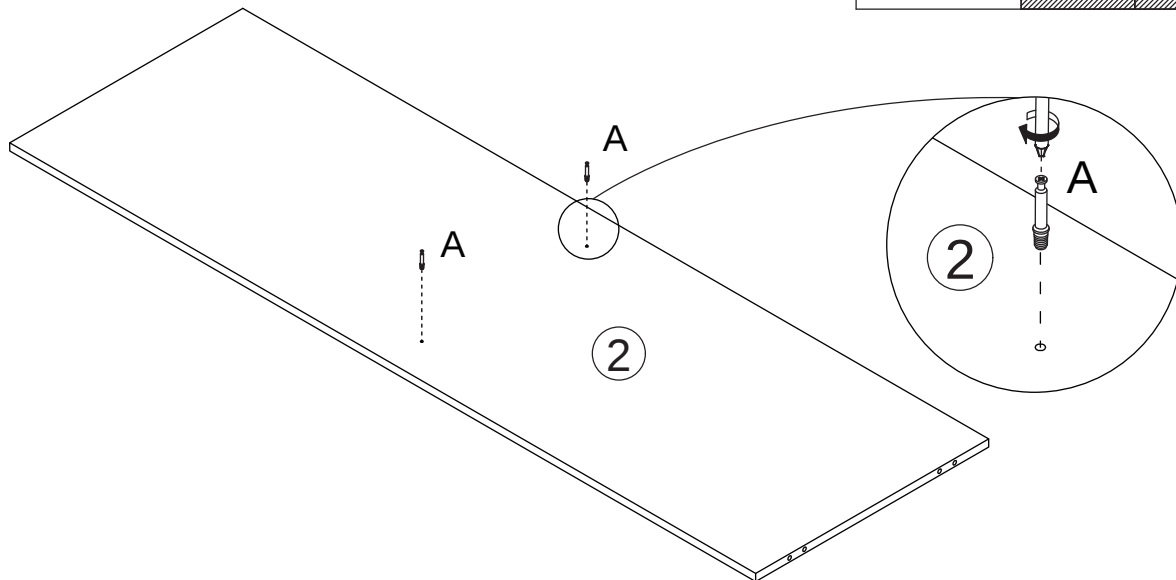
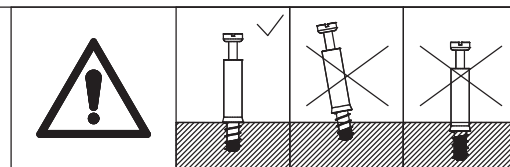


4

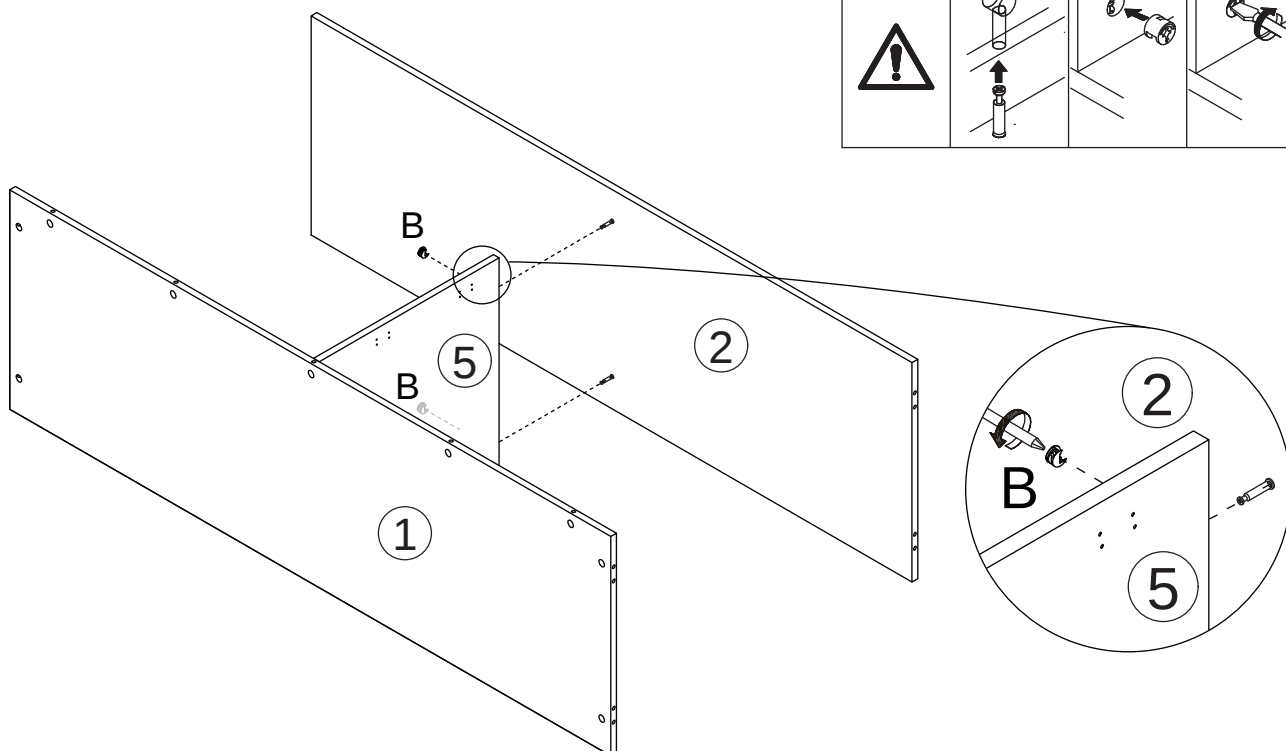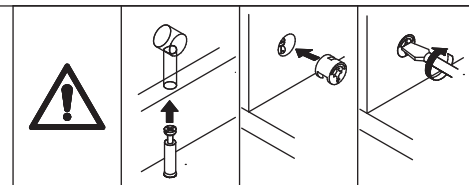   
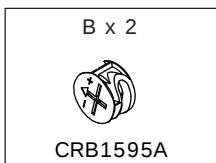 


Attach plate 2 to plate 5, put cam lock(B) into holes in plate 5 and turn clockwise to tighten as shown.


 
 
5

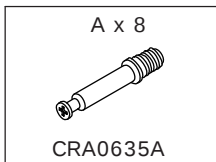

  
Insert quickfit screw(A) into plate 3 and 4 with a screwdriver as shown.

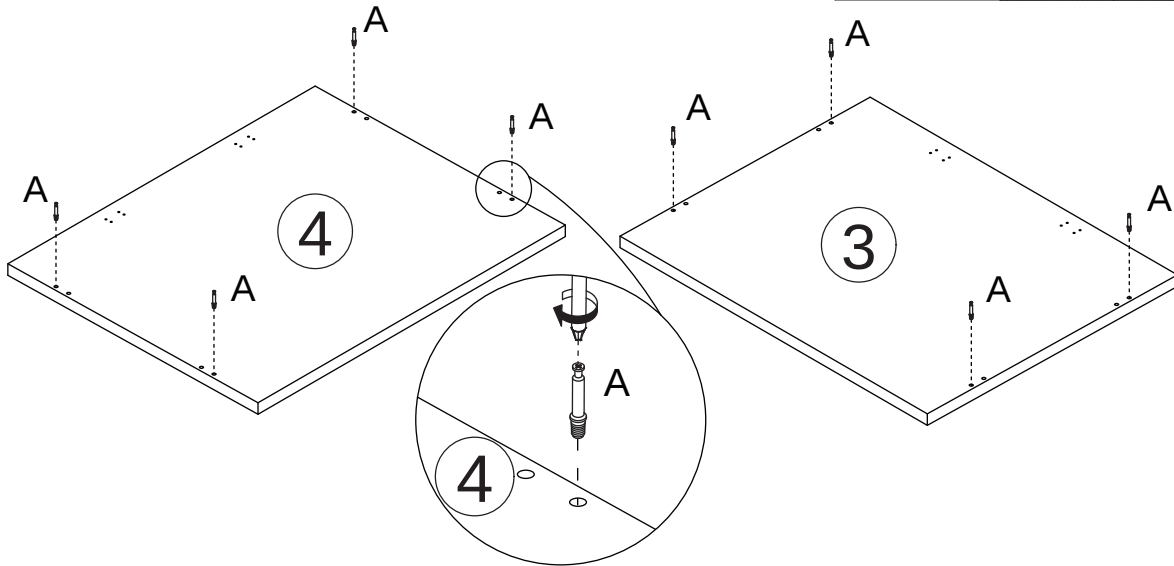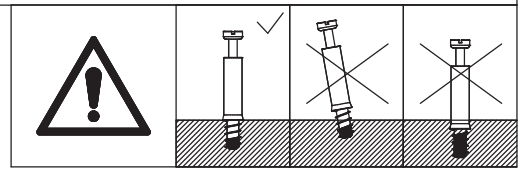


6

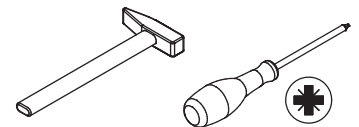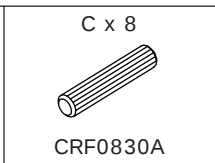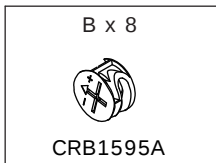   


 
Insert wooden dowel(C) into plate 1 and 2 at first, attach plate 3 and 4 to. Put cam lock(B) into holes in plate 1,2 and turn clockwise to tighten as shown.

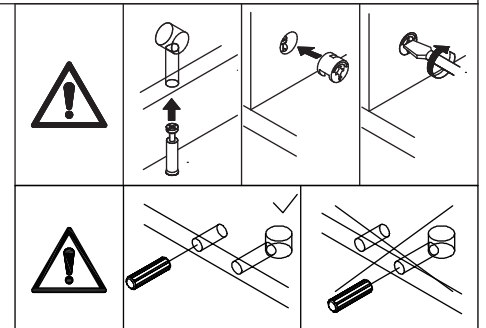



Face up

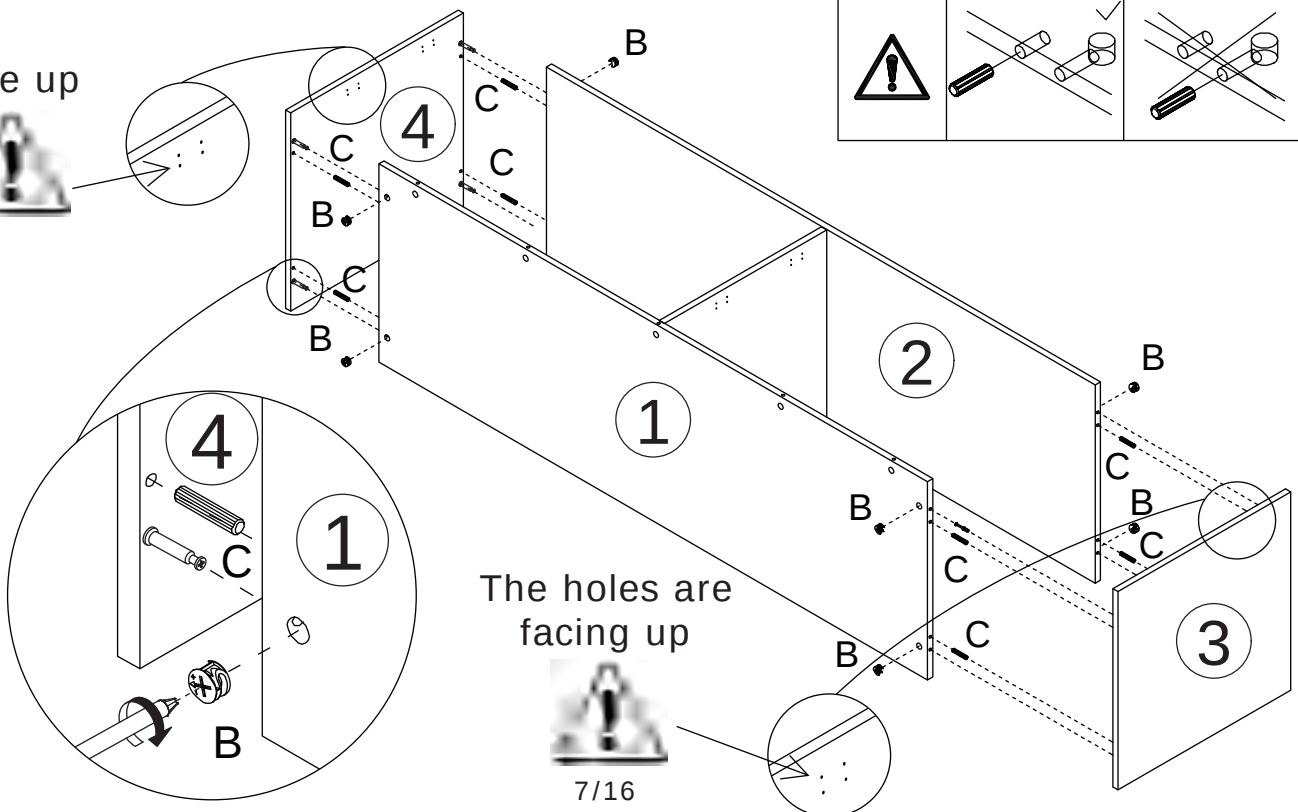 



7

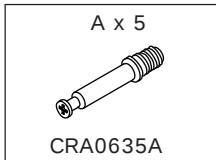  

 
 
Insert quickfit screw(A) into plate 11 with a screwdriver as shown.

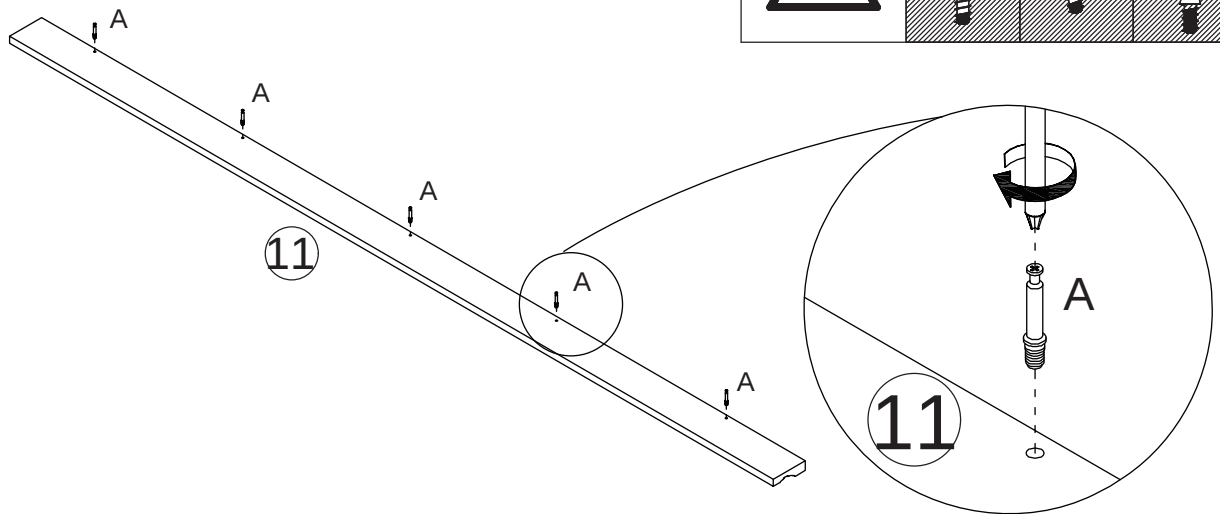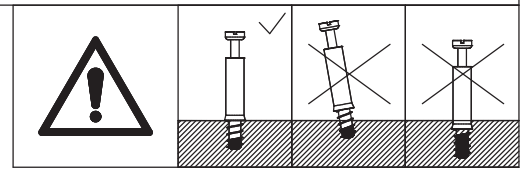


8

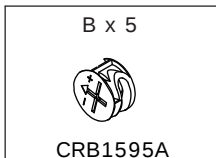  

  
Attach plate 11 to plate 1, put cam lock(B) into holes in plate 1 and turn clockwise to tighten as shown.

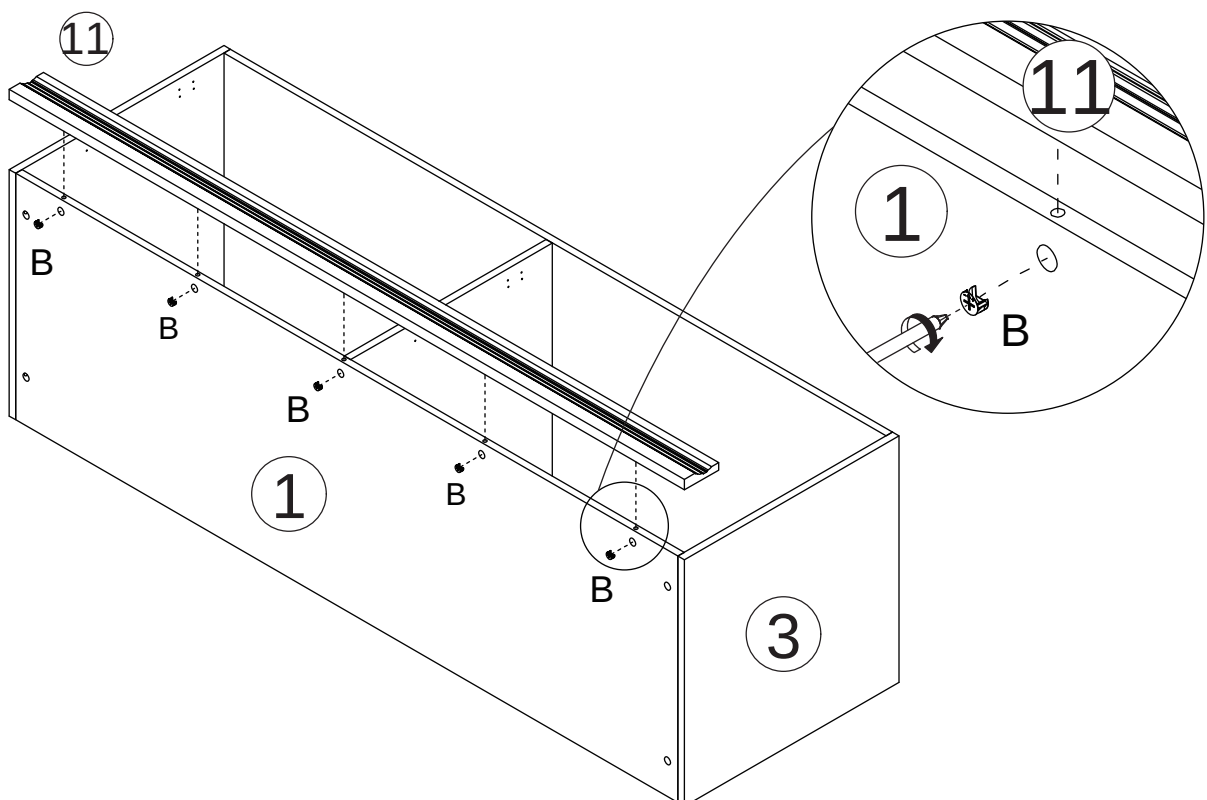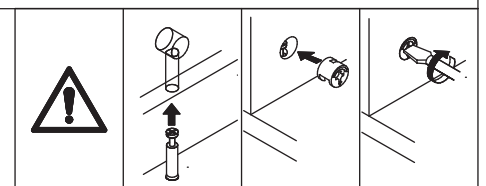


9

 D x 18  CRE0312A	J x 2  15.5 x 10 x 1.2 mm	K x 2  CRD0316A	
---	--	--	---

 
Fix back plate 6 and 7 to the cabinet with screw(D) as shown.
Fix plate 6 and 7 together using part(J) with screw(K) as shown.

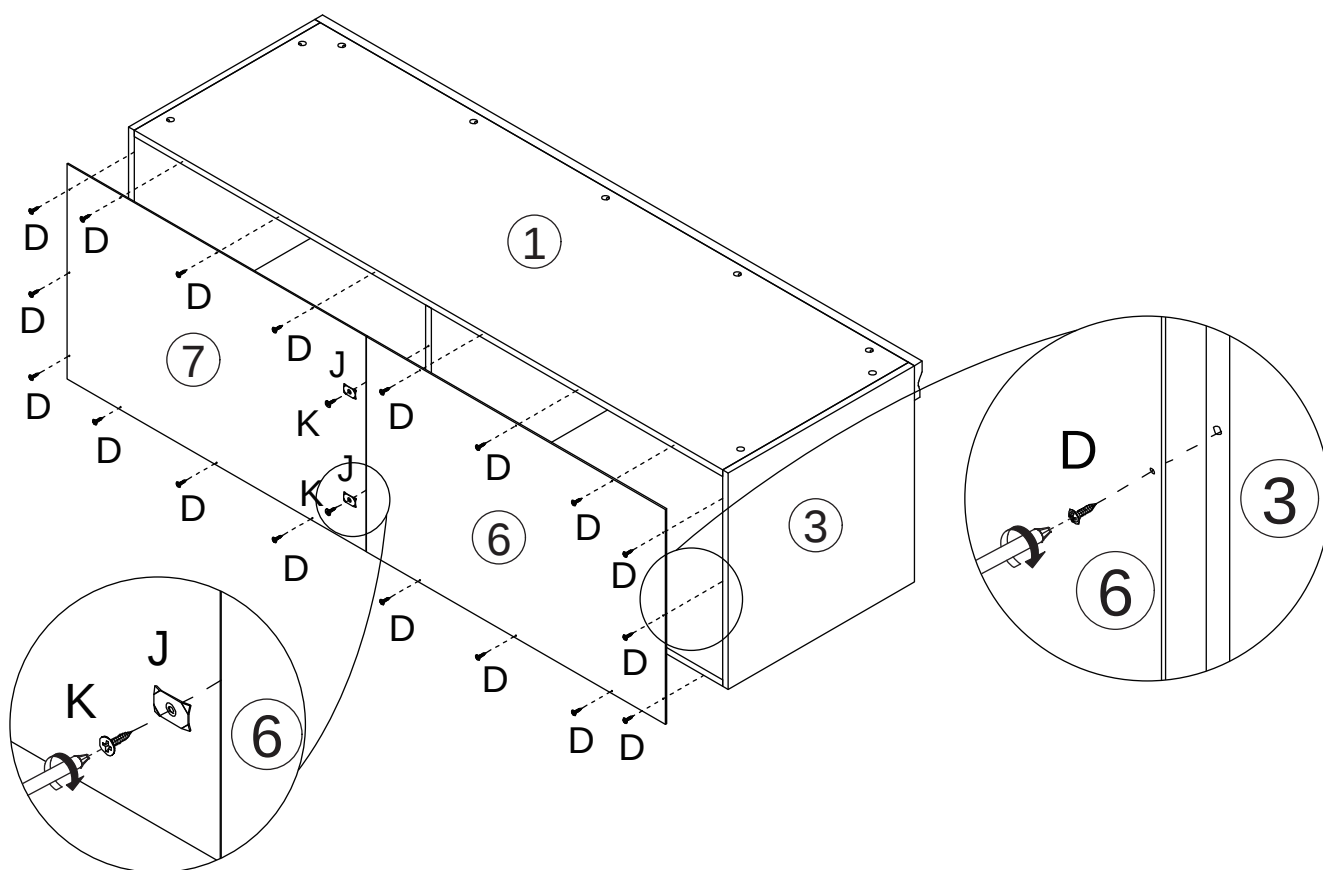

 Please note, here are two different types of hinges.
The full coverage door hinges(F) are used on outermost door panel.
The curved door hinges(G) are used on the door panel in the middle of the cabinet.




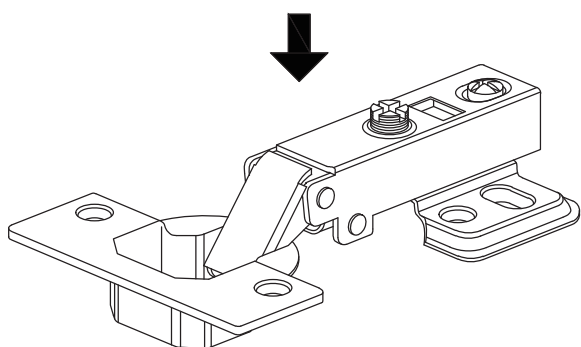
**F**

 Full overlay hinge

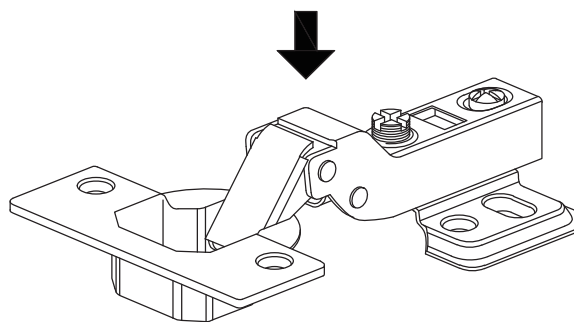**G**


Half overlay hinge

   
 
11

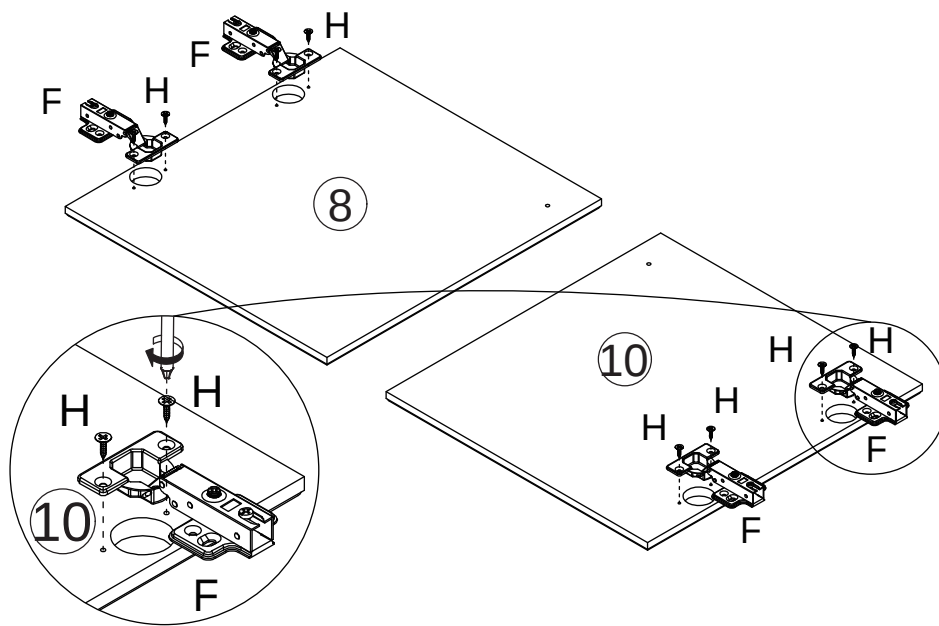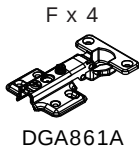

Fix hinge(F) to plate 8 and 10 respectively with screw(H) as shown.
Please note, hinge(F) is used in this step.

 12

H x 16  CRD3514A	L x 2  Ø20 x 23 mm	M x 2  CRE0418A	
---	---	--	---

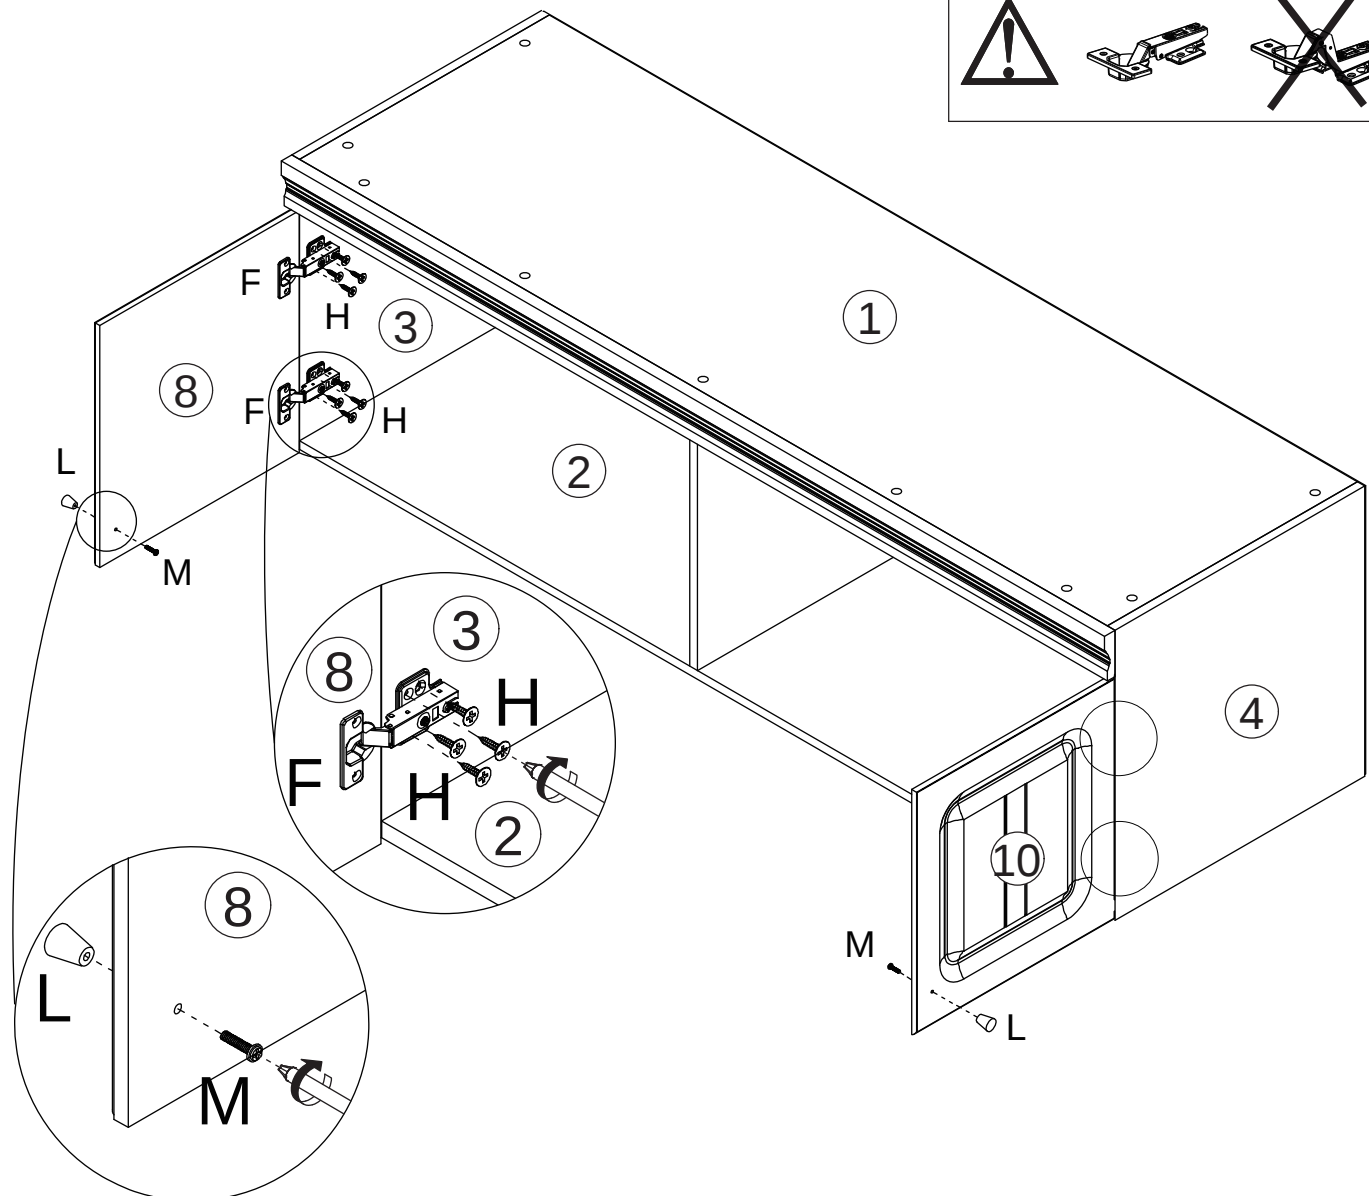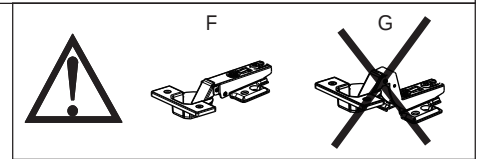  

Attach plate 8 to plate 3; plate 10 to plate 4 by fixing hinge(F) with screw(H) as shown.
Fix knob(L) to door plates with screw(M) as shown.


13



H x 8





 CRD3514A



Fix hinge(G) to another plate 8 and 9 with screw(H) as shown.

  Please note, hinge(G) is used in this step.

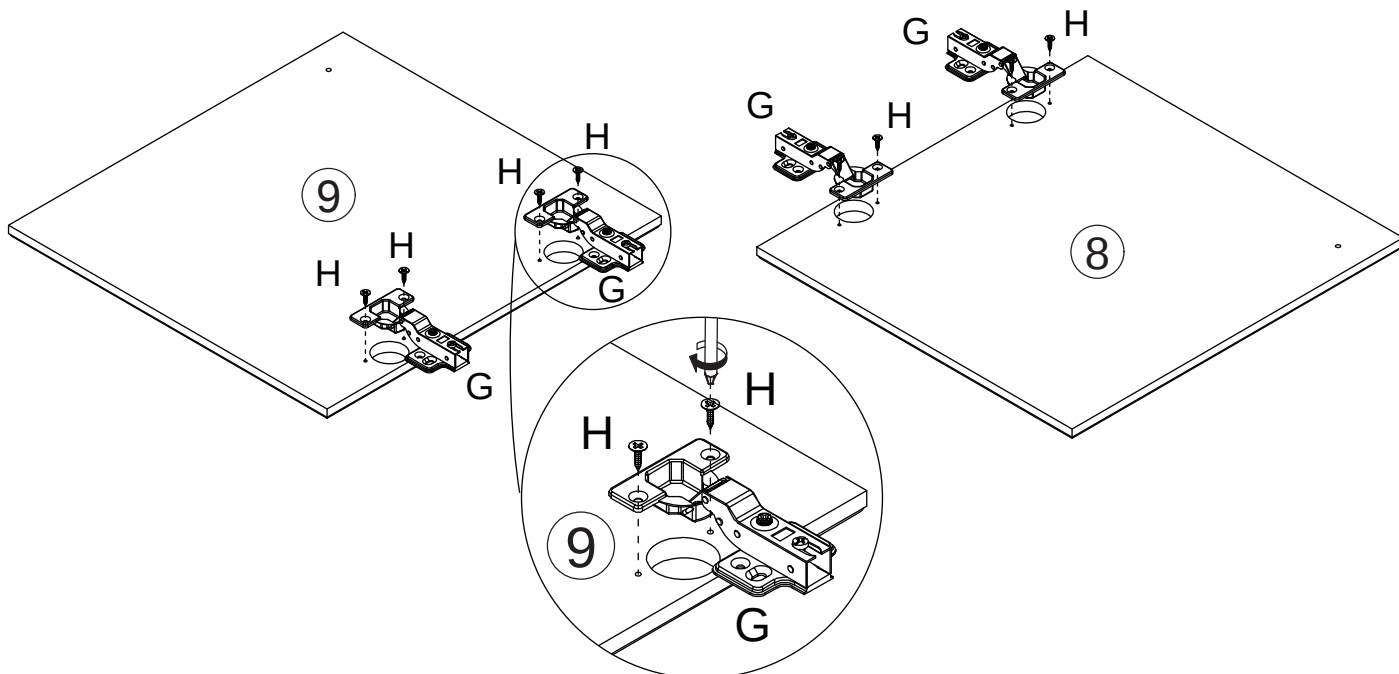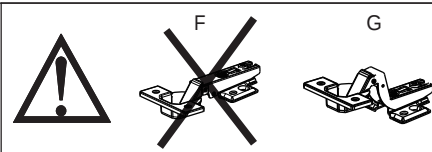

14

H x 8



CRD3514A

L x 1






Ø 20 x 23 mm

M x 1





   
CRE0418A

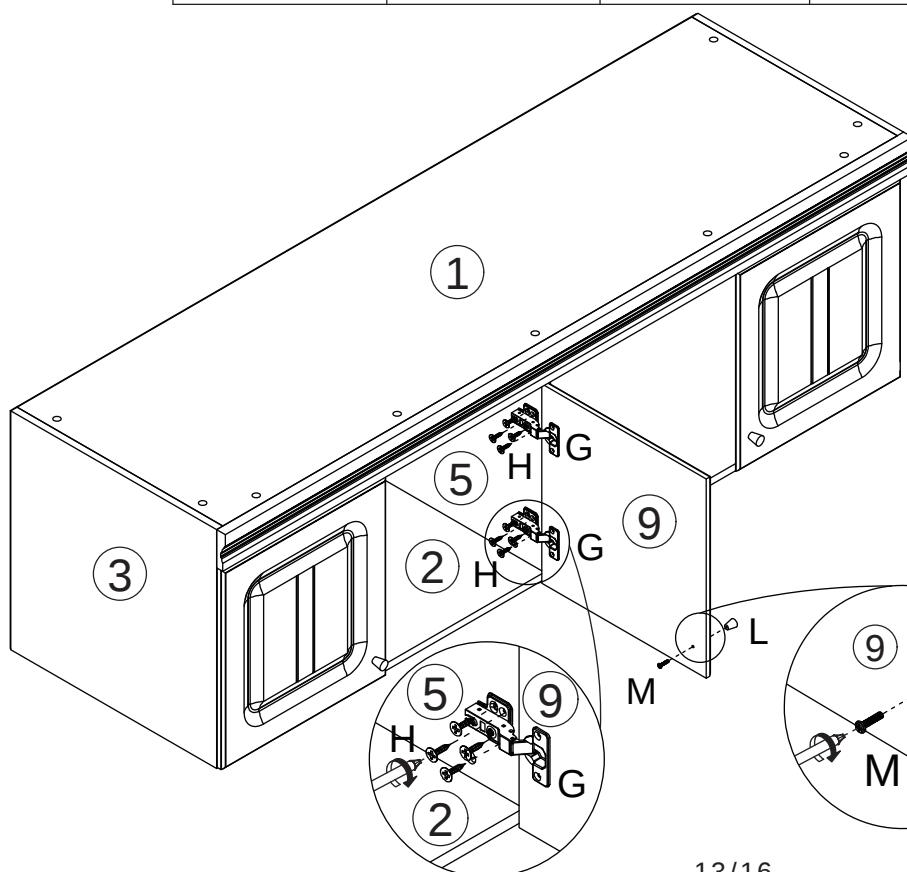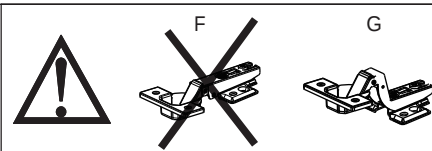

Attach plate 9 to plate 5 by fixing hinge(G) with screw(H) as shown.
Fix knob(L) to door plate with screw(M) as shown.

  15












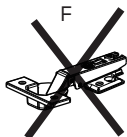
H x 8  CRD3514A	L x 1  Ø 20 x 23 mm	M x 1  CRE0418A	
  			

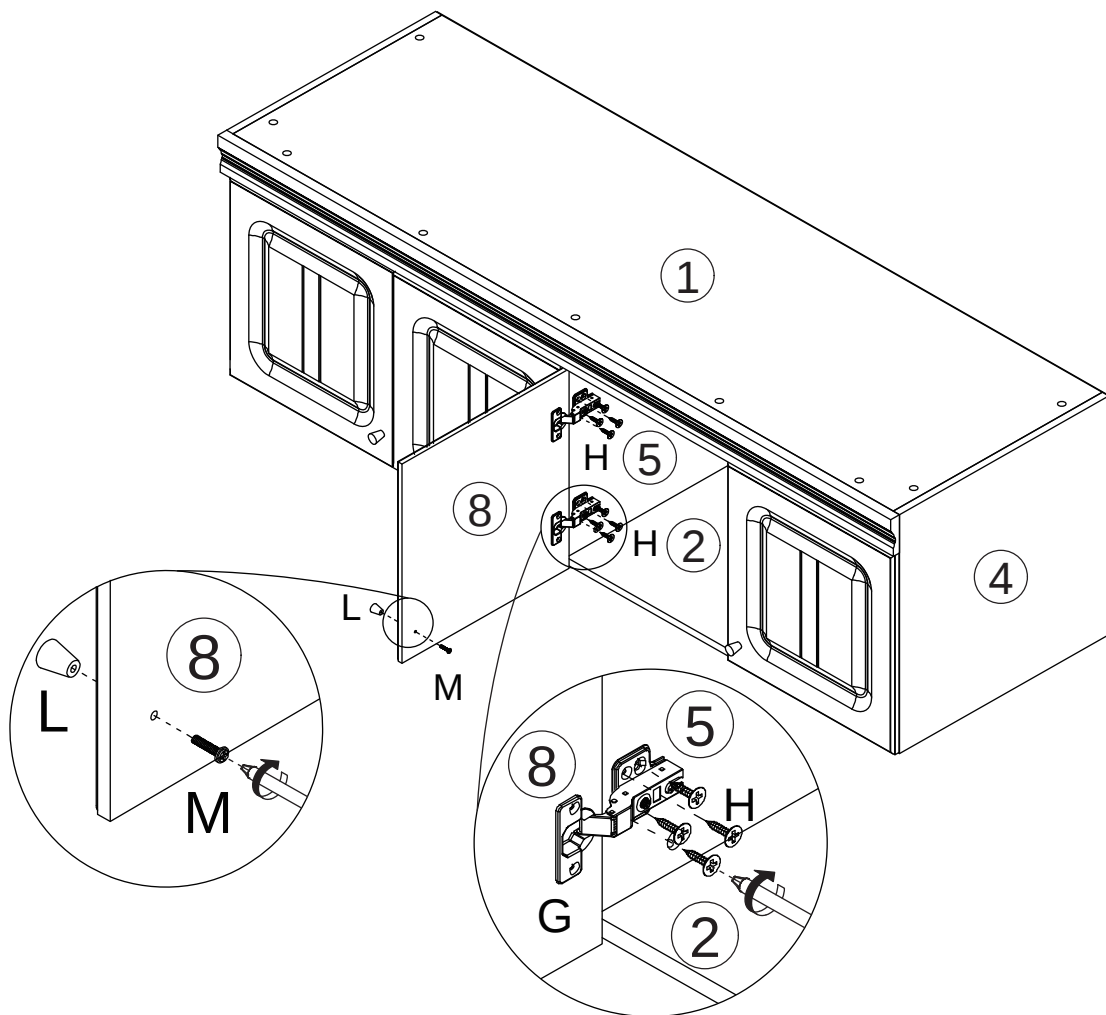 

Attach another plate 8 to plate 5 by fixing hinge(G) with screw(H) as shown. Fix knob(L) to door plate with screw(M) as shown.

If doors are still not aligned if the hinges are properly correctly, please watch the video.
            
<https://youtu.be/n0Lb36SoODM>

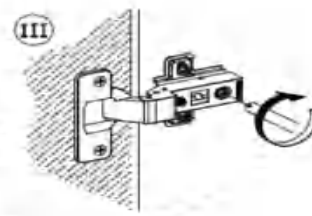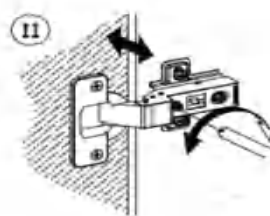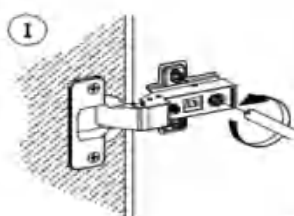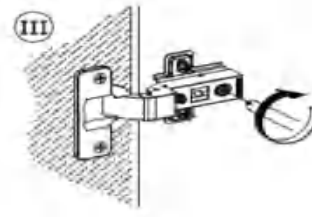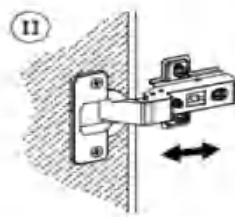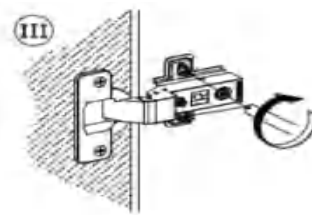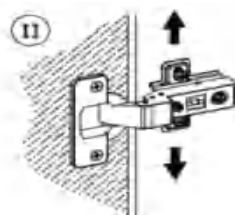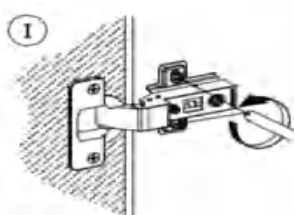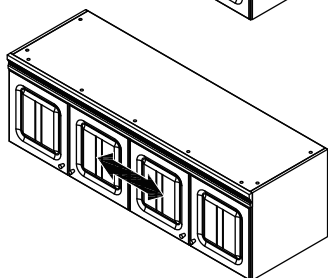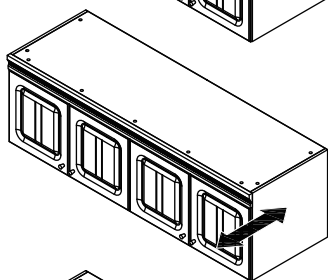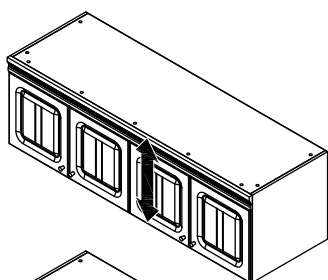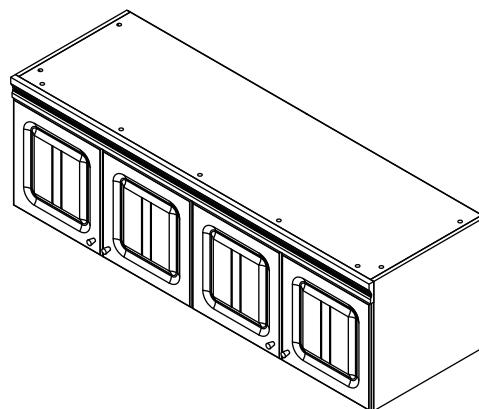

17

E x 2




28 x 14 mm



K x 4



 CRD0316A



  Connect the cabinet with wardrobe using part(E) with screw(K) as shown.

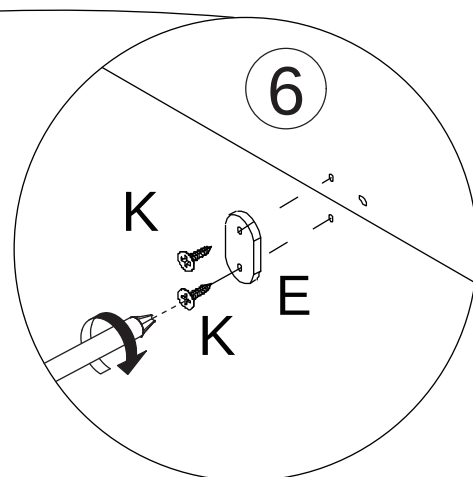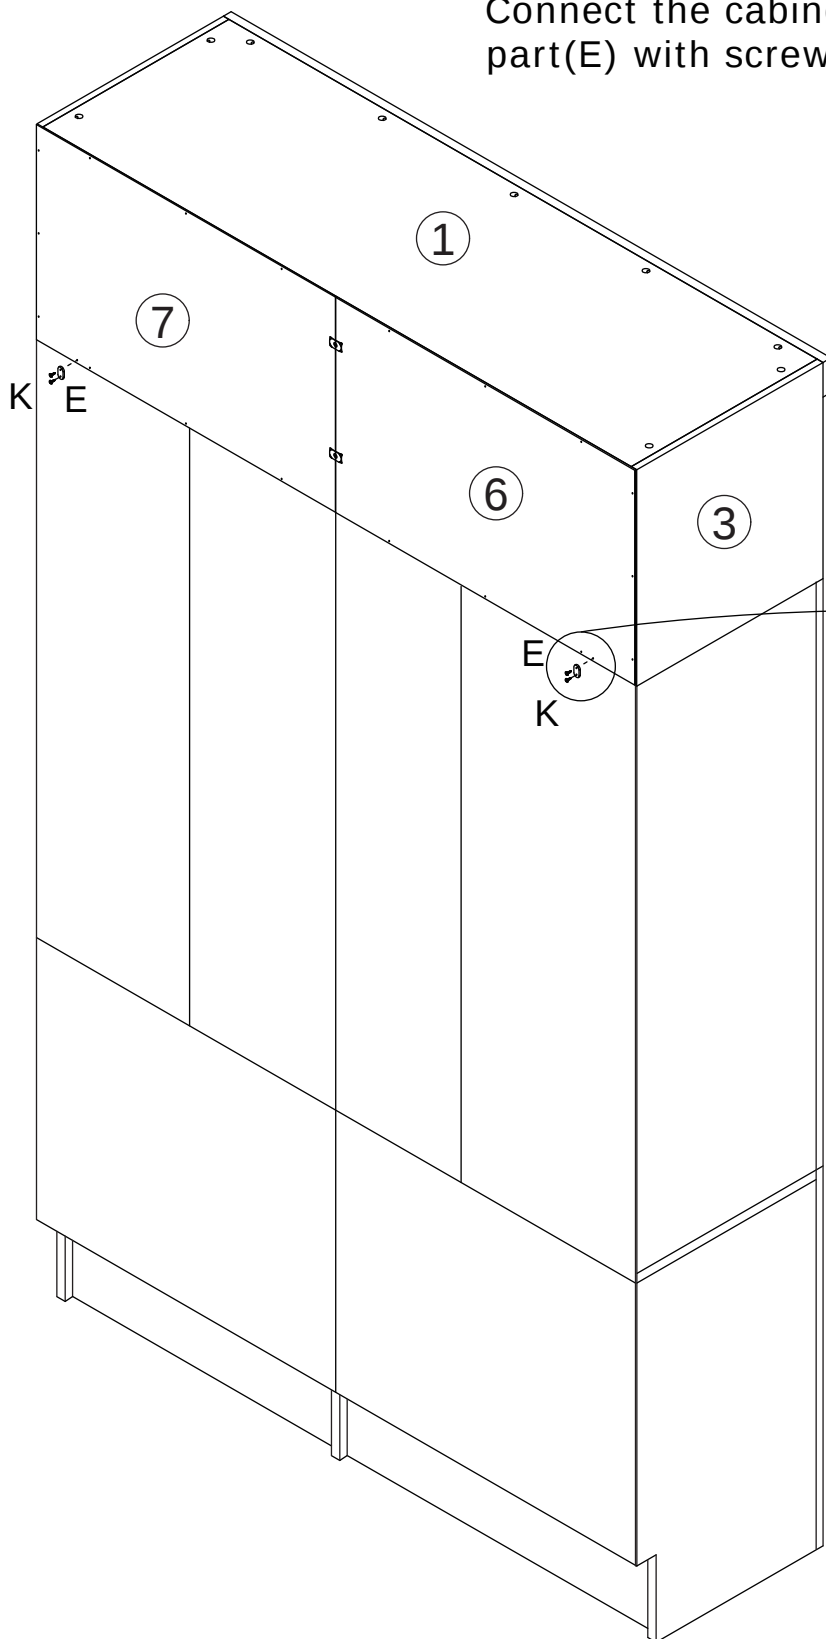

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

 
- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.



INSTALLATION

Product Manual

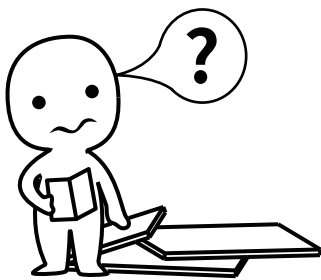


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

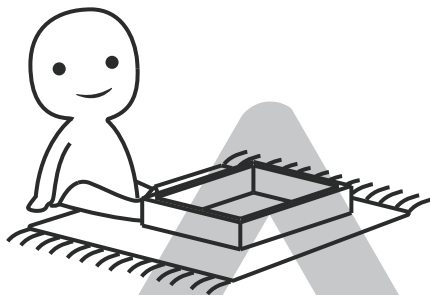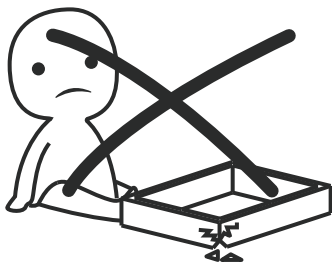



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

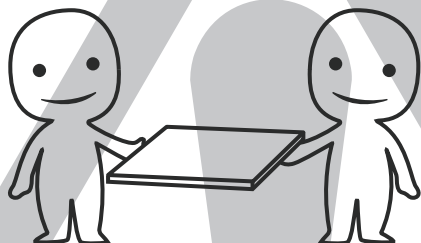

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

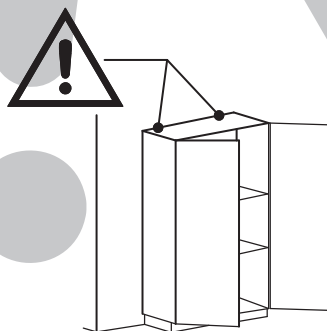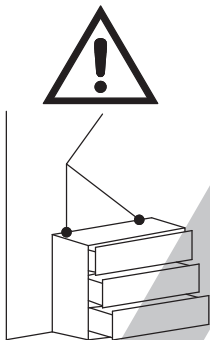

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

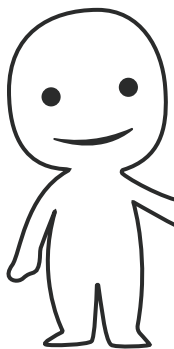


Please prepare the following tools

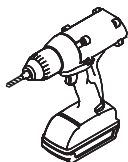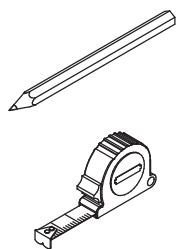    

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 52




CRA0635A

B x 52




CRB1595B

 C x 60




CRF0830A

 D x 17




CRD0435A

 E x 2




F x 1

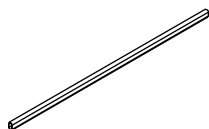 

L=862 mm

 G x 8

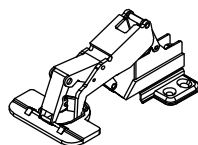


Ø 35

H x 52



CRD3514A

 J x 1



150 mm

K x 1



20 x 23 mm

L x 3



CRE0418A

M x 18



N x 18




CRD0316A


P x 28



CRE0312A

  Q x 2

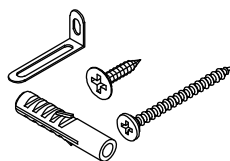

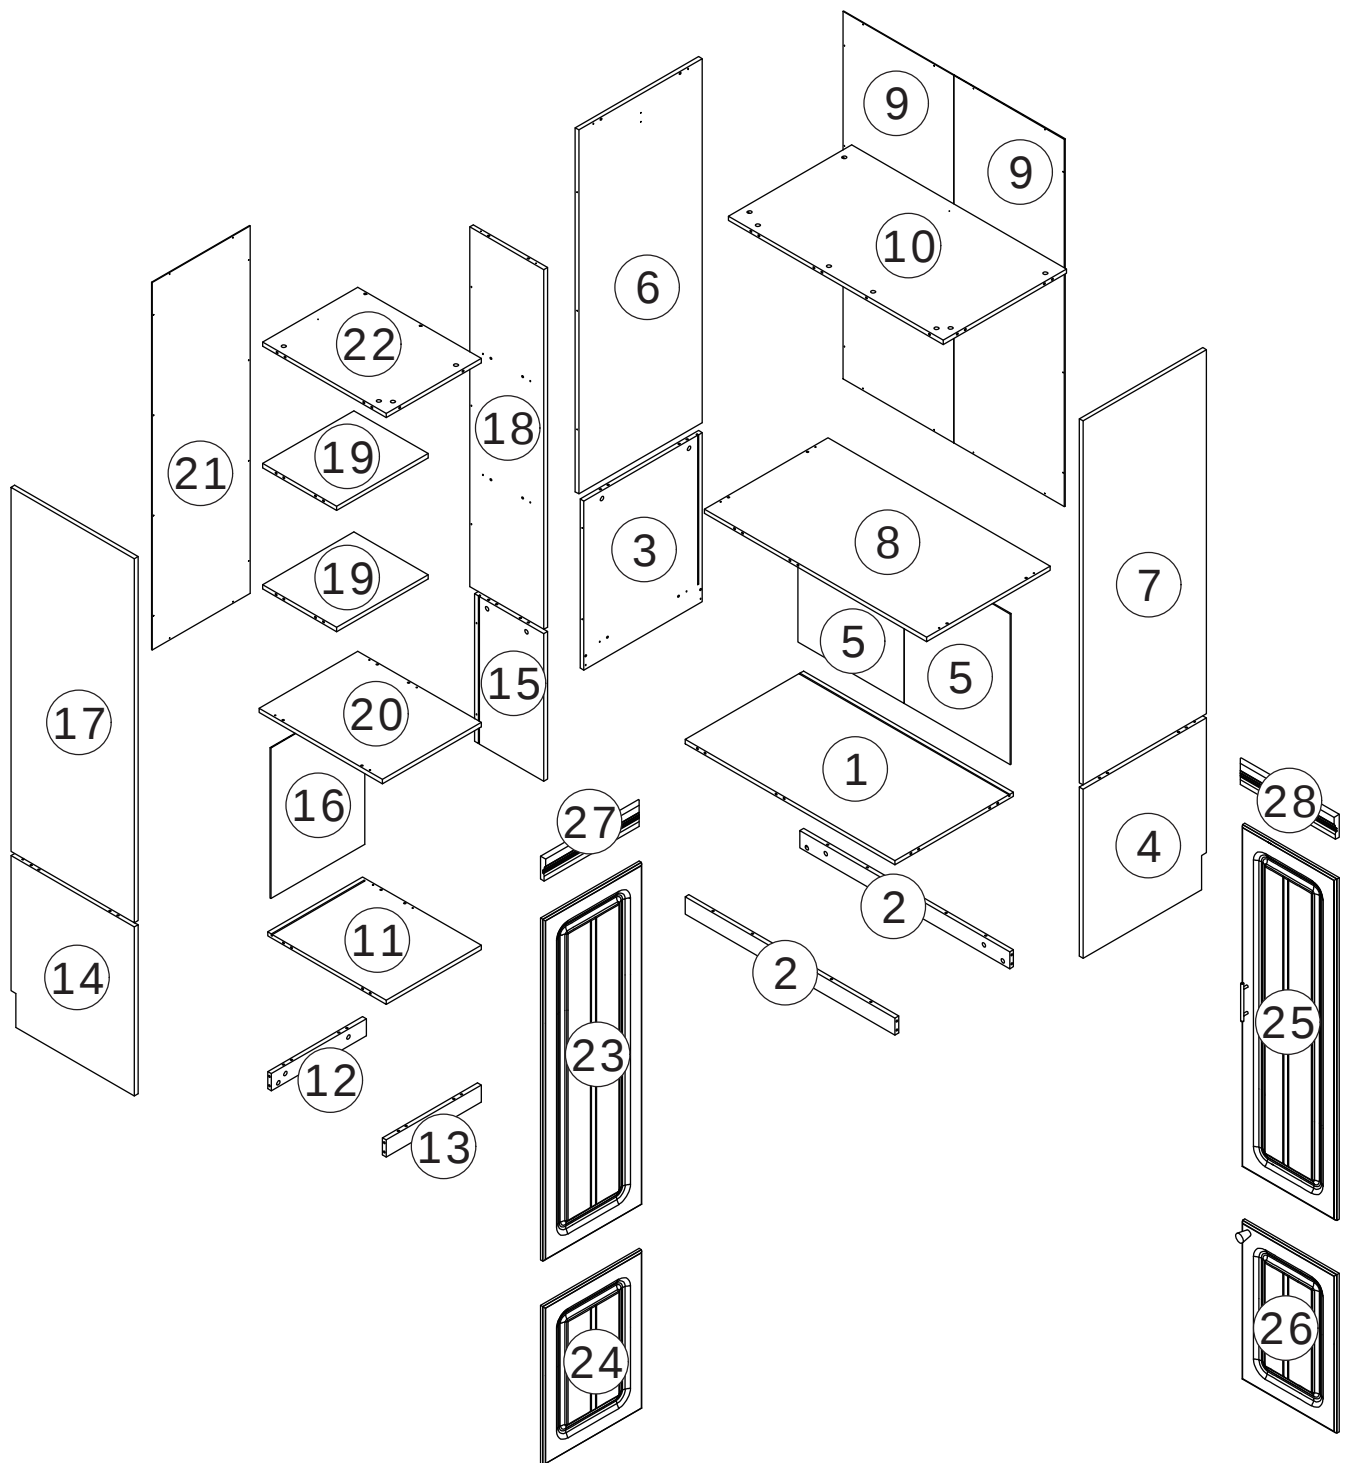


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:



- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*



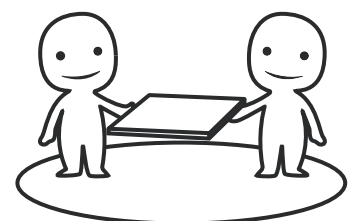


ASSEMBLED BY 2 ADULTS




 
 
1

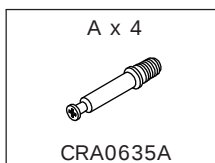

   Screw eccentric rod(A) into board 1 at first.

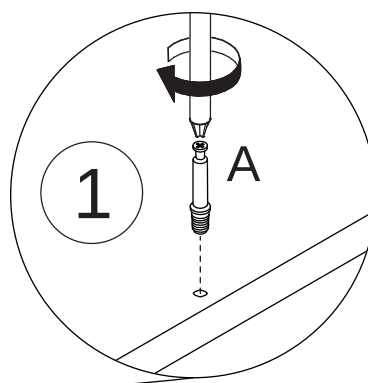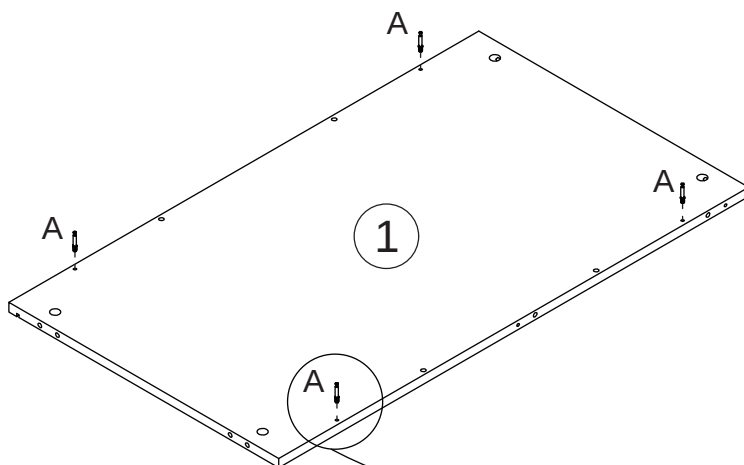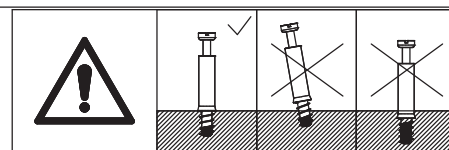



2

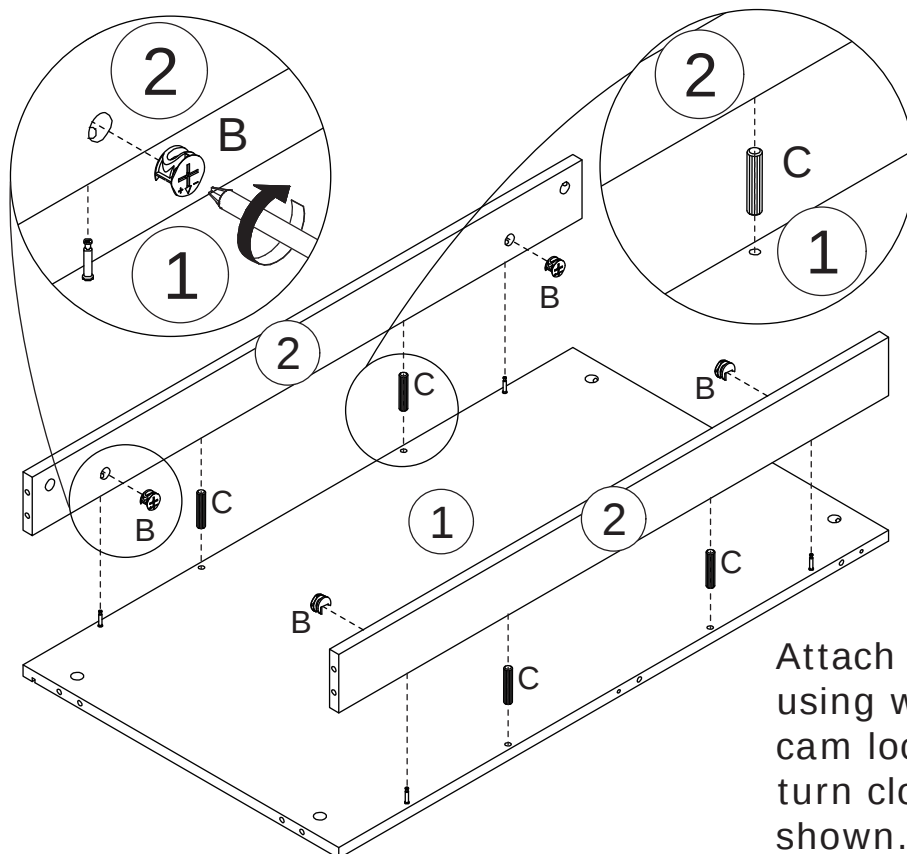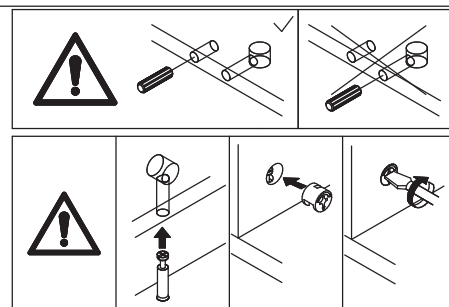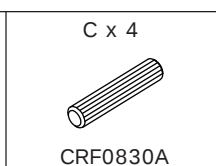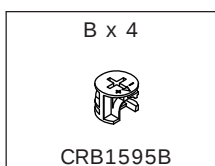     



Attach board 2 to board 1 using wooden dowel(C), add cam lock(B) into board 2 and turn clockwise to tighten as shown.

3

  A x 8
CRA0635A

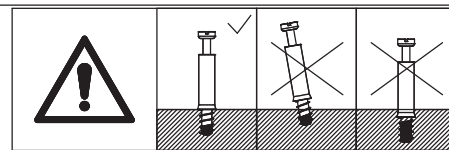

  Screw eccentric rod(A) into board 3 and 4 at first.

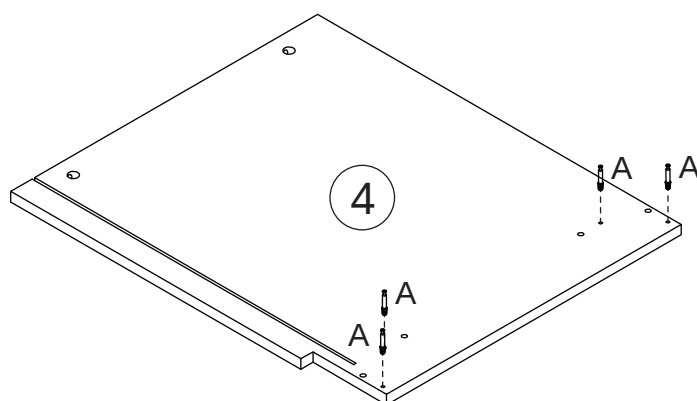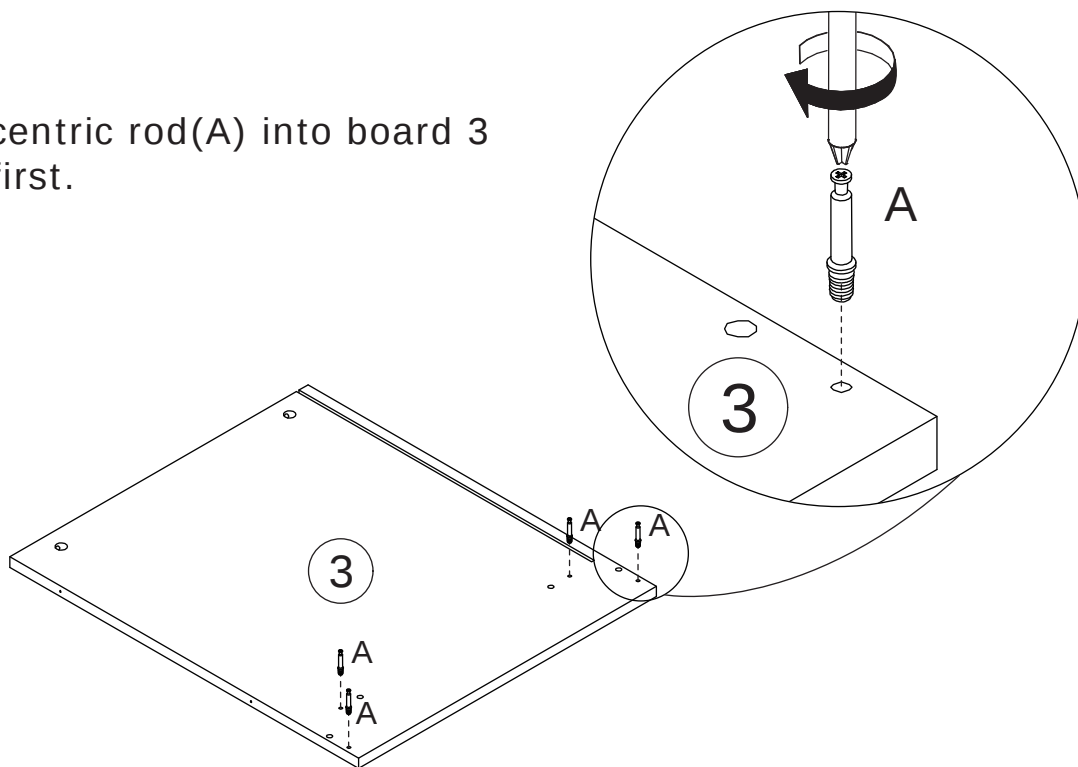


4

B x 8




CRB1595B




 
C x 8



CRF0830A


 


    Connect board 3 and 4 to board 1 and 2 using wooden dowel(C), add cam lock(B) into board 1,2 and turn clockwise to tighten as shown.

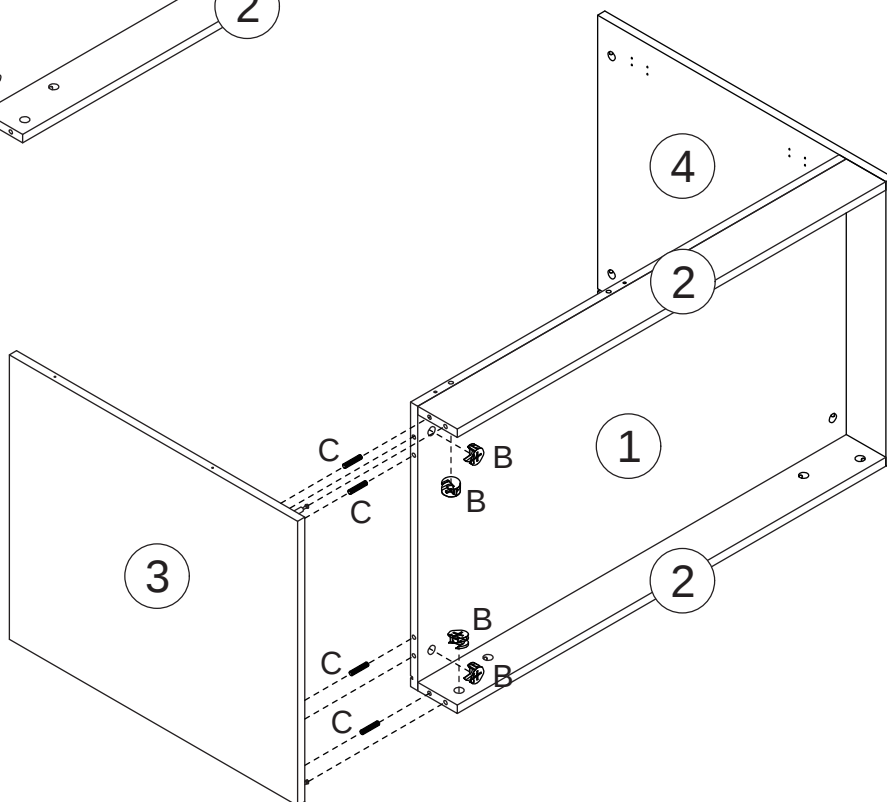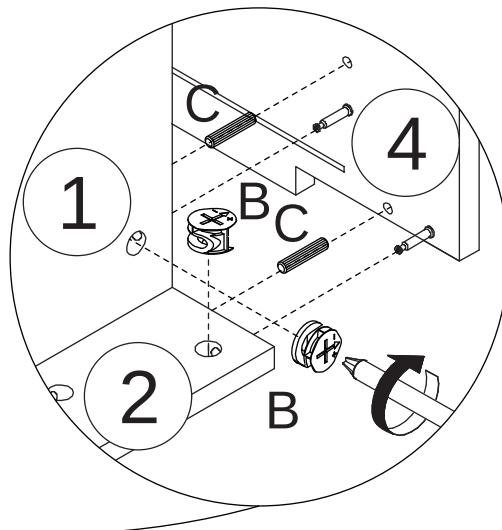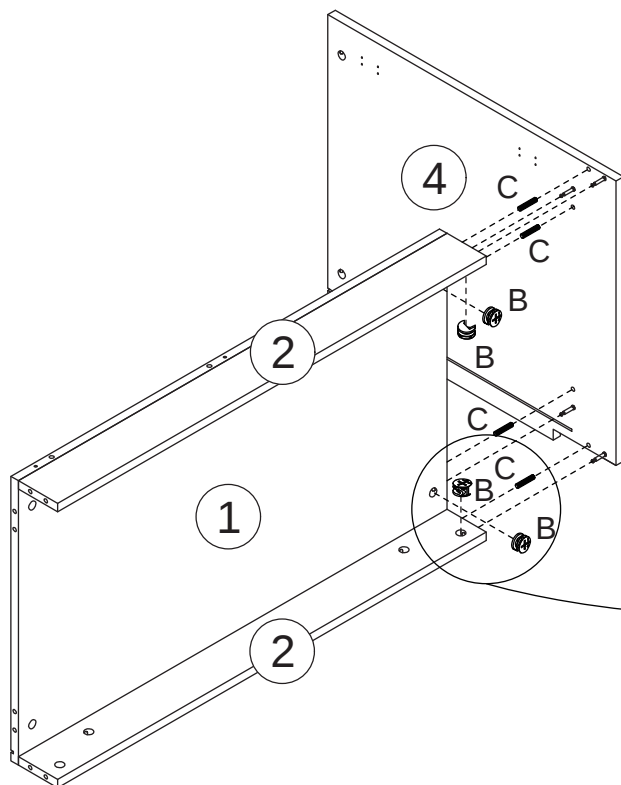
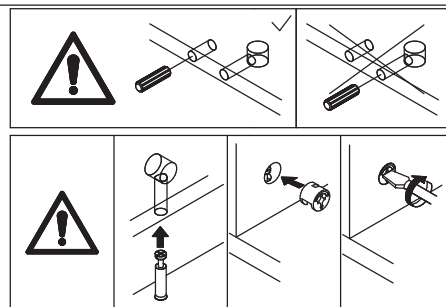


5

  
Slide back board 5 along available grooves as shown.

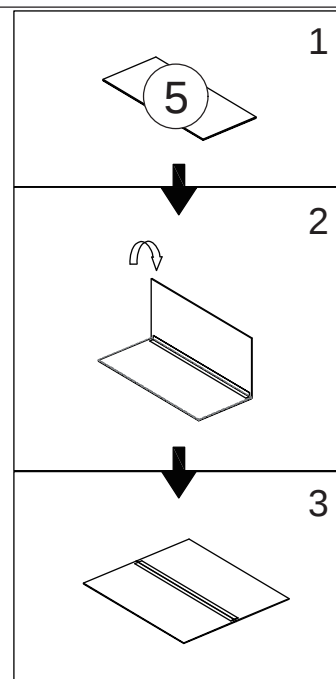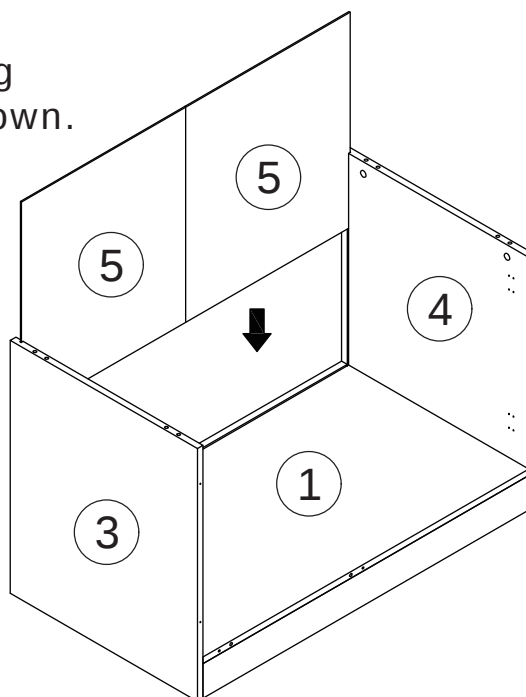








6

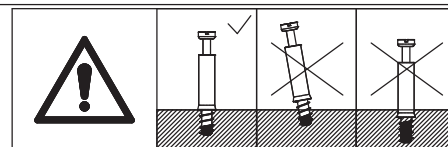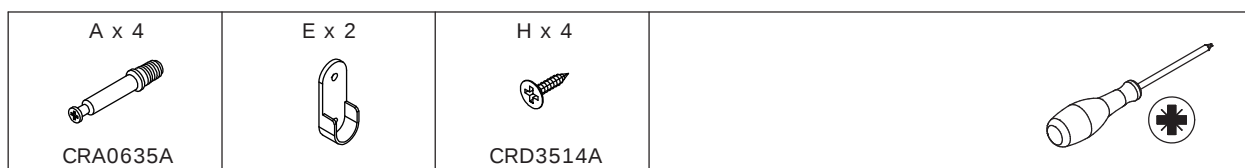  

 Screw eccentric rod(A) into board 6 and 7 at first.
Fix part(E) to board 6 and 7 with screw(H) as shown.

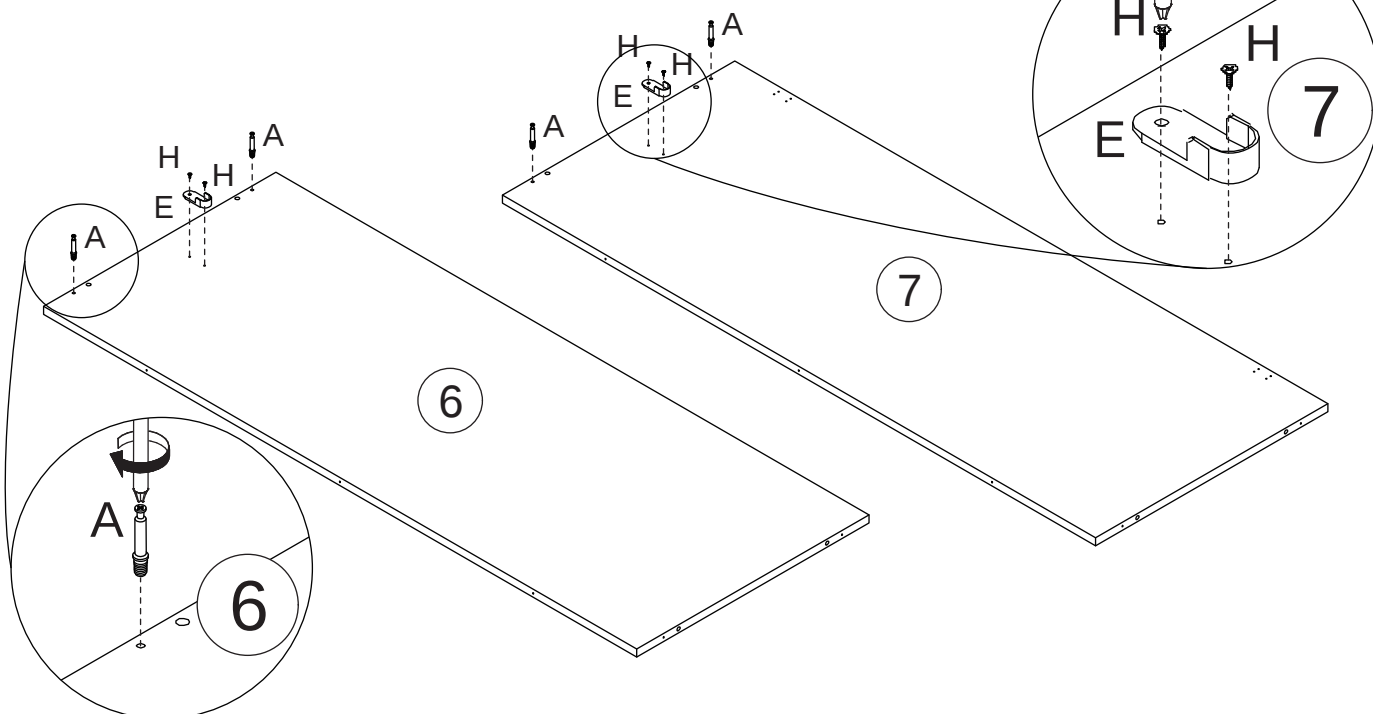


7

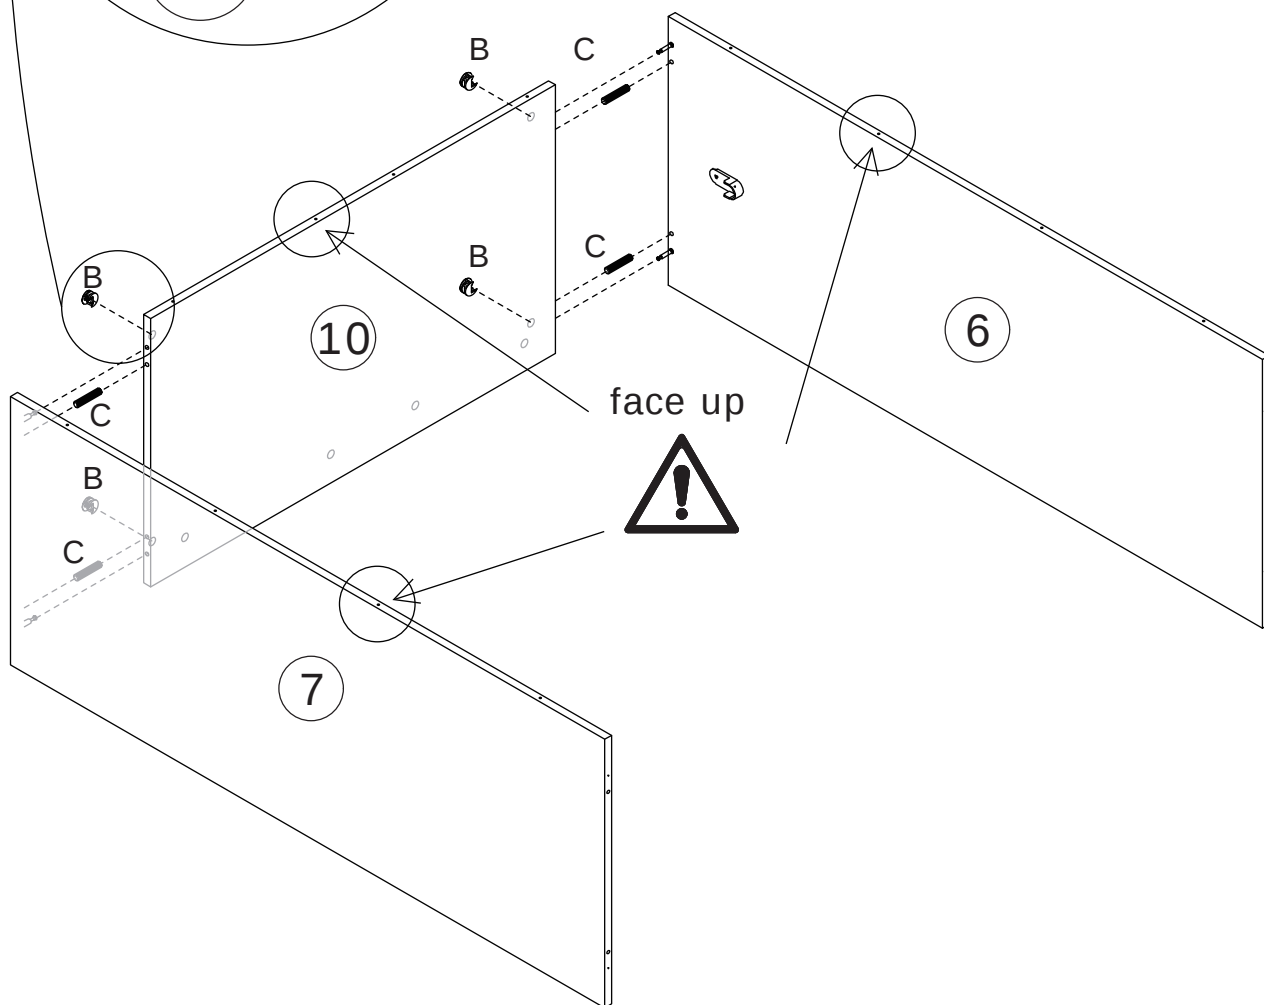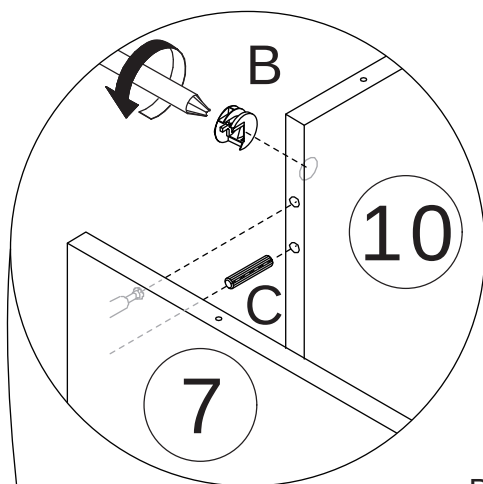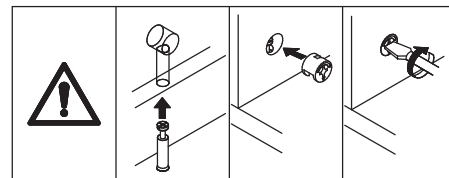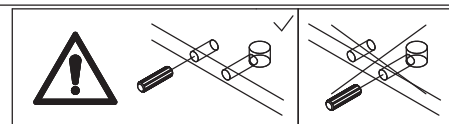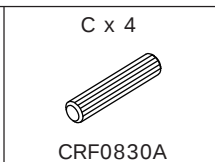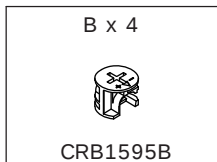       

Connect board 6 and 7 to board 10 using wooden dowel(C), add cam lock(B) into board 10 and turn clockwise to tighten as shown.

8

 C x 4






CRF0830A


D x 4



   CRD0435A








face up

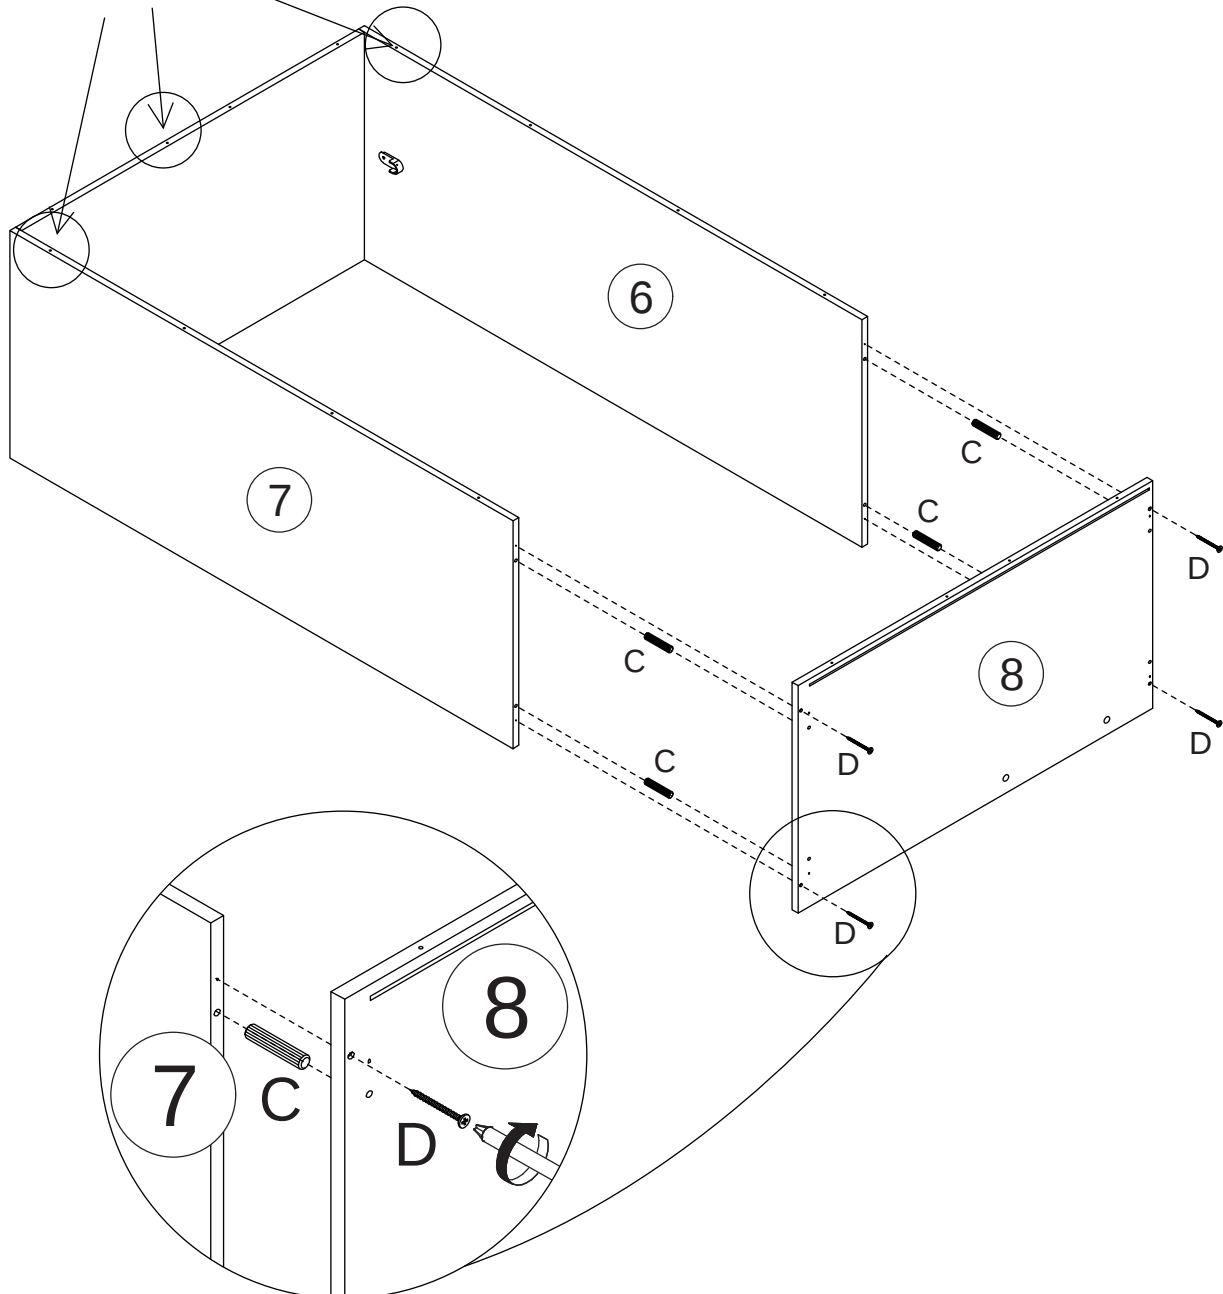 





Attach board 8 to board 6 and 7 using wooden dowel(C), and fix with screw(D) as shown.

     9

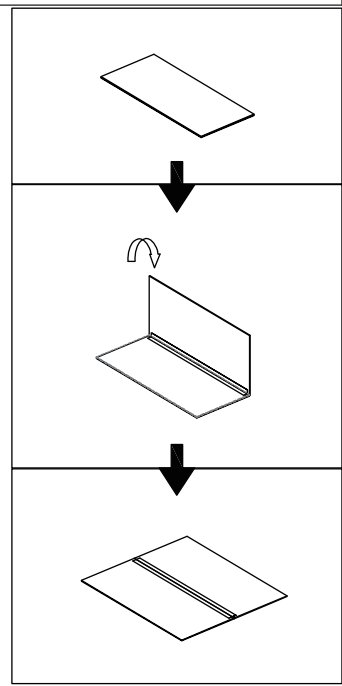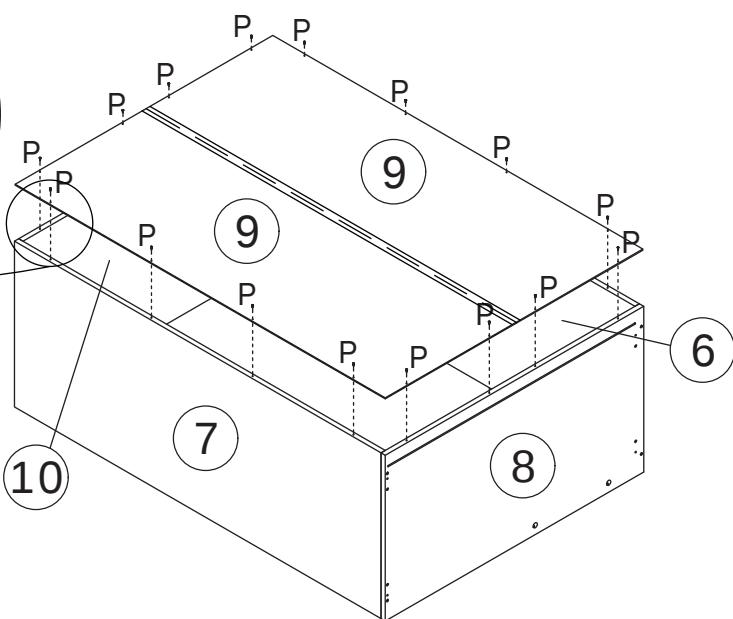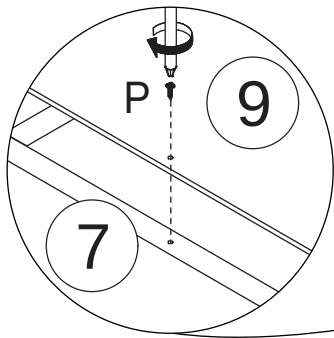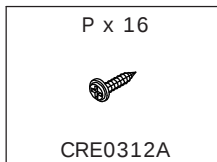

Fix back board 9 to the component with screw(P) as shown.

    
10

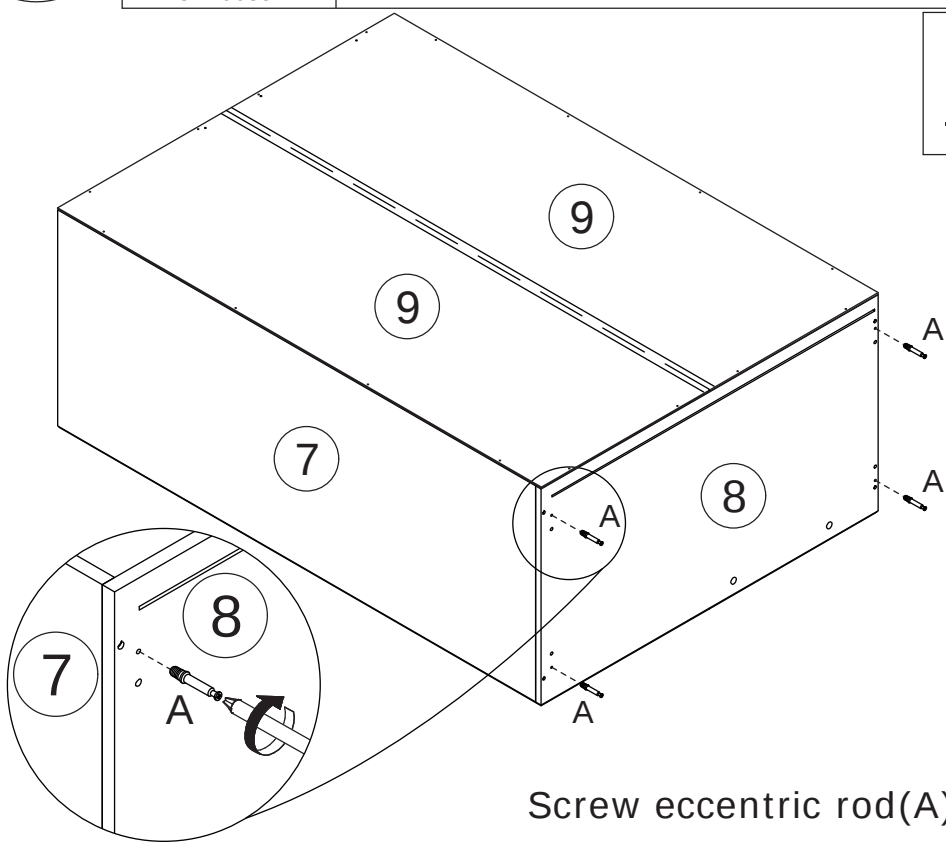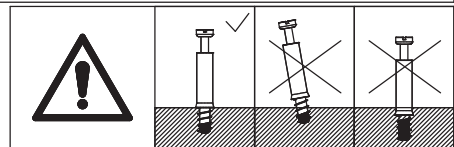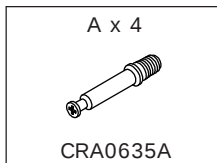





Screw eccentric rod(A) into board 8 at first.

11

 A x 2



CRA0635A

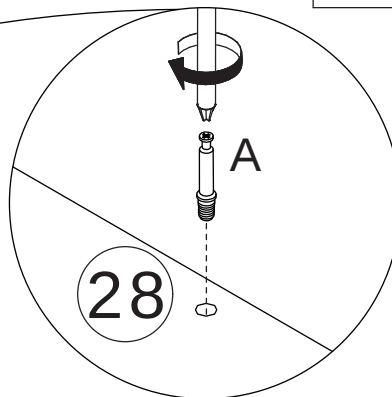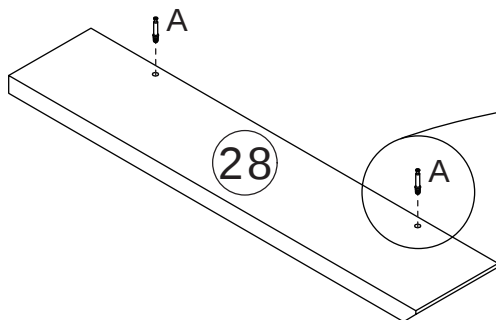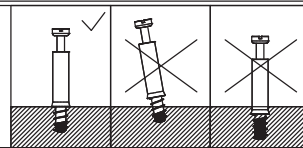    





Screw eccentric rod(A) into board 28 at first.

12

B x 2



    CRB1595B

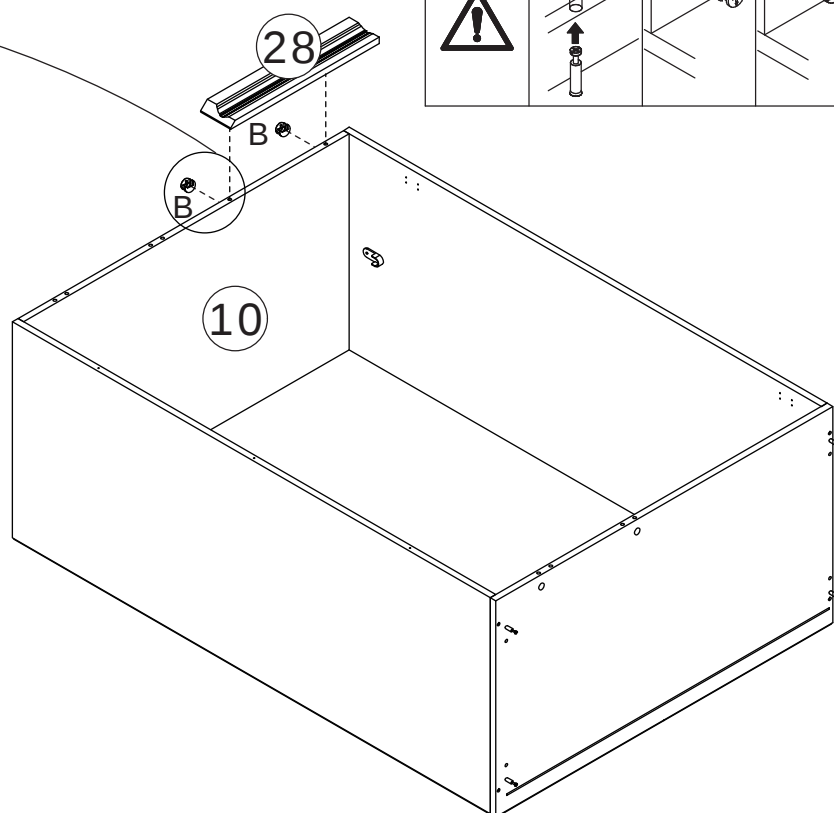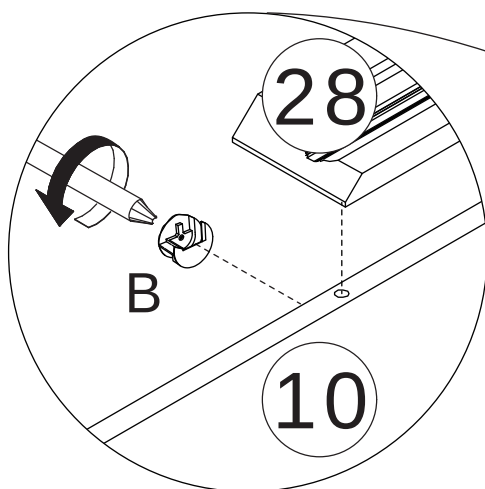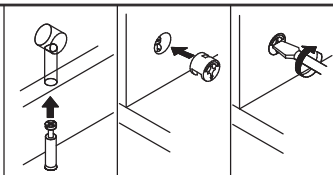

Flip the cabinet, attach board 28 to board 10, add cam lock(B) into board 10 and turn clockwise to tighten as shown.


13

B x 4











CRB1595B

 C x 4



CRF0830A

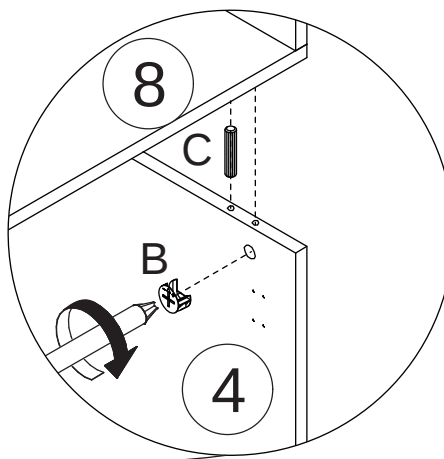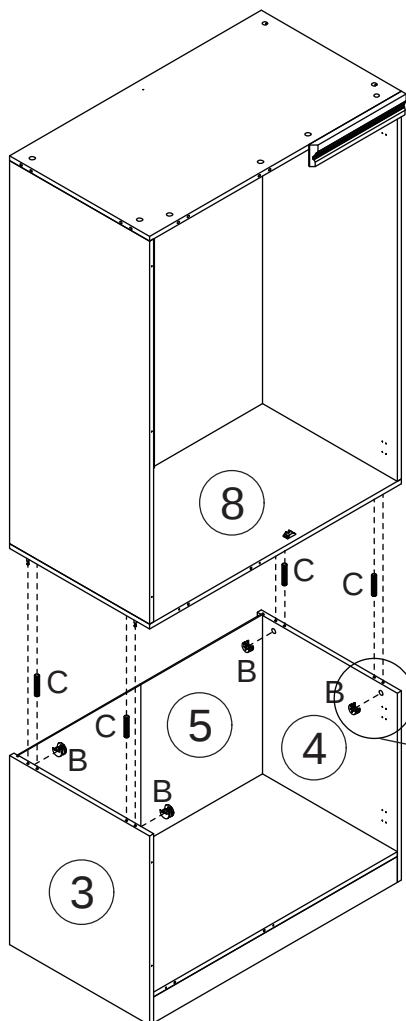        





Connect the two assembled components using wooden dowel(C), add cam lock(B) into board 3,4 and turn clockwise to tighten as shown.

14

A x 4



    CRA0635A

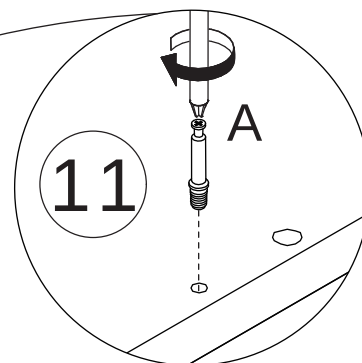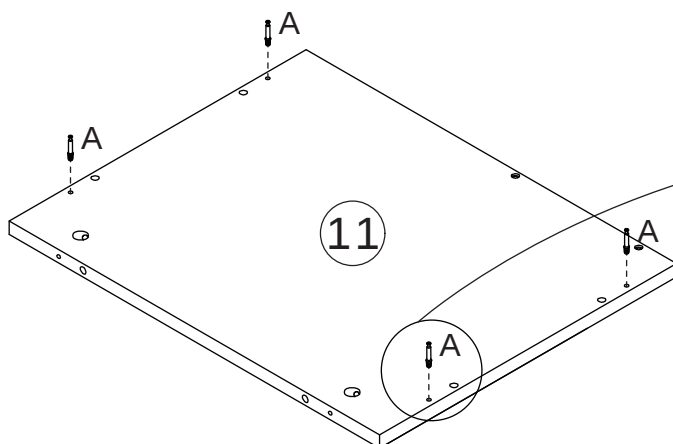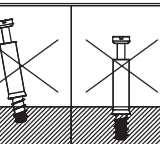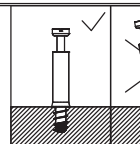

Screw eccentric rod(A) into board 11 at first.


15

B x 4






CRB1595B

 C x 4




CRF0830A

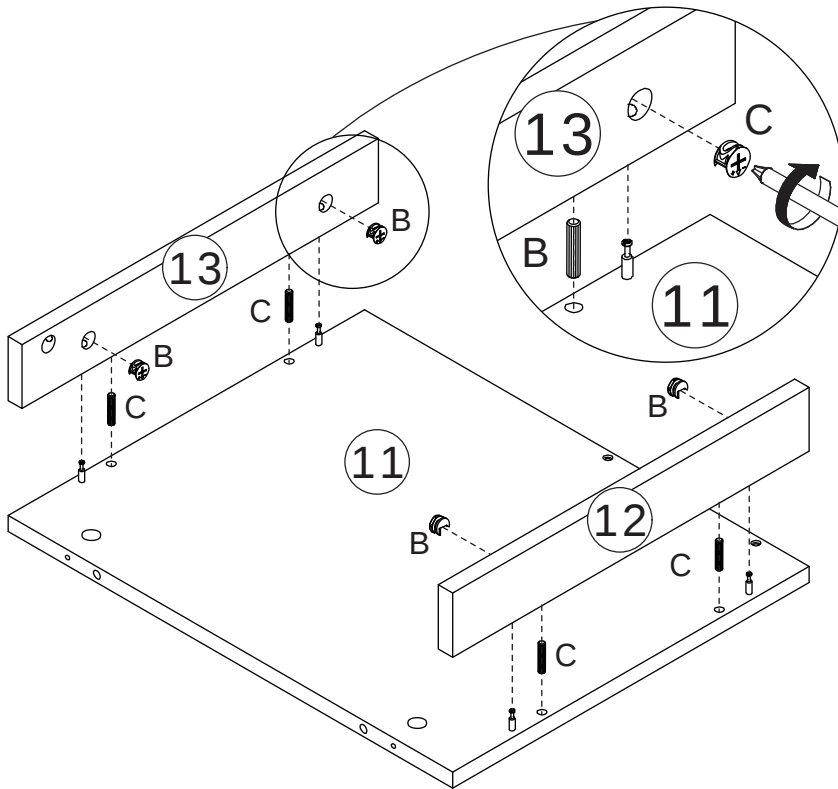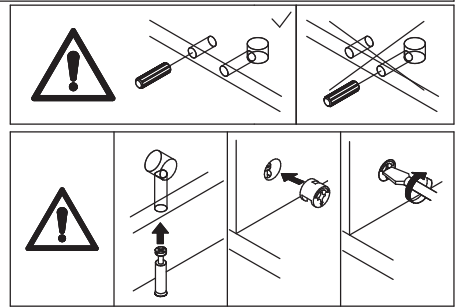   




Attach board 12 and 13 to board 11 using wooden dowel(C), add cam lock(B) into board 12,13 and turn clockwise to tighten as shown.

16

 A x 4







CRA0635A

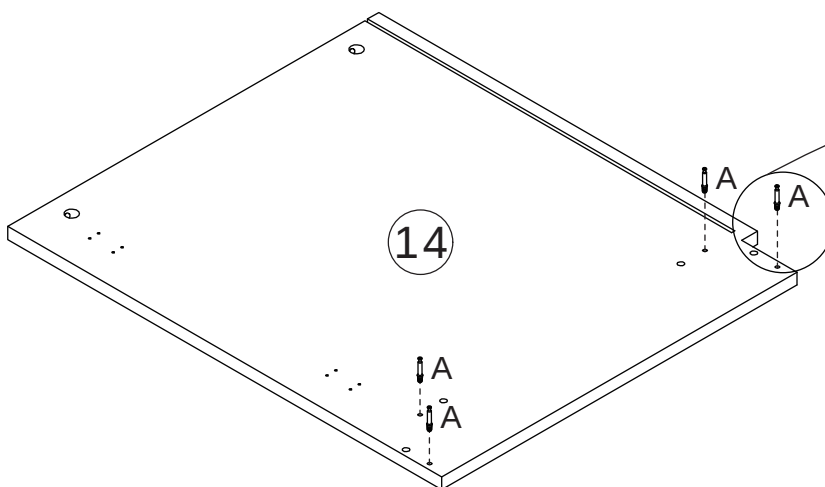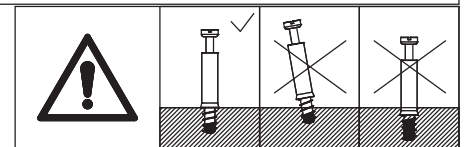   






Screw eccentric rod(A) into board 14 at first.

    17

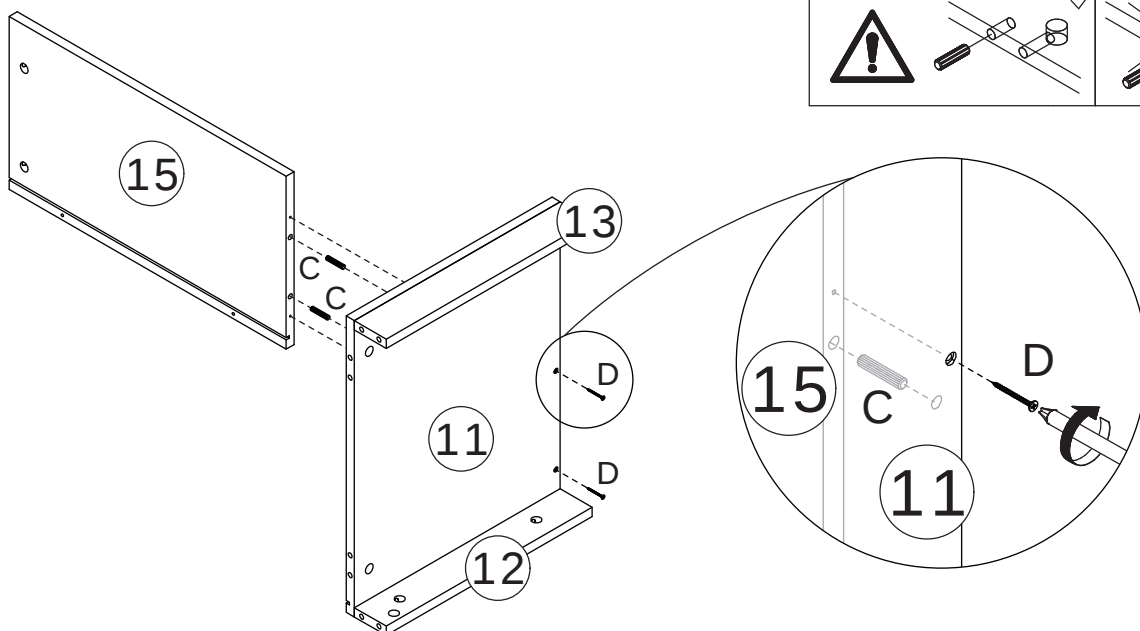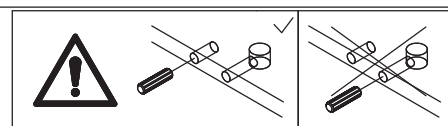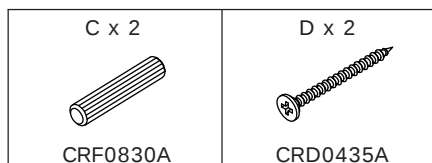


Attach board 15 to board 11 using wooden dowel(C), and fix with screw(D) as shown.

     18

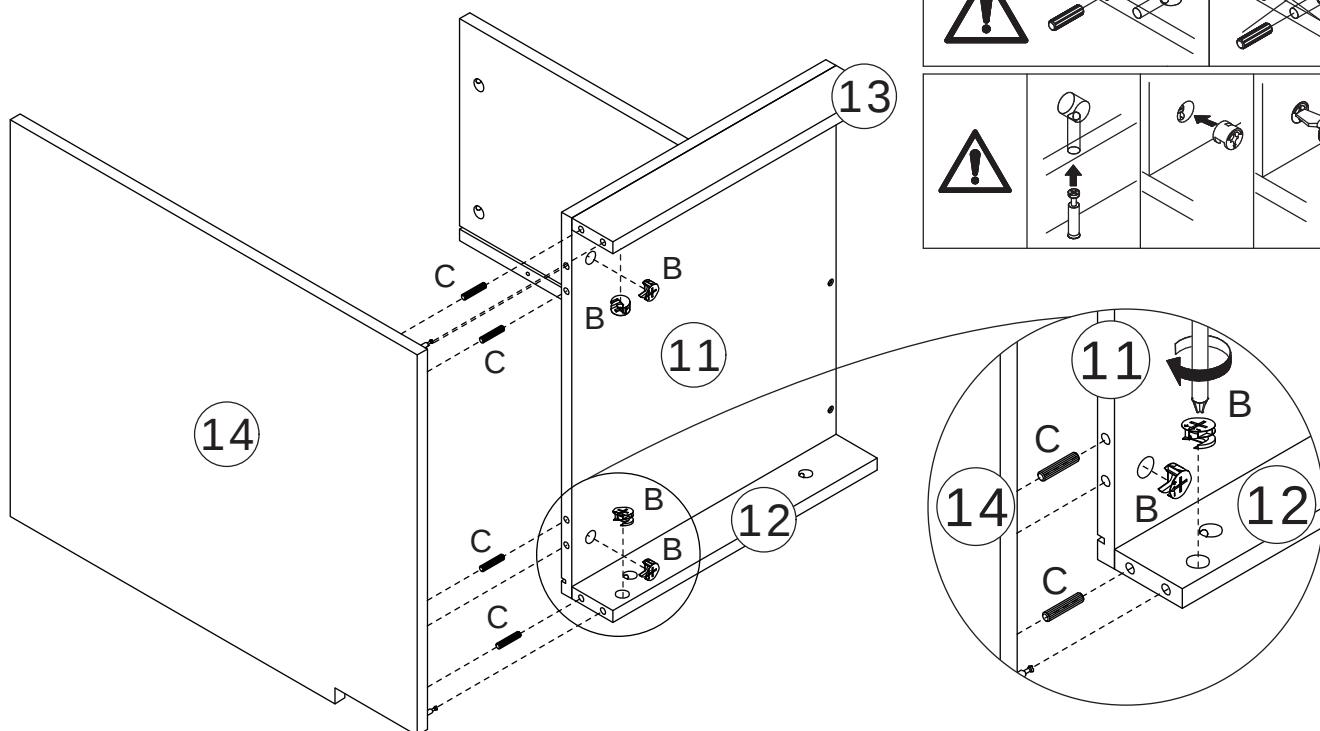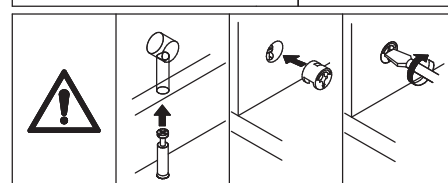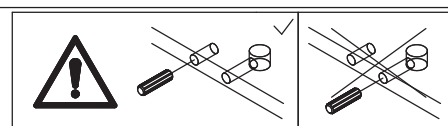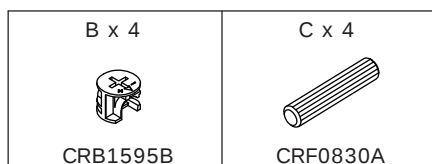

Attach board 14 to board 12, 11 and 13 using wooden dowel(C), add cam lock(B) into board 12,11,13 and turn clockwise to tighten as shown.




 
19

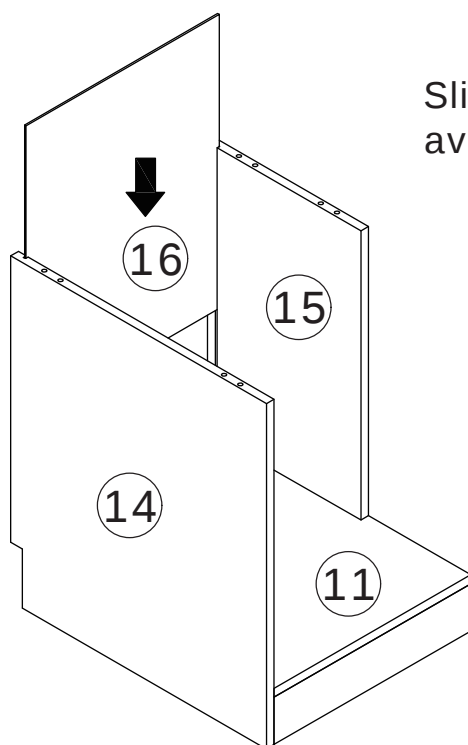


Slide back board 16 along available grooves as shown.

20

    
A x 10
CRA0635A

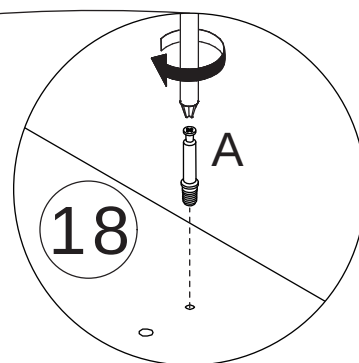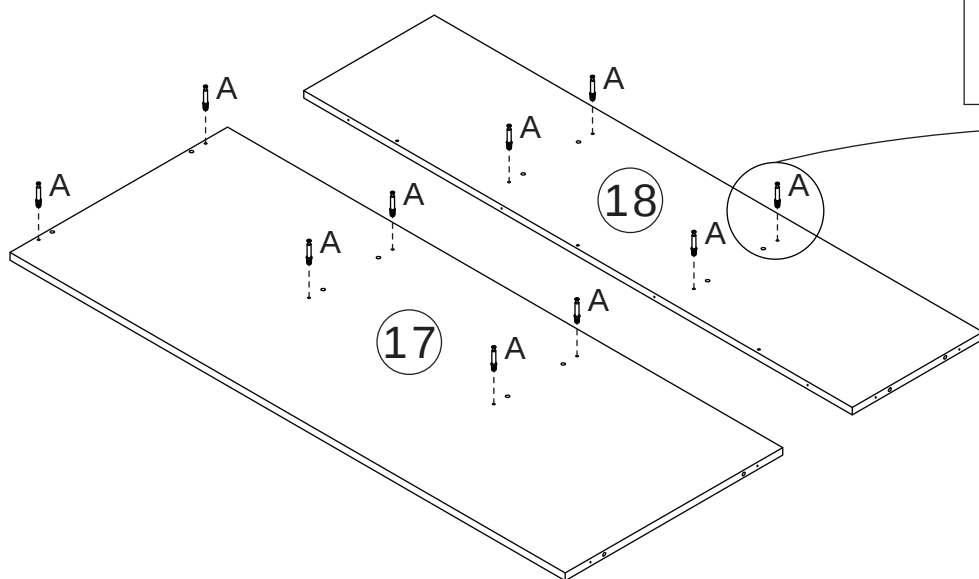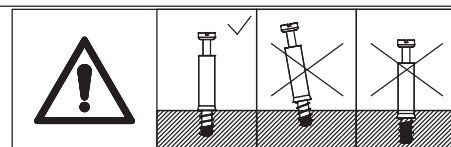

 Screw eccentric rod(A) into board 17 and 18 at first.

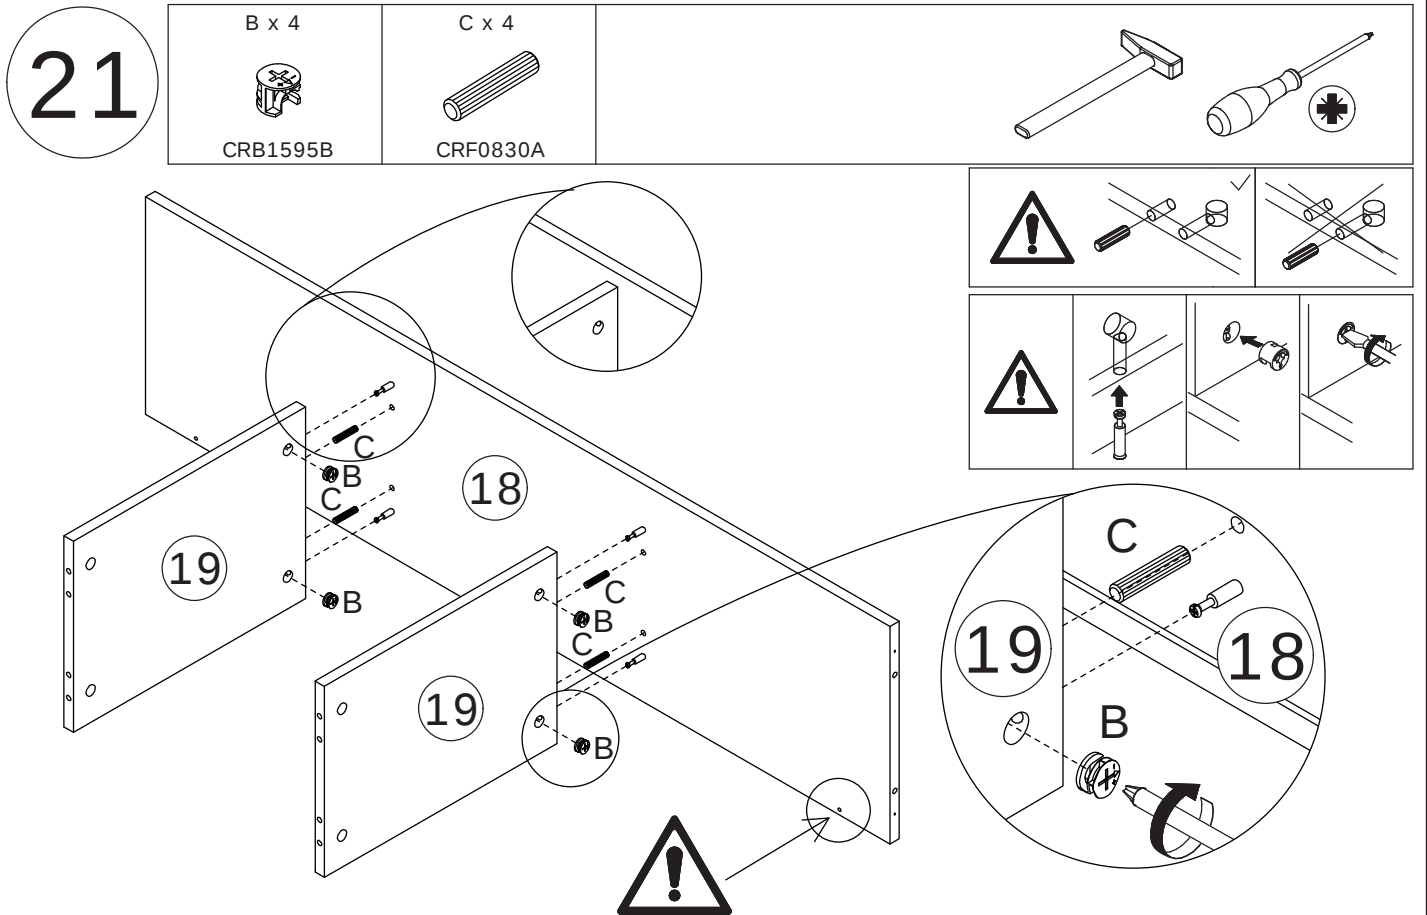

 Attach board 19 to board 18 using wooden dowel(C), add cam lock(B) into board 19 and turn clockwise to tighten as shown.

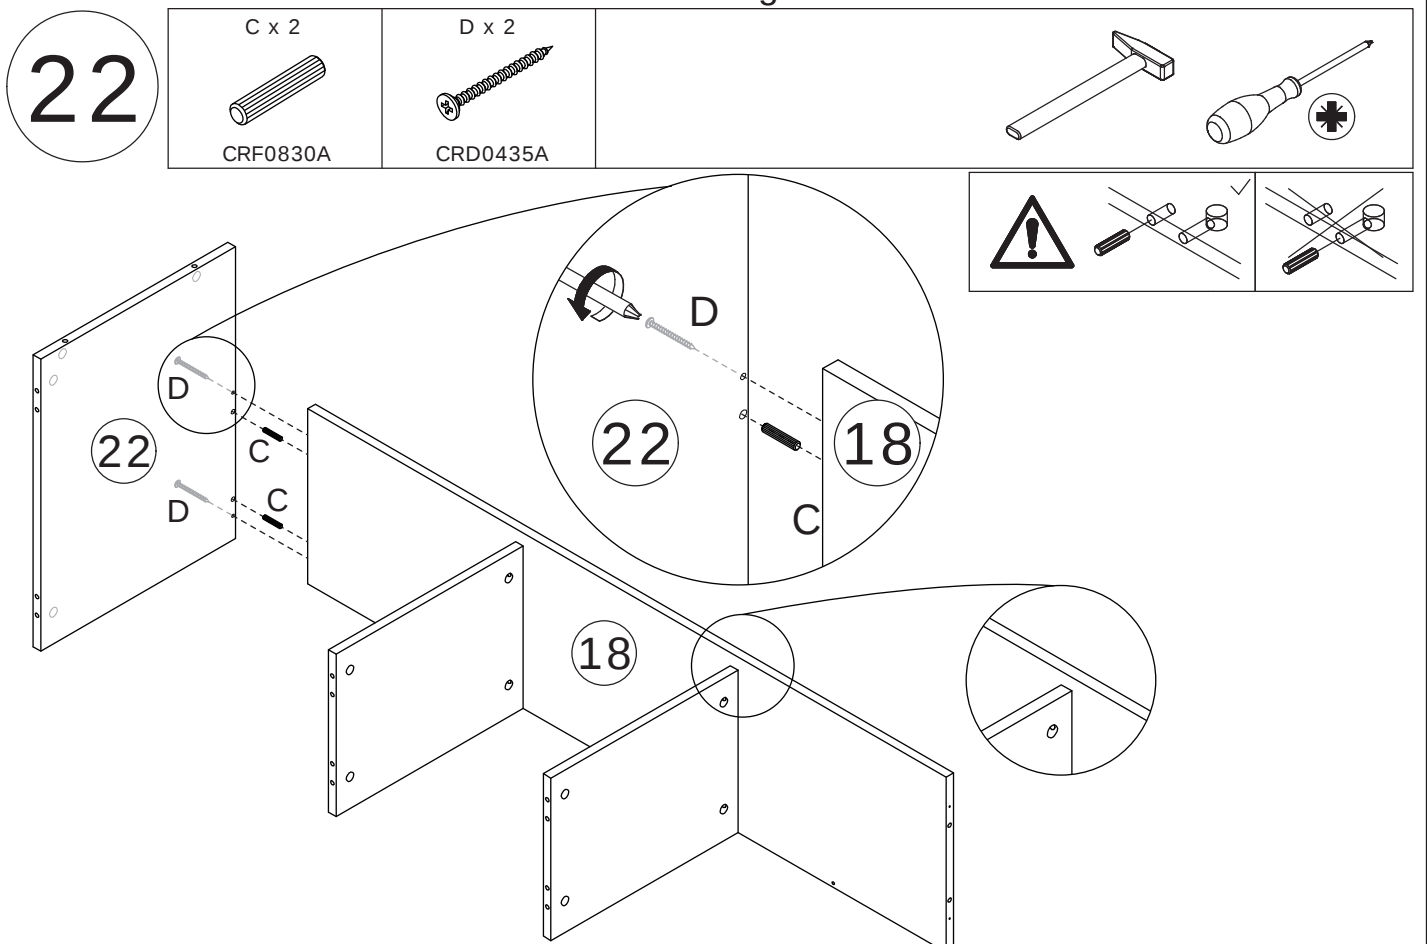

Attach board 22 to board 18 using wooden dowel(C), and fix with screw(D) as shown.


23

B x 6











CRB1595B

 C x 6




CRF0830A

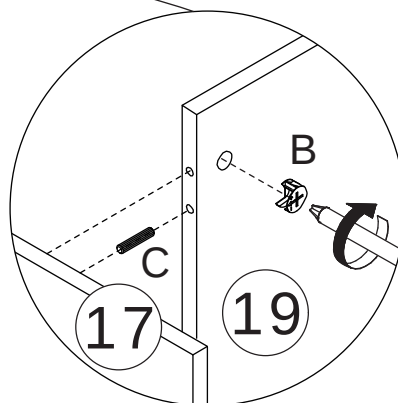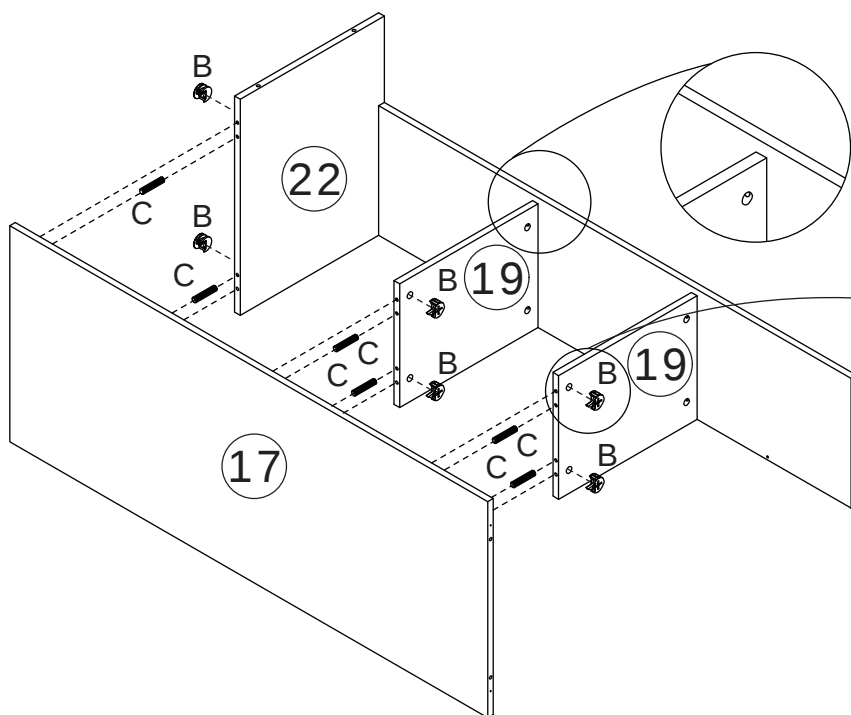        

Attach board 17 to board 19 and 22 using wooden dowel(C), add cam lock(B) into board 19,22 and turn clockwise to tighten as shown.

24

 C x 4







CRF0830A

D x 4



    
CRD0435A

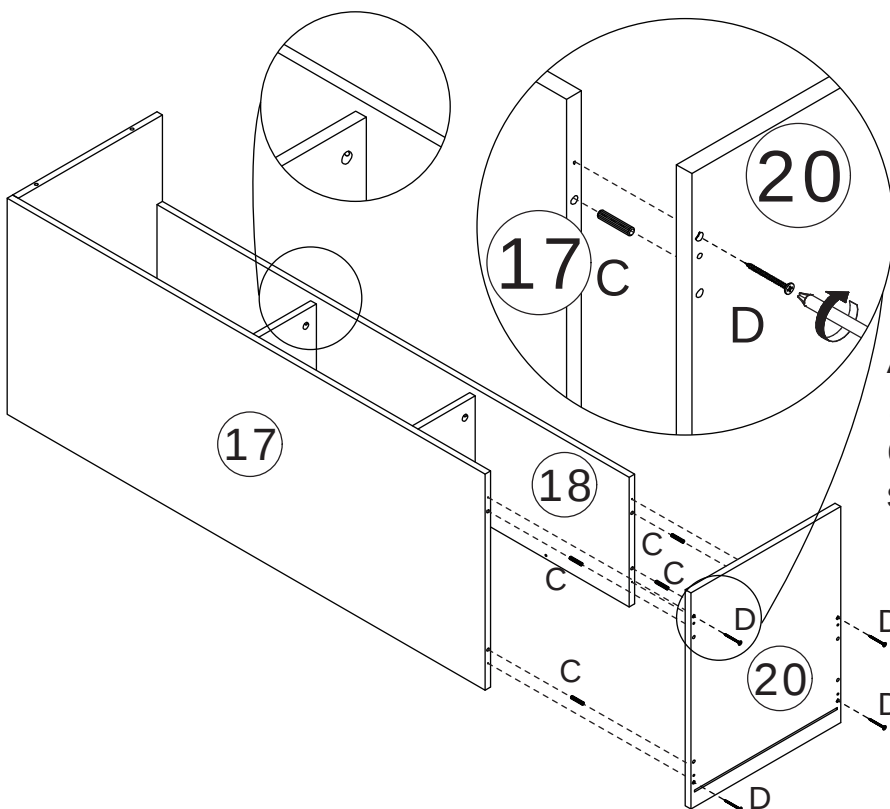




Attach board 20 to board 17 and 18 using wooden dowel(C), and fix with screw(D) as shown.

25

 A x 4



CRA0635A

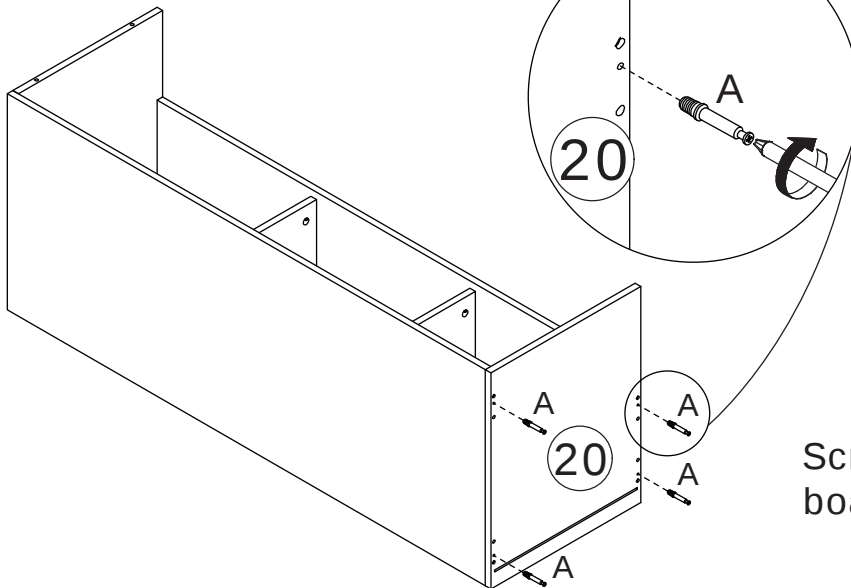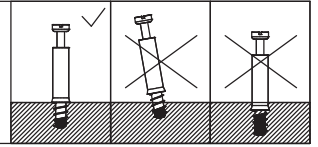   

Screw eccentric rod(A) into board 20 at first.


26

B x 4








CRB1595B

 C x 4




CRF0830A

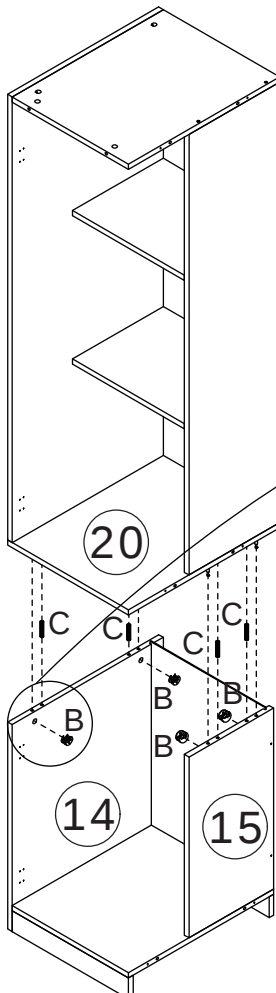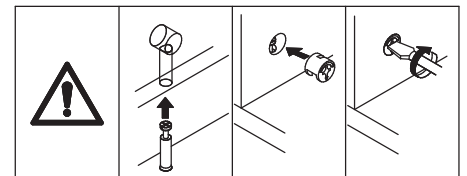     





Connect the two assembled components using wooden dowel(C), add cam lock(B) into board 14,15 and turn clockwise to tighten as shown.

27

 A x 2



CRA0635A

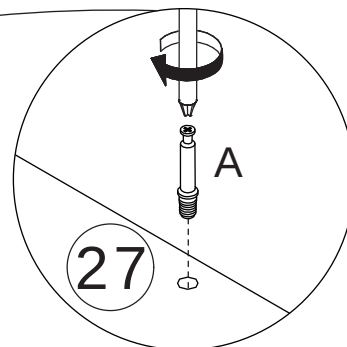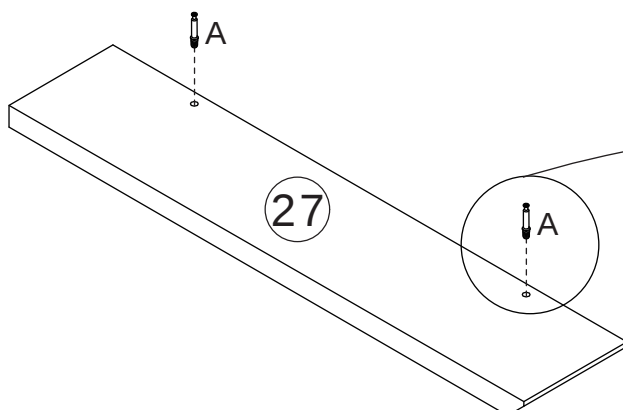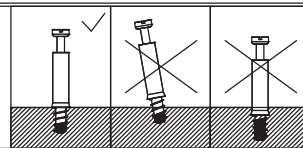    




Screw eccentric rod(A) into board 27 at first.

28

B x 2



   
CRB1595B

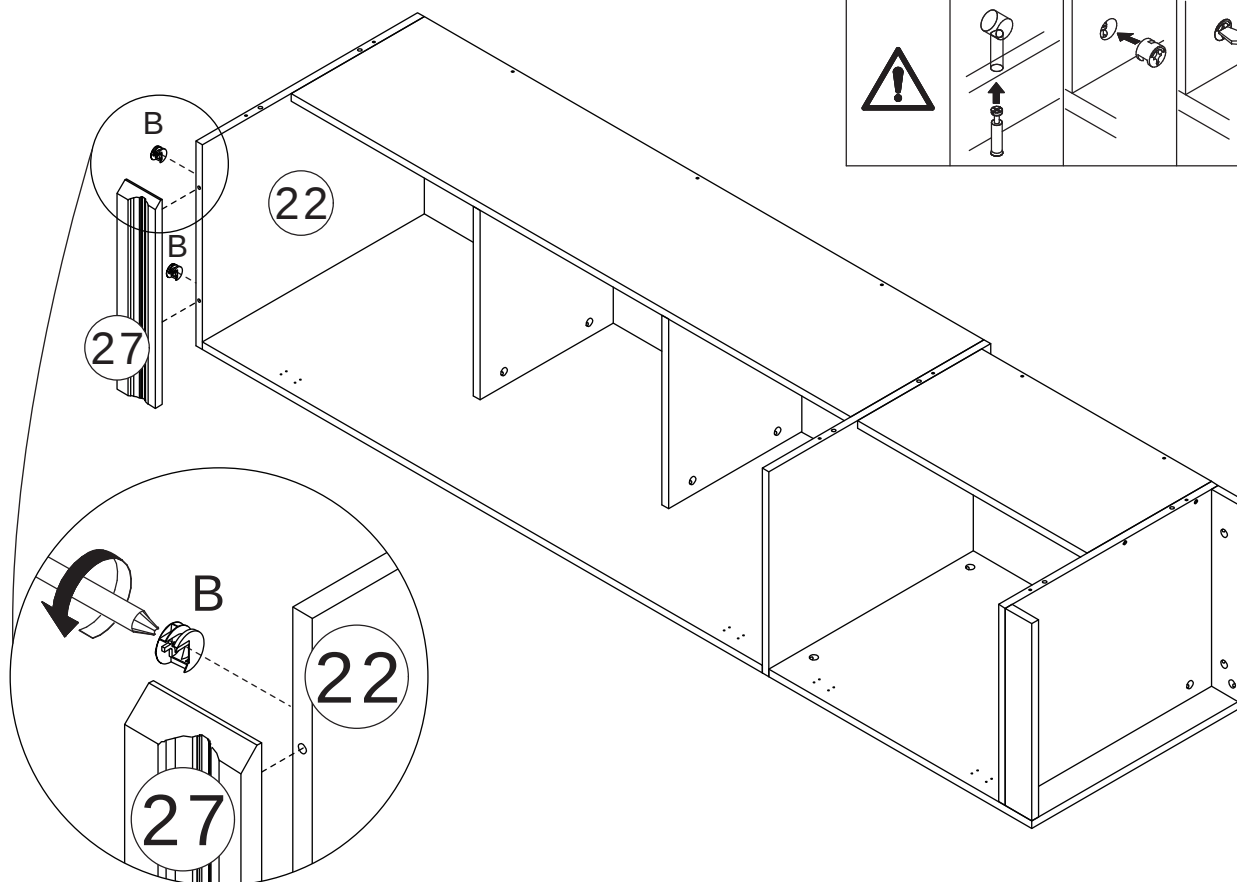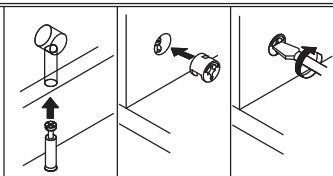




Attach board 27 to board 22, add cam lock(B) into board 22 and turn clockwise to tighten as shown.

29

 A x 6



CRA0635A

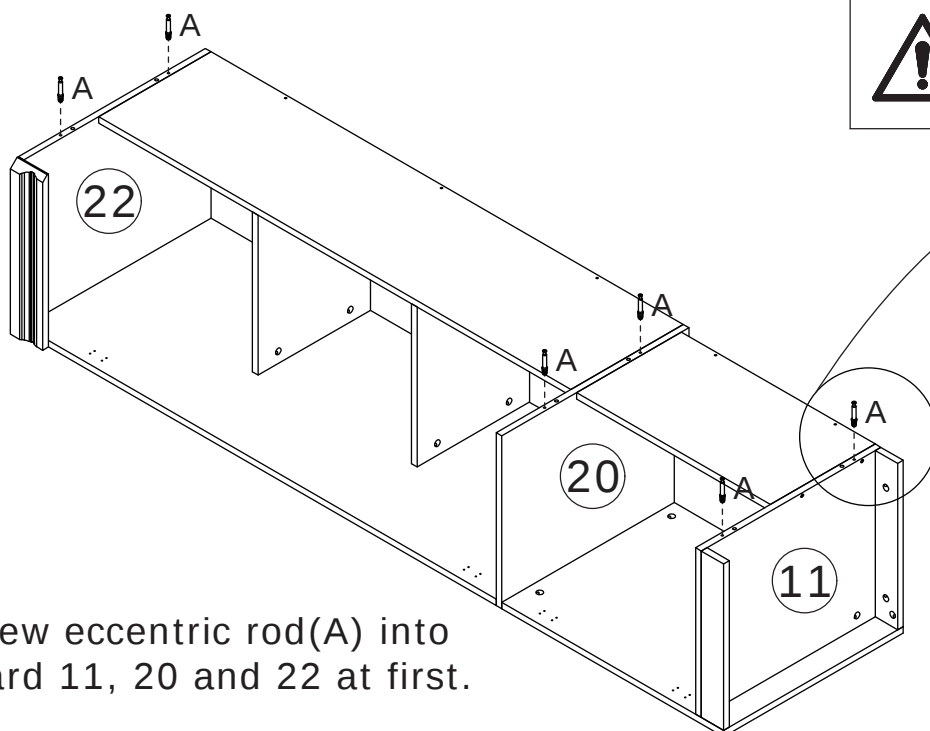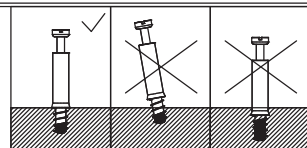   

Screw eccentric rod(A) into board 11, 20 and 22 at first.

30

B x 6









CRB1595B

C x 6



      CRF0830A

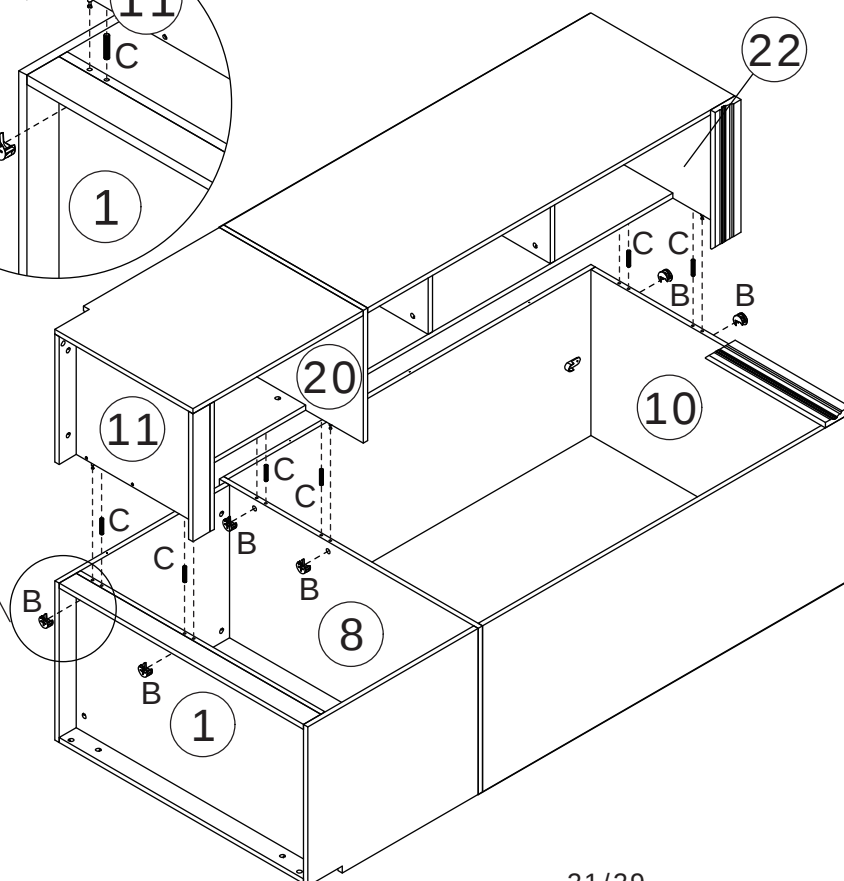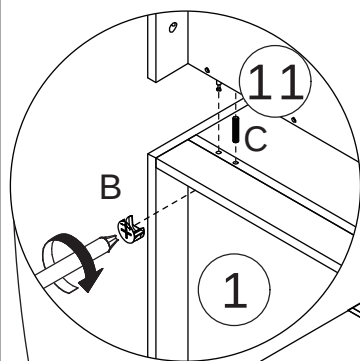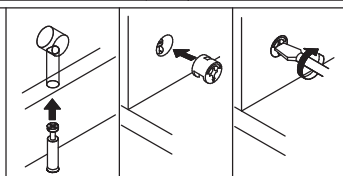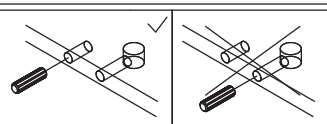

Connect the two assembled components using wooden dowel(C), add cam lock(B) into board 1,8,10 and turn clockwise to tighten as shown.

33


M x 18






N x 18



 CRD0316A



   Insert buckle(M) into back slots and fix with screw(N) as shown.

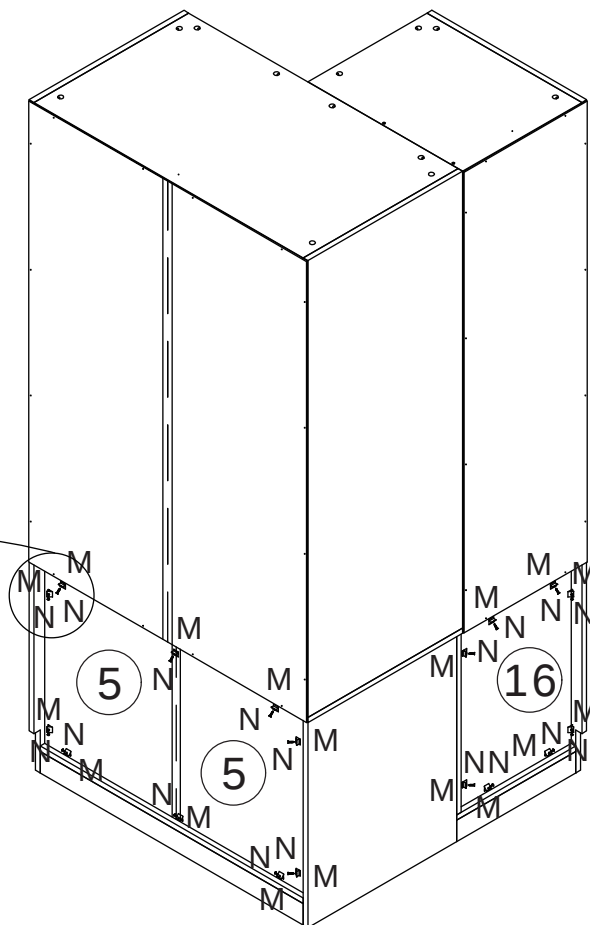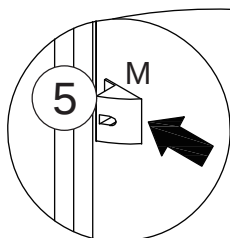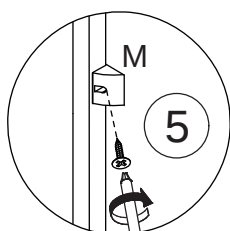

34

G x 2




Ø 35



H x 4



 
CRD3514A



  
Fix hinge(G) to board 23 with screw(H) as shown.

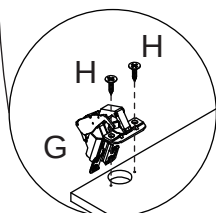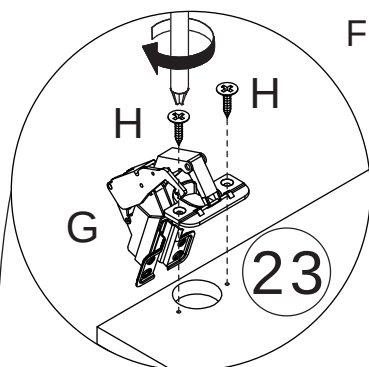

23

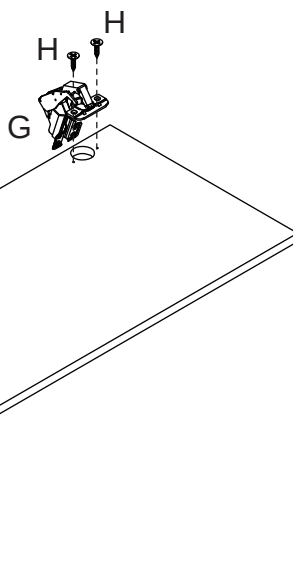 



35

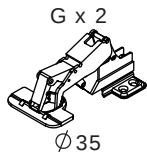 

H x 4



  CRD3514A

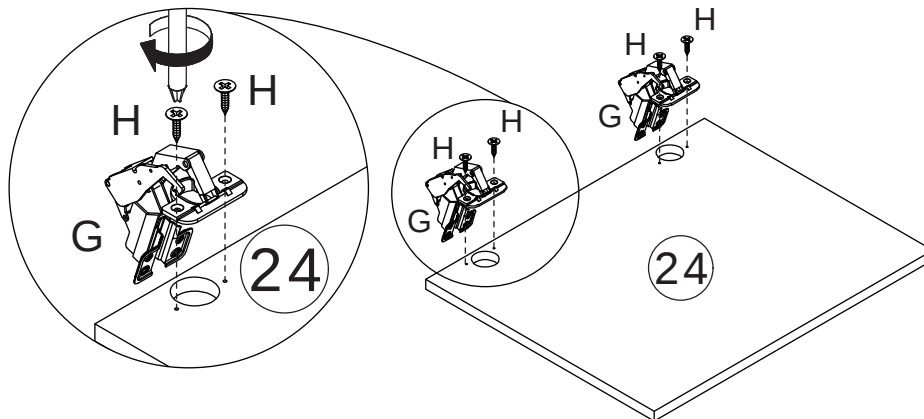



Fix hinge(G) to board 24 with screw(H) as shown.

36


H x 16






  
CRD3514A

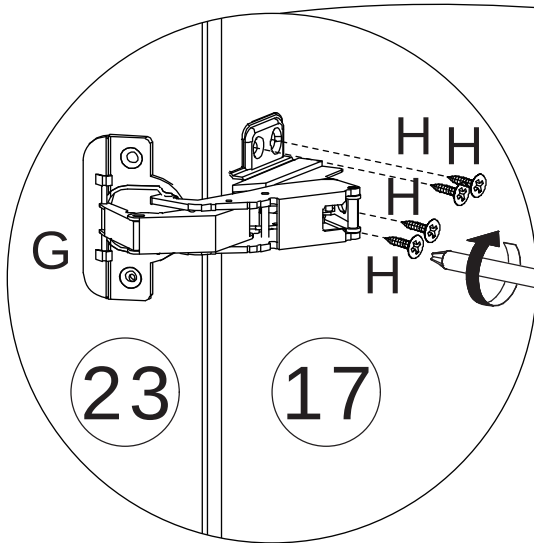

    
Assemble door 23 and 24 to board 17 and 14 by fixing hinge with screw(H) as shown.

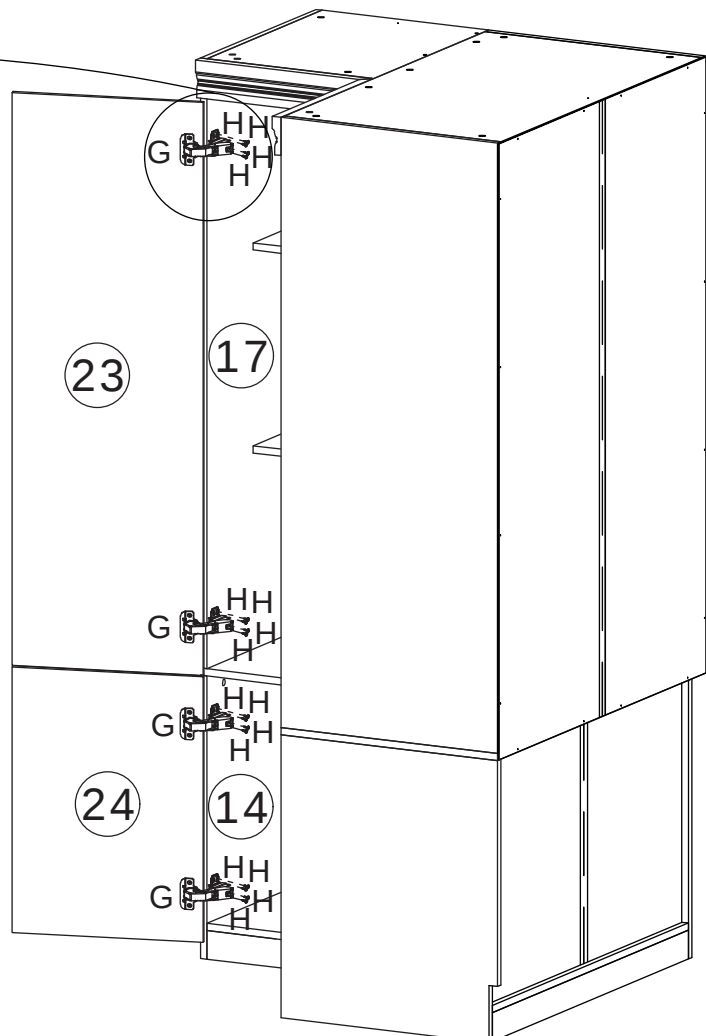


37	 G x 2 Ø 35	 H x 4 CRD3514A	 J x 1 150 mm	 L x 2 CRE0418A	
----	--	--	--	---	---

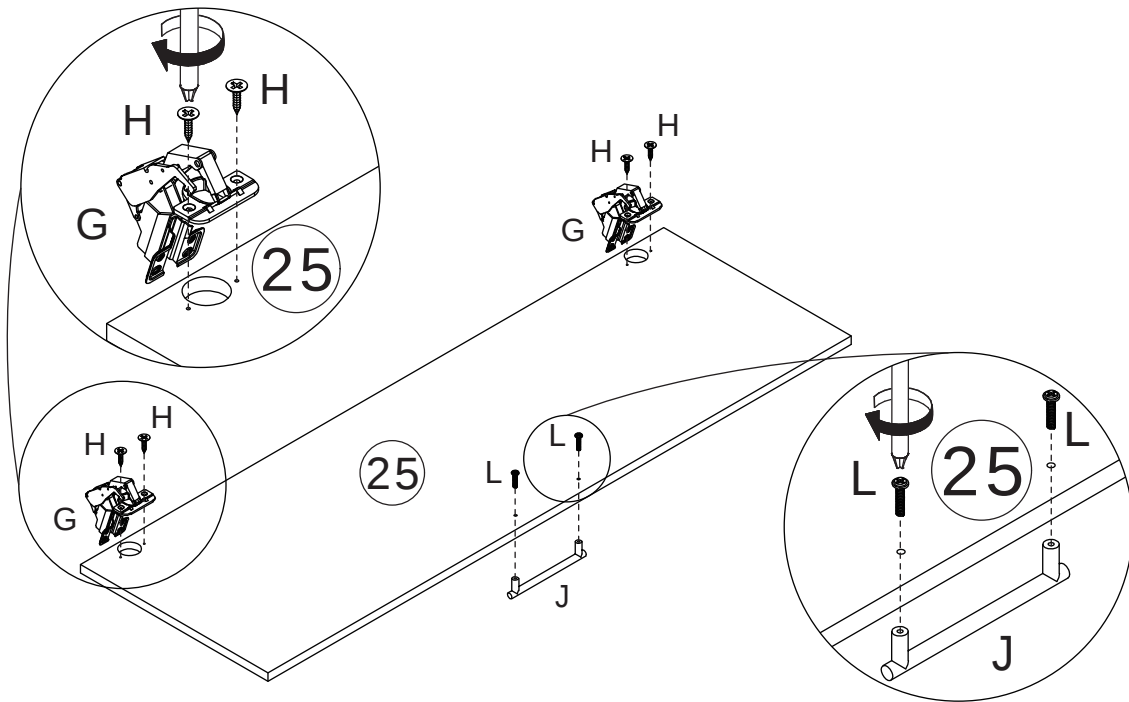 

 Fix hinge(G) to board 25 with screw(H) and fix handle(J) with screw(L).

38	 G x 2 Ø 35	 H x 4 CRD3514A	 K x 1 20 x 23 mm	 L x 1 CRE0418A	
----	--	--	--	---	---

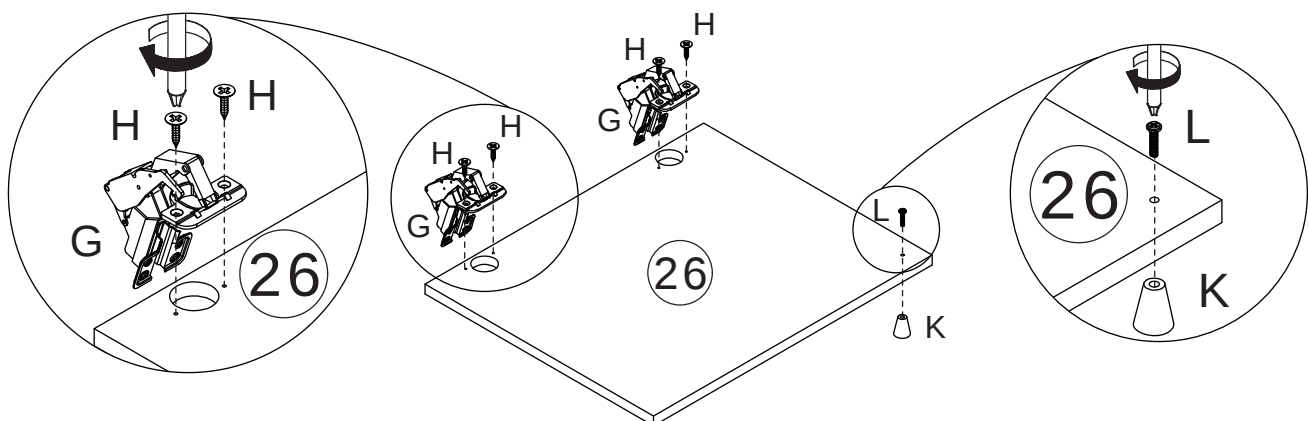 



Fix hinge(G) to board 26 with screw(H) and fix knob(K) with screw(L).

39

H x 16



  CRD3514A

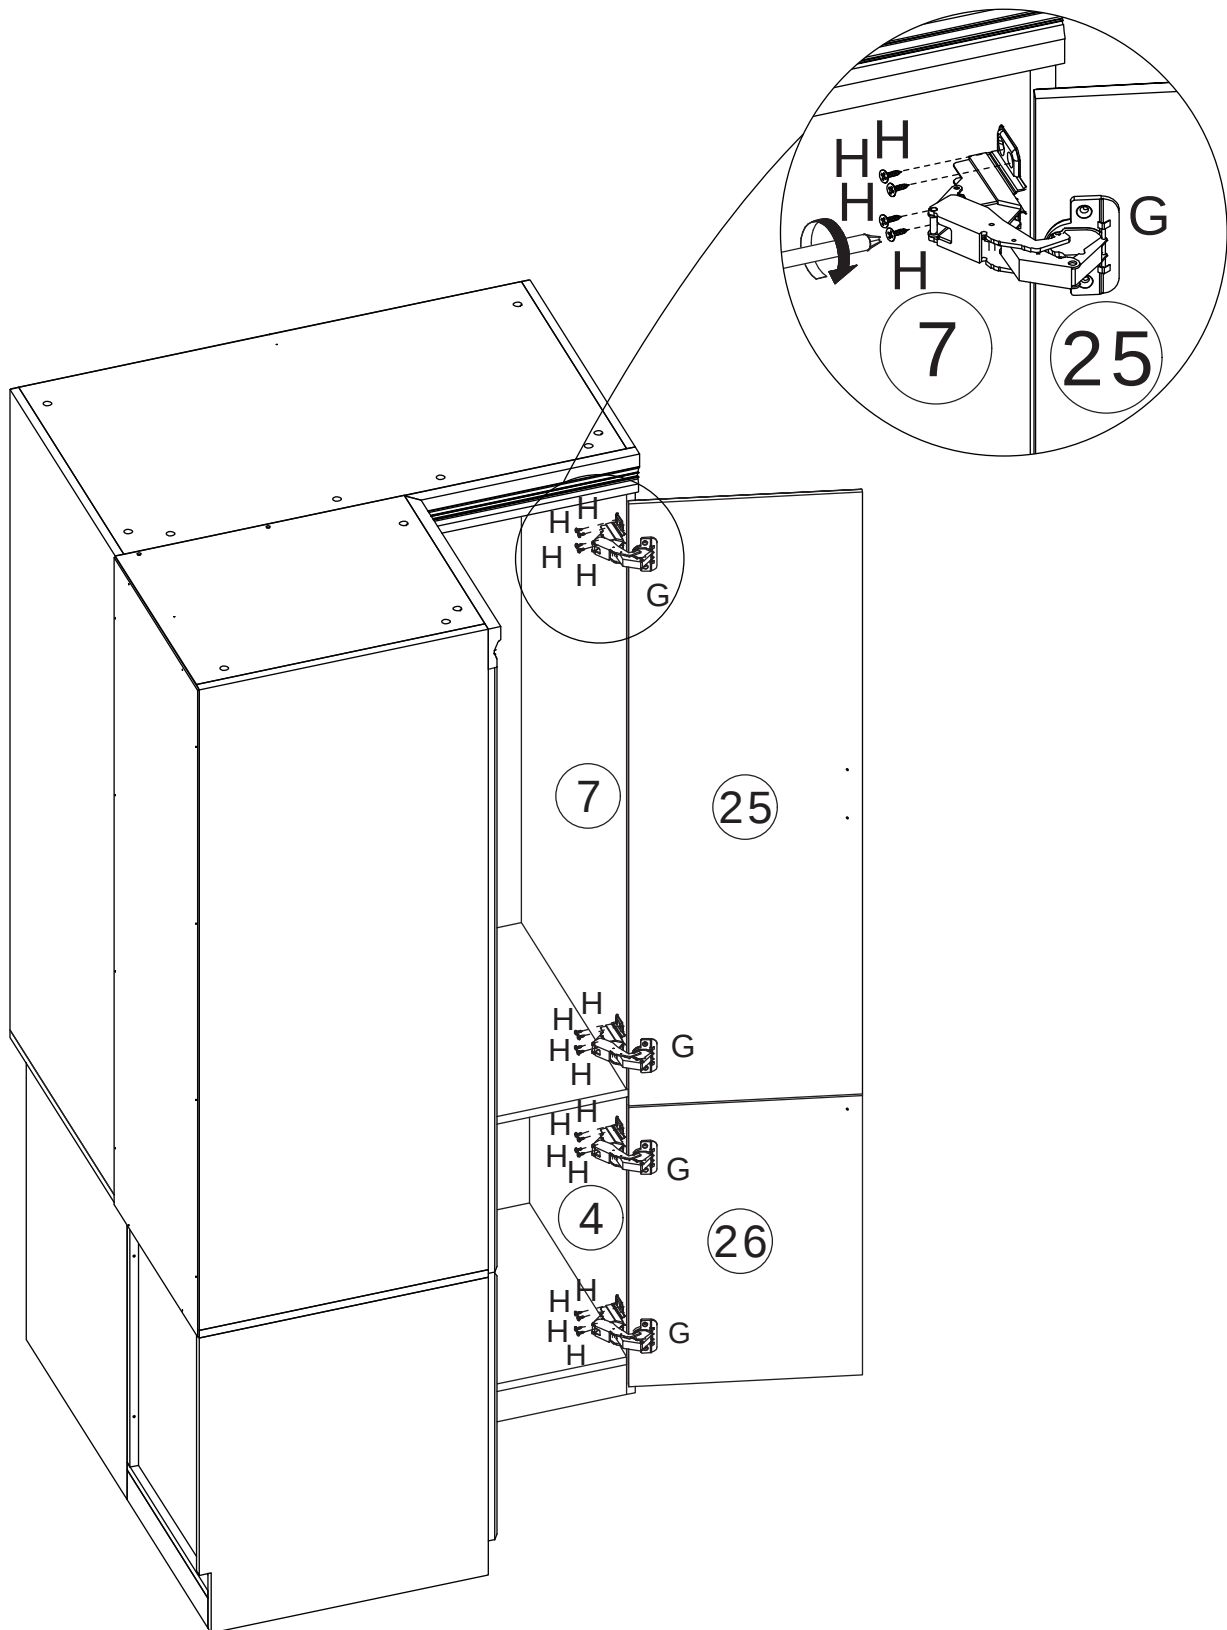


Assemble door 25 and 26 to board 7 and 4 by fixing hinge with screw(H) as shown.

40


F x 1



 L=862 mm

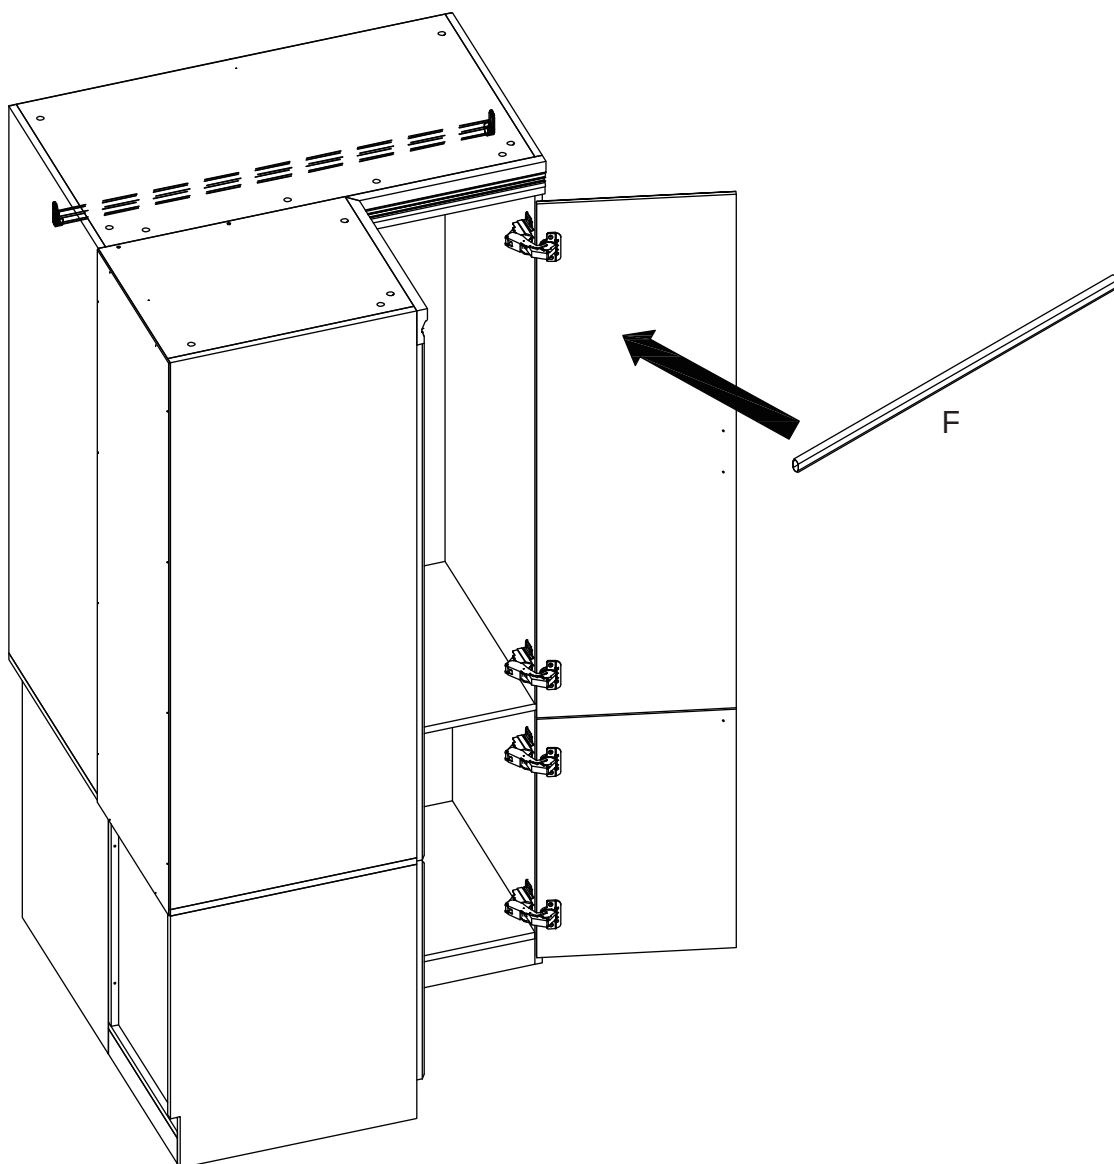


Place clothing rod(F) on the hook.

 


If there is misalignment after you install, adjust the screw to the best condition.

If doors are still not aligned if the hinges are properly correctly, please watch the video.

 
<https://youtu.be/n0Lb36SoODM>

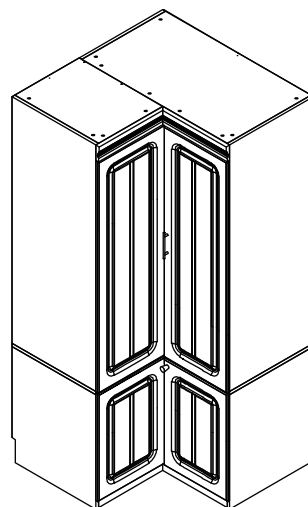


Up & Down Adjustment

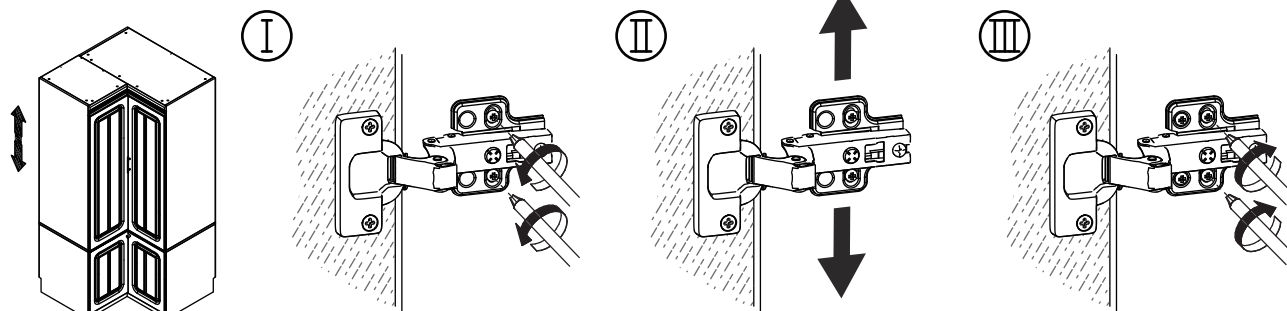 


Left & Right Adjustment

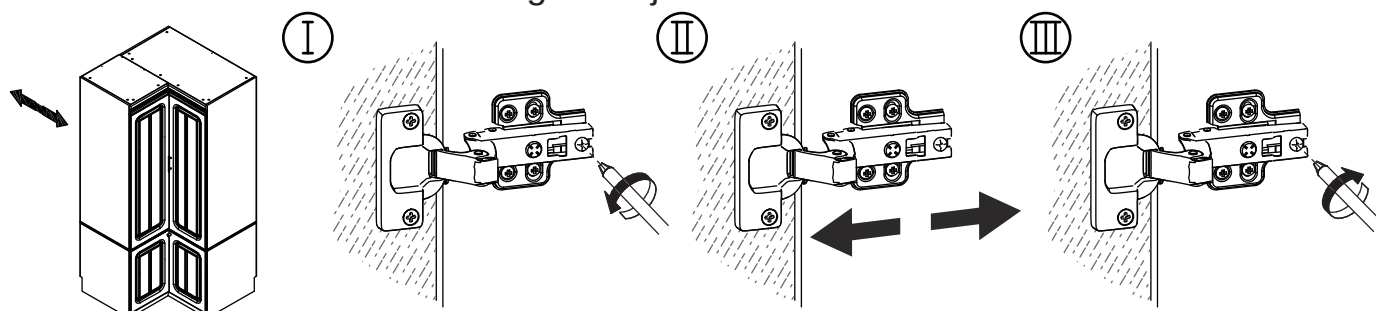 



Forward & Back Adjustment

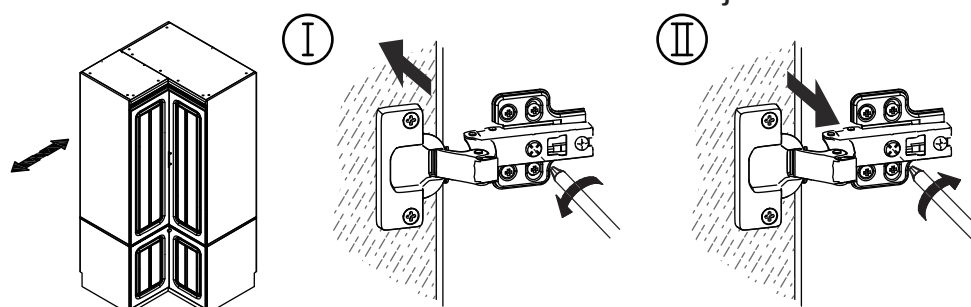 

42

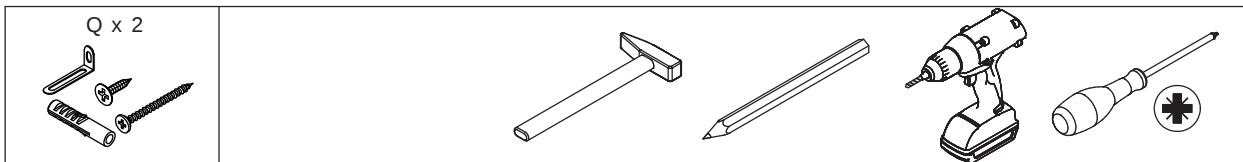 

Install anti-tipping device as shown.

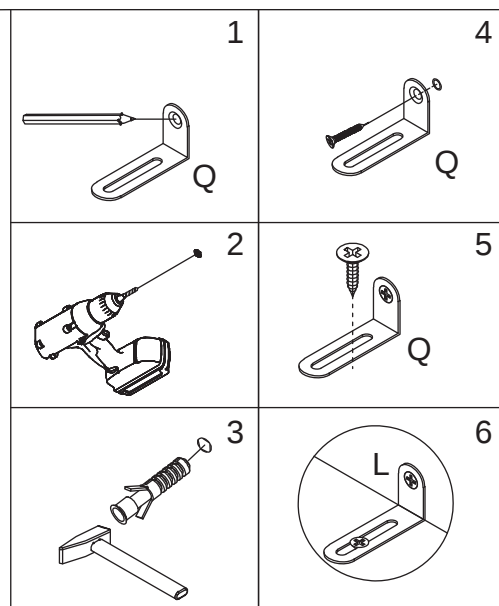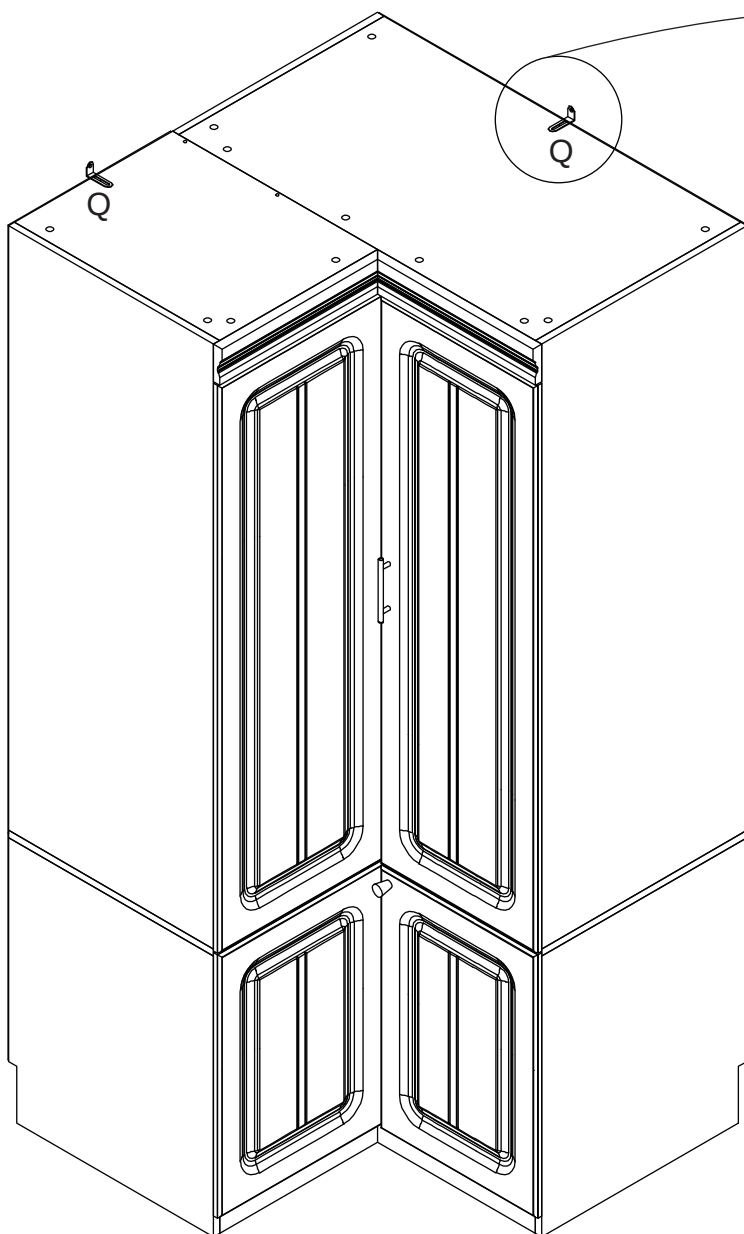  

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

 
- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.



INSTALLATION

Product Manual

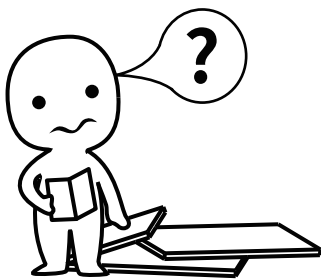


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

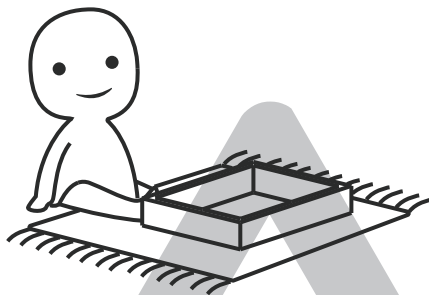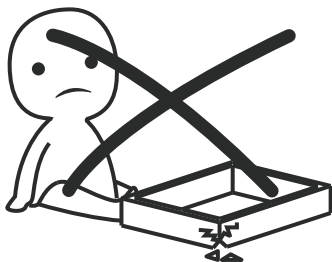



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

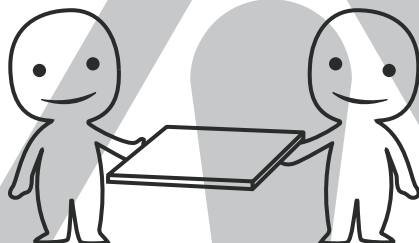

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

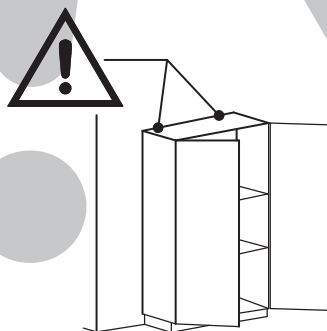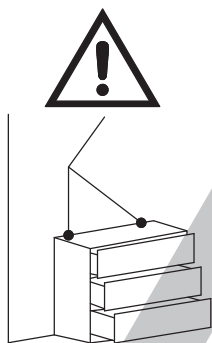

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

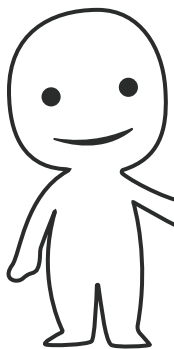


Please prepare the following tools

  

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 24




CRA0635A

B x 24



CRB1595A

 C x 20



CRF0830A

D x 24




CRE0312A

E x 2



28 x 14 mm

 F x 4

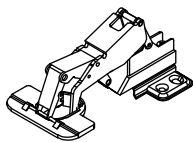

Ø 35

G x 28



CRD3514A

H x 1



Ø 20 x 23 mm

J x 1




CRE0418A

K x 10



 Ø 25

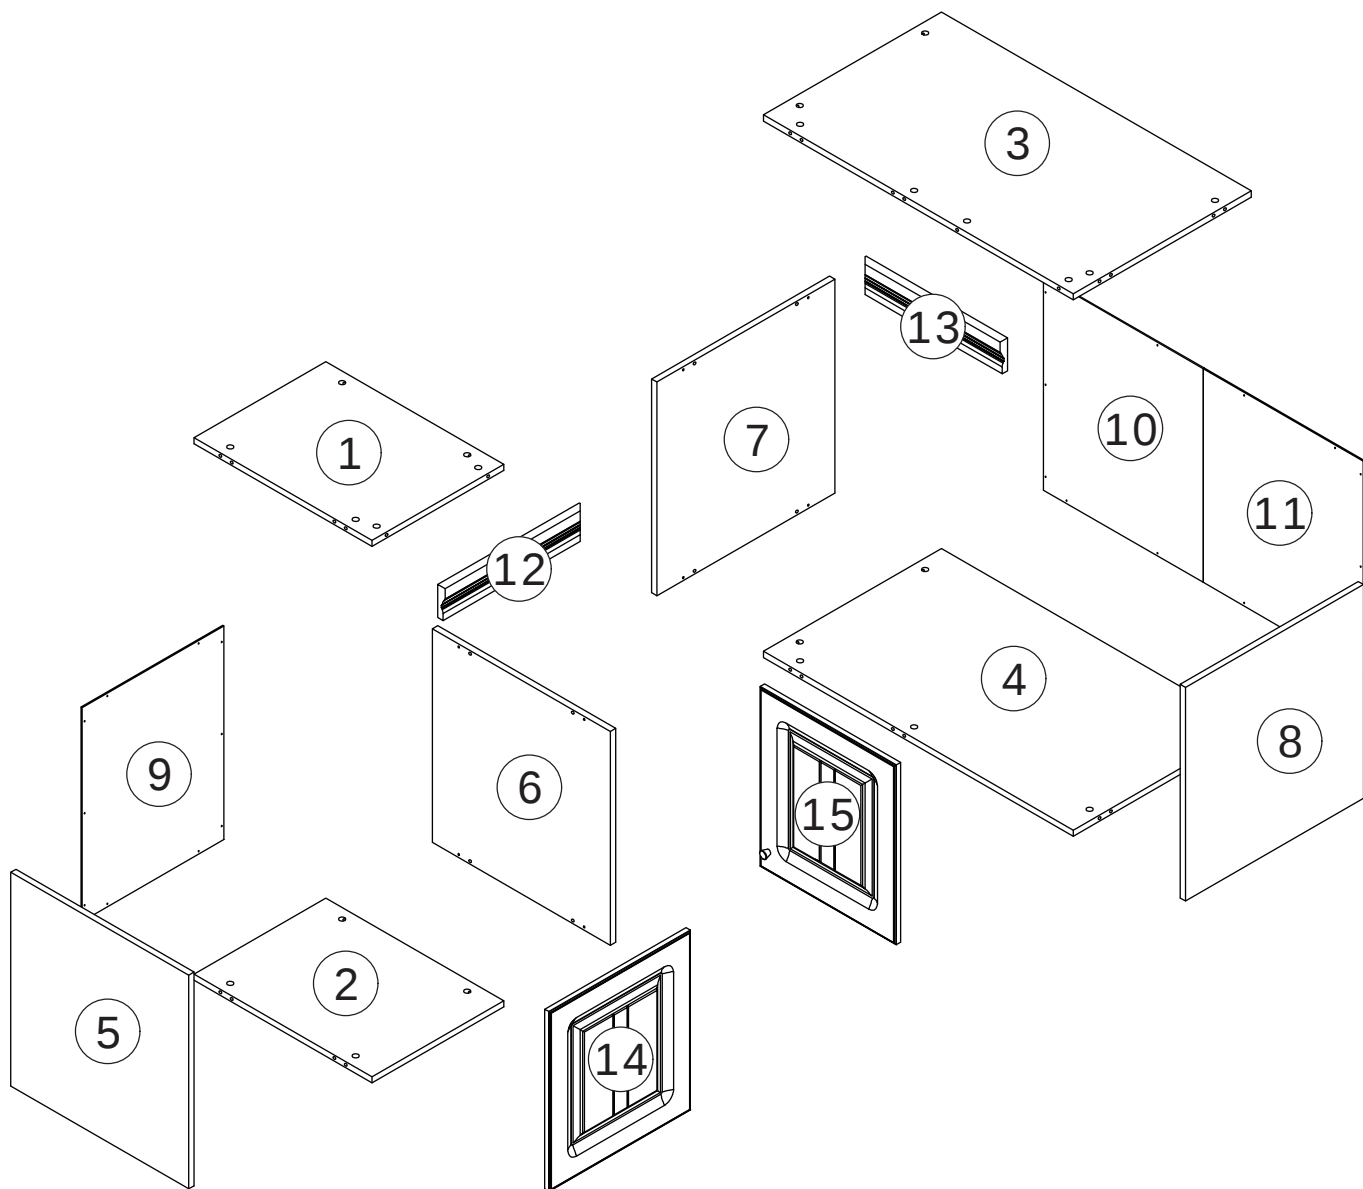


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:






- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

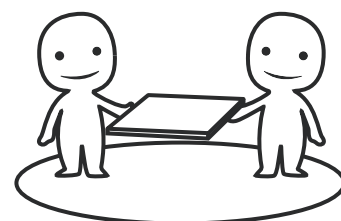






ASSEMBLED BY 2 ADULTS

     1

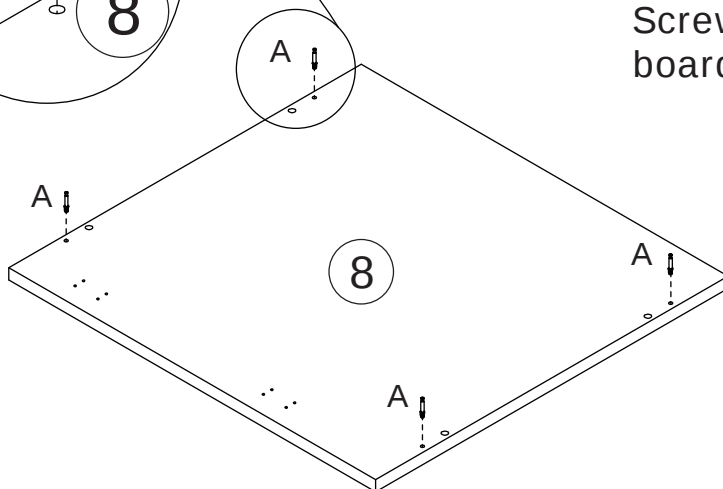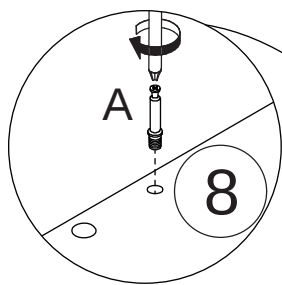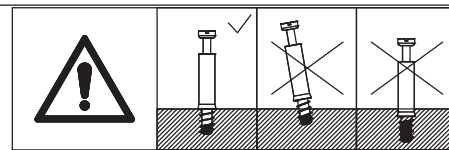
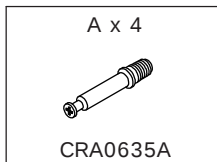


Screw eccentric rod(A) into board 8 at first.

     2

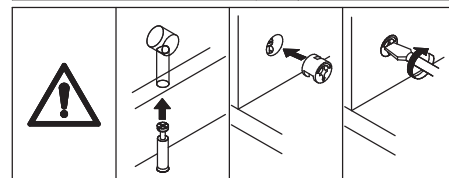
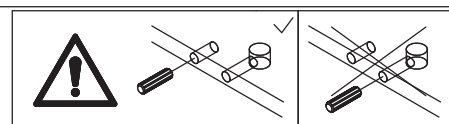
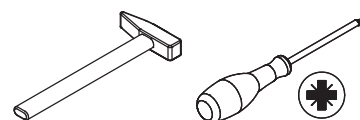
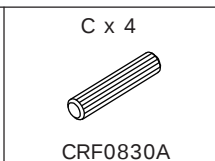
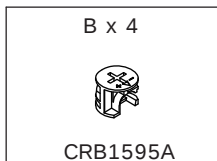


  Screw holes of the three boards should face up.

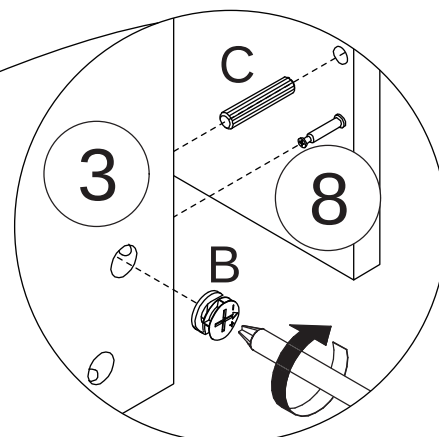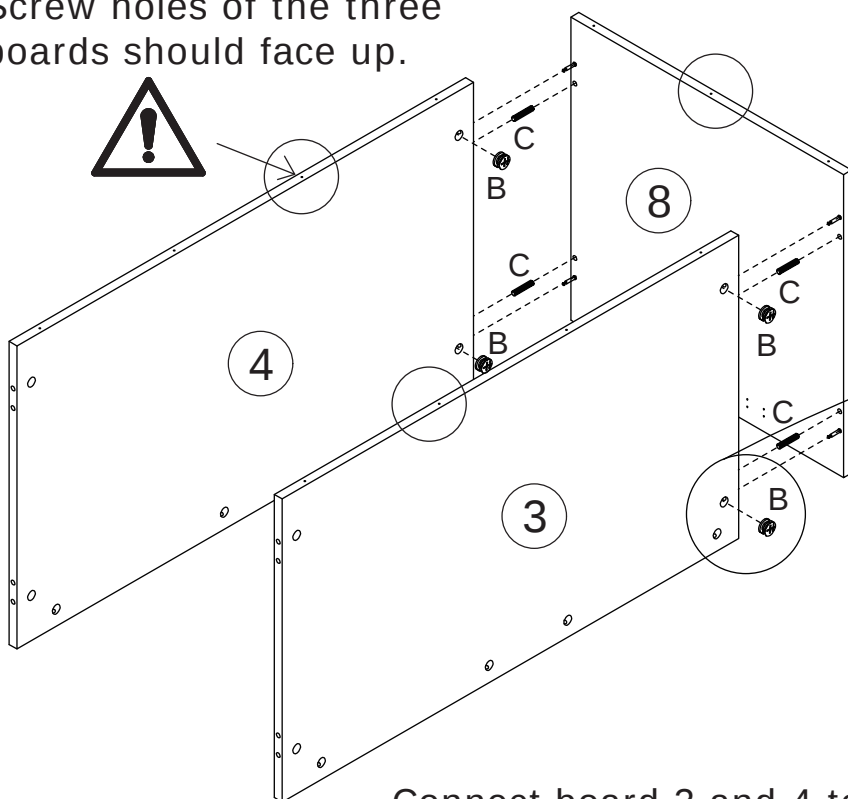






Connect board 3 and 4 to board 8 using wooden dowel(C), add cam lock(B) into board 3,4 and turn clockwise to tighten as shown.

     3

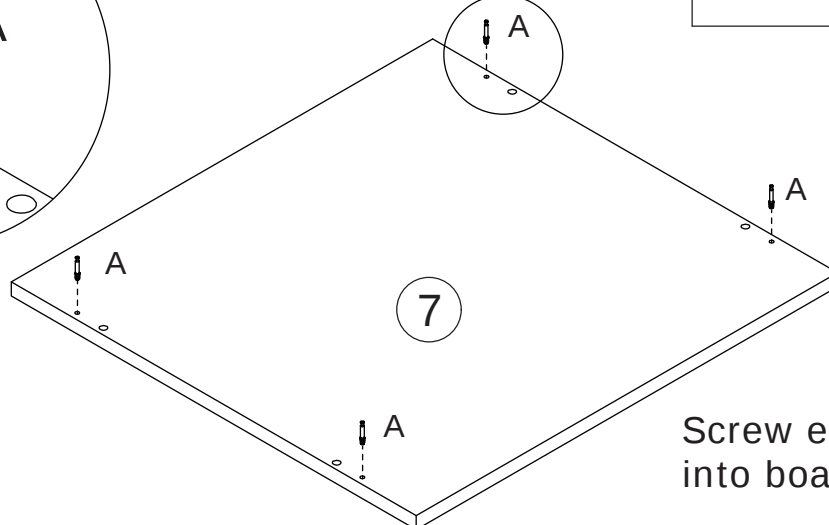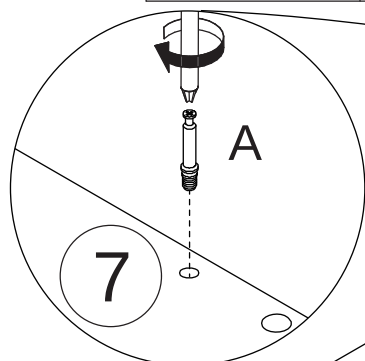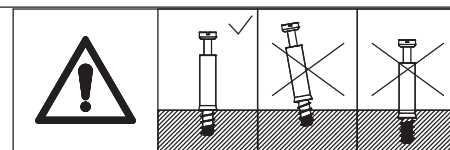
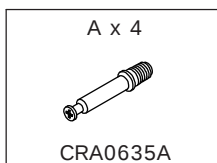


Screw eccentric rod(A) into board 7 at first.

     4

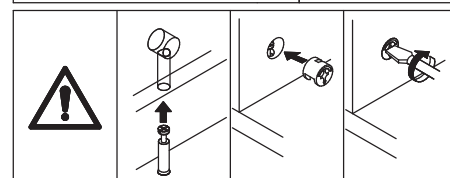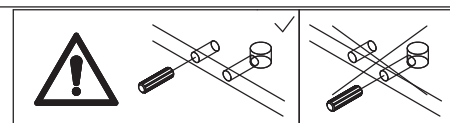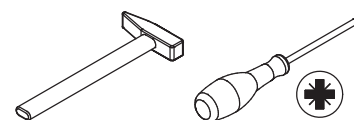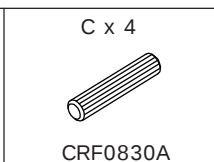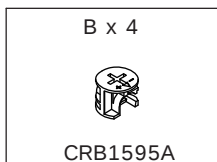


 
 
Screw holes of the four boards should face up.

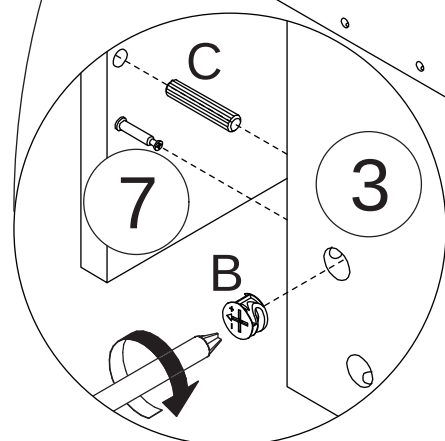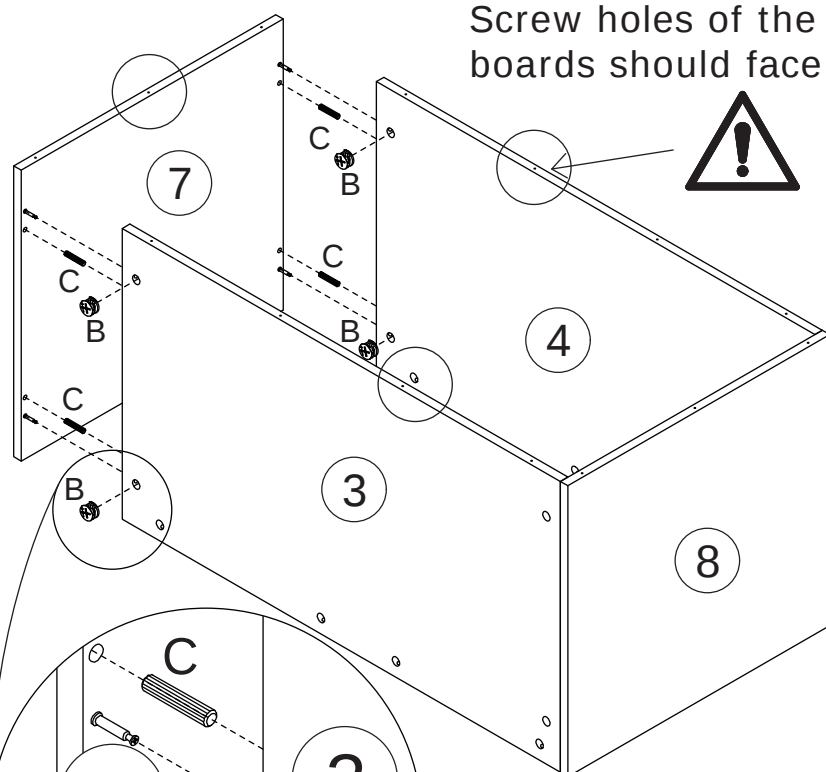

Connect board 3 and 4 to board 7 using wooden dowel(C), add cam lock(B) into board 3,4 and turn clockwise to tighten as shown.

5

 
 
 
D x 14
CRE0312A

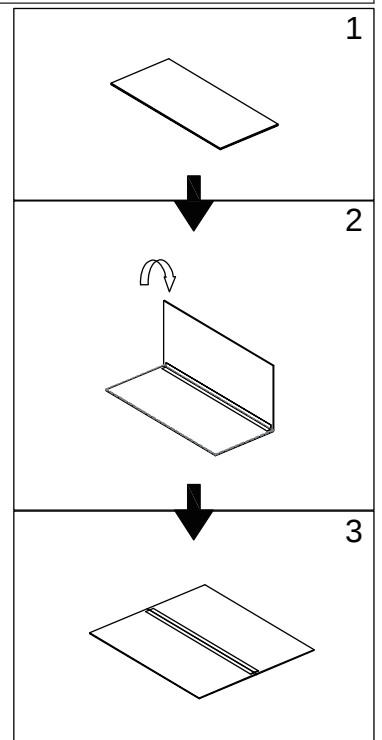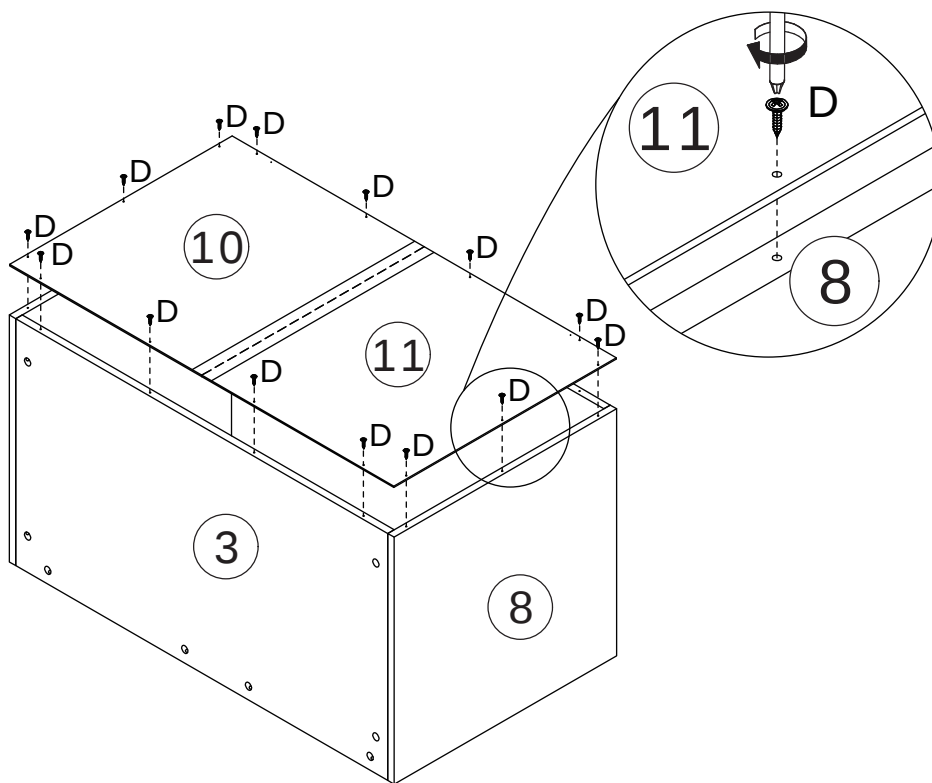

Fix back board 10 and 11 to the component with screw(D) as shown.





6

   A x 2
CRA0635A

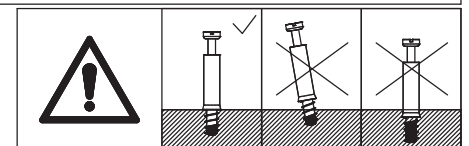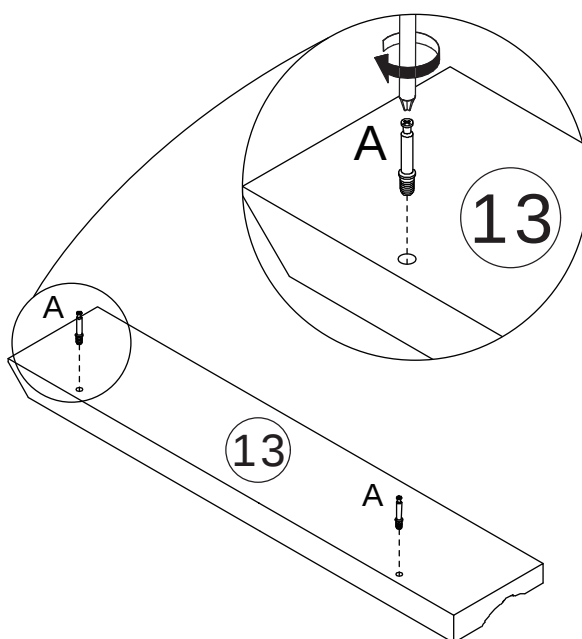




Screw eccentric rod(A) into board 13 at first.

    7

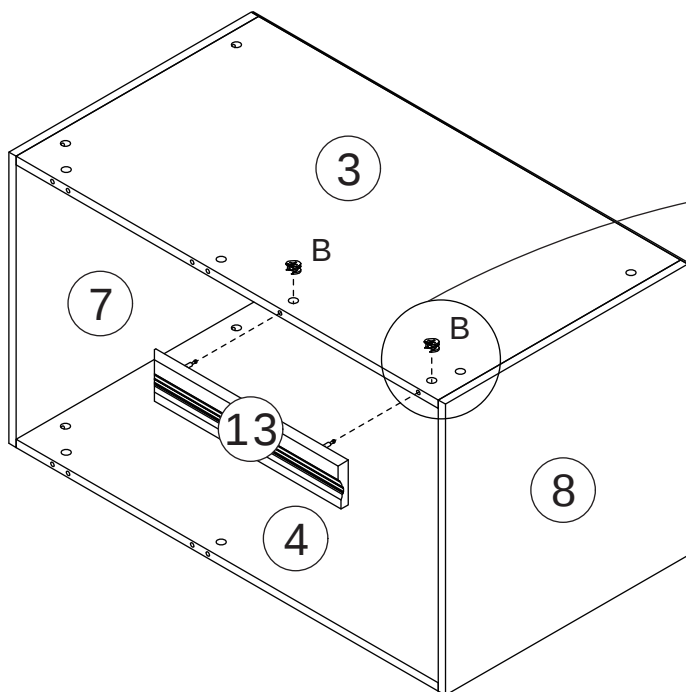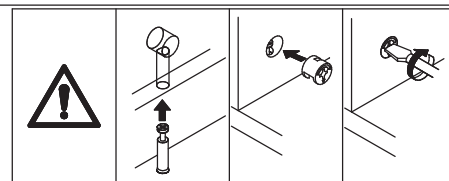
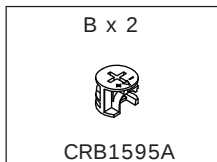


Attach board 13 to board 3, add cam lock(B) into board 3 and turn clockwise to tighten as shown.

 
 
 
8

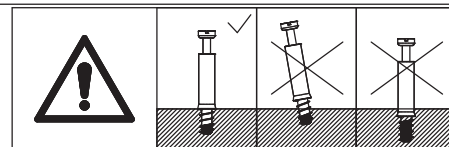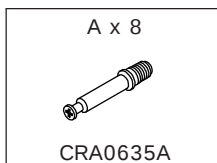

 
 
Screw eccentric rod(A) into board 6 at first.
Flip to back, screw eccentric rod(A) into as well.

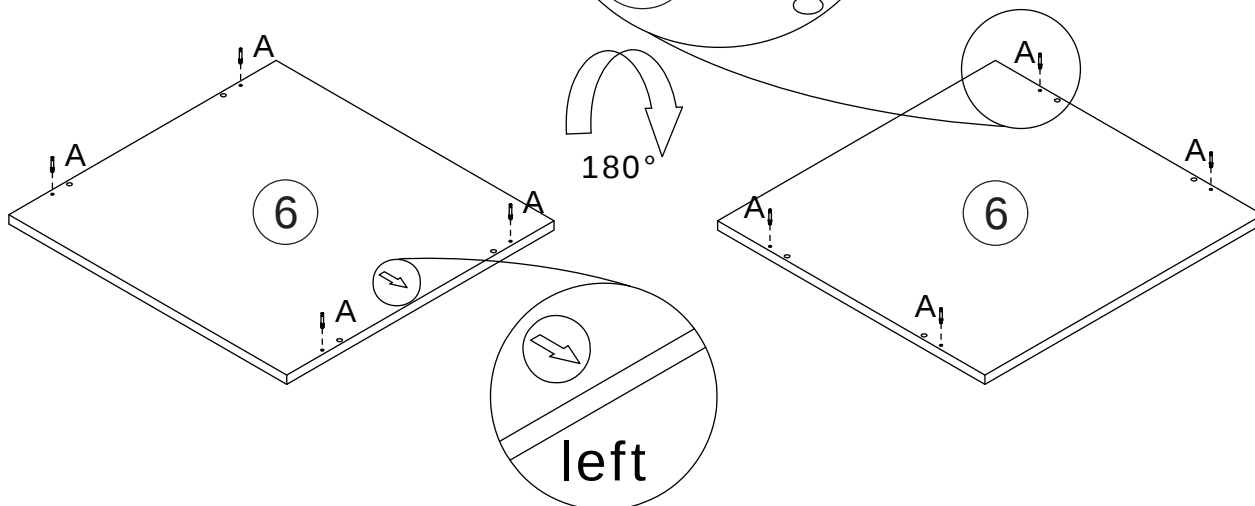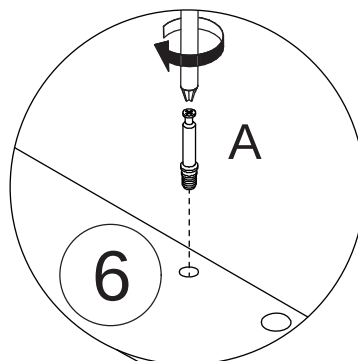

9

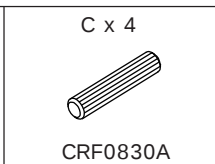  
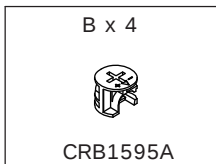 


  Screw holes of the three boards should face up.

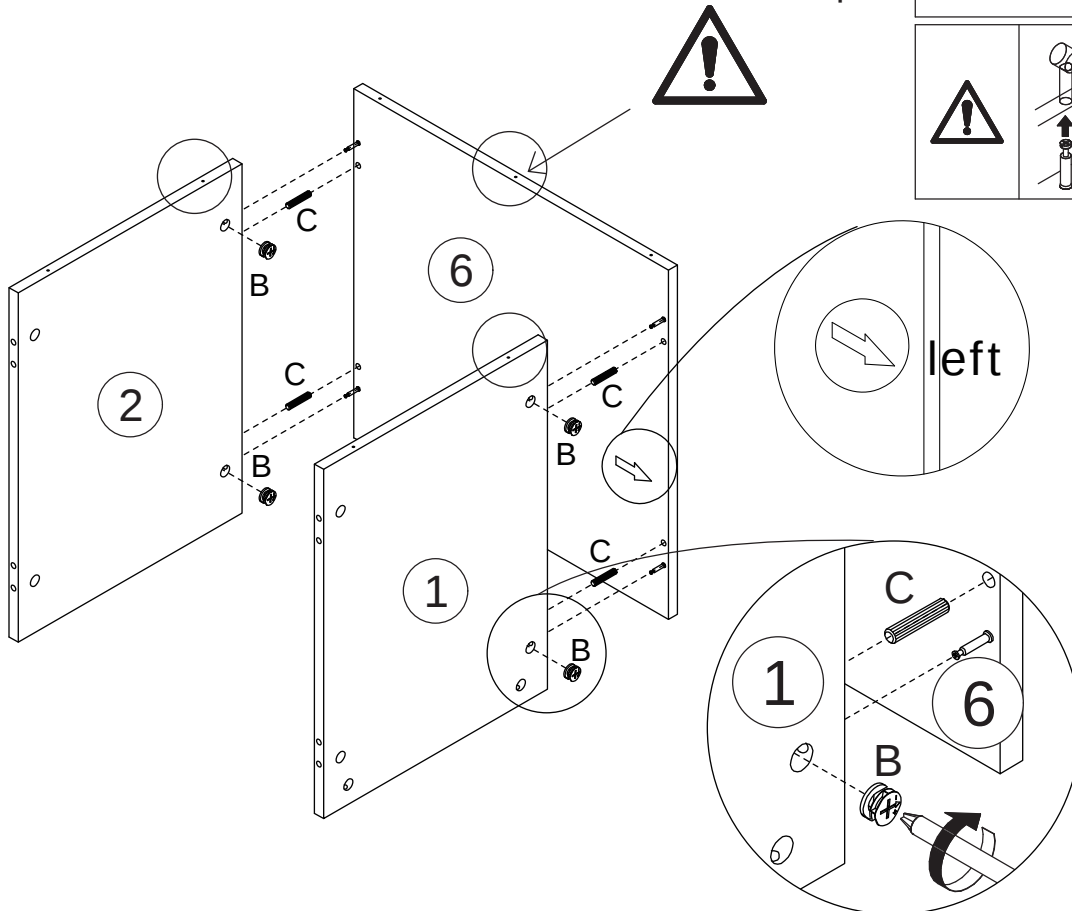
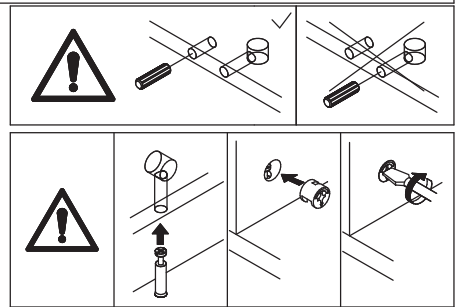


Connect board 1 and 2 to board 6 using wooden dowel(C), add cam lock(B) into board 1,2 and turn clockwise to tighten as shown.

  10

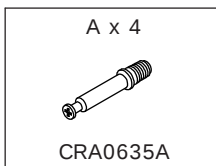

  Screw eccentric rod(A) into board 5 at first.

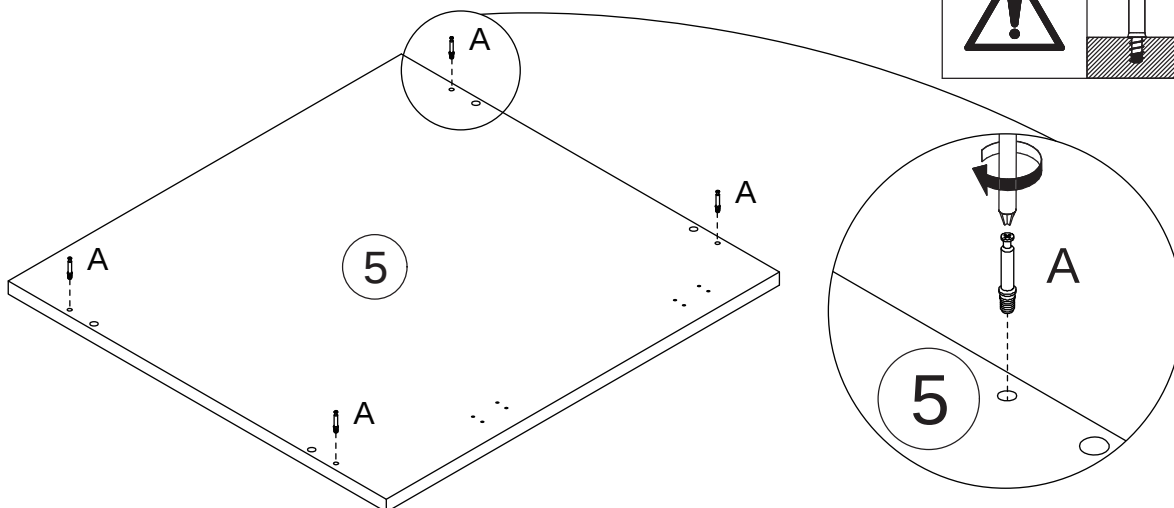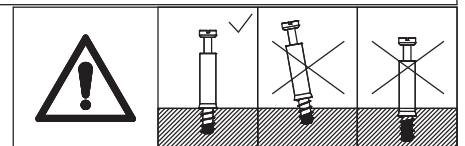

11

B x 4




CRB1595A




C x 4



 CRF0830A



   Screw holes of the four boards should face up.

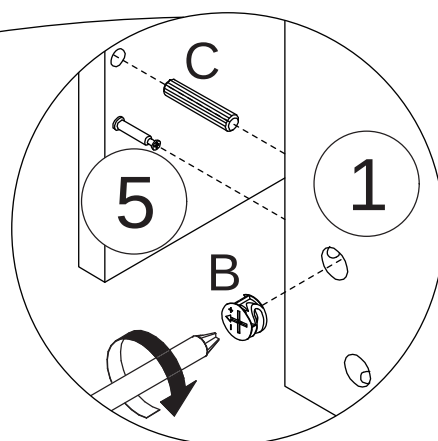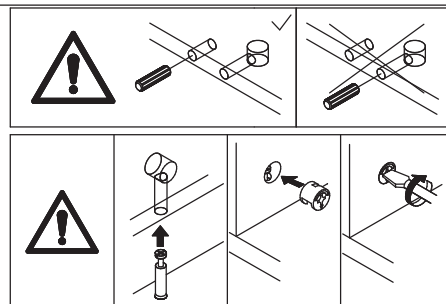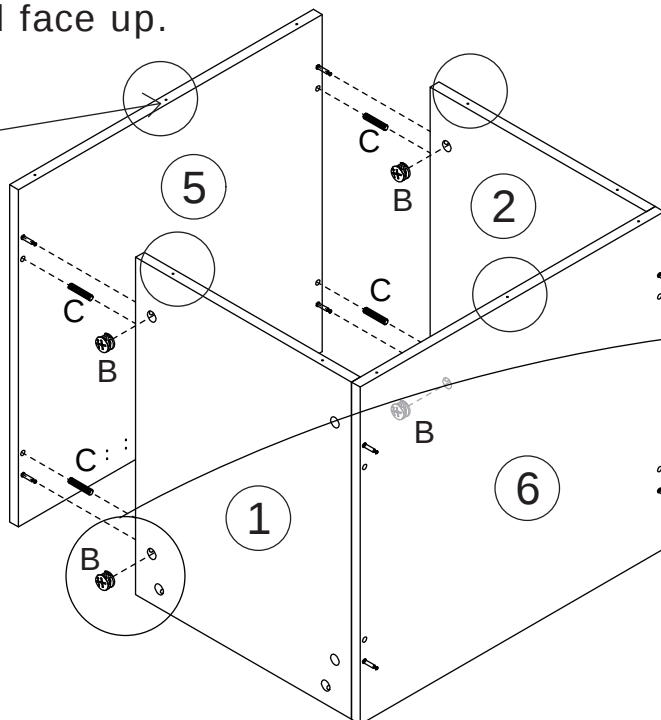



Connect board 5 to board 1 and 2 using wooden dowel(C), add cam lock(B) into board 1,2 and turn clockwise to tighten as shown.

12

D x 10



  CRE0312A

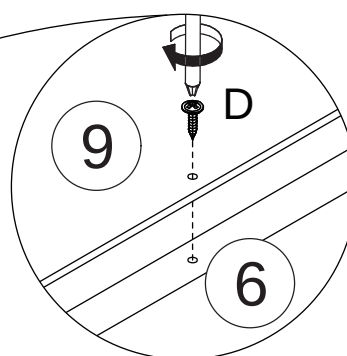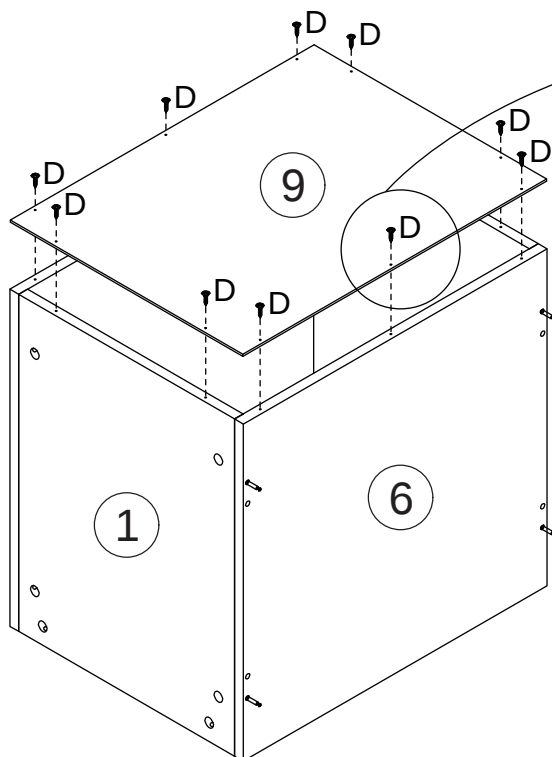




Fix back board 9 to the component with screw(D) as shown.

13

A x 2



   CRA0635A

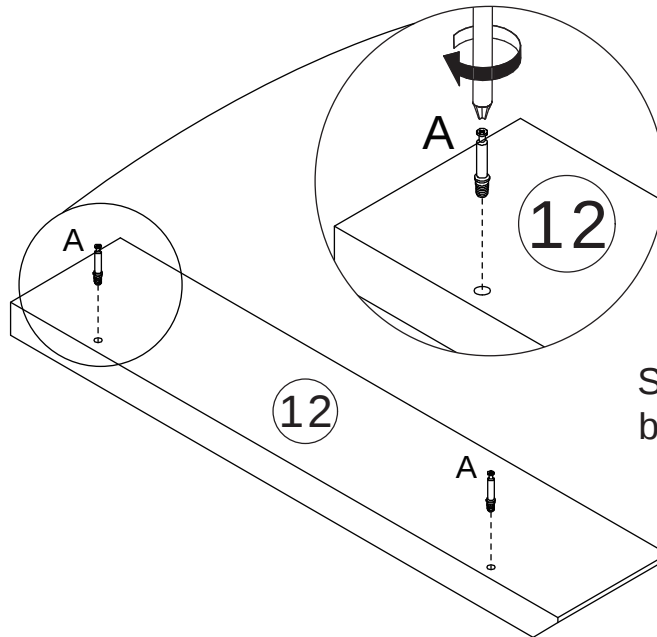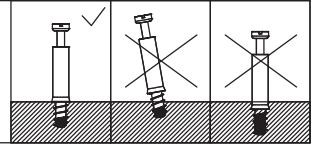





Screw eccentric rod(A) into board 12 at first.

14

B x 2



    CRB1595A

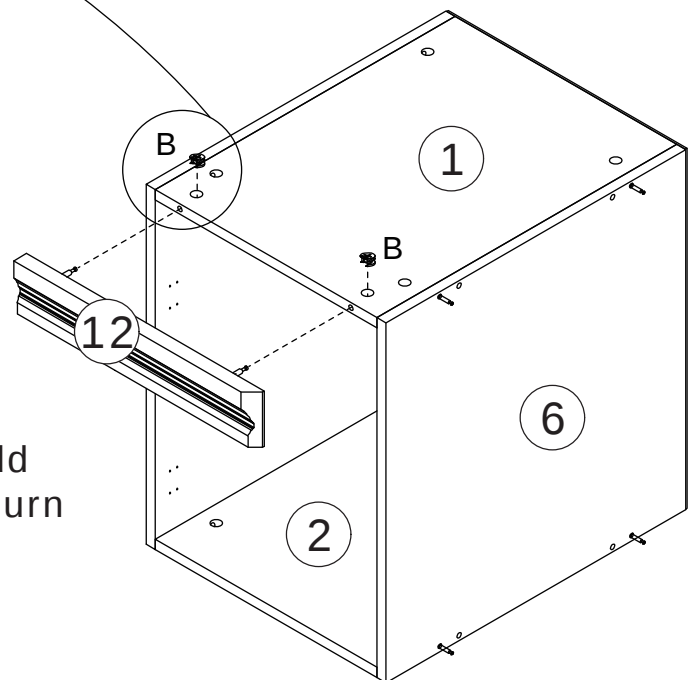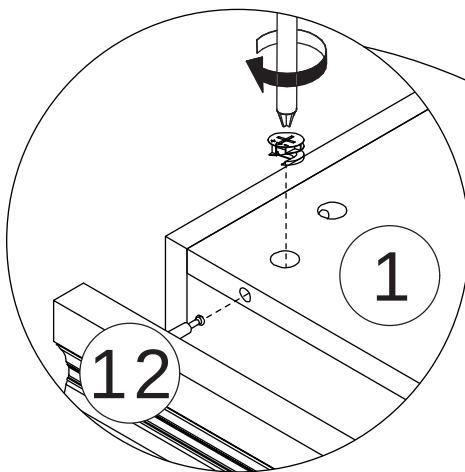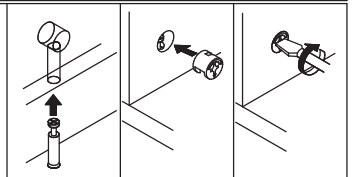

Attach board 12 to board 1, add cam lock(B) into board 1 and turn clockwise to tighten as shown.


15

B x 4






CRB1595A

 C x 4



CRF0830A

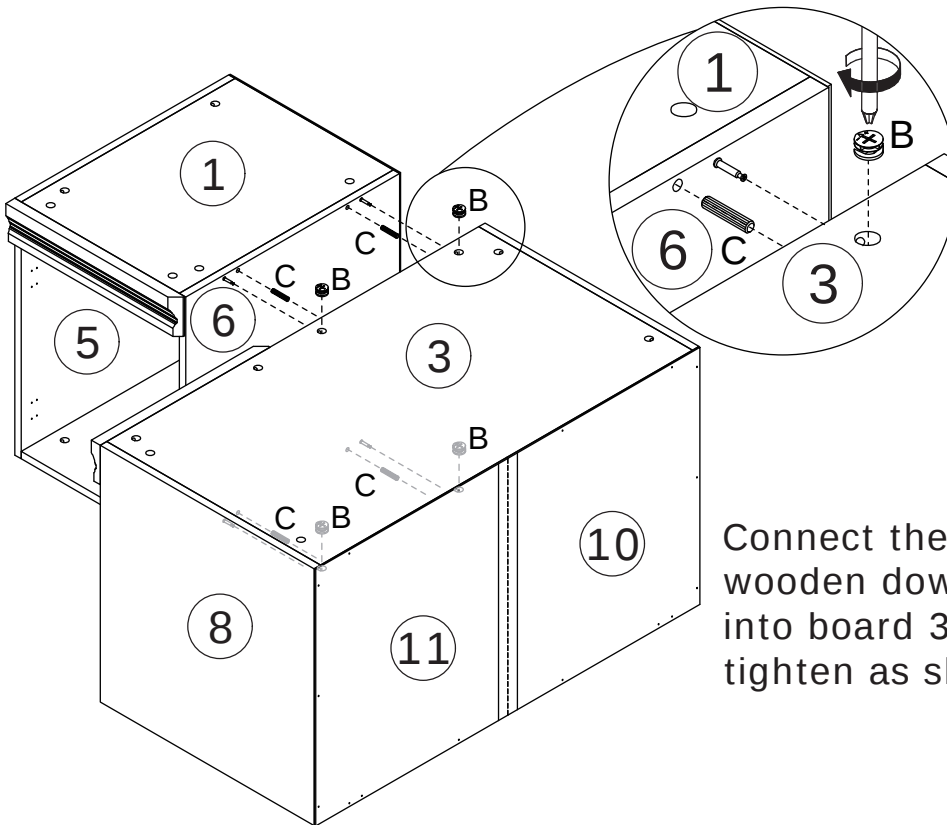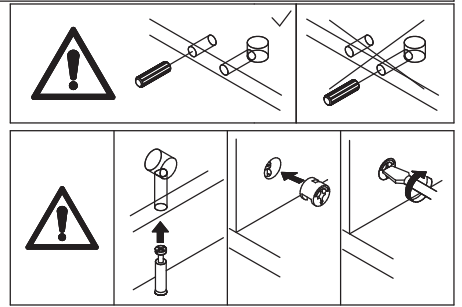   





Connect the two components using wooden dowel(C), add cam lock(B) into board 3,4 and turn clockwise to tighten as shown.

16

K x 10




    Ø25

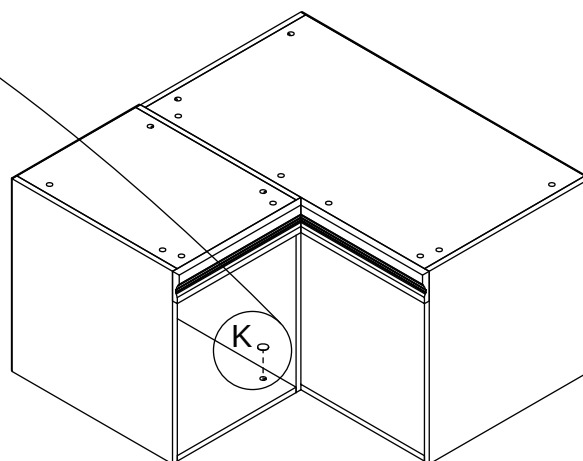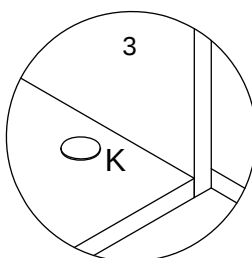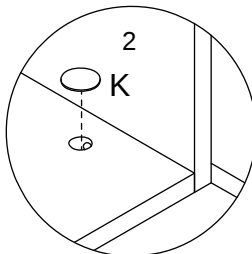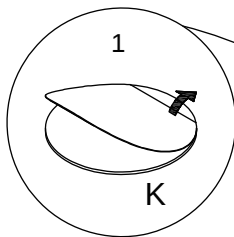

Use sticker(K) to cover cam lock holes.


 
17

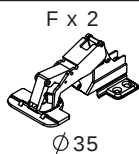

G x 4



  CRD3514A

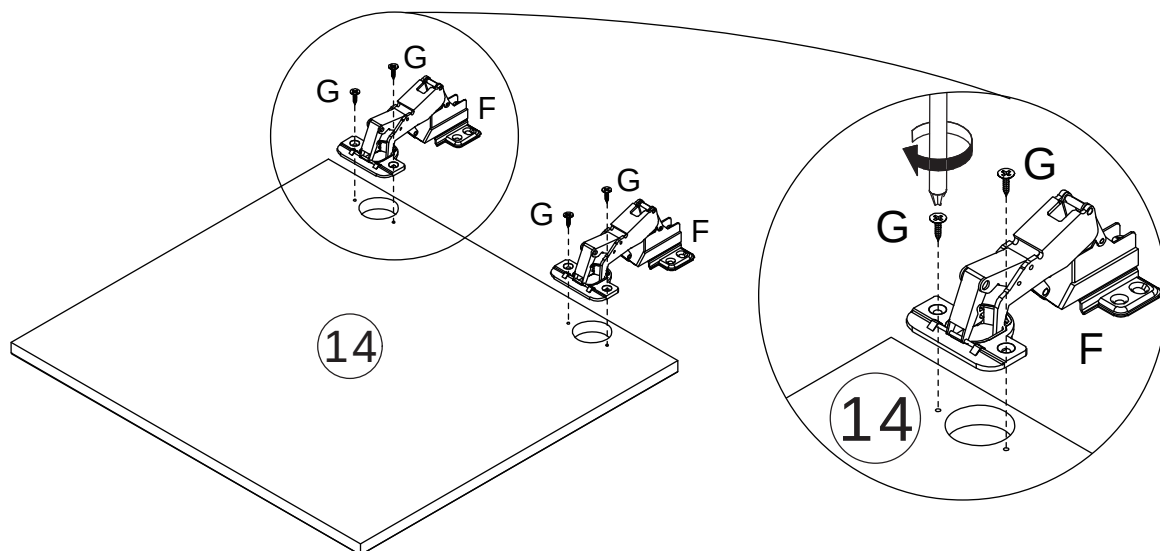


Fix hinge(F) to board 14 with screw(G) as shown.

18


G x 8




 
CRD3514A




 Assemble door 14 to board 5 by fixing hinge with screw(G) as shown.

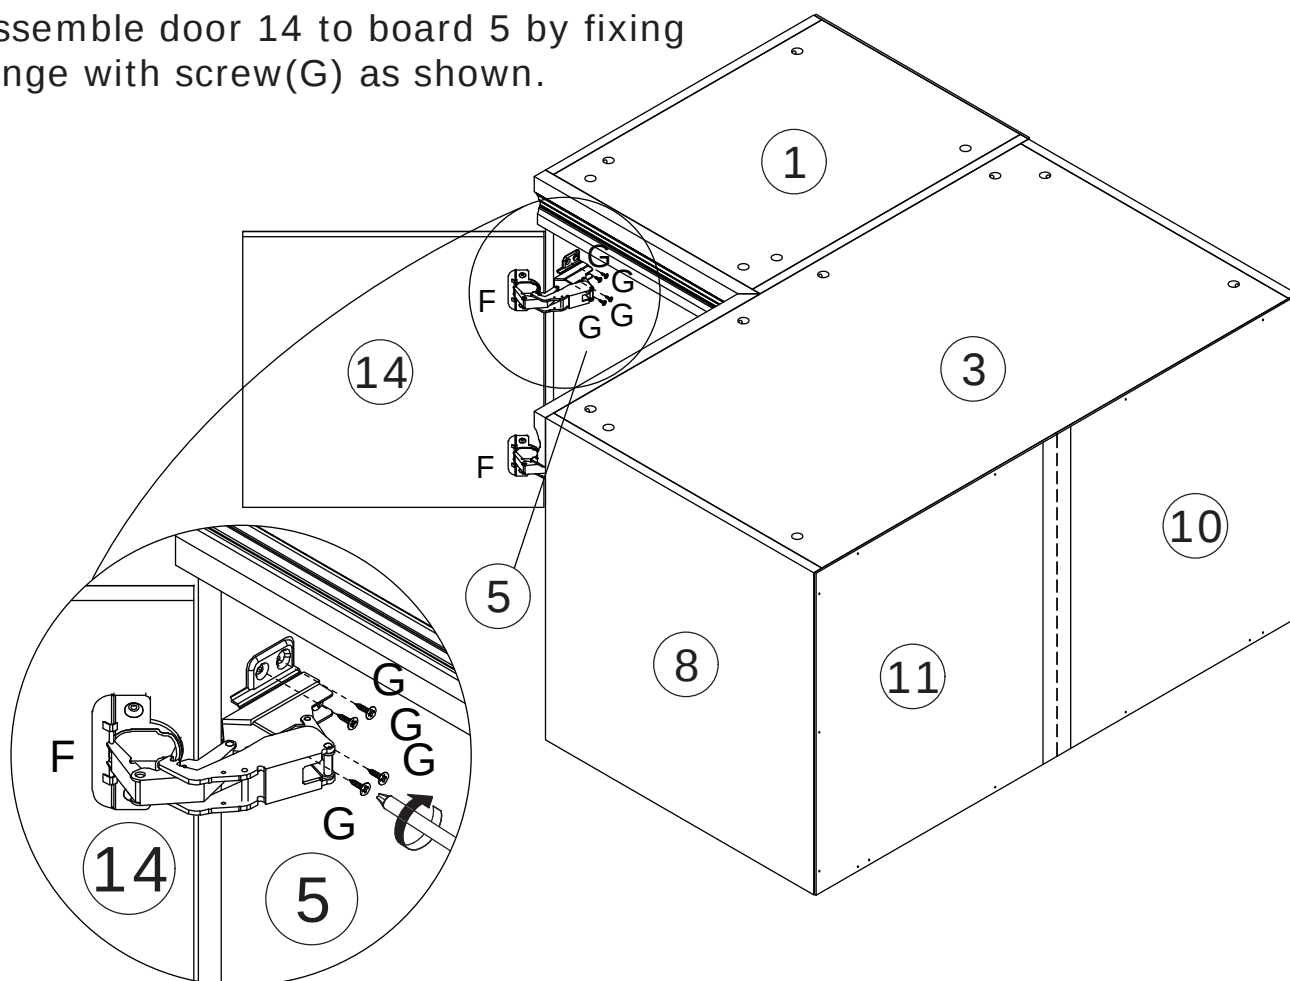


19

  F x 2  Ø35	G x 4  CRD3514A	H x 1  Ø20 x 23 mm	J x 1  CRE0418A	
---	--	---	---	---

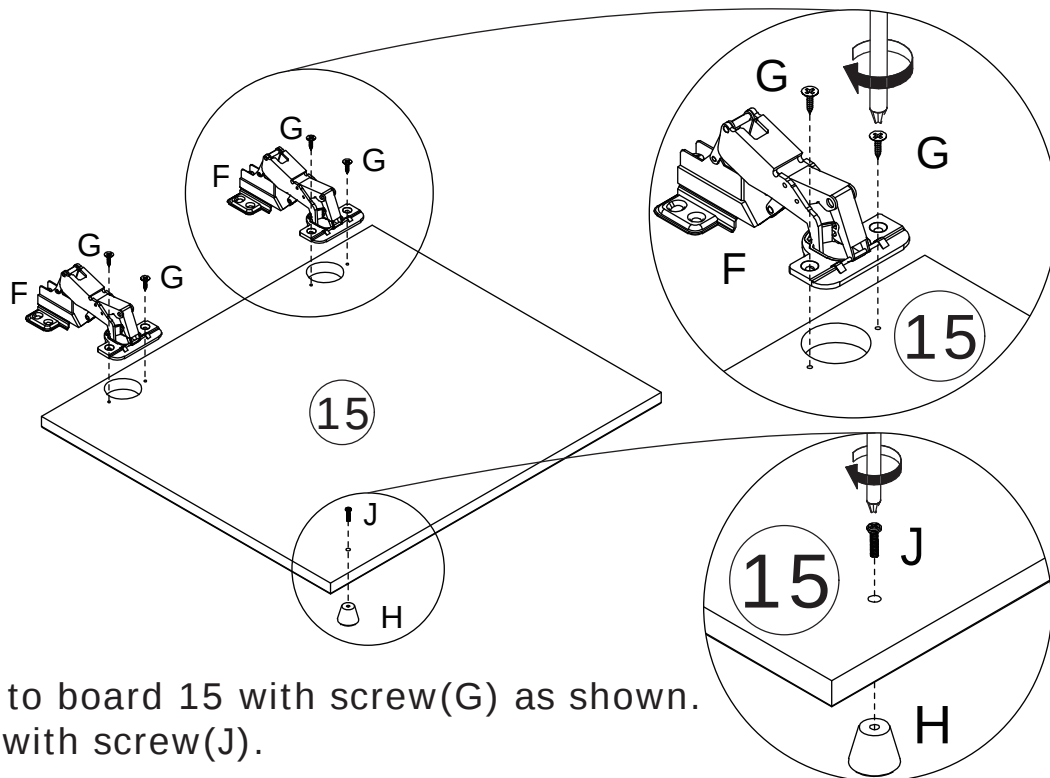 



Fix hinge(F) to board 15 with screw(G) as shown.
Fix knob(H) with screw(J).

 20

G x 8  CRD3514A	
--	---

  Assemble door 15 to board 8 by fixing hinge with screw(G) as shown.

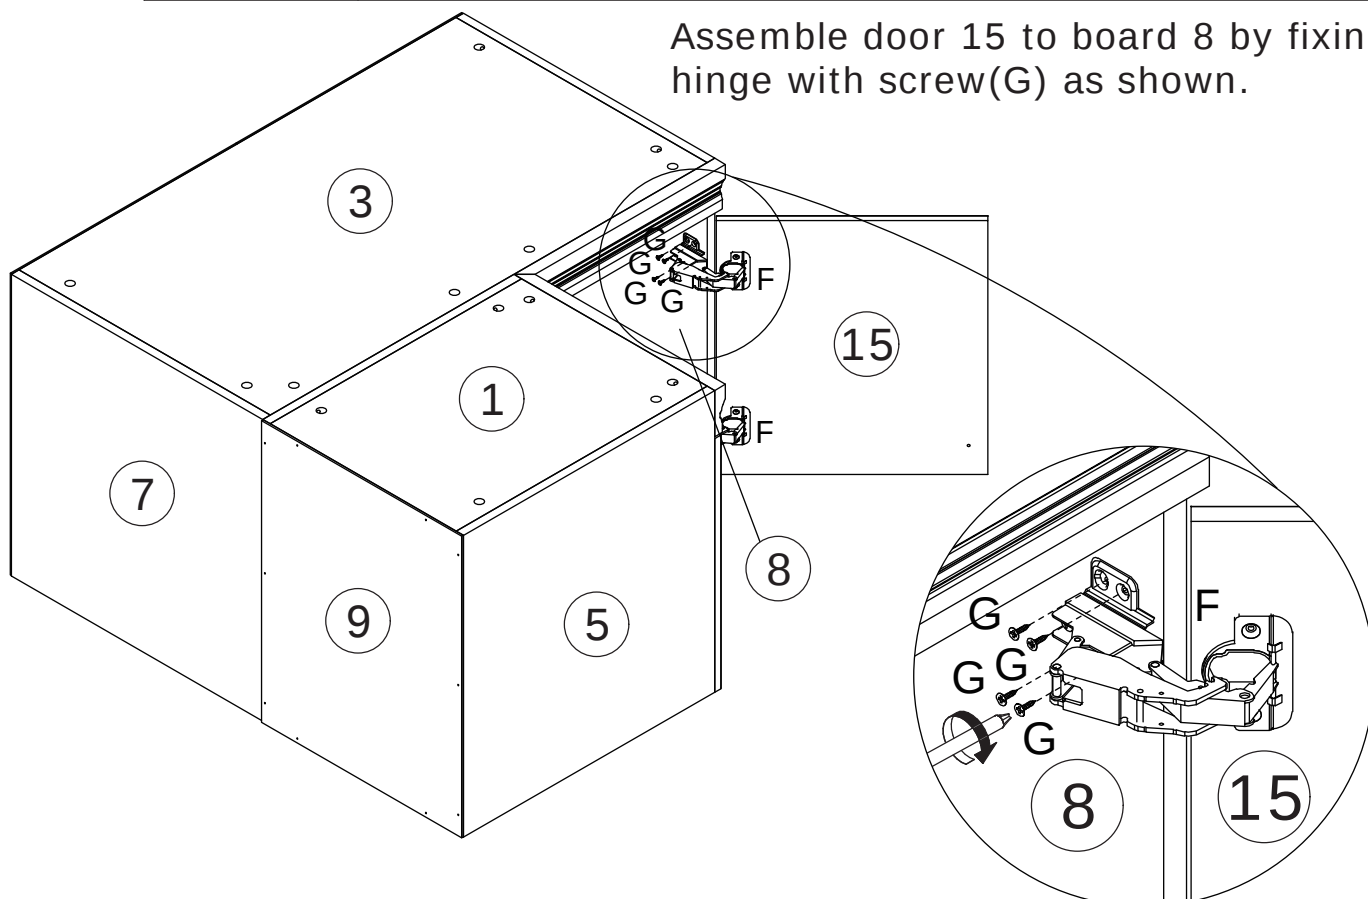





If there is misalignment after you install, adjust the screw to the best condition.

If doors are still not aligned if the hinges are properly correctly, please watch the video.

 
<https://youtu.be/n0Lb36SoODM>

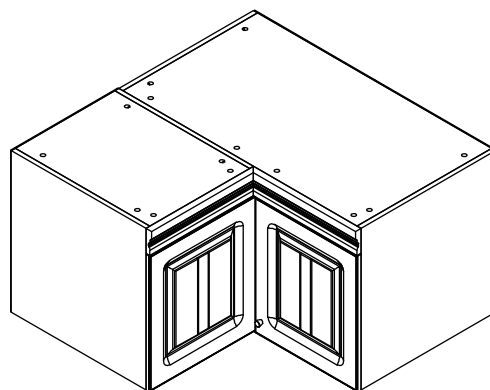


Up & Down Adjustment

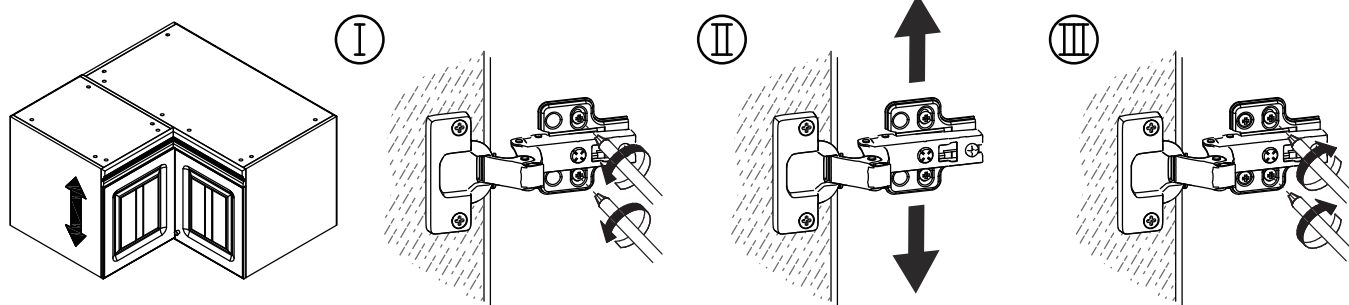 

Left & Right Adjustment

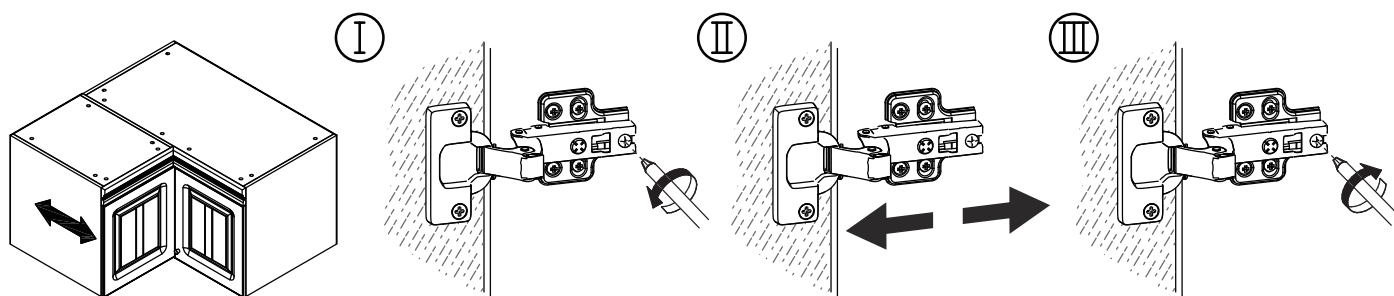 

Forward & Back Adjustment

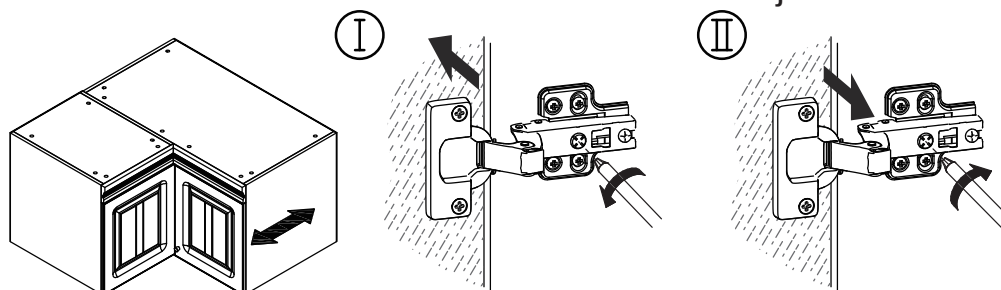 

22

E x 2




28 x 14 mm



G x 4



 CRD3514A



  Fix the top cabinet to a wardrobe using iron sheet(E) and screw(G) as shown.

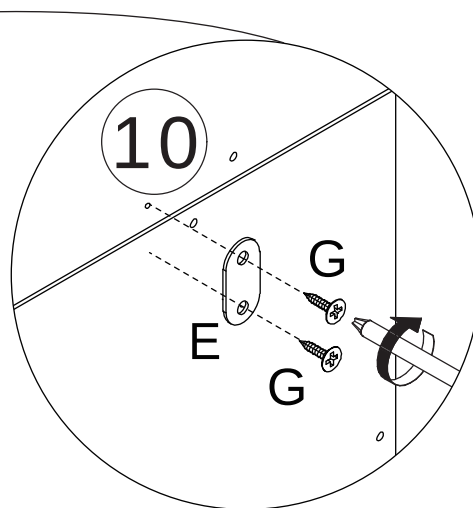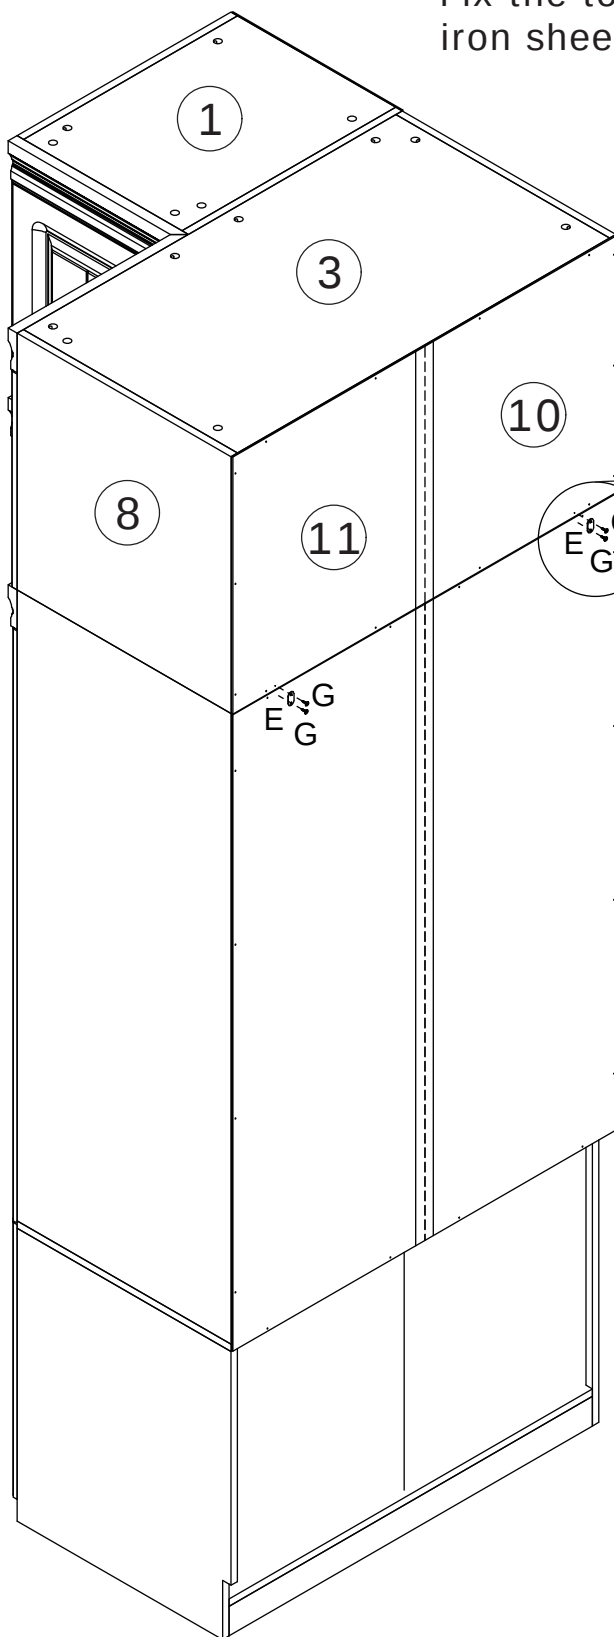

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.