



Step 1: First, use an internal hexagonal wrench to remove the screws that fix the tray.

Step 2: Replace the new tray and re-tighten the screws.