 


Sideboard

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

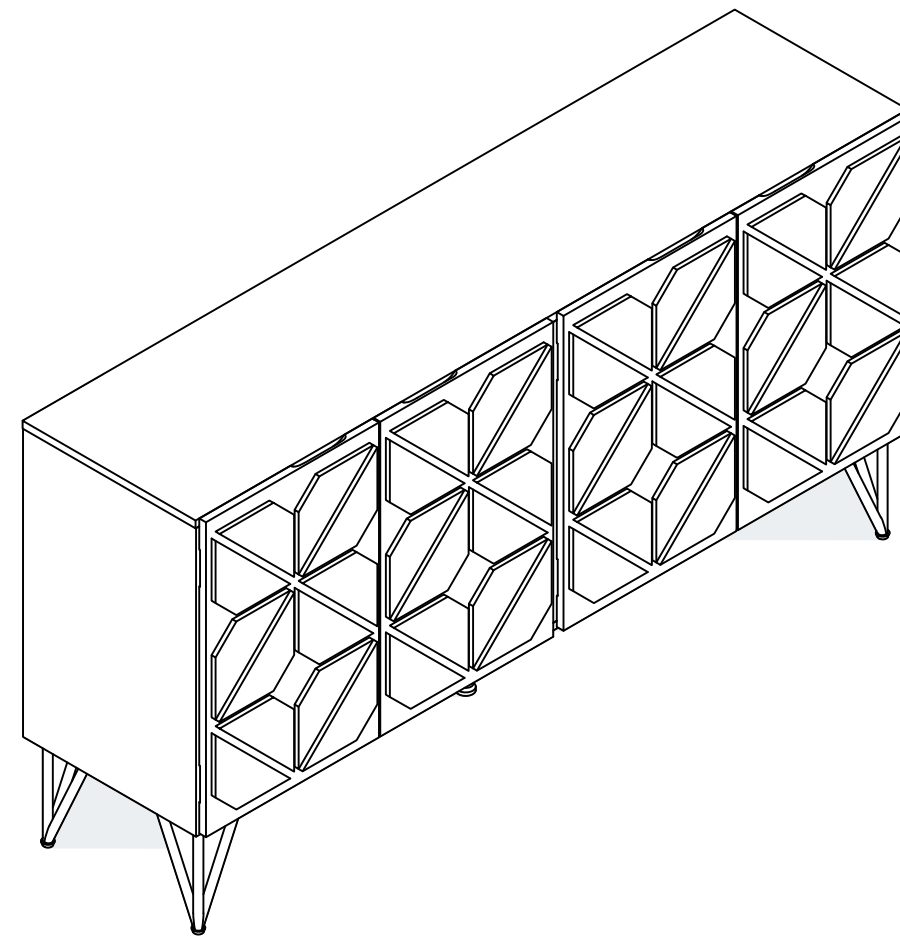

Dimensions

Width - 62.3 inch
Depth - 15.7 inch
Height - 32 inch

EN

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

Before Assembly



Thank you for choosing our product!

To ensure a smooth installation process, please read this guide carefully to familiarize yourself with the required tools, materials, and installation steps.

Follow the relevant sections to avoid any damage caused by improper installation, and make sure to review all operation and safety guidelines for correct installation procedures.

Packaging Notice:

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

Safety and Care Advice



Important :

Please read these instructions fully before starting a sembly.

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.

Warning

In order to help prevent overturning, please follow these instructions.

- Use the anti tip strap or wall fixing method provided (if applicable).
- Do not allow children to climb or hang on the furniture.
- Do not open more than one drawer at a time.
- Do not place heavy items in the top drawers.
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose.
- Please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type.

Customer Service Guide



Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the "Parts List" in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., "Missing 5 pieces of M6×30mm screws."

Contact Us:

By Email:

Send an email with the subject line "Missing Parts Issue." Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with your order details, using the subject line "Product Damage Issue."

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team.
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Helpful Tips

To process your issue efficiently, please prepare the following information:

 
- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

Thank you for your trust and support!
We hope you enjoy using our product!


Parts List - Panels




Please check you have all the panels listed below.

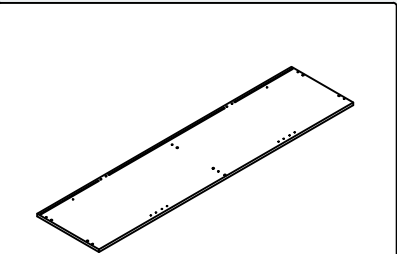


1 1585*385*15mm **x1**

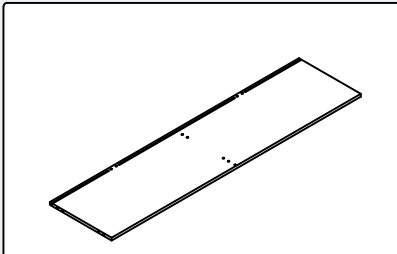 


2 1553*385*15mm **x1**

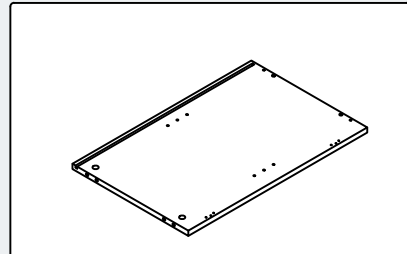 


3 585*385*15mm **x1**

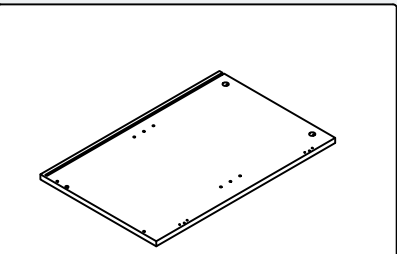 


4 585*385*15mm **x1**

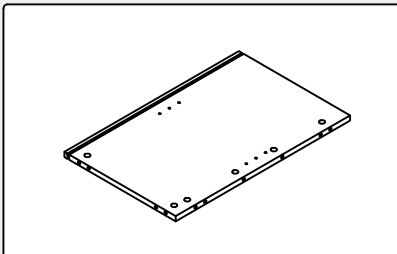 


5 570*370*15mm **x1**

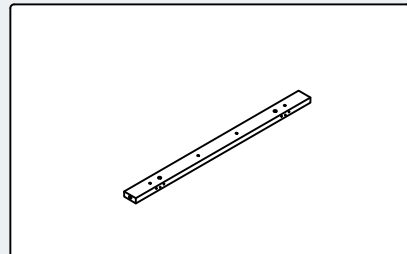 


6 570*36*15mm **x1**

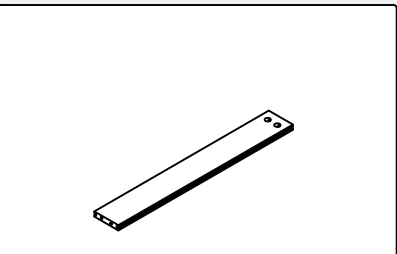 


7 570*80*15mm **x2**

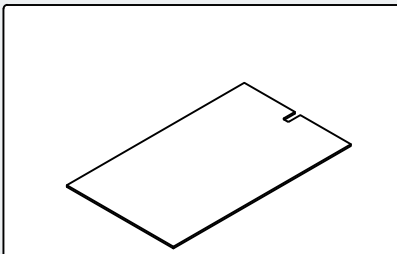 


8 580*354*5mm **x2**

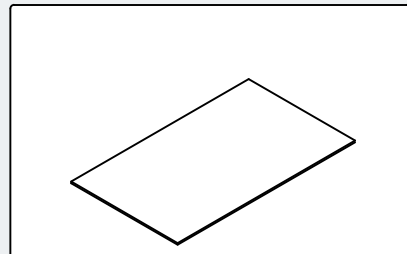 


9 580*354*5mm **x2**

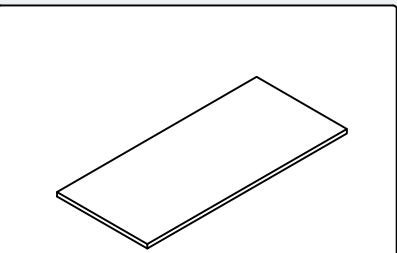 

10 765*346*15mm **x2**

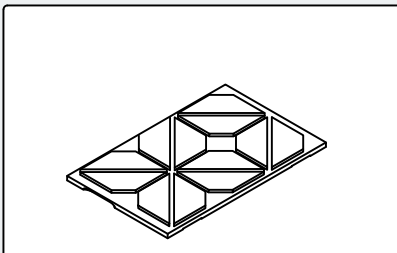 

11 598*385*24mm **x2**

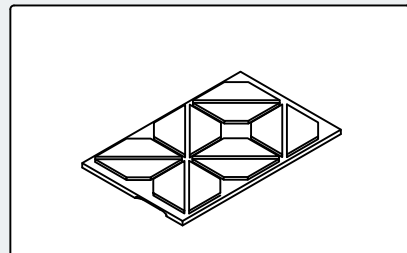 


12 598*385*24mm **x2**

Parts List - Fittings




Please check you have all the fittings listed below.

 
Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

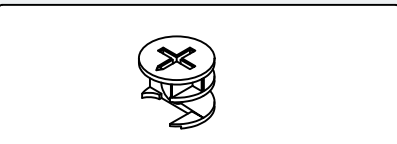


A Ø15*11 **x18+1**

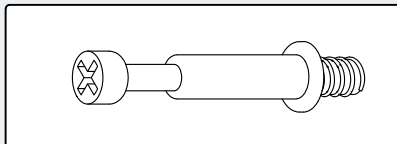 


B Ø6.5*35 **x18+1**

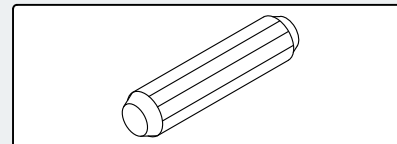 


C Ø8*30 **x16+1**

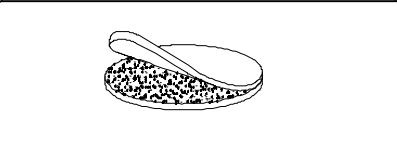 


D Ø20 **x10+1**

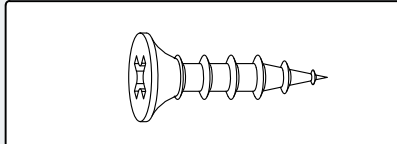 


E Ø3.5*14 **x78+8**

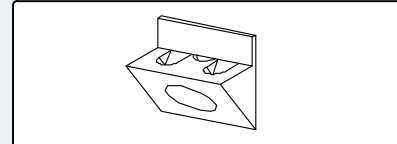 


F 13*14 **x12+1**

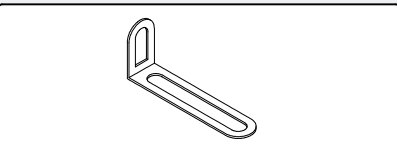 


G 65*32*15 **x2**

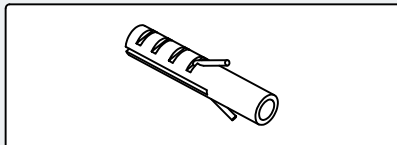 


H Ø8*30 **x2**

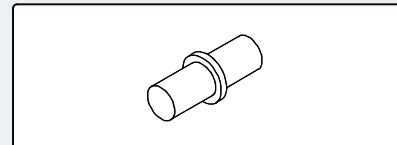 


I Ø5*13 **x8**

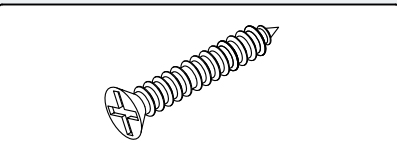 






J Ø4*35 **x2**

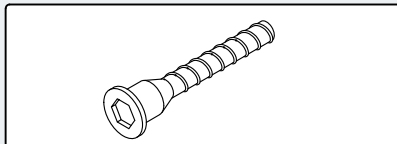 

K Ø7*50 **x6**

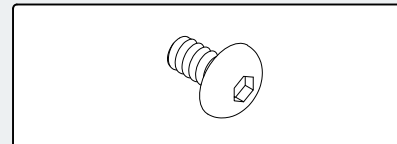 


L M6*15 **x16+1**

     
		
M M6*16 x4	N M6*27 x1	O Hinge x8
		
P Door Catch x4	Q Door Buckle x4	R M4 x1

Cam Lock Fastening System

 
Insert the cam bolt into the hole first, then insert the cam lock and lock it.

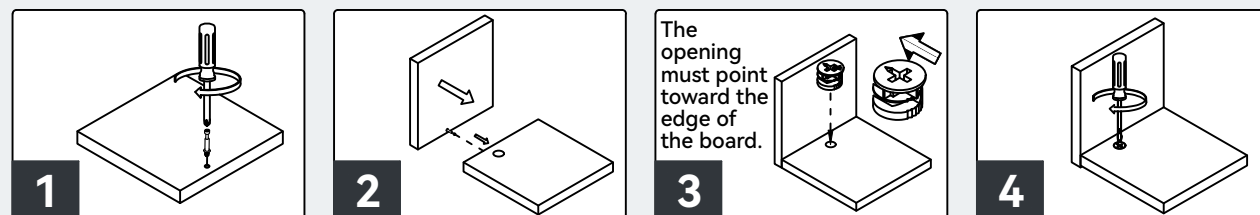




Assembly Instructions

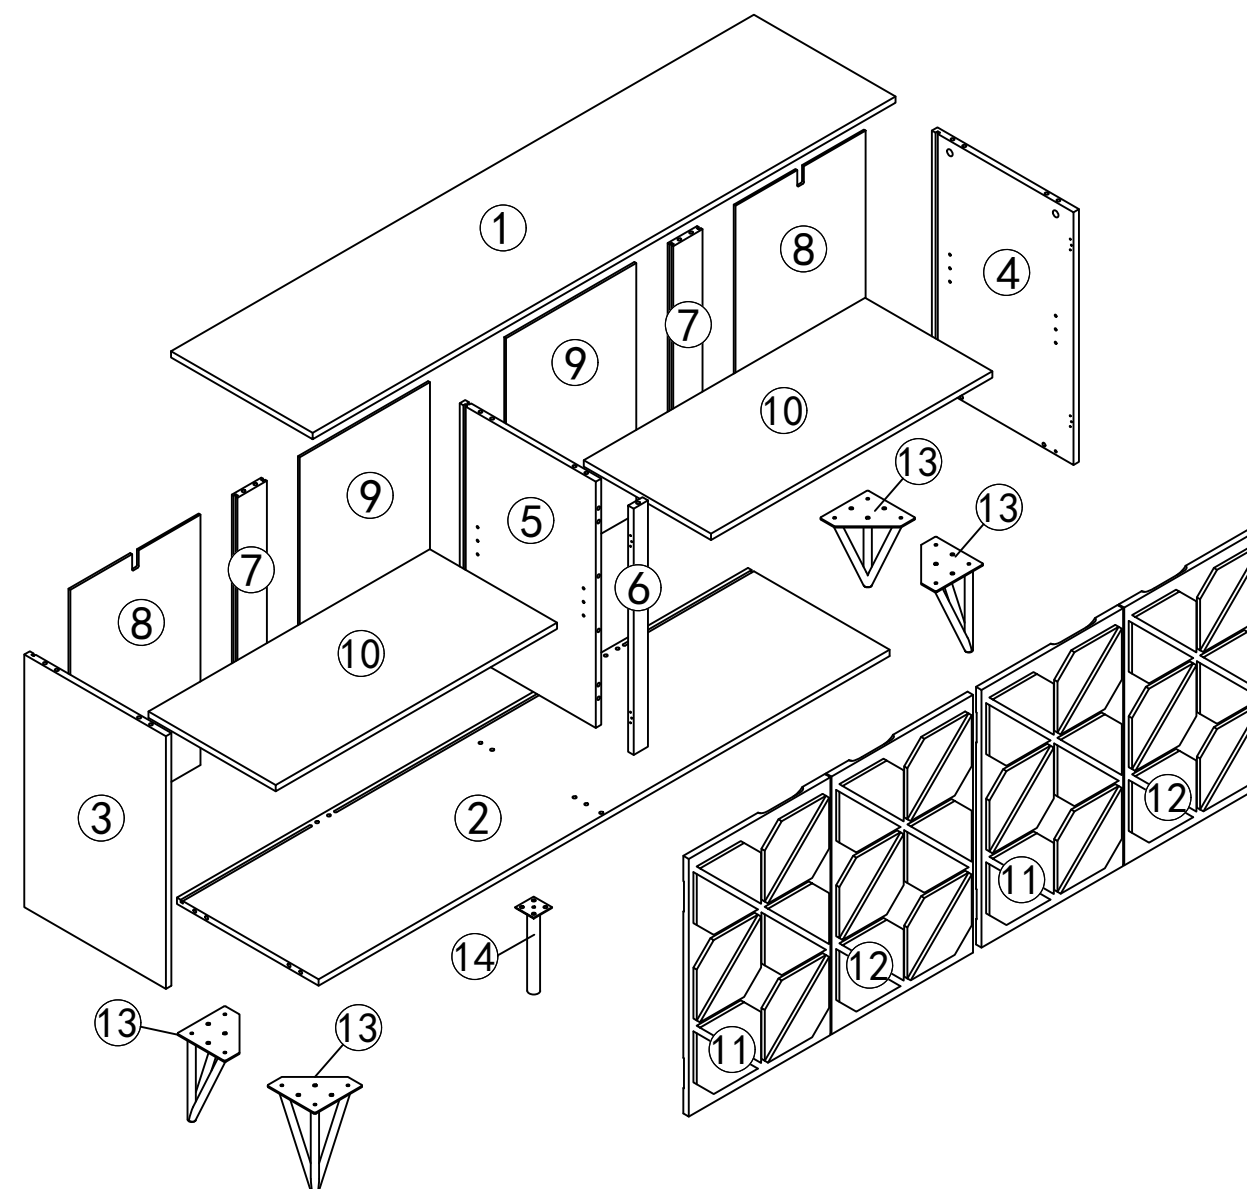 

  Step 1

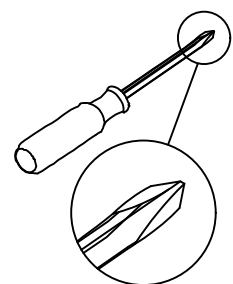


(B)	X4
	
6.5*35	

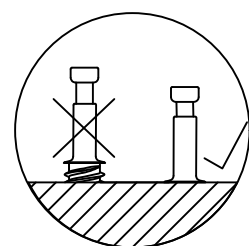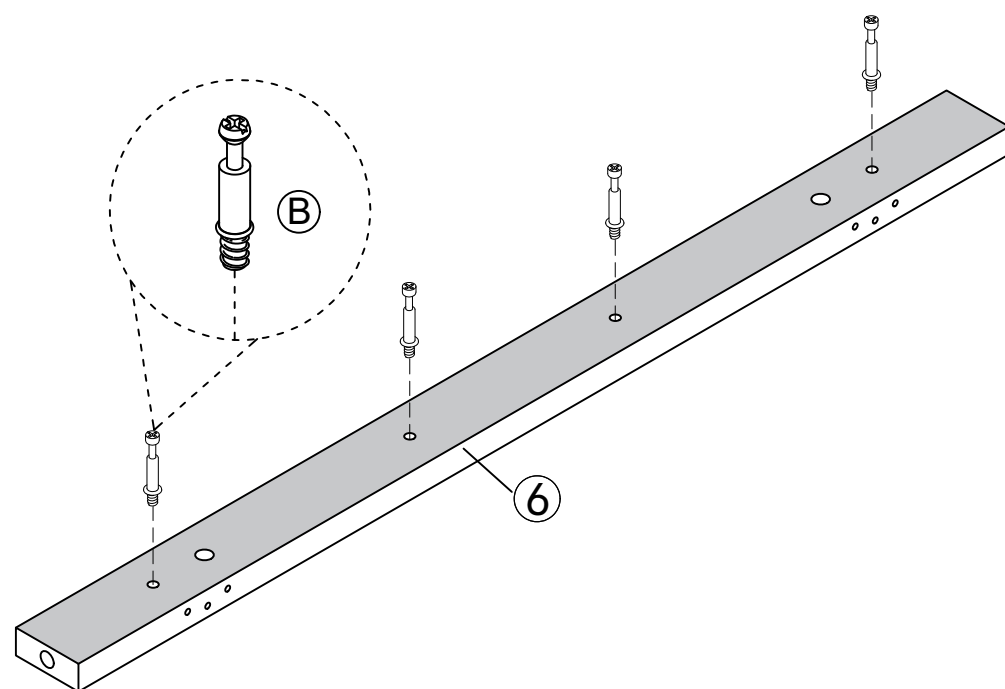  



Insert part (B) into the holes of panel (6) and tighten with a screwdriver.

 
Step 2

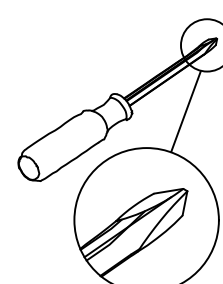

(A)	X4
	
15*11	

 
(C)	X2
	
8*30	

 (D)	X4
	
Ø20	

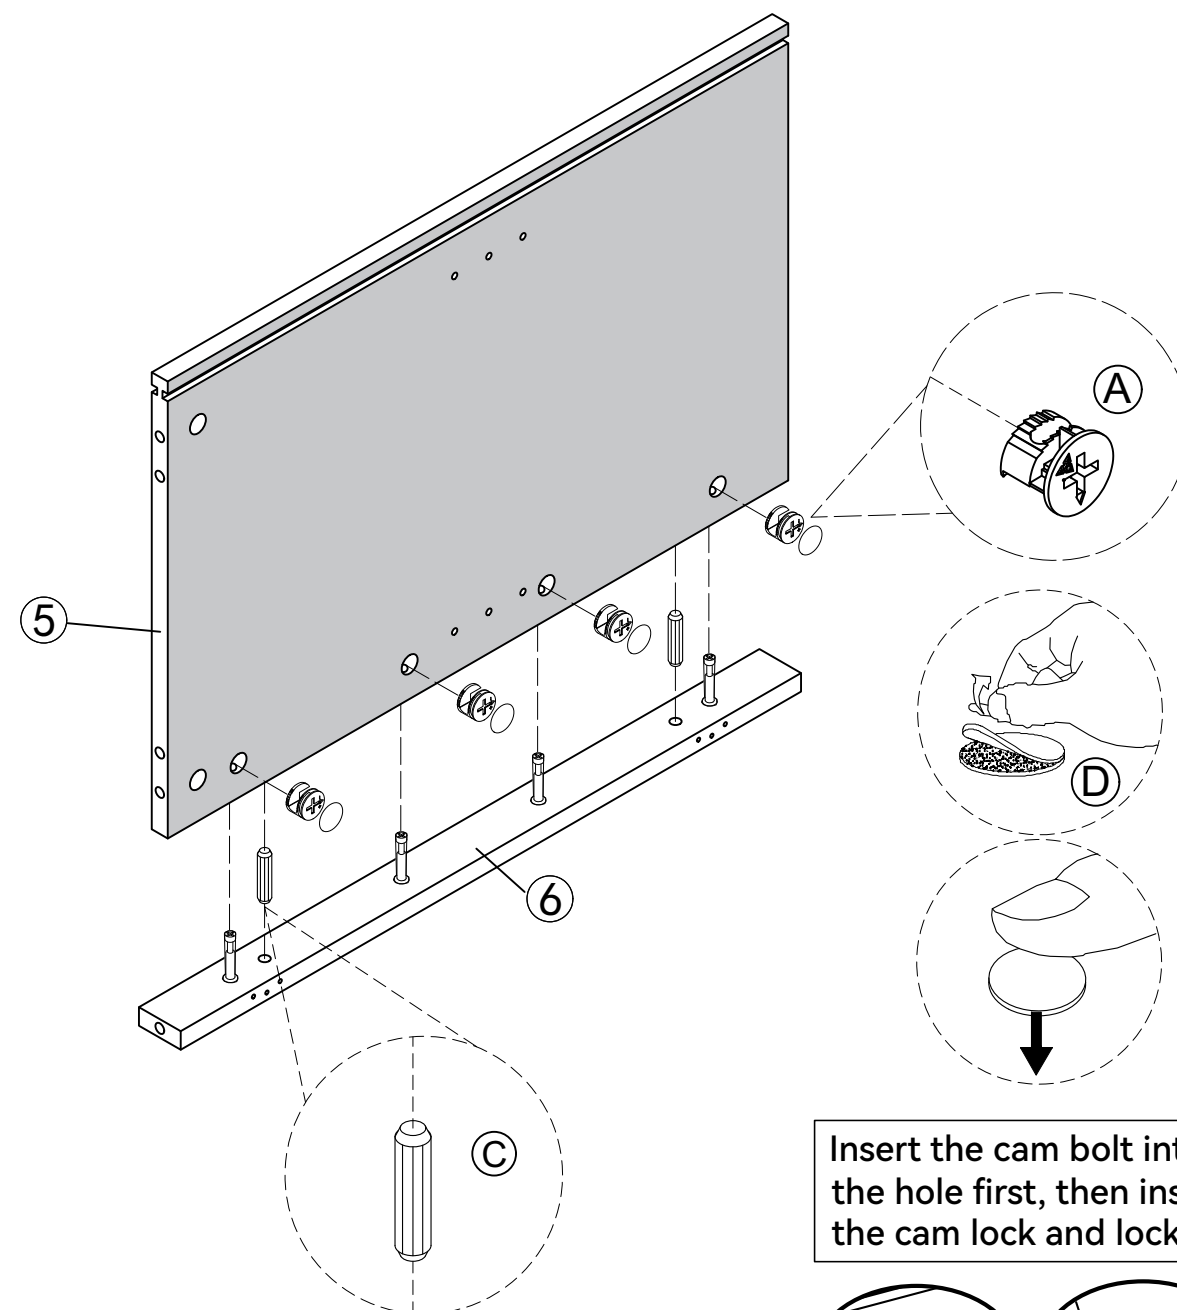 


Insert part (C) into the holes of panel (5). Attach panel (5) to panel (6), then insert and secure part (A). Cover the holes with part (D).

 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

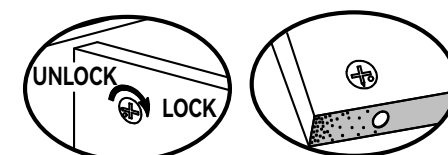


Proper orientation of CAM LOCK

 Step 3

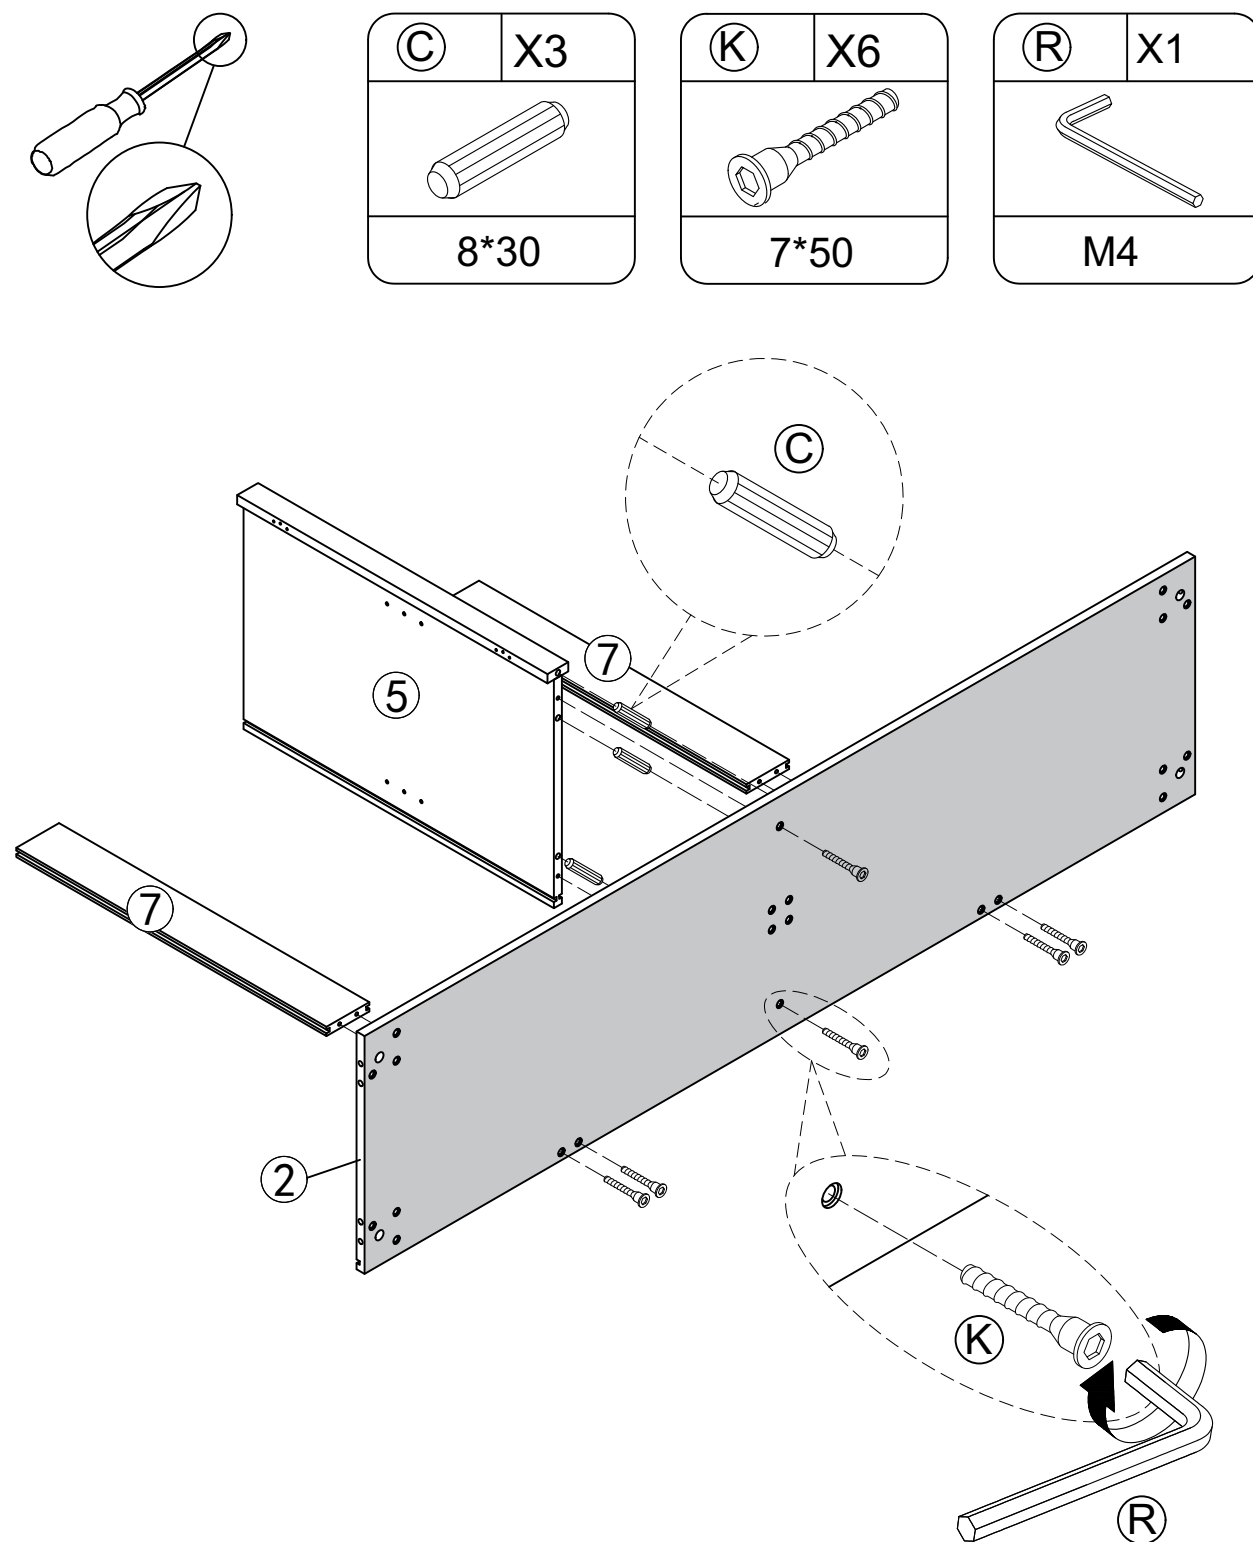


Insert part (C) into the holes of panel (5). Use part (K) to connect panels (5) and (7) to panel (2), then tighten with part (R).

 Step 4

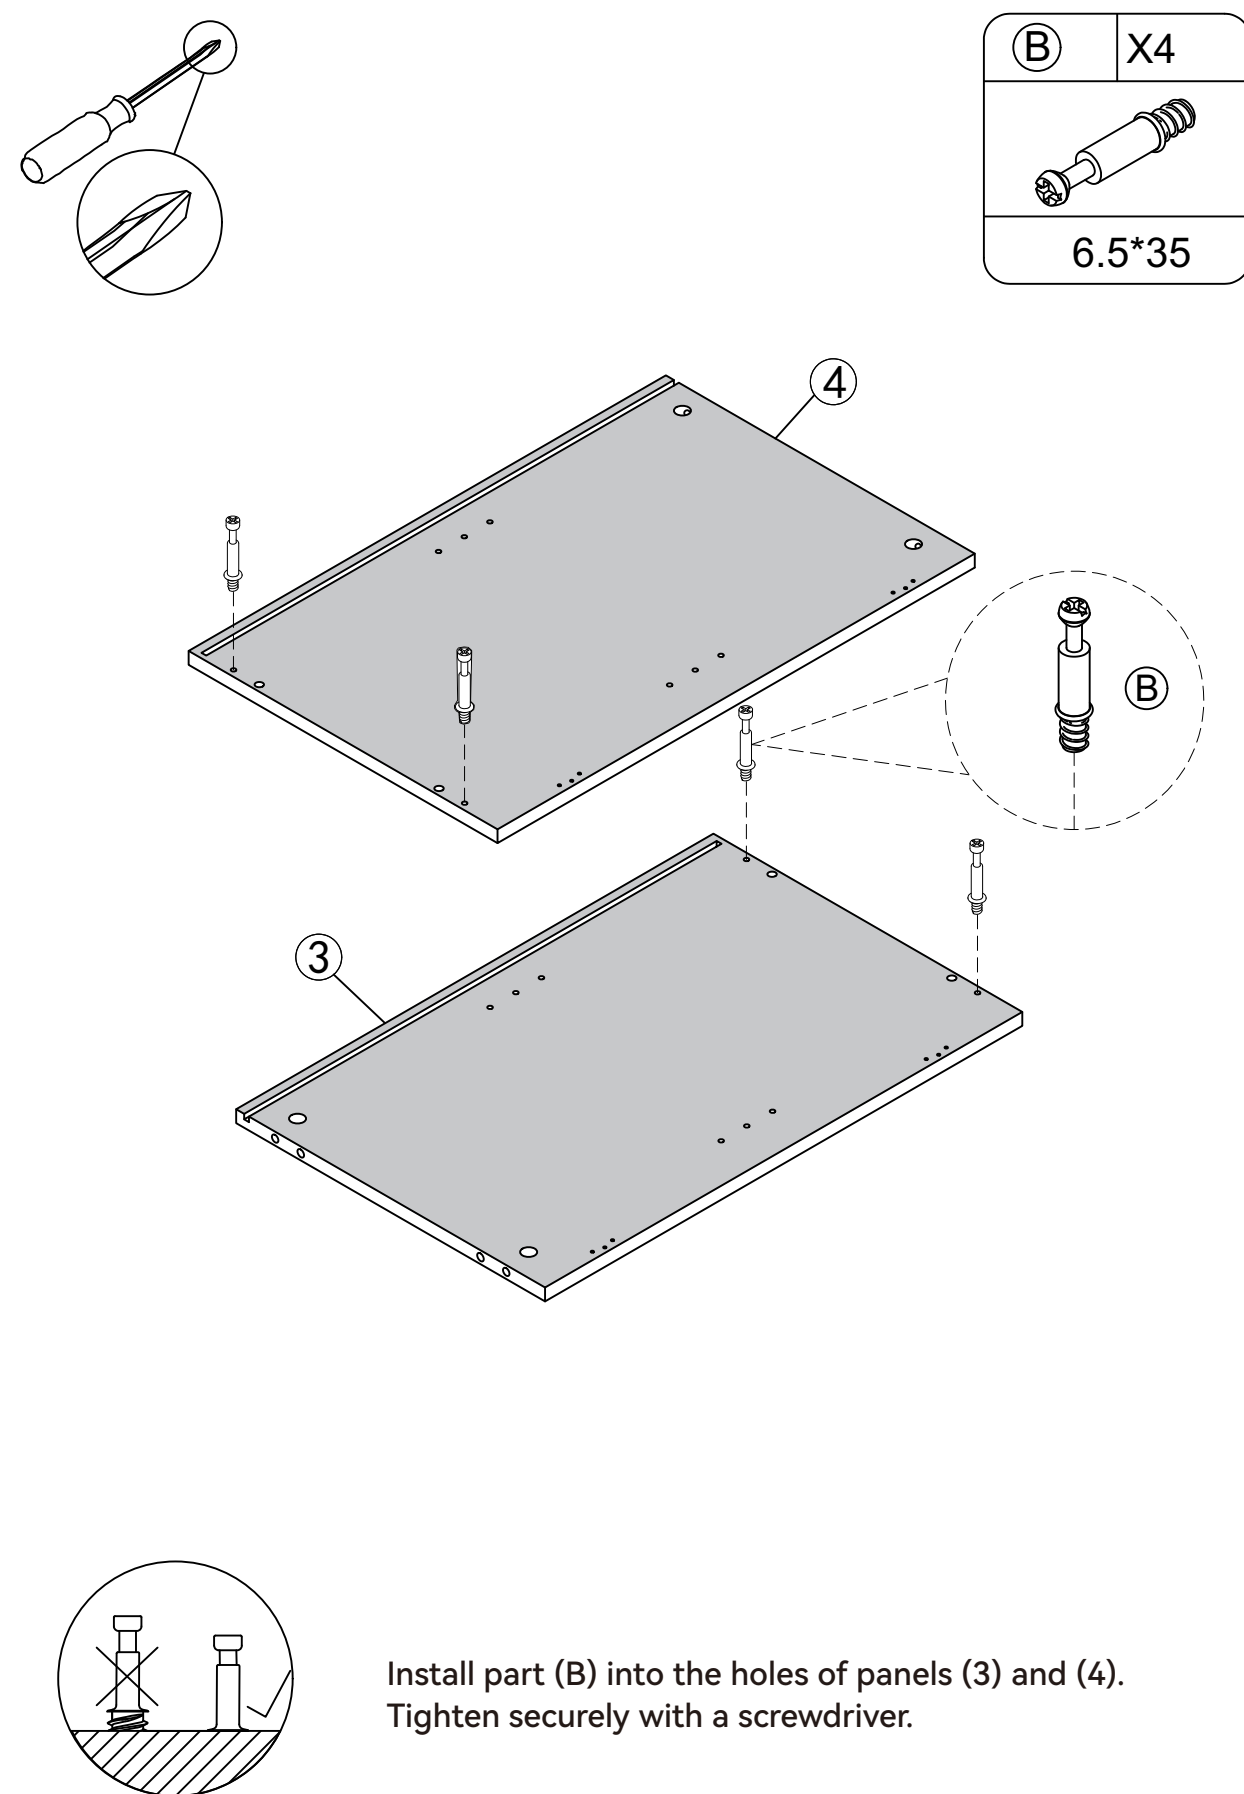


Install part (B) into the holes of panels (3) and (4). Tighten securely with a screwdriver.

 
Step 5

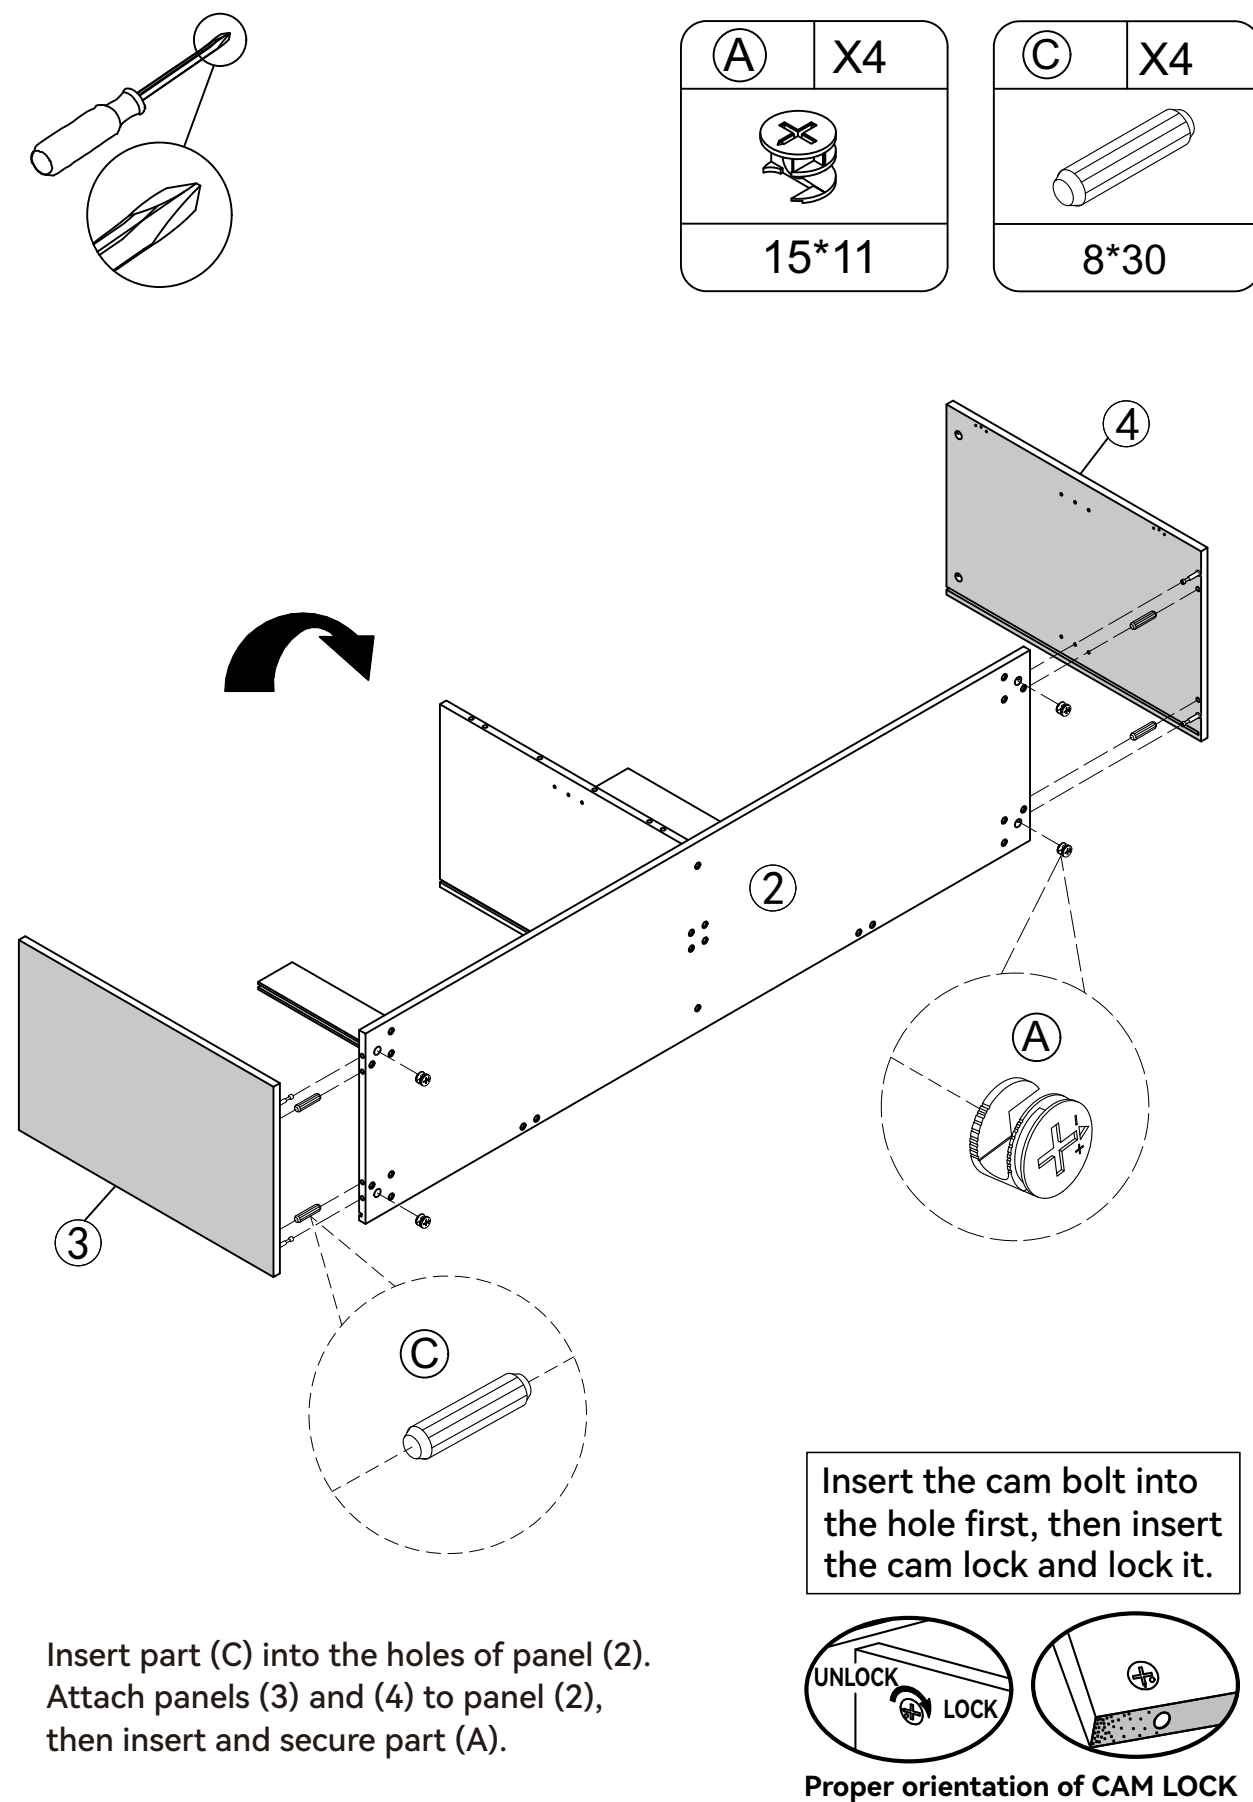

 Step 6

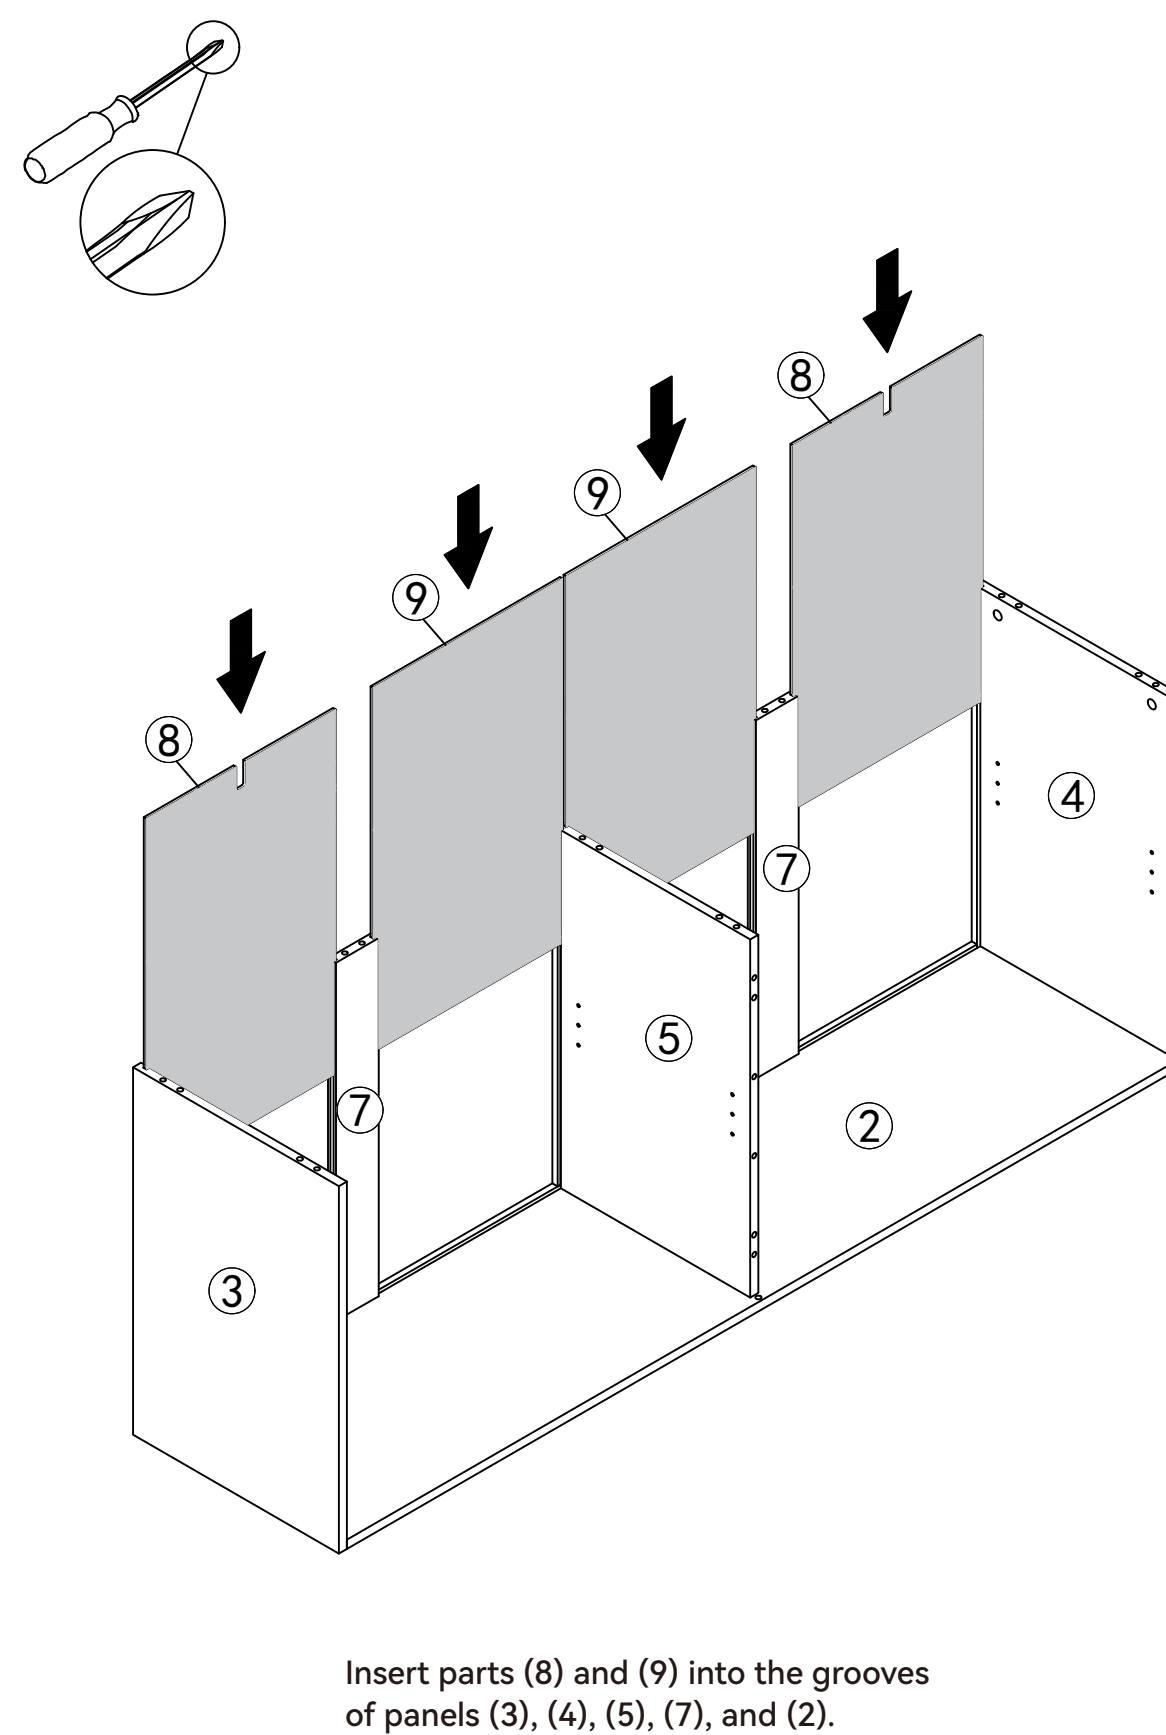


 Step 7

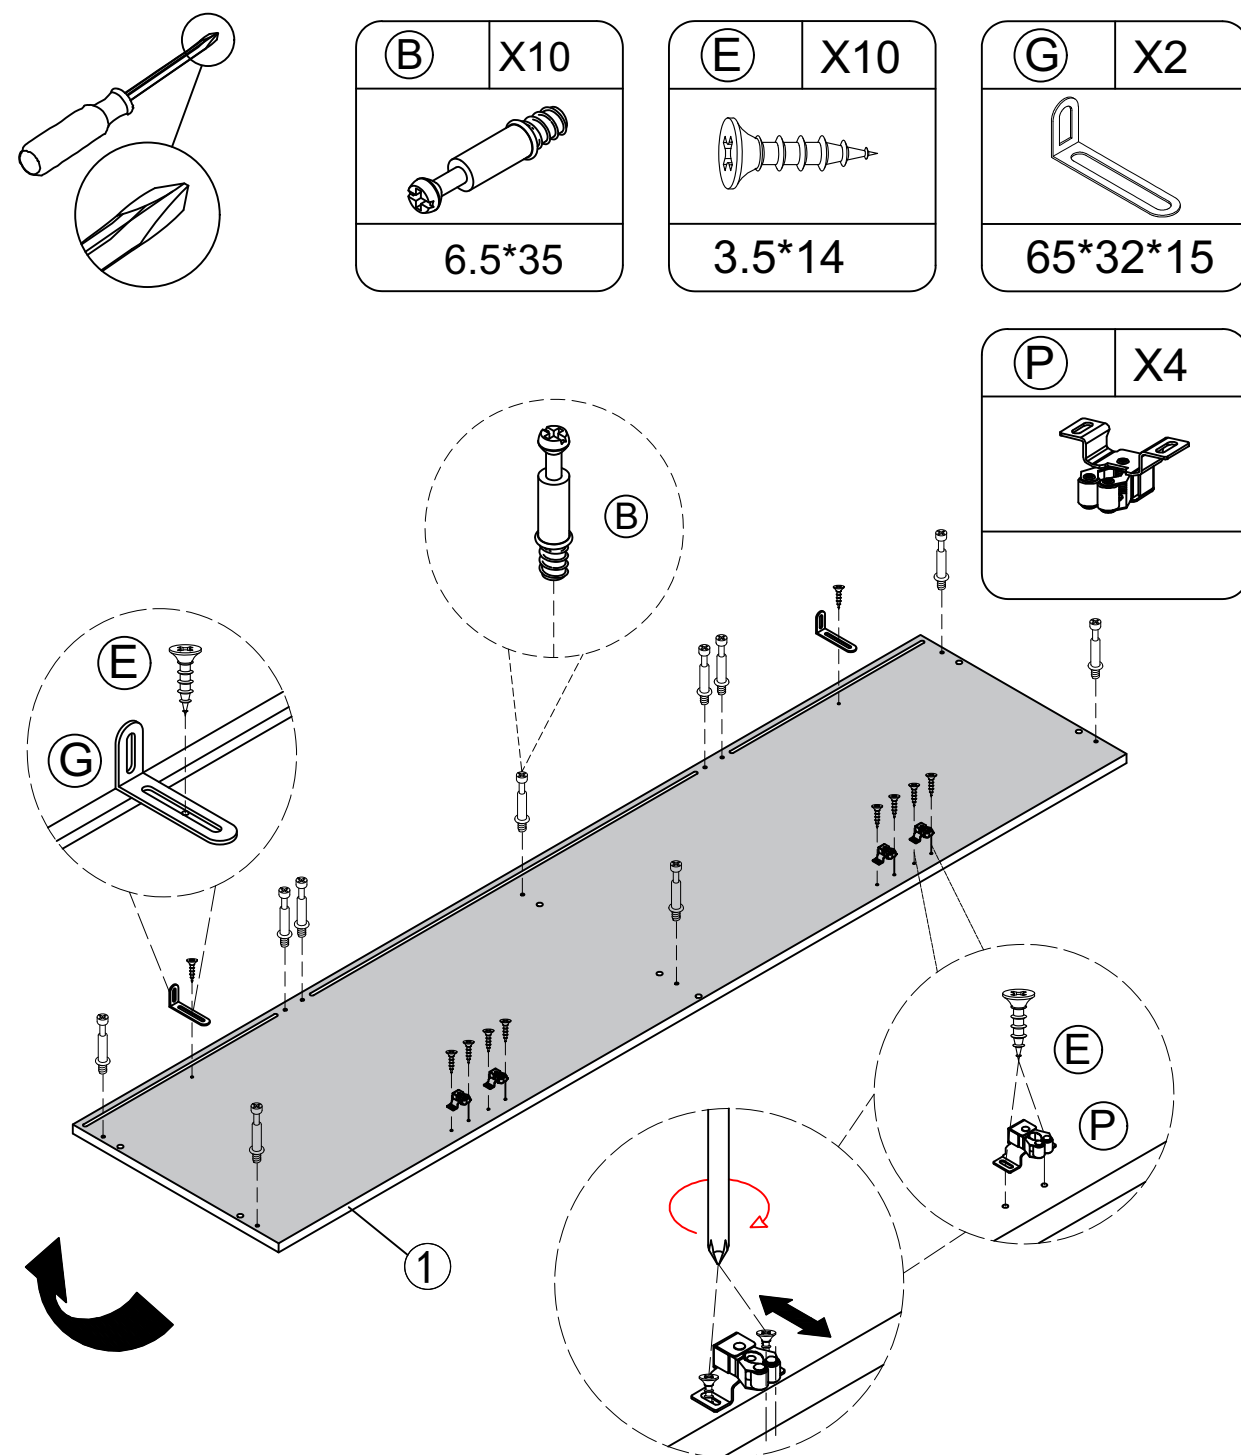


1. Install part (B) into the holes of panel (1) and tighten with a screwdriver.
2. Use part (E) to attach part (G) to the holes of panel (1) and tighten with a screwdriver.
3. Use part (E) to attach part (P) to the holes of panel (1) and tighten with a screwdriver.

 Step 8

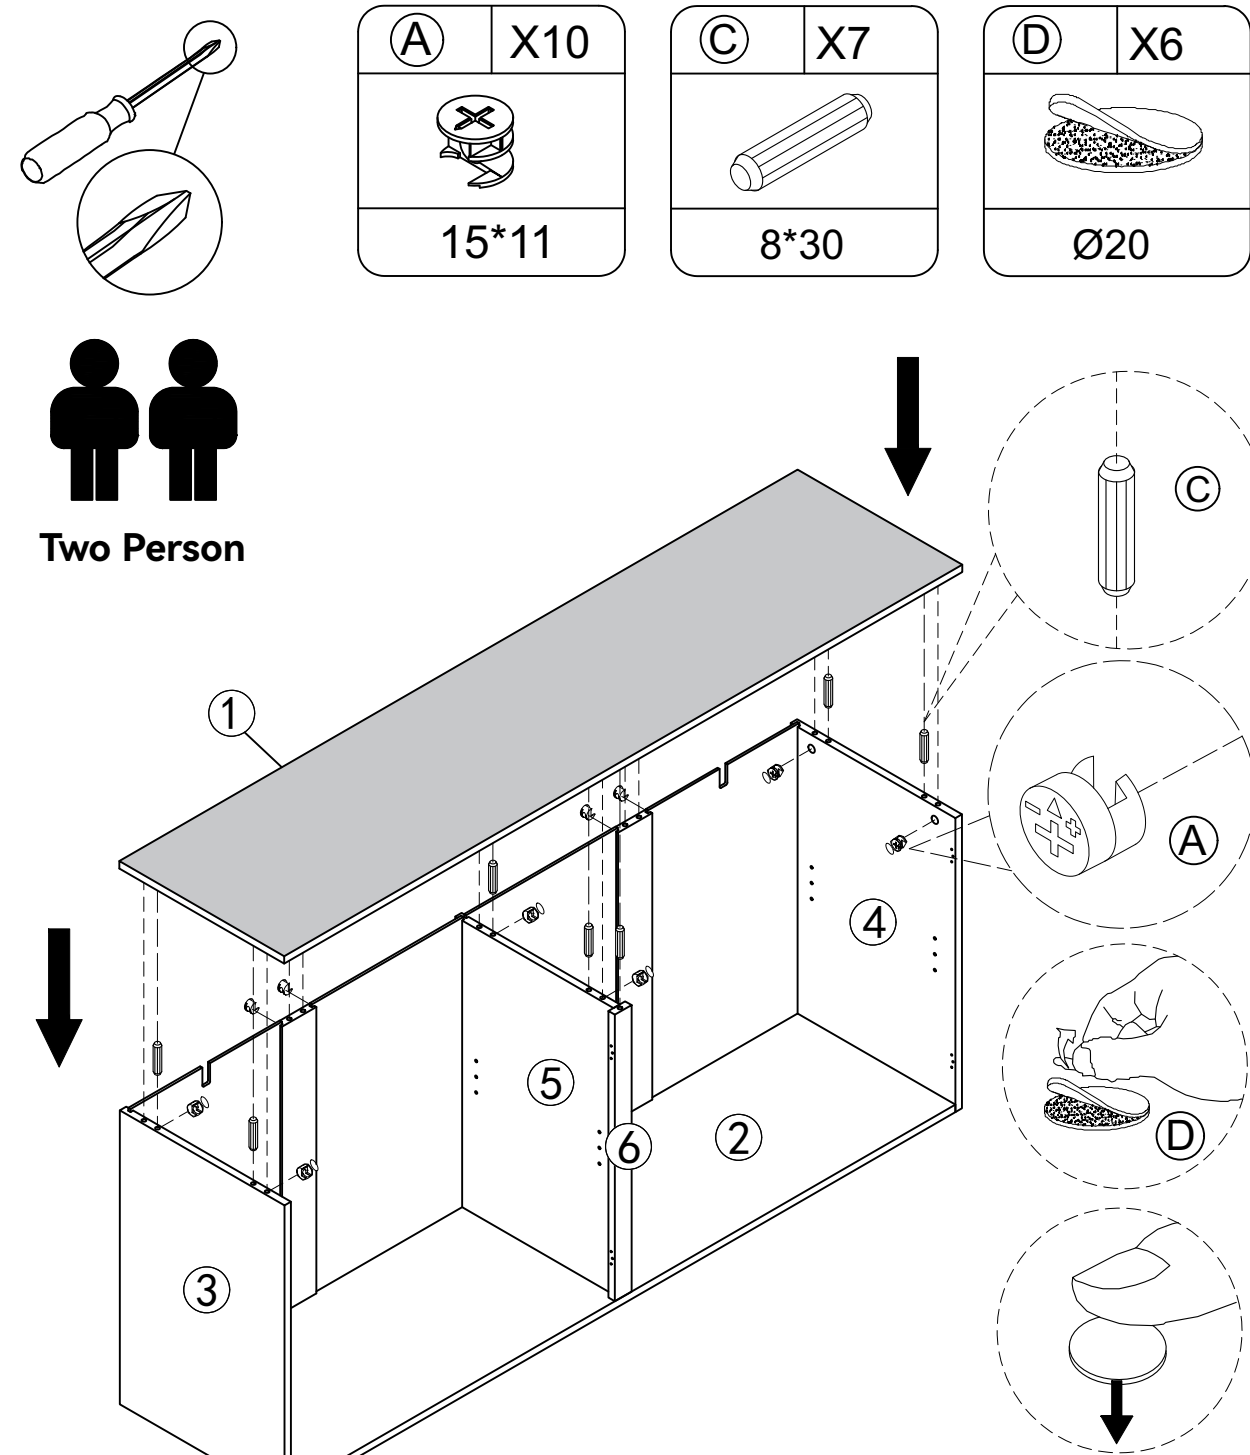





Insert part (C) into the holes of panels (3), (5), (6), and (4). Attach panel (1) to panels (3), (5), (6), and (4), then insert and secure part (A).

 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

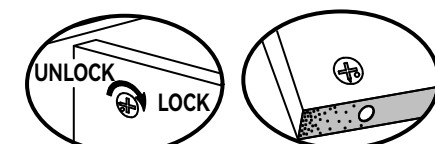


Proper orientation of CAM LOCK

    Step 9


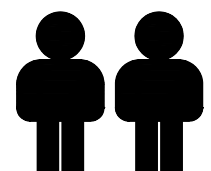
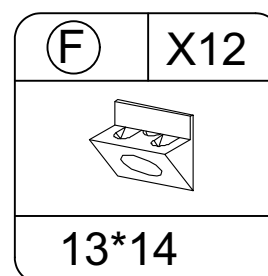
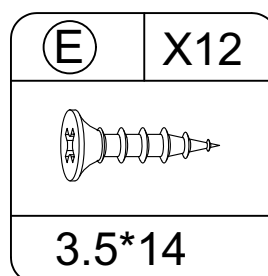
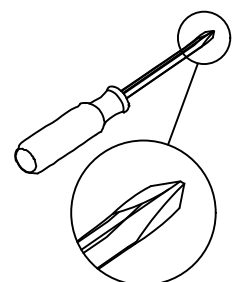


Two Person





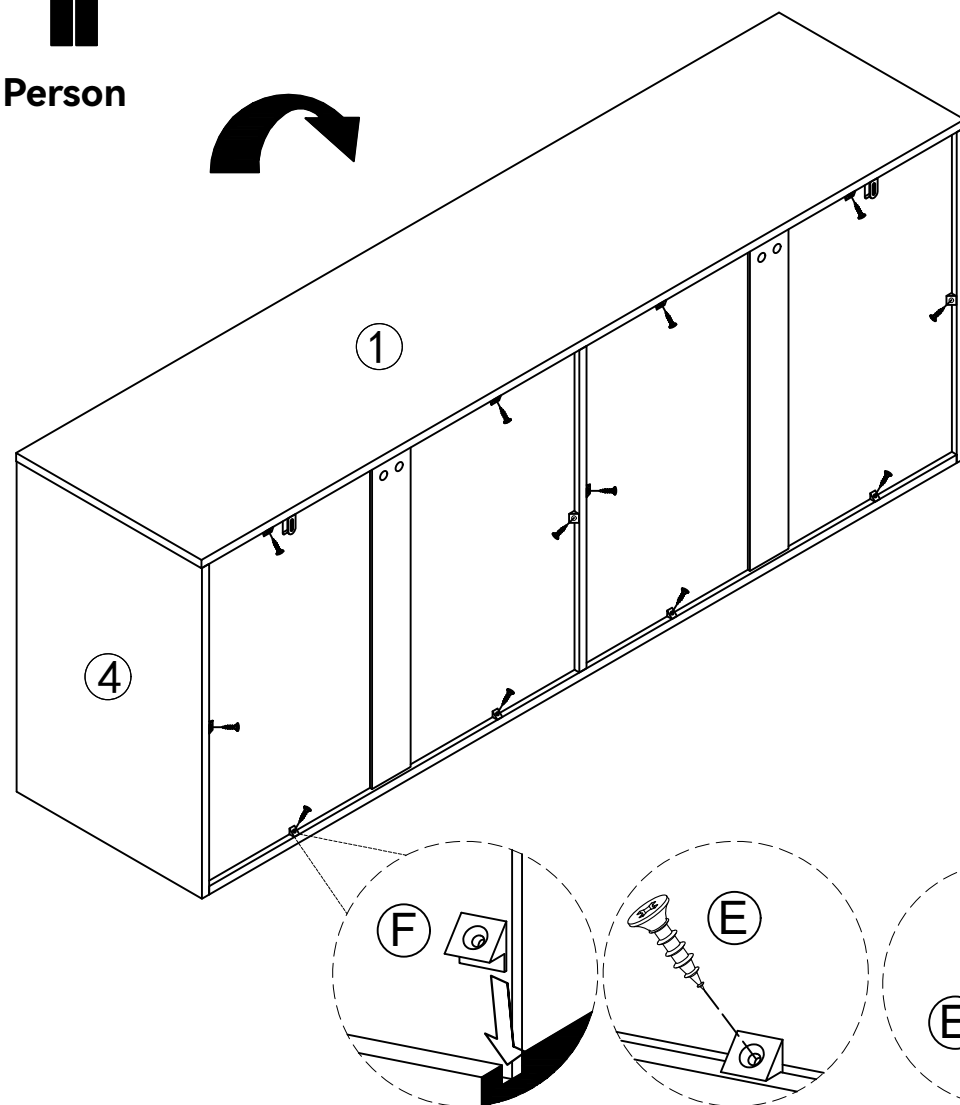 


Insert part (F) into the back panel. Use part (E) to secure part (F) with a screwdriver. Refer to the manual for the exact location.

     Step 10

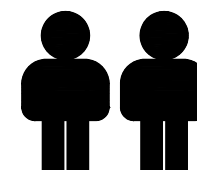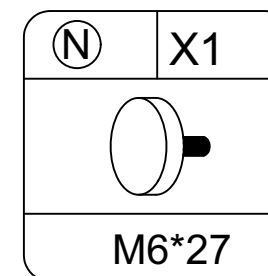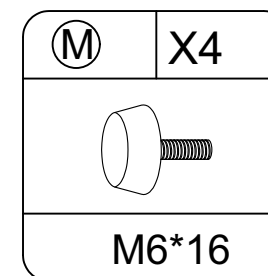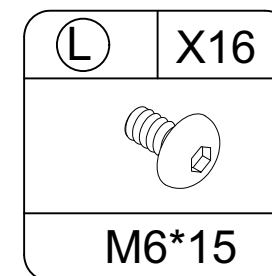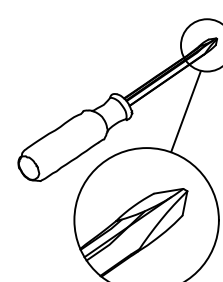


Two Person

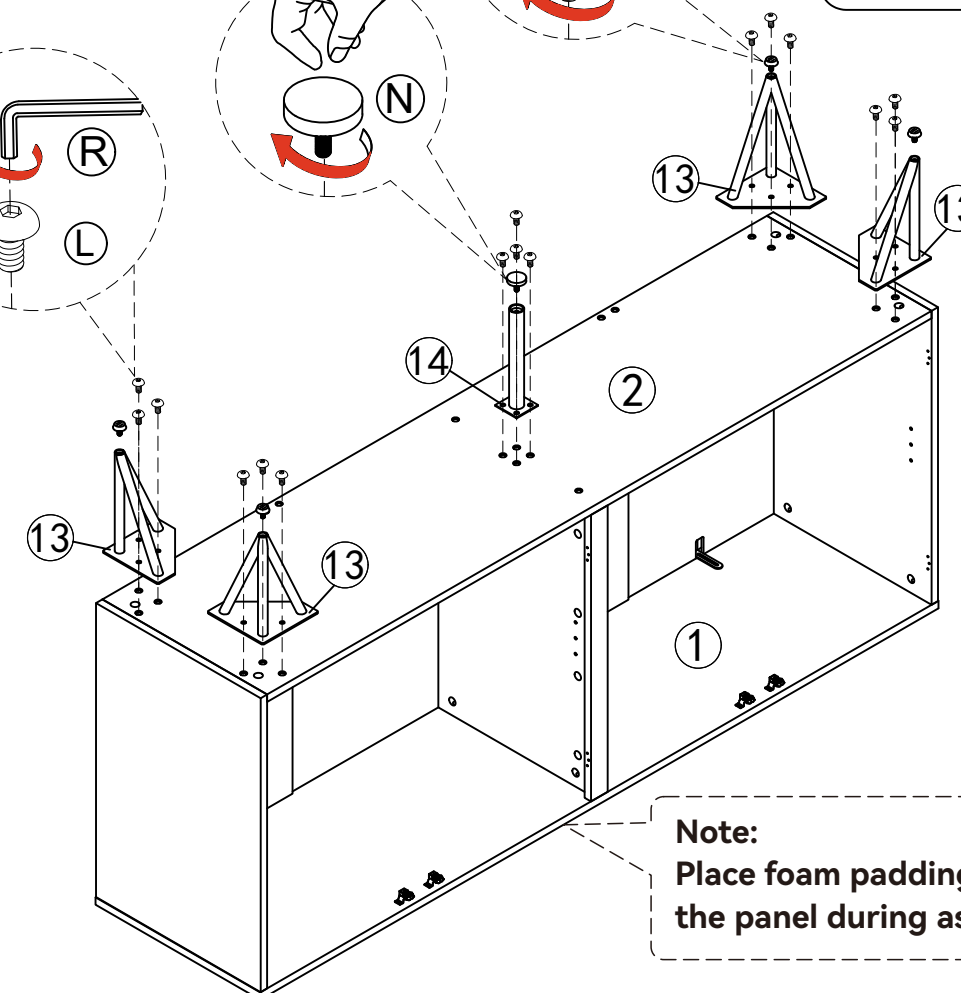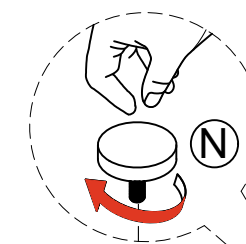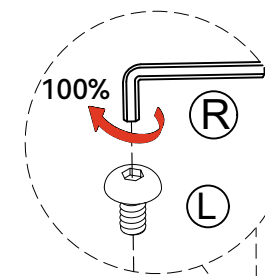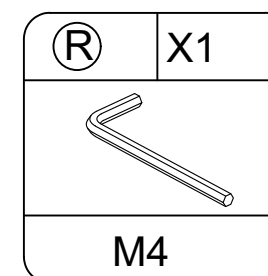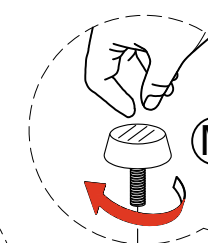     

Note:
Place foam padding under the panel during assembly.

1. Use part (L) to connect parts (13) and (14), then insert into the holes of panel (2) and tighten with part (R).
2. Hand-tighten part (C) into hole (13).
3. Hand-tighten part (N) into hole (14).

 Step 11


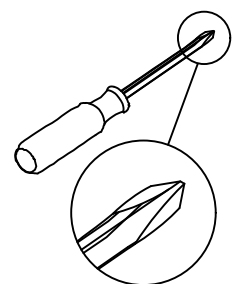


⚠ WARNING




Children have died from furniture tipover.
To reduce the risk of furniture tipover:

  
- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

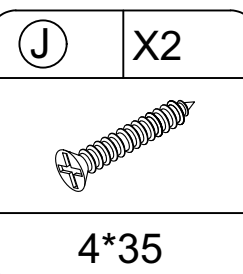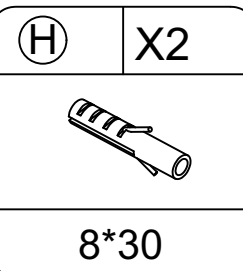


Install the tipping restraint hardware

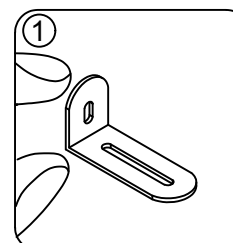 

 
1. Make mark on the wall.

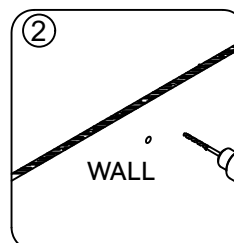

 
2. Drill two Ø6 holes on the wall.

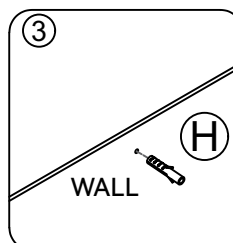

 
3. Put two anchors into the holes.

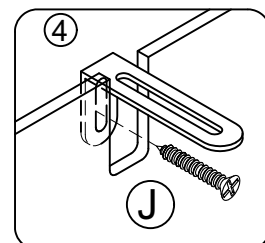


 
4. Use long screws to secure the fitting to the wall.

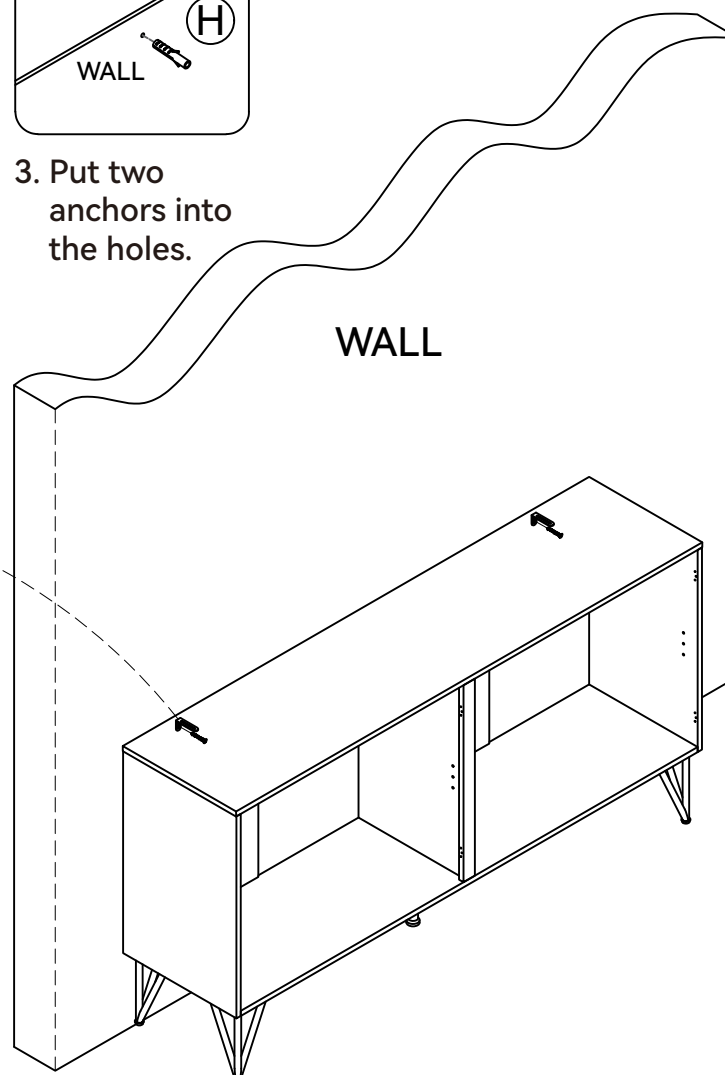

 Step 12

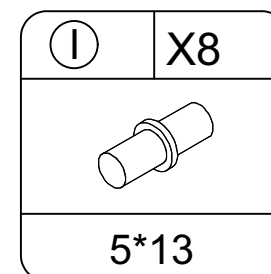


  Insert part (I) into the holes of panels (3), (4), and (5).
Place panel (10) onto part (1) following the arrow direction.

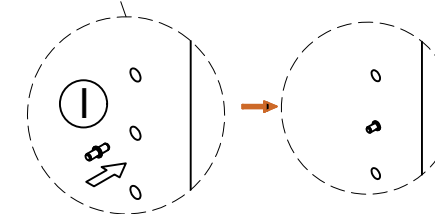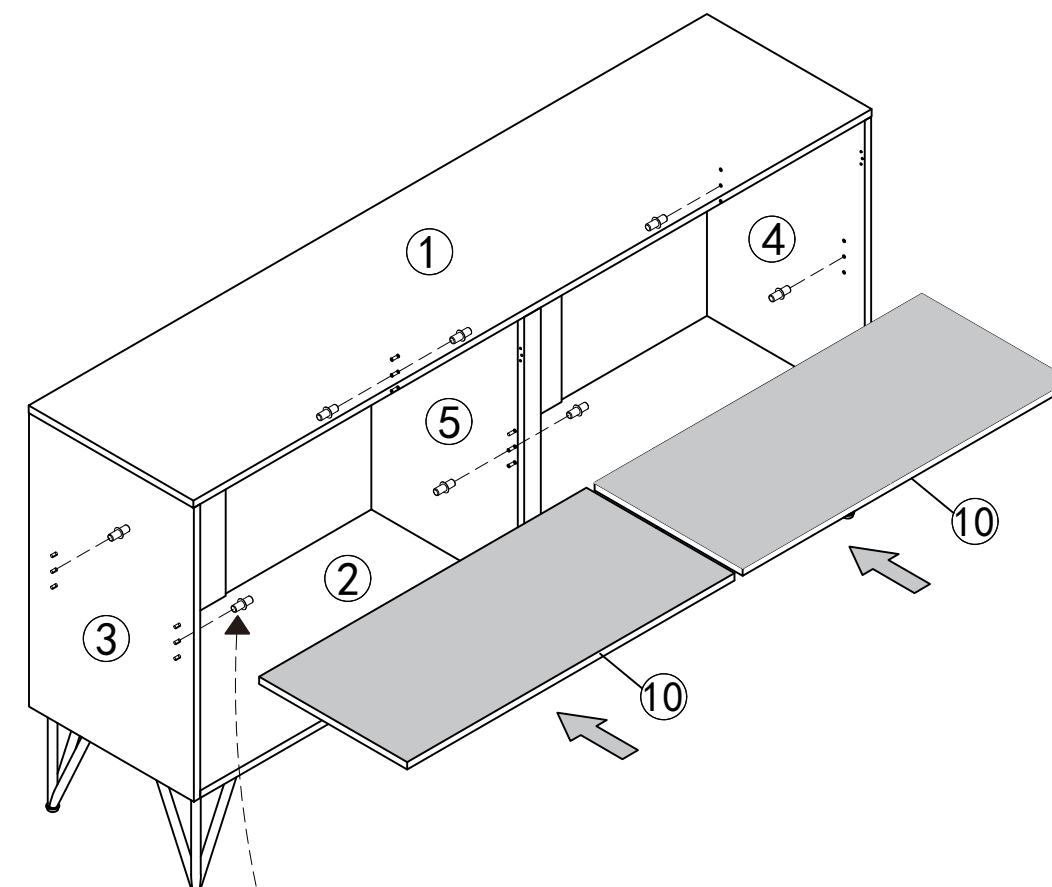

Step 1

 
Select the desired height and put it in

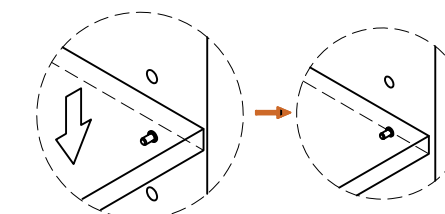

Step 2


Aim the board gaps down

 Step 13

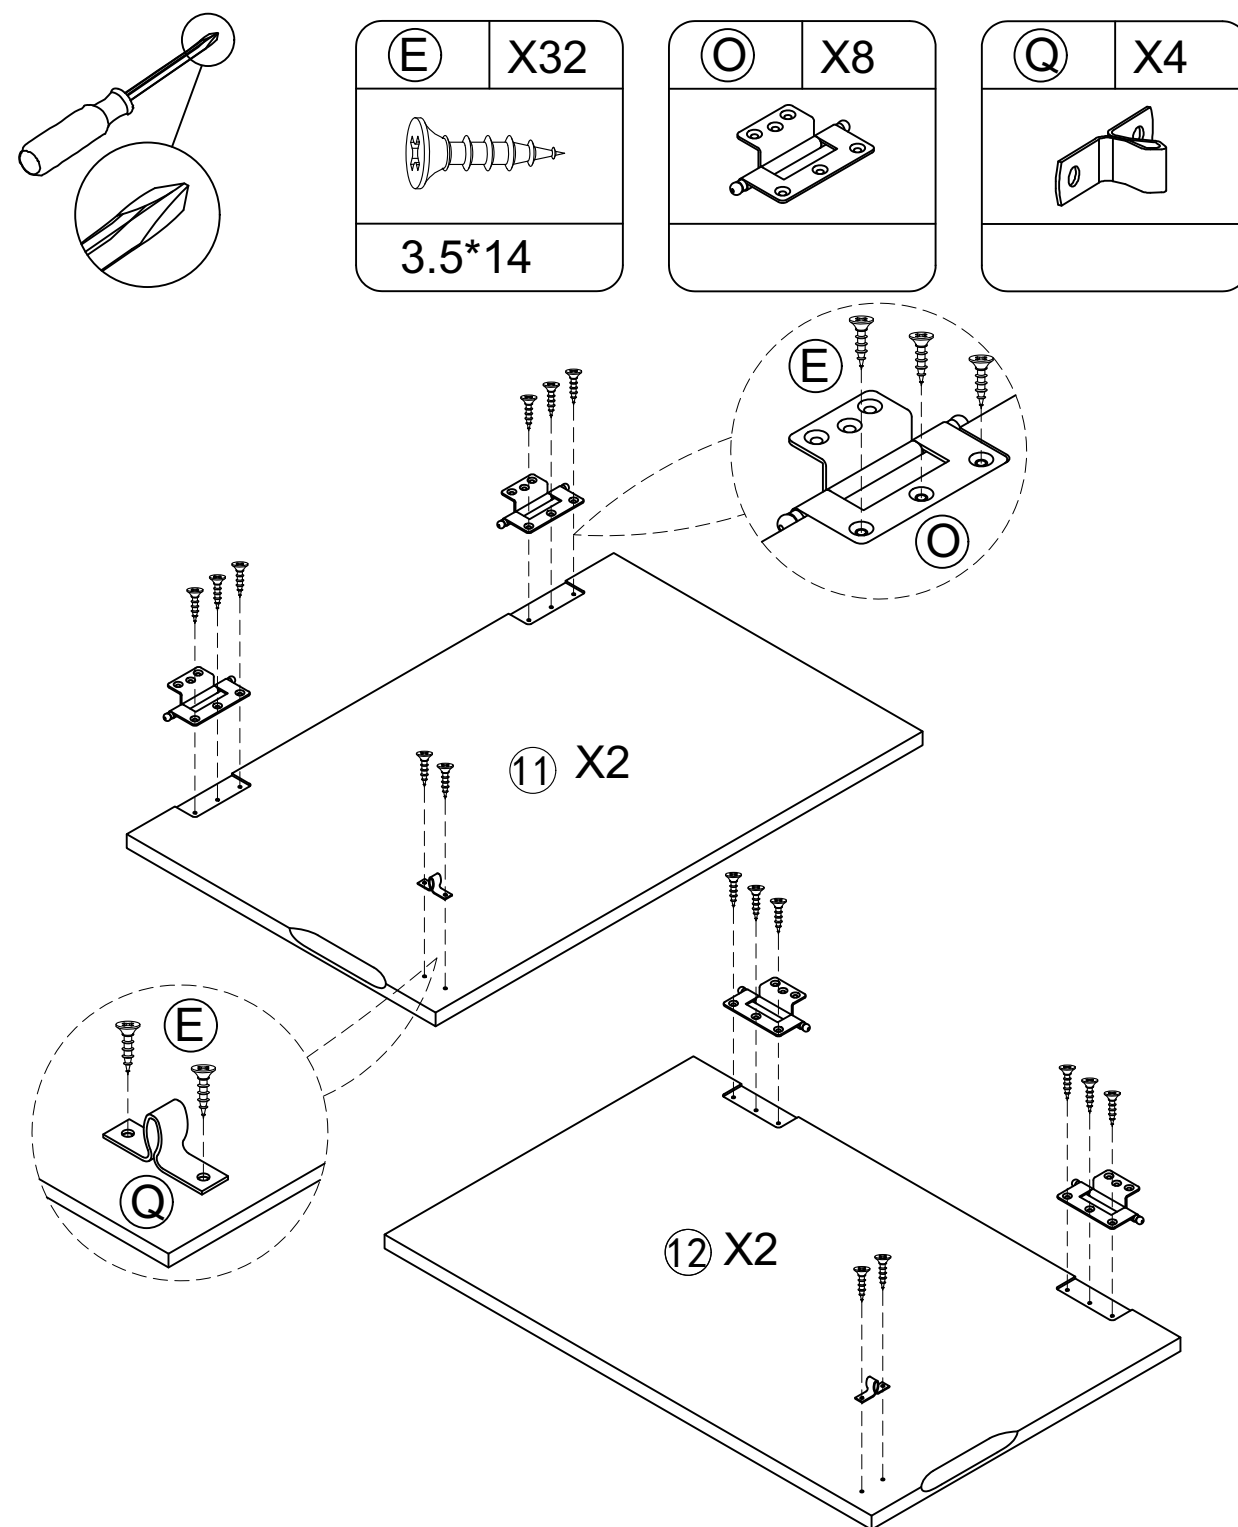


1. Use part (E) to attach part (O) to the holes of panels (11) and (12), tightening with a screwdriver.
2. Use part (E) to attach part (Q) to the holes of panels (11) and (12), tightening with a screwdriver.

 Step 14

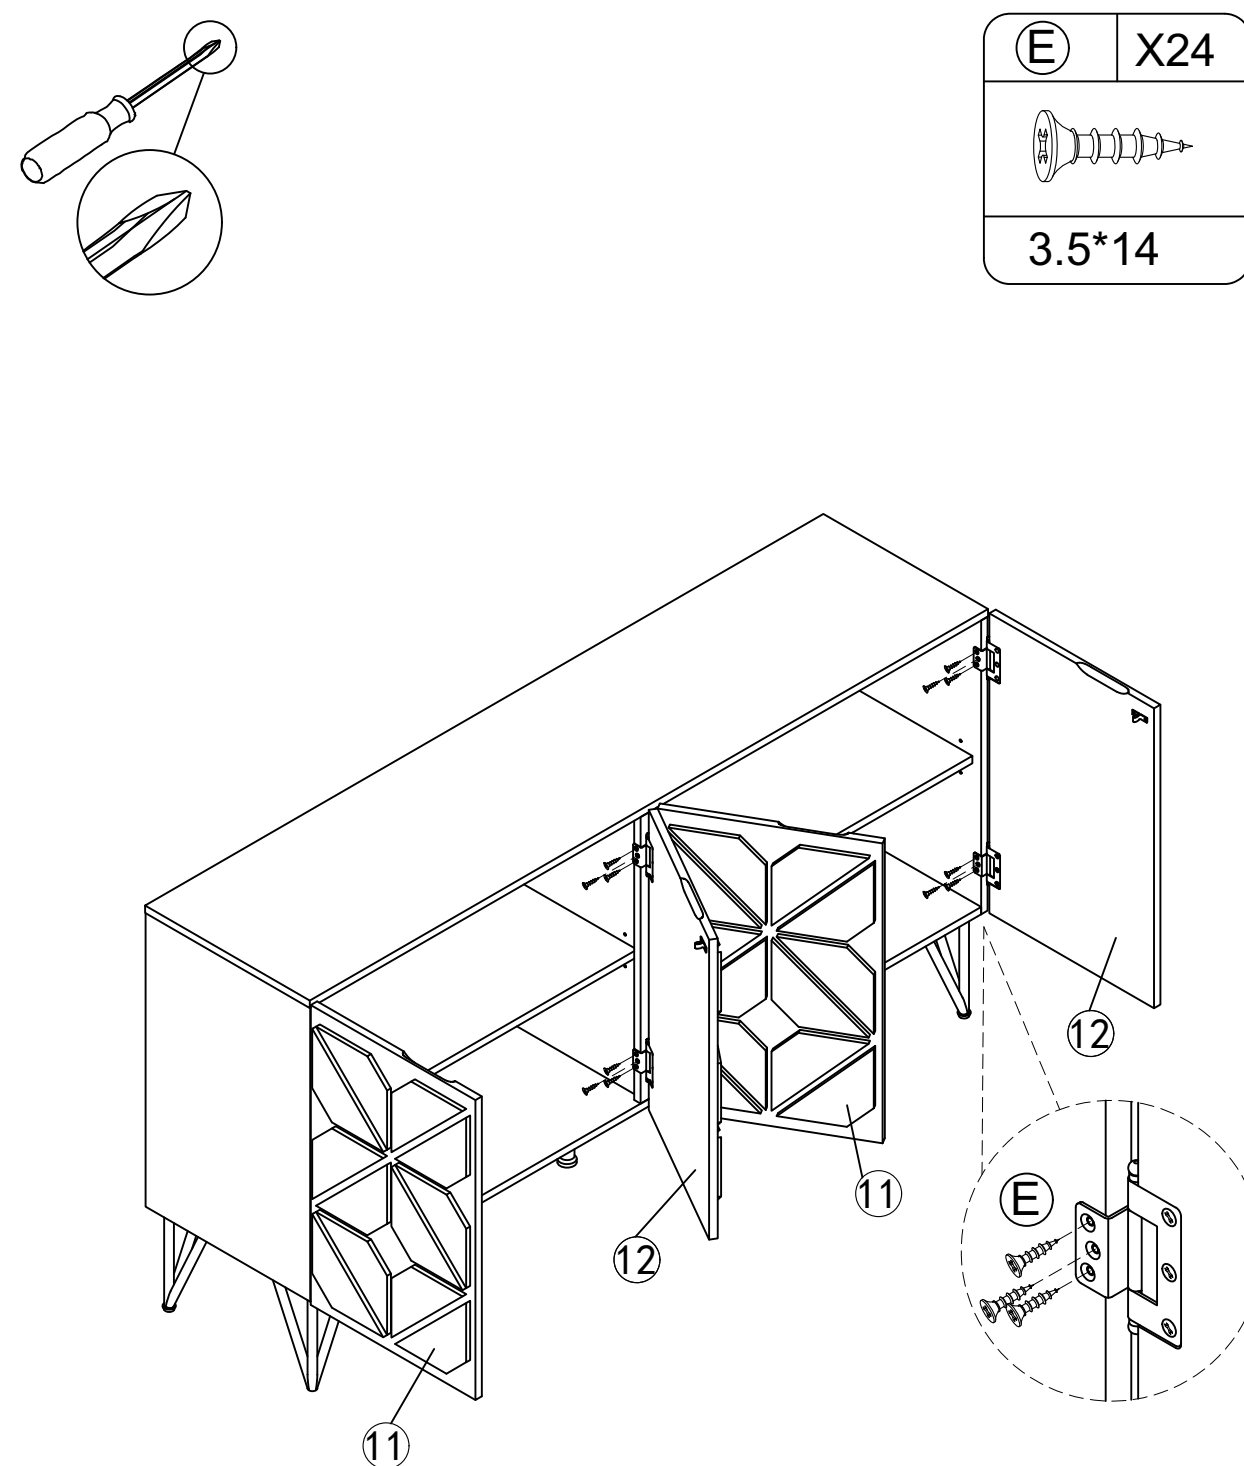


Attach Part(11,12) to Part(3,4,5) using Screw(E).
Tighten them with a screwdriver.

 Step 15

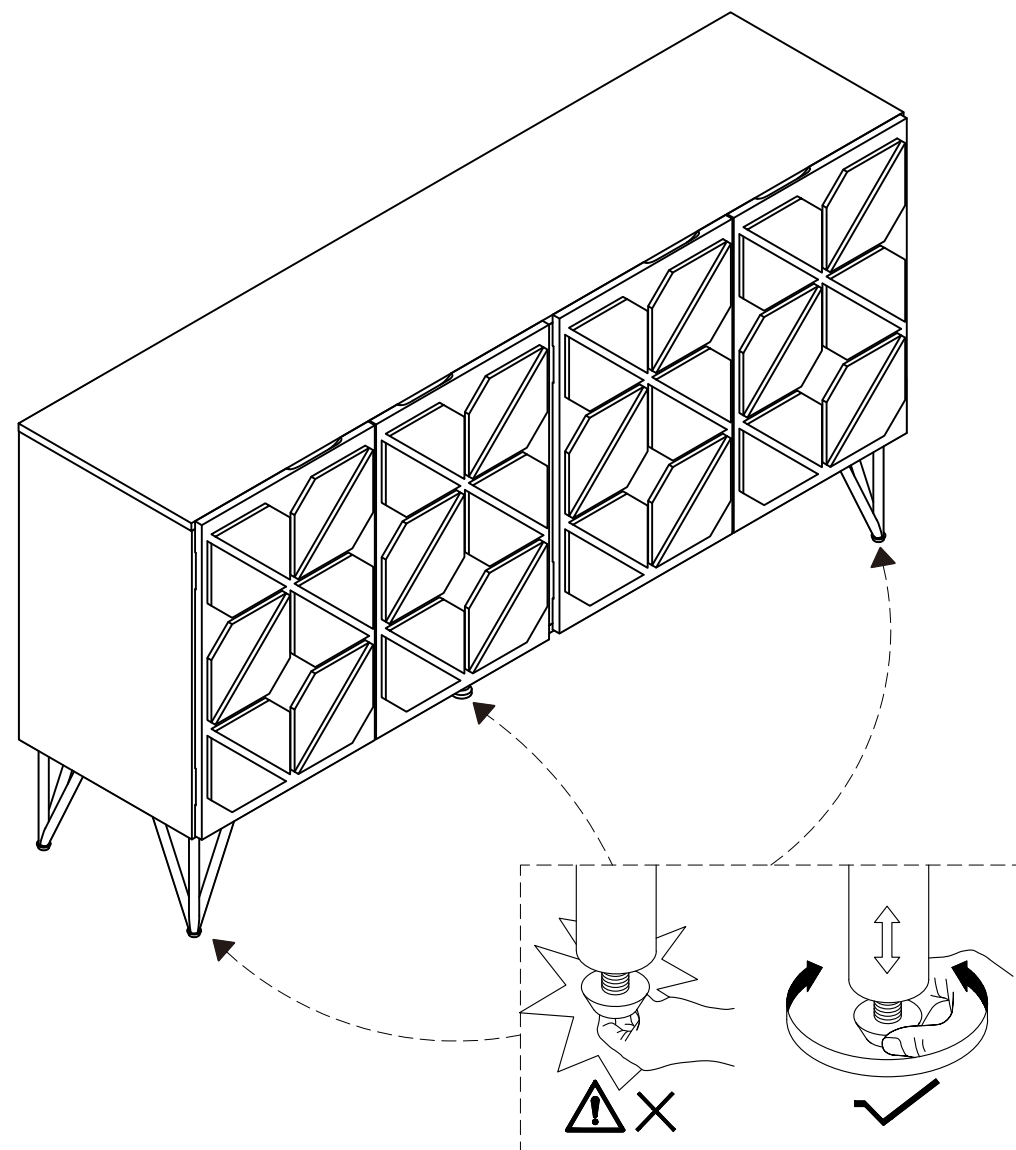

Manually adjust the leveler to keep all the top edge of door in a horizontal, and all feet touching the ground to keep the Cabinet balanced.

 Step 16

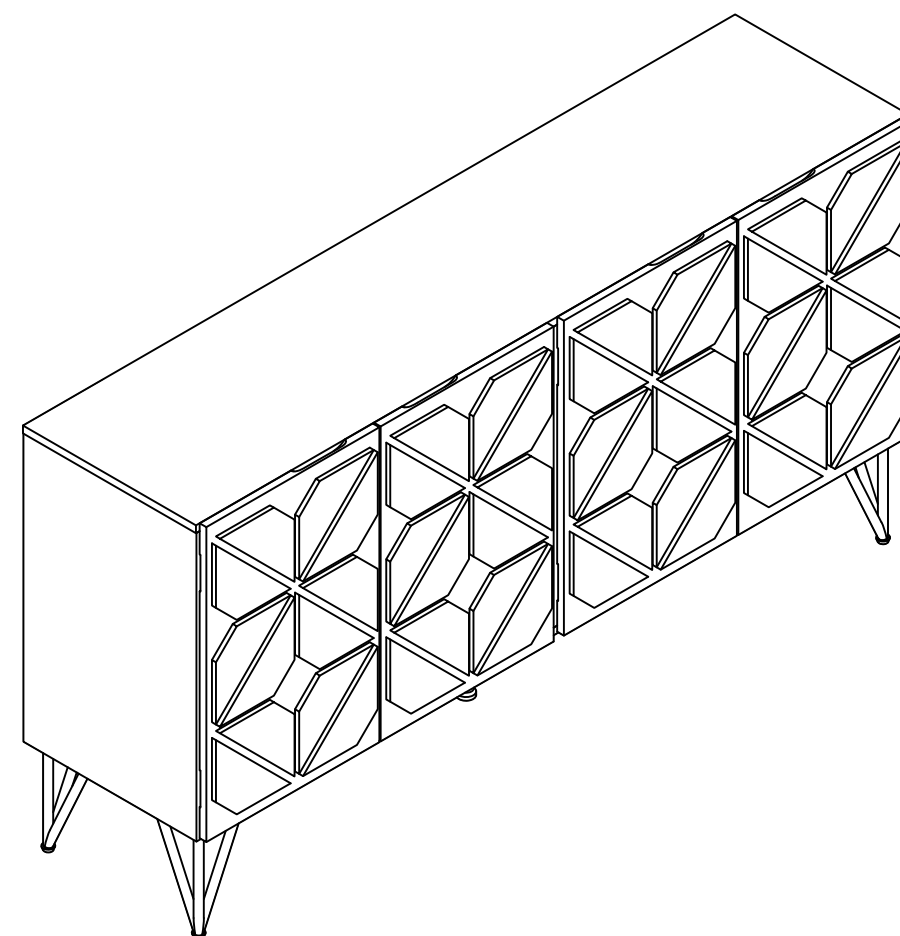

Installation Complete.