

VIVOHOME

THANK YOU!

NOTE:

To continuously improve its products, VIVOHOME reserves the right to modify this information without prior notification.

For any questions regarding assembly, please watch the video on the product page or contact our customer service. Our customer service will gladly assist you with any additional questions, comments, or concerns.

Thank you for using VIVOHOME products in your home!

Thank You for Purchasing from


VIVOHOME

Made in China

VIVOHOME

HOW-TO

USER MANUAL

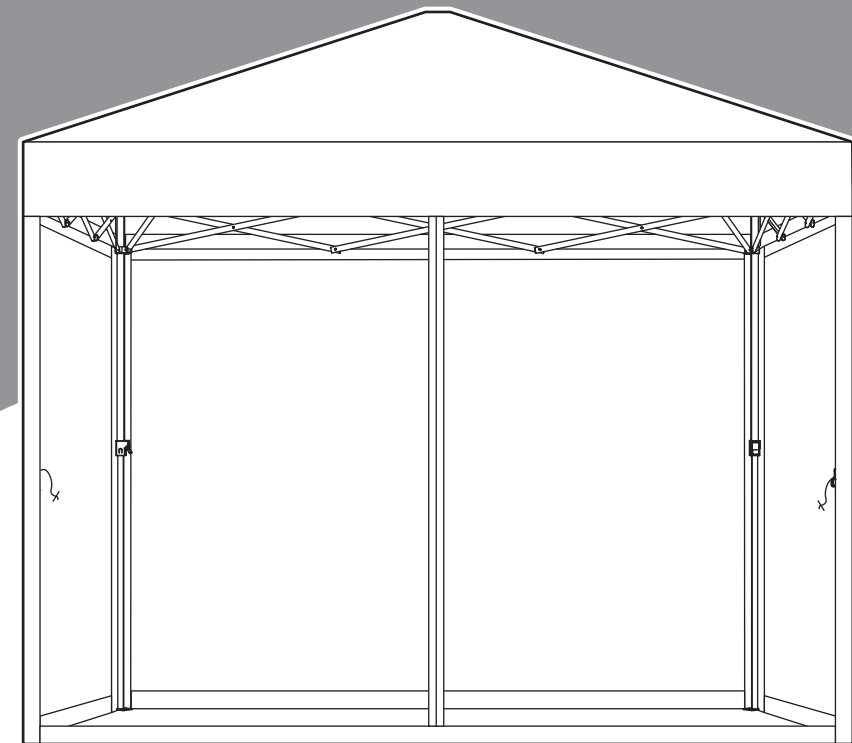

Elegant Canopy Collection- 4 Sided with Mosquito Net

**THIS ITEM IS NOT INTENDED FOR USE AS A PERMANENT STRUCTURE.**

This canopy has been developed and is intended to provide protection from the sun. DO NOT use any gas or flame sources under or near this product. Excess water buildup can cause the frame system to become unstable and collapse, possibly causing injury. Any personal accessories or modifications to the product should be removed before the onset of inclement weather, such as heavy rain, wind, lightning, hail, snow, etc.

This product should be properly taken down to avoid permanent damage to product components and any possibility of personal injury. This product is not a toy and is not designed for use by children. Under no circumstances should this product be used as a permanent or temporary storage facility for children's toys, garden tools, personal belongings, or similar valuables.

CARE AND MAINTENANCE

For long-lasting durability and the best possible protection for your canopy, follow these care and maintenance instructions: Your product is NOT machine washable or dryable. Use mild soap (not detergent) and plenty of water to clean the top. Let the fabric top and frame dry completely to avoid mildew before closing and storing. The frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying the top. Use a seam sealer if the top leaks or drips water, which is available at most sporting goods and hardware stores. Slightly tighten the bolts if the frame becomes loose.

HOW TO MAKE A WARRANTY CLAIM

If you find any defects that affect the use of the product or if the product stops working and cannot be repaired during the warranty period, please contact our customer service team at our email or via Amazon & app's direct messaging service as soon as possible. Provide the following information to expedite the process:

- Order number
- Images and/or videos illustrating the issue
- A detailed description of the problem

VIVOHOME will provide technical support, replacement, refund, or other solutions based on the nature of the issue. If you wish to return the original package for any reason, please contact us for confirmation before proceeding. You can expect to receive a response within 48 hours.

Thank you for choosing VIVOHOME. We are committed to ensuring the quality and satisfaction of your purchase. If you have any questions or need assistance, please do not hesitate to contact our customer service team.



The VIVOHOME warranty program is our commitment to you. We are committed to providing you with a high-quality product that meets your needs and expectations. To demonstrate our confidence in the durability and performance of our products, we offer the following warranty.

WARRANTY COVERAGE


 
 
This warranty program applies to any orders, purchases, receipts, or use of any products sold by VIVOHOME and is valid for a period of 1 year from the date of purchase. However, please note that this warranty period is only valid for the original order. If you receive a replacement order during the warranty period, it will not include a separate warranty period.

 

 
WARRANTY EXCLUSIONS

This warranty does not cover damage resulting from misuse, accident, unauthorized modification, or any other circumstances not directly related to the manufacturing and design of the product, including but not limited to:

- Parts lost during use.
- Normal wear and tear of products or parts.
- Incorrect installation (such as using the wrong voltage) or assembly.
- Exceeding the bearing capacity of the product.
- Use under extremely harsh conditions.
- Improper cleaning or maintenance.
- Damage caused by any reason other than the intended use of the product.
- Indirect loss or damage caused by the product.

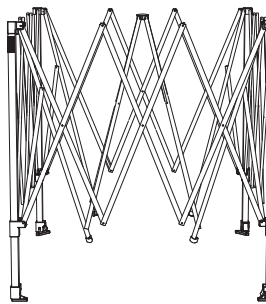

Item No.	Reference Image	Qty.
A	 <p>Canopy Frame</p>	x1
C	 <p>Mosquito Netting</p>	x1
E	 <p>Rope</p>	x4


Item No.	Reference Image	Qty.
B	 <p>Canopy Top</p>	x1
D	 <p>Stake</p>	x8
F	 <p>Wheel Bag</p>	x1



STEP 1

Open the canopy frame.


NOTE: Be careful to prevent hands from pinching.

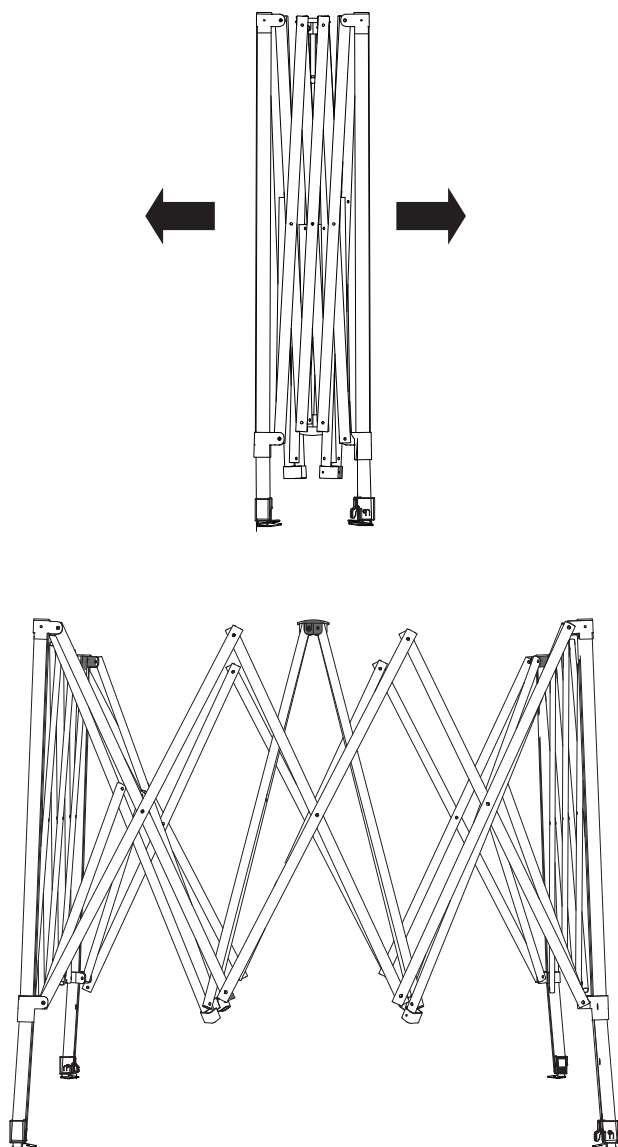

STEP 3

Fold up the canopy and put it into the wheel bag.

NOTE: Be careful to prevent hands from pinching.

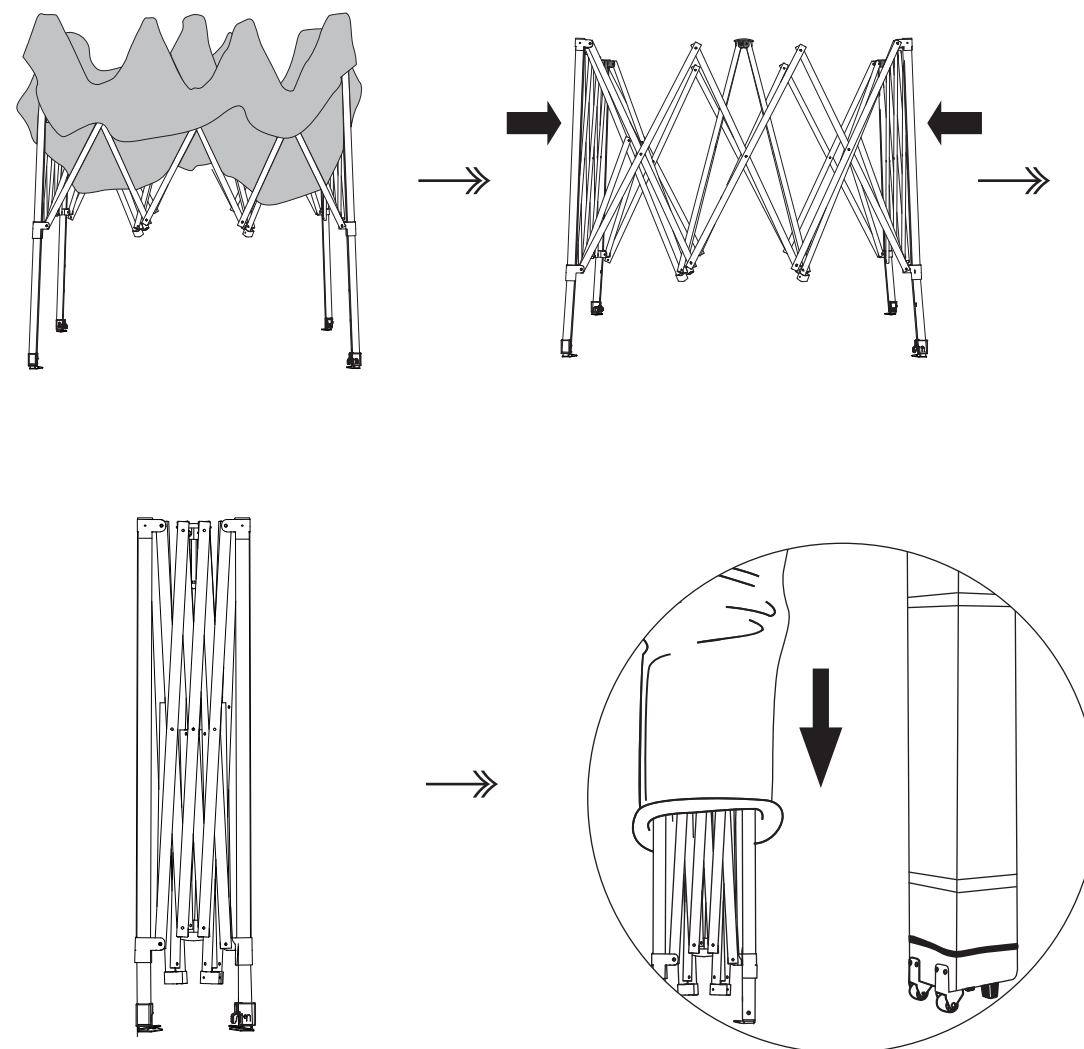


Take Down the Canopy



STEP 2

Fold up the leg poles.


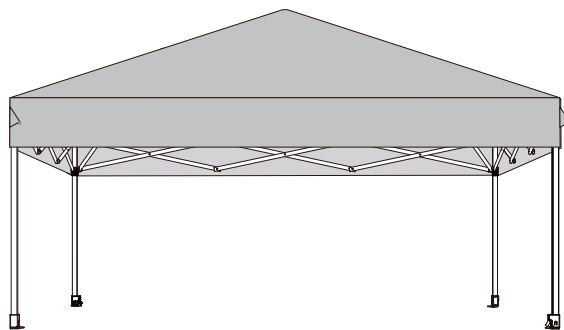


Assembly Steps



STEP 2

Attach the canopy top.

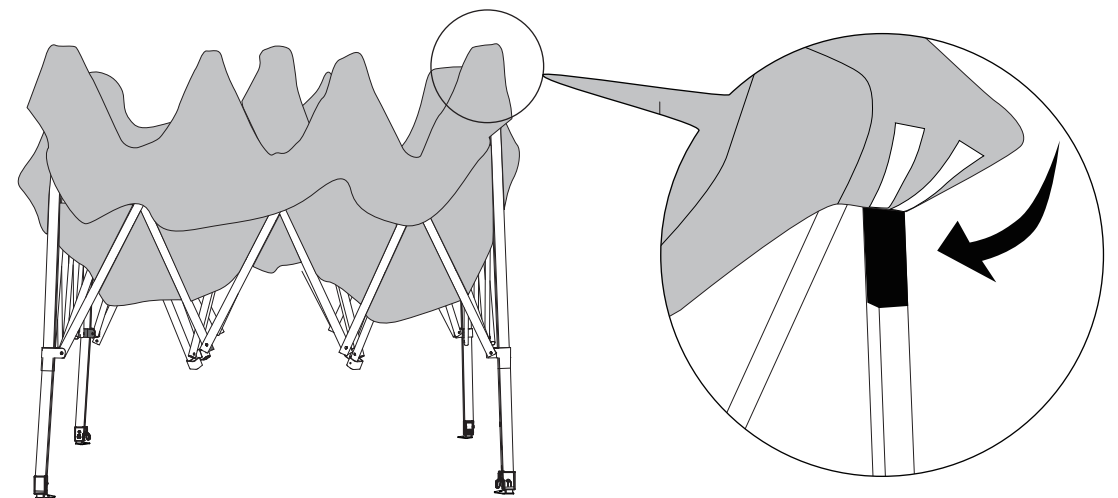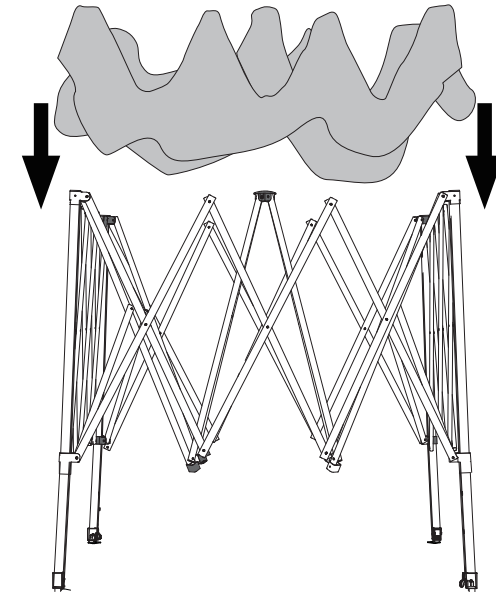


Assembly Steps



STEP 3

Lock the frame.

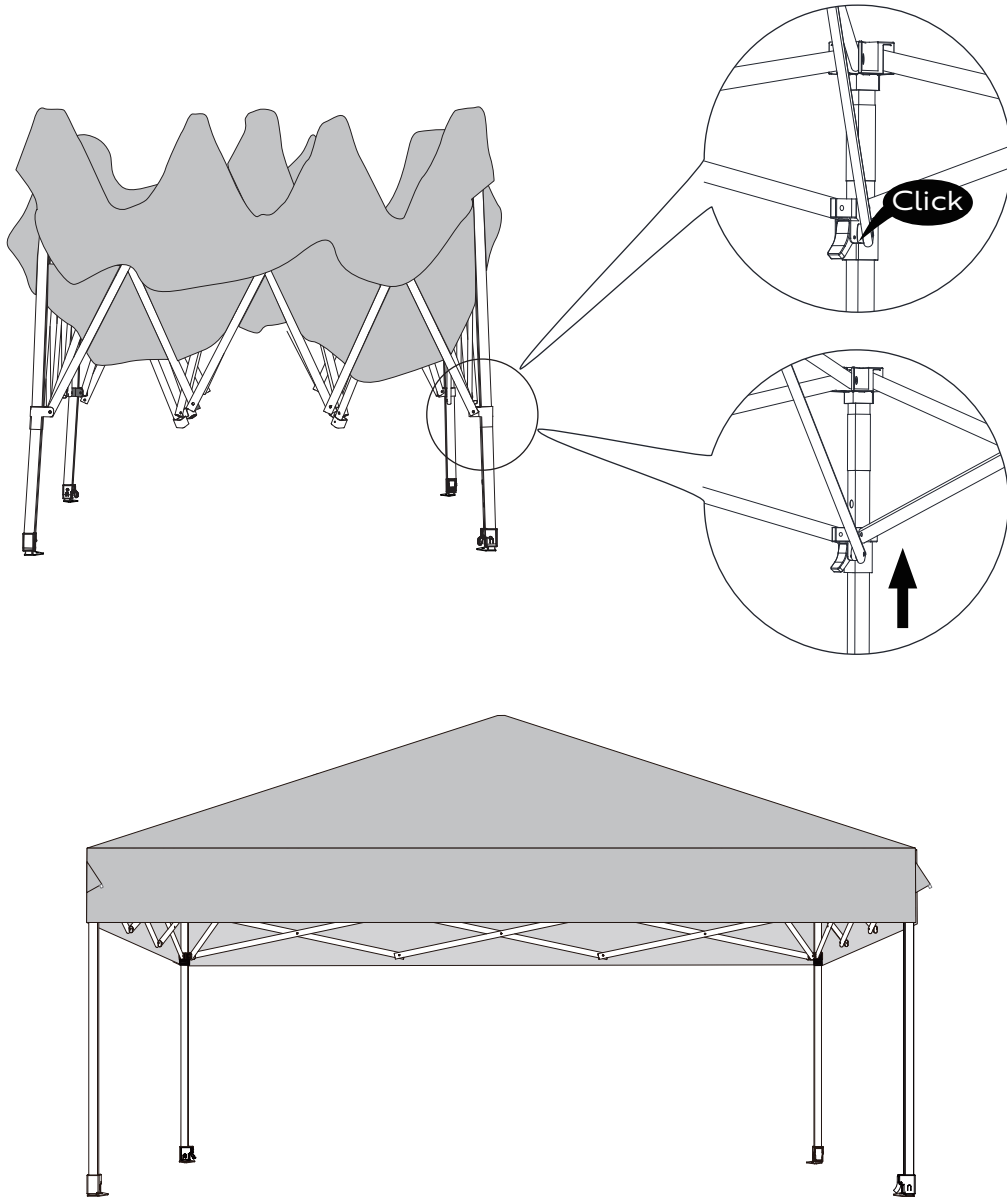

Take Down the Canopy



STEP 1


Remove the mosquito net, wind ropes, and stakes.






STEP 7

Install the wind ropes and the ground stakes.

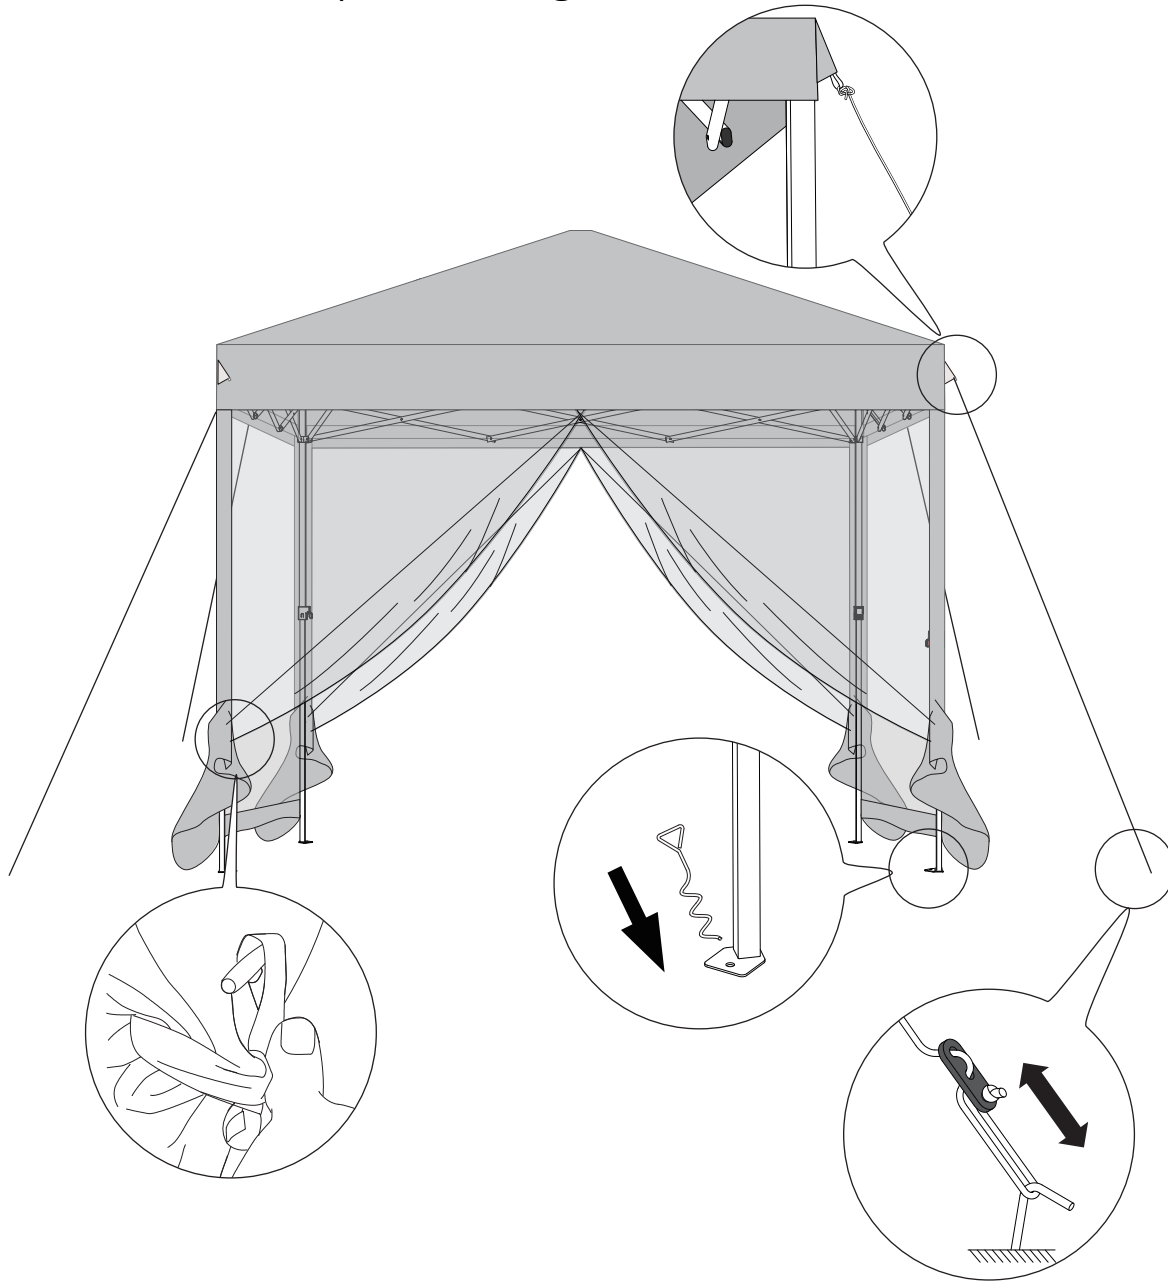

STEP 4


Adjust the canopy height.

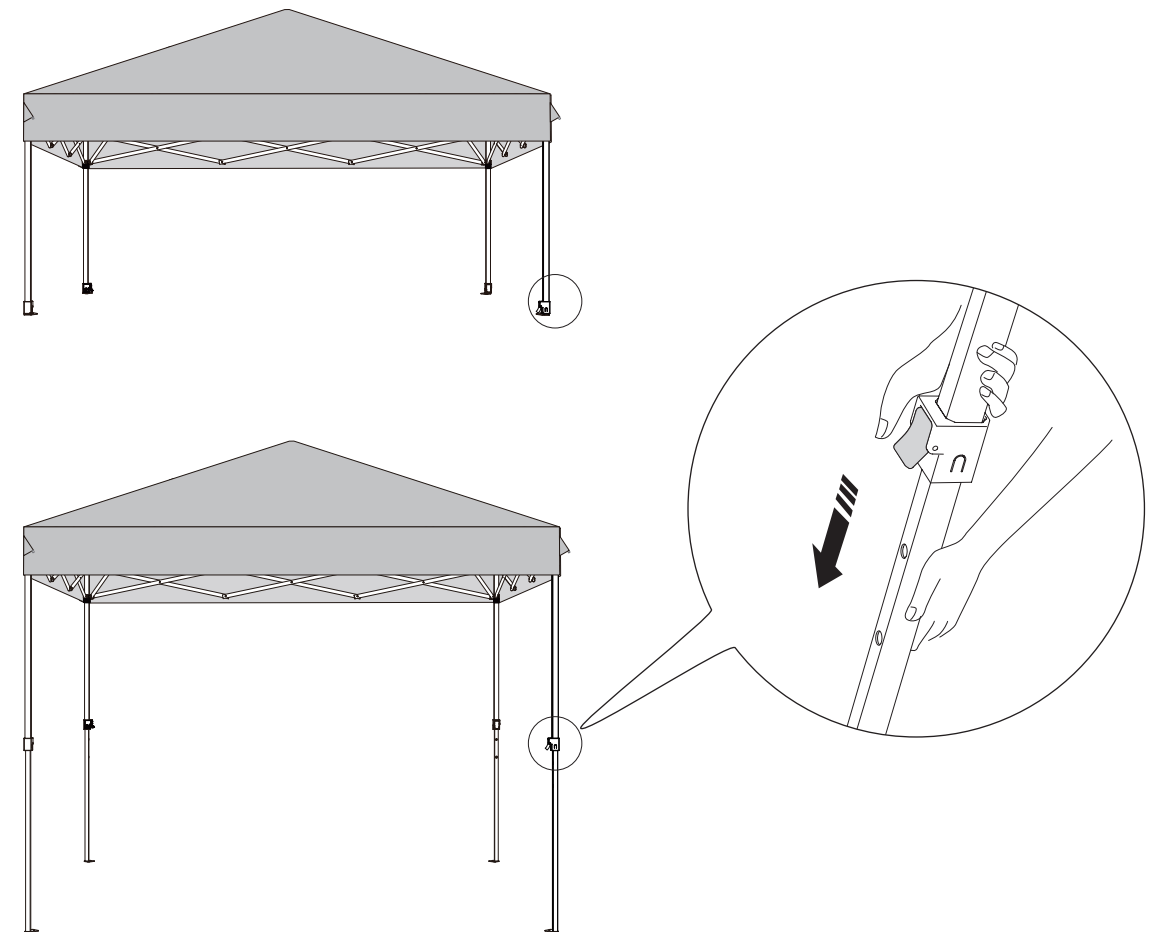



STEP 5

Secure the canopy in place with velcro on.

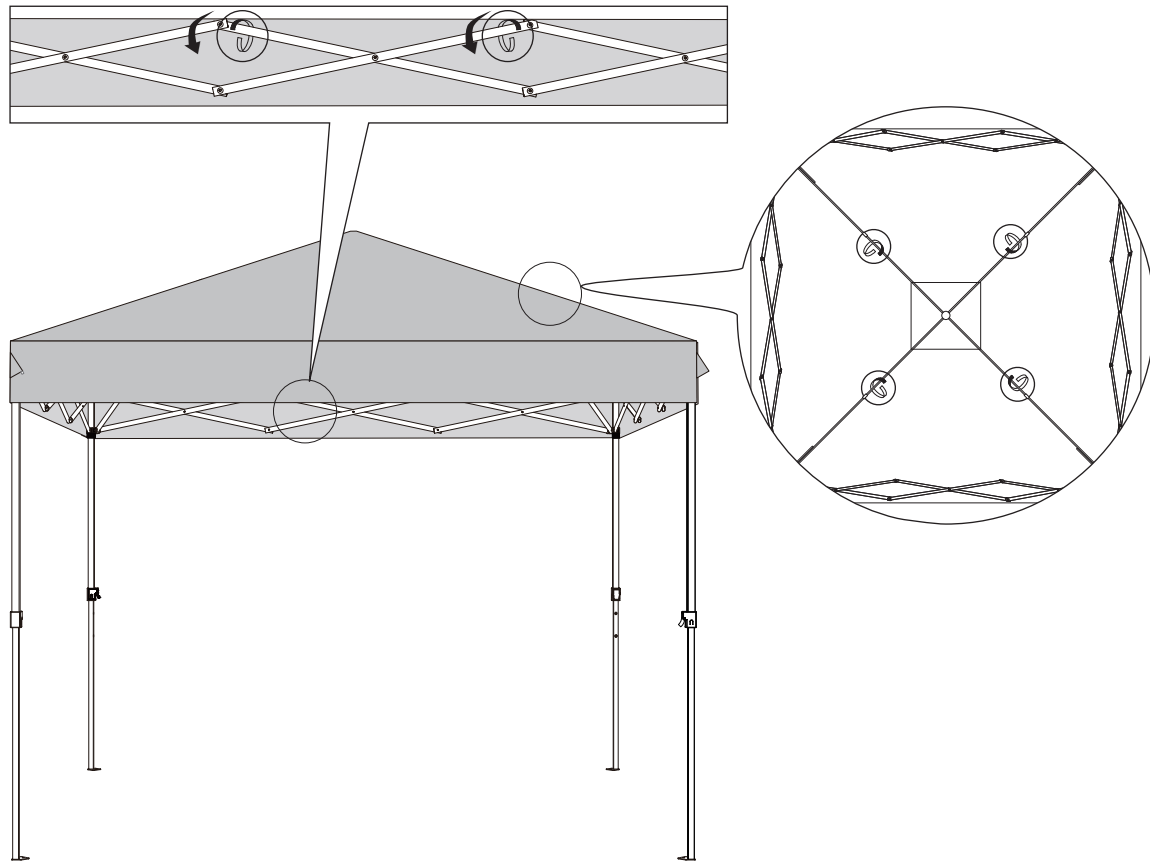

STEP 6

Install the mosquito net and fix it with velcro on all four sides and four corners.

