 




# **INSTALLATION**

## *Product Manual*

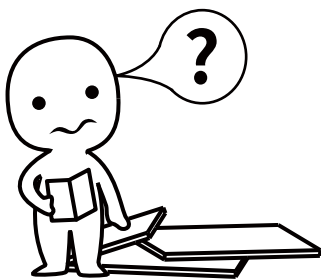


### **IMPORTANT INFORMATION!**

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

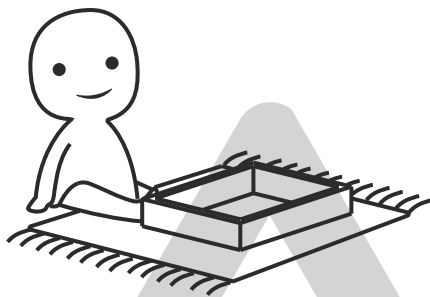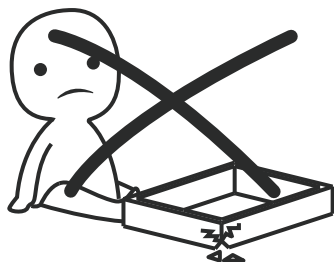



### **AVOID SCRATCHES!**

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

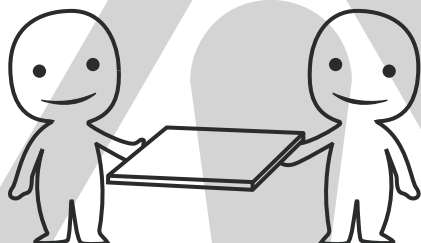

### **IMPROVE EFFICIENCY !**

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

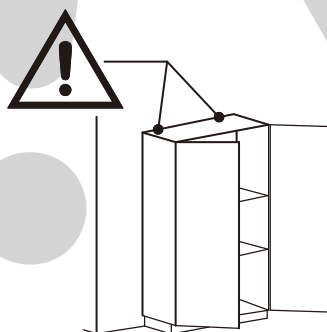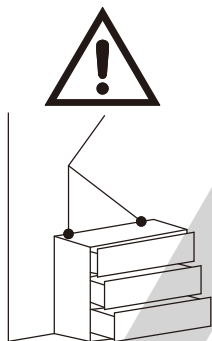

### **ANTI-TOPPLE WARNING !**

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

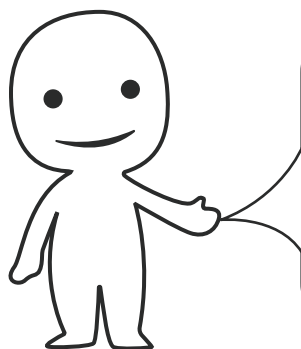


Please prepare the following tools

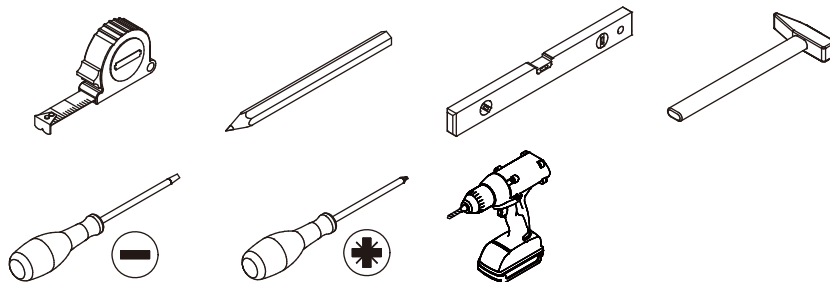 

 When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

<p>A x 28</p>  <p>Ø 6 x 35 mm</p>	<p>B x 28</p>  <p>Ø 15 x 9 mm</p>	<p>C x 24</p>  <p>Ø 6 x 30 mm</p>	<p>E x 22</p>  <p>Ø 4 x 35 mm</p>	<p>F x 30</p>  <p>Ø 4 x 14 mm</p>
<p>G x 4</p> 	<p>H x 10</p>  <p>Ø 4 x 14 mm</p>	<p>I x 5</p> 	<p>J x 4</p>  <p>Ø 8 x 30 mm</p>	<p>K x 24</p>  <p>Ø 3 x 12 mm</p>
<p>L x 4</p> 	<p>M x 24</p>  <p>Ø 4 x 12 mm</p>	<p>N x 4</p> 	<p>O x 2</p> 	<p>P x 2</p>  <p>Ø 6 x 30 mm</p>
<p>Q x 2</p> 	<p>R x 24</p>  <p>Ø 3 x 12 mm</p>	<p>CR x 3</p>  <p>300mm</p>	<p>CL x 3</p>  <p>300mm</p>	<p>DR x 3</p>  <p>300mm</p>
<p>DL x 3</p>  <p>300mm</p>				

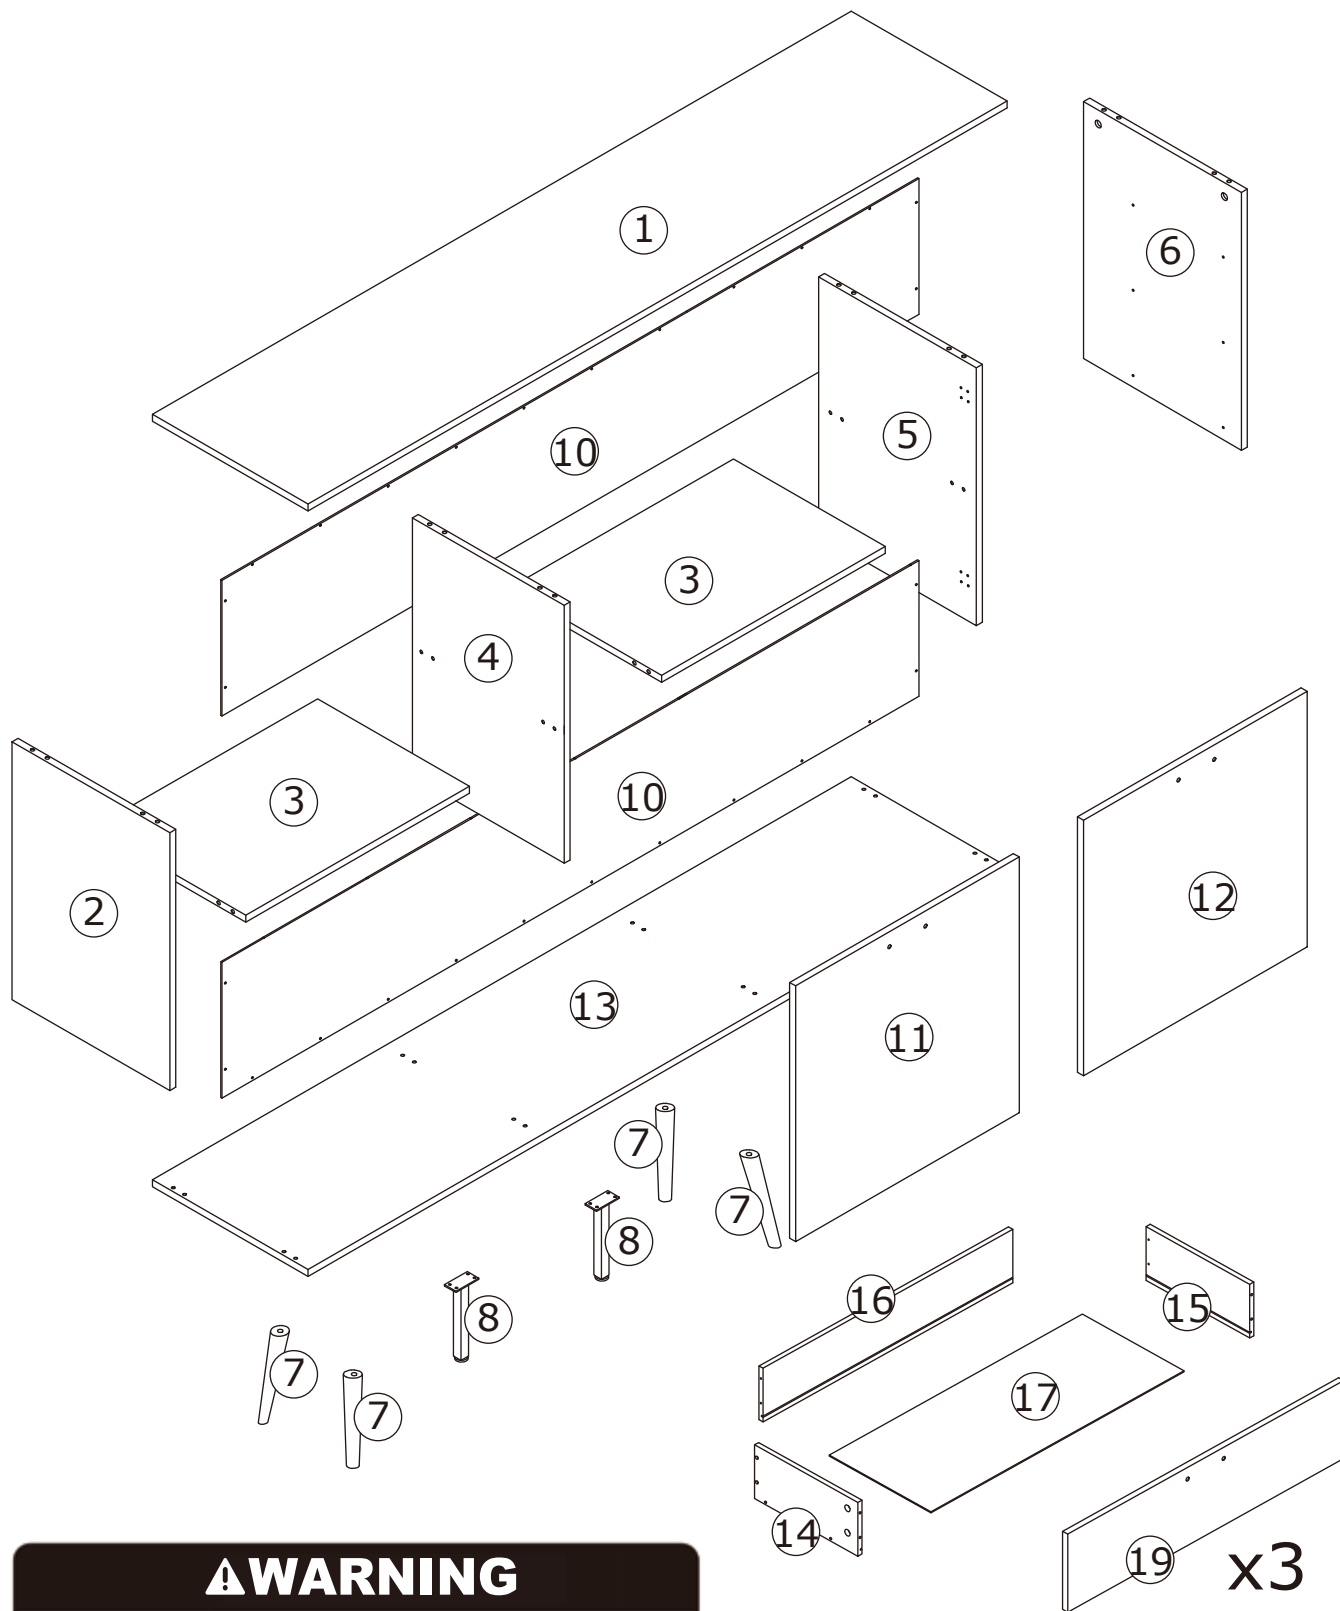 


## ⚠ WARNING

**Children have died from furniture tipover. To reduce the risk of furniture tipover:**



- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.  
Do not remove!*


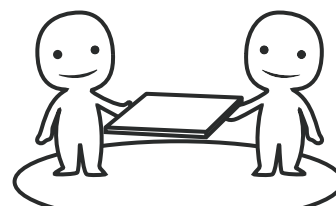


ASSEMBLED BY 2 ADULTS

 
 
1

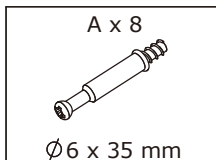

 
 
Insert quickfit screws(A) into No.1 plate as shown.

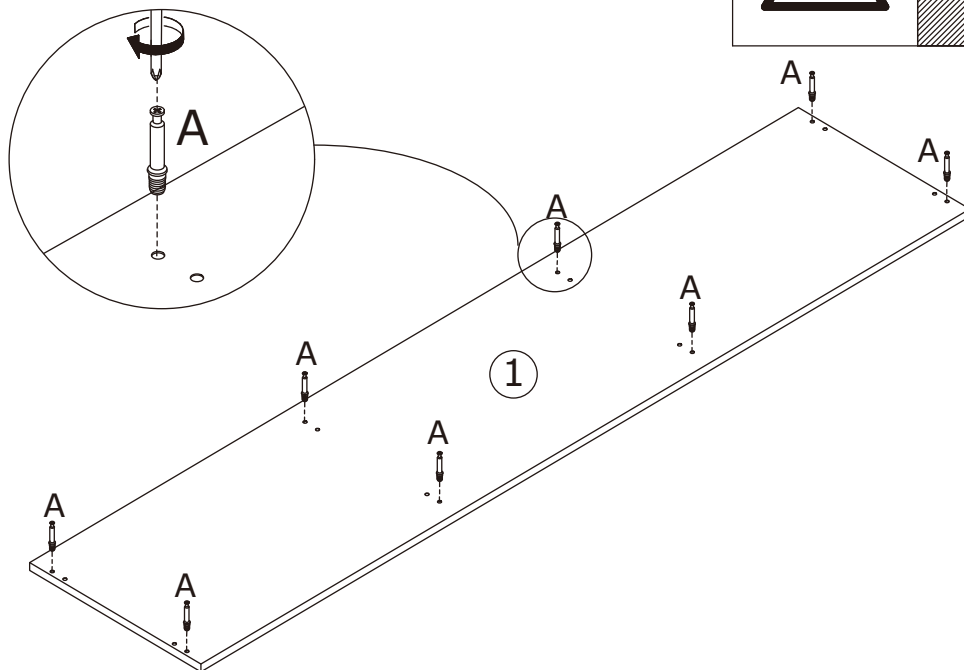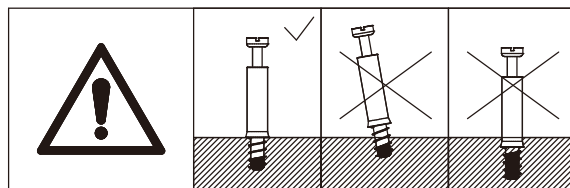




2

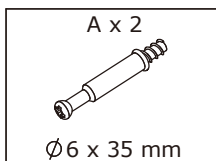  

  Insert quickfit screws(A) into No.2 plate as shown.



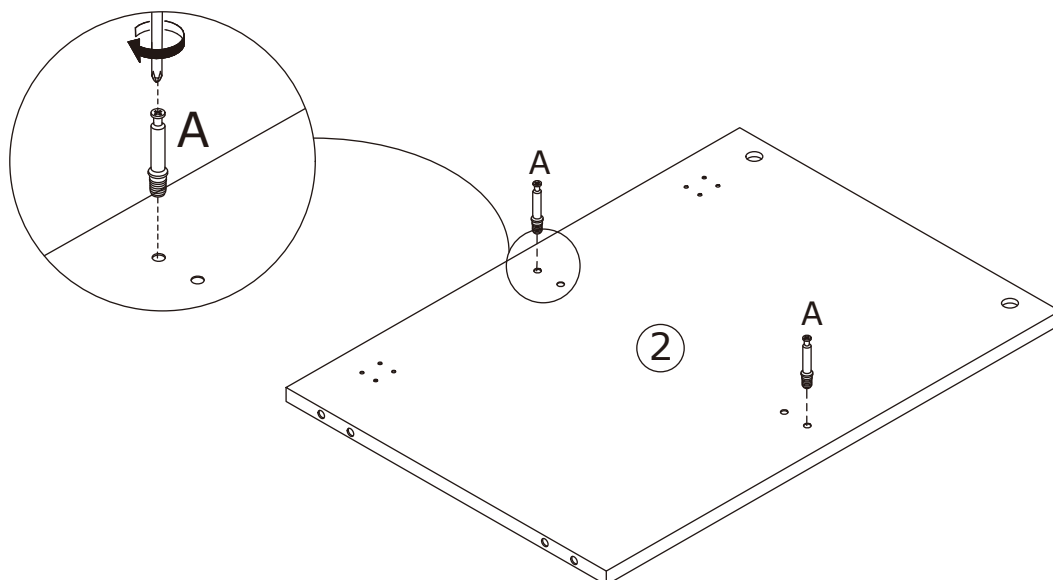
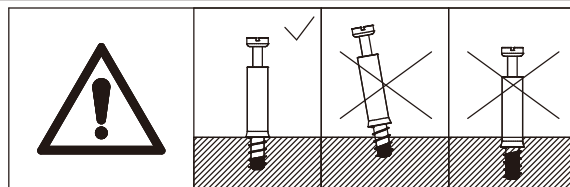


3

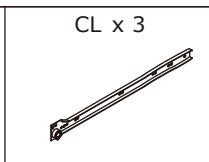 
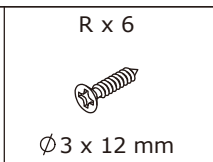 
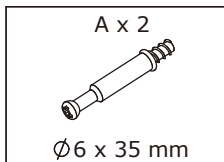 


Insert quickfit screws(A) into No.5 plate at first.

   
 
**Flip the plate,** fix slide rail(CL) with screw(R) as shown.

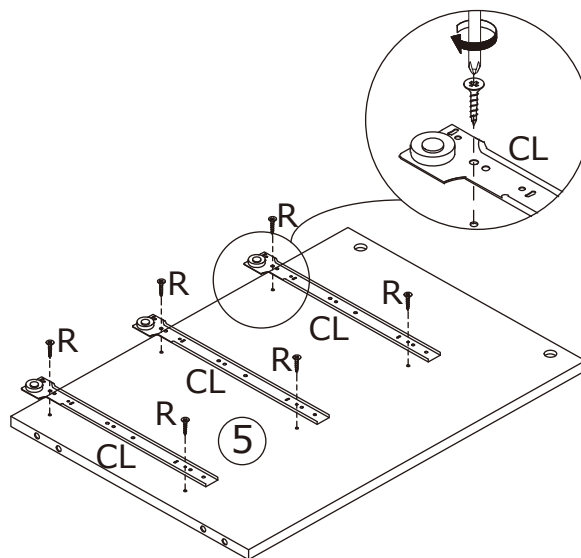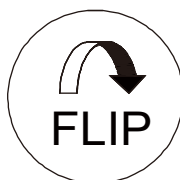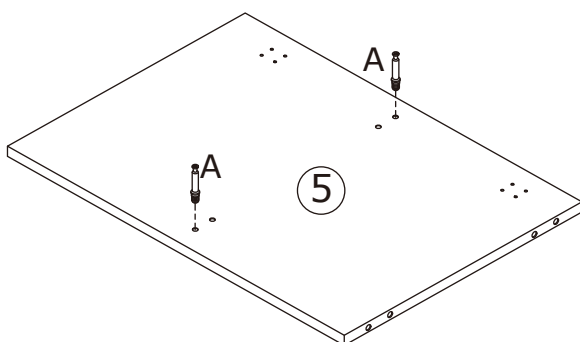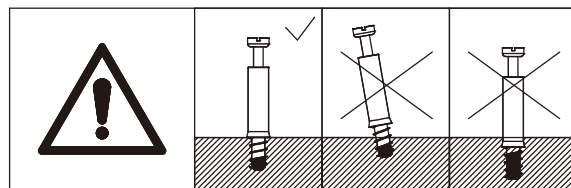



4

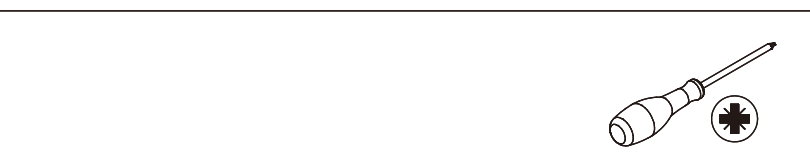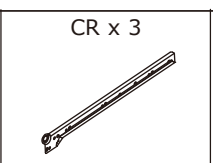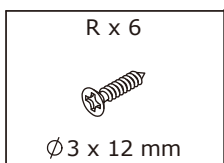   

 
 
Fix slide rail(CR) to No.6 plate with screw(R) as shown.

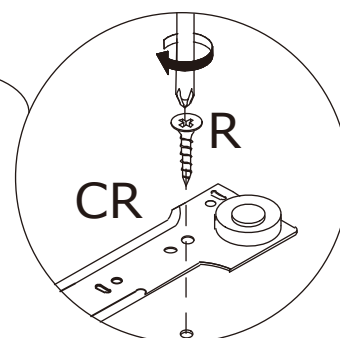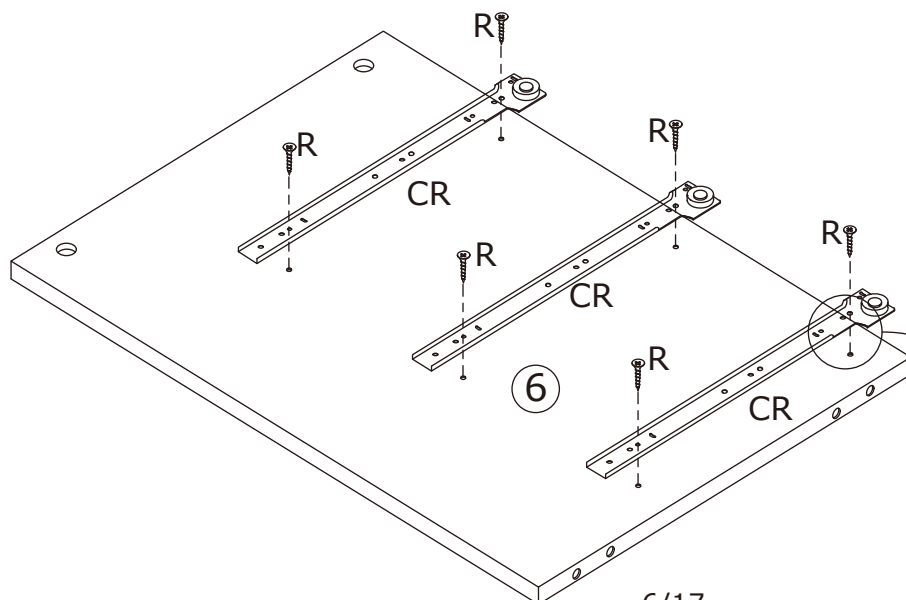




5

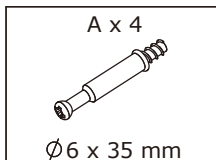  


 
 
Insert quickfit screws(A) into **both sides** of No.4 plate as shown.

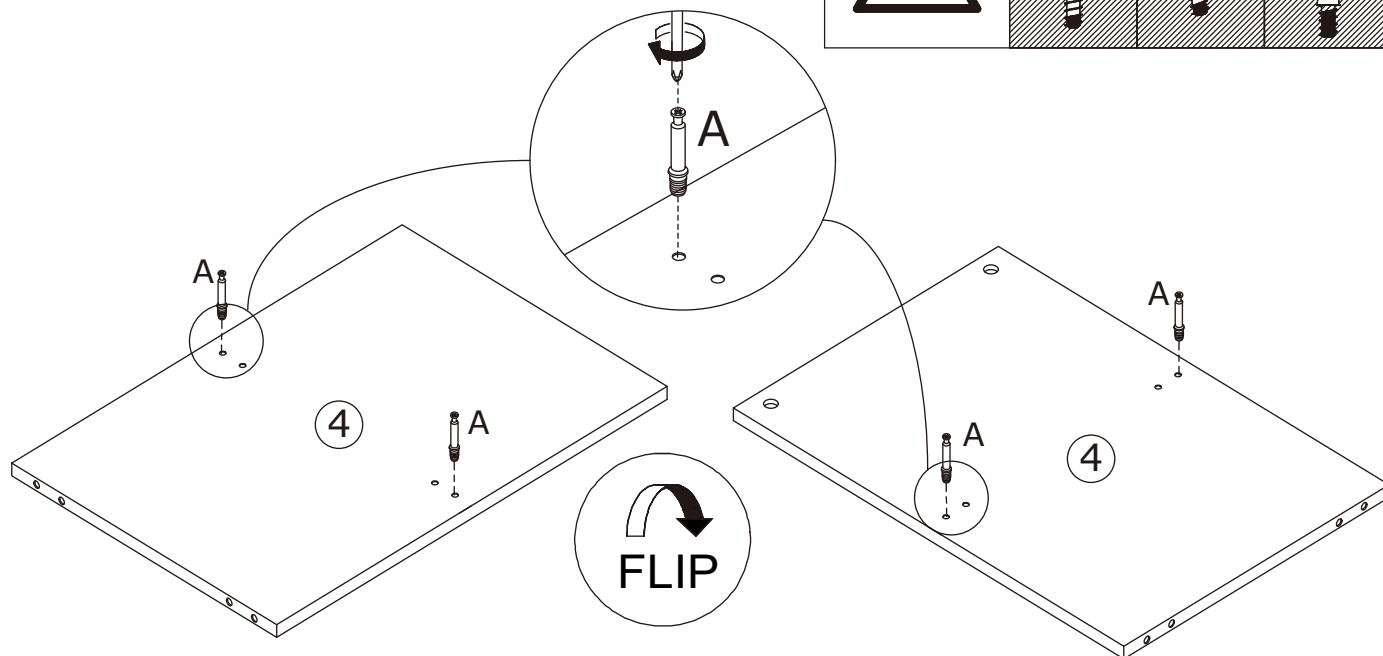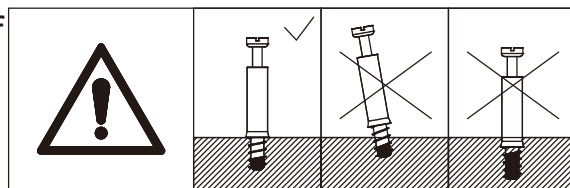




6

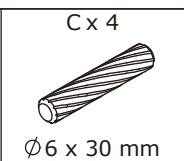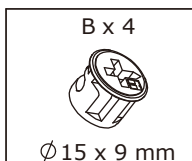   

  
 
Connect No.2 plate with No.3 using short wooden dowel(C) and turn cam lock(B) clockwise to tighten.

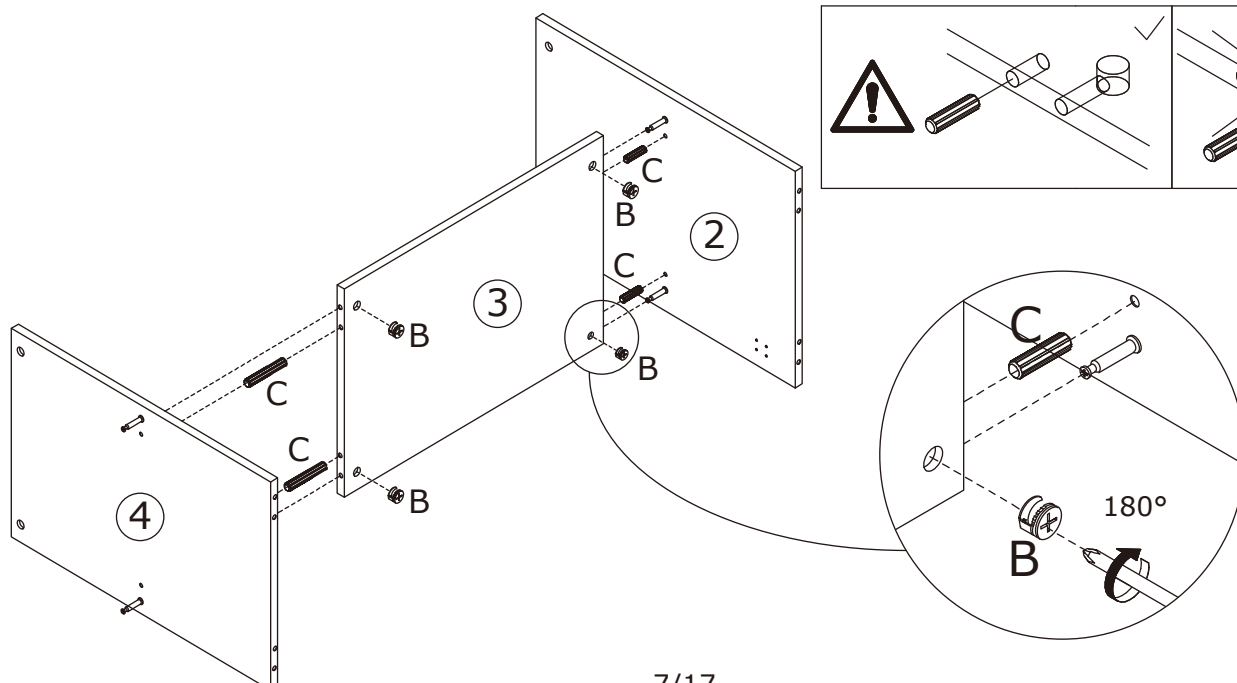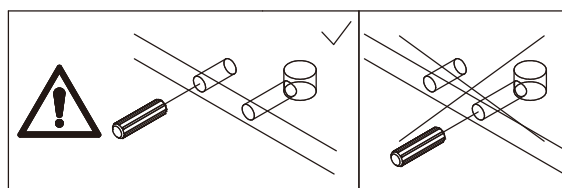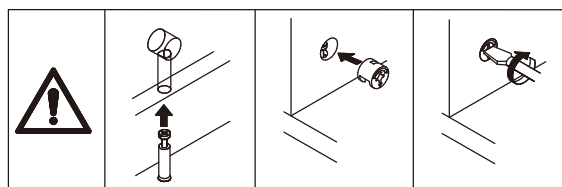

7

 
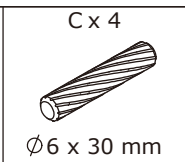 
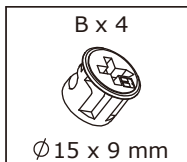 


  Connect another No.3 plate with No.4 and No.5 using short wooden dowel(C) , turn cam lock(B) clockwise to tighten.


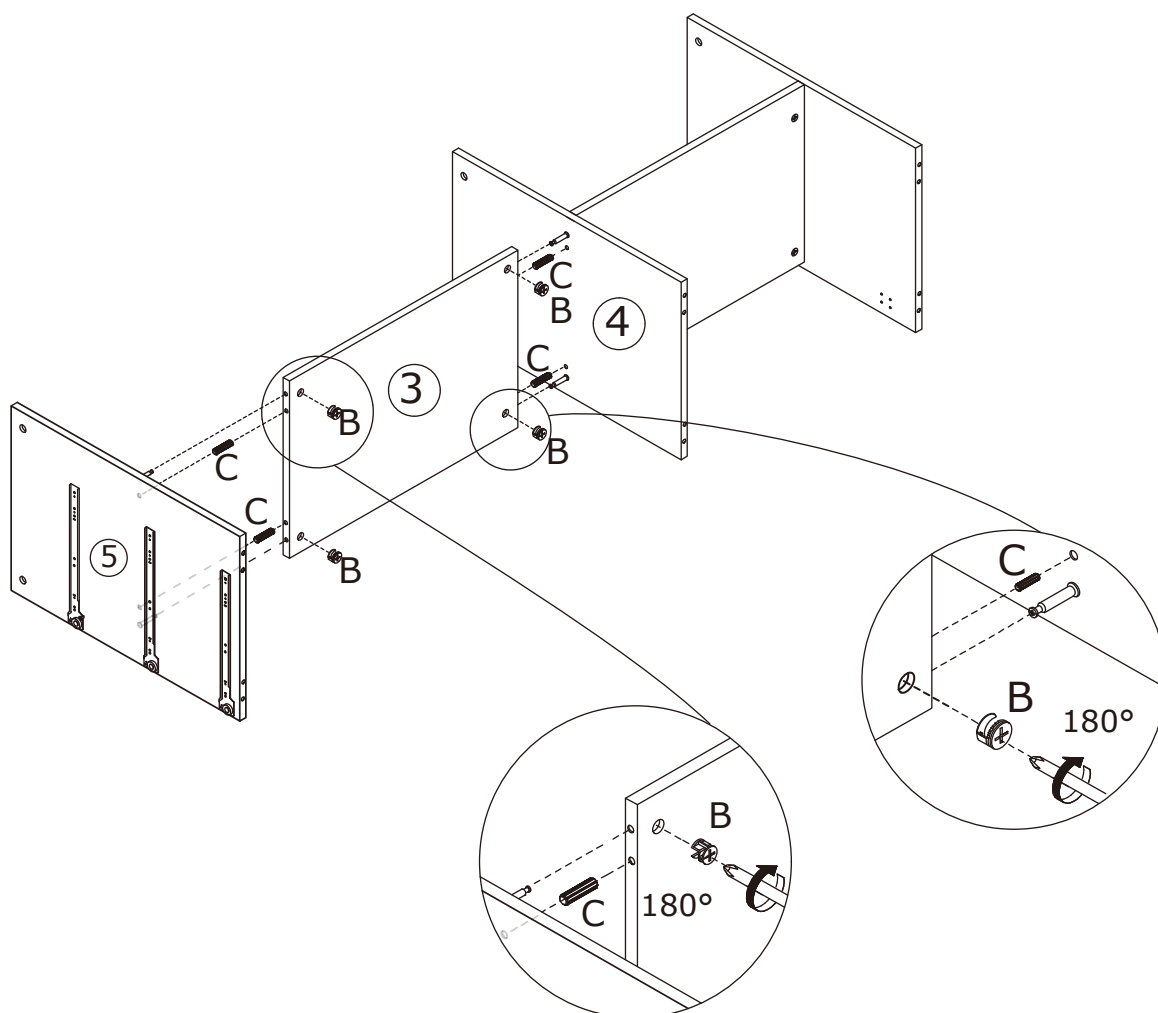
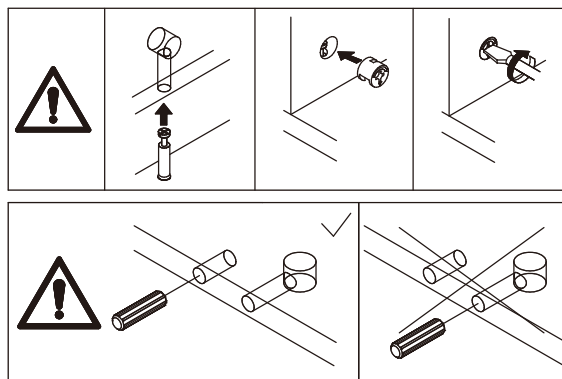






8

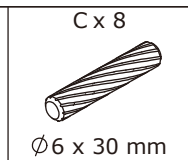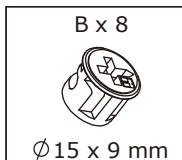   

  
 
Cover No.1 plate to the top using wooden dowel(C) and turn cam lock(B) clockwise to tighten as shown.

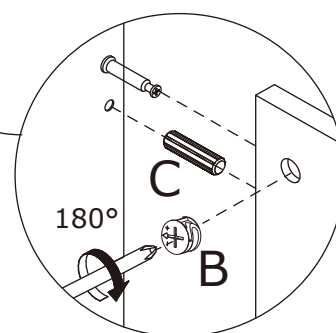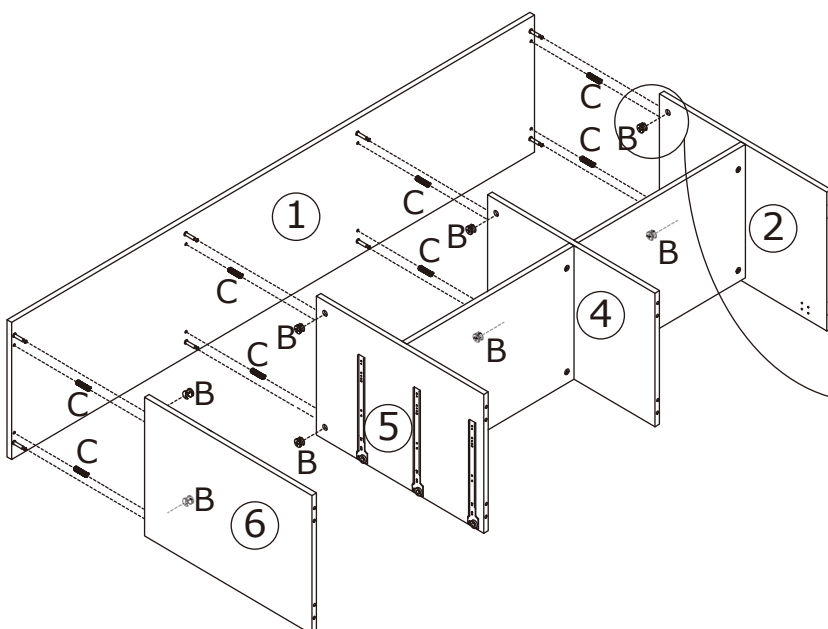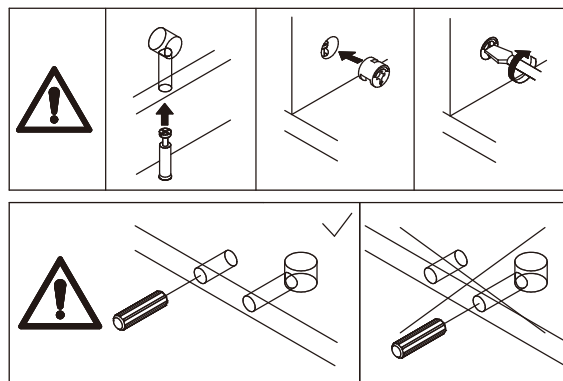

9

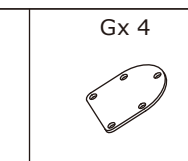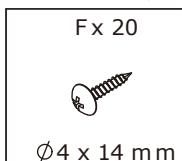  

  Fix iron sheet(G) to No.13 plate with screw(F) as shown.

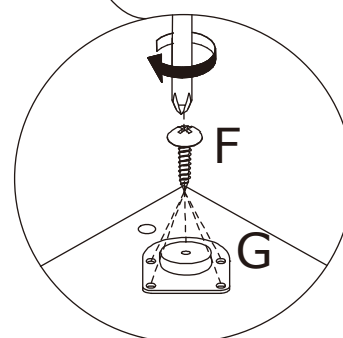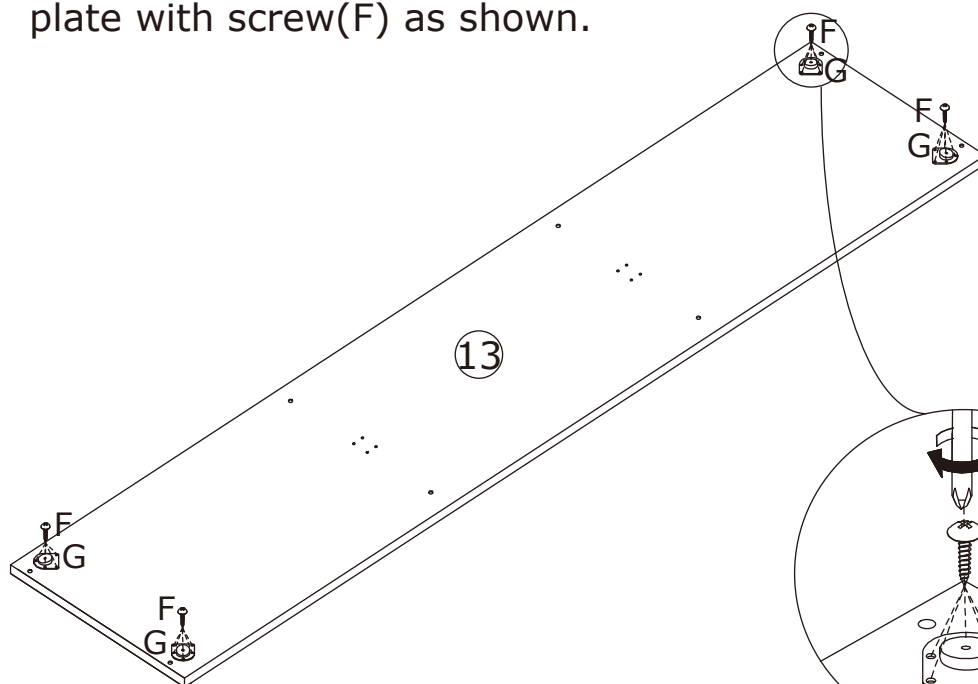

# 10

F x 8

 


Ø4 x 14 mm

J x 4




Ø8 x 30 mm




Rotate No.7 leg into iron sheet with screw(J) as shown.

 Fix No.8 leg support to No.13 plate with screw(F) as shown.

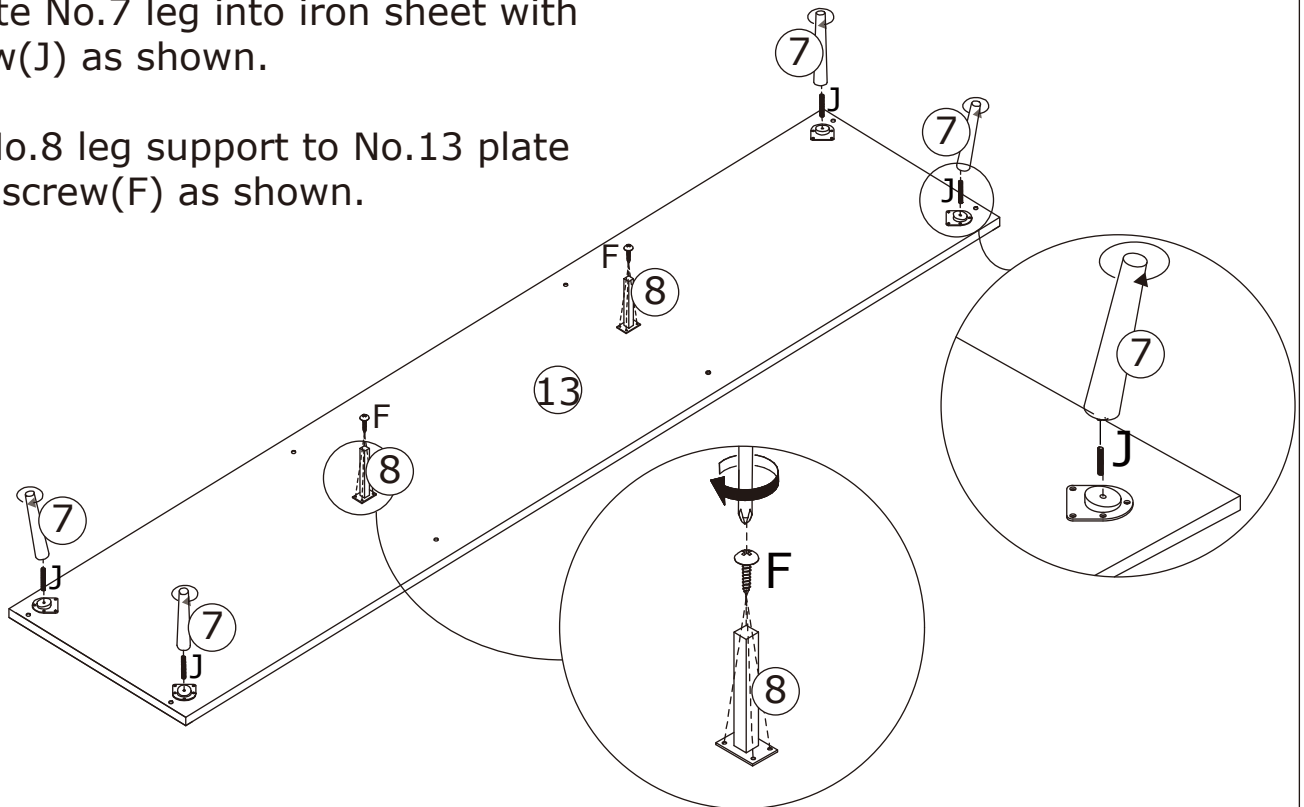


# 11

 C x 8




Ø6 x 30 mm


 
E x 8



Ø4 x 35 mm

 

  
Attach No.13 plate to the bottom of the unit with wooden dowel(C) and fix with screw(E) as shown.

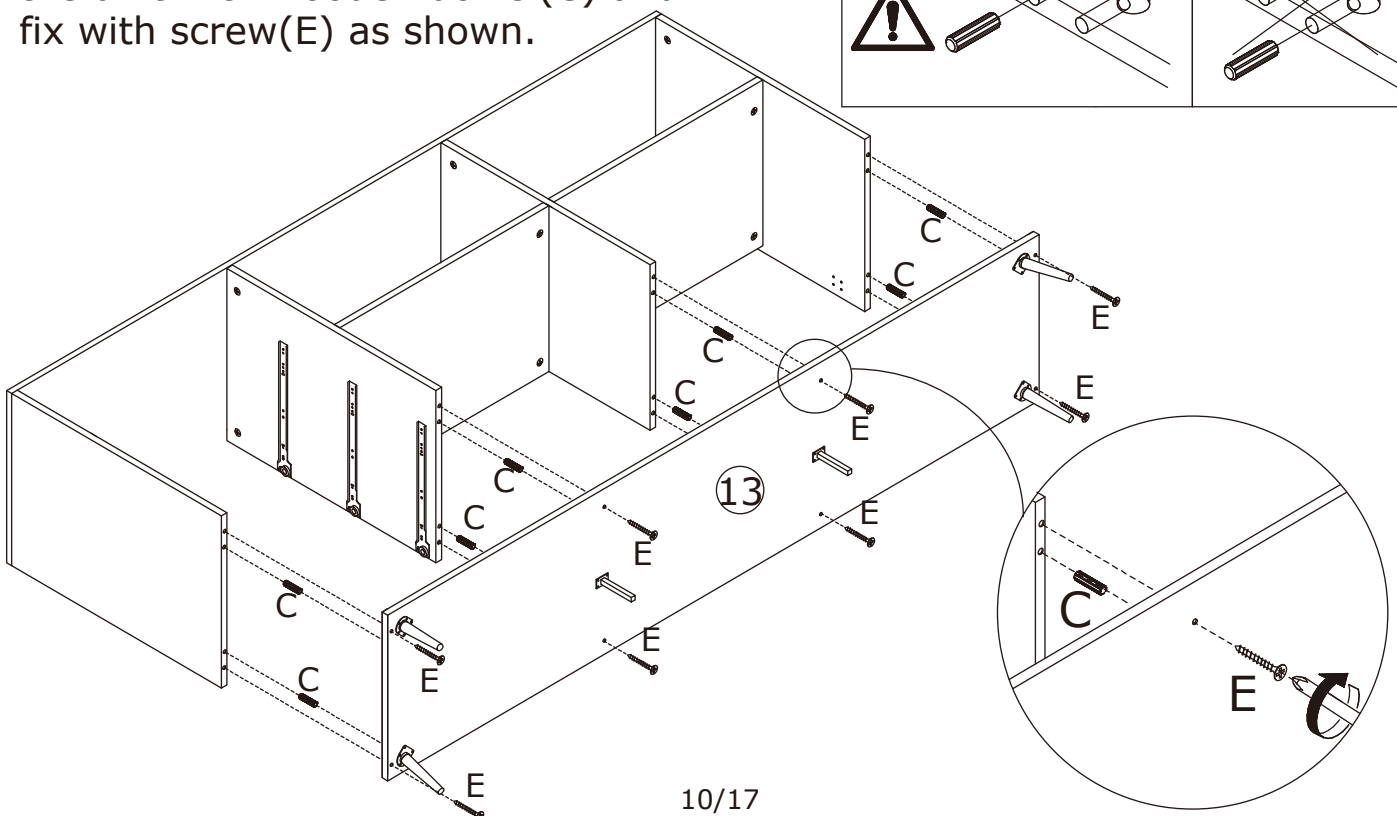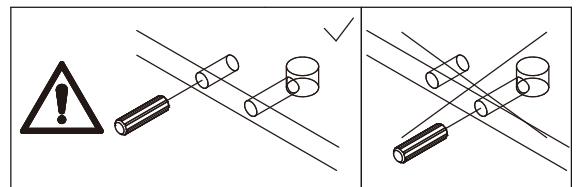


# 12



 
Fix No.10(x2) back plate with screw(K) at first.  
Reinforce the two back plates using part(Q) and screw(K) as shown.

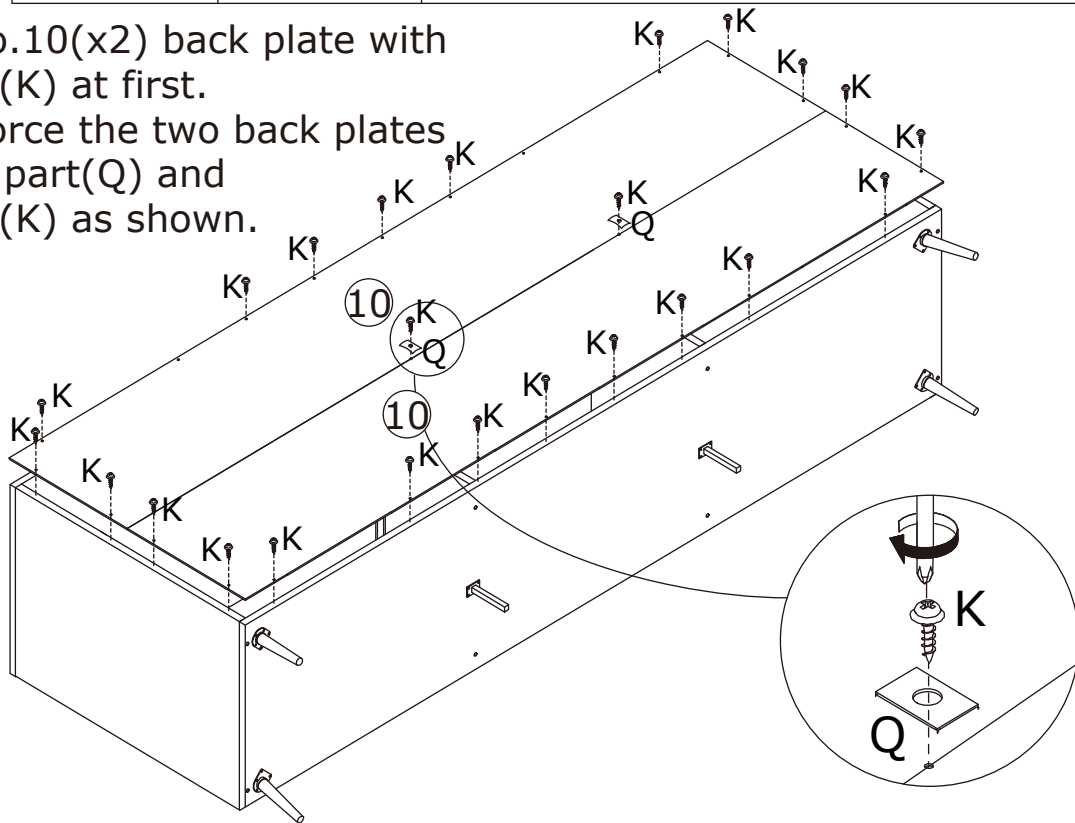

# 13

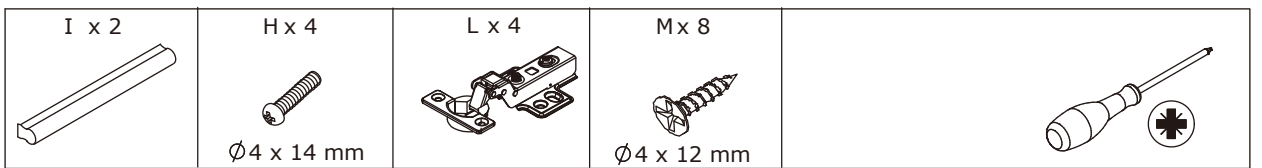 


 
Fix hinge(L) to No.11 and 12 plate with screw(M) as shown.

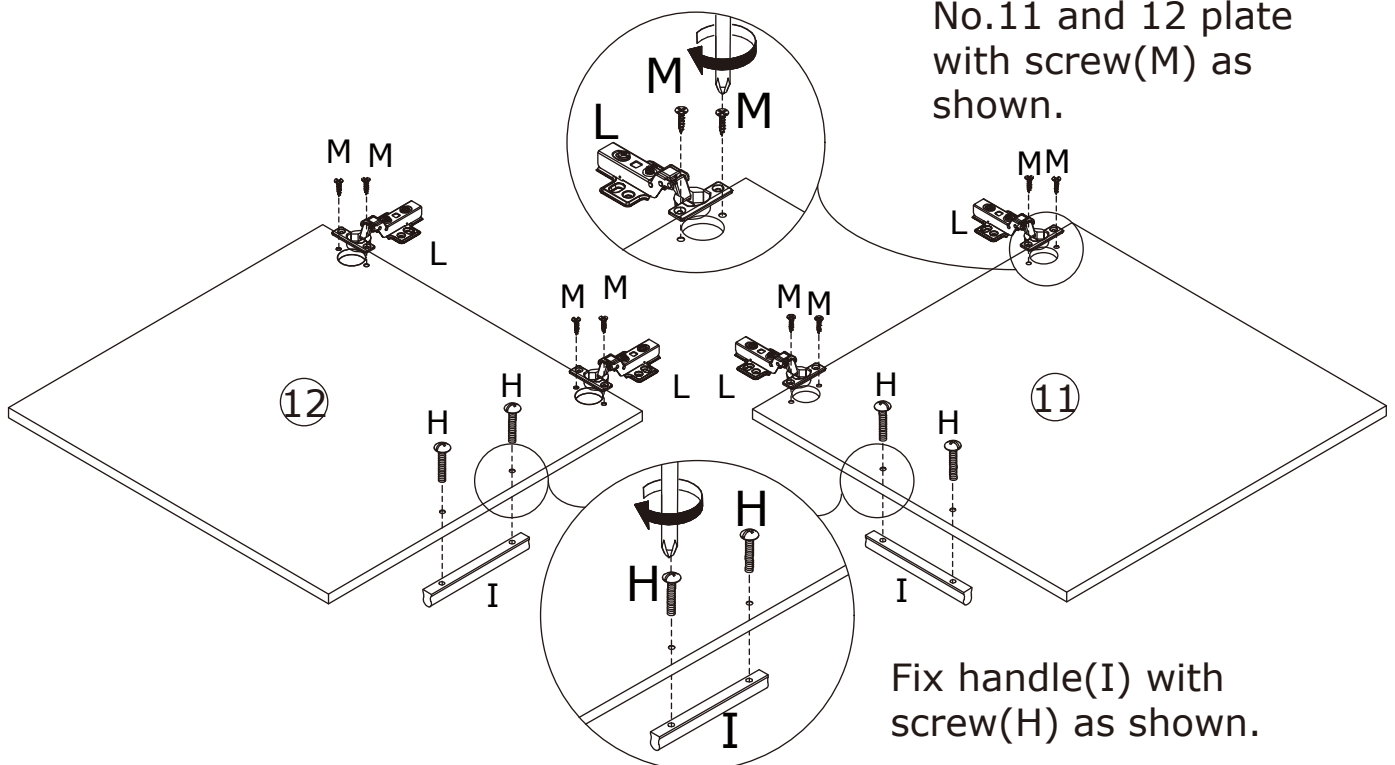


Fix handle(I) with screw(H) as shown.


# 14

  M x 16















  
Attach No.11 plate to left side plate;  
No.12 to right by fixing hinge with  
screw(M) as shown.

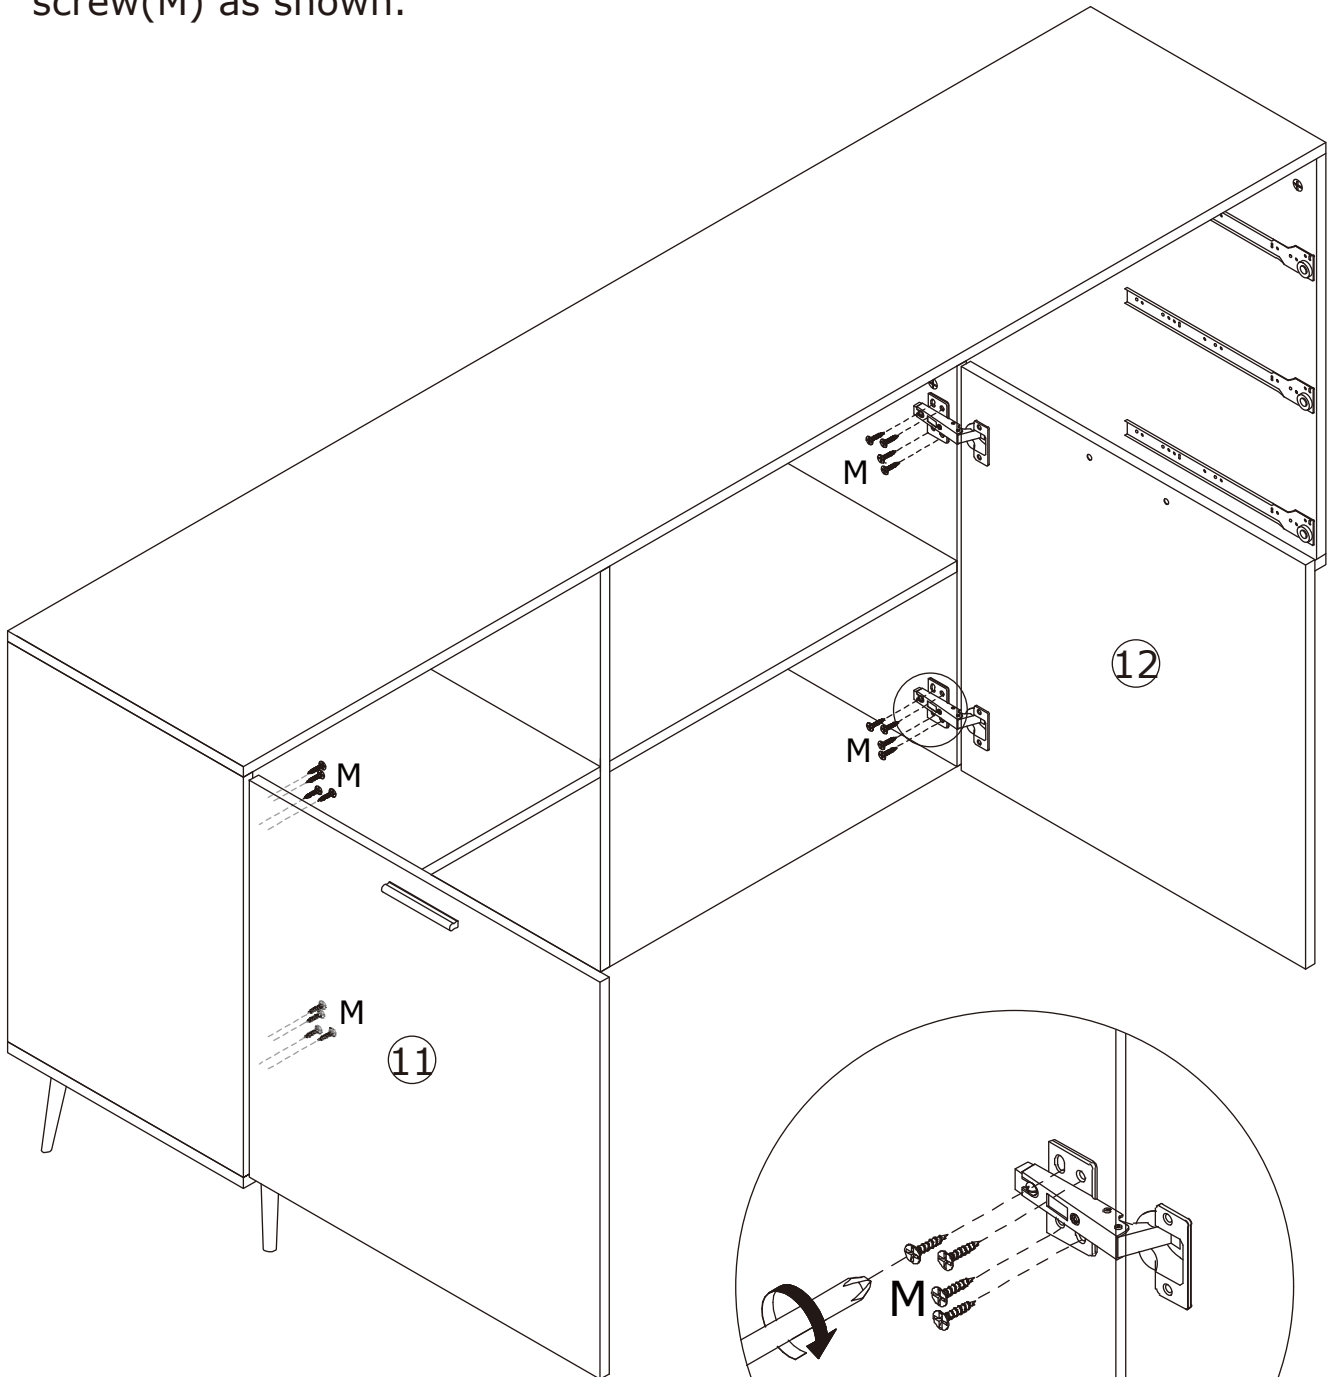



           
 
 
If doors are still not aligned if the hinges are properly assembled,

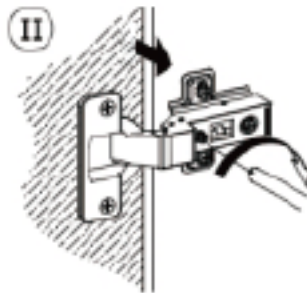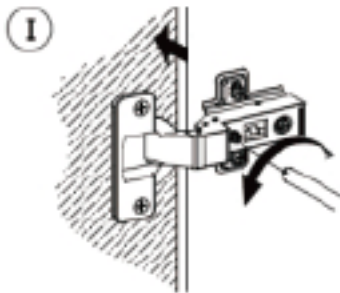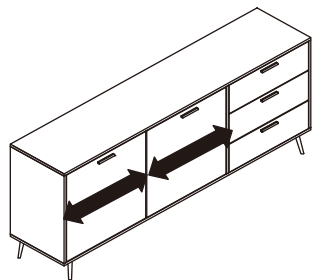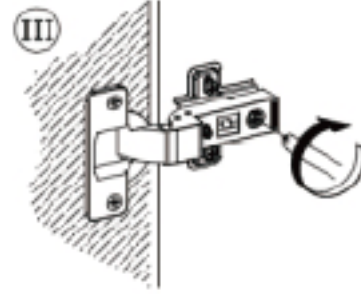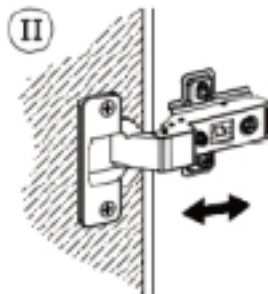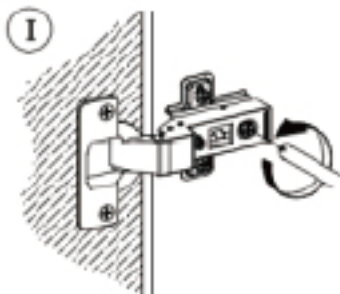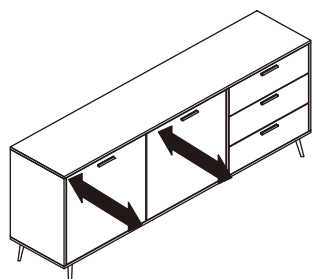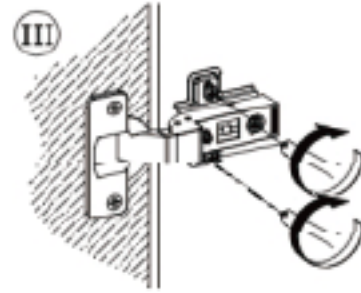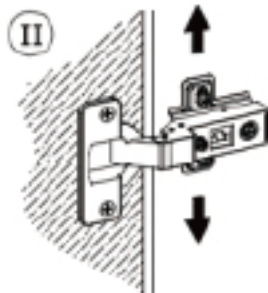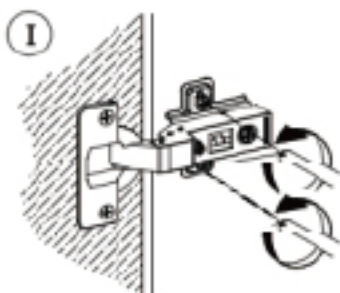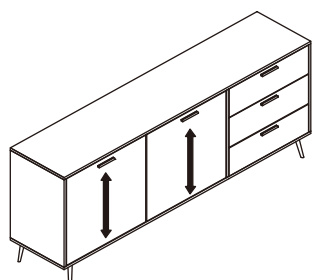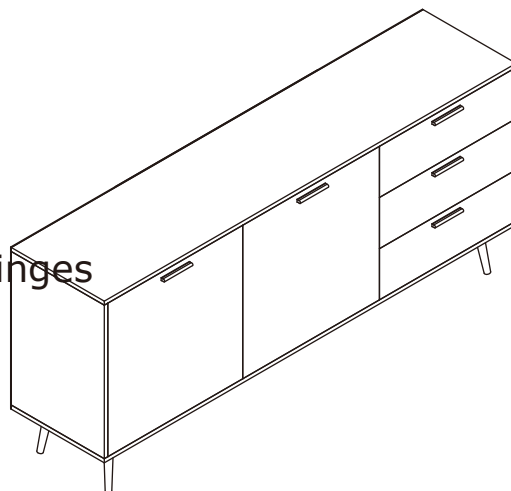

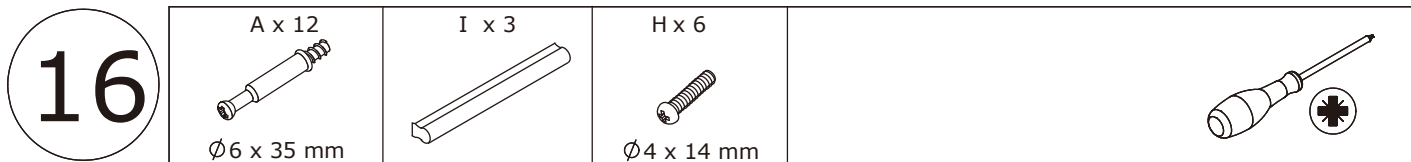


Insert quickfit screws(A) into No.19 as shown.

   Fix handle(I) with screw(H) as shown.

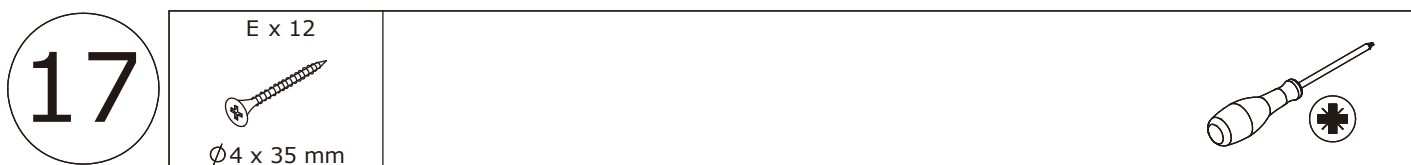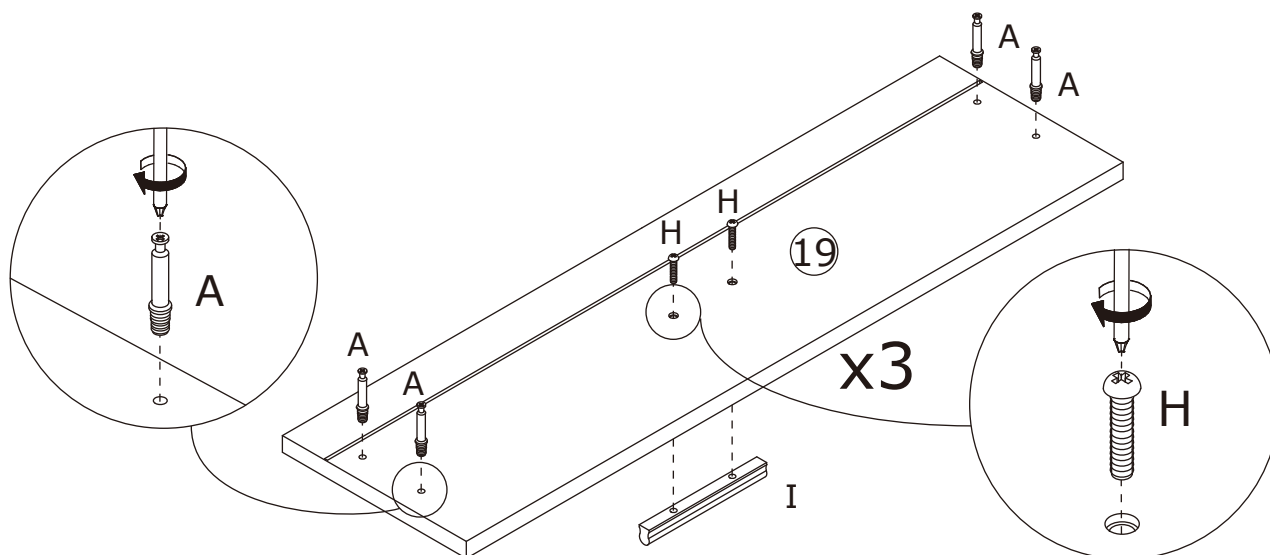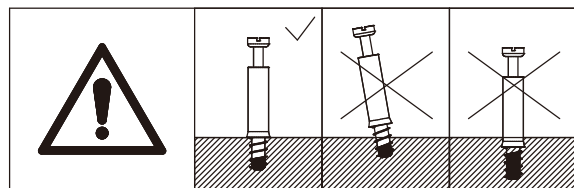


 Fix No.14 and No.15 plate to No.16 with screw(E) as shown.

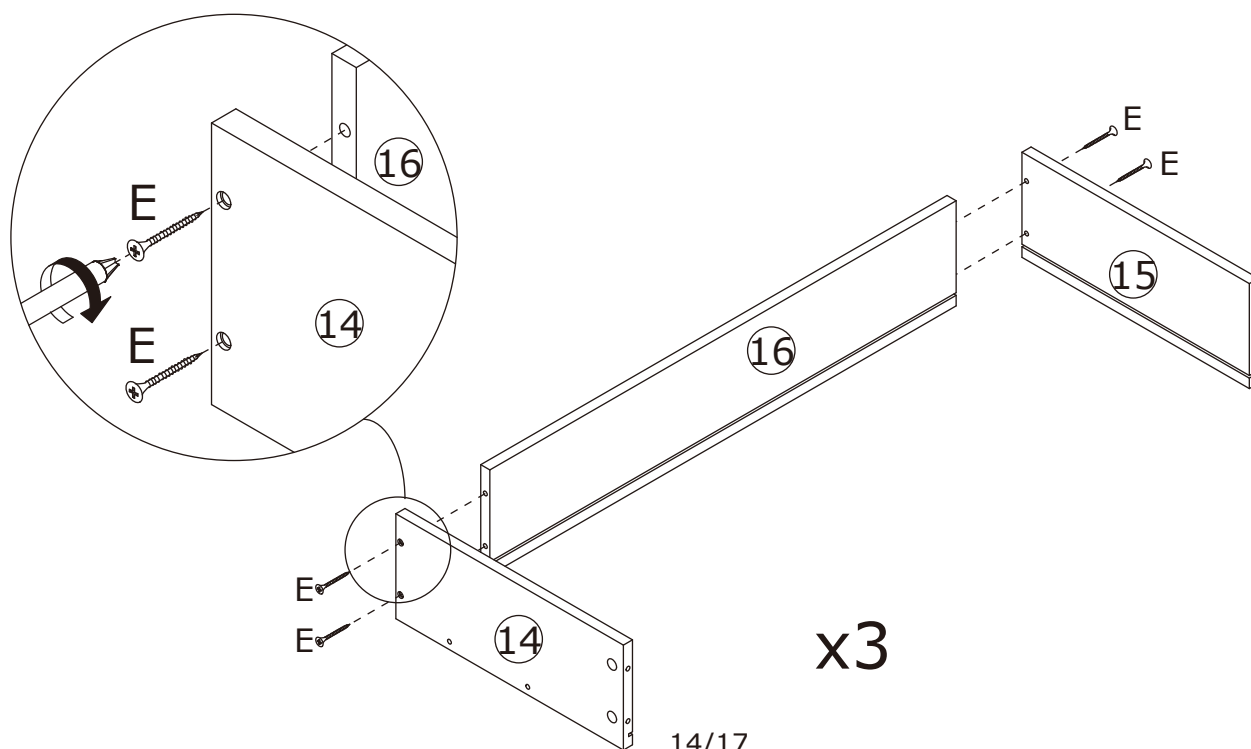

# 18

 Slide plate 17 into available slots as shown.

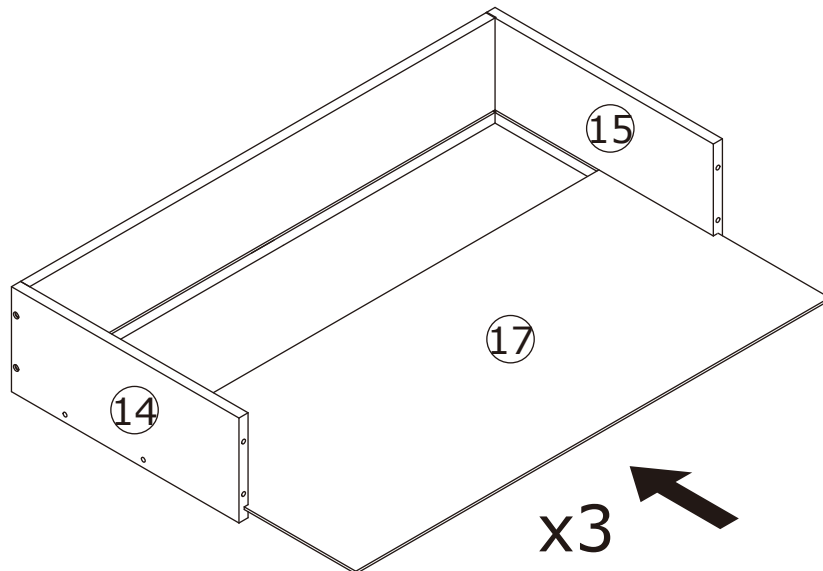


# 19




B x 12



 
Ø 15 x 9 mm



   
Attach No.19 to the component and turn cam lock(B) clockwise to tighten as shown.

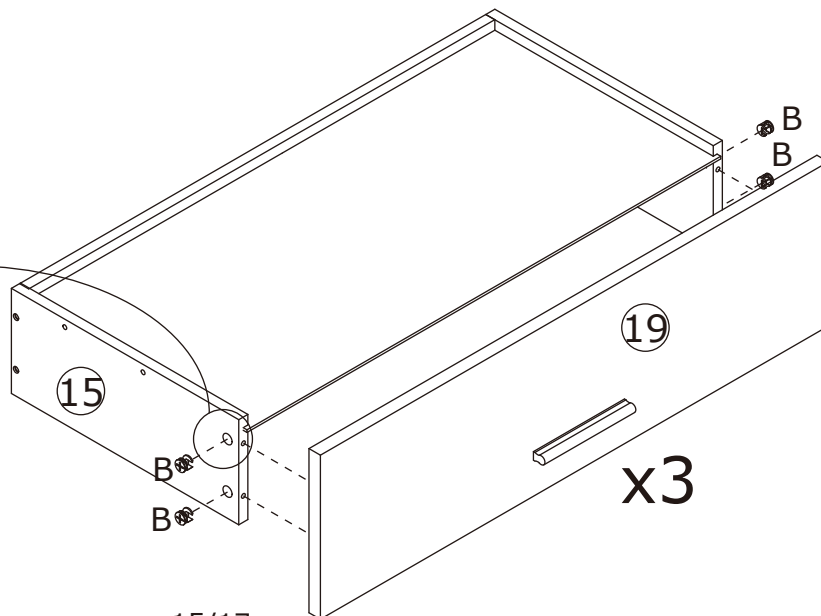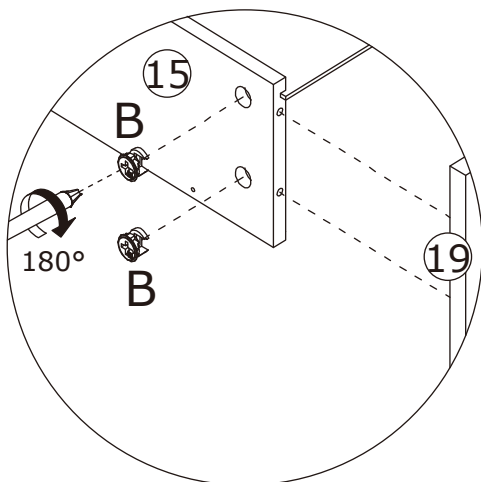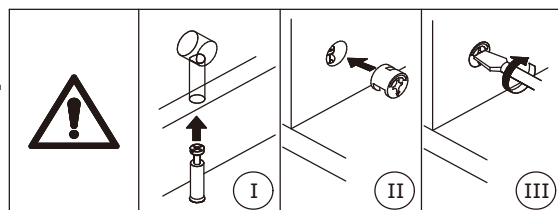

20

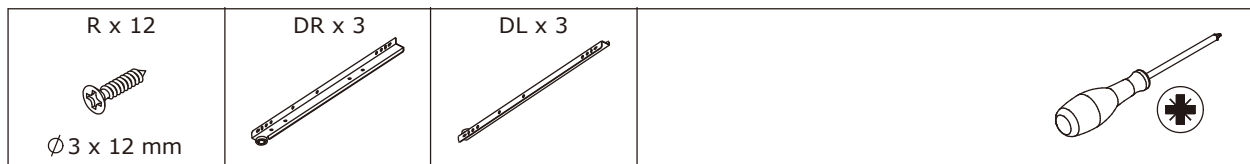 

 
Fix track(DL) and (DR) to No.14 and No.15 plate with screw(R) as shown.

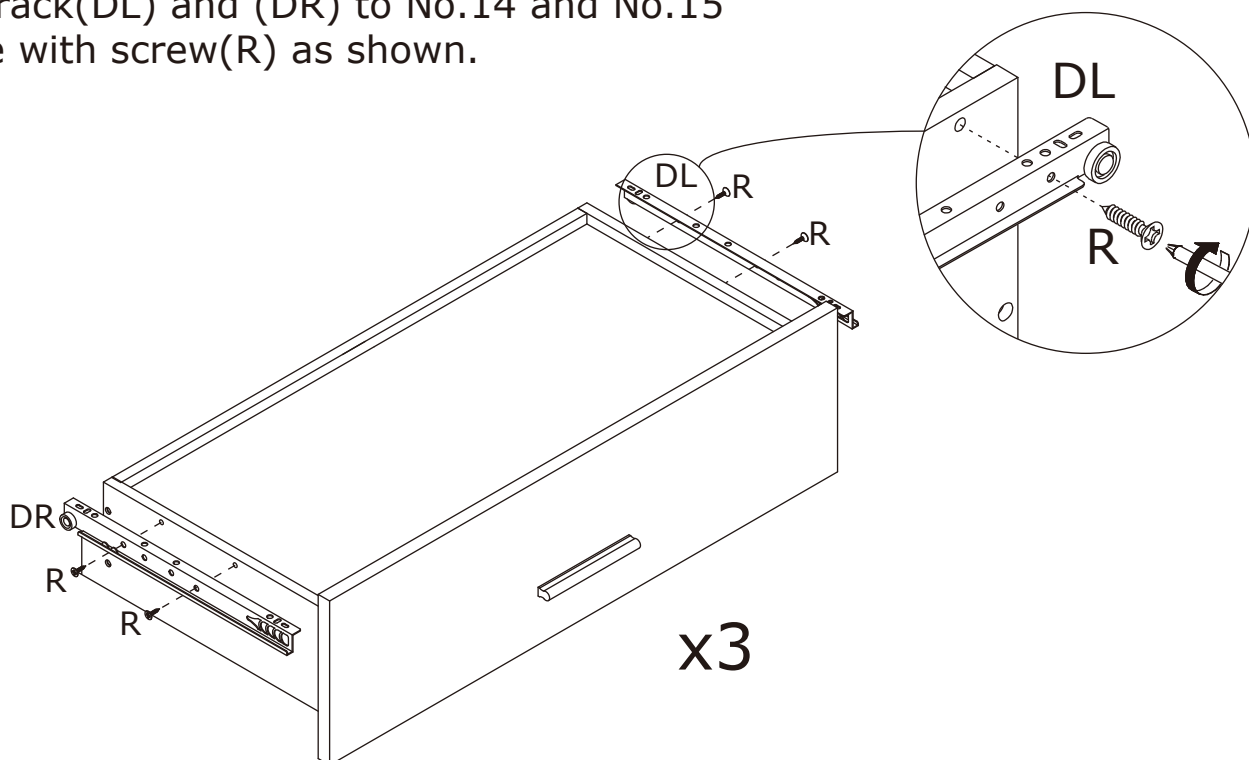

21

  

 

 
 
 
 
 

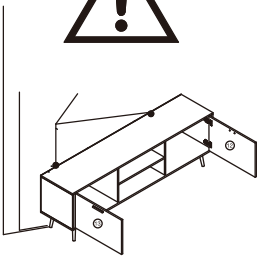 
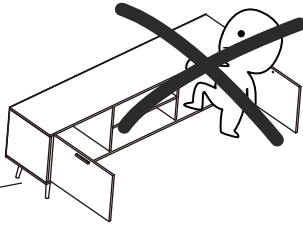 


Align rails, slide all drawers.

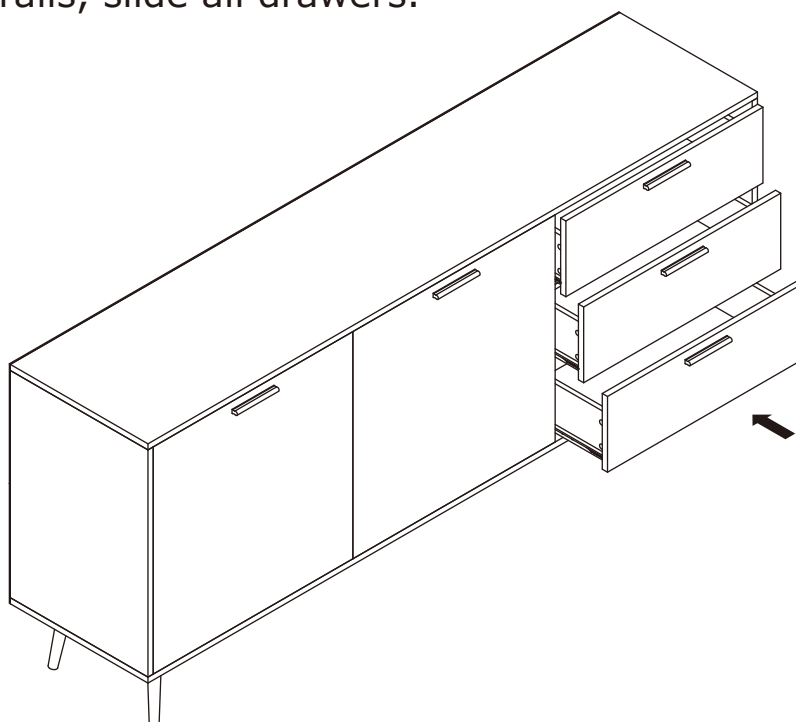






# 22
 
<b>E x 2</b>  $\varnothing 4 \times 35 \text{ mm}$	<b>F x 2</b>  $\varnothing 4 \times 14 \text{ mm}$	<b>P x 2</b>  $\varnothing 6 \times 30 \text{ mm}$	<b>N x 4</b> 	   
<b>O x 2</b> 	  			

For extra stability, it is recommended that you fix your item to the wall using the additional hardware(E,F,P,N,O), as shown.

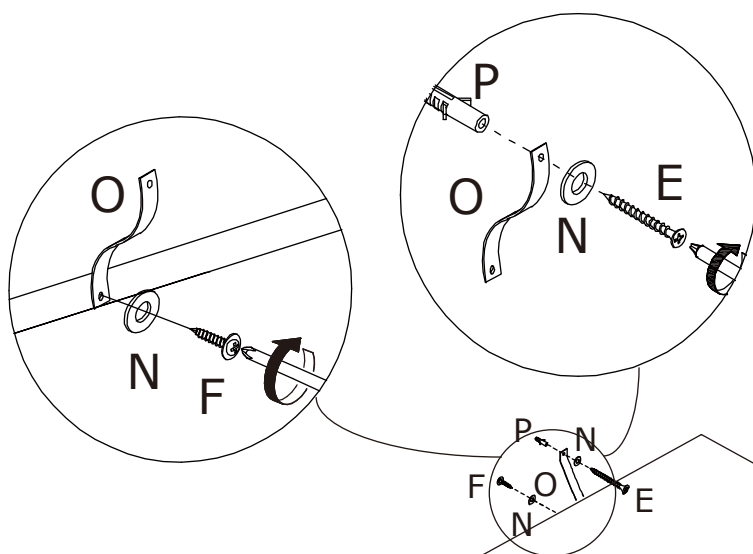

  Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

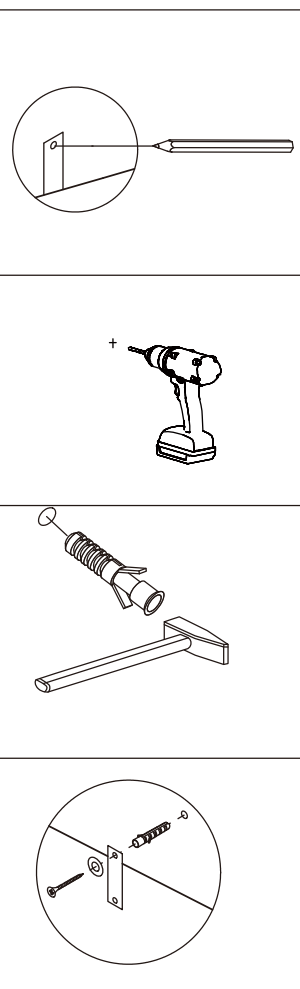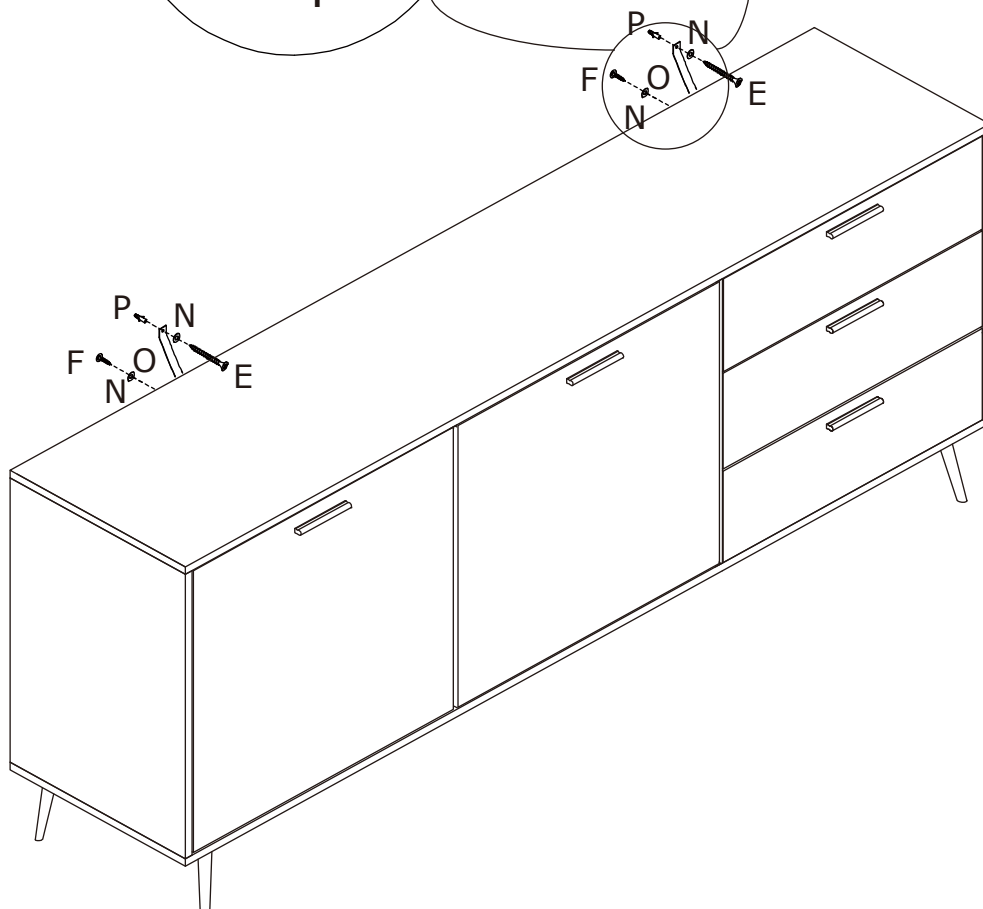

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.