



CosyDreams Fitted Heated Underblanket

Single | **RED13565W**

Double | **RED135120W**

King | **RED165137W**



**2 year
guarantee***



Instruction Manual



British engineering &
innovation since 1928

THANK YOU

FOR CHOOSING



We hope you love your product for many years!



Register your purchase

www.rediffusion.uk/pages/register-my-warranty

Scan QR code using mobile device

In line with our commitment to quality, your appliance is granted with a 2-year warranty cover. To optimize the benefits of this warranty, we suggest registering your product post-purchase, ensuring you get the most out of its features.

Please note: Warranty MUST be registered within 30 days of purchase. Any warranty registered after 30 days will be void.

CONTENTS

TECHNICAL SPECIFICATION	1
IMPORTANT SAFEGUARDS	2, 3 & 4
HOW TO USE	5 & 6
CLEANING & CARE	7
DISPOSING OF THE PRODUCT	8
CUSTOMER SUPPORT	9
GUARANTEE & WARRANTY	10

TECHNICAL SPECIFICATION

	Single: RED13565W	Double: RED135120W	King: RED165137W
Power:	40W	75W	120W
Voltage/Frequency:	220-240V~, 50/60Hz	220-240V~, 50/60Hz	220-240V~, 50/60Hz
Dimensions (CM):	65 (W) x 135 (L)	120 (W) x 135 (L)	137 (W) x 165 (L)
Net Weight:	0.75 kg	1.05 kg	1.55 kg

This user manual can also be downloaded from our website.

www.rediffusion.uk

 
Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using your product.
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
3. Close supervision is necessary when any appliance is used by or near children or pets.
4. Children should not use or play with the appliance.
5. Use the appliance only for the intended use
6. This product is intended for household use only and not for commercial or industrial use.
7. Make sure the power supply used corresponds to the rating label.
8. If the electric blanket is folded, crumpled, or used improperly, it may overheat and activate the permanent protection function. This cannot be repaired at home and must be returned to the manufacturer.
9. If the power supply to the electric blanket is lower than the recommended voltage, the temperature will rise slowly, and the heating performance will be reduced. This is not a malfunction of the electric blanket, and users should check the power voltage.
10. The indicator lamp and the electric blanket circuit are connected in parallel. If the indicator lamp is broken, it does not affect the blanket's ability to generate heat, but users should still ensure the blanket is functioning properly.
11. Use only as an underblanket.


Warnings and Cautions

1. Do not use the electric blanket if it is folded or crumpled (Fig. 1).
2. Do not roll or drape the appliance while in use. Ensure the bed the appliance is being used on allows the electric blanket to lie flat. Do not use the electric blanket in any other way to avoid overheating (Fig. 2).
3. Do not use pins on the appliance. Avoid scratching with sharp objects or hitting the electric blanket with blunt objects. Do not attempt to secure the electric blanket with pins or other metal objects (Fig. 3).
4. Use the electric blanket only under the body. Do not wrap the body with the blanket or use it in any other manner (Fig. 4).

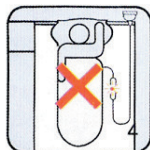


Important Safeguards

5. To avoid burns, do not use the electric blanket with individuals who are helpless, insensitive to heat, or otherwise vulnerable and unable to react to overheating (Fig. 5).
6. Do not turn on the electric blanket if there is folded bedding or heavy objects on it to prevent overheating (Fig. 6).
7. Do not expose the electric blanket to direct sunlight. Avoid any damage to the insulation of the heating wires (Fig. 7).
8. Do not use the electric blanket with other heating appliances, such as foot warmers or hot-water bottles (Fig. 8).

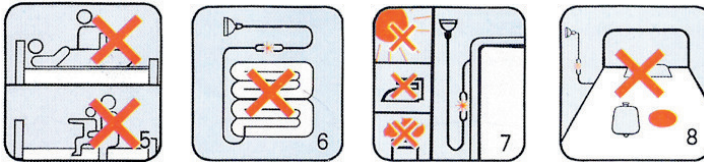

9. Do not use the electric blanket with anything that can ignite a fire, such as cigarettes or sparks, as this can lead to a fire (Fig. 9).
10. Switch off the electric blanket or unplug it when you are not using it or when you are leaving the house to avoid accidental fires (Fig. 10).

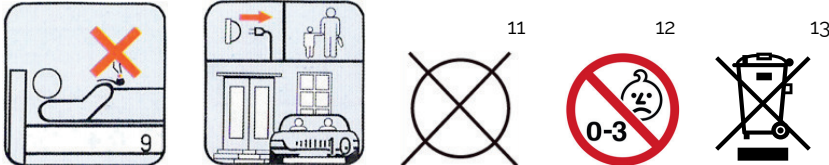

11. Do not dry clean the electric blanket (Fig. 11).
12. Do not use the electric blanket with very young children (0-3 years). Children under three should not use this appliance due to their inability to react to overheating. Children over three should not use the electric blanket unless the controls have been pre-set by a parent or guardian and the appliance is used under their supervision (Fig. 12).
13. The blanket conforms to the WEEE standard (Fig. 13).
14. After turning on the electric blanket, do not leave it unattended for over an hour to prevent any possible fire.
15. Do not unplug the power plug by pulling on the cord, and do not move the appliance by pulling on the soft power cord.
16. Only use the electric blanket with the switch unit provided.
17. The product is not intended for medical use in hospitals.
18. Wash the electric blanket by hand. Do not use it if wet. Before cleaning, disconnect the product from the power and ensure it is off and at room temperature. Place it on a flat surface and wipe with a damp cloth. Let it dry completely in a cool, airy place before use. Do not allow the switch or control unit to get wet during washing, and ensure the cord is positioned to prevent water from flowing into the switch or control during drying. Cleaning and maintenance should not be done by children without supervision.

Important Safeguards

19. Store the electric blanket in a dry place when not in use. Allow it to cool before folding. Do not crease the appliance by placing items on top of it during storage. Check the blanket carefully before use to ensure the control and cords are safe. Do not power on if the blanket is not completely safe.
20. Do not attempt to repair the electric blanket yourself. Any use contrary to the instructions can lead to unwanted consequences.
21. The power cord cannot be changed or repaired. If it is damaged, the appliance must be disposed of.
22. Do not use the electric blanket on an adjustable bed.
23. Children should not use the electric blanket unless set up by a parent or guardian, or unless they have been adequately instructed on how to use it safely. Children should be supervised to ensure they do not play with the appliance.
24. Do not use the electric blanket when crumpled.
25. Do not insert pins into the electric blanket.
26. For all-night or continuous use, set the switch button to "1". Do not set it to "2" or "3" for continuous use.
27. Do not try to repair a fuse link or thermal link. The appliance must be returned to the manufacturer or his agent if the link has ruptured.
28. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
29. This appliance can be used by children aged 8 years and above, and by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction on safe use and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be done by children without supervision.
30. Users must observe all the above points. Failure to do so can lead to overheating or unusually high temperatures in parts of the blanket, potentially causing fire, bodily injury, or property loss.

Power cord safety tips

1. The power cord of the appliance is not replaceable or repairable. If the cord is damaged, the appliance should be discarded.
2. Avoid unplugging the power plug by pulling on the cord.
3. Never pull or yank on the cord or the appliance.
4. Do not use the appliance if the power cord shows any signs of damage.
5. If the heating wire is cut, do not attempt to repair it yourself. Please contact our factory's technical service department or service center for maintenance or inspection.

How To Use

Operation

Operation Instructions:

- Place the electric blanket flat on the bed with the end without controls at the foot of the bed.
- Secure the four corner fasteners of the electric blanket to the bed or mattress using the non-metallic straps provided. Only use sheets or thin cotton-padded mattress on top of the blanket. Ensure it is flat to allow even heat distribution and visibility of the blanket.
- Ensure everything is flat and secure on the bed to safely use the electric blanket.

General Temperature Adjustment:

- Plug the power cord into an AC 220V~240V, 50/60Hz wall outlet (do not connect to DC).
- Before bedtime, select the "2" or "3" setting on the shift button. The power indicator will light up, and the electric blanket will begin to heat.
- Typically, preheat for 30-50 minutes. Adjust the setting to "1" according to personal preference for maintaining a comfortable sleeping temperature, or to "0" to stop heating (indicator lamp goes out).
- For overnight use or continuous heating, set the button to "1".

Dual Control:

- Dual controls operate independently, resembling two single beds combined. Each person can adjust their side as needed without affecting the other.


Safety Notes:

- Ensure the control is easily accessible when the electric blanket is in use.
- Do not cover the control with quilts, pillows, or other items.
- Keep the control away from other heat sources to prevent overheating and damage.

How To Use

Fitting

1. Secure the cord at point 1A beneath the mattress to point 1B, then tighten and tie a secure knot.
2. Secure the cord at point 2A beneath the mattress to point 2B, then tighten and tie a secure knot.
3. Ensure your electric blanket is positioned correctly as shown in Figure A.

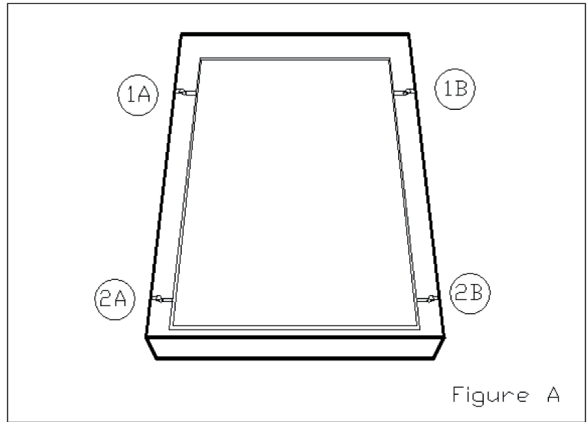

Daily Checks and Safeguards

To ensure safe use of the electric blanket, please follow these guidelines:

1. Inspect the power cords, plug, and soft cords that connect the appliance and control unit for any irregularities before use. If you notice anything unusual or are unsure about the condition or safety, do not use the appliance. Instead, send it to the technological service department of our factory or a service center for maintenance or inspection.
2. During use, regularly check to ensure the electric blanket is level, firmly fitted, and not folded or rolled.
3. Frequently inspect the appliance for signs of wear or damage. If you find any signs of wear or if the appliance has been misused, return it to the manufacturer or their agent before further use.
4. Ensure the heating wires in the electric blanket are evenly and smoothly spaced with no crossing or folds. If you notice any of these issues, do not use the blanket. Send it to the technological service department of our factory or a service center for resolution. To test, lay the electric blanket flat on the bed and feel the heating wires with your hand.
5. Do not allow children to jump on the bed when the electric blanket is in place. If jumping has occurred, thoroughly check that the blanket is in normal condition before use.
6. In case of any accident or damage (such as smoking, fire, abnormal sounds, or smells), immediately disconnect the power by unplugging the blanket, then check for damage.

Cleaning & Care

This appliance requires little maintenance and contains no user-serviceable parts. Do not try to fix it yourself. Refer it to qualified service personnel if servicing is needed.

Cleaning

1. The heated throw can be hand washed or machine washed but not dry cleaned.
2. Do not use the electric blanket if it is wet.
3. Before cleaning, disconnect the product from power and ensure the electric blanket is turned off and at room temperature.
4. Lay the blanket flat on a surface and use a damp cotton cloth to wipe its surface.
5. After cleaning, store the electric blanket in a cool, airy place, ensuring it is completely dry before use.
6. For machine washing, wash it as wool at 40°C.
7. Cleaning and user maintenance should not be performed by children without supervision.
8. Ensure the switch or control unit does not get wet during washing, and position the cord to prevent water from entering the switch or control unit during drying.



Machine washable

Storage

1. Store the electric blanket in a dry place when not in use.
2. Allow the blanket to cool down before folding it for storage.
3. Avoid creasing the blanket by not placing heavy items on top of it during storage.
4. Before using the blanket again, carefully inspect the control and cords to ensure they are safe.
5. Do not power on the blanket if it is not completely safe.

Disposing Of The Product


Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

Correct Disposal Of This Product

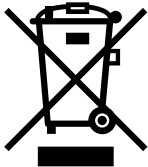

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Customer Support

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team:

Please have your Model No. available. This can be found on the front cover of this manual and on the products rating label.

We're here to help!



01274 752624



customerservice@rediffusion.uk



www.rediffusion.uk

Happy with your new product?

We would love to hear your suggestions and feedback about your experience.



Guarantee & Warranty



Register your purchase

www.rediffusion.uk/pages/register-my-warranty

Scan QR code using mobile device



**2 year
guarantee***

To make a warranty claim, do not return this appliance to the store.

Please call 01274 752624 or email customerservice@rediffusion.uk. For faster service, locate the model number on the rating label on your appliance. Alternatively, please scan the QR code above to be directed to our warranty registration page.

This product is covered by a 2 year warranty, please read the guarantee and service carefully and keep for future use.

Please Note: To maintain the validity of the warranty, it is imperative to register it within the initial 30 days of purchase. Any registration made beyond this time frame will result in the warranty being deemed void.

This warranty is valid for products purchased and used in the UK and serves as the sole express warranty for the product, replacing any other warranty or condition. The product is guaranteed to be free from defects in material and workmanship for a specified period from the original purchase date. The warranty covers the repair or replacement of defective components, with the responsibility for return shipping costs falling on the customer. If the original product or component is unavailable, a replacement of equal or greater value will be provided.

Exclusions to this warranty include glass, filters, normal wear, improper use, accidents, alterations, abuse, or misuse. The warranty is applicable only to the original consumer purchaser or gift recipient, requiring proof of purchase for warranty claims. It becomes void if the product is used for purposes other than single-family household use or operated outside specified voltage and waveform requirements. The warranty disclaims all claims for special, incidental, and consequential damages, limiting liability to the purchase price. Every implied warranty, except where prohibited by law, is disclaimed, and any statutory warranty or condition is limited to the duration of this written warranty.



Capture, tag, and win with
#Rediffusionfamily



@Rediffusionuk

Tag us with **#Rediffusionfamily** on social media. We love seeing your amazing home transformations so much that we regularly feature our favourites and even host exclusive giveaways to show our online family some extra love!

Rediffusion

Belfry House, Roydsdale Way,
Bradford, BD4 6SU
01274 752624
www.rediffusion.uk

Illustrations may differ from actual product. We are consistently striving to improve our products, therefore all specifications contained herein are subject to change without notice.