



THE SET INCLUDES:

1. Frying Pan
2. Sauce Pan
3. Wok Pan
4. 2 x Lids
5. Removable Handles
6. Metal steaming pan
7. Wood spoon

SAFETY PRECAUTIONS

Please read carefully before using and be sure to follow.

1. Maximum amount of oil should be less than half of the pan. ★May cause fire.
2. Do not leave while cooking. ★May cause fire.
3. Do not place or use the pan where infants and can easily reach. ★May cause scald and injuries.
4. Do not put food material that contains a lot of moisture. ★To avoid hot oil burning.
5. Please remove the handle if cooking requires long time. ★May cause scald if handle has been heated for a long time.
6. Do not directly touch the pan when or after cooking. ★May cause scald.

CARE OF USE

Please read carefully before using and be sure to follow.

1. Please brush oil on pan before cooking or baking.
2. Do not directly cut food on pan or lid. ★May cause scratches on body and damage the coating.
3. When using induction cookware, please use below medium power rate.
4. Do not use metal utensils or cleaning tools. ★May cause scratches on body and damage the coating.
5. Do not use in microwave. ★May cause fire and malfunction Broken glass may cause injuries and cause deformation.
6. Do not to drop and collide. ★May cause scald/injuries and damage.
7. Take out handle and lid before putting in the oven. ★ Maximum temperature below 250°C.
8. Do not dry heating. ★May cause deformation and coating peeling.

HOW TO USE

★ Detachable Handle

Please make sure no foreign objects in product before using So as not to affect the use.

1. How to fix handle (lock handle)

STEP A : Turn the ① rotation button to the left and press ③ to make the movable clamp pop ② completely open.

STEP B : When movable clamp ② in the open state, use handle to clamp on the open edge of the

STEP C: Hold the linkage rod ② and Turn left of ① until the "ka tah" sound stops.



2. How to uninstall handle


STEP A : Push back the button ① to the left and Press ③, bounce off the linkage rod and open clamp.

STEP B : Take out the handle from pan Specialized lid.



★ Specialized Lid

Preserve the handle's gap, If you push back the button directly, the lock will be released.

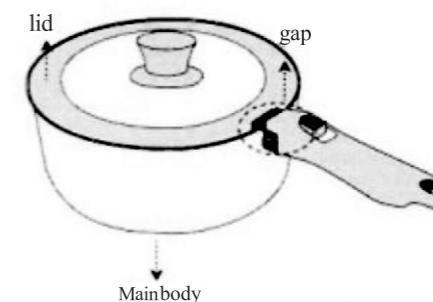

★ Fridge Storage Pan

Pots become storage tools Remove handle and cover with lid for food storage.

MAINTENANCE

1. Fully wash the pan before first use.
2. After using and cooling the pan, use sponge and detergent to clean. "Wipe out the water and store it in dry and clean place"
3. Do not wash the handle with water.
4. Do not use any metal utensils and cleaning tools.
5. If don't use the pan for a long time, please wash it clean and store in dry place. Do not put it in high temperature and humid area.

Customer Service

Contact us through our website:
www.TeamCustomerService.com

If you have a question about assembly, use or a possible missing part, Please contact us and we will be glad to assist you.