

Warm Tips:Ceiling Fan Maintenance

- 1, because the ceiling fan is functioning product, so please regularly check the hanger, blade, leaf frame and various other parts are loose,And timely fastening it to ensure safety.
- 2, regular cleaning of the ceiling fan, only wipe lightly with a soft brush or lint-free cleaning cloth, do not use a damp cloth or other Destructive cleaning agents.
- 3, can not be any part of this product to add oil or lubricant.

INSTRUCTION FOR USE



Enjoy the natural wind

Please keep this manual.
Be sure to read the instructions for use of this product, install and use this product in accordance with the requirements thereof.

Safety instructions


1. In order to reduce the occurrence of electric shock, the supply line is connected between the fan and must be installed an all-pole Disconnect switch, (switch contacts opening distance requirements played a 3mm). If you lack of electrical knowledge, be sure Please hold "electrician card" professional install it for you.
2. To avoid electrical shock hazard, ceiling fan installation, removal before you turn off the power first, will be installed Shall be ground, FireWire, zero line order of installation, disassembly must be disassembled to the zero line, the line of fire, earth order.
3. In order to reduce electric shock or from accidents, do not use non-local governor or switch product requirements.
4. When a ceiling fan installation, you must determine the various parts of screws securely latched.
5. rotating ceiling fan, the blades should not touch any object to avoid danger.
6. Select the appropriate location to install a ceiling fan, ceiling fan blade away from the ground should be at least 2.3 meters or more, Prevent accidental blade collision accident.
7. To change the fan rotation direction, please turn off and wait for the blades stop turning after adjustment reversing switch.
8. The power of this machine is 220V / 550Hz, maximum motor power of 75W (specifications of different models of ceiling fans, which Motor power will be different), each light source lamps maximum 60W.
9. about how to install a ceiling fan and connect the power, please read the fan assembly procedures carefully.
10. Do not clean the ceiling fan blades and clean water or detergent directly, use a dry cloth or slightly damp cloth to wipe In addition to dust. Before cleaning the ceiling fans, ceiling fan must be disconnected from the power switch.

First, the ceiling fan parts:

Unpacking Check the carton ceiling fan parts, see the following table (Figure 1):

No.	Part Name	
1	Ceiling fan body (including motor, housing, switch boxes)	
2	Hanger	
3	Bell	
4	Hanging tube assembly	
5	Glass shade	
6	Leaf frame	
7	Splice closure	
8	Lamp units	
9	blade	
10	Parts screw package contains the following components	
a	Bag hanger mounting screws (expansion screws, wood screws, flat washers and wiring tablets)	
b	Sling bag	
c	Balanced package	
d	Leaf frame screws package	
e	Blade screw package	


Second, the hanger locking mode

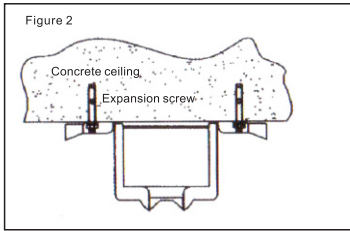

⚠ NOTE: Do not install hanger on the roof leaking and damp, hanger After the installation must be able to withstand the weight of 40 kg or more, in order to prevent smallpox

Drop off the top of the danger.




1, when the case of concrete ceiling, use a drill hole drilled in the ceiling of two $\varnothing 8$ (distance between the two holes should be appropriate), the expansion screw into the hole, then put the hanger expansion screw set into the turn flat washers and nuts and tighten with a spanner wrench (Fig. 2)

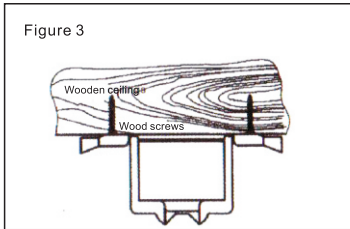

2. The ceiling is made of wood, please lock with a screwdriver hanger on the ceiling (Figure 3) Parts bag flat washer set into the wood screws.

⚠ NOTE: Do not install on a hanger uneven ceiling, and ceiling-mounted hanger must decide firmly not be loose.




Third, the suspension system installation

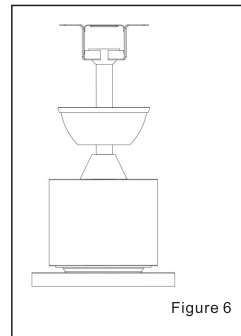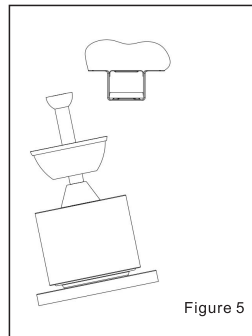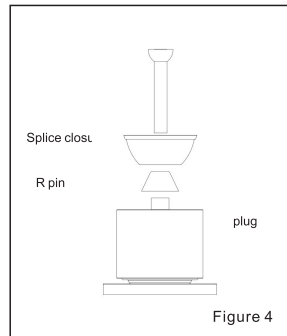


1, the connector housing boom and through the bell, and then inserted into the lifting boom head and holes are aligned with the holes, and then insert the pin and R pin inserted through the bolt holes, and then screw on the side of the head hanging locking. (FIG. 4)

2, a ceiling fan hanging on the hanger, and the hanger lob slot aligned with a card. (FIGS. 5 and 6).

3, generally relatively short floor house is more suitable for ceiling installation, ceiling directly on the cover with the bell butt, then lock the screws, (Fig. 7, 8, 9).

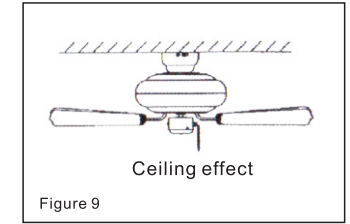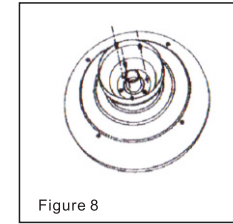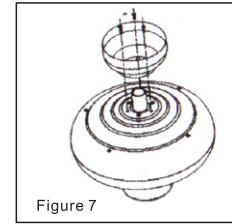


Fourth, the way the power cord

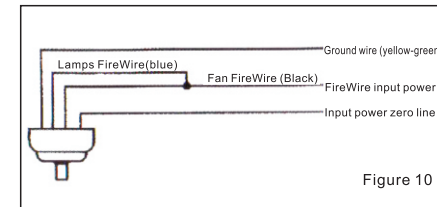

1, and then hang up the fan according to the wiring diagram corresponds to the line connected (Figure 10).

⚠ Note: The fixed wiring must be connected with a contact separation of at least 3mm all-pole disconnect device


Fifth, install locking bell, leaves home and leaves

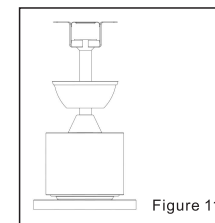

※ Locking bell


The bell cast hanger, hanger hole and side holes and the bell-aligned, and then lock the screws (11)

※ Install leaves home and leaves

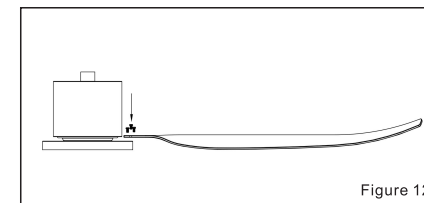

1, Yasha and blade alignment hole alignment, tighten the screws (Figure 12).


※ Install leaves home and leaves

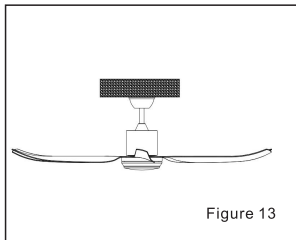

2, the fork hole leaf blade and lock Yasha bit aligned with the holes of the motor and the screw holes on the lock (Figure 13).





Sixth, the lighting installation

※ Depending on the style with lamps, ceiling fan light into multiple lamp and single lamp series:

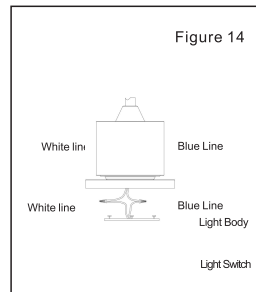

A Multi-Light Installation

1. The fixture white and blue lines and switch box white and blue lines relatively connected, then the connection wiring beans will tighten the bonnet, then shade lock (Figure 14).
2. Lamps line finishing neatly into the switch box, and then switch cover, switch box cover, use a screwdriver to lock the three screws (Note: The notch on the cover to switch on the switch box are aligned Reverse position switch).
3. Loosen the screws by hand on the cup light, set into the glass shade lamp cup, hand-tighten the three screws on the side of the lamp cup to avoid the risk of falling lampshade, three screws on the lamp cup must be firmly screwed in place but not too tight, to avoid broken glass lampshades may be screwed (Fig. 15), as set in the shade card lock snap ring clamp glass (Figure 16).

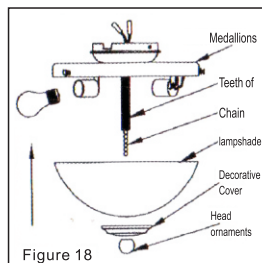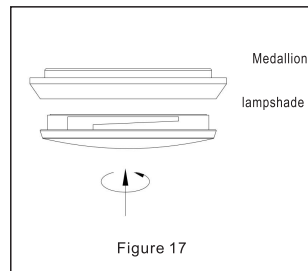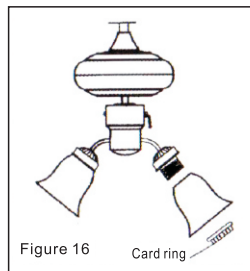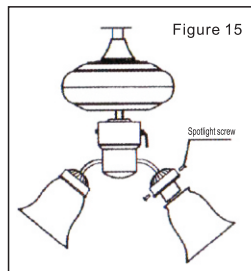

B single lamp installation I

1. Remove the switch cover, and switch the lamp cover are connected together (the A in the first step is the same).
2. Replace the cover under the switch to the switch box (with A in the second step is the same).
3. Replace the lamp, the lamp panel on three screws loosen, fitted with glass, and then tighten the screws (Figure 17).

B single lamp installation II

1. Remove the switch cover, and switch the lamp cover are connected together (the A in the first step is the same).
2. Replace the cover under the switch to the switch box (with A in the second step is the same).
3. sequentially lampshades, decorative covers, decorative head through the chain, the ornaments will head lock teeth of sturdy glass (Figure 18).

Seven, ceiling fan and reverse rotation switching operation

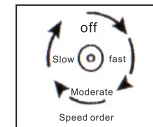


Figure 19

1. Adjust the fan speed: pulling speed switch on the switch box, pulling the first lower for quick file,

Pull down to second gear speed, driving under a slow third gear, the fourth under the ceiling fan stopped pulling Stopping the rotation (Figure 19).

2. Reversible ceiling fan has two functions

a), reversing switch up to a ceiling fan box on the toggle switch to the reverse: the wind blowing so indoor

Air flow from the ground up, can be used as regulation of indoor air convection for winter.

b), reversing switch toggle switch box on the ceiling fan down to is forward: to allow air blown downwind

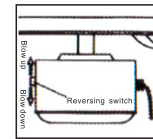


Figure 20

Eight, balance check and adjustment of the blade

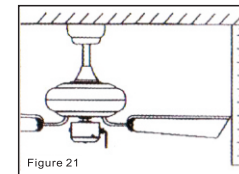


Figure 21

Larger shaken treatment if there was a ceiling fan running:

1. Carefully read the instructions again, make sure that all installation steps are correct.
2. Check all mounting screws are tight, lob slot is stuck onto another rack card points
3. Check the level of all the blades are the same, check: Select the same slice of each blade

Section have a point, measuring the height of the ceiling is consistent with the point (Fig. 21).

4. If the above methods are ineffective, please use the machine parts bag attached balance adjustment package:

Start packing out the balance in the middle of any clip on a blade (note Alert)

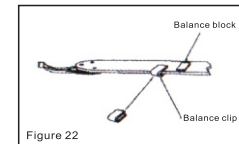


Figure 22

△ Note: The leaves home and blade assembly to be careful to avoid collision with other objects causing leaf frame deformation!

Nine, on fan failure treatment

1. The ceiling fan is not rotated

- ① Check ceiling fan external power supply circuit fuse is blown or the automatic protection switch on or off.
- ② Check the fan power line contact is a problem.
- ③ Check the fan power supply voltage is normal.

Note: Be sure to check the external power goes down, such as when you are still unable to resolve, consult a professional electrical maintenance experts.

2. Fan noise

- ① Check all fan screws installed is locked.
- ② Check whether the motor has been friction obstacles during operation.

3. The lamp is not lit

- ① Check the lamp wire port is loose.
- ② Check if the lamp is damaged.