



Assembly Instructions

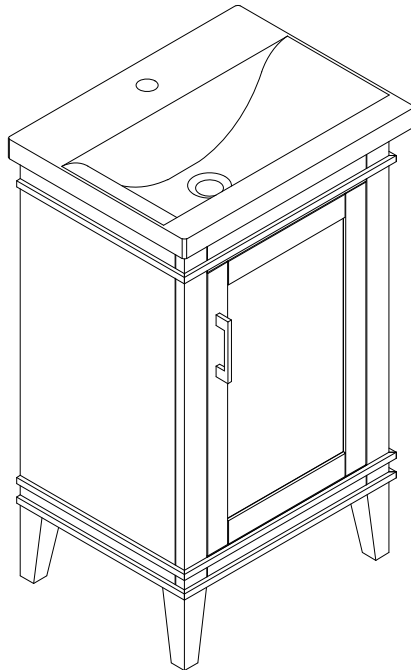

Parts List

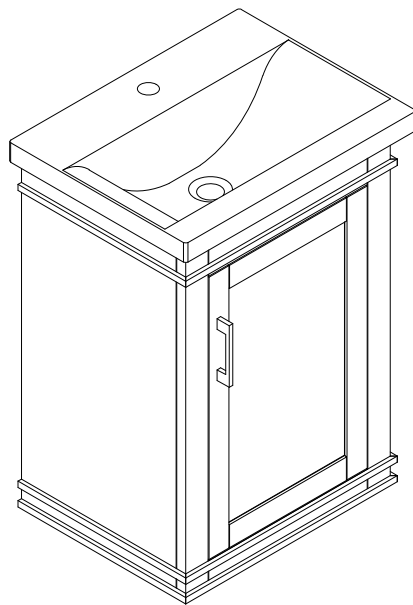

A x1



B x4

Hardware



(H1) x 8



(H2) x 8




(H3) x 8




(H4) x 1

Assembly Instructions

Step 1

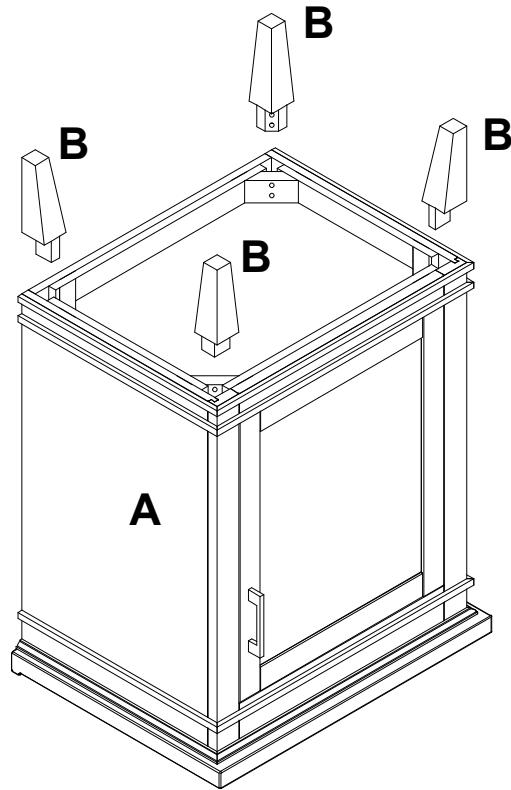


Step 2

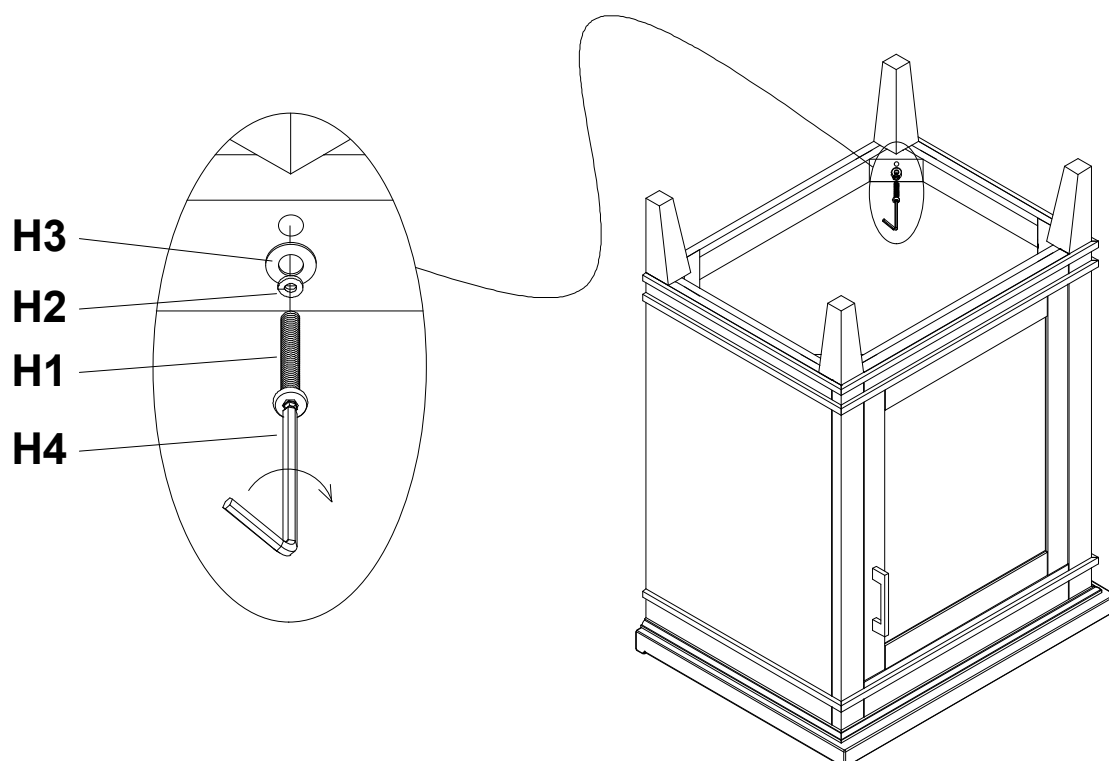


Assembly Instructions

To adjust the door:

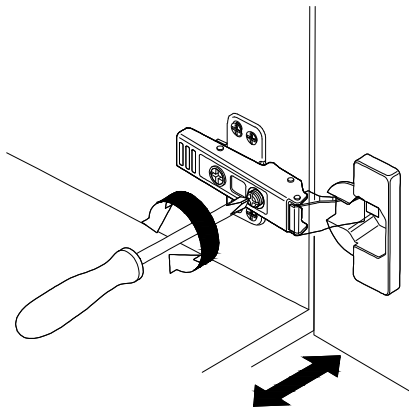


Adjust laterally

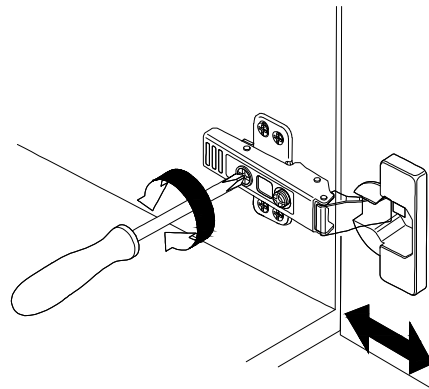


Adjust depth

To remove or install the hinges:

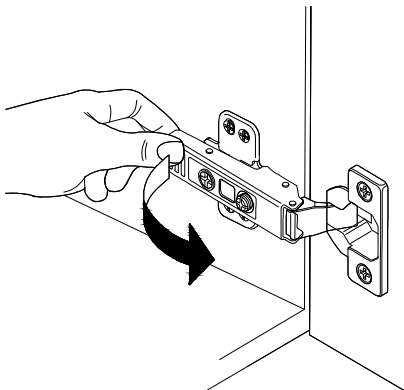

Remove

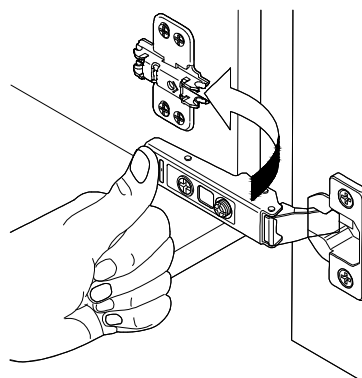

Install