


Light up your life
www.cosflyliving.com

Dining Chair Assembly Instructions

PRODUCT DIMENSIONS | Dining Chair

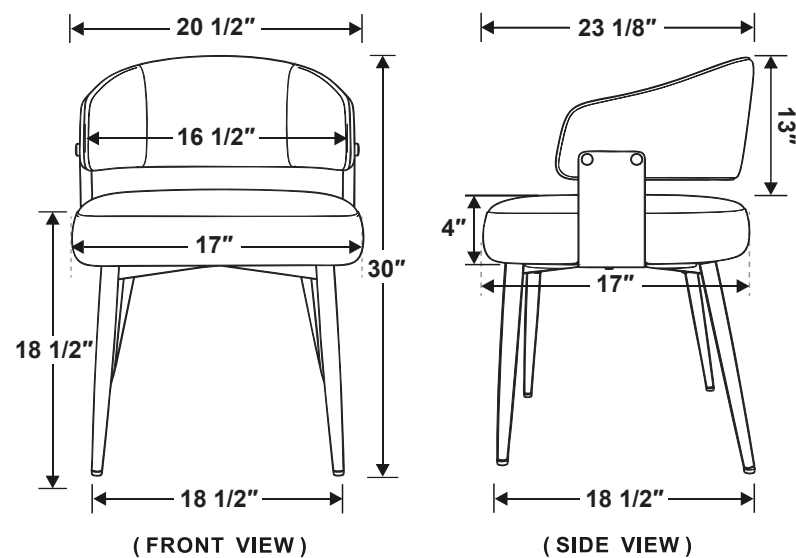

1

Thank you for purchasing this product. Please carefully check all packaging materials for small parts that may have become loose during shipping. Identify and count all parts, and compare them with the Parts List and Hardware List below.


Before assembly, place all components on a clean, soft surface such as carpet or a padded mat to prevent damage.

GENERAL INFORMATION, TIPS & TRICKS

1. Read all instructions carefully before beginning assembly.
2. Assemble the product on a non-abrasive surface to avoid scratches.
3. Do not fully tighten bolts until all parts are assembled.
4. Ensure all bolts and screws are securely tightened before use.
5. Clean with a soft damp cloth. Avoid excessive moisture.

2

•PAY ATTENTION

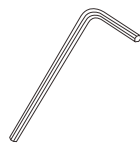

A hex wrench is included in the package.



Do not use power tools to avoid damage.

•PARTS LIST

① Seat & Backrest Assembly	② Chair Leg Frame
QTY: 1PCS	QTY: 1PCS


•HARDWARE LIST

Ⓐ Long Hex Bolts	Ⓑ Washers	Ⓒ Hex Wrench	Ⓓ Spare Anti-Slip Foot Pad	Ⓔ Spare Decorative Cap	Ⓕ Assembly Instruction
QTY: 5PCS	QTY: 5PCS	QTY: 1PCS	QTY: 1PCS	QTY: 1PCS	QTY: 1PCS

ASSEMBLY INSTRUCTIONS

STEP 1

① 1 X 

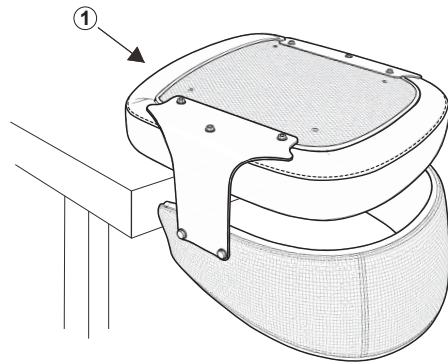


1. Turn the pre-assembled Seat & Backrest Assembly (①) upside down.
2. Place it securely on the corner of a clean, stable table with the mounting area facing upward.

5

ASSEMBLY INSTRUCTIONS

STEP 2

② 1 X  (A) 4 X  (B) 4 X 

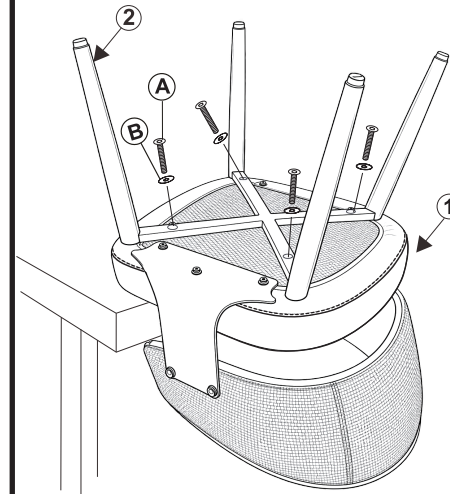


1. Position the Chair Leg Frame (②) on the bottom of the seat and align the mounting holes.
 2. Place one Washer (B) onto each Long Hex Bolt (A), then insert 4 bolt-and-washer sets into the aligned mounting holes.
 3. Use the Hex Wrench (C) to fully tighten all 4 bolts and securely attach the Chair Leg Frame.
- Note: 1 Long Hex Bolt (A) and 1 Washer (B) are included as spare parts and are not required for assembly.

6

ASSEMBLY INSTRUCTIONS

STEP 3

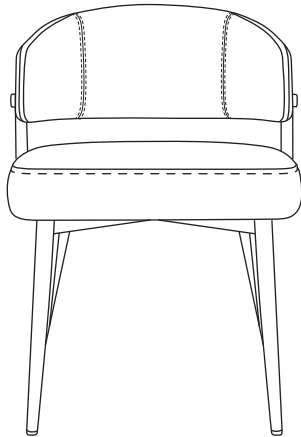

Check all bolts and connections to ensure they are fully tightened and secure before use.

LEVEL ADJUSTMENT INSTRUCTIONS

1.Factory Inspection

All products are thoroughly inspected before leaving the factory.


2.Possible Issues During Transport

Despite careful packaging, the base may shift slightly during shipping or handling—even if the box shows no visible damage.

3.How to Fix an Uneven Chair

- *Place the chair on a flat, level surface.
- *Lift the leg that needs adjustment.
- *Rotate the leveling adjuster under the leg until the chair is stable and level.
- *Check again to ensure the chair is level.

 **Note: Repeat if needed. Avoid direct contact with hard surfaces to prevent damage.**

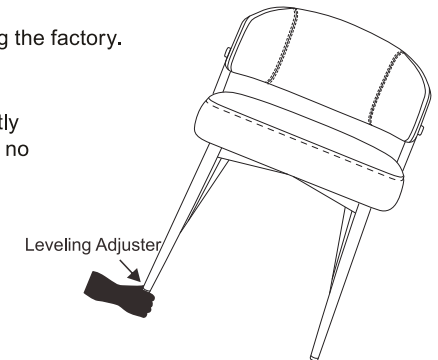

CLEANING & CARE

Keep Your Chair Looking Its Best

- ✓ Wipe regularly with a soft, dry cloth to remove dust
- ✓ For deeper cleaning, use a soft cloth with warm, mild soapy water
- ✓ Always dry the surface thoroughly after cleaning

Avoid Using Harsh or Abrasive Cleaning Products

- ✗ Strong chemical cleaners
- ✗ Abrasive or rough materials
- ✗ Glass cleaners (which may damage the finish)
- ✗ Waxes or oil-based products

WARNING



- Use the chair only as intended. Use caution to prevent falls or injuries.
- Do not leave children unattended on or near the chair.
- Regularly inspect the chair and tighten all screws, nuts, and bolts.
- If you notice any loose, cracked, damaged, or bent parts, stop using the chair immediately and contact customer service.
- Failure to follow these instructions may result in product damage or personal injury.

1-YEAR LIMITED RESIDENTIAL WAR

What's Covered?

Metal frame & welding: 1-year warranty (residential use only).
Wood & upholstered parts: 1-year limited warranty.
Covers defects in materials or workmanship under normal use.

What's Not Covered?

The following are not considered defects:

- Normal wear and tear (scratches, paint fading, fabric aging)
- Damage caused by improper use or assembly
- Unauthorized repairs or modifications
- Shipping damage (unless specially packaged for direct delivery)

Need Help? We've Got You Covered

If you experience any issues with your product, please contact us within 30 days of purchase and provide a brief description of the issue along with your proof of purchase (receipt or screenshot).

We may repair or replace defective parts at our discretion. Shipping costs are the customer's responsibility. Replacement parts are covered only for the remainder of the original warranty period and do not extend the warranty.