


Proper Pin (Part B) and Cam (Part C) Alignment:


Place the Cam so that the "pointer arrow" faces the edge of the panel. This allows for the Pin (Part B) to be correctly aligned with the opening of the Cam.


Turn the Cam clockwise (normally about ½ turn. The Cam will capture the head of the Pin. As the Cam is turned it will draw the two panels together.

See picture above and figures 3.1, 3.2, 3.3 for reference.

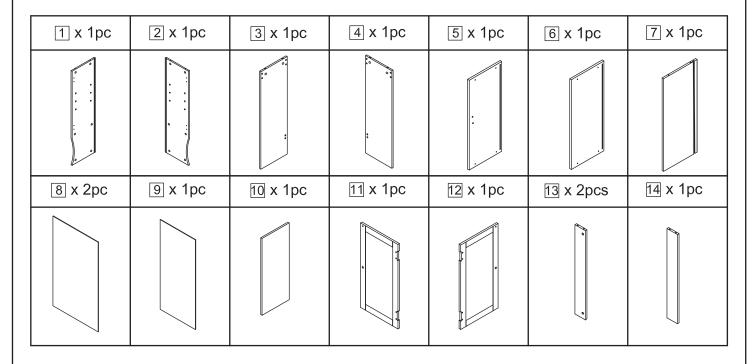


A x 4pcs	B x 4pcs	© x 8pcs	① x 2pcs	© x 4pcs	F x 6pcs	⑤ x 20pcs	(H) x 1pc
	03					«ددددر»	
(I) v 2nno	() v 2noo	(K) v 2noo	Ø4 x 35mm	Ø4 x 30mm	Ø3 x 16mm	Ø3 x 12mm	(D) v 12ncc
1 x 2pcs	J x 2pcs	K x 2pcs	L x 4pcs	M x 4pcs	N x 2pcs	① x 12pcs	P x 12pcs
② x 1pc	(R) x 1pc	S x 2pcs	T x 16pcs	① x 4pcs			
		Conner Co					

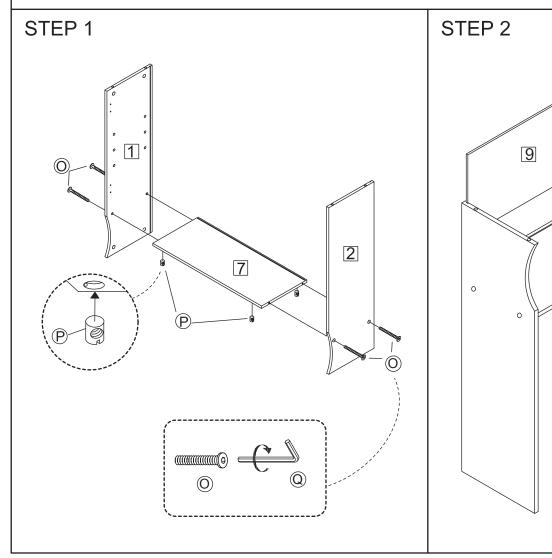


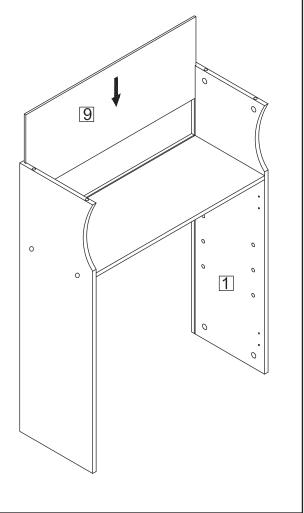


Page 2 of 8

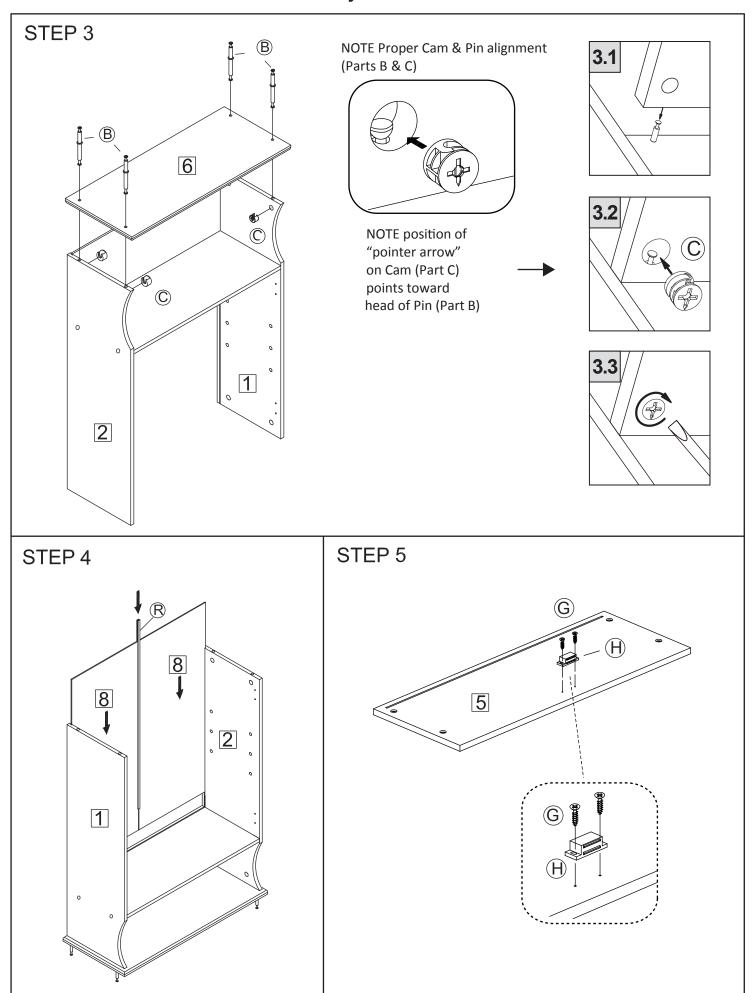


Page 3 of 8

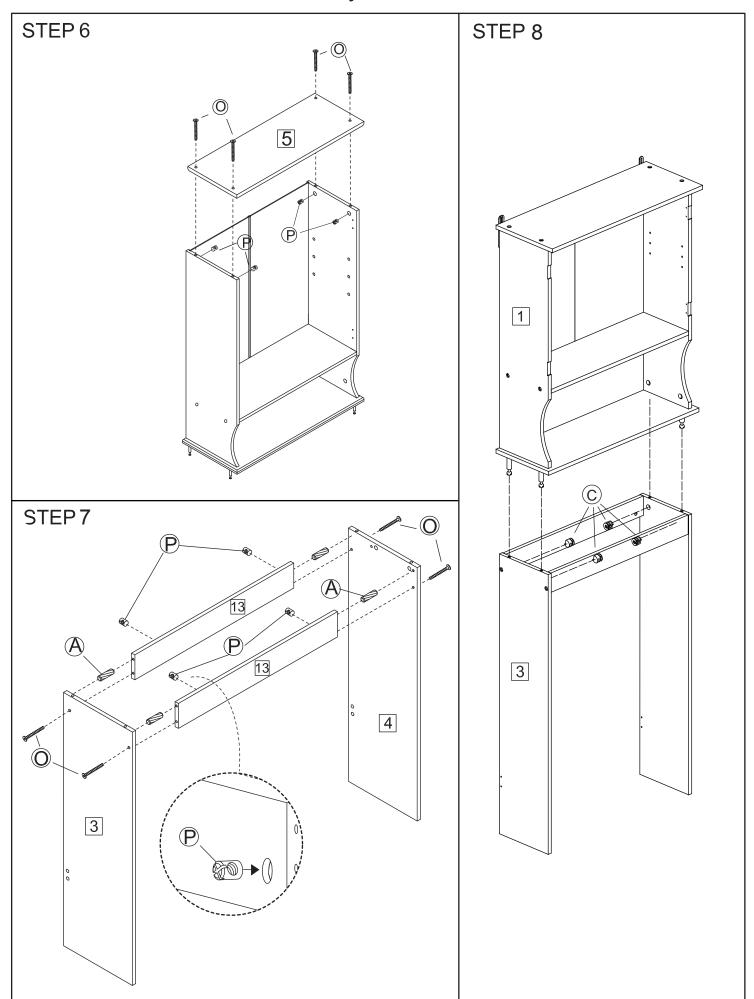


Page 4 of 8

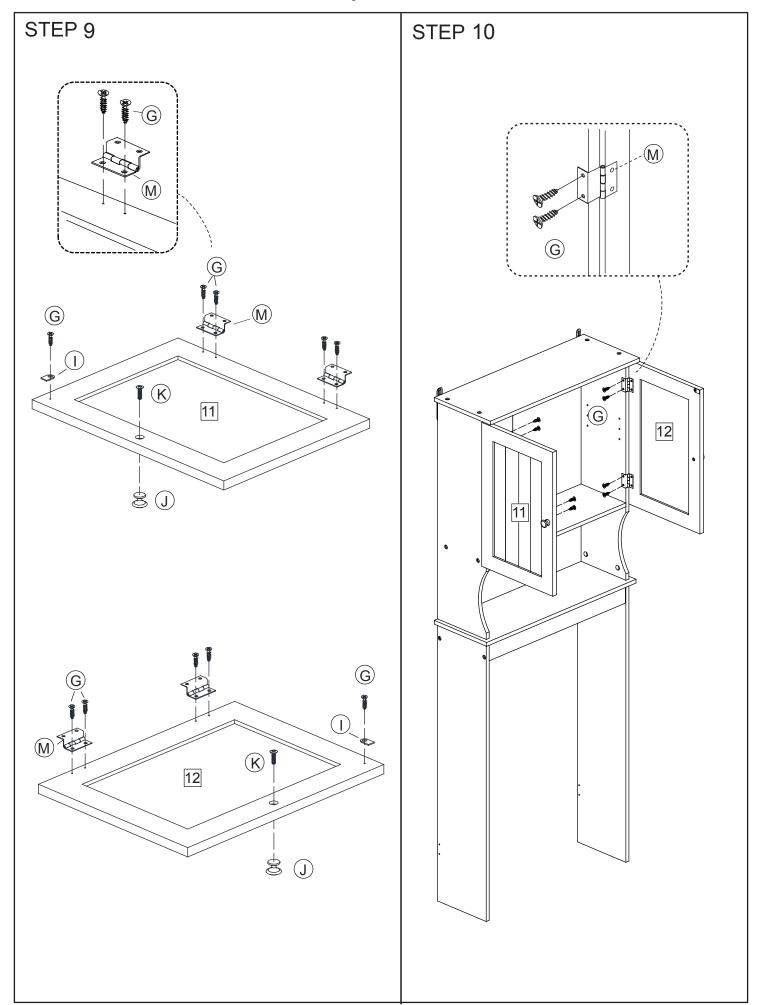

Page 5 of 8

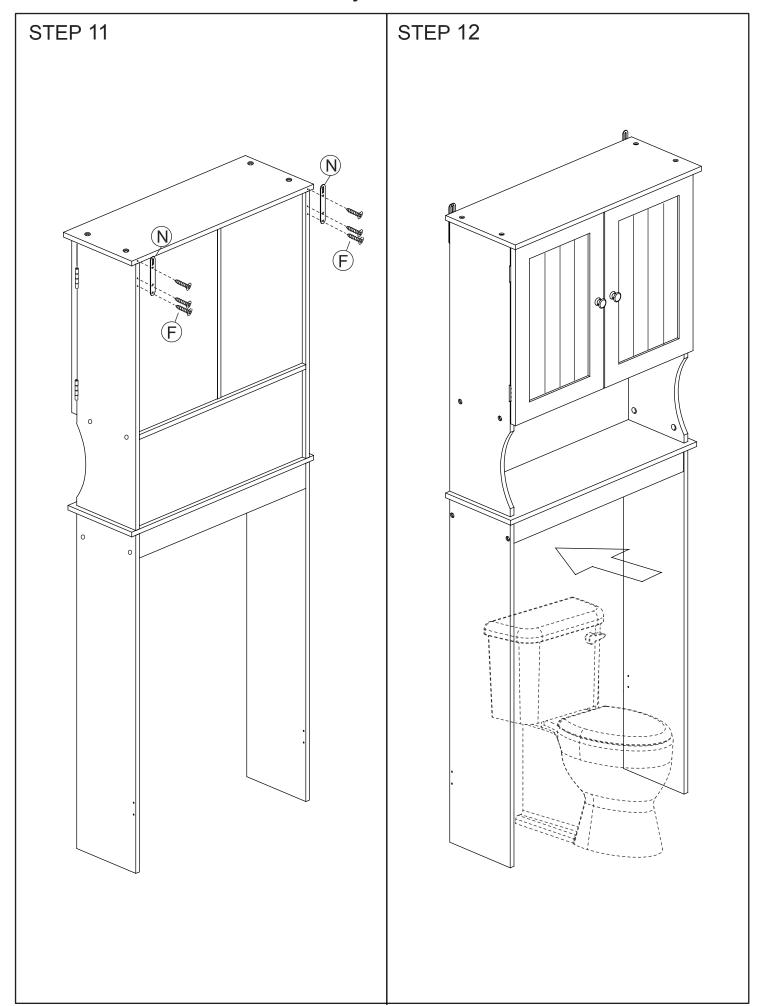

Page 6 of 8

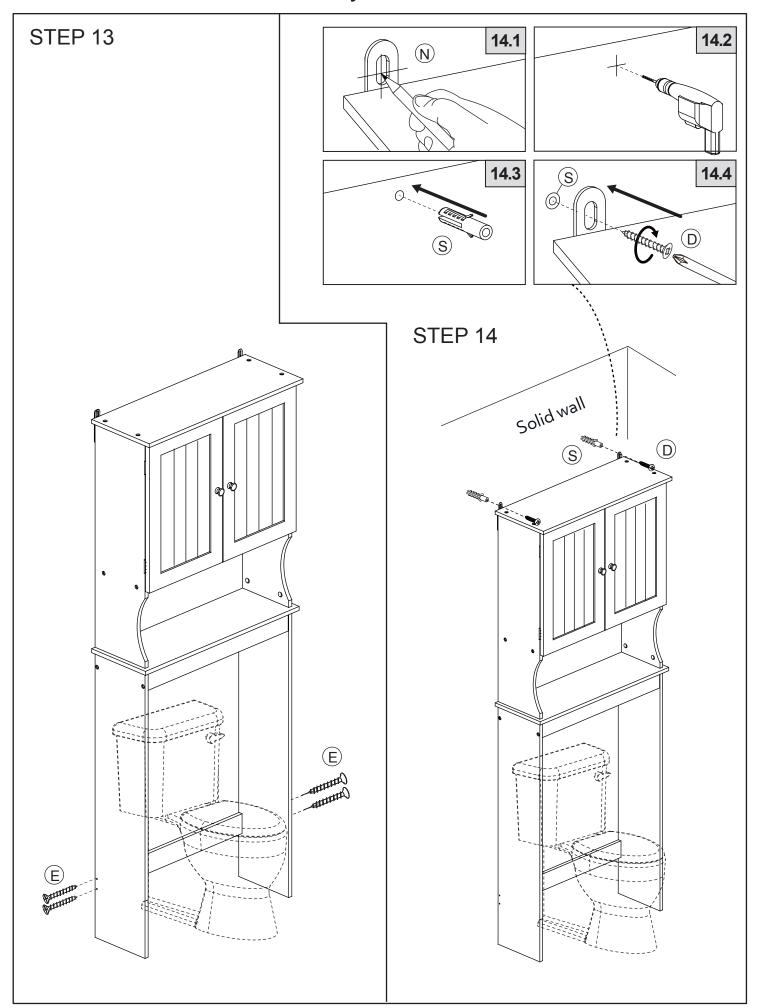

Page 7 of 8

