
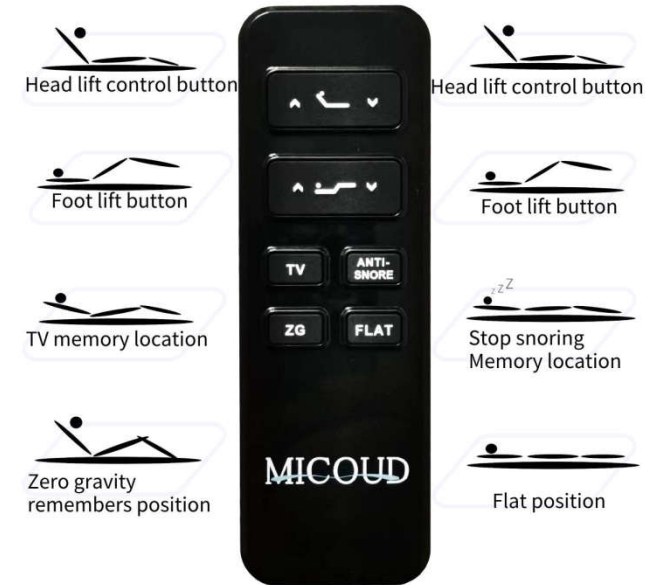


settings, you can press and hold the "ZG" and "FLAT" buttons at the same time for about 3 seconds, and when the buzzer sounds, it will restore to the factory settings.

Remote control Function description

Iii. Circuit connection diagram of the whole system

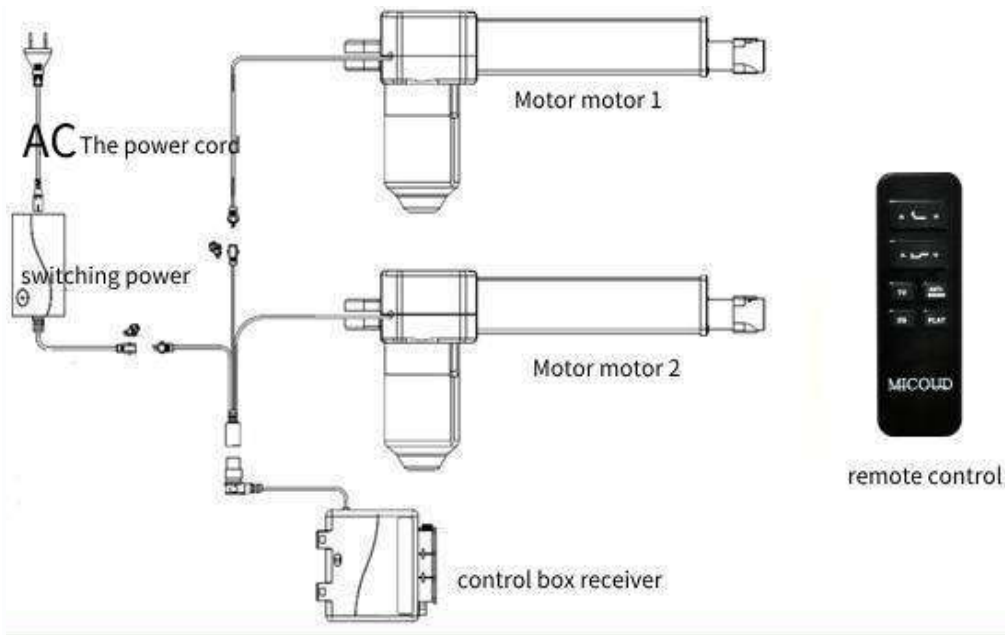

I. Detailed description:

Connect and power on:

1. The control box and the foot motor are connected to the head motor;
2. Use the switching power supply to connect to the head motor, and then the switching power supply is powered on. At this time, the control box detects and automatically moves the head and feet to the flat position. Then the buzzer sounds and the indicator light turns blue. At this time, the control The box is in the matching state;
3. The code pairing state of the control box lasts about 10 seconds. During this time, operate the remote control to pair. When the buzzer sounds once, it means that the pairing is successful; Indicates that the control box enters the