 




[OPEN STORAGE SHELF WITH PANEL]

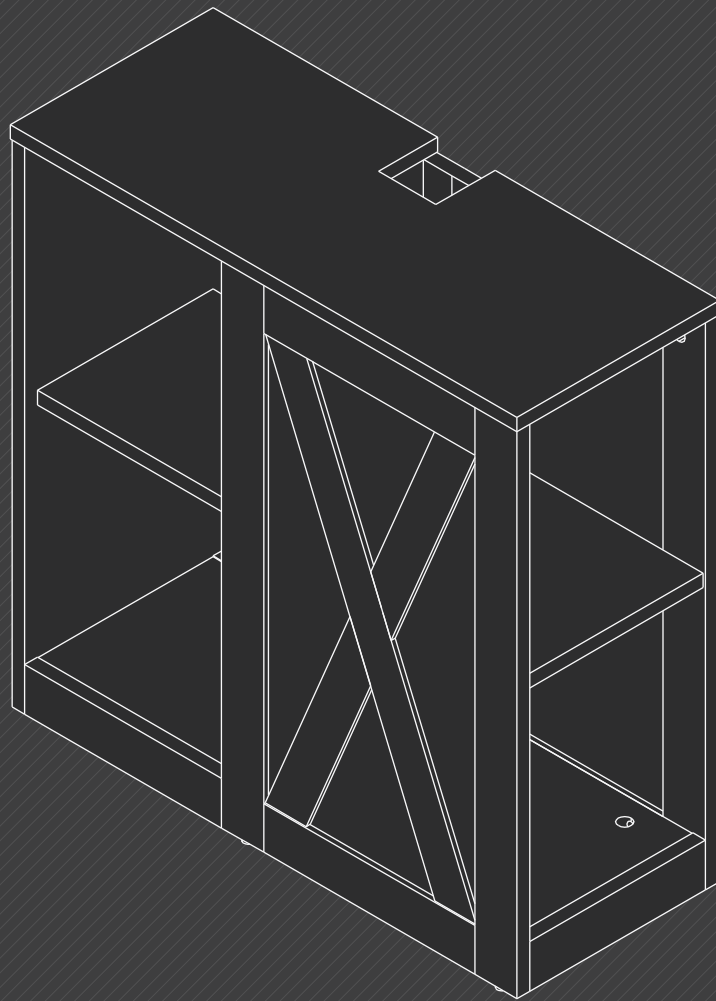

USER MANUAL



Contents


TOPIC	PAGE
01	
SAFETY INSTRUCTIONS	01-01
1-1	Thank You For Choosing Our Product 01
1-2	Precautions 01
02	
INSTALLING MODULES	02-29
2-1	Disassembly Diagram 02
2-2	Parts List 03
2-3	Assembly Instructions 04-29
03	
CUSTOMER SERVICE	30
3-1	30-Day Return Policy 30
3-2	1-Year Warranty 30
3-3	Quick Response Within 24 Hours 30
04	
PROBLEMS YOU MAY ENCOUNTER	31
4-1	Problems You May Encounter 31

Safety Instructions

Thank You For Choosing Our Product

Before assembly, please read this USER MANUAL first, and check according to Parts List to make sure all parts are included. Feel free to contact us if you have any concerns or questions about your product, we are always ready to help. Your satisfaction is our first priority!

 
Precautions

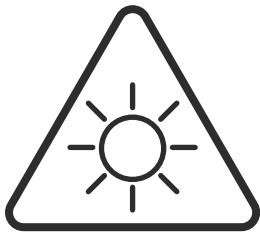


- Avoid long-term direct sunlight exposure.



 - Keep away from sharp objects.

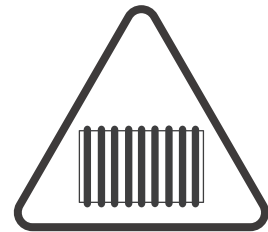


- Keep away from heat.

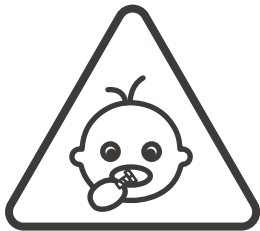 

- Keep infants/children away from assembly parts to avoid choking and suffocation.




 - Keep away from corrosive substances.

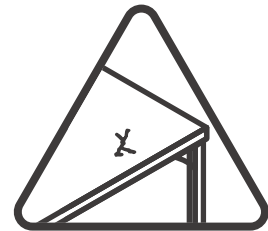

- Pay attention to avoid over-tightening fasteners, or they may induce cracking within the board.

 Helpful Tips

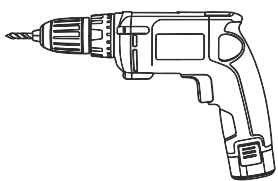

Drill Setting Guide

For easier installation, we recommend using a power drill; please set it to low speed gear 1 and adjust the torque to 4–10 to avoid excessive torque that may cause screw stripping and panel cracking.





Speed 1
(low speed)



Set Torque to 4–10

 
 
Disassembly Diagram

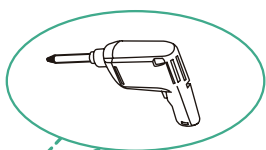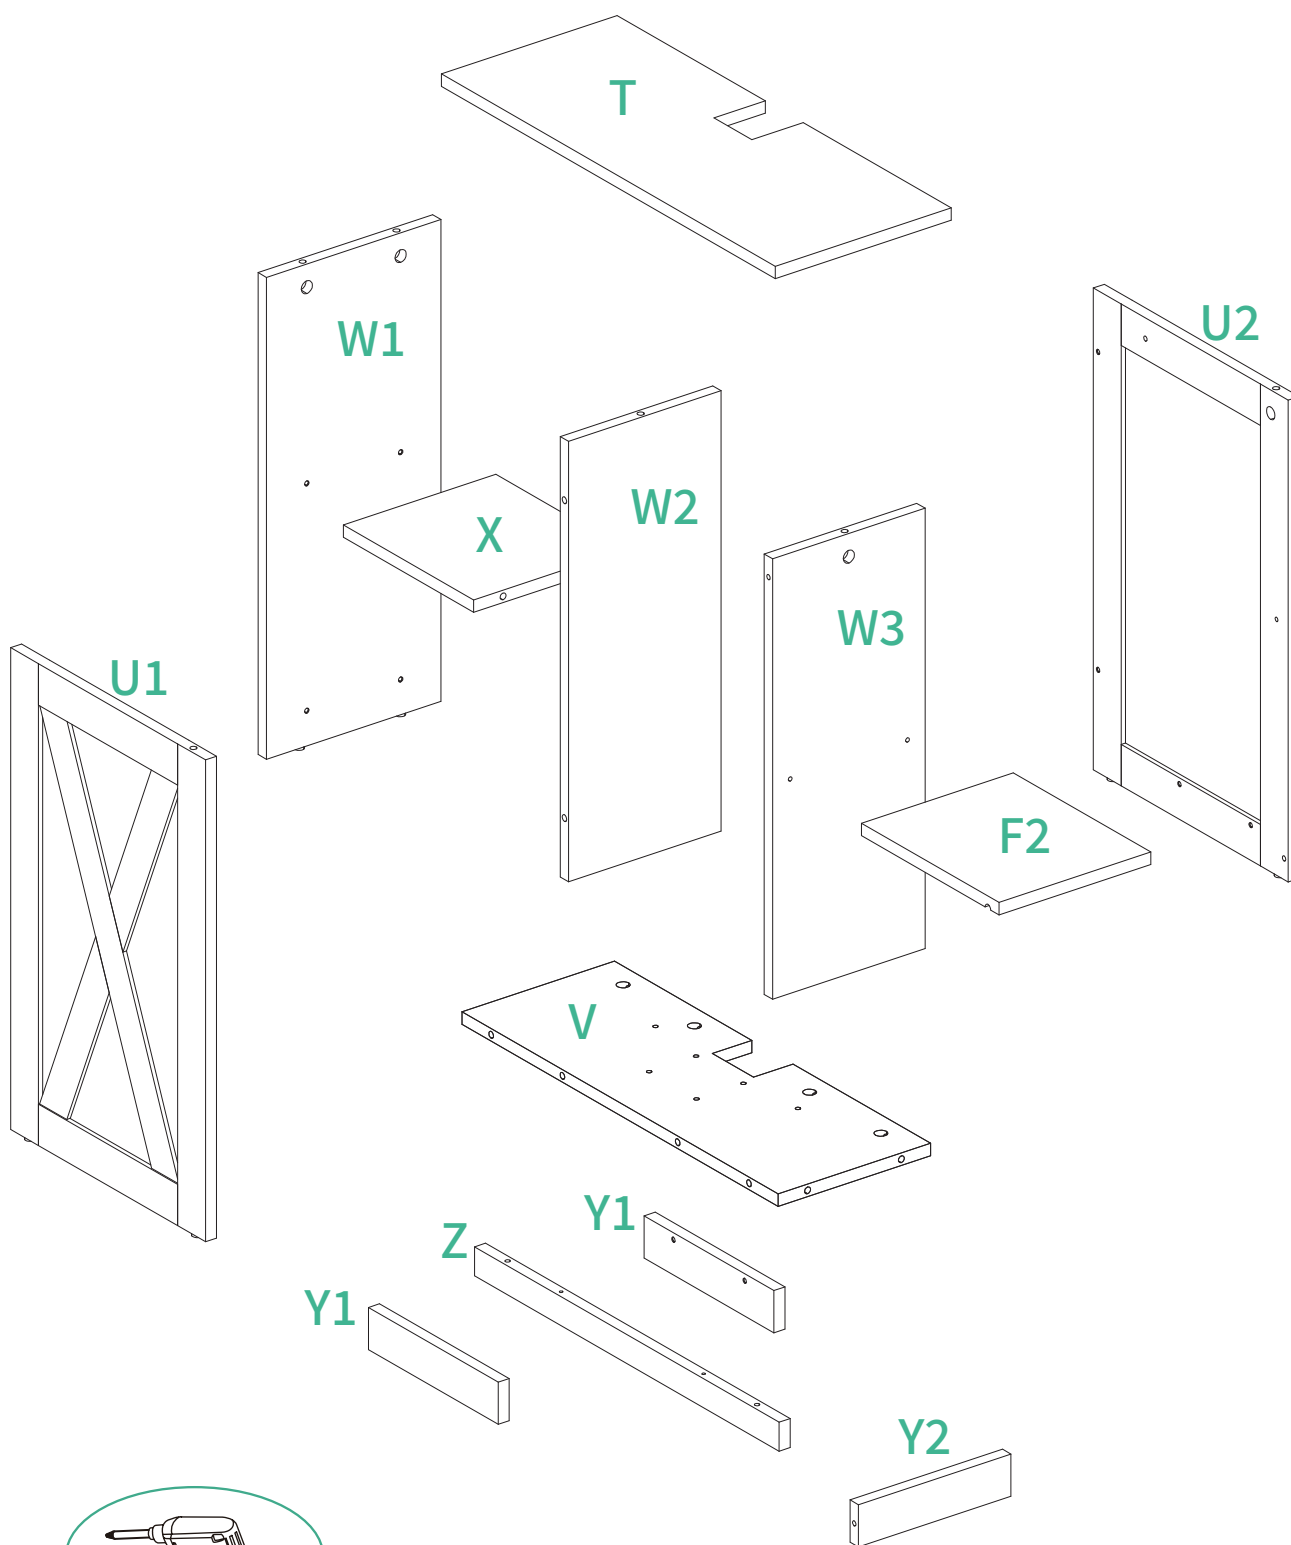

Recommend to use an electric drill to finish the installation.

Parts List

  For ease and safety, we recommend two people for assembly.



F2 x1 	T x1 	U1 x1 	U2 x1 	V x1
W1 x1 	W2 x1 	W3 x1 	X x1 	Y1 x2
Y2 x1 	Z x1 			
1 x29 3 Spares	2 x29 3 Spares	3 x7 φ6x30 1 Spare	4 x7 M5x40 1 Spare	10 x20 2 Spares
12 x5 1 Spare	17 x1 			

 
Assembly Instructions



Attention: The open storage section can be installed on either side—choose your preferred setup before assembly.


Right-side setup:

Follow steps on pages 5-16 (marked “R”).

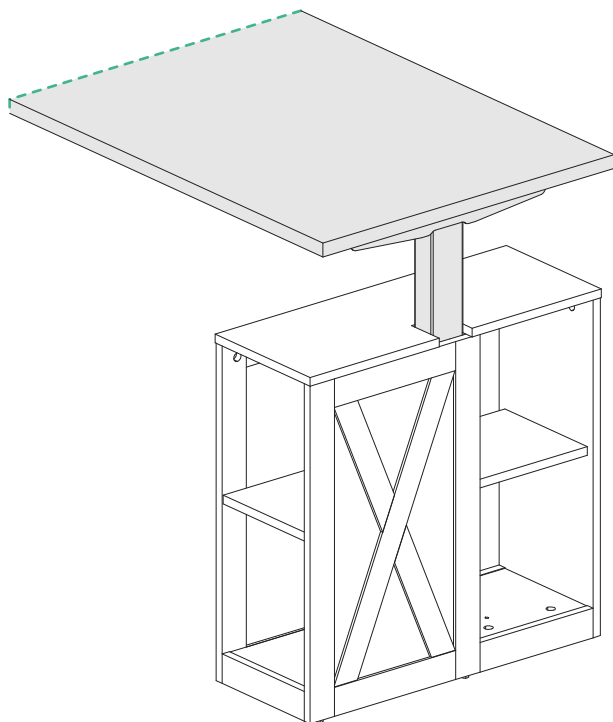

Left-side setup:


 
Follow steps on pages 18-29 (marked “L”).

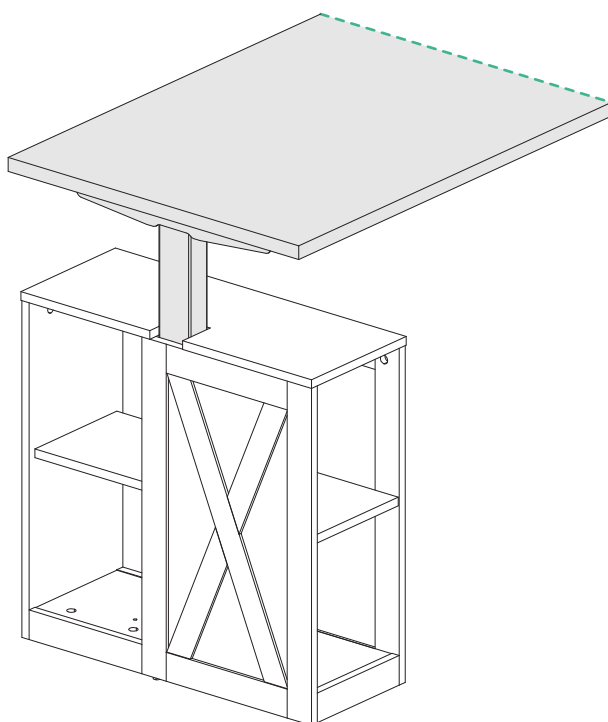

Assembly Instructions


When installing, please lay a soft pad on the ground to avoid scratching the product.

  R-1

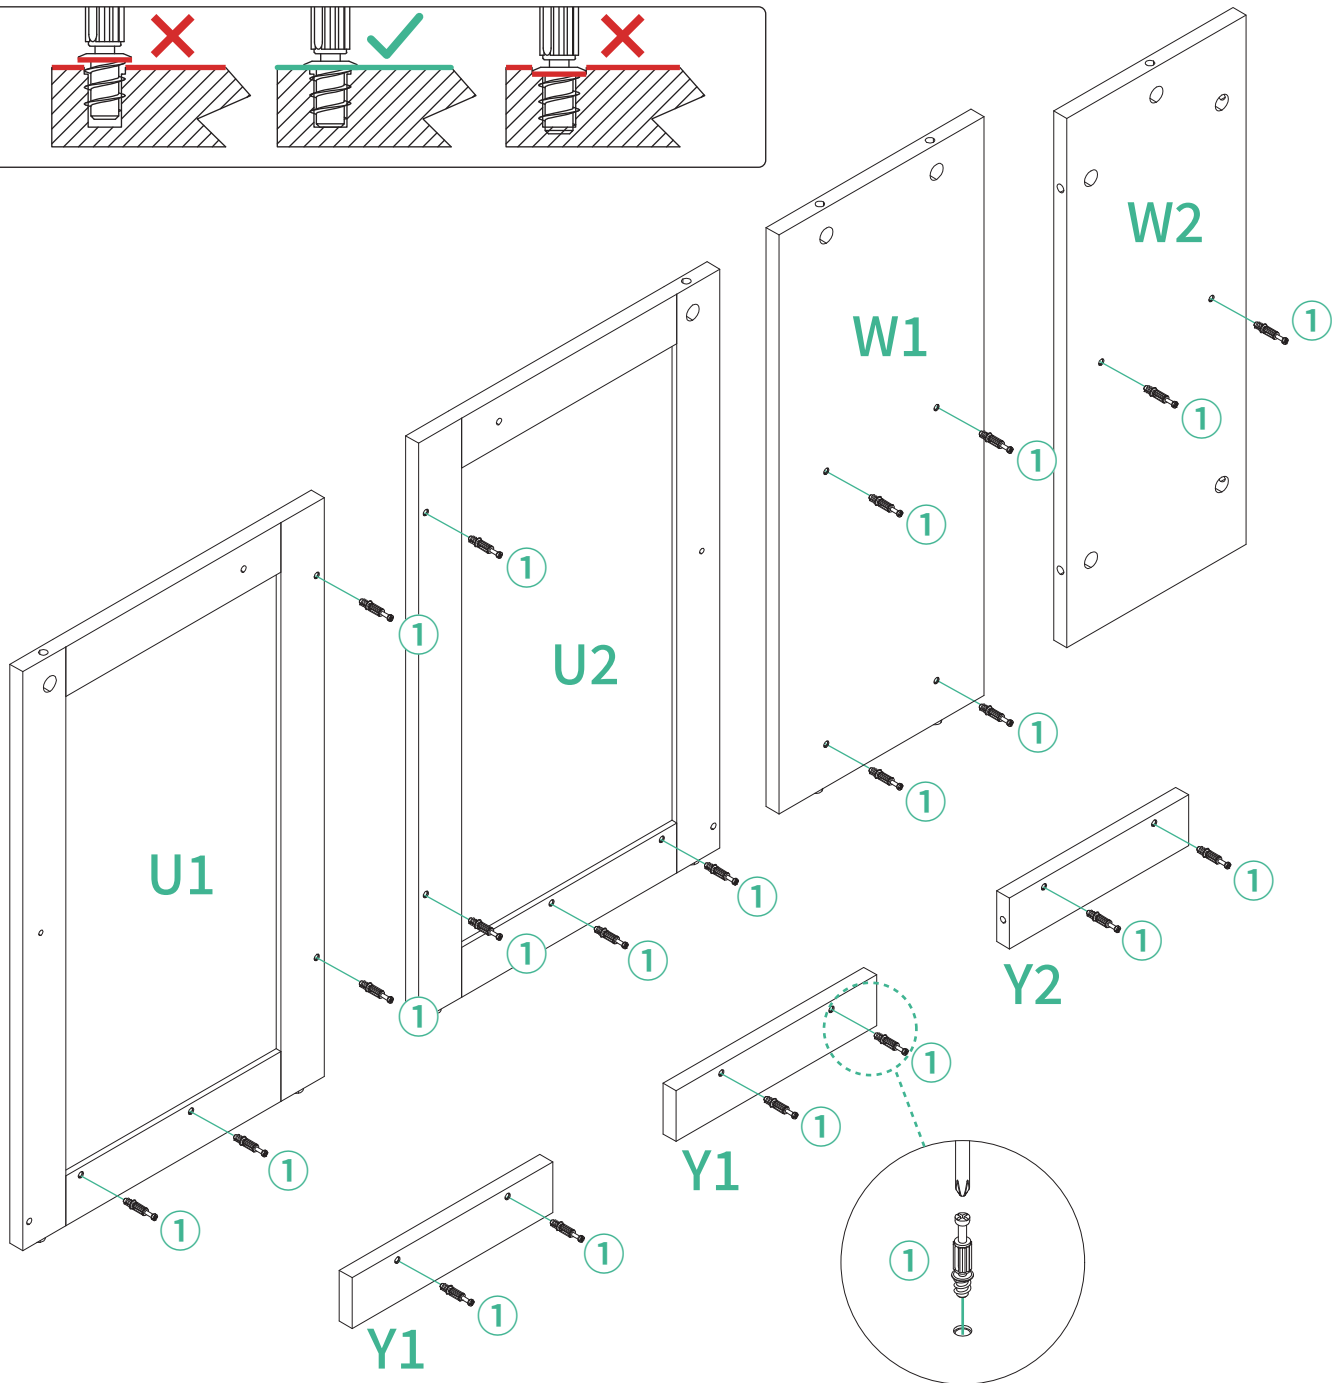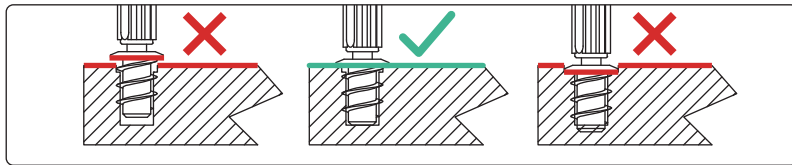

U1 x1	U2 x1	W1 x1	W2 x1	Y1 x2	Y2 x1	(1) x20
----------	----------	----------	----------	----------	----------	------------

 R-2

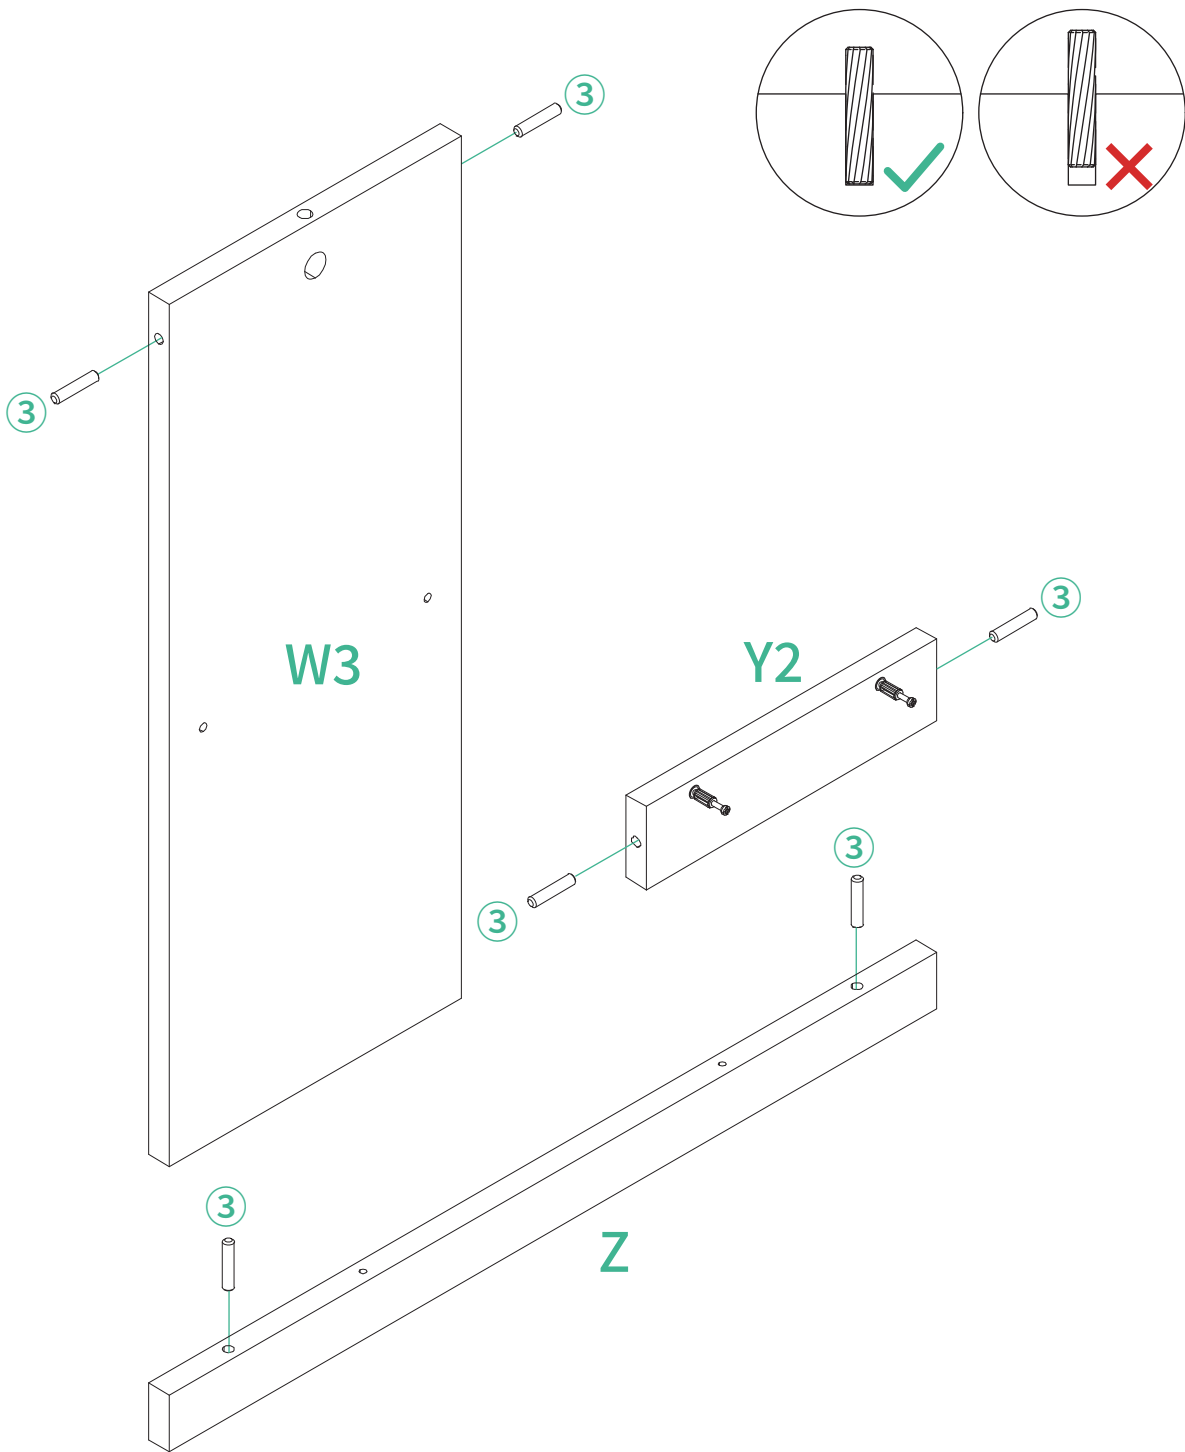


W3 x1	Y2 x1	Z x1	3 x6
----------	----------	---------	---------


Assembly Instructions

R-3

 Make sure the holes indicated by the arrows on Panels W2 and X are on the same side.

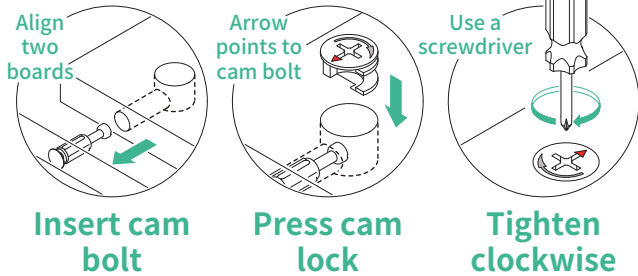


W2	
x1	
X	
x1	
2	
x2	
17	
x1	

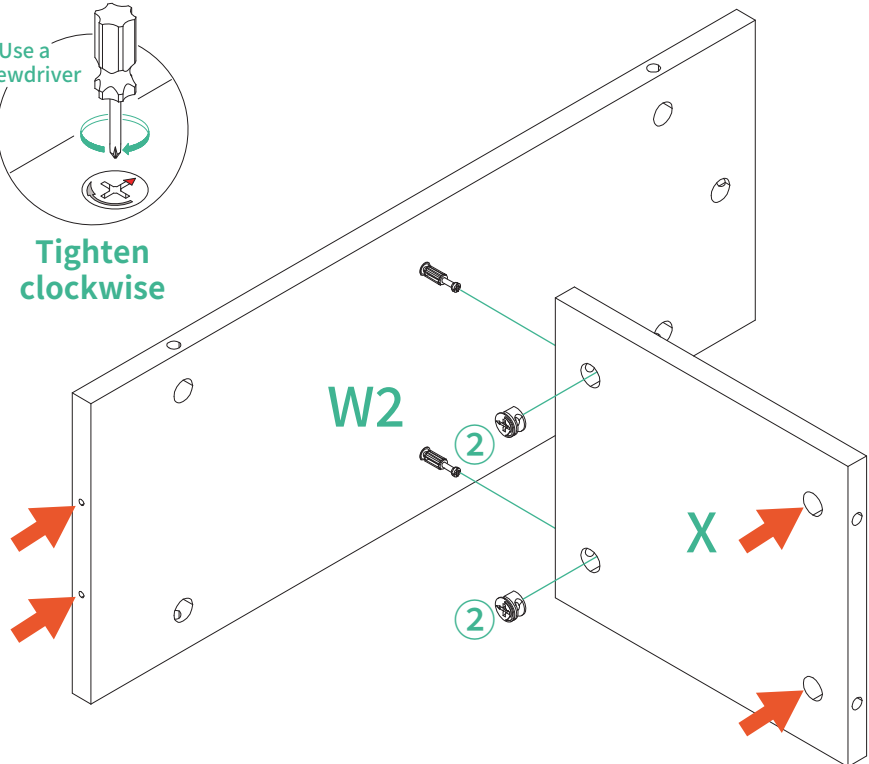 

R-4

Note: The arrow-marked notch on Panel V must face upward during installation.



V	
x1	
W3	
x1	
4	
x2	

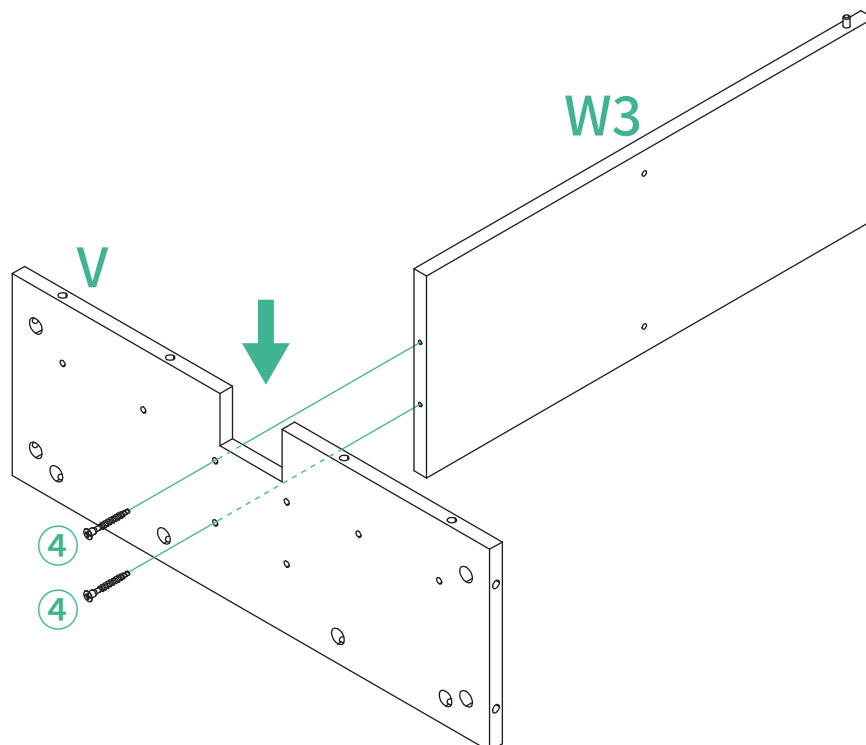 

Assembly Instructions

R-5

  Note: The arrow-marked notch on Panel V must face upward during installation.

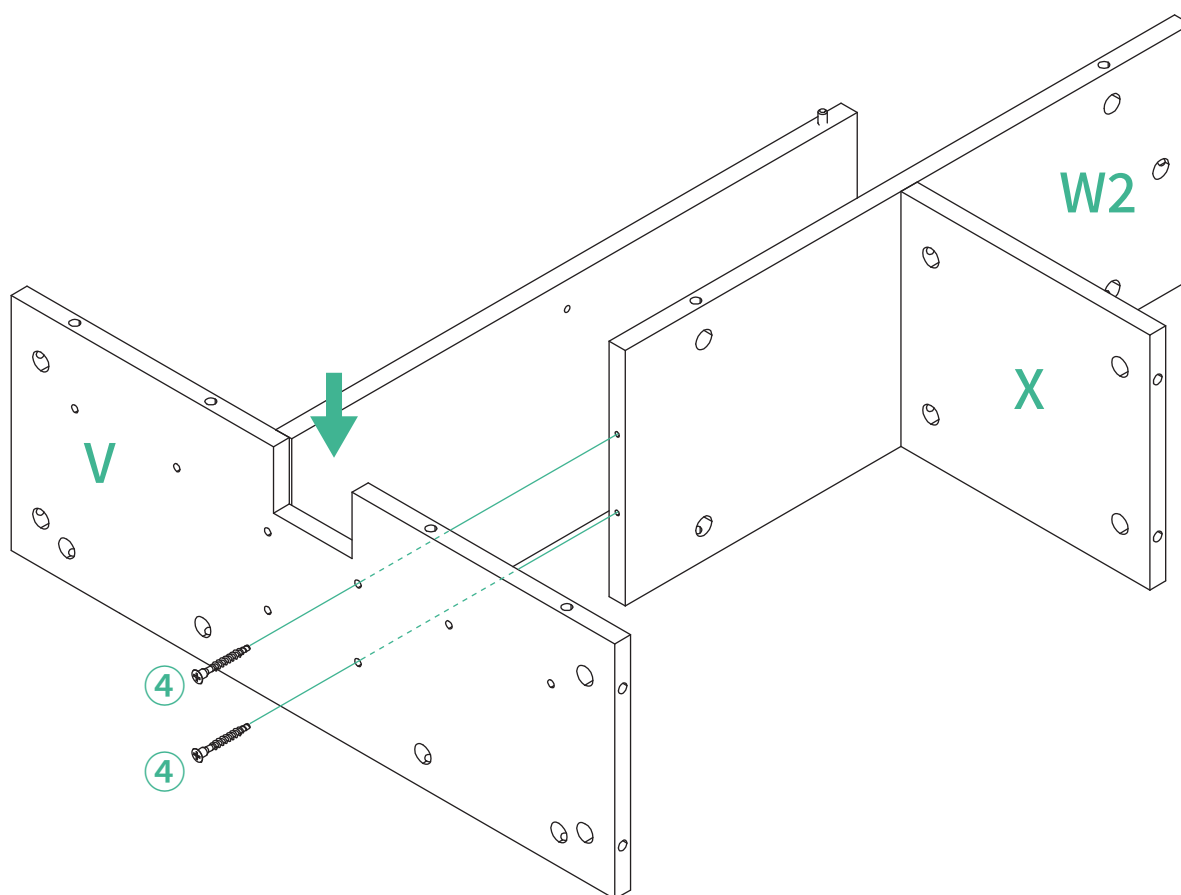



Assembly Instructions


R-6

Panel Y2 is to be installed on one side of Panel W3.


Y2	
x1	
2	
x2	
17	
x1	

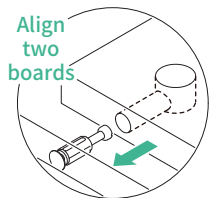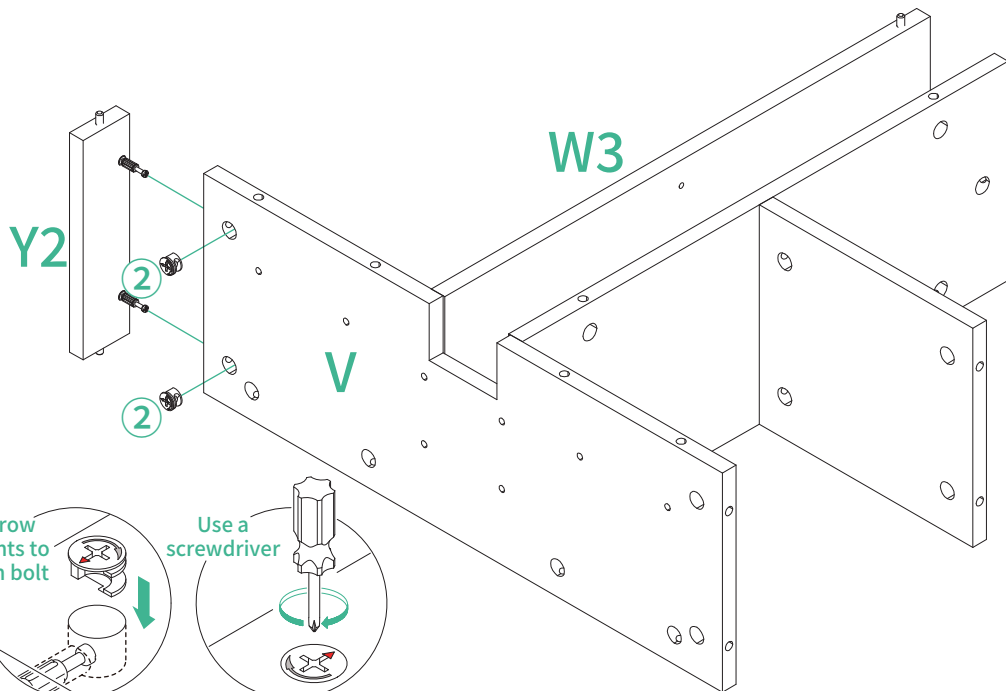  

Align
two
boards
**Insert cam
bolt**

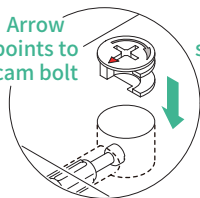 

 
Arrow
points to
cam bolt
**Press cam
lock**

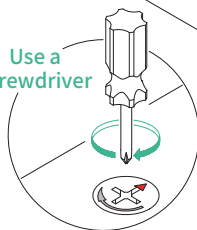

Use a
screwdriver
**Tighten
clockwise**

R-7


U1	
x1	
Y1	
x1	
2	
x6	
17	
x1	

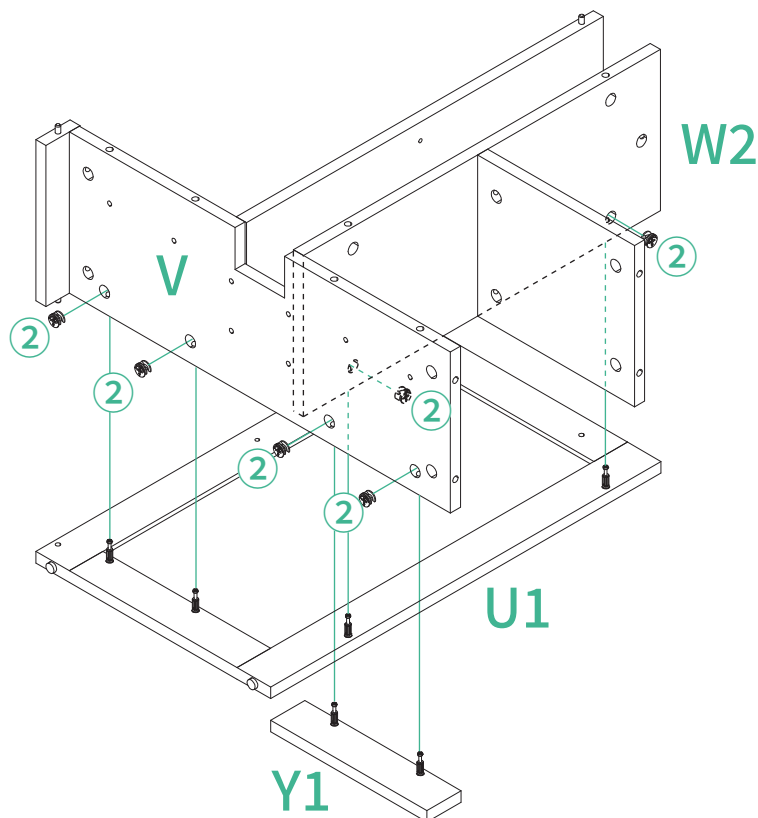 

Assembly Instructions



R-8

Z x1	
4 x2	

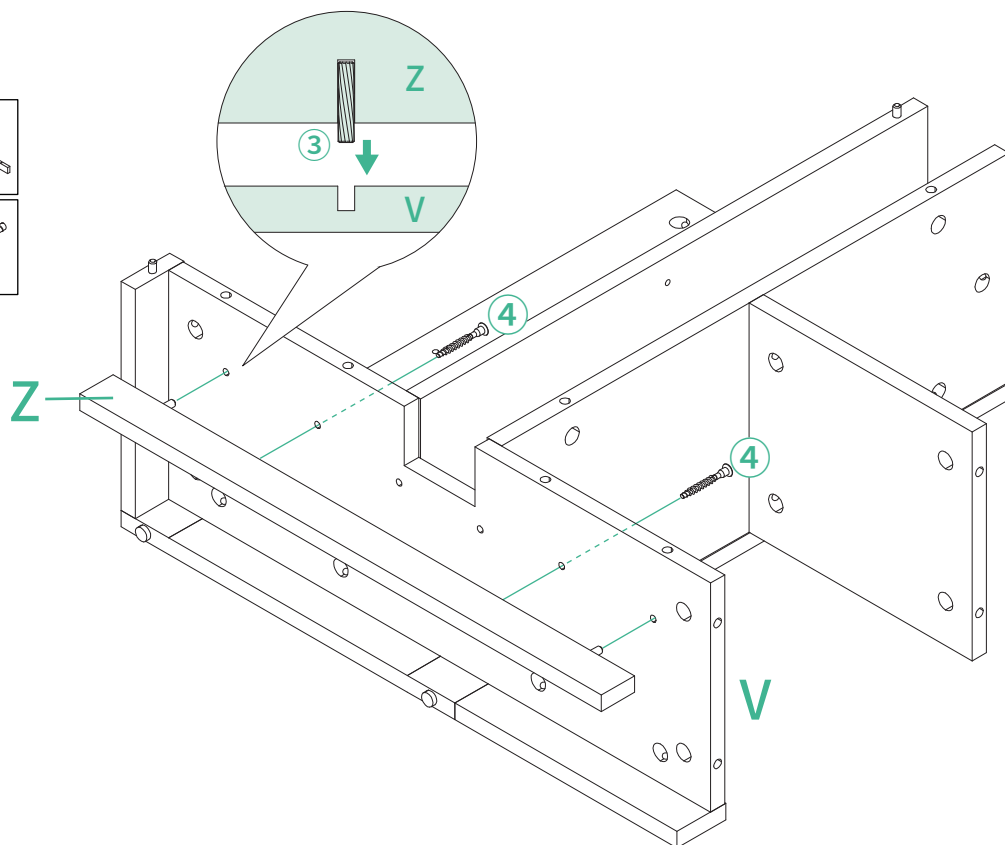 


R-9


W1 x1	
2 x4	
17 x1	

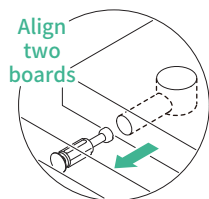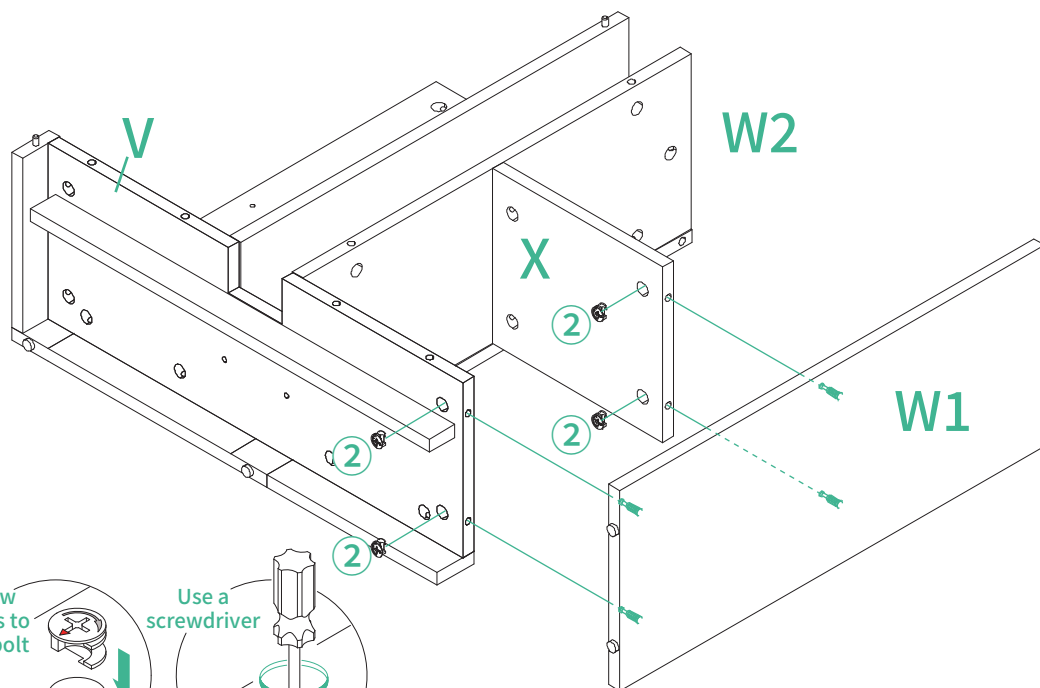  

Insert cam
bolt

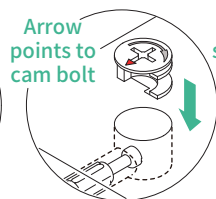 


Press cam
lock

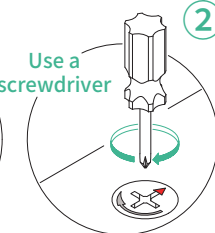 

Tighten
clockwise



Assembly Instructions

 R-10 Before installation, please raise the height-adjustable desk to facilitate installation.

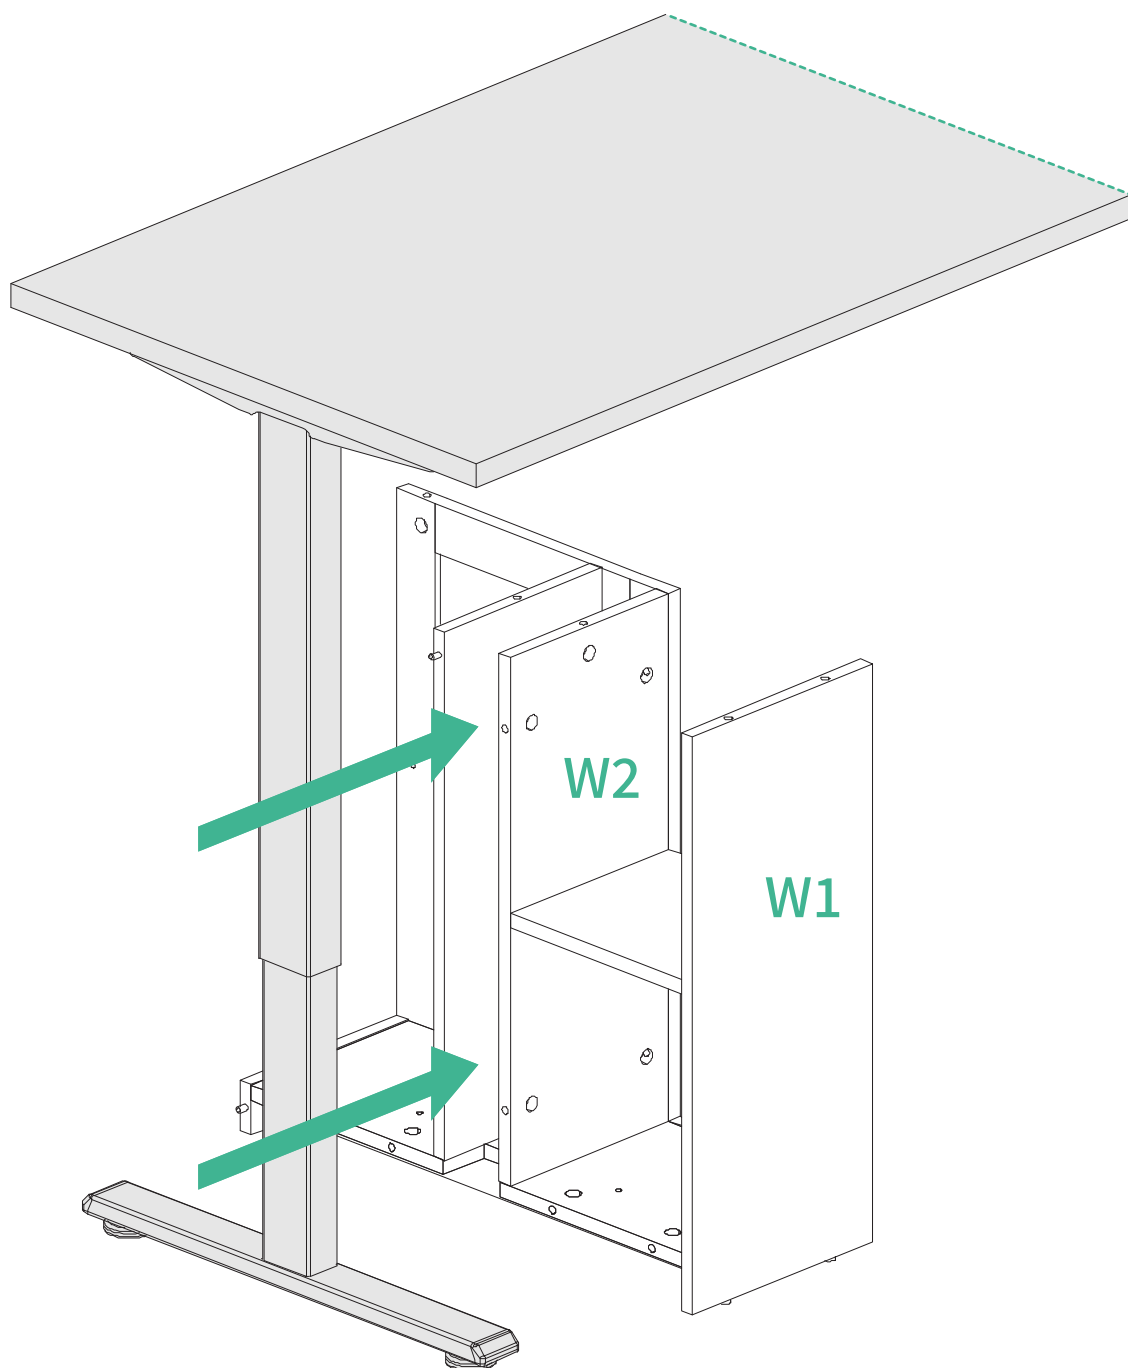

Assembly Instructions

  R-11

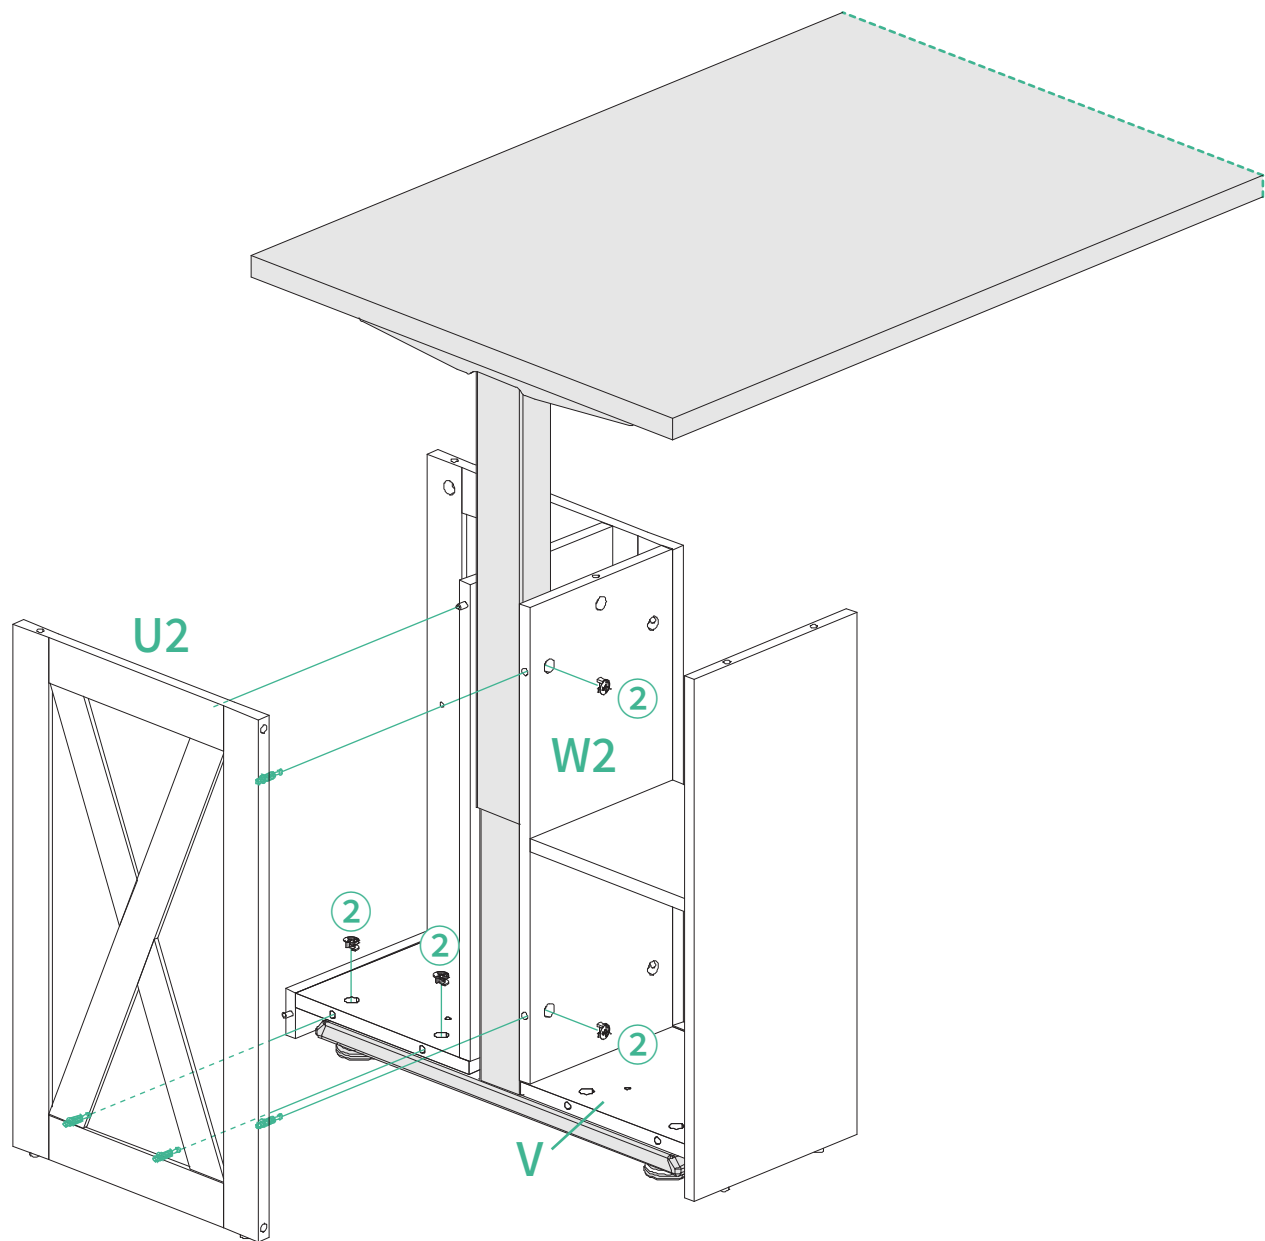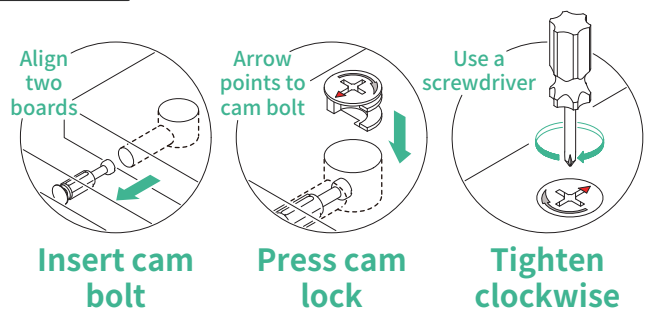


U2		2		17	
x1		x4		x1	

Assembly Instructions

R-12


Y1 x1	
2 x2	
17 x1	

 Align
two
boards

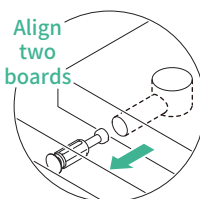


Insert cam
bolt

 Arrow
points to
cam bolt

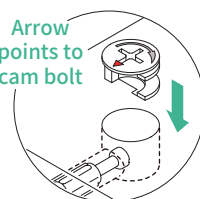


Press cam
lock

 Use a
screwdriver

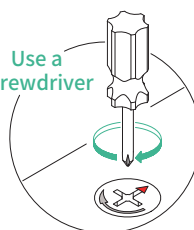



Tighten
clockwise

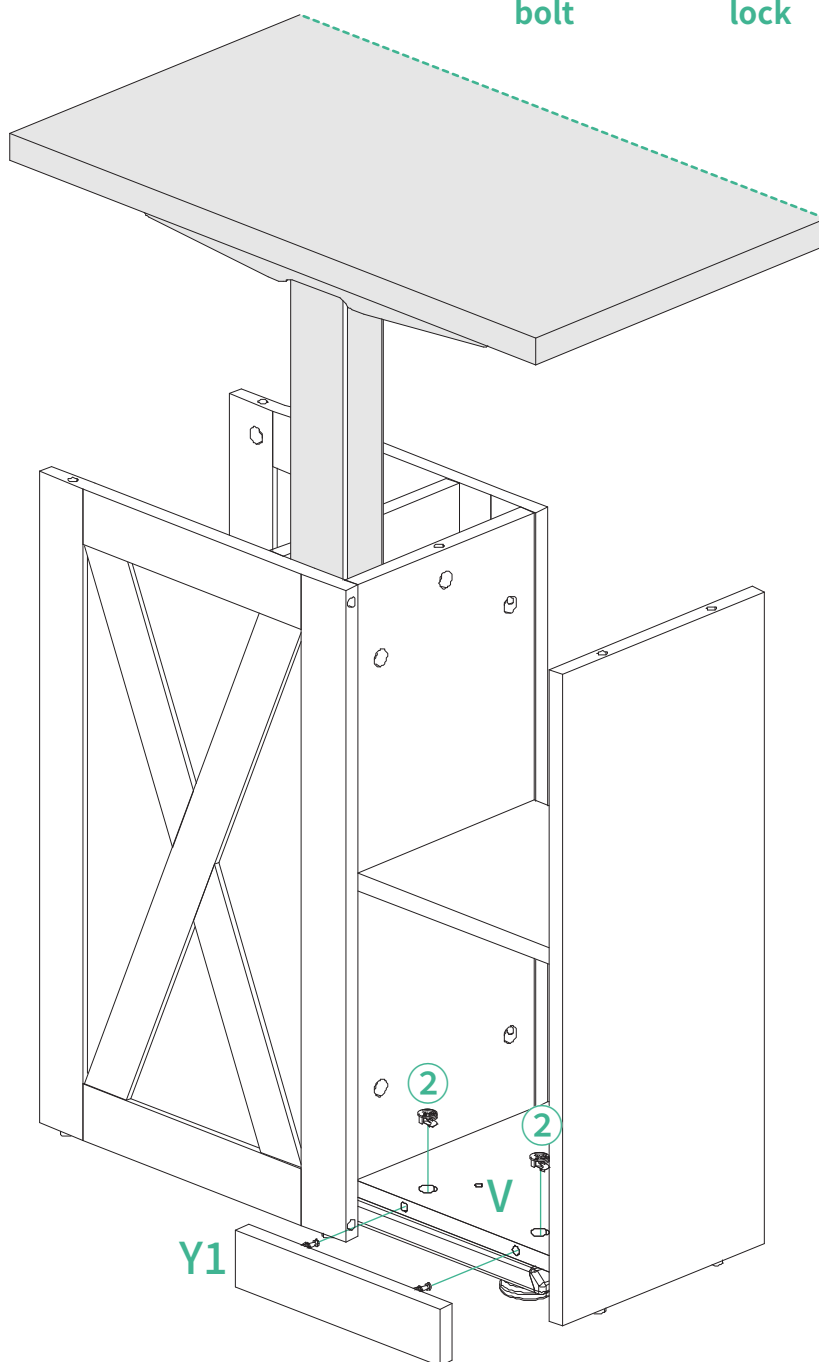 


Assembly Instructions

R-13

  
To allow for left/right assembly, Panel T include extra holes for Part ①. Please install only in the positions shown in the diagram.

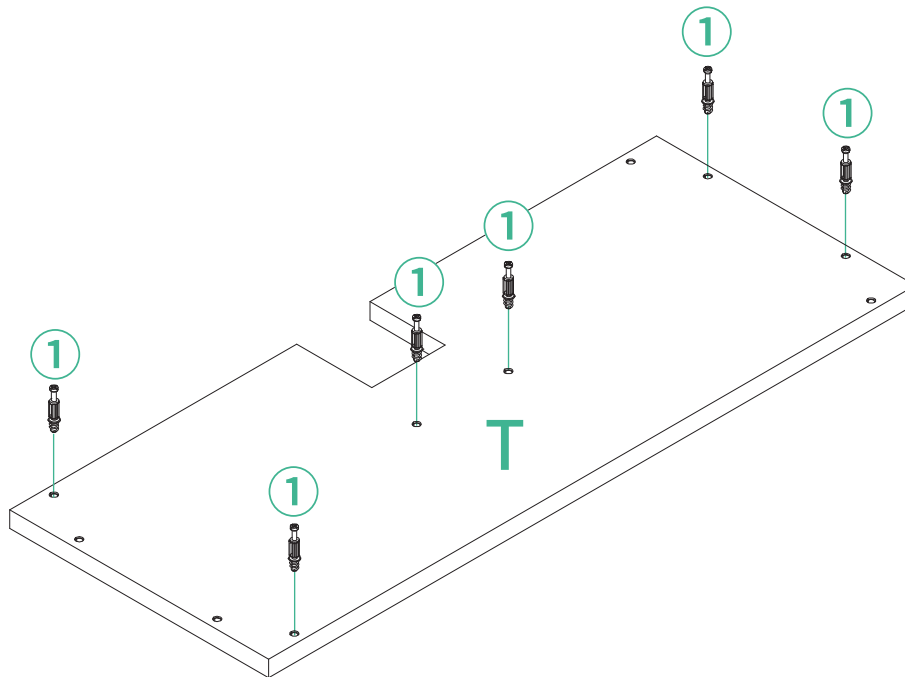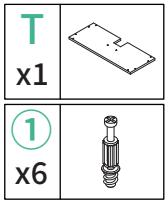


R-14

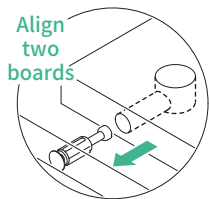 


Align two boards
Insert cam bolt

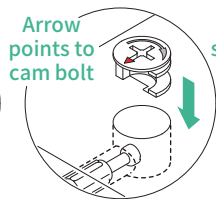 

Arrow points to cam bolt
Press cam lock

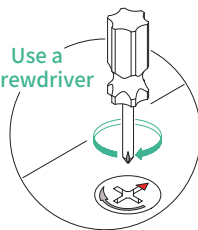 

Use a screwdriver
Tighten clockwise

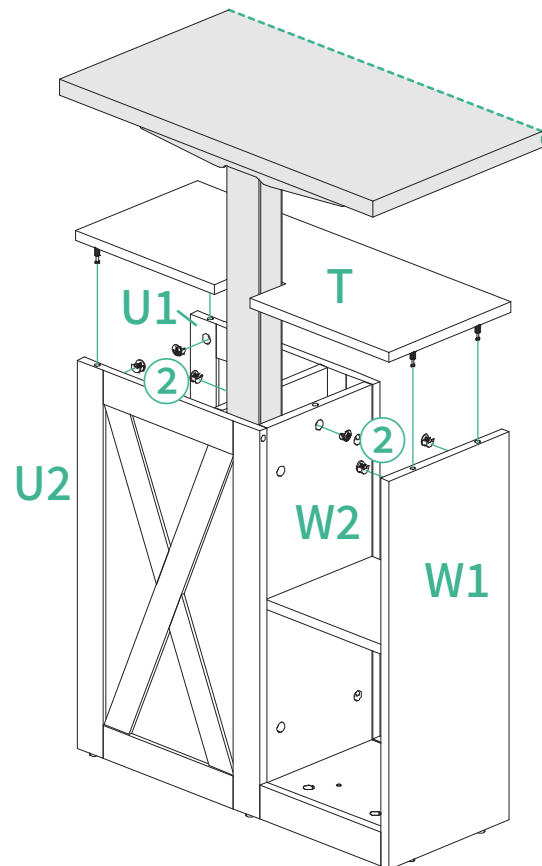 


Assembly Instructions



R-15

Insert ⑫ into the holes at the same height on Part U1,U2 and W3, put Part F2 on ⑫.


 
1

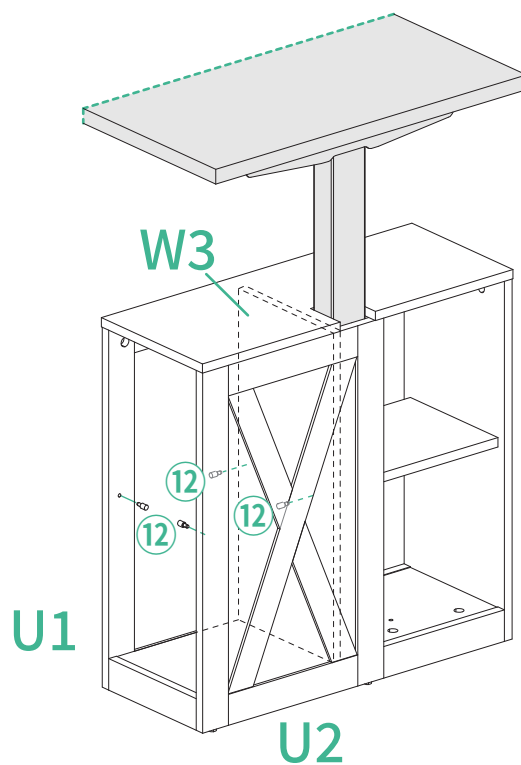

2

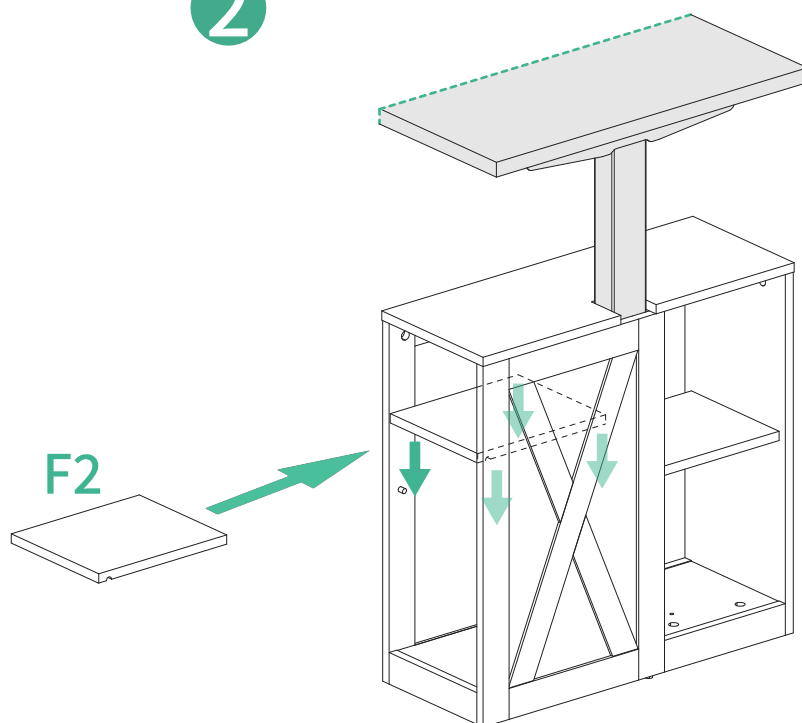  

R-16

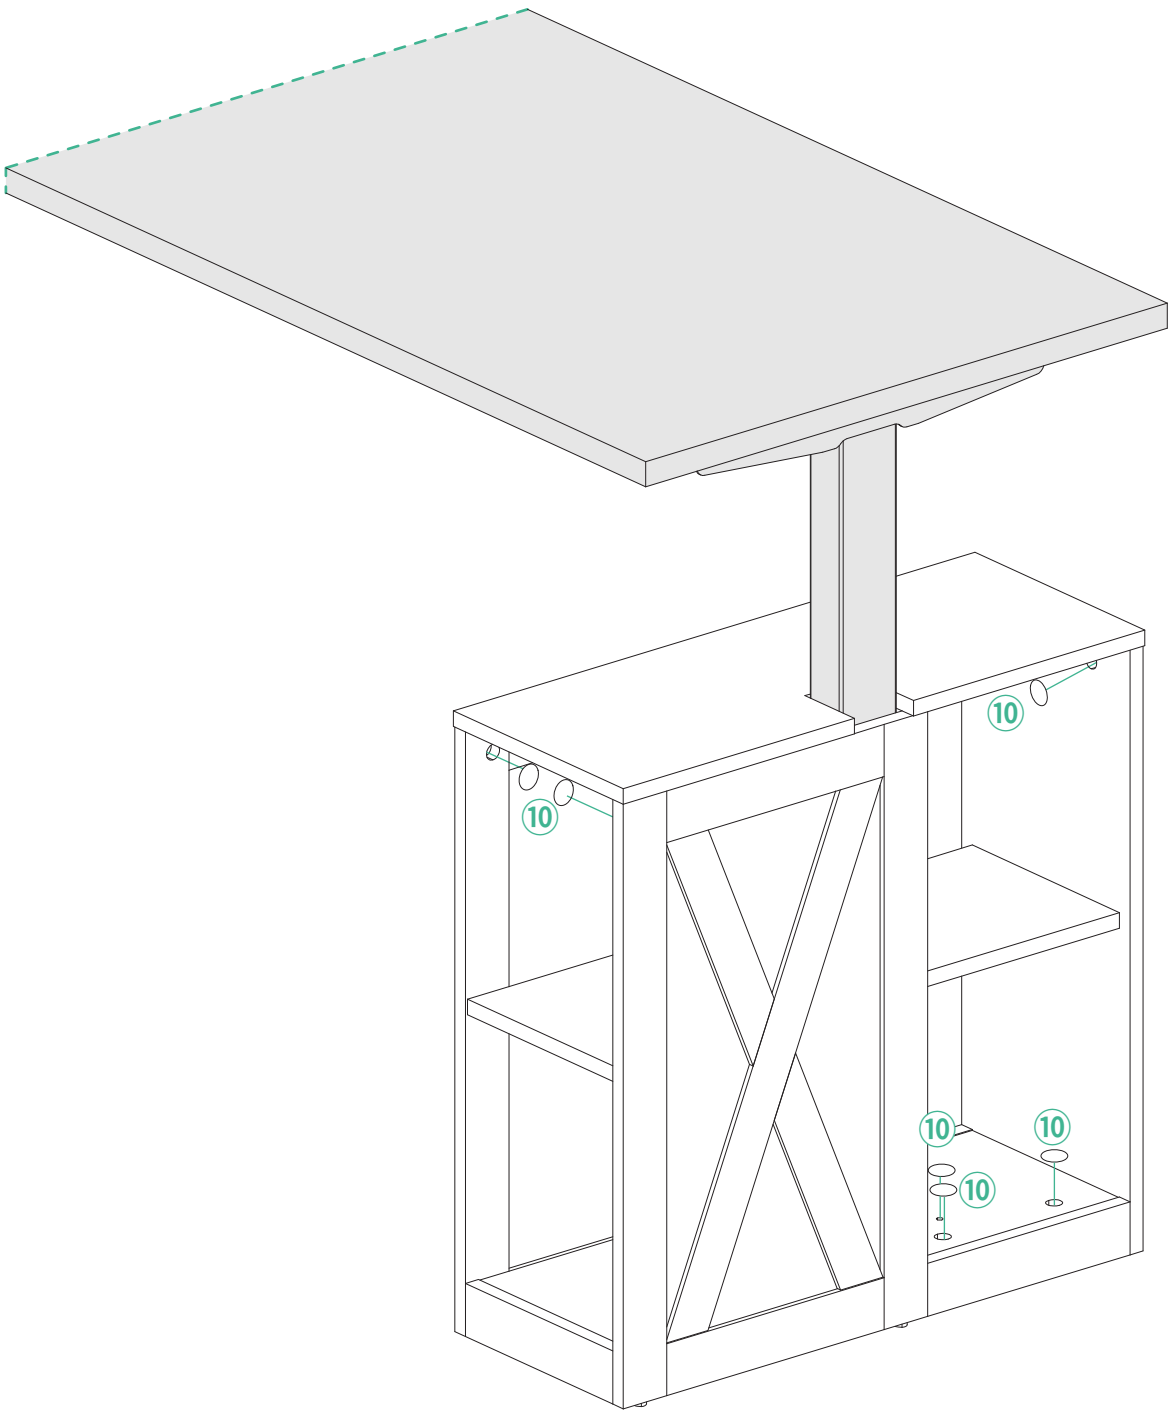  


Assembly Instructions



Attention: The open storage section can be installed on either side—choose your preferred setup before assembly.


Right-side setup:

 Follow steps on pages 5-16 (marked “R”).

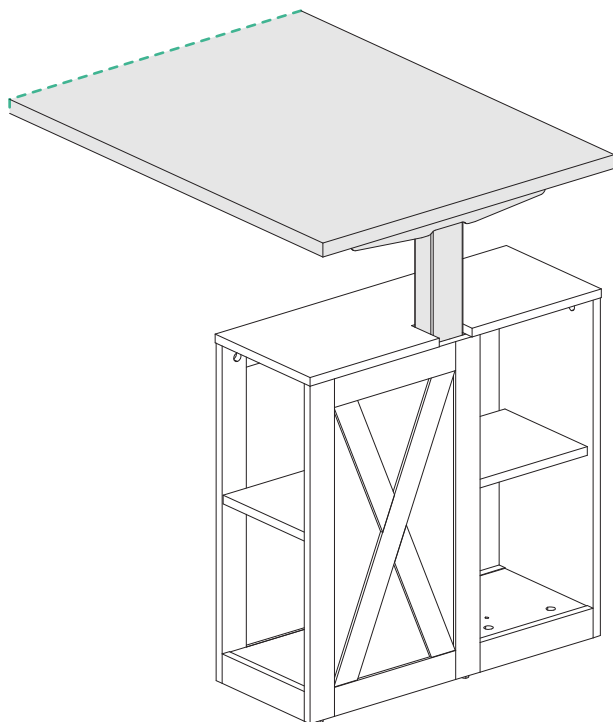



Left-side setup:

 Follow steps on pages 18-29 (marked “L”).

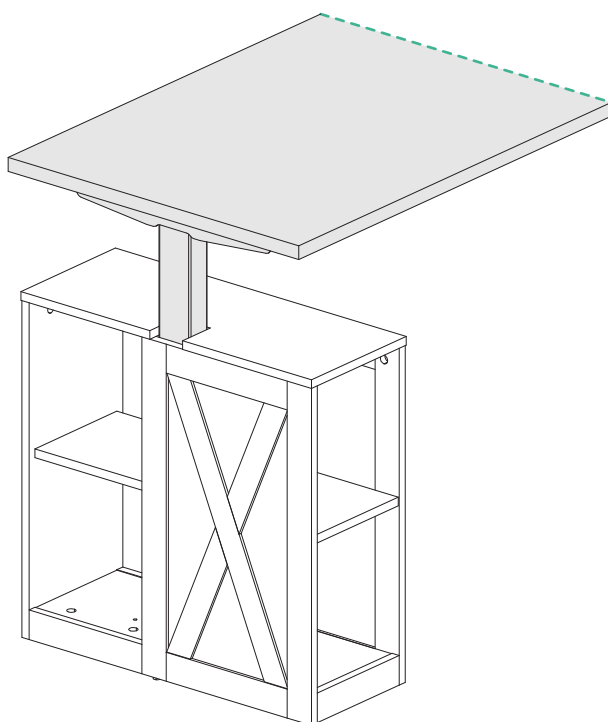


Assembly Instructions

  L-1

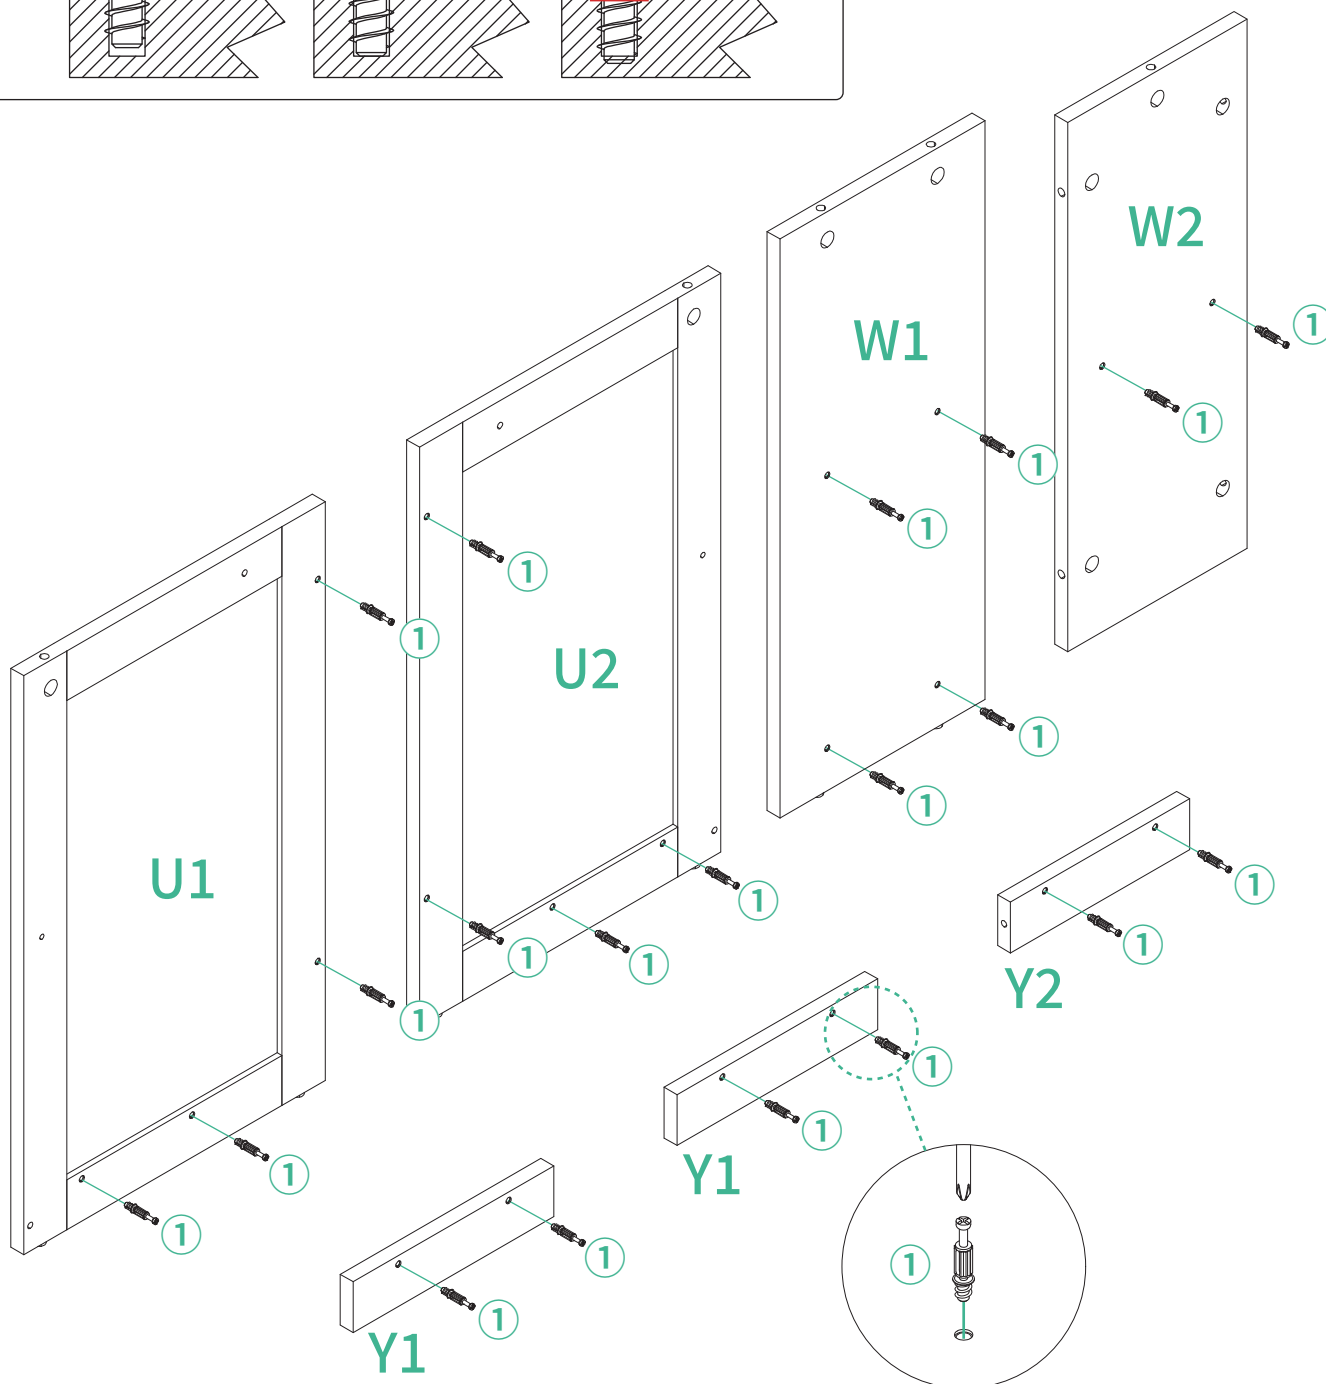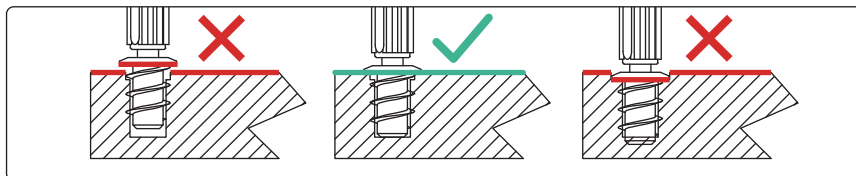

U1 x1	U2 x1	W1 x1	W2 x1	Y1 x2	Y2 x1	① x20
						

 L-2

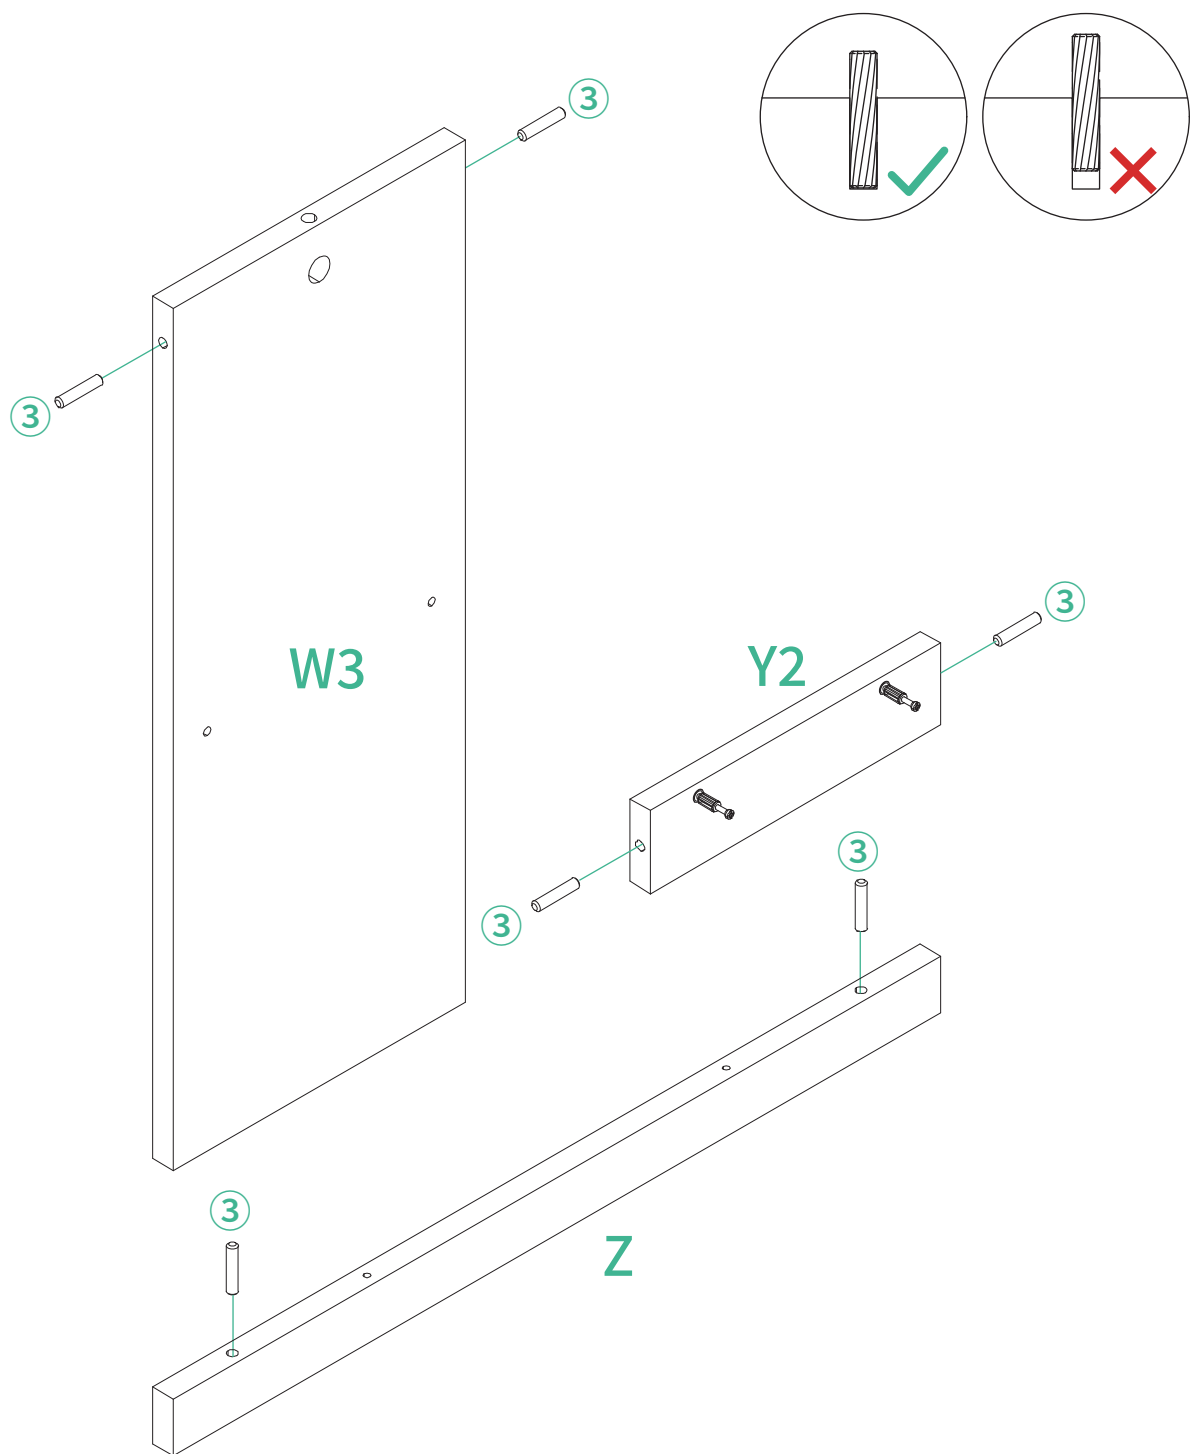


W3 x1	Y2 x1	Z x1	3 x6
----------	----------	---------	---------

Assembly Instructions

L-3

Make sure the holes indicated by the arrows on Panels W2 and X are on the same side.


W2	
x1	
X	
x1	
2	
x2	
17	
x1	

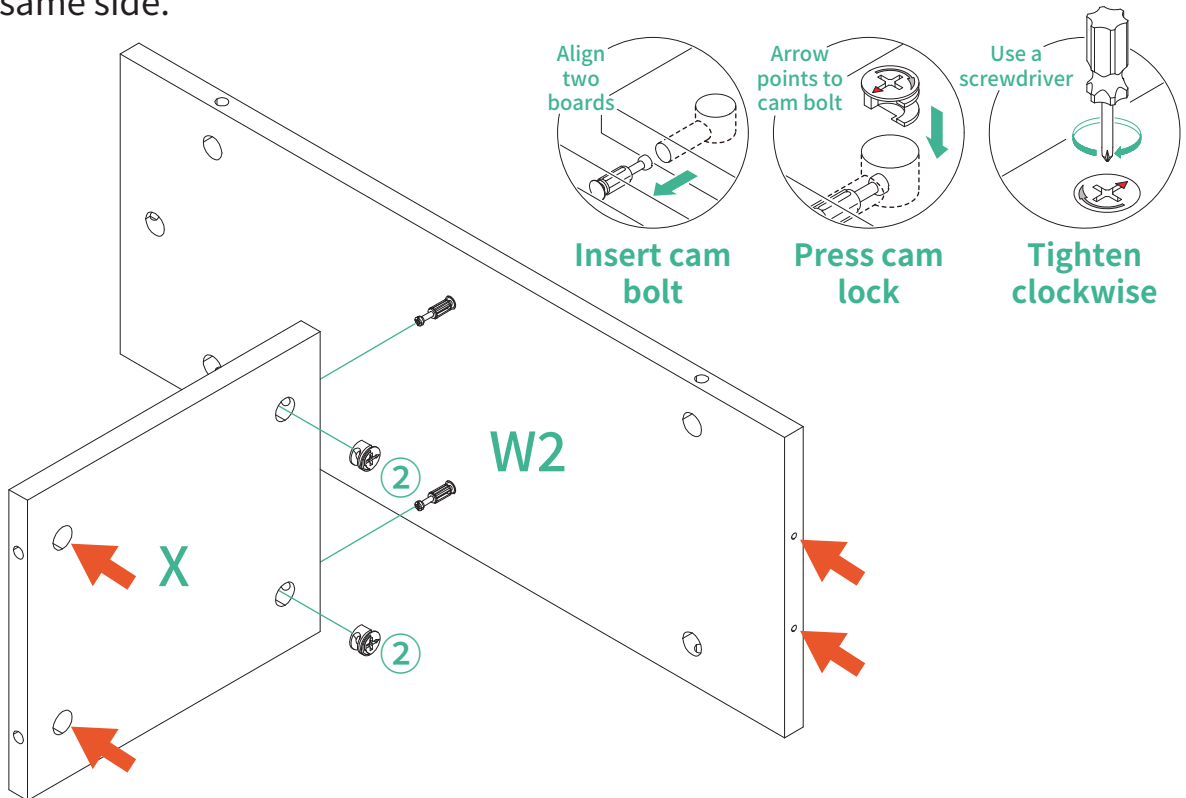 

L-4

Note: The arrow-marked notch on Panel V must face upward during installation.



V	
x1	
W3	
x1	
4	
x2	

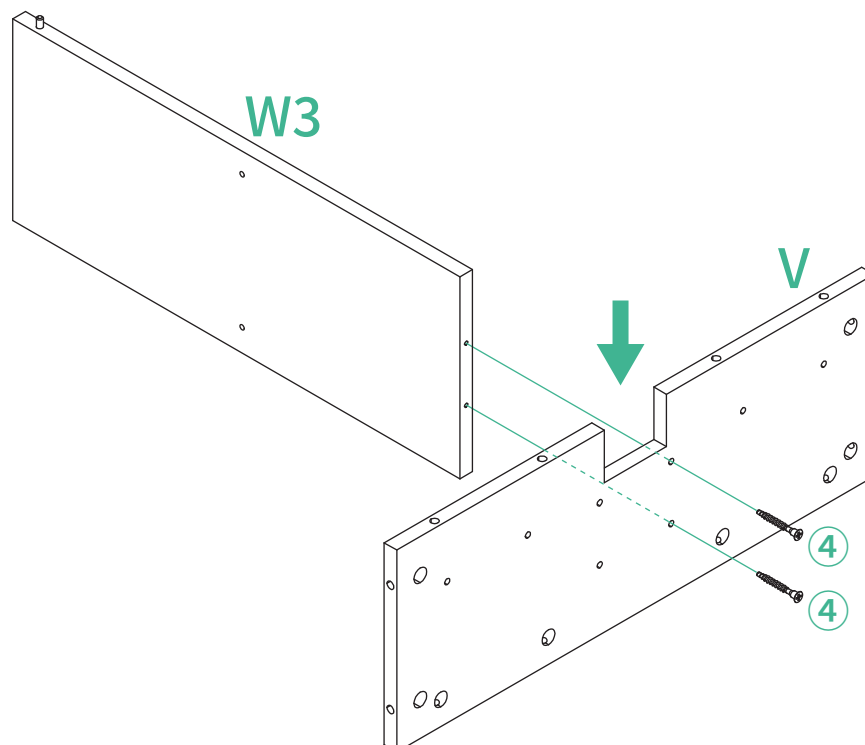 

Assembly Instructions

L-5

  
Note: The arrow-marked notch on Panel V must face upward during installation.

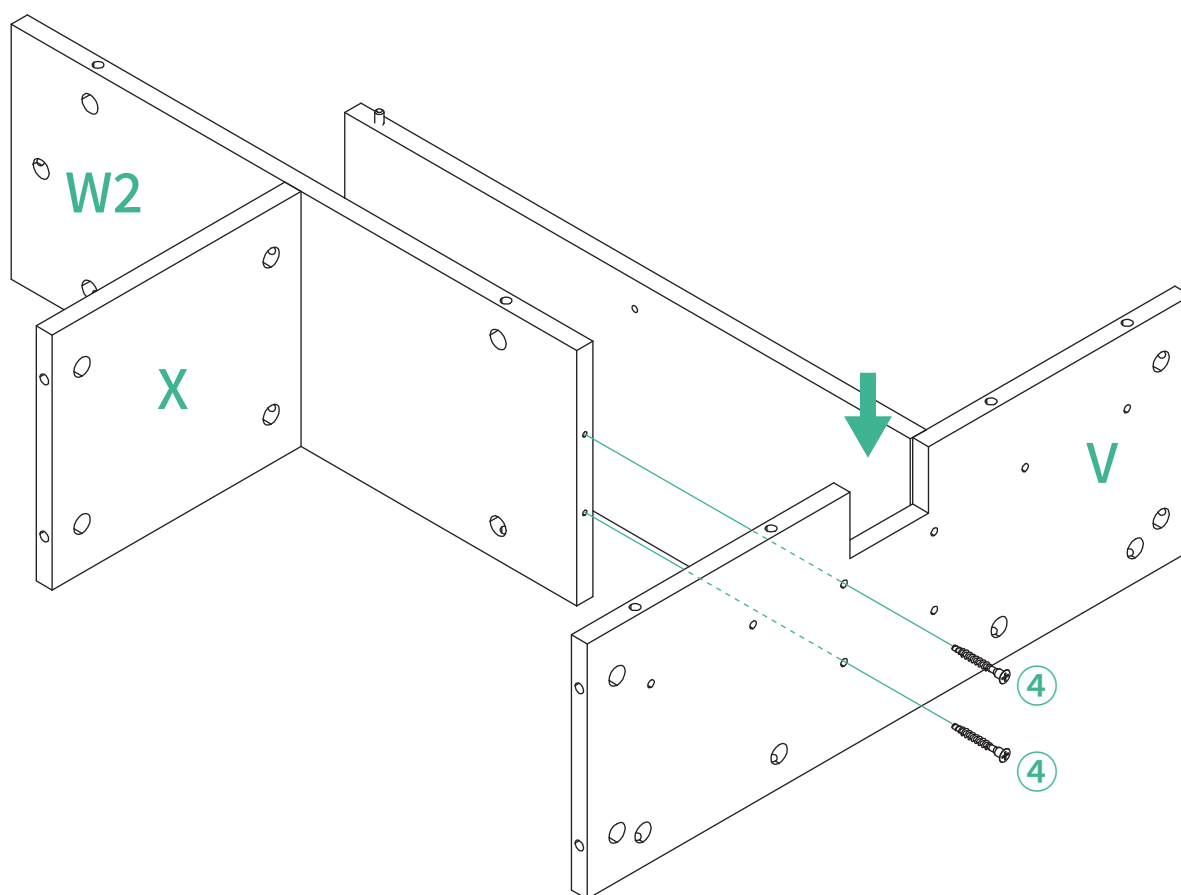




Assembly Instructions

L-6

 Panel Y2 is to be installed on one side of Panel W3.

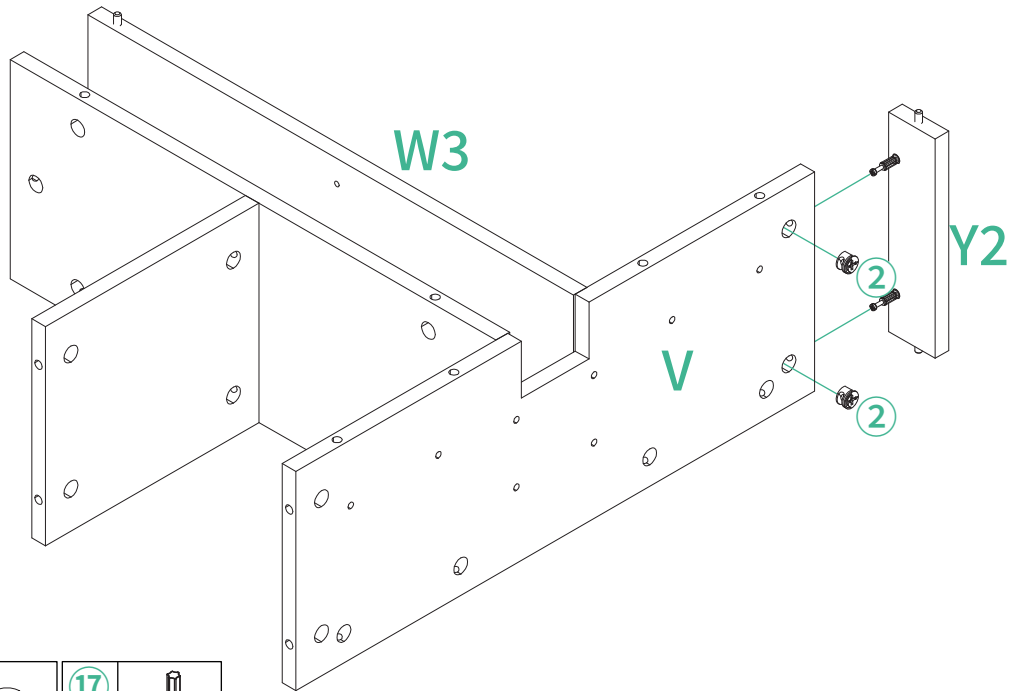


L-7

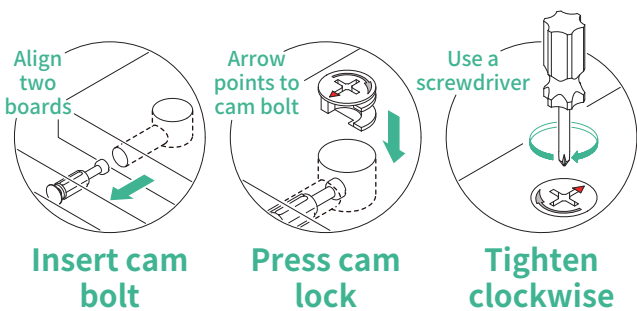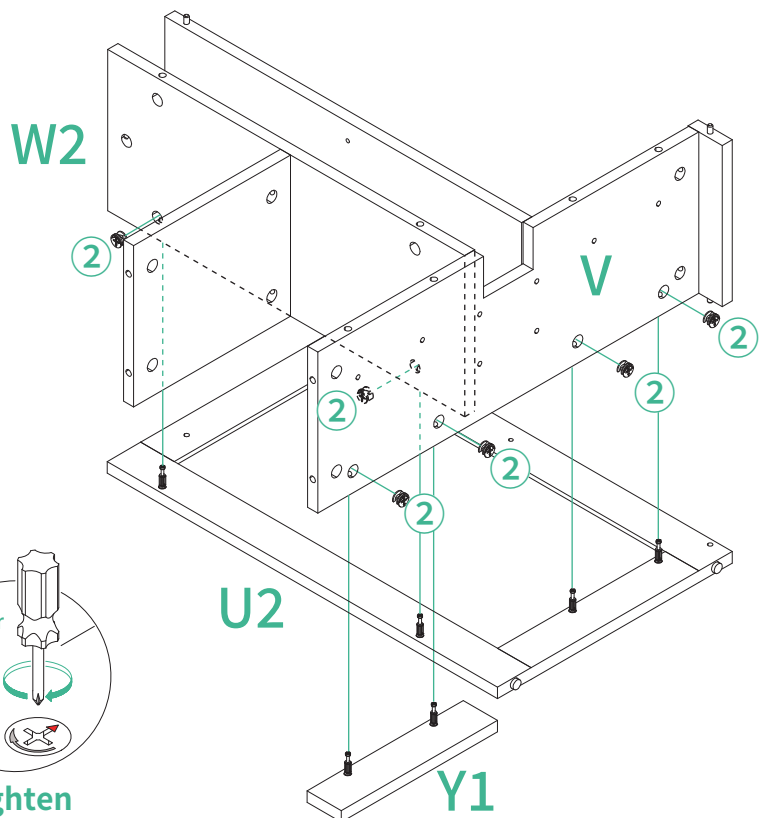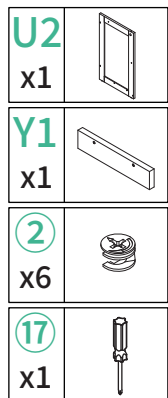   


Assembly Instructions

L-8


Z x1	
4 x2	

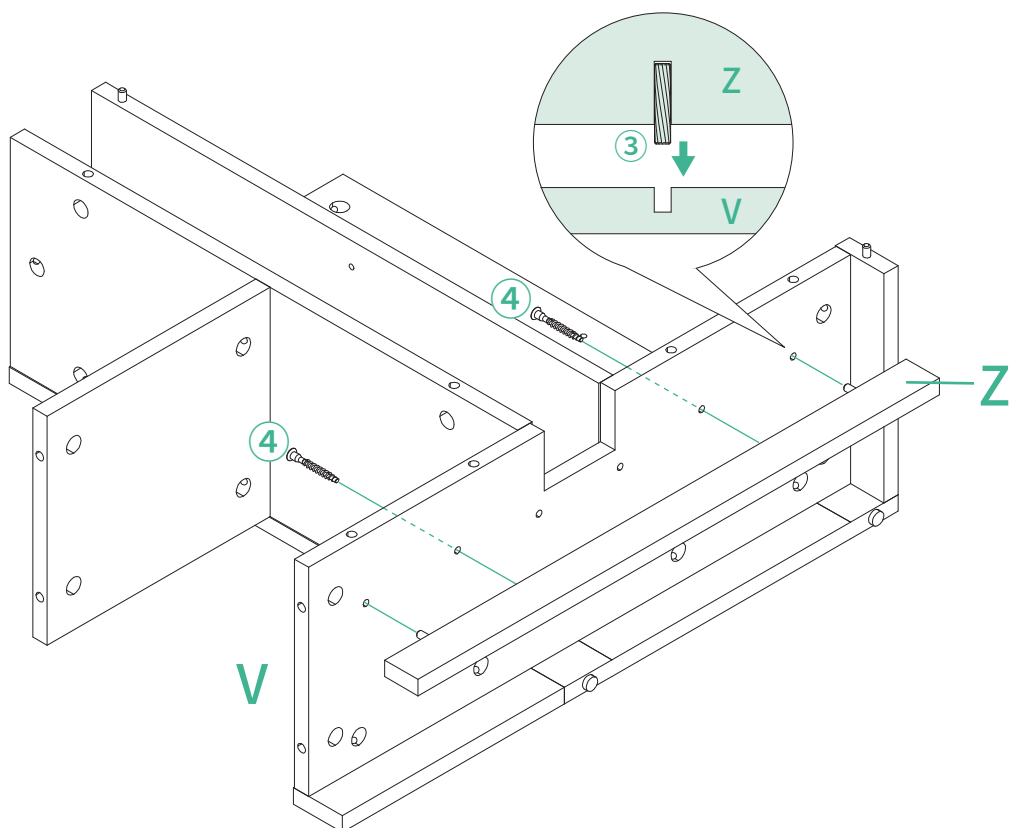 

L-9

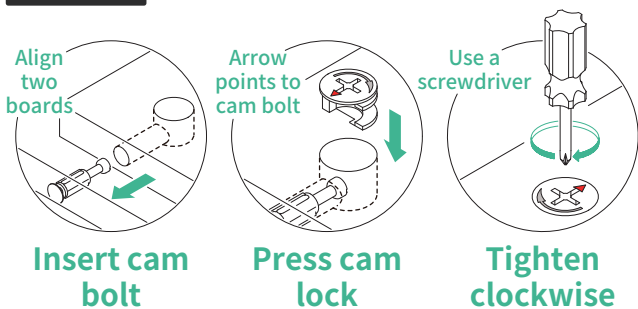 


W1 x1	
2 x4	
17 x1	

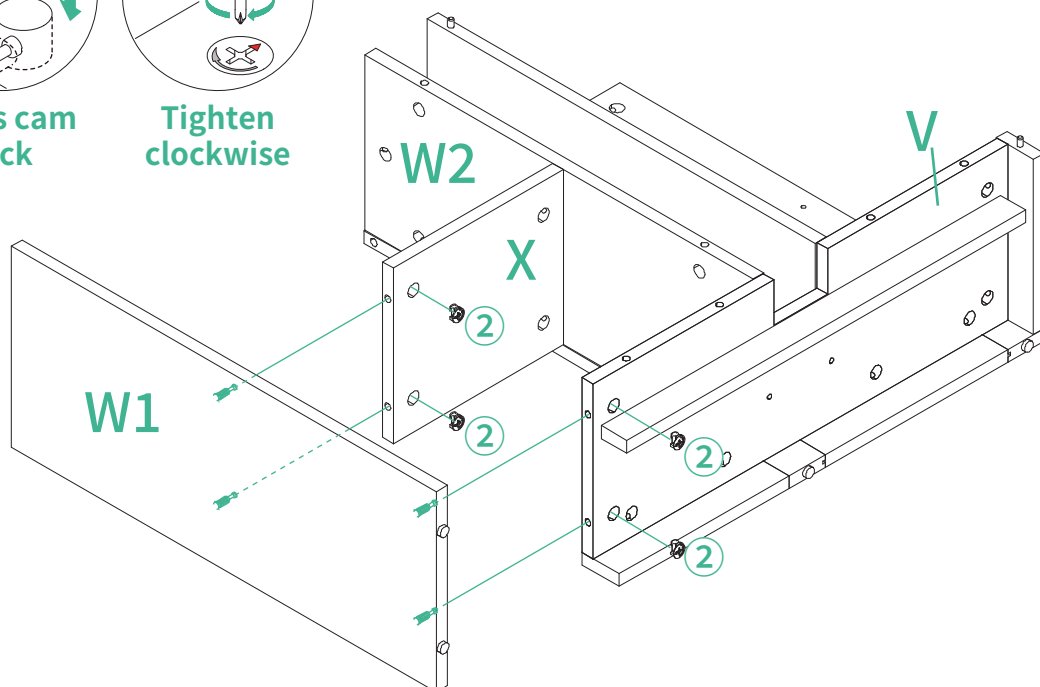 


Assembly Instructions

 L-10 Before installation, please raise the height-adjustable desk to facilitate installation.

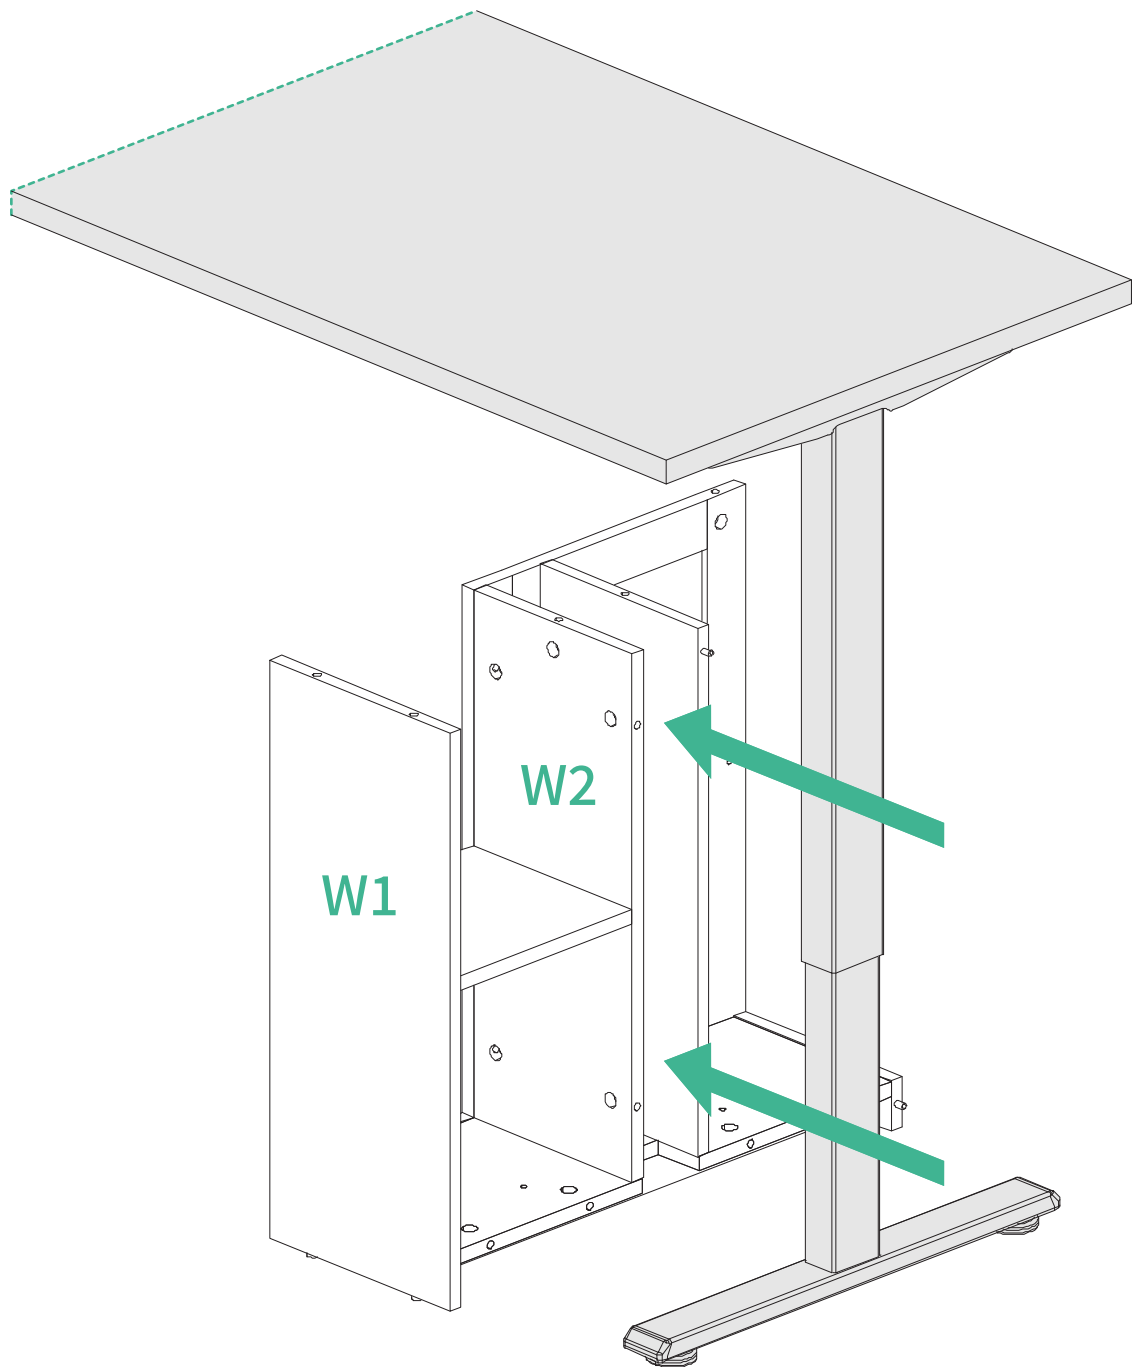


L-11

 Align
two
boards

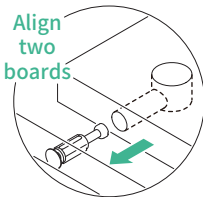


Insert cam
bolt

 Arrow
points to
cam bolt

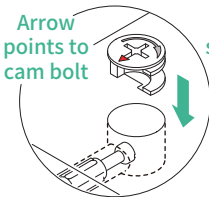


Press cam
lock

 Use a
screwdriver

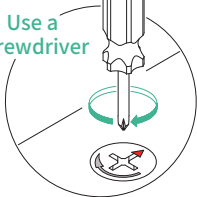

Tighten
clockwise

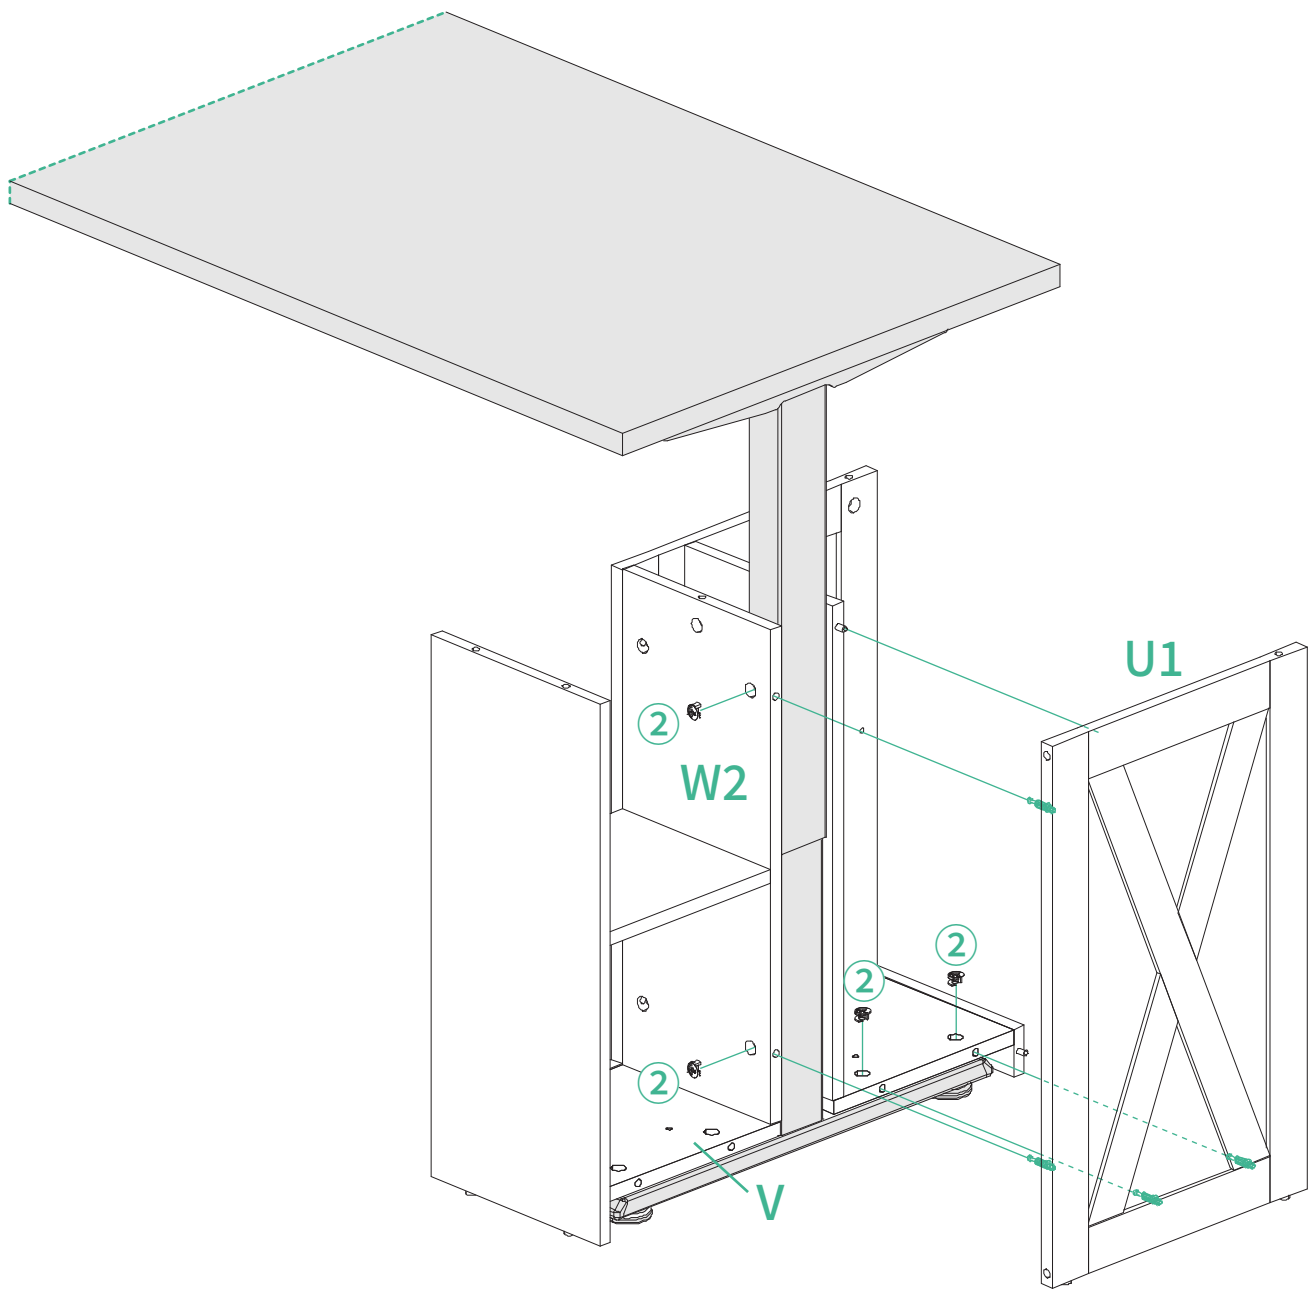 

U1
x1



2
x4

 



17
x1




Assembly Instructions

L-12


Y1 x1	
2 x2	
17 x1	

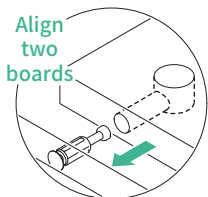 


Align two boards
Insert cam bolt

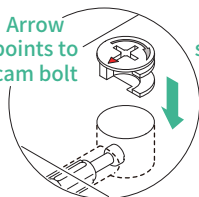 

Arrow points to cam bolt
Press cam lock

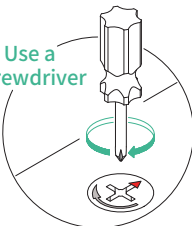 



Use a screwdriver
Tighten clockwise

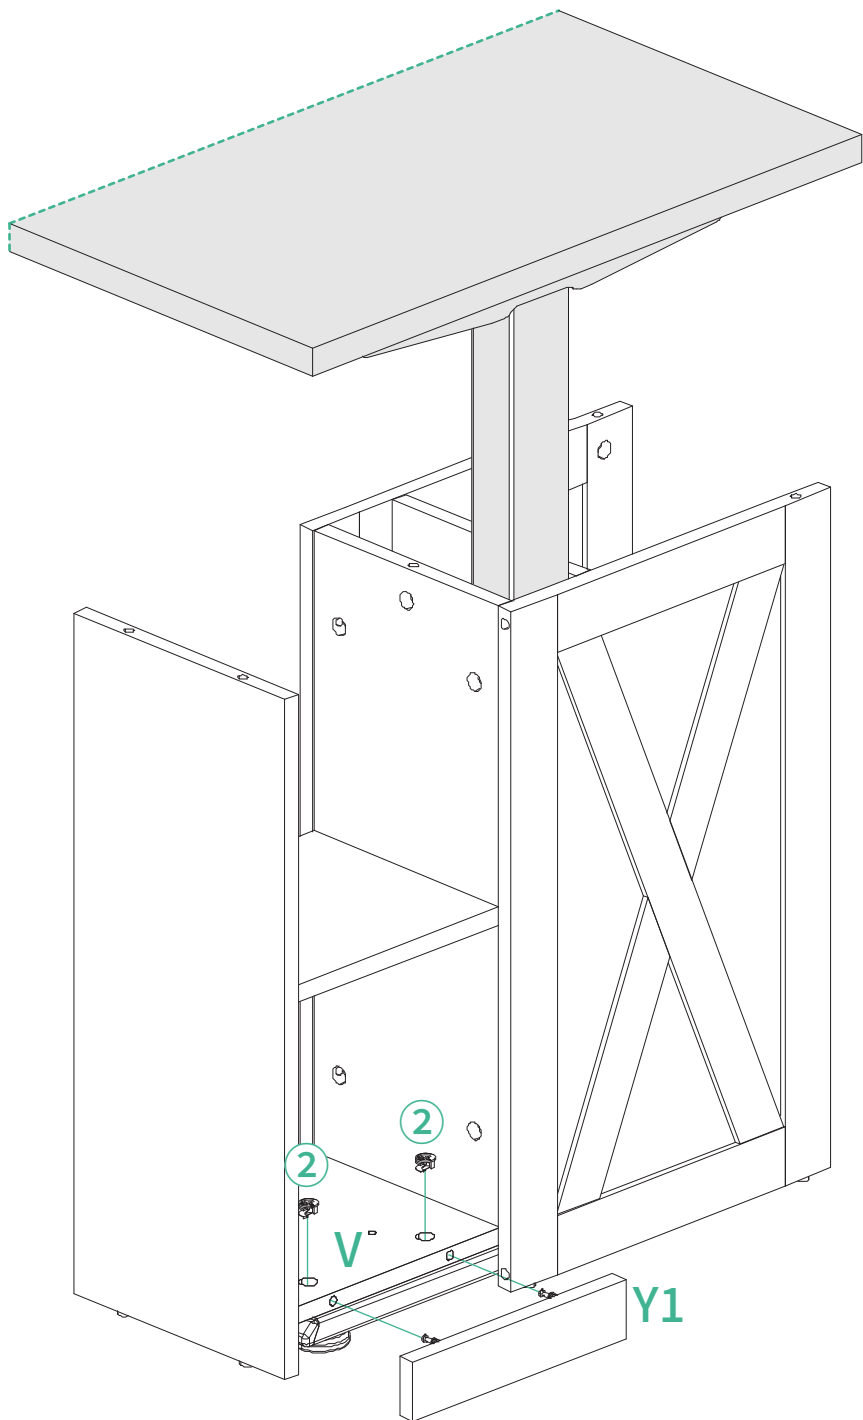 


Assembly Instructions

L-13

  
To allow for left/right assembly, Panel T include extra holes for Part ①. Please install only in the positions shown in the diagram.

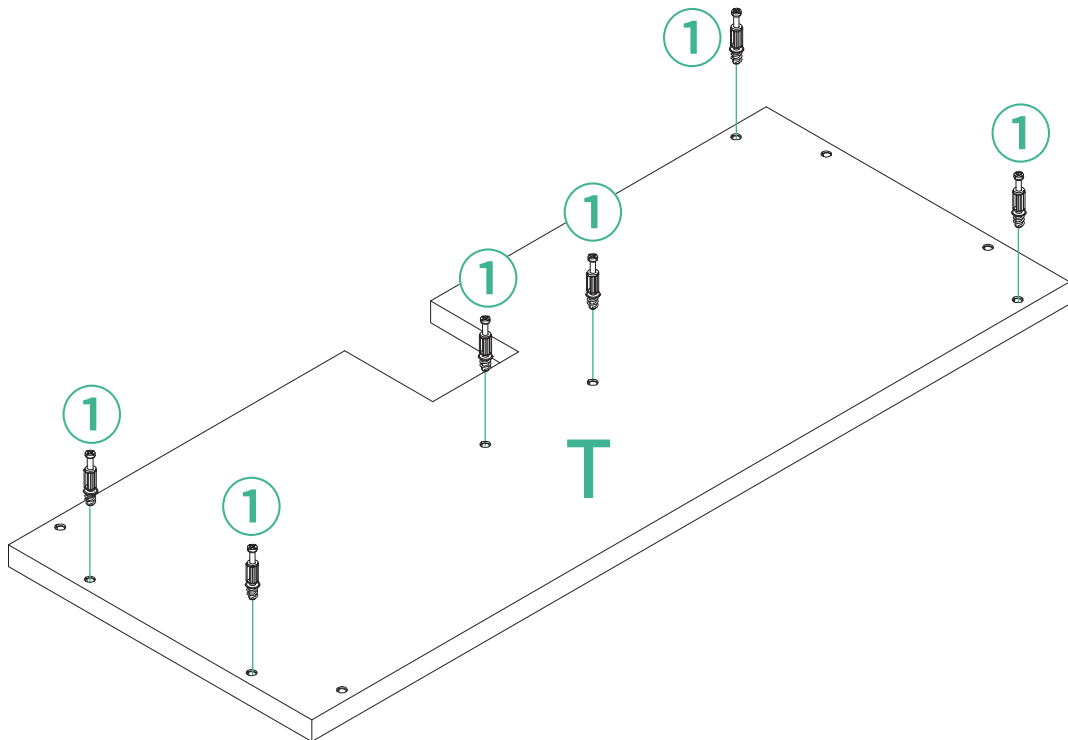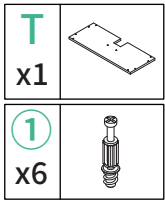


L-14

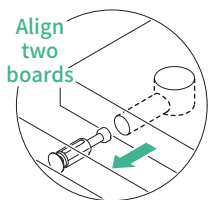 


Insert cam bolt

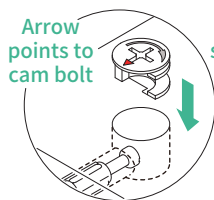 

Press cam lock

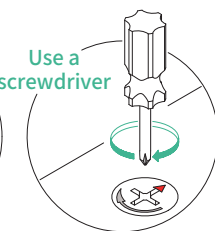 




Tighten clockwise

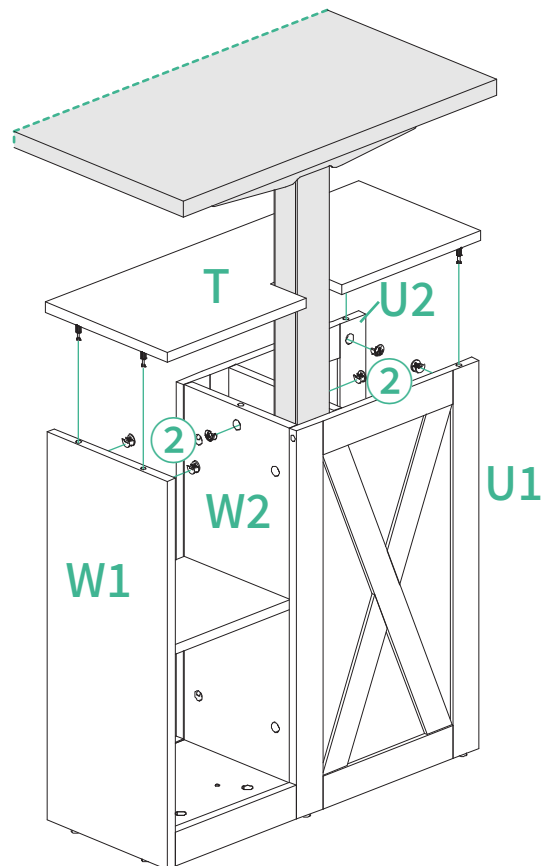 


Assembly Instructions

L-15

   Insert ⑫ into the holes at the same height on Part U1,U2 and W3, put Part F2 on ⑫.

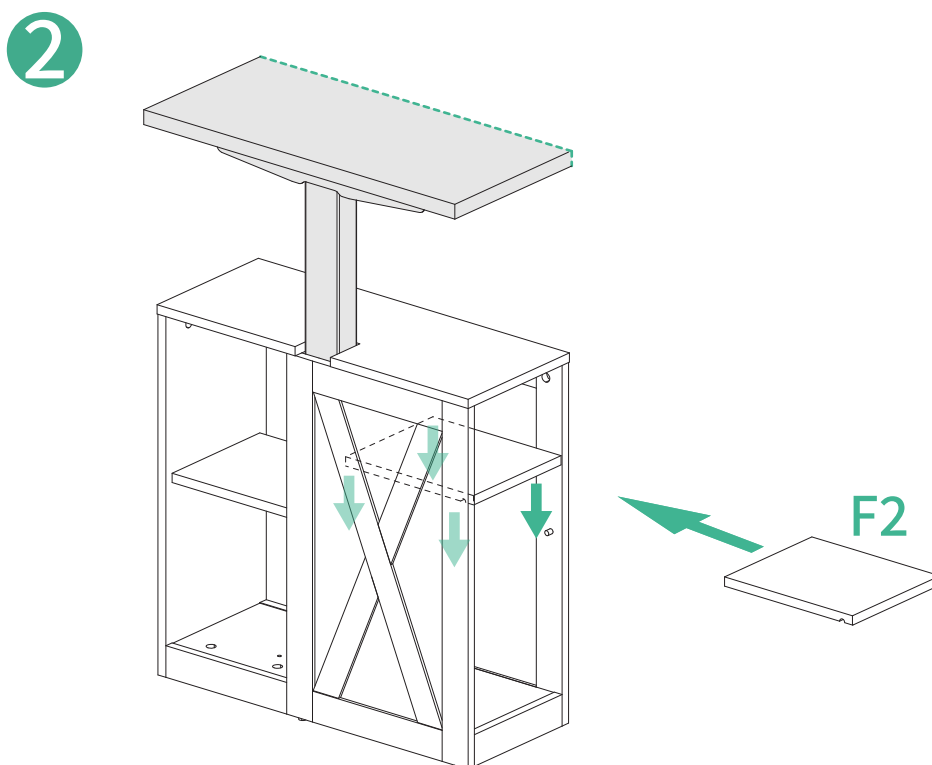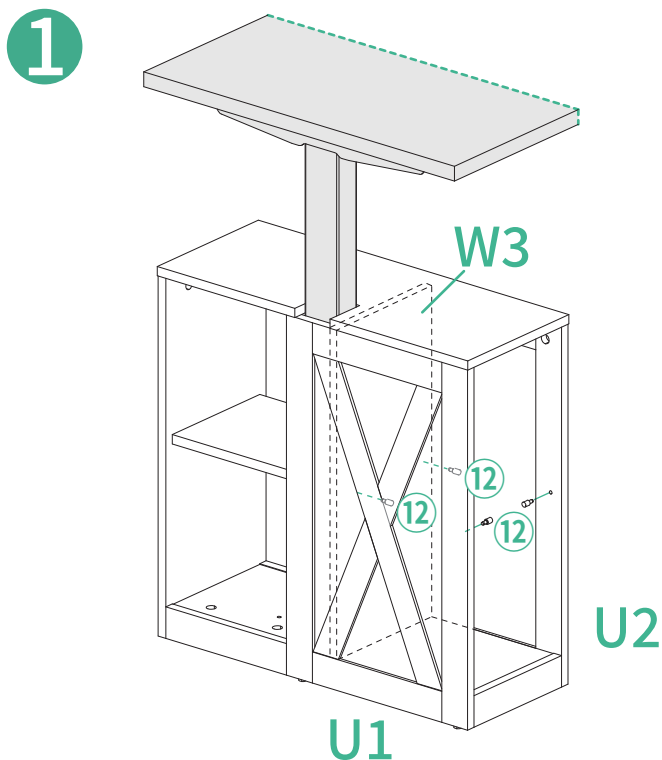

L-16

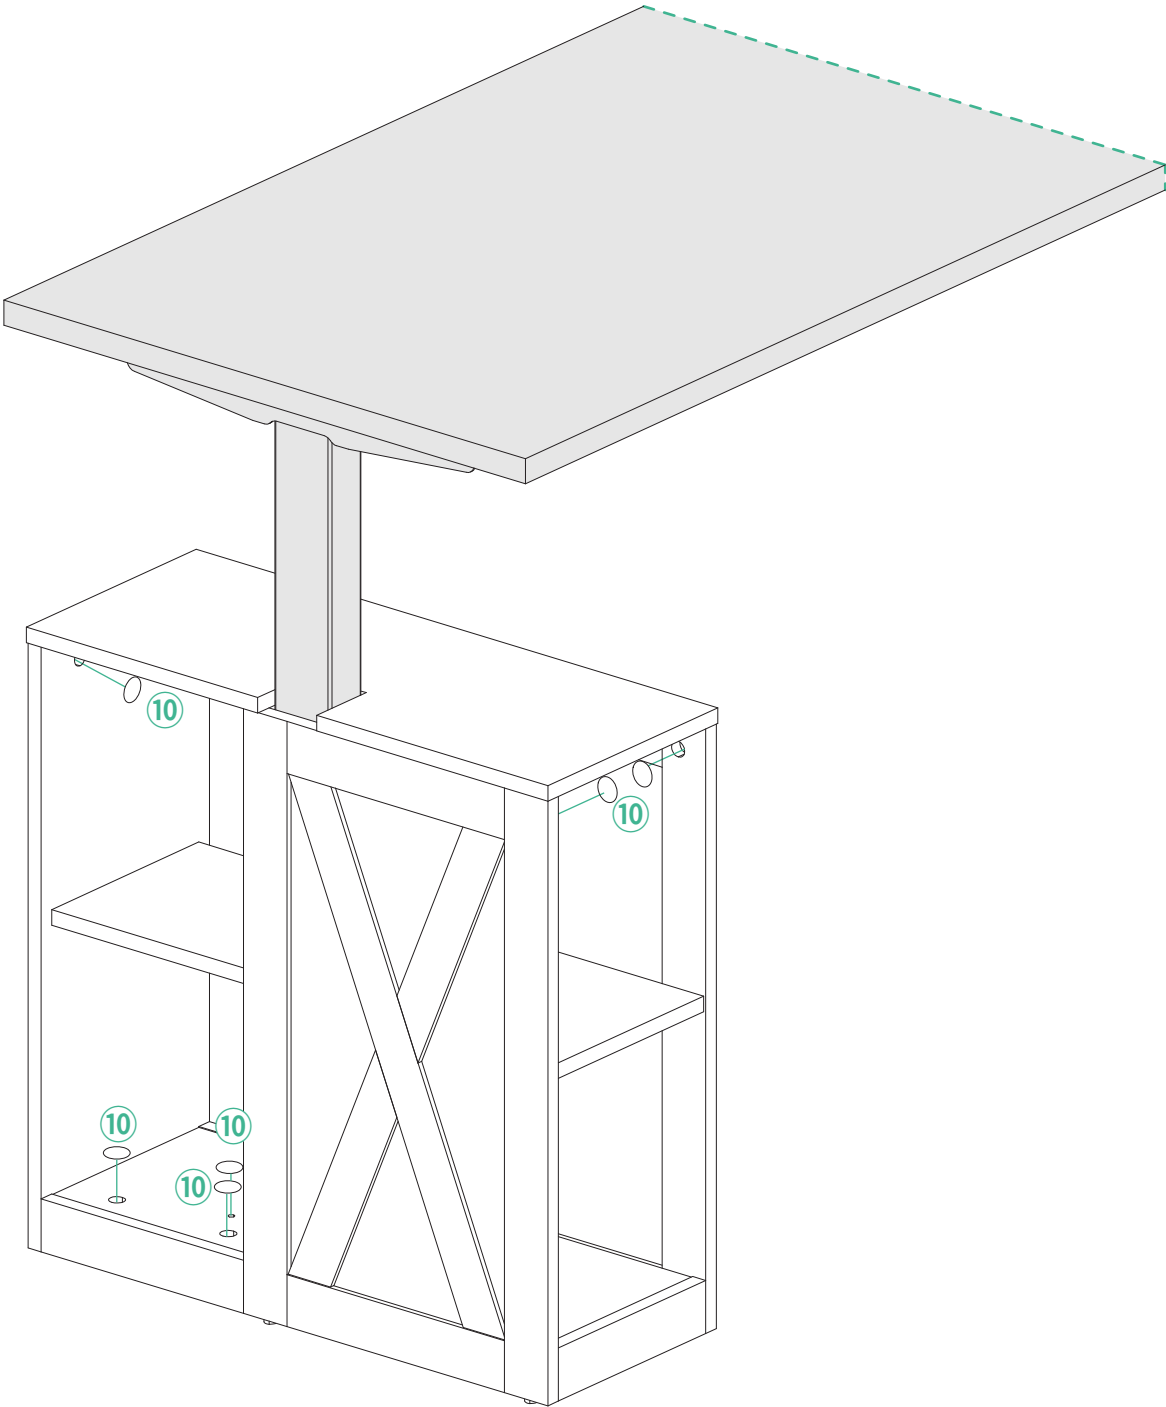 



30 DAY Return Policy

If you're not completely satisfied with your purchase, please return the merchandise via our Official Customer Support. Unused merchandise can be refunded or exchanged within 30 days of purchase.



1-Year Warranty

We guarantee your product is free from defects in product material and workmanship for one (1) year starting from the date of purchase during normal use of household conditions. If your appliance fails to operate properly within our warranty period, we will arrange a new one. Replacement is free and all shipping costs are covered.



Quick Response within 24 Hours

If you are still unable to resolve the issue you are experiencing, please contact us immediately via our support email. It doesn't matter if the product has been installed or not, our customer support team will respond within 24 hours and assist you quickly and efficiently. The most efficient way to confirm your problem to us is to attach a video, which illustrates your product issues.

Problems You May Encounter

PART	PROBLEM	SOLUTION
Whole Product	Parts are missing, defective or having wrong parts in package.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	Having issue(s) while reading the instruction or completing the assembly.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	Encountering non - human caused damage during use.	If the product is damaged due to non - human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Furniture Surface	Surface is broken, scratched or lack of some screw holes.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	The screw holes that on the board and the frame don't line up.	1. Tighten the screws only 70% of the way. Do not fully tighten the screws until all parts are aligned. 2. Adjust the board and frame until the holes align, then fully tighten all screws.
	Surface is uneven or not tight that has gaps after being assembled.	1. Loosen the screws in the uneven or gap positions; adjust until the surface is flat and tight, and then tighten the screws. 2. If your problem still can't be solved, please feel free to contact us.
Structure Frame	Components are bent, broken, chipped, rusted, or damaged.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	The furniture is unstable after being assembled.	1. Check if all screws are fully tightened. 2. Read through the manual and check if any parts are installed incorrectly or missing. 3. If the problem persists, please contact us.
	Encountering non - human caused damage during use.	If the product is damaged due to non - human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.

We are committed to providing our customers with premium
quality products and convenient customer service.

MADE IN CHINA