

COCOWEB TRU-SLIM SERIES PICTURE LIGHT

INSTALLATION INSTRUCTIONS

Rev. 3 (01/2022)

Congratulations on purchasing your new quality lighting fixture from Cocoweb. If you have any questions about these instructions or are missing any parts, please call us at 888-783-0378 or email customerservice@cocoweb.com.


COCOWEB LIMITED WARRANTY:

Cocoweb warrants its products to be made of first class materials, free from defects of materials or workmanship under normal use and to perform the service for which they are intended in a reliable and efficient manner when properly installed, for a period of two years from the date of purchase. During the warranty period, Cocoweb will, at its choice, repair or replace any part(s) which prove to be defective. Any modification or misuse of the product will void the warranty.

CARE INSTRUCTIONS:

Wipe clean with a dry microfiber cloth. DO NOT use abrasive or chemical cleaners as they may damage the finish. Do not submerge or expose to water.

WHATS INCLUDED:

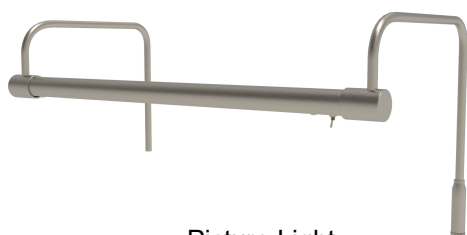

Picture Light



Adapter




Dimmer Attachment Cord




4x Channel Brackets
for Metal Frames




2x Rubber Spacers

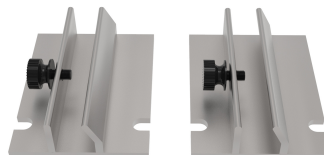

2x Mounting Brackets

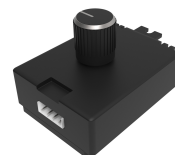

Dimmer

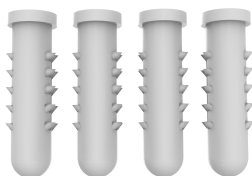

4x Drywall Anchors



4x Anchor Screws



4x Wood Screws



4x Bracket Screws

COCOWEB TRU-SLIM SERIES PICTURE LIGHT



WOOD FRAME INSTALLATION INSTRUCTIONS



STEP 1:
Mark an "X" in the center of the frame

Picture Light Size	Distance from "X"
12	5.75"
16	7.75"
21	10.25"
30	14.75"
43	21.25"


STEP 2:
Refer to the chart above for the spacing needed for the size of your light then mark an "X" that many inches from both sides of the center "X" from step 1

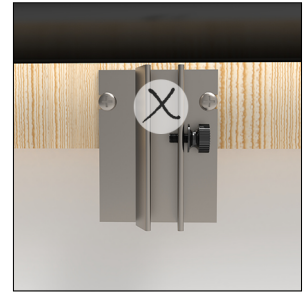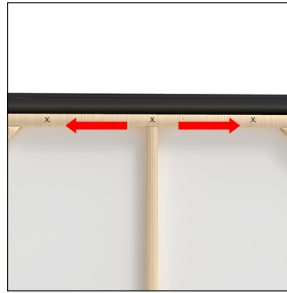


STEP 3:
Using the provided wood screws, install a mounting bracket on each outside "X" so that the X lines up with the middle of the channel




STEP 4:
Place each arm of the light over the frame and into the channel on both brackets. Tighten the thumb screw to hold the light in place

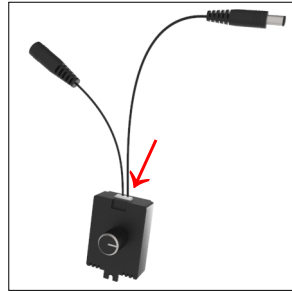

STEP 5:
Gently Insert the white connector on the dimmer adapter into the port on the dimmer. Don't force it as it is keyed to only fit one way and may need to be flipped around

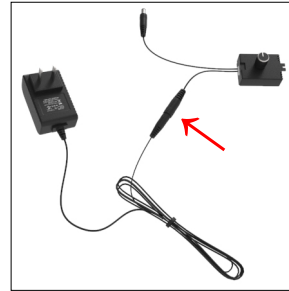

STEP 6:
Plug the connector on the adapter into the dimmer cord

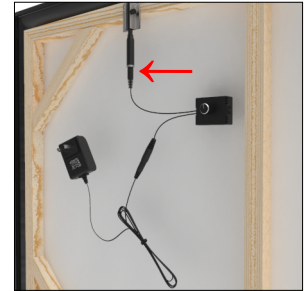


STEP 7:
Plug in the last connector on the dimmer cord into the bottom of the picture light




STEP 8:
Plug in the adapter into a wall socket



STEP 9:
Push the rocker switch on the bottom of the picture light shade away from the LED, and rotate the dimmer dial all the way clockwise to turn the light on

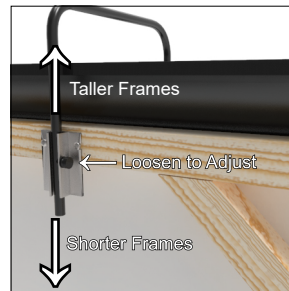


STEP 10:
Loosen the thumb screws on the mounting brackets and adjust the height. We recommend installing the light higher for tall images and lower for short frames

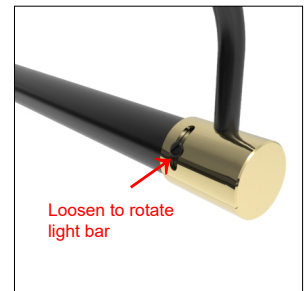

STEP 11:
Loosen the screws on each side of the light bar to adjust the direction of the light. Try to get the hard edge of light as close to the top of the painting as possible


COCOWEB TRU-SLIM SERIES PICTURE LIGHT

WALL INSTALLATION INSTRUCTIONS

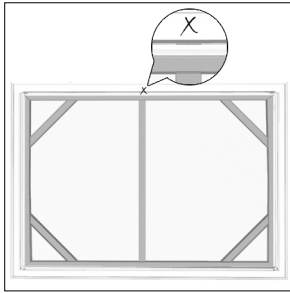


STEP 1:
Mark an "X" in the center and .25" below the top edge of where the frame will be installed

Picture Light Size	Distance from "X"
12	5.75"
16	7.75"
21	10.25"
30	14.75"
43	21.25"

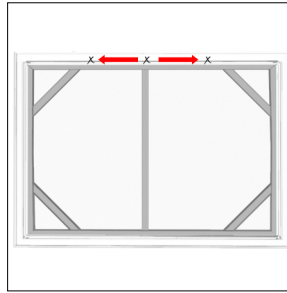


STEP 2:
Refer to the chart above for the spacing needed for the size of your picture light then use a level to mark another "X" that many inches from both sides of the center "X" from step 1

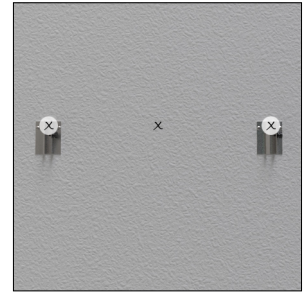


STEP 3:
Using the provided anchors and screws, install a mounting bracket on each outside "X" so that the X lines up with the top and middle of the channel




STEP 4:
Place each arm of the light into the channel on each bracket, then tighten the thumb screws to hold the light in place

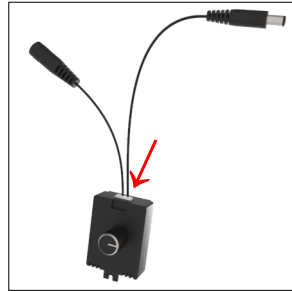

STEP 5:
Gently Insert the white connector on the dimmer adapter into the port on the dimmer. Don't force it as it is keyed to only fit one way and may need to be flipped around

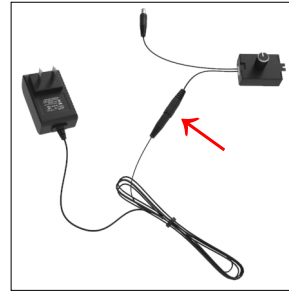

STEP 6:
Plug the connector on the adapter into the dimmer cord

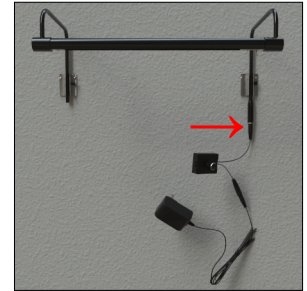


STEP 7:
Plug in the last connector on the dimmer cord into the bottom of the picture light




STEP 8:
Plug in the adapter into a wall socket and your frame is ready to be installed on top of the picture light



STEP 9:
Push the rocker switch on the bottom of the picture light shade away from the LED, and rotate the dimmer dial all the way clockwise to turn the light on

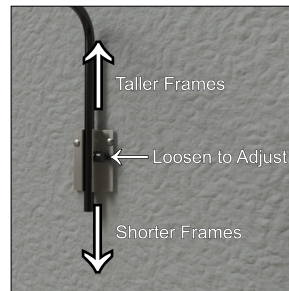

STEP 10:
Loosen the thumb screws on the mounting brackets and adjust the height. We recommend installing the light higher for tall images and lower for short frames

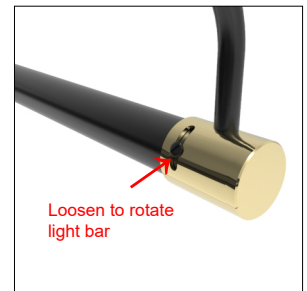

STEP 11:
Loosen the screws on each side of the light bar to adjust the direction of the light. Try to get the hard edge of light as close to the top of the painting as possible