


Entertainment Center

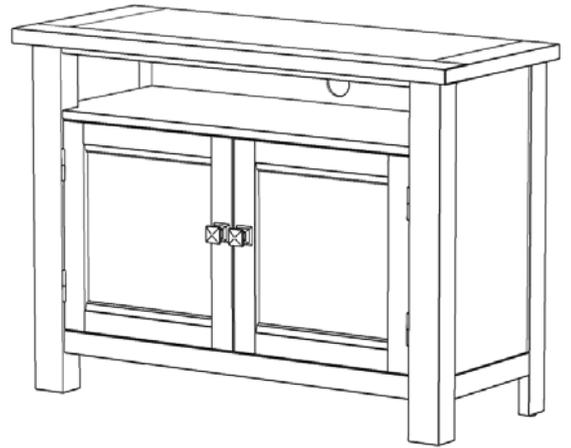


IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

Part List

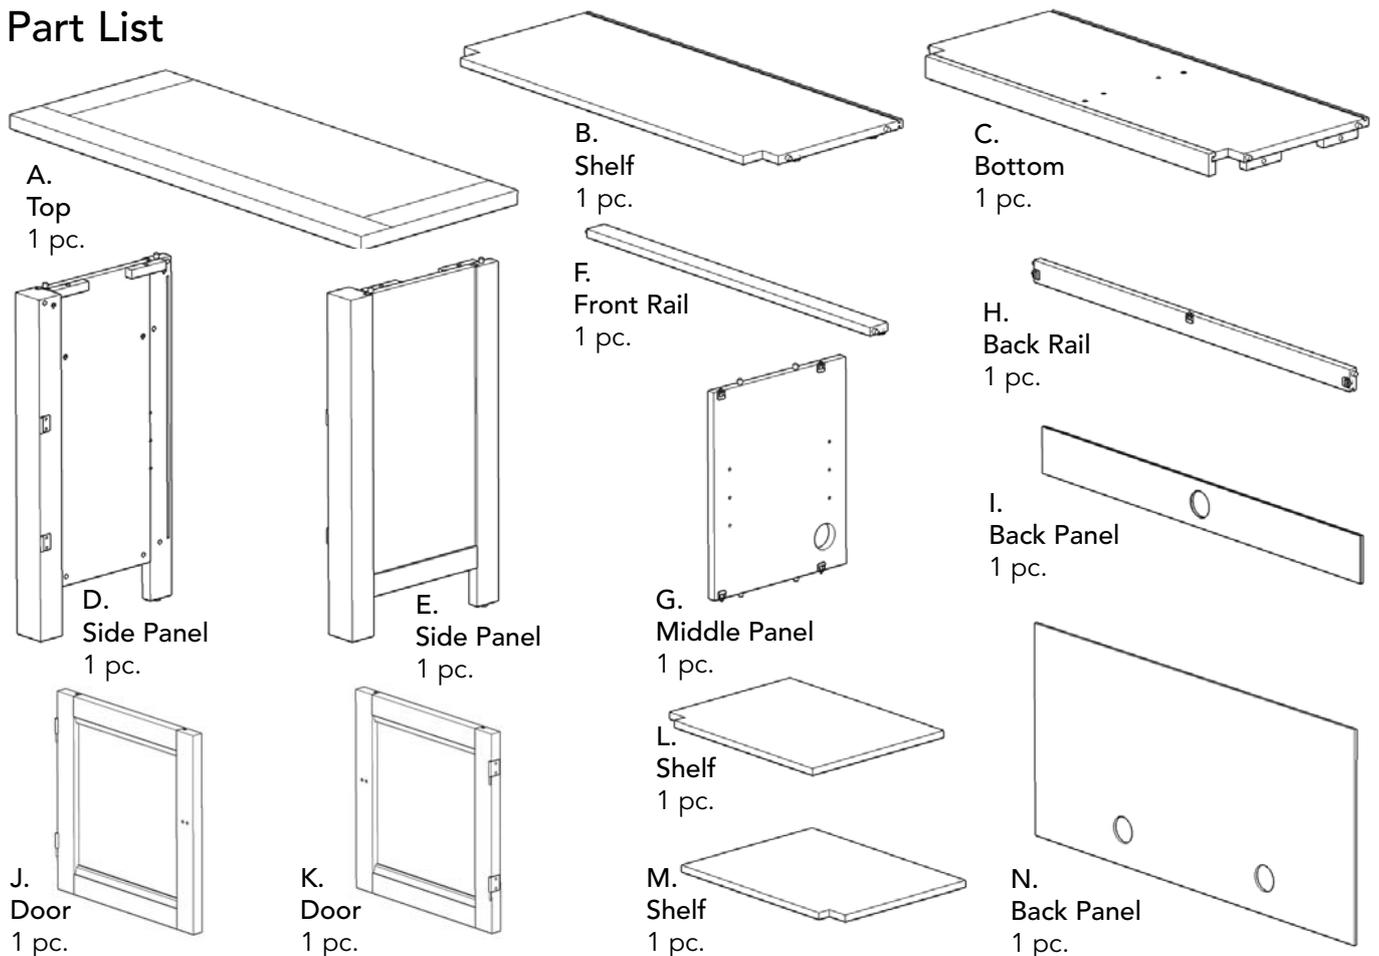

Hardware List



Tool(s) required for assembly: Phillips screwdriver, Level

Assembly Instructions 2/5

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench in a safe place as the bolts may need to be tightened up in the future.

STEP 1

Attach Magnets to Shelf (B) with Wood Screws. (See Figure 1)

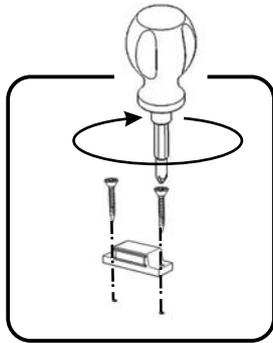
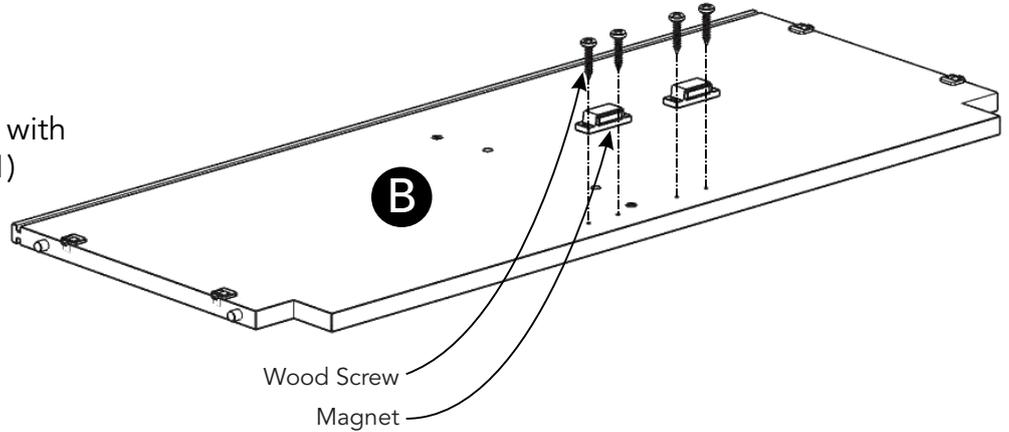


Figure 1

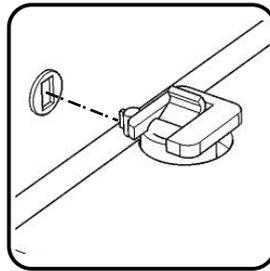


Figure 2


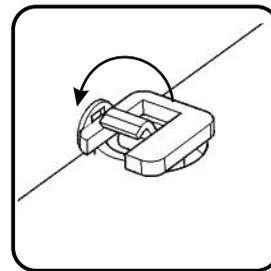


Figure 3

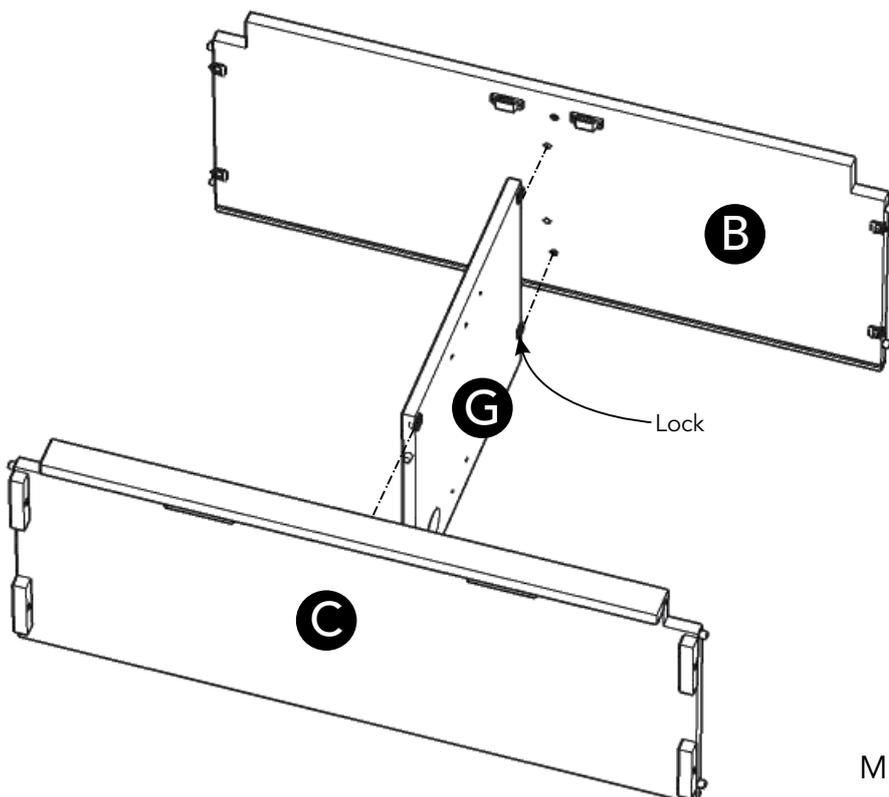

STEP 2

Attach Bottom (C) and Shelf (B) to Middle Panel (G), then flip the locks. (See Figures 2 and 3)

STEP 3

Attach Side Panel (E) to unit with Flat Washers, Spring Washers and Head Cap Bolts, then flip the locks. (See Figure 4)



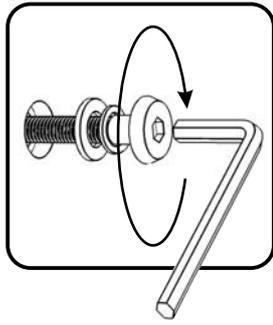


Figure 4

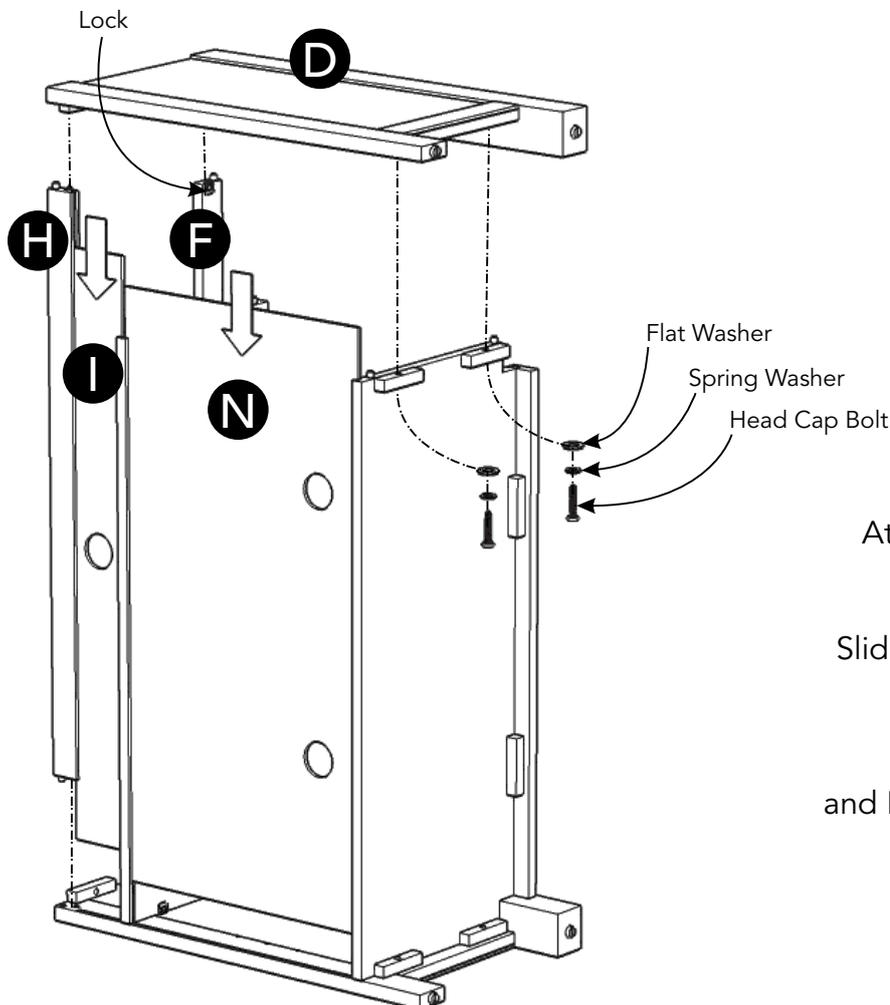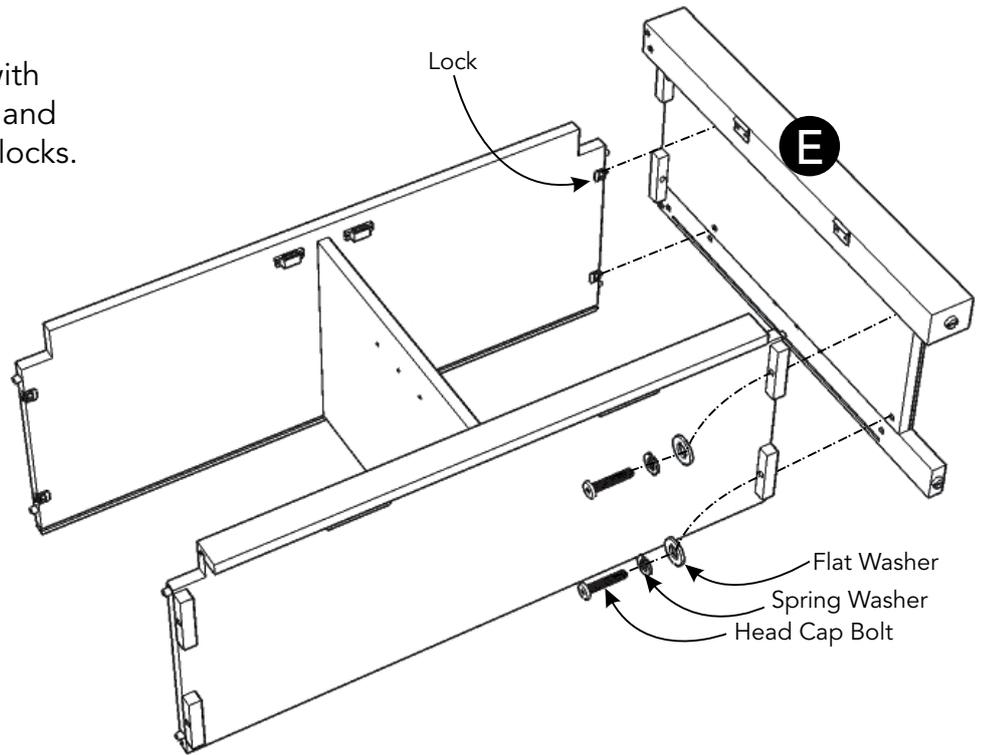

STEP 4

Attach Front Rail (F) and Back Rail (H) to unit, then flip the locks.

Slide Back Panels (I) and (N) into place.

Attach Side Panel (D) to unit with Flat Washers, Spring Washers and Head Cap Bolts, then flip the locks.

Assembly Instructions 4/5

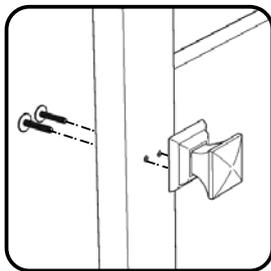
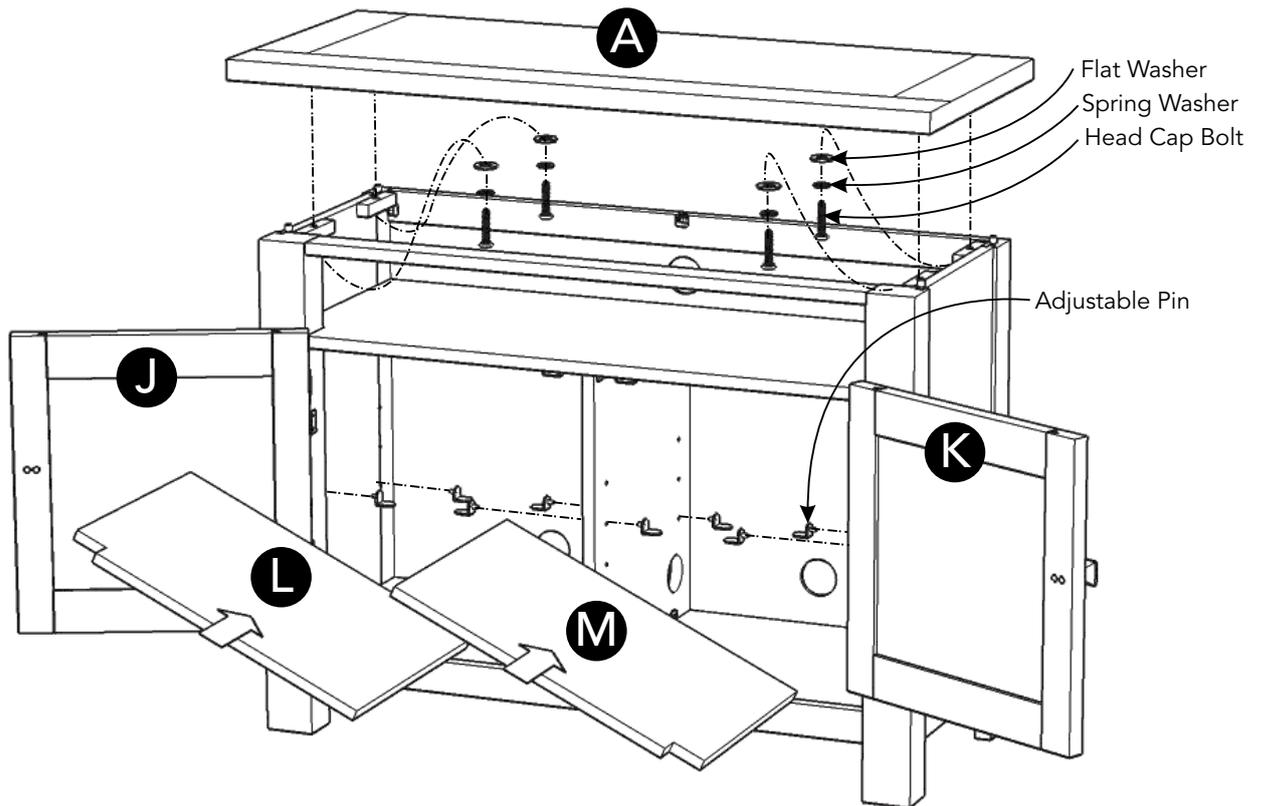


Figure 5

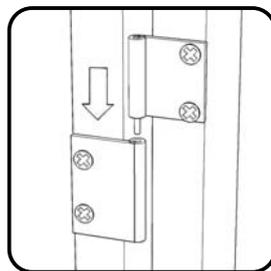


Figure 6

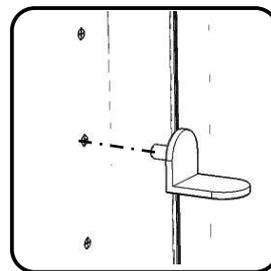


Figure 7

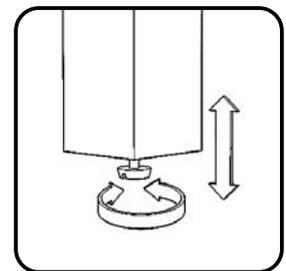


Figure 8

STEP 5

Attach Top (A) to unit with Flat Washers, Spring Washers and Head Cap Bolts, then flip the lock.

Attach Knobs to Doors (J) and (K) with Machine Screws. (See Figure 5)

Attach Doors (J) and (K) to unit by sliding the door lift hinges into the side panel lift hinges. (See Figure 6)

Insert Adjustable Pins into middle panel and side panels at the desired level. (See Figure 7)

Place Shelves (L) and (M) into position.

Level the unit by adjusting the adjustable levelers on the bottom of legs. (See Figure 8)

Note: Unit must be level to work properly.

Assembly Instructions 5/5

IMPORTANT

- To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

STEP 6

Drill a 3/8" hole in wall in-line with the pre-drilled hole at top of unit.

Move unit.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.

Attach Bracket at pre-drilled hole at top of unit with Wood Screw.

Move unit back into place.

Slide Tipover Restraint through Bracket on wall and Bracket on unit. (See Figure 9)

Put tie end of Tipover Restraint into lock end of Tipover Restraint and pull until tight.



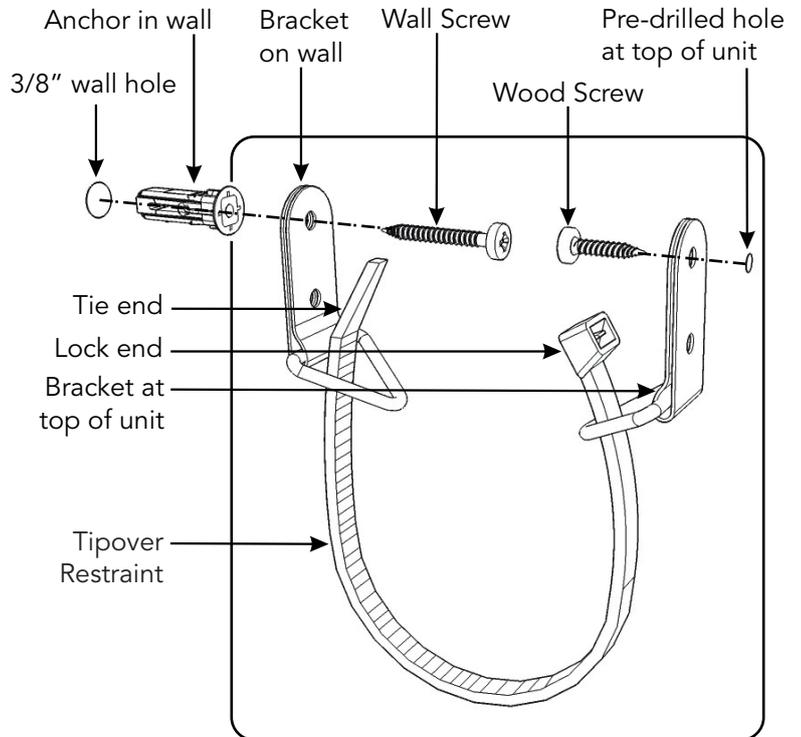



Figure 9

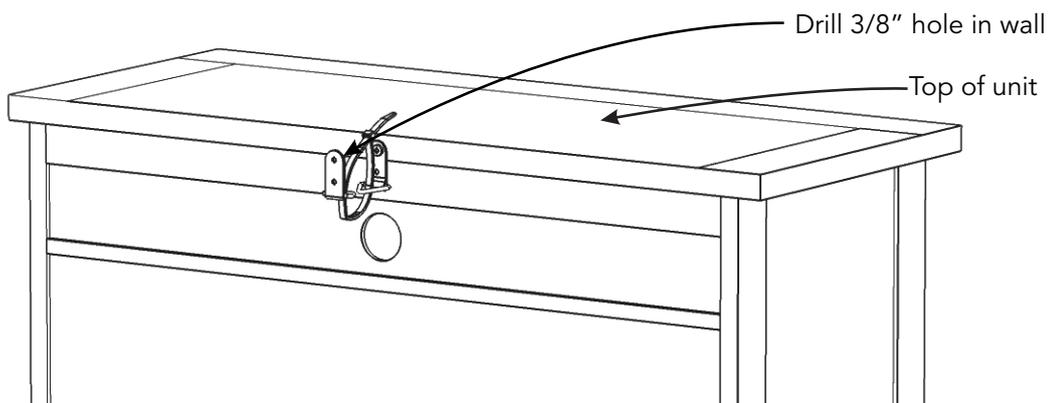

Hardware List

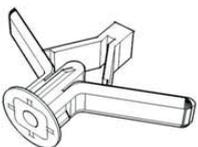

Anchor
1 pc. (+1 extra)

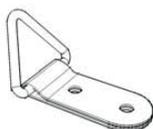

Bracket
2 pcs. (+1 extra)



Tipover Restraint
1 pc. (+1 extra)



M3.5x40
Wall Screw
1 pc. (+1 extra)



M3.5x16
Wood Screw
1 pc. (+1 extra)

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.
**PREVENT
CRACKING**




Do not place
in direct sunlight.
**PREVENT
FADING**



Do not write
directly on surface.
**PREVENT
MARKING**



Do not place hot
objects on surface.
**PREVENT
FINISH DAMAGE**

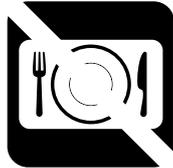

Do not use rubber
based placemats.
**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.
**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.

