



ATTENTION

- To prevent misalignments, leave the screws loose and do not tighten them until they are all in their proper positions.
 - Do not fully tighten all bolts and screws until the entire unit has been assembled and set up.
 - Avoid overtightening or forcing the screws to prevent them from breaking, stripping, or damaging the threads of the holes.
 - Ensure you use the correct size of screws for each part to prevent damage to the screw or the part.
 - Lubricate all moving parts and tighten all bolts/screws every 6 months or as needed.
 - Do not use the product if any parts are damaged, broken, or missing.
-