



Remote control

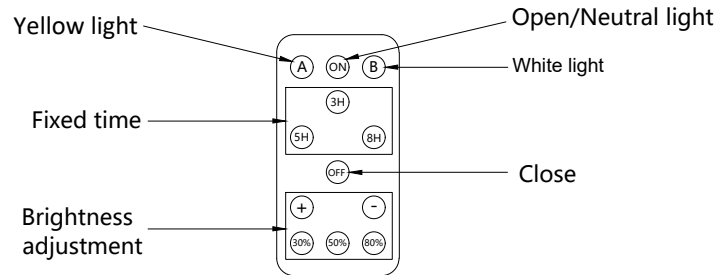

NOTE:

Remove the transparent insulation sheet on the remote control before using for the first time.

- 1*User Manual
- 2*Gasket
- 2*Screw
- 4*Expansion bolt
- 1*Remote control
- 1*Postlight

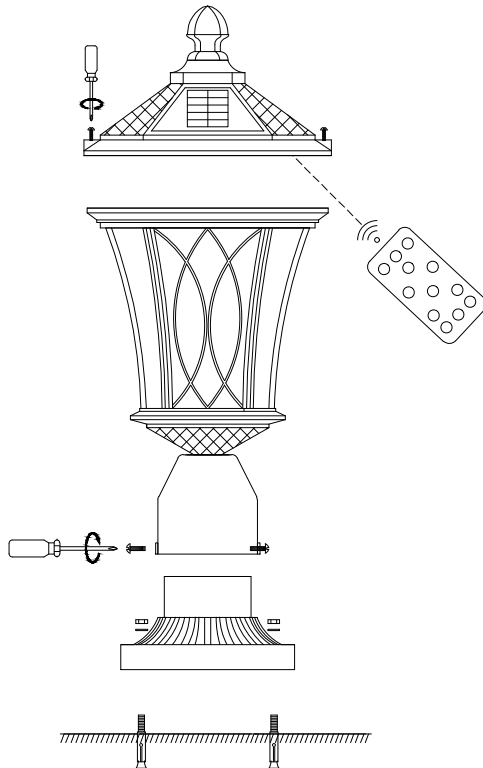

INSTRUCTIONS

Finish lamp installations according to below instructions

1. Install the explosion screw to the corresponding position of the post.
2. Fix the lamp with explosion screws.
3. When first time using after received, please make sure the solar panel exposed to direct sunlight that the light fixture can be full charged by solar power for at least 8-10 HOURS . Without sufficient solar power in daytime the fixture will not come on at night.
4. After full charged the light can be set on by remote control, use manual as below:
 - (1) Remove the transparent insulation sheet on the remote control before use.
 - (2) **【ON】** ——Turn on the light; **【OFF】** ——Turn off the lights.
 - (3) **LED COLOR OPTIONS: 【A】** ——Yellow light; **【B】** ——White light
 - (4) **BRIGHTNESS OPTIONS: 【30%】 【50%】 【80%】**
【+】 【-】 for manual brightness adjustment
 - (5) **LIGHTING TIME: 【3H】 【4H】 【8H】** (eg, **【3H】** means automatically turn off after 3hours of lighting) .
 - (6) Adjust the required light color/brightness/timing, and the system will save it automatically.

NOTE:

1. Please align the remote controller with the lamp within the effective distance(5m-8m) for debugging.
2. In order to maximize the lighting effect, please install the light in direct sunlight and away from the shade caused by trees, buildings, etc.

