 
 
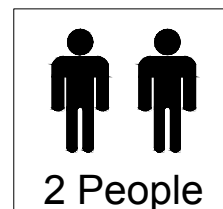 
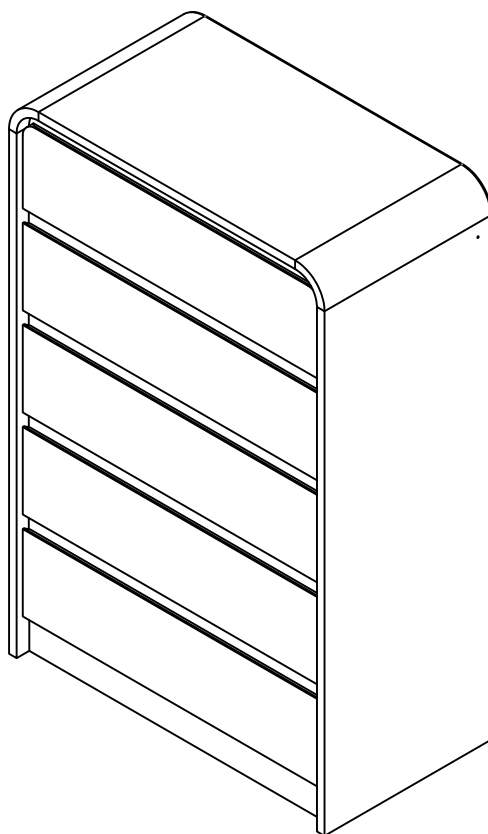 


ASSEMBLY INSTRUCTIONS

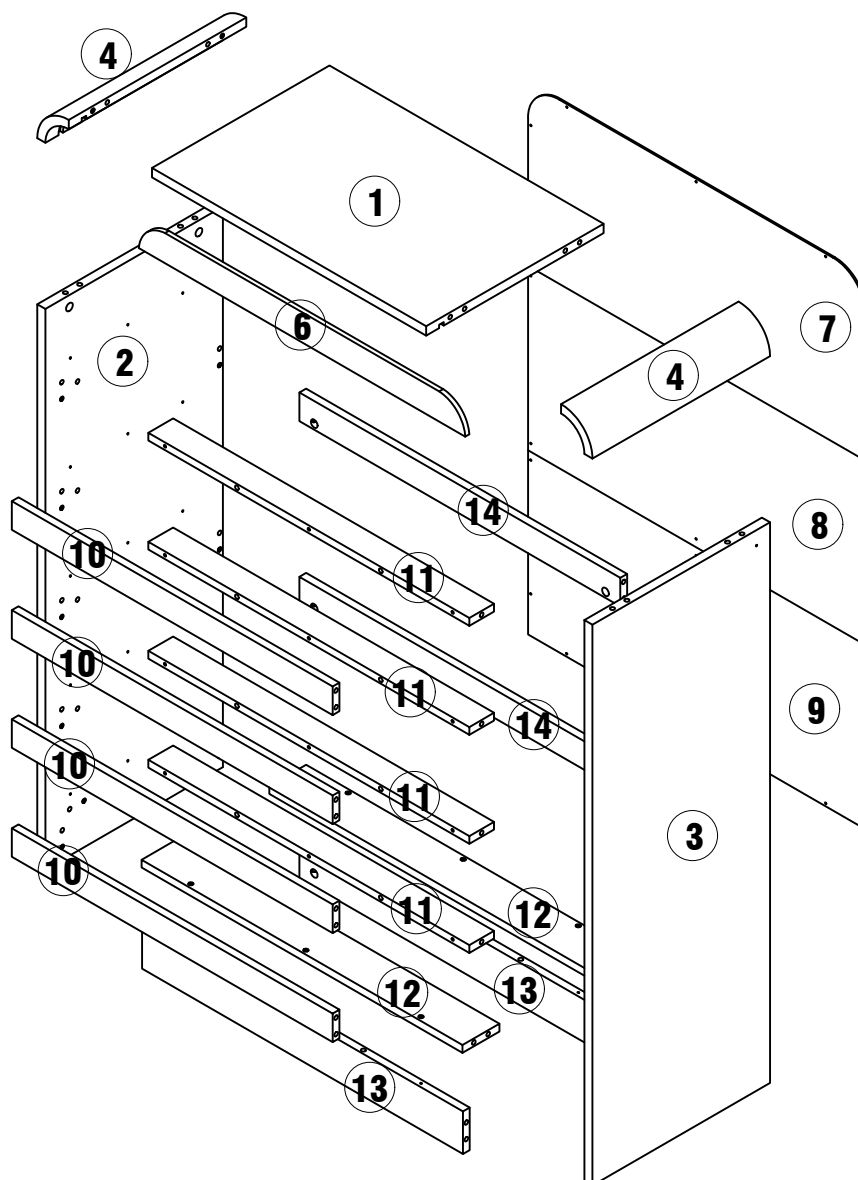







PACKAGE INCLUDE

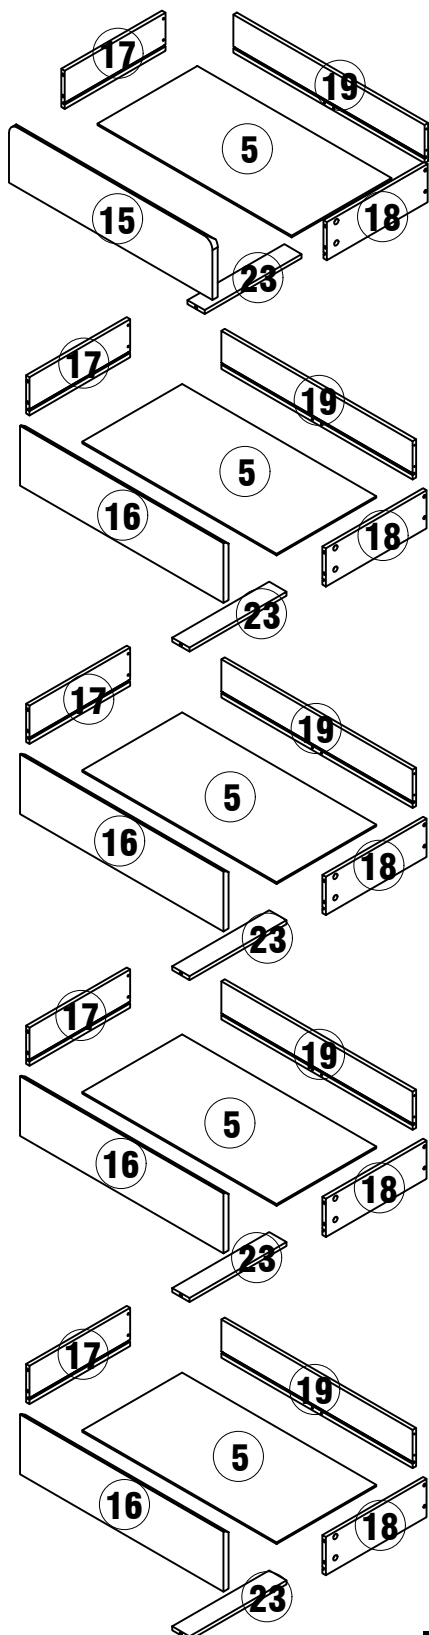


PACKAGE INCLUDE

CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Left Side Panel	1
3	Right Side Panel	1
4	Bent Wood Board	2
5	Drawer Bottom Panel	5
6	Upper Front Strip	1
7	Upper Back Panel	1
8	Middle Back Panel	1
9	Lower Back Panel	1
10	Front Vertical Panel	4
11	Front Crosspiece	4
12	Bottom Crosspiece	2
13	Bottom Vertical Panel	2
14	Rear Vertical Panel	2
15	Upper Drawer Top Panel	1
16	Lower Drawer Top Panel	4
17	Drawer Left Side Panel	5
18	Drawer Right Side Panel	5
19	Drawer Back Panel	5
23	Drawer Bottom Strip	5

      
PACKAGE CONTENT

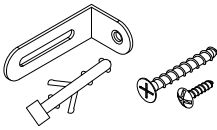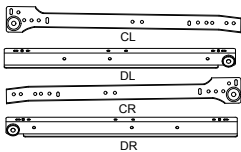Ø8X30MM  A 48X+2	Ø3X12MM  B 60X+2	Ø4X35MM  C 30X+2	 D 8X+1
Ø3.5X12MM  F 22X+1	Ø15X12MM  G 8X+1	 H 2X	 J 45X+2
Ø15X10MM  K 45X+2	 L 5X	 M 2X	Ø4X40MM  N 18X+1

 
How to use the cam lock system

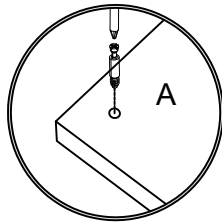

 
1. Screw cam bolt into panel

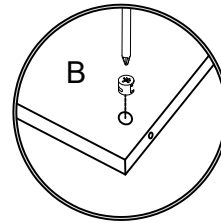

 
2. Push cam into panel - arrow feature on cam top points to panel edge

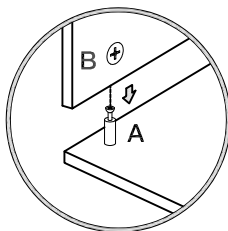

 3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

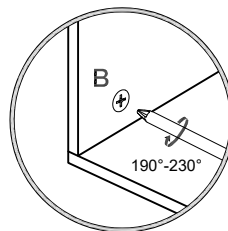


 4. Rotate cam(s) clockwise 190°-230° to lock panels together

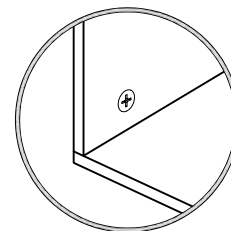

5. Panels should be tight against each other and connection should be rigid


 
Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

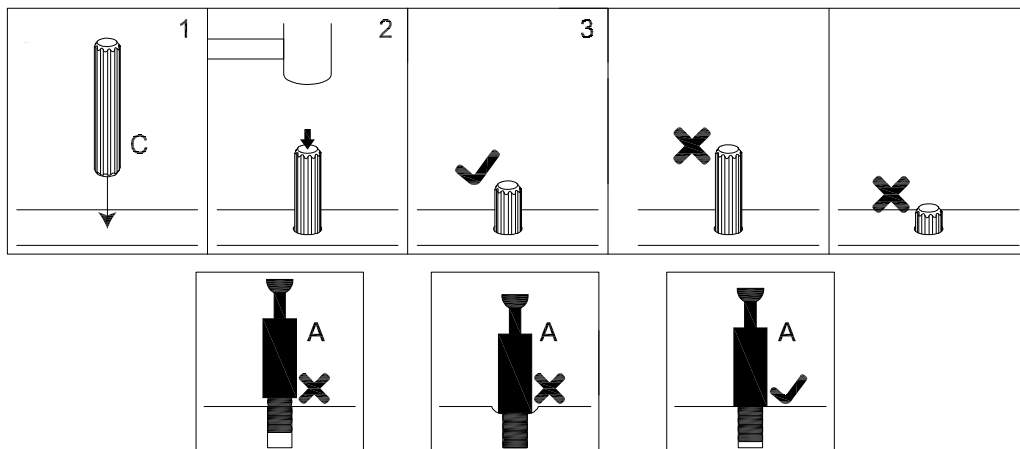


⚠ WARNING

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

 
 
STEP 1


	
A	N
X8	X12

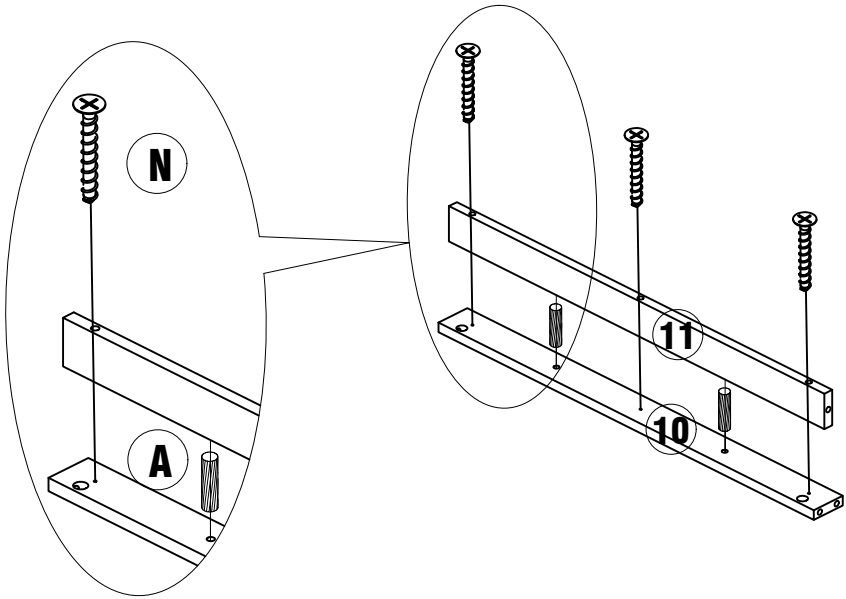 

X4

 
 
STEP 2

	
A	N
X4	X6




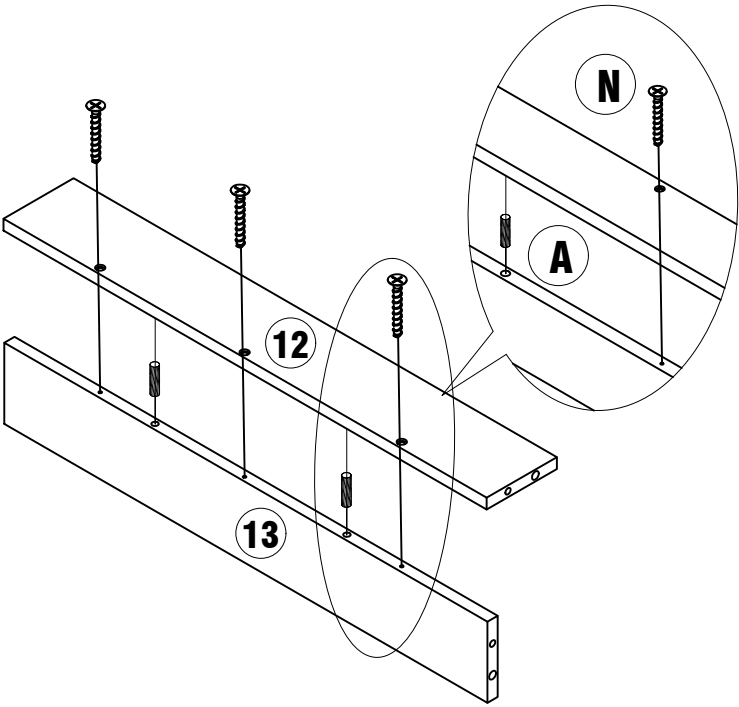 


X2

  STEP 3

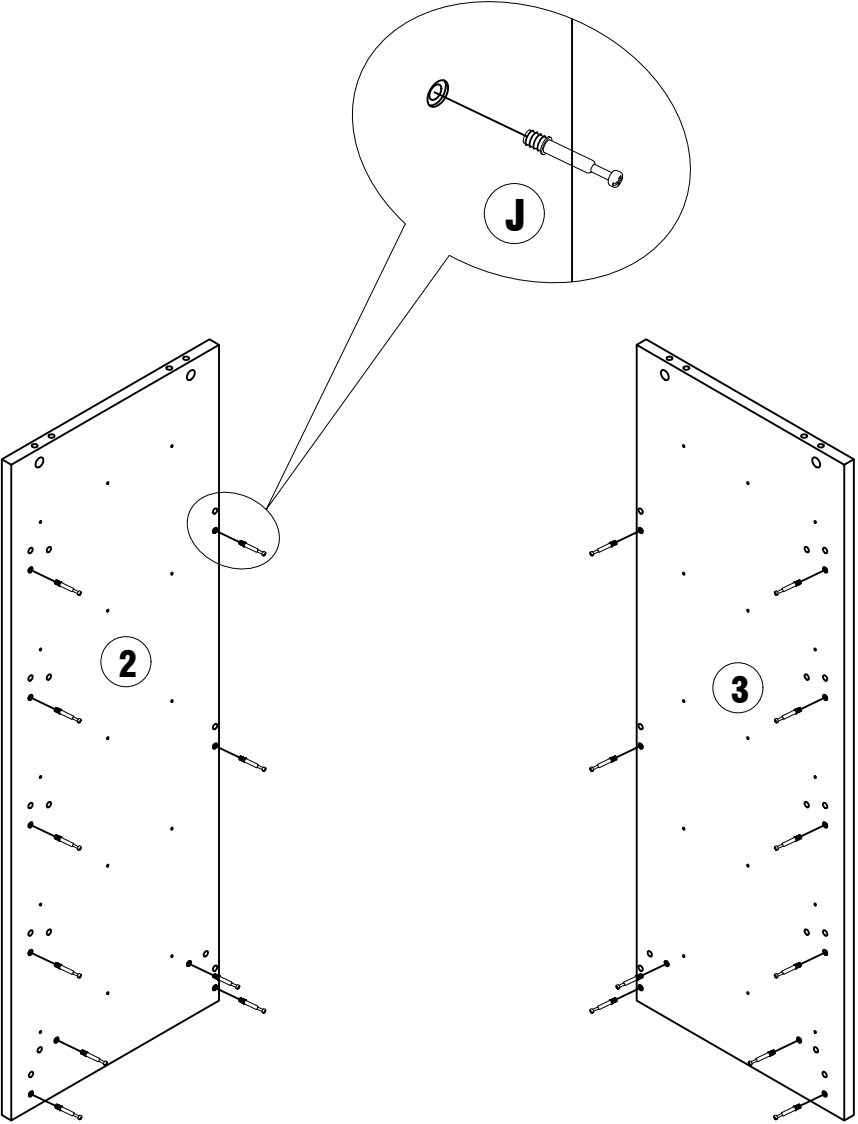
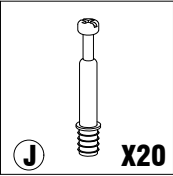


    STEP 4

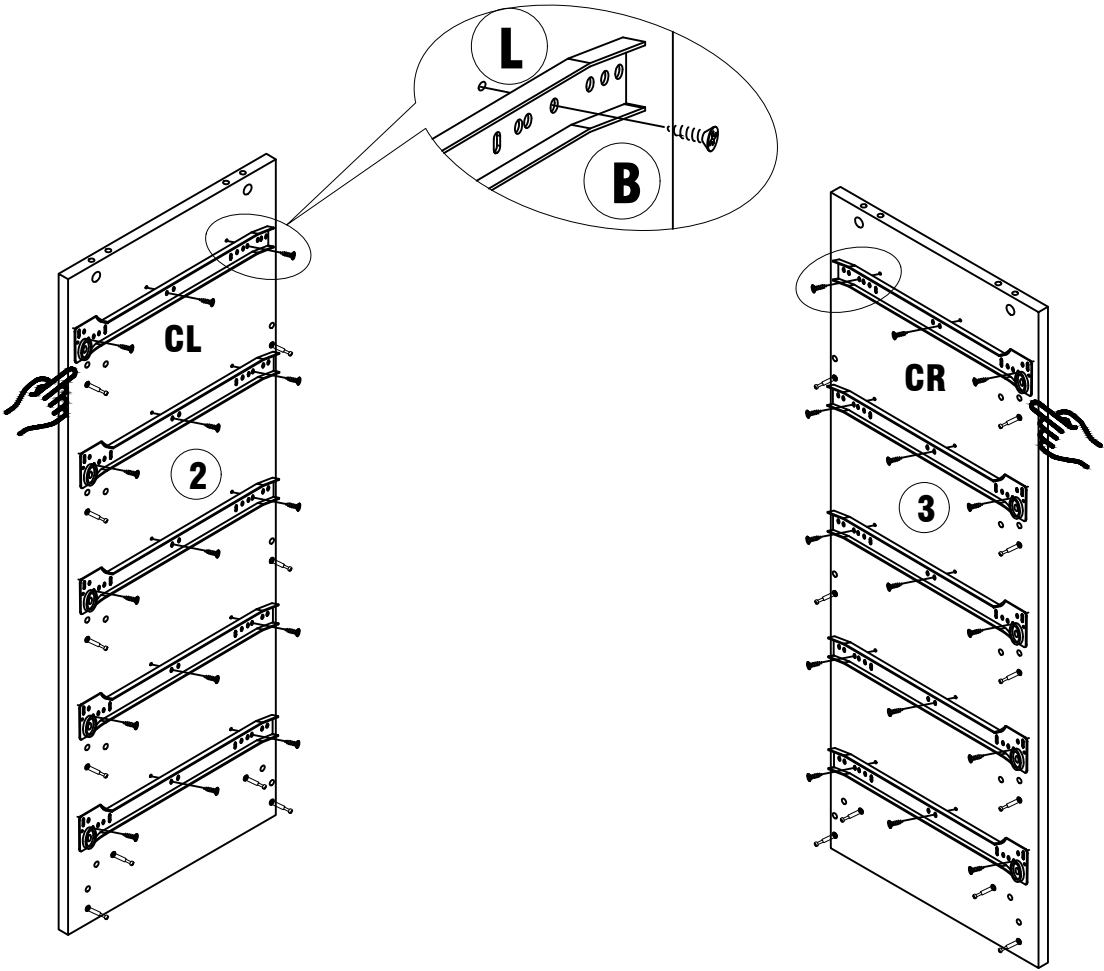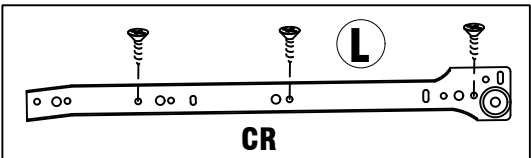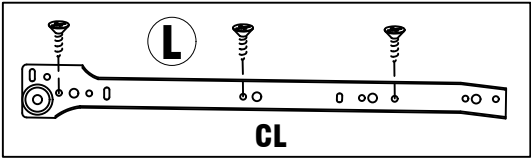
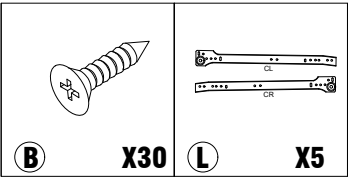


STEP 5


	
A	K
X28	X20

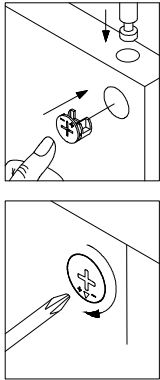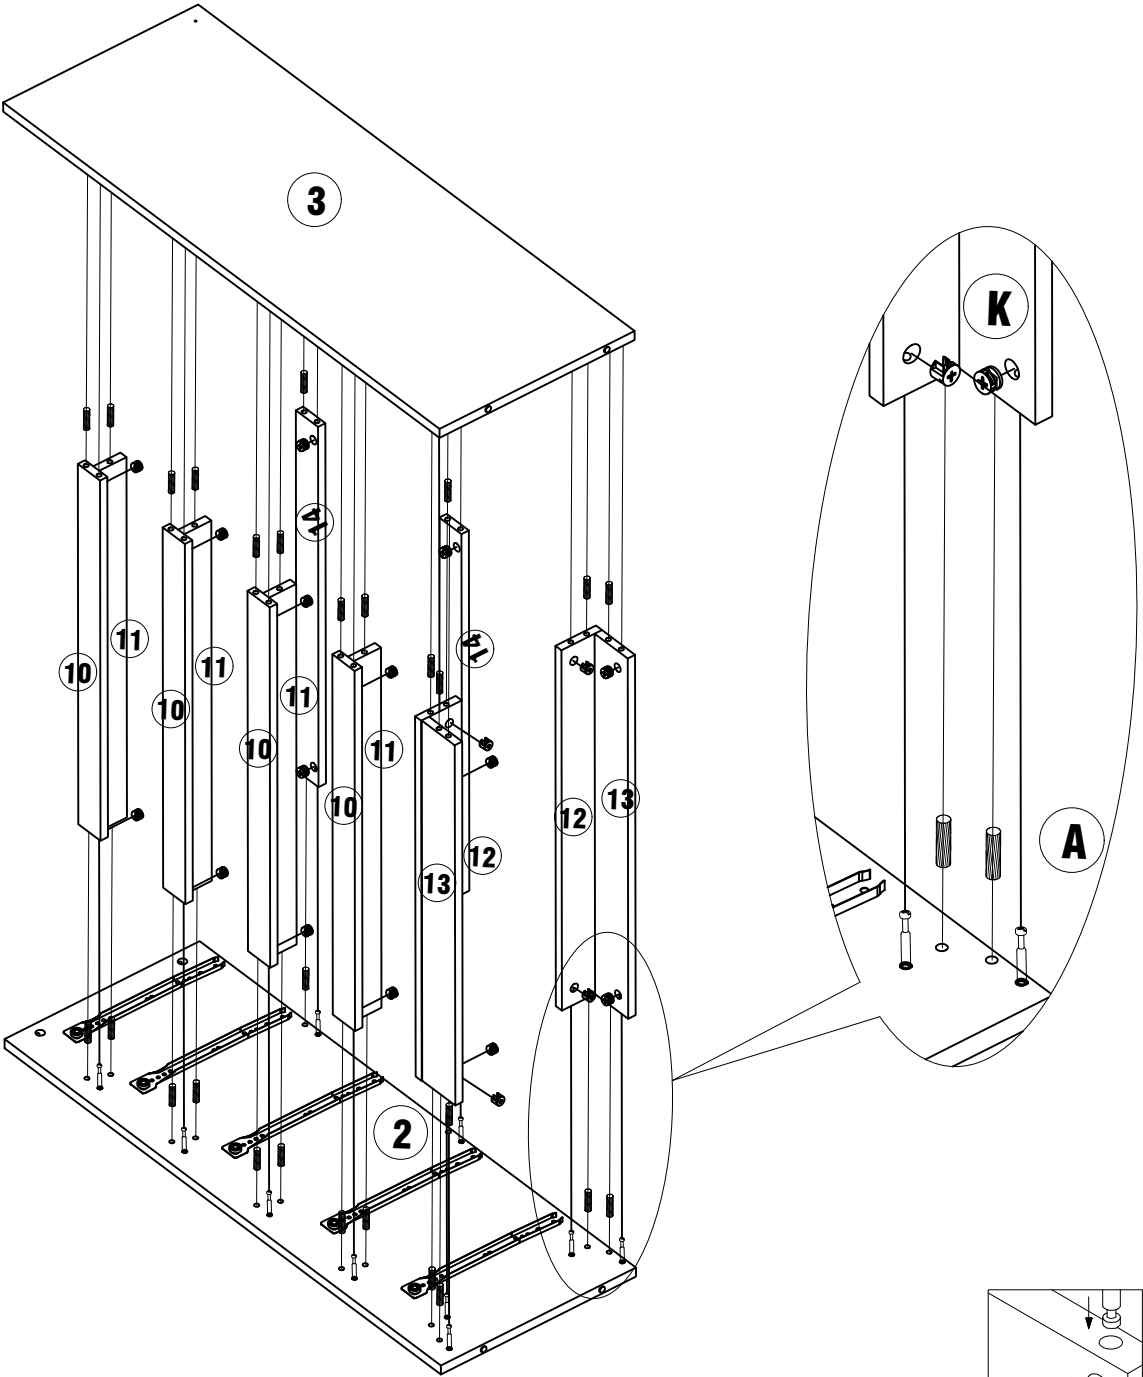  

  
STEP 6

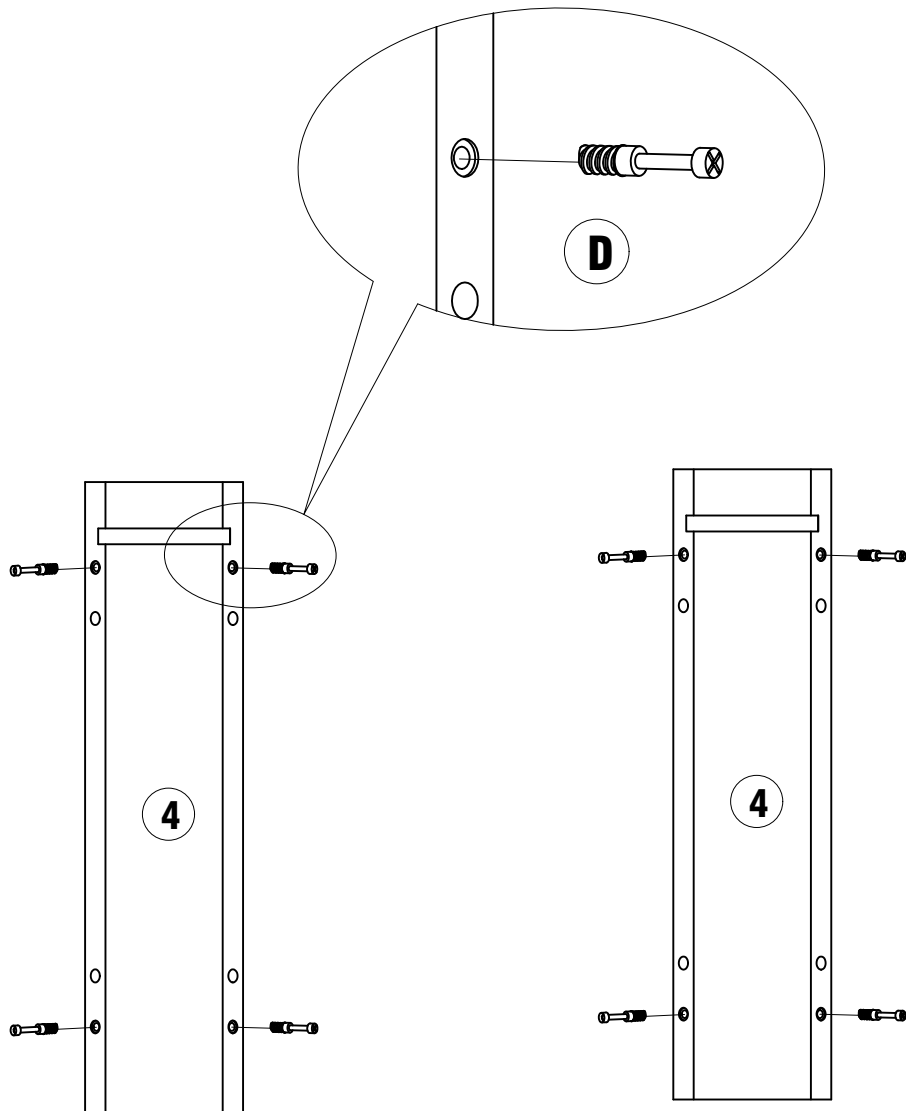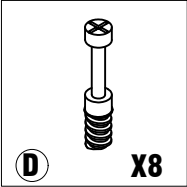


 
STEP 7

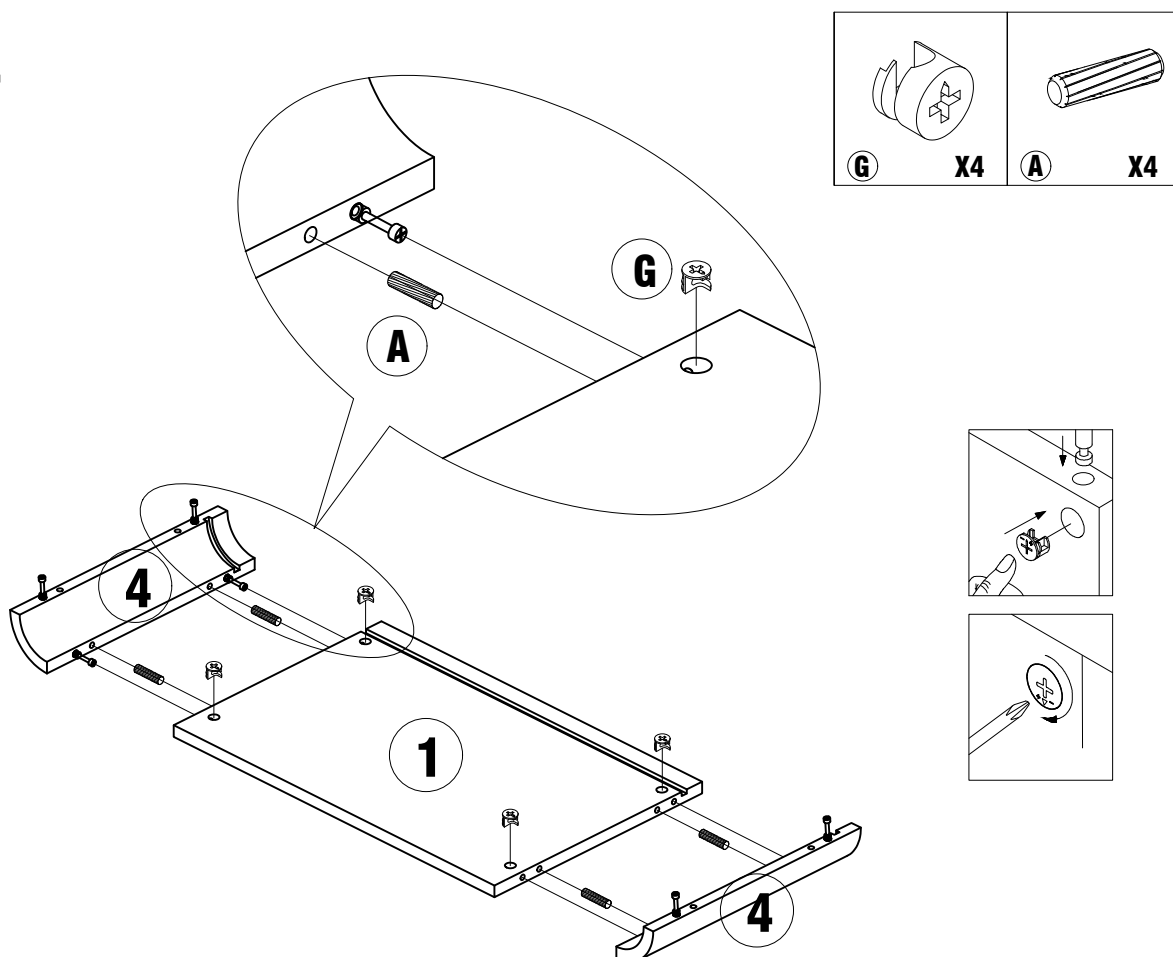




 
STEP 8

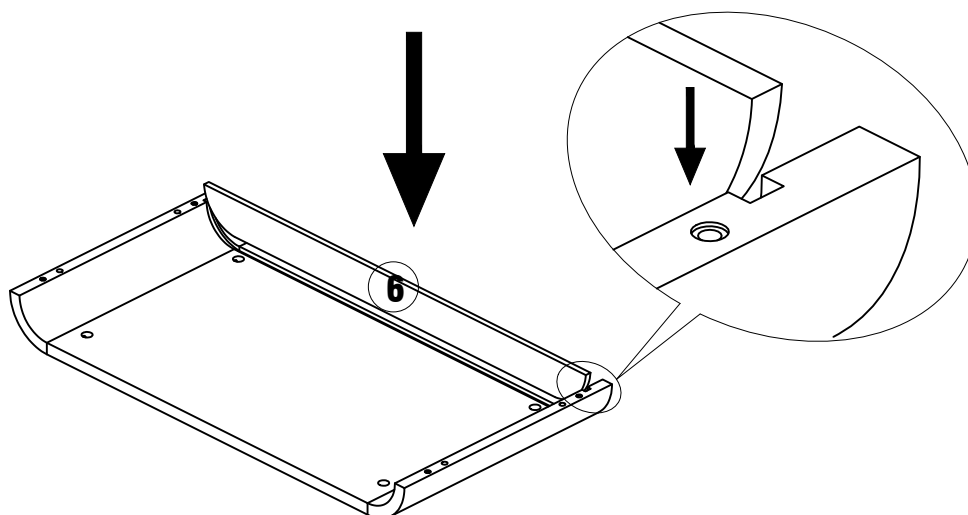

  STEP 9

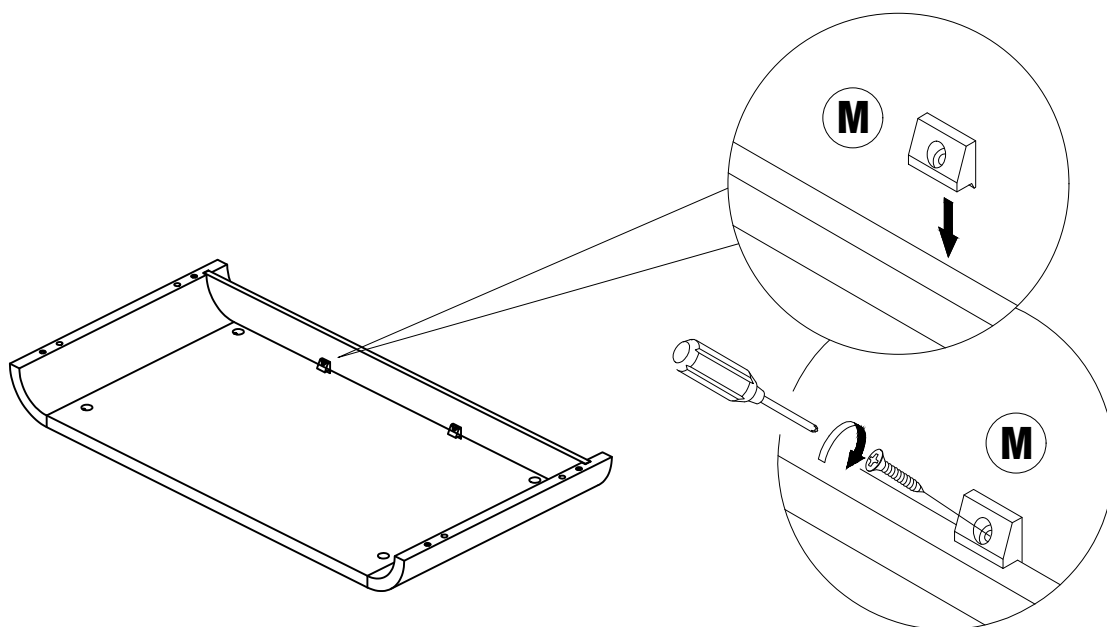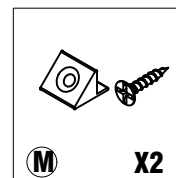

    STEP 10

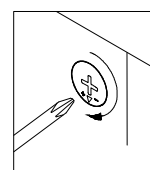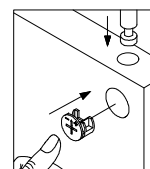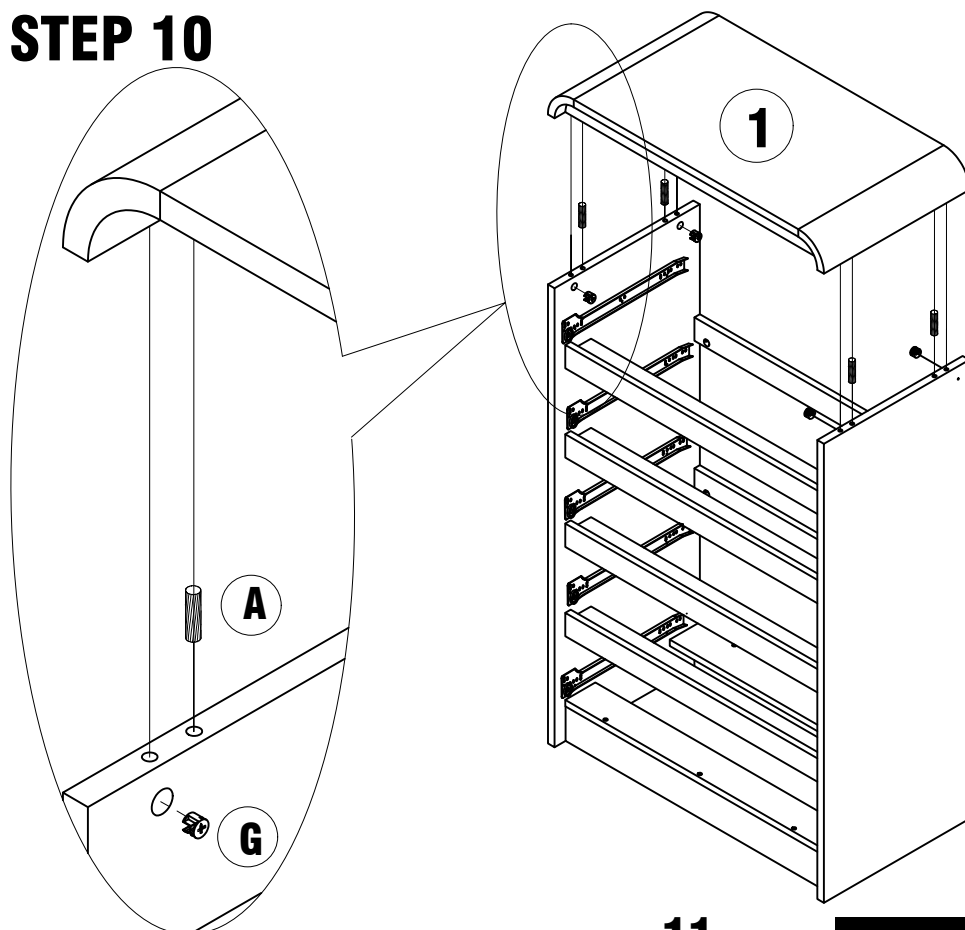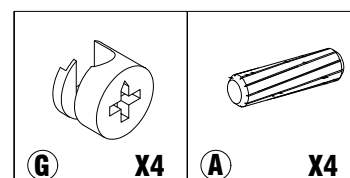


STEP 11





F

 X22

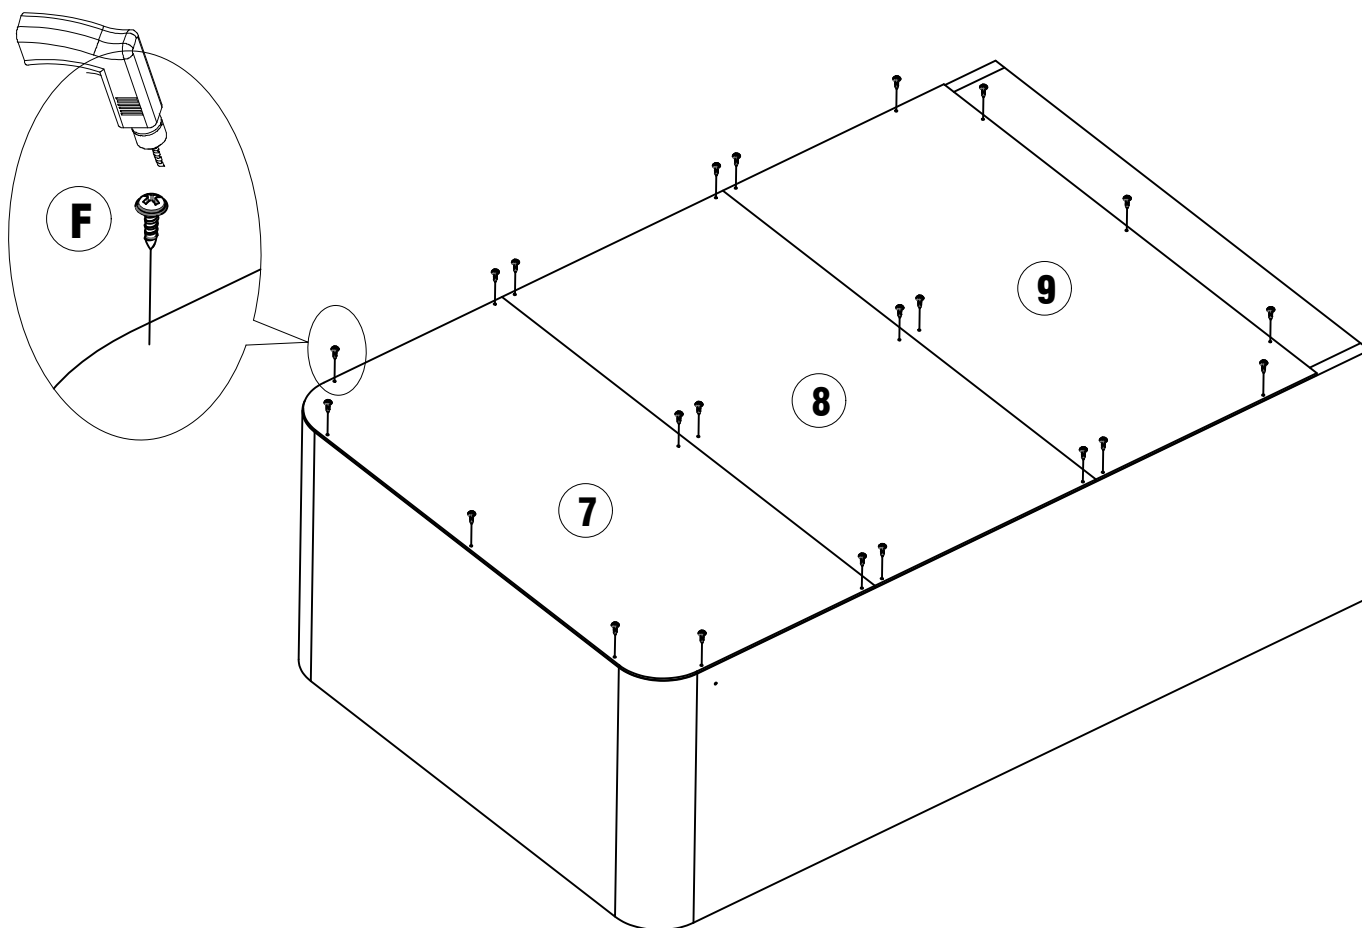

  
STEP 12

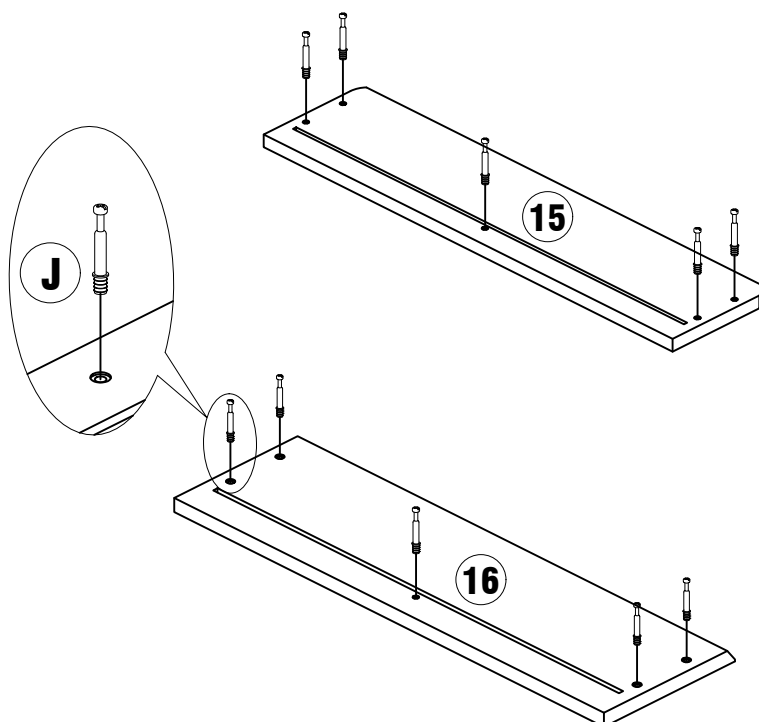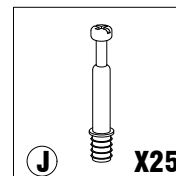

X1




X4

 STEP 13


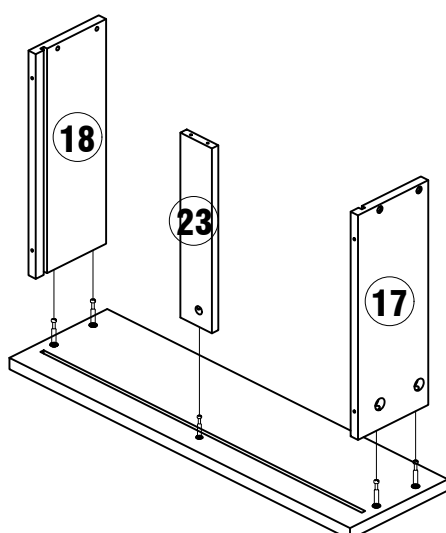


X5

  
 
STEP 14

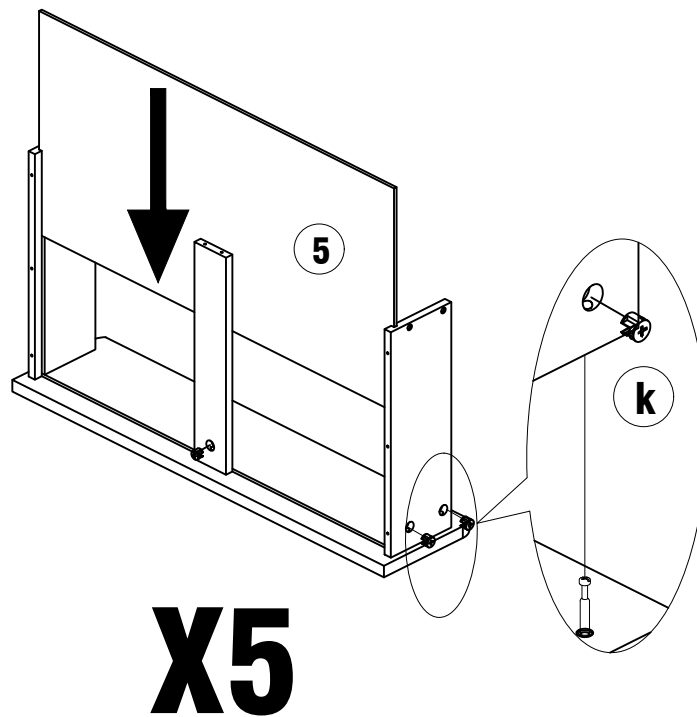
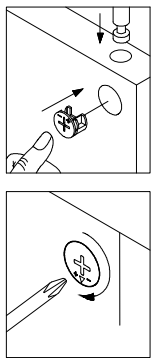
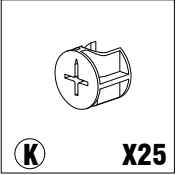


  STEP 15

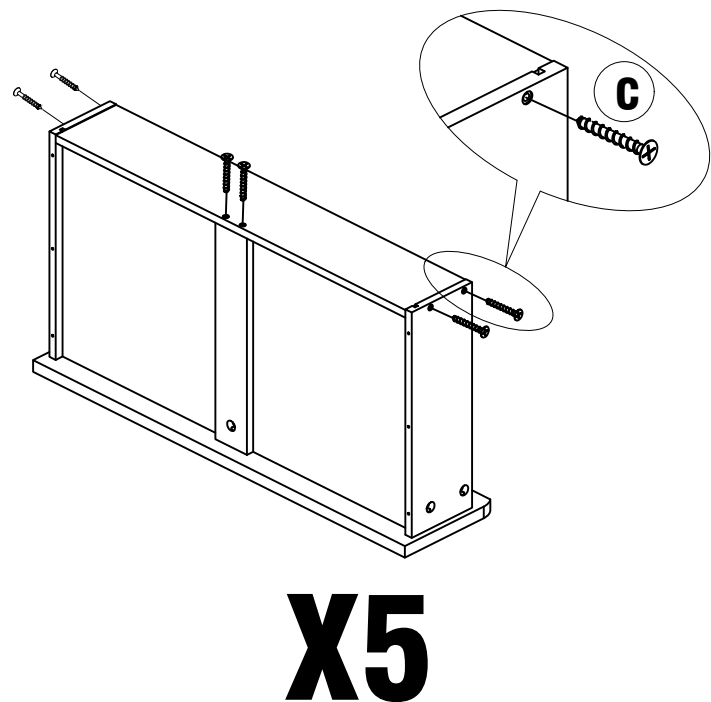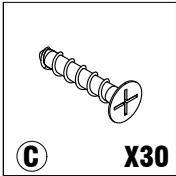

  STEP 16


	
B	X30
	L X5

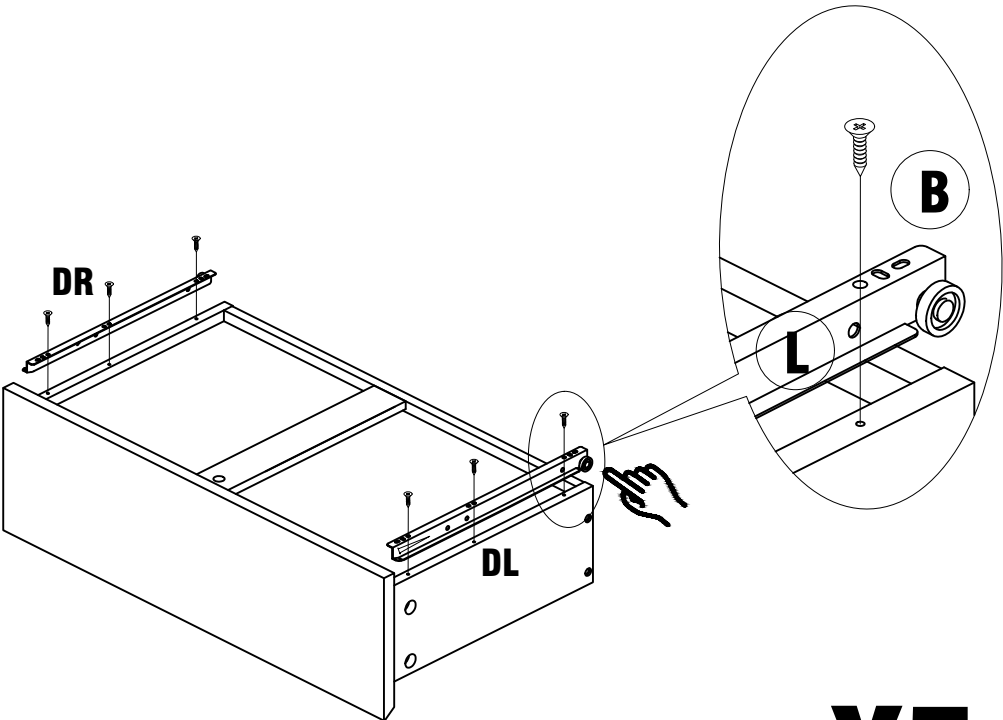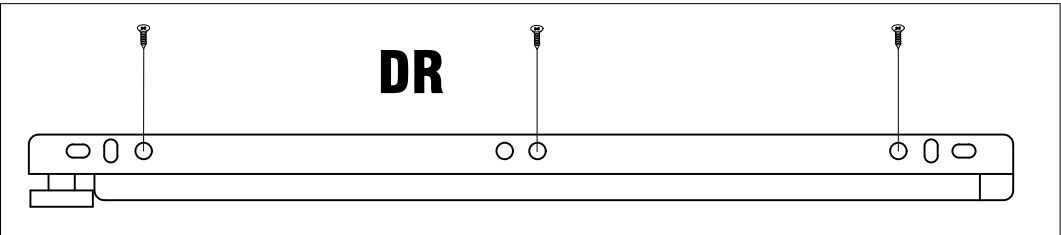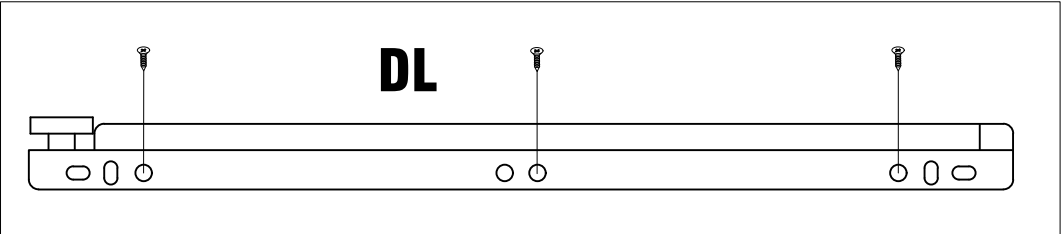   



X5



 STEP 17

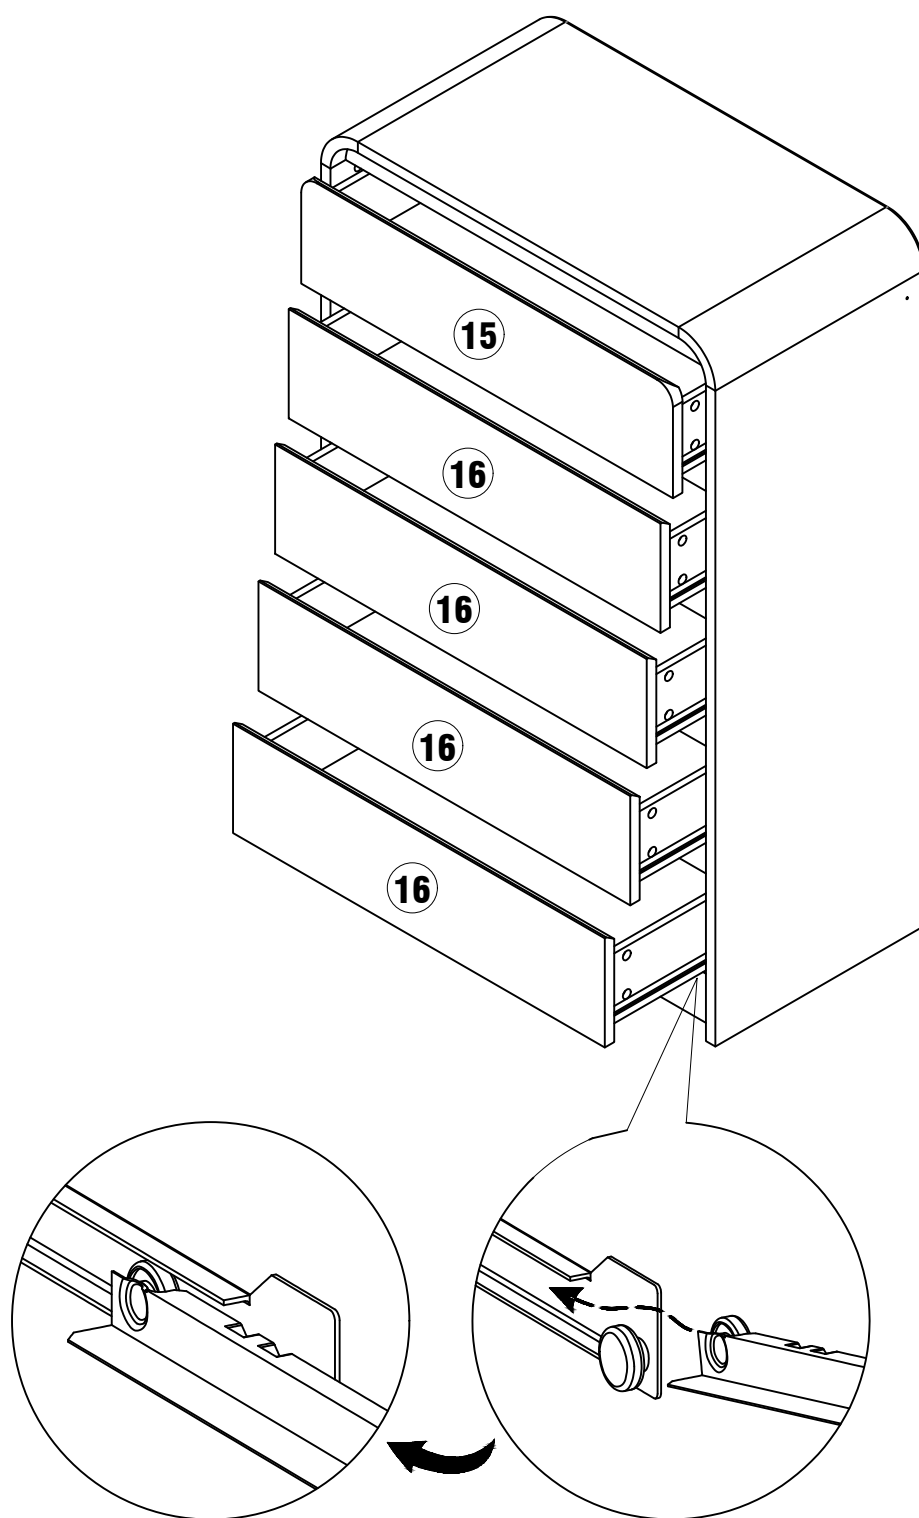

  STEP 18

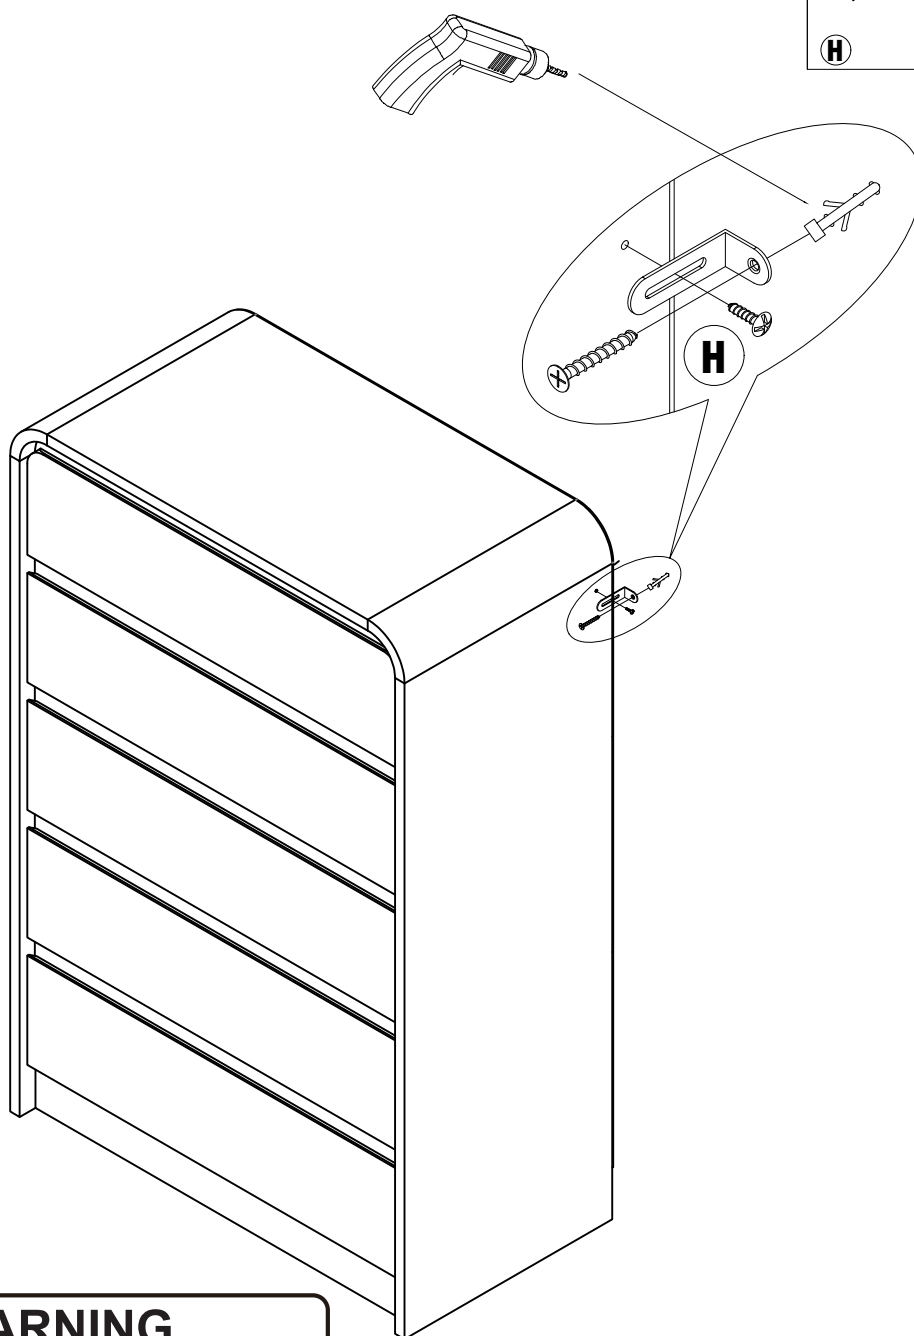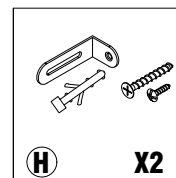

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



*This is a permanent label.
Do not remove!*