

# How to switch between coin-play and free-play 3000-in-1 board:

1. Locate the Test (top) and Service (bottom) buttons. Open the coin door with the key provided and look just inside to the right to spot the two small red buttons.
2. With the machine turned on and fully loaded, press the Test button once. This will bring you to the settings. You can also press the setting button directly on the side of the gameboard (Blue), this is inside the back of the machine. If opening the back with the power on, make sure not to touch the black power supply box or any wires connected to it as it may cause electrical shock.
3. Use the 1-Player joystick (left) to scroll to "System Config", press 1-Player A (top left red button) to enter the submenu.
4. You will already be on "Credit Settings", press the 1-Player A button until it shows the desired setting, then press the 1-Player button (left white) to go back. (Example: 3:1 means 3 quarters will give you 1 game credit) Your game should already be set to FREE PLAY to begin with.
5. Use the 1-Player joystick to scroll to "Save Settings", press 1-Player A to select OK then press 1-Player A again to select YES. This will save the settings and bring you back to the main screen so you can play the games with the new settings.

If you choose to use the machine set for coin-play you can use any small container to catch your coins so they don't fall to the bottom. We do not provide a coin collection container. If you have questions regarding your machine settings, feel free to contact us and we will be happy to help answer any questions.

Thank you.