

ASSEMBLY INSTRUCTIONS

SCALLOP CABINET

ASSEMBLY REQUIREMENTS	1.5 Hours Assembly Time (Approximate)	2 -Person Assembly 	Tools Required (Not Provided): Phillips Screwdriver  Flat Head Screwdriver 
-----------------------	---	---	---

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.
Contact our customer service department in case there are any missing or damage parts or hardware.
Replacement parts are normally shipped within 2 or 3 days.

We appreciate your business!

PRODUCTS PURCHASED THROUGH OUR AUTHORIZED VENDORS ONLY ARE ELIGIBLE FOR REPLACEMENT PARTS.

THIS PRODUCT IS FOR INDOOR AND HOUSEHOLD USE ONLY - NOT FOR COMMERCIAL USE.

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are correct before assembly.
Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

 
1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE





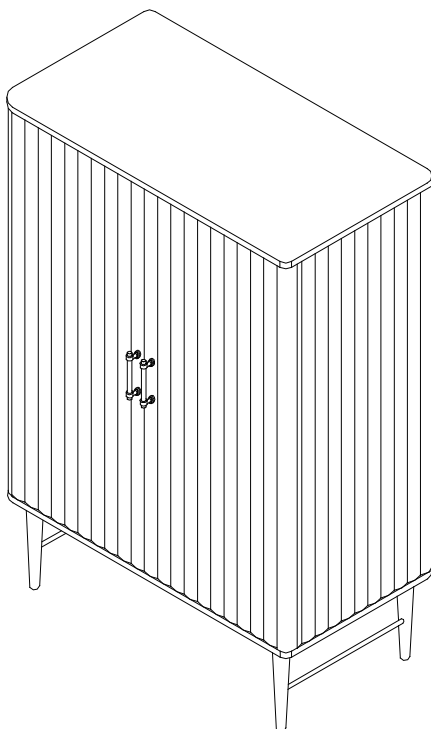


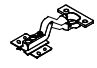 











1. Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
2. Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.
3. Solid wood is impacted by heat and humidity fluctuations which may cause small joint separations or hairline cracks; place the furniture away from direct sunlight and air conditioning vents, heating vents or units to protect the furniture.

ASSEMBLY INSTRUCTIONS

SCALLOP CABINET















Hardware List

ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
A	Cam-bolt	 6*35mm	8 pcs	K	Shelf Pin		8 pcs
B	Cam-lock	 15*10mm	8 pcs	L	Handle		2 pcs
C	Wood Dowel	 8*30mm	8 pcs	M	Handle Bolt	 4*18mm	4 pcs
D	Wood Dowel	 8*20mm	4 pcs	N	Hinge		4 pcs
E	Screw	 7*40mm	4 pcs	O	Backply Stopper		10 pcs
F	Bolt	 8*35mm	4 pcs	P	Plastic Anchor		2 pcs
G	Screw	 3.5*12mm	12 pcs	Q	Screw	 3.5*40mm	2 pcs
H	Screw	 3.5*14mm	24 pcs	R	Allen key	 4 mm	1 pc
I	Screw	 3*16mm	10 pcs	S	Allen key	 5 mm	1 pc
J	Screw	 4*25mm	18 pcs				

ASSEMBLY INSTRUCTIONS

       SCALLOP CABINET

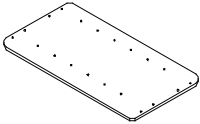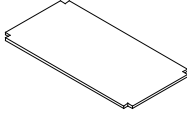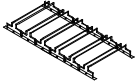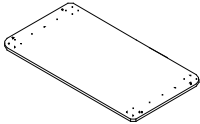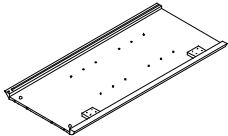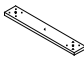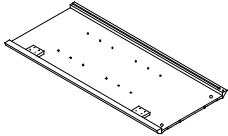
Parts List

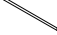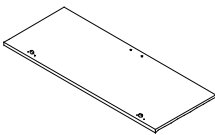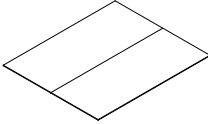   ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
1	Top Panel		1 pc	7	Adjustable Shelf		2 pcs
2	Wine Rack		1 pc	8	Bottom Panel		1 pc
3	Left Panel		1 pc	9	Support Bar		2 pcs
4	Right Panel		1 pc	10	Leg		4 pcs
5	Back Connect Bar		1 pc	11	Leg Stretcher		2 pcs
6	Door		2 pcs	12	Back Panel		1 pc


ASSEMBLY INSTRUCTIONS

SCALLOP CABINET

 
ASSEMBLY OVERVIEW

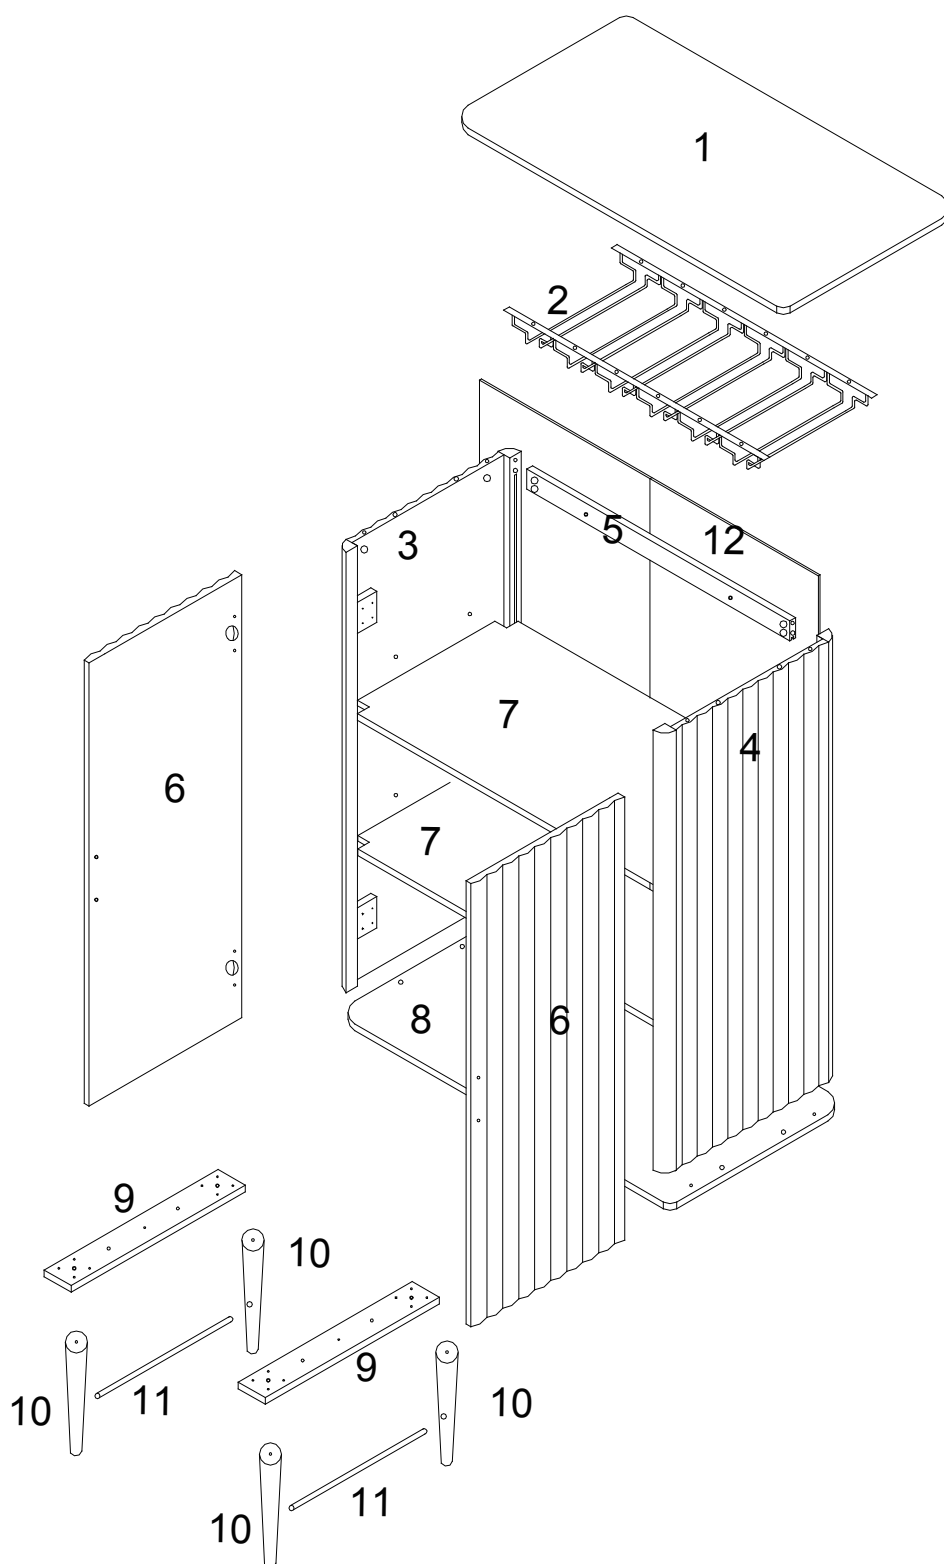

 Instructions For Fastening CAM-BOLT AND CAM-LOCK

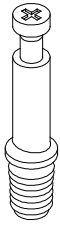


CAM-BOLT

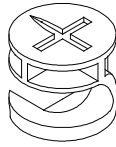 


CAM-LOCK

 
Tools Required

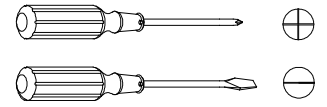


INSERTING AND TIGHTENING CAM-BOLT

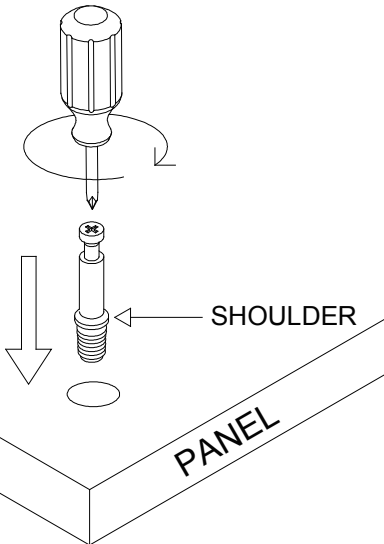 

 Place Cam-bolt on pre-drilled hole and screw in vertically.

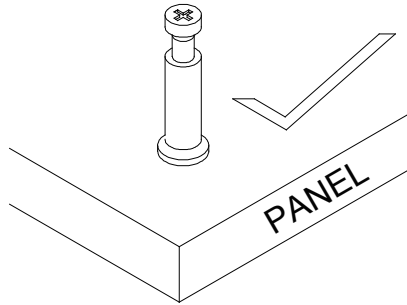

 
Shoulder is flushed (on the same level) with the panel.

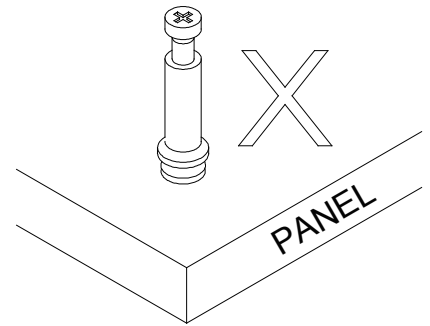

Shoulder is above the panel.

Place Cam-bolt to the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to tighten Cam-bolt vertically until shoulder is flushed (on the same level) with panel. Do not over-tighten or under-tighten.

 INSERTING CAM-LOCK

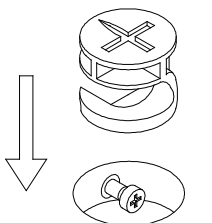

Insert Cam-lock with arrow align to Cam-bolt head.



 
CORRECT



WRONG

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.


TIGHTENING CAM-LOCK

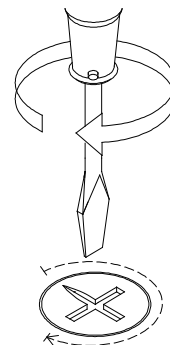

Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


STEP 1



A		8 pcs
---	--	-------

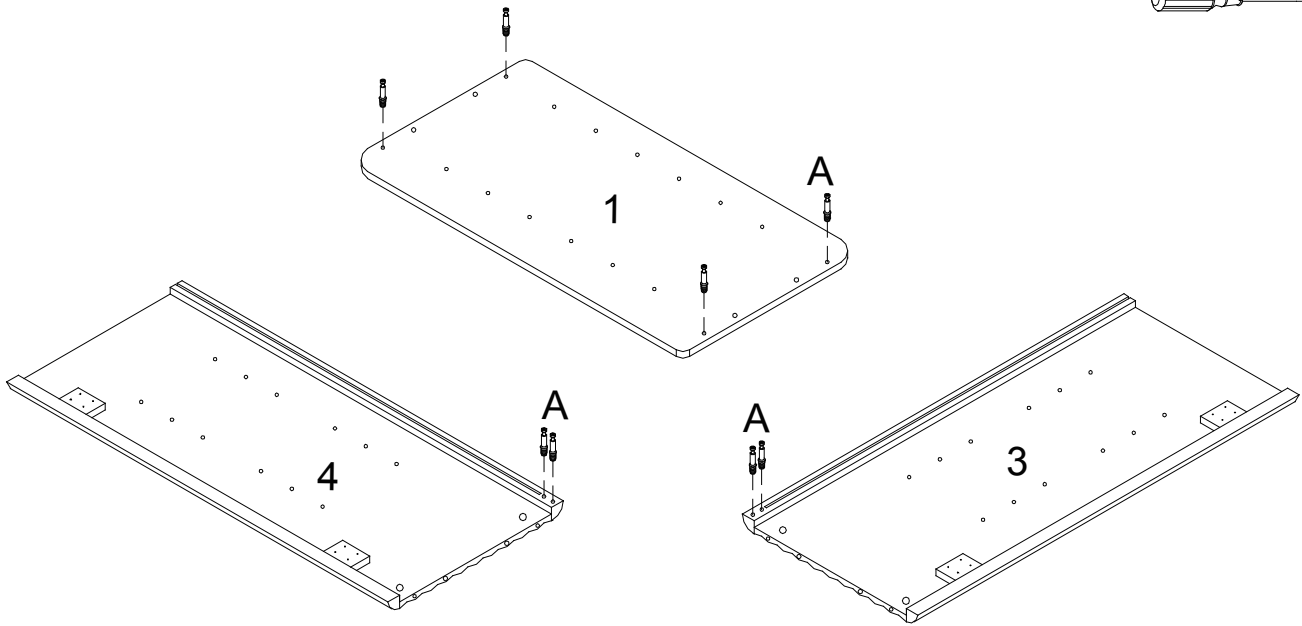 

- Lay Top Panel (1), Left Panel (3) and Right Panel (4) bottom-side up on a material that does not scratch or damage the parts.
- Screw in Cam-bolt (A) into the designated holes on (1, 3 & 4). Refer to Page 5 for instructions on inserting and tightening Cam-bolt.


 
STEP 2

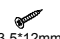G		12 pcs
---	---	--------

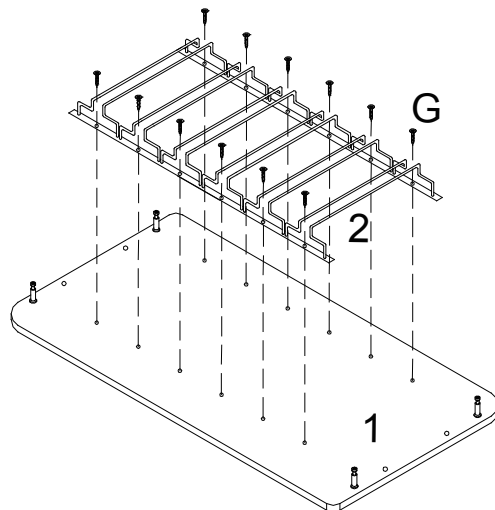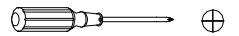  



Attach Wine Rack (2) to Top Panel (1) with Screw (G). Do not tighten the screws completely until all of the screws are in place.

  STEP 3

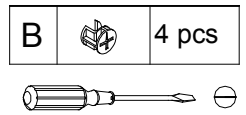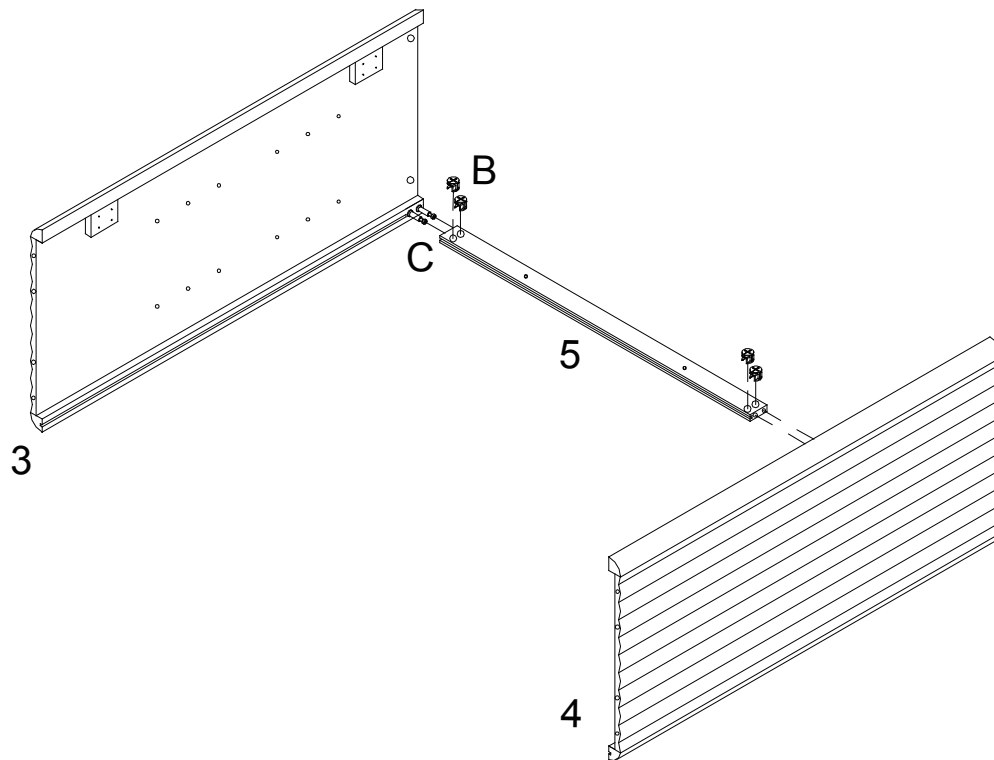


- Attach Side Panel (3 & 4) to Back Connect Bar (5) via cam-bolt on (3 & 4).
 - Insert Cam-lock (B) into the designated holes on (5) then turn clockwise to lock onto cam-bolt.
- Refer to Page 5 for instructions to insert and tighten cam-lock.

  STEP 4

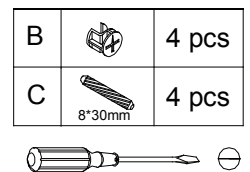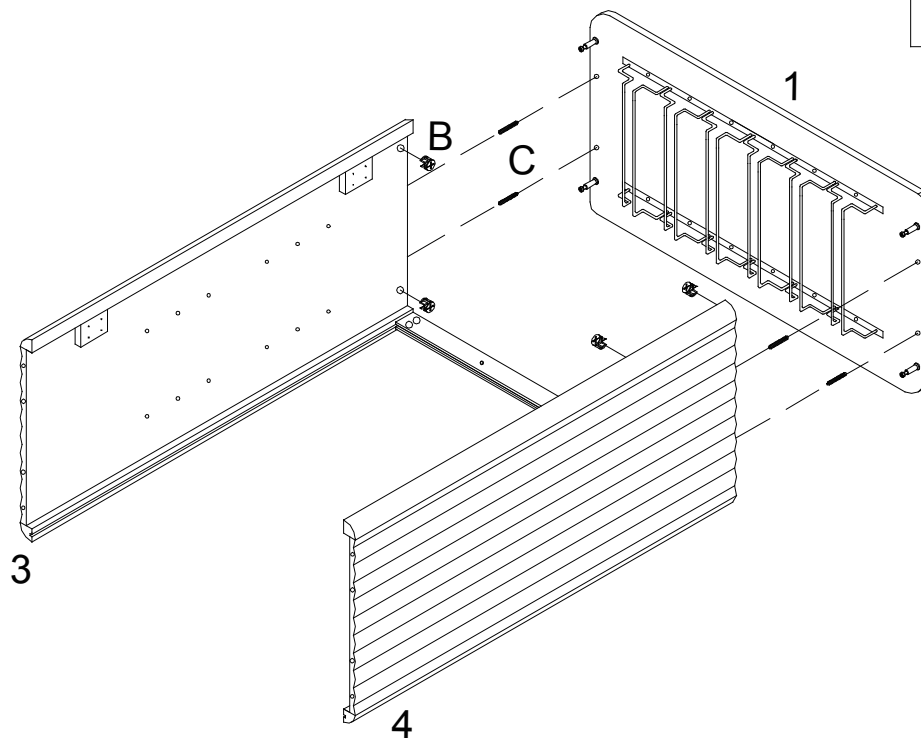

- Insert Wood Dowel (C) into the inner two holes on the top edge of Side Panel (3 & 4) .
- Attach Top Panel (1) from STEP 2 to (3 & 4) via wood dowel and cam-bolt on (1).
- Insert Cam-lock (B) into the holes on (3 & 4) then turn clockwise to lock onto Cam-bolt.

 
STEP 5

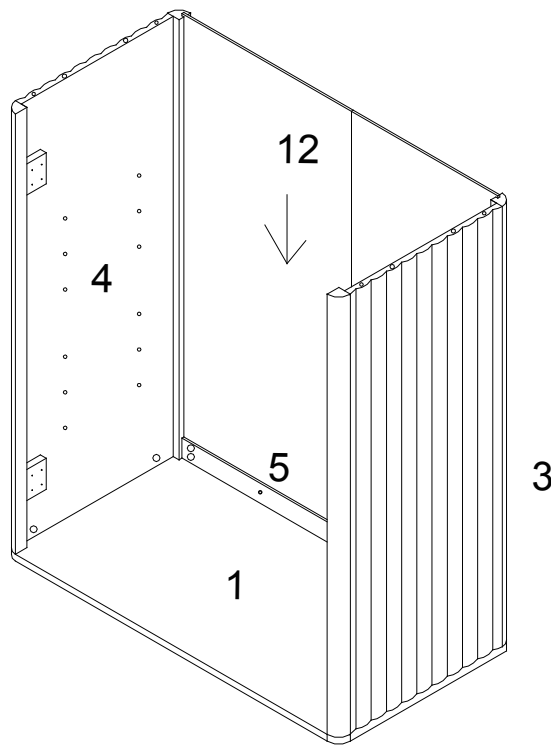

- a) With assistance, carefully set the unit as shown.
b) Fit Back Panel (12) via groove on Side Panel (3 & 4) and Back Connect Bar (5).
Set aside for STEP 9.

STEP 6


F		2 pcs
	8*35mm	

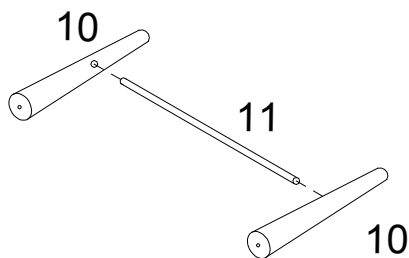 


X2

Attach Leg Stretcher (11) to two Leg (10) as shown.

STEP 7


F		2 pcs
	8*35mm	
S		1 pc
	5mm	

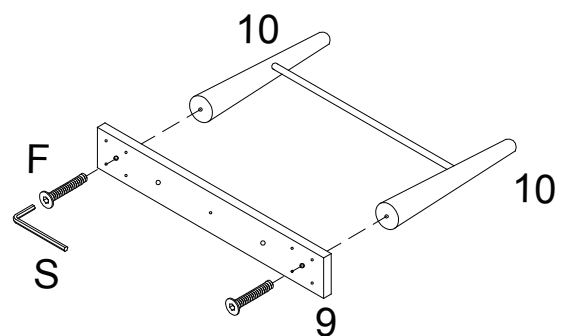 



X2

 - a) Use Bolt (F) to fasten Leg (10) from STEP 6 to Support Bar (9).
b) Drive and tighten Bolt (9) with Allen Key (S).

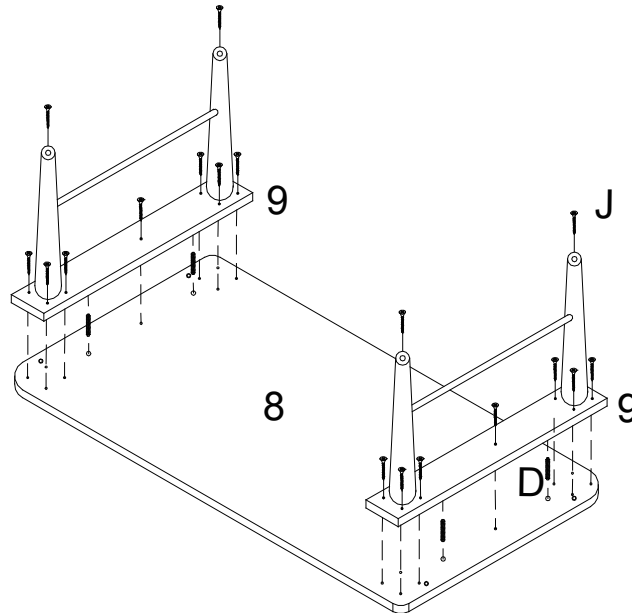STEP 8







D	 8*20mm	4 pcs
J	 8*20mm	18 pcs



 - Insert Wood Dowel (C) into the designated holes on Bottom Panel (8) as shown.
- Attach Support Bar (9) with legs from STEP 7 to Bottom Panel via wood dowel on (8).
- Use Screw (J) to fasten (9) with legs to (8). Do not tighten (J) completely until all of the screws are in place.

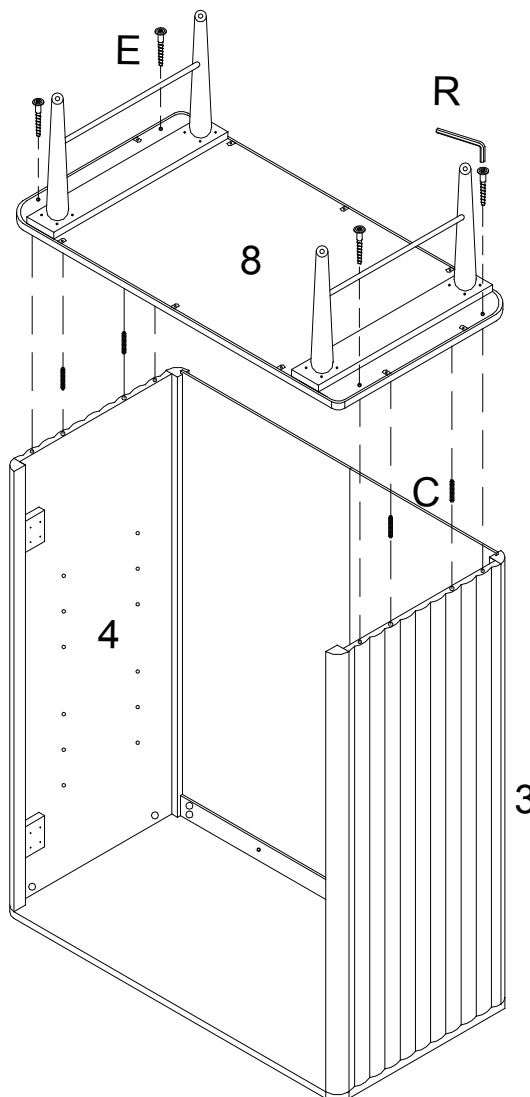 
STEP 9

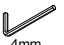

C	 8*30mm	4 pcs
E	 4*70mm	4 pcs
R	 4mm	1 pc


- Insert Wood Dowel (C) into the inner two holes on the bottom edge of Side Panel (3 & 4).
- Attach Bottom Panel/Leg Assembly from STEP 8 via wood dowel on (8).
- Affix Bottom Panel (8) to (3 & 4) with Screw (E). Drive and tighten (E) with Allen Key (R).

 STEP 10

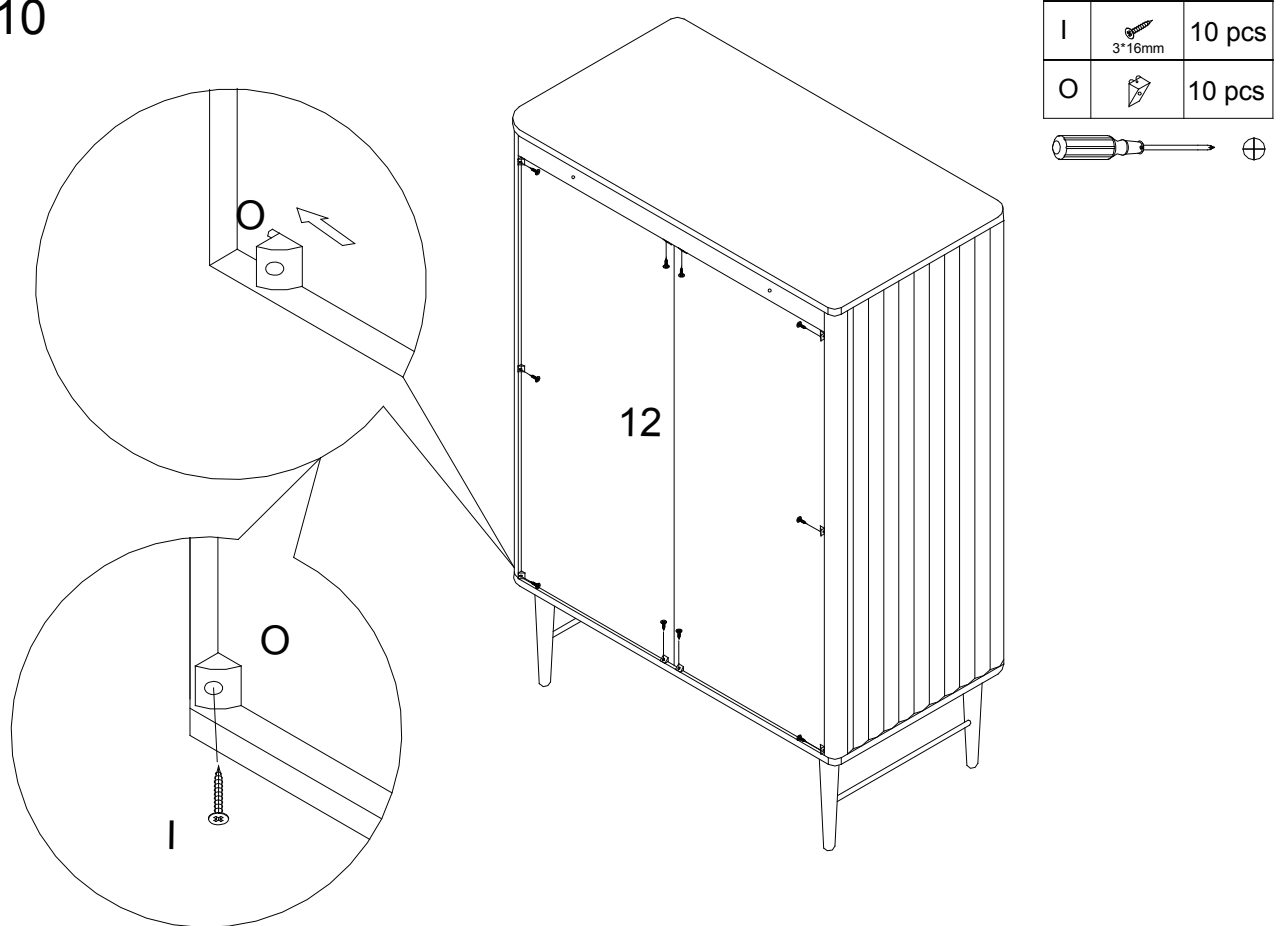


- Insert Backply Stopper (O) into the gap between Back Panel (12) and the respective panels as shown.
- Fasten (O) with Screw (I).

 STEP 11

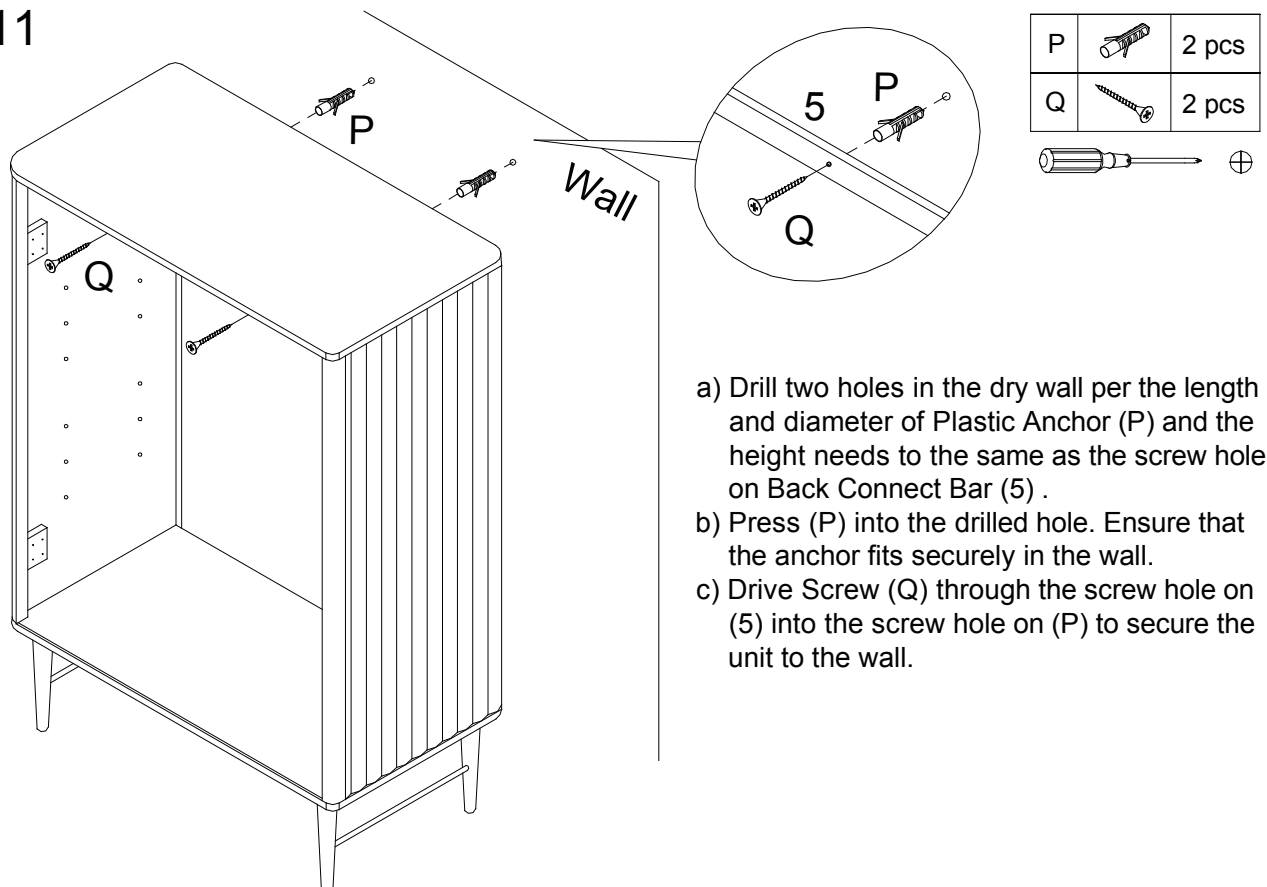

- Drill two holes in the dry wall per the length and diameter of Plastic Anchor (P) and the height needs to be the same as the screw hole on Back Connect Bar (5).
- Press (P) into the drilled hole. Ensure that the anchor fits securely in the wall.
- Drive Screw (Q) through the screw hole on (5) into the screw hole on (P) to secure the unit to the wall.

 
STEP 12

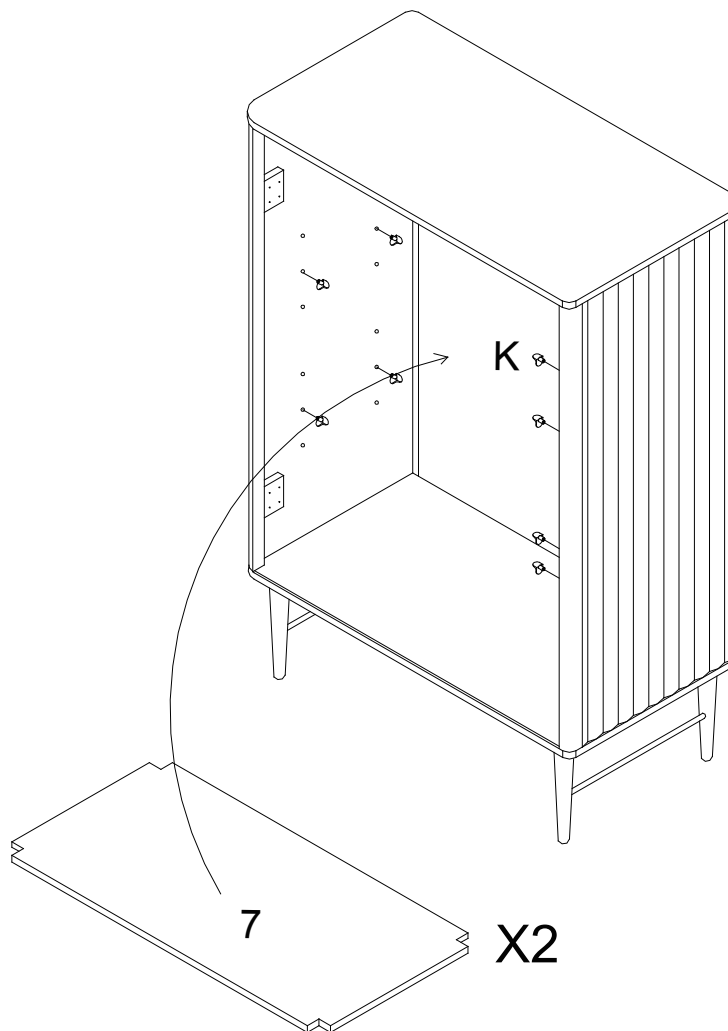


K		8 pcs
---	--	-------

- Insert Shelf Pin (K) into the designated holes on the same level at the desired height on the side panels.
- Place Adjustable Shelf (7) by tilting it to fit between side panels and then level it to sit on Shelf Pin (K).

  STEP 13

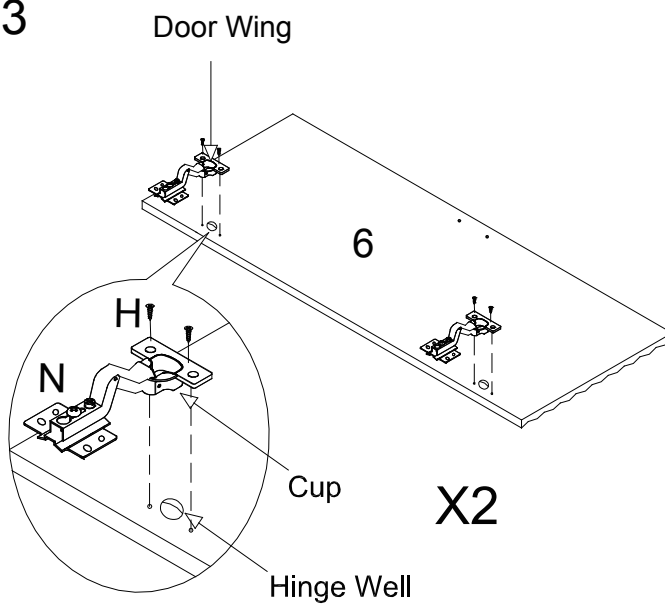

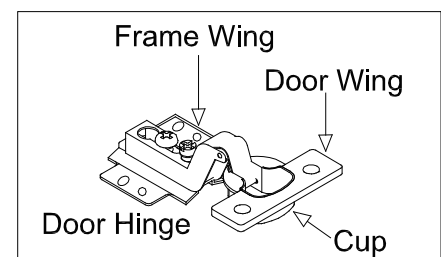


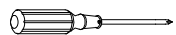 

H	3.5*14mm	8 pcs
N		4 pcs




- Place the interior side of Door (6) facing up as shown on a material that does not scratch or damage the part.
- Place Hinge (N) to fit the cup of the Door Wing into the hinge well on (6) and use Screw (H) to fasten Door Wing.

STEP 14

H	 3.5*14mm	16 pcs
L		2 pcs
M		4 pcs



 

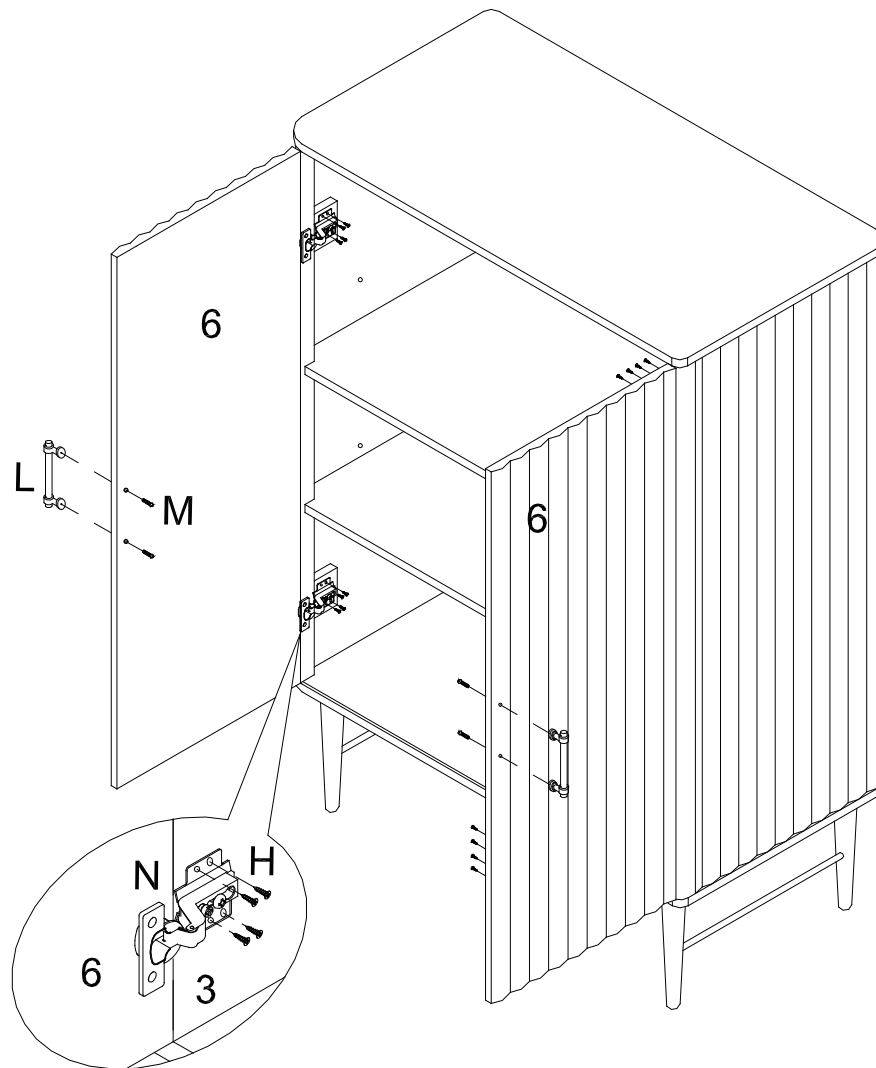 



- With assistance, position Door (6) to Side Panel (3 & 4) as shown.
- Align the screw holes on the Frame Wing of the hinge to the pilot holes on Side Panel and fasten with Screw (H).
- Use Screw (M) to affix Handle (L) to each door.

STEP 15

 
 
Door Adjustments - If necessary, adjust the doors to reduce gap between doors and also for a better fit.

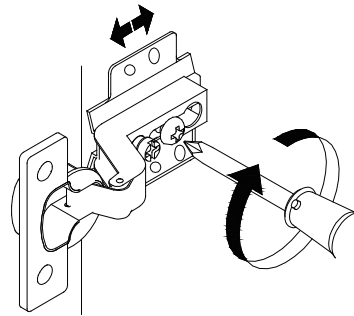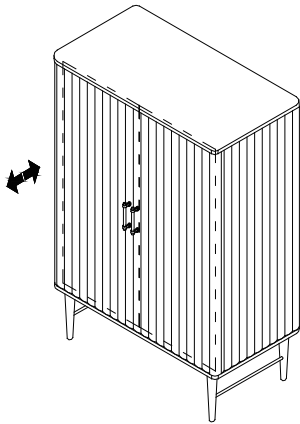

  Adjust the back screw as shown to adjust the door front and back.

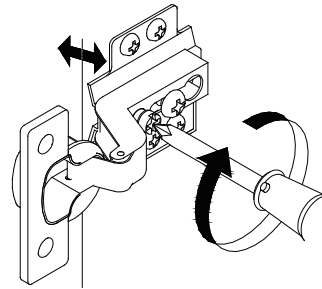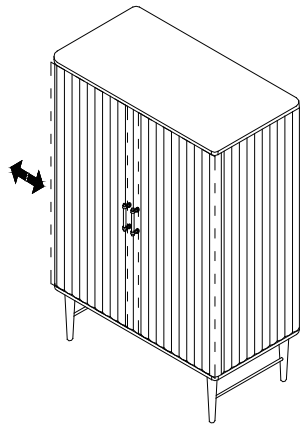

  Adjust the front screw as shown to adjust the door left and right.

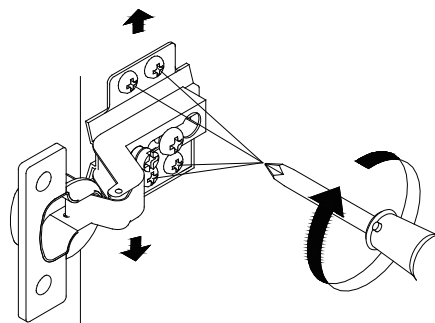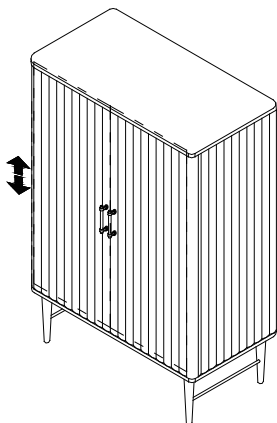

Adjust four screws as shown to adjust the door up and down.

The assembly of the Cabinet is complete.