



 
Phonograph User Manual

*Thank you for reading this manual. We wish you a pleasant journey with its use!

AUX playback

- 1 Switch the function (as shown in Figure 2) to AUX.
- 2 Insert a 0.138" audio source plug into (as shown in Figure 2-1), turn on the audio playback, adjust the volume, and begin your musical journey.

Remote control instructions

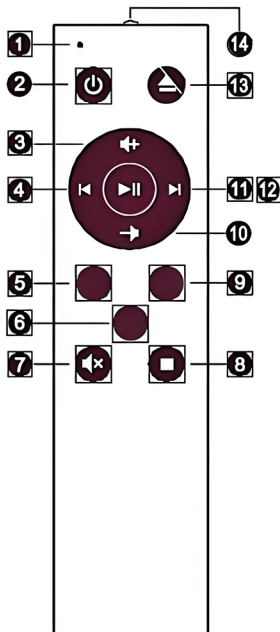

Remote control instructions

- 1 Light Indicator
- 2 Power Standby
- 3 Volume Up
- 4 Previous track
- 5 Treble High
- 6 Treble adjustment
- 7 Mute
- 8 Stop
- 9 Bass adjustment
- 10 Volume decrease
- 11 Play/Pause
- 12 Next track
- 13 CD Tray Eject
- 14 Infrared Emitter

Function Description:

1. The treble and bass buttons are used in conjunction with the track up/down buttons. Press one of the buttons and within 3 seconds, press the track up/down buttons to increase or decrease treble/bass.
2. While playing, pressing the mute button will silence the speaker.
3. Other functions are the same as on the main panel.
4. This remote control is for CD functions only.
5. If the remote control range is insufficient, please replace the batteries.

* If the machine is not going to be used for an extended period, please unplug the power cord to save electricity!

Warning:

- 1、 This product is intended for use in a mild environment only; avoid using it under direct sunlight, high temperatures, cold, humid, or dusty conditions.
- 2、 To prevent the risk of electric shock, do not touch the internal components, and non-professional service technicians should not attempt to repair it on their own.
- 3、 The speaker contains magnets; keep it away from items that can be magnetized, such as magnetic cards, etc.
- 4、 This product is equipped with a safety interlock device that can sense laser, which will automatically stop the laser when the CD tray is ejected.

Technical specifications:

Function Description	FM/ Singing Disk / CD / USB / Bluetooth / AUX
Power Supply Voltage	220V ~ 50Hz
Power Consumption	80W
Treble Output Power	30W + 30W
Bass Output Power	60W
Amplifier Frequency Response	20Hz-20KHz
Receiver Frequency Range	FM88-108MHz
Turntable Speed	33/45/78 RPM
Suitable Records	3.15" / 4.72"
Bluetooth Transmission Distance	No barrier 3.9"
USB Port	Supports MP3 / WMA / APE / WAV / FLAC formats
Remote Control Battery	A7 batteries (2 pieces)

Technical specifications:

Carefully remove the item from the box;
Place the main unit on top of the counter;
Connect the speaker wires to the main unit, red to red, black to black;
Install the large speaker:
Extend the FM antenna;
Plug in the 220V power supply;
Embark on your wonderful musical journey!

Assembly of the large speaker:

Pass the speaker wire (as shown in Figure 1-2) through (as shown in Figure 1-3), then tighten. Connect the protruding wire from (as shown in Figure 1-2) with the wire extending from (as shown in Figure 1-1).

Plug (as shown in Figure 1-3) into (as shown in Figure 1-2), and the installation is successful. Power connection:

The machine must be connected to the appropriate main power cable and socket to ensure voltage consistency. Plug into the socket, turn on the power switch at the back of the machine, and select the function to play music.

When not in use for an extended period, please turn off the power switch at the back of the machine and unplug the power cord.

Sound adjustment:

Rotate the volume knob (as shown in Figure 2-13) to adjust the volume. The maximum volume is 40, and the default volume upon startup is 25.

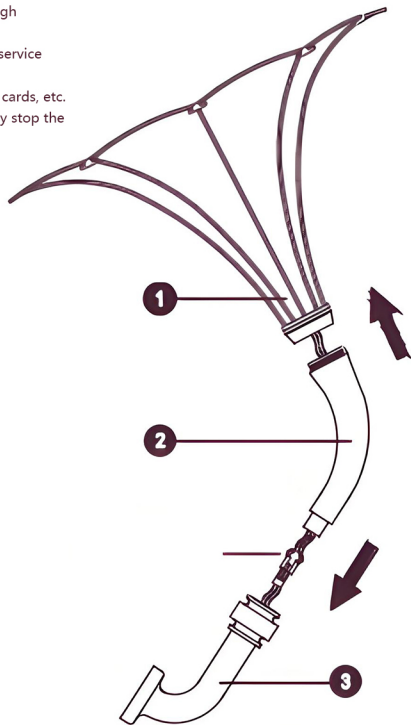 


Figure 1

Panel illustration guide

- ❶ Radio station selection knob
- ❷ FM stereo indicator light
- ❸ Function switch/standby button
- ❹ USB port
- ❺ CD door
- ❻ CD stop button
- ❼ CD track up button
- ❽ CD play/pause button
- ❾ CD track down button
- ❿ CD tray eject button
- ⓫ External input port
- ⓬ Remote control receiver
- ⓭ Volume/high bass control
- ⓮ Bluetooth indicator light
- ⓯ Display screen

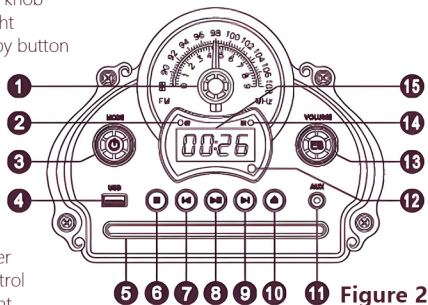 


Figure 2

Bluetooth and USB playback

1. Switch the function button (as shown in Figure 2-11) to BT (Bluetooth).
2. Turn on the Bluetooth function on your phone and scan for available devices.
3. The Bluetooth name is JBT. Tap on your phone to pair with the device; the blue light will illuminate (as shown in Figure 2-14), indicating an effective range of approximately 383.7 inches (about 10 meters).
4. Open your phone's audio player and play music; the music will be played through Bluetooth on this device.
5. Functions such as track selection/playback/volume can be controlled from the panel or via your phone.
6. When in BT mode, insert a USB drive; the USB drive will play first, and functions like track selection/playback/volume can be controlled from the panel.

Radio

1. Make sure the power is plugged in! This ensures the machine is powered on!
2. Switch the function switch (Figure 2-1) to FM.
3. Rotate the station selection knob (Figure 2-1) to the channel you desire.
4. When you receive an FM stereo broadcast, the FM stereo light (Figure 2-2) will illuminate.
5. To better receive FM programs, please extend the antenna at the back of the main unit as much as possible.
6. Press and hold the function switch/standby button (Figure 2-3) to put the machine into standby mode.

Record maintenance

*Please gently wipe away dust from the surface of the disc with a clean, soft cloth. Clean in a circular motion from the center outward, as even minor dust and smudges can affect the quality of the disc.

*Never use chemical solvents to clean the disc.

*If necessary, clean with water and a small amount of detergent, and let it air dry naturally in an upright position after rinsing.

*To reduce scratches and prevent dust accumulation, store the disc in a protective sleeve and return it to its case after use.

*Avoid placing the disc directly in sunlight, high humidity, or high-temperature environments for extended periods.

*If the disc will not be used for a long time, store it upright; do not place it flat as this can lead to warping more easily.

Turntable

Figure 3: Snail arm turntable

Figure 4: Automatic return tonearm (install according to product configuration)

1. Large disc changer
2. Turntable
3. Tonearm
4. Pause control lever
5. Tonearm locking latch
6. Speed control switch
7. Tonearm pickup
8. Tonearm pickup

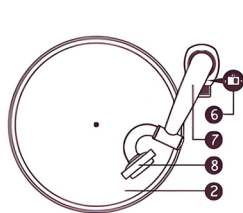 


Figure 3

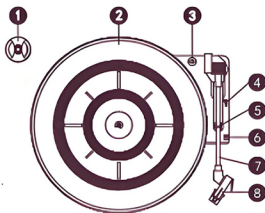 


Figure 4

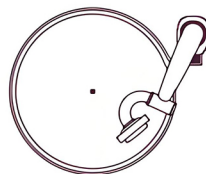 


Figure 7

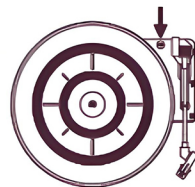 


Figure 8

Vinyl record usage:

1. Please plug the product into a standard 220V~50 Hz socket and press the power switch at the back of the main unit to turn it on. 'I' indicates on, and 'O' indicates off. Turn on the power switch (Figure 2-3).

2. Set the speed control knob (Figure 4-6) to match the speed of the record you are playing (33, 45, 78).

3. Switch the function switch (Figure 2-3) to the "PH" position and use the control lever (Figure 4-4) to lift the tonearm (Figures 3-7 to 4-7). Gently place the stylus on the record and lower the control lever to start playing. Adjust the volume as desired.

4. After playback is complete, the tonearm will automatically return to its original position, and the turntable will stop automatically.

* Carefully remove the turntable's packaging materials, gently remove the needle protection cover (Figure 5), and release the tonearm latch (Figure 6).

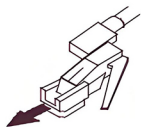 


Figure 5

 


Figure 6

* The tonearm can only swing left and right (Figure 7), with the left being automatic stop and the right being stop. The stylus can move up and down.

* Rotate the tonearm thread (Figure 8) to balance the turntable until the turntable is loose and elastic.

* Before use, swing the tonearm to the left a few times to make it smoother during playback.

CD Usage Instructions:

- Insert the disc with the printed (label) side facing up and place it precisely in the centre of the tray; otherwise the CD door may jam.
- Hold the disc by its outer edge and the centre hole—avoid touching the recorded surface to prevent scratches.
- Turn the FUNCTION knob (Fig. 2-3) to CD.
- Press the ▲ button (Fig. 2-10) to open the CD door.
- Lay the disc on the tray, label side up.
- Press ▲ again to close the door; the display will show “LD”, then after about 6 seconds it will show “001” and playback will begin automatically.

Warnings:

- Never insert any foreign objects into the CD compartment; doing so will damage the mechanism.
- Never attempt to force the CD door open or closed by hand at any time.
- Use only CD or MP3 discs; VCD or DVD formats cannot be read.
- Severely scratched or dirty discs may not play.

CD Playback:

- After the disc is inserted, the unit will read the contents and begin playback automatically.
- When the last track finishes, playback stops and the total number of tracks appears on the display.
- Press STOP ■ (Fig. 2-6) to halt playback manually.
- After pressing STOP ■, you may press OPEN/CLOSE (Fig. 2-8) at any time to open the CD door and remove the disc.

Play and Pause:

- To pause playback, press the button (Figure 2-8).
- The CD will stop, and the LED display will flash the current playback position.
- To resume playback, press the button (Figure 2-8) again.

Fast Forward and Rewind:

- The buttons (Figure 2-7) and (Figure 2-9) can be used at any time during playback.
- To select the next track, press the (Figure 2-9) button. If you are at the last track, the player will jump to the first track.
- To select the previous track, press the (Figure 2-7) button. If the current track has been playing for less than 3 seconds, pressing (Figure 2-7) once will play the previous track. If the current track has been playing for more than 3 seconds, pressing (Figure 2-7) once will restart the current track. If you are at the first track, the player will jump to the last track.

The maintenance of CDs

- Please use a clean soft cloth to gently wipe off fingerprints and dust from the surface of the CD.
- Clean in a straight line from the inside out. Small surface blemishes will not affect the quality of the CD.
- Do not use chemical solvents to clean the CD.
- To reduce scratching, please put the CD back in its case after use.
- Do not expose the CD to direct sunlight, high humidity, or high temperatures for extended periods.
- Do not stick labels or write on either side of the CD.
- This player can only play CDs and MP3 format discs.
- A dirty lens can cause skipping during playback. If the lens is very dirty, the player may not work. In this case, please use a cleaning disc.