 


Assembly Instructions

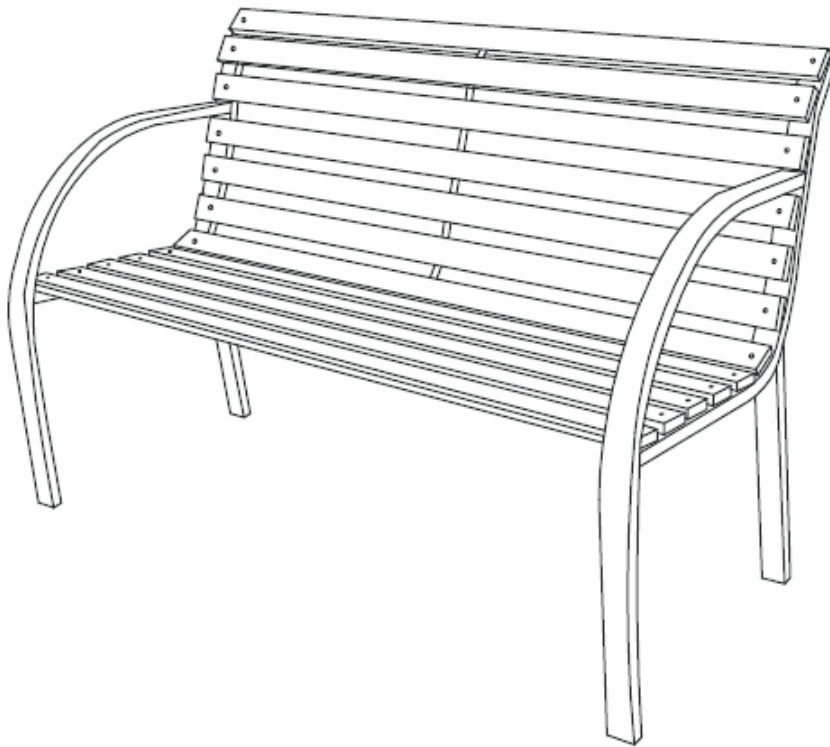

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

Tools Required for Assembly:

Wrench



(Included)

Phillips Screwdriver



(Not Included)

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

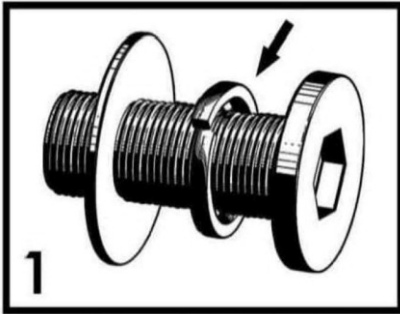

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

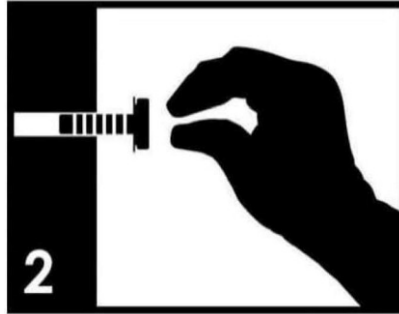

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

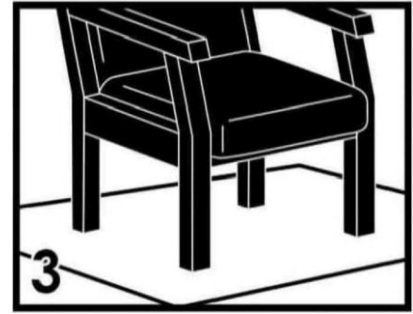

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor. No dragging of products/parts.

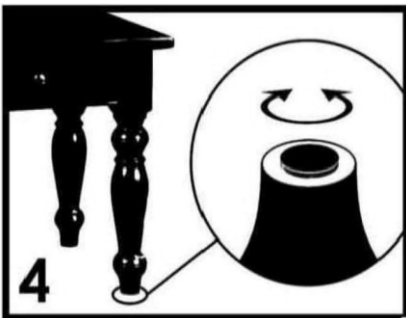

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

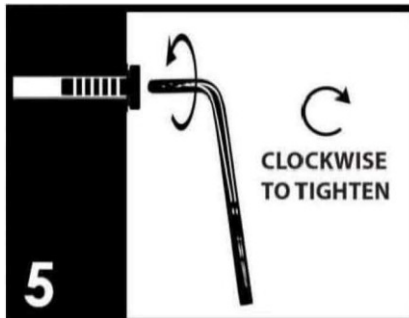


 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

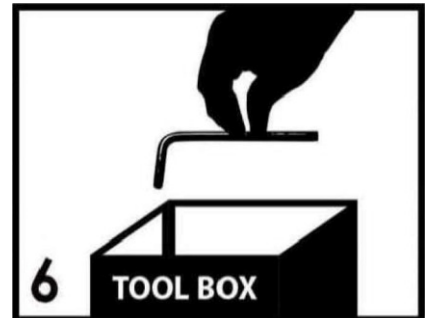


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

  IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

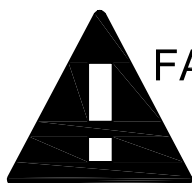

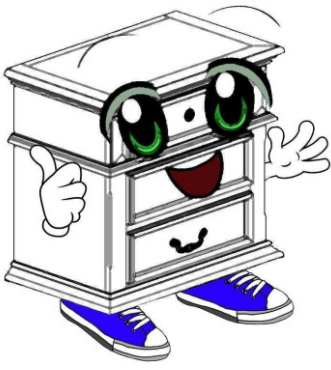


FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.




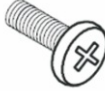



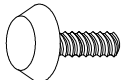
Before you begin, please read Page 2 of "Assembly and Care Advice".


And remember, do not tighten until each step is completed or instructed.

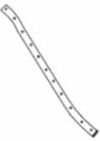Parts List

-  #1 x 2 pcs
Bench End
-  #2 x 12 pcs
Wood Slat
-  #3 x 1 pc
Slat Bracket

Hardware List

 
-  #A x 12 pcs
Wood Screw
-  #B x 24 pcs
Bolt 1/4" x 1-5/8"
-  #C x 24 pcs
Flat Washer
-  #D x 24 pcs
Hex Nut
-  #E x 1 pc
Wrench
-  #F x 4pcs
Adjust Foot

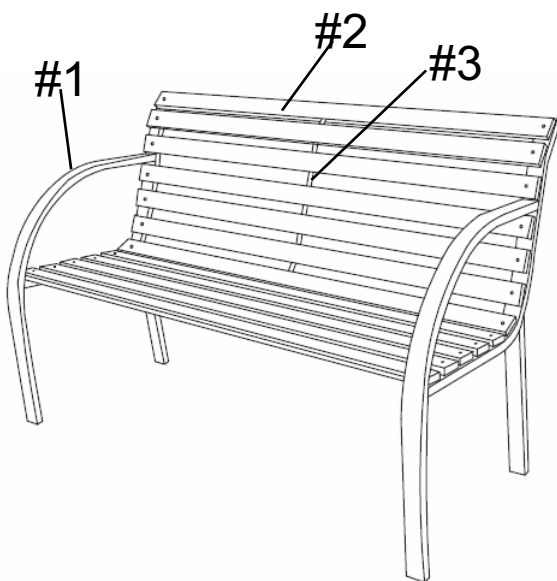




#B x 24 pcs
 #C x 24 pcs
 #D x 24 pcs

 Turn right (clockwise) to tighten

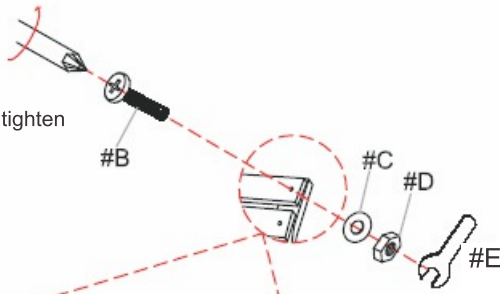

#1

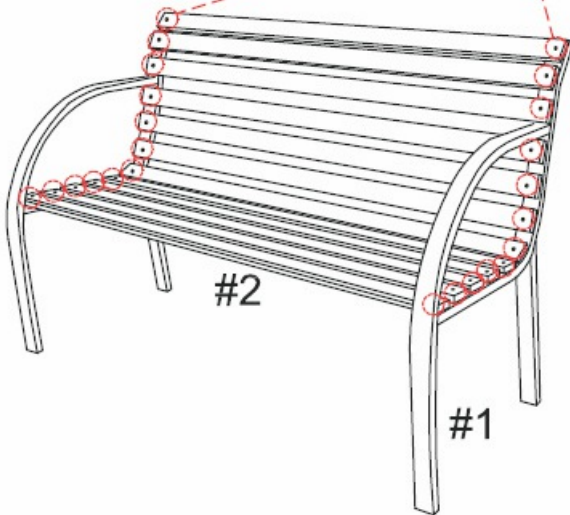 

#2

 
#1

- I. Align the wood slat (#2) with the pre-drilled holes of the two bench ends (#1).
- II. Insert a bolt (#B) through each end of the wood slat (#2) using the Phillips screwdriver until at least 3/4 of the threads are shown through the other side of the bench end (#1). Insert two flat washers (#C) onto the same bolts and tighten with the two hex nuts (#D) using the wrench (#E). It is best if one is stabilizing the hex nut (#D) with the wrench (#E) while the other is tightening the bolt (#B) with the Phillips screwdriver.
- III. Repeat the process above to assemble the remaining wood slats (#2) onto the two bench ends (#1).



#A x 12pcs
 #F x 4pcs

- I. Align the slat bracket (#3) with the pre-drilled holes underneath the wood slats (#2).
- II. Insert 12 wood screws (#A) through the slat bracket (#3) using the Phillips screwdriver to tighten with the wood slats (#2).

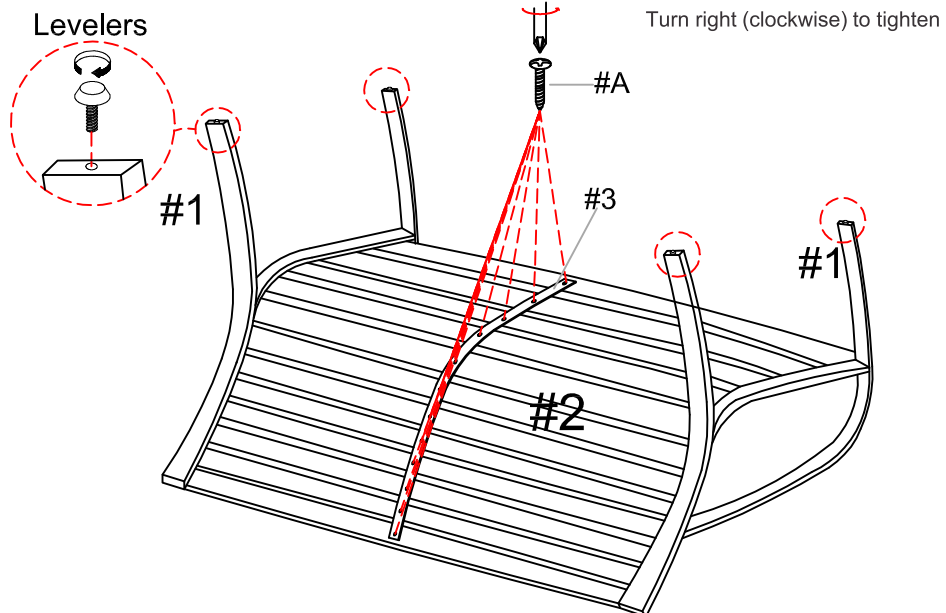

ASSEMBLY IS COMPLETED