

Mobile Large Screen TV Cart

SKU: STAND-TV100E Instruction Manual



A CAUTION! A

If you do not understand these directions, or if you have any doubts about the safety of the installation, please contact our product support team at 309-278-5303 or help@vivo-us.com for further assistance. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.



DO NOT EXCEED WEIGHT CAPACITY

FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY.



TIPOVER WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER:

NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF TV STAND

• USE TIPOVER RESTRAINT OR ANCHOR STAND TO WALL.

NOTE: USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIPOVER.

We're Here for You

Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



Give us a Call:

309-278-5303

AVG. RESOLUTION TIME (within office hrs): 5M 4S



Chat Us:

www.vivo-us.com

AVG. RESOLUTION TIME (within office hrs): < 15 M



Email Us:

help@vivo-us.com

AVG. RESPONSE TIME (within office hrs): 1HR 8M

- 23% within < 15m


-38% within < 30m

- 61% within < 1hr

- 83% within < 2hr

- 92% within < 3hr

Package Contents

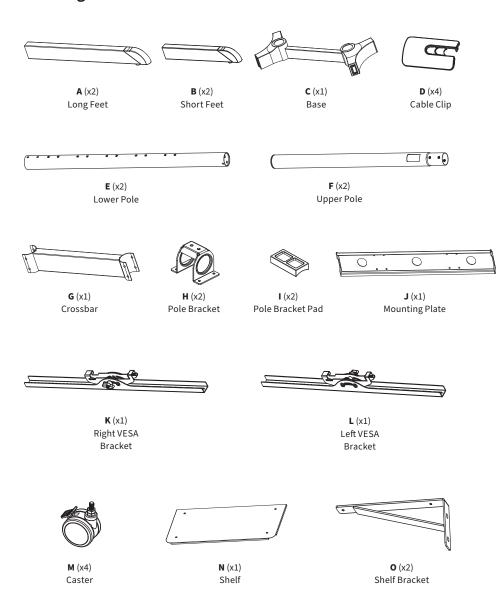

Included Hardware & Tools



S-A (x28) M6x10mm Screw



S-B (x4) M8x20mm Screw



S-C (x4) M8x14mm Set Screw



S-D (x4) M4x6mm Screw



S-E (x8)

Washer



M-A (x4) M4x12mm Screw



M-B (x4) M4x30mm Screw



M-C (x4) M6x20mm Screw



M-D (x4) M6x35mm Screw



M-E (x4) M8x20mm Screw



M-F (x4) M-G (x4)





М4

Washer





Wrench



M-I (x4) M-J (x4) М6 М8 Washer Washer



M8x35mm





Small

Spacer



T-A (x1) T-B (x1)







M8x50mm

Screw

M-L (x4) Large Spacer



T-D (x1) Level

4mm Allen Wrench



T-C (x1) 5mm Allen Wrench

NOTE: SOME HARDWARE INCLUDED MAY NOT BE USED

Weight Capacity:







ASSEMBLY STEPS

STEP 1

Thread Casters (M) into Feet (A,B). Tighten using Wrench (T-A).

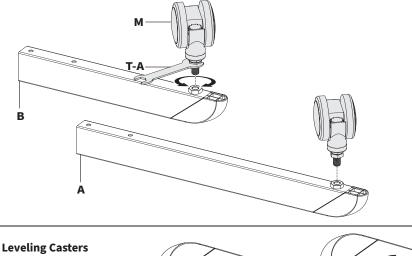


If the caster can't touch the ground, loosen the lower nut as shown to adjust the caster to proper position, then tighten the upper nut.

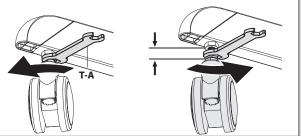


STEP 2


Separate Left and Right Cover (C1, C2) from Base (C) and place them aside.

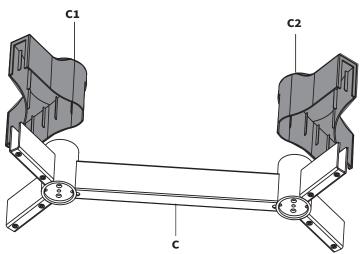


STEP 2 - cont'd


Attach Long Feet (A) and Short Feet (B) to Base (C) using M6x10mm Screws (S-A) and 4mm Allen Wrench (T-B).

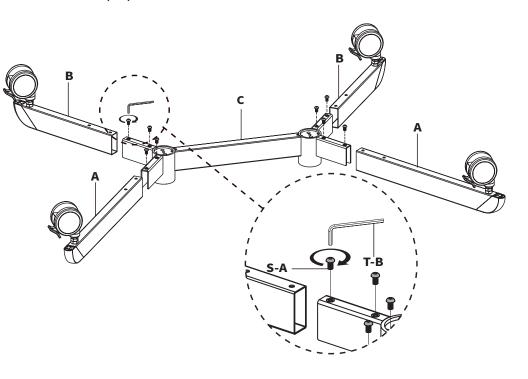

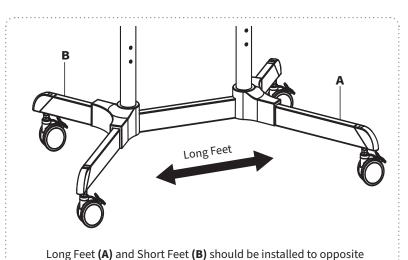


Slide Lower Poles **(E)** into Base **(C)**. Secure using M8x20mm Screws **(S-B)** and 5mm Allen Wrench **(T-C)**.

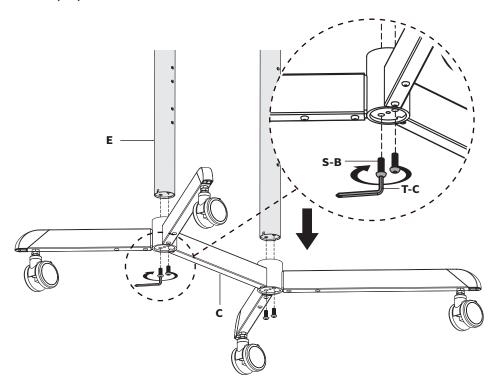


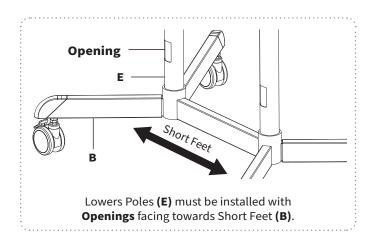


Slide Covers (C1,C2) down Lower Poles (E) and onto Base (C).

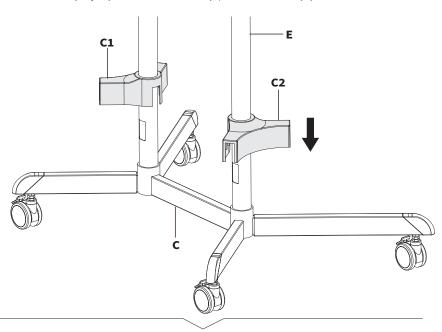


Insert Upper Poles (**F**) into Lower Poles (**E**). Attach Crossbar (**G**) to the **top two holes** on Lower Poles using M6x10mm Screws (**S-A**) and 4mm Allen Wrench (**T-B**). **Opening** on Upper Poles should face the Back of assembled stand.

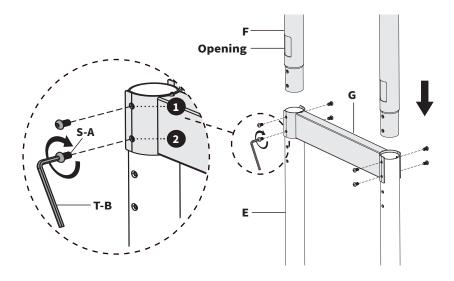


Hold Pole Bracket Pads (I) onto Pole Brackets (H) and slide the assembly down Upper Poles (F) until you reach the desired height of your TV.

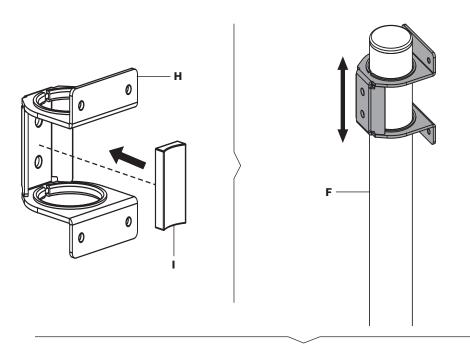

Secure Pole Brackets in place using M8x14mm Set Screws (**S-C**) and 4mm Allen Wrench (**T-B**). Ensure Pole Bracket Set Screws are facing the Back of assembled stand.

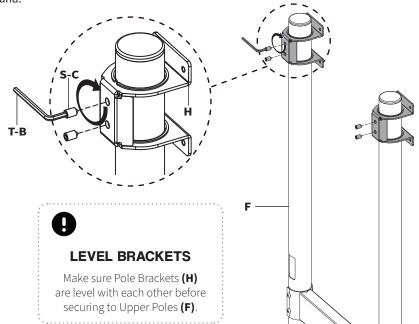

Attach Mounting Plate (J) to Pole Brackets (H) using M6x10mm Screws (S-A), M6 Washers (S-E), and 4mm Allen Wrench (T-B).

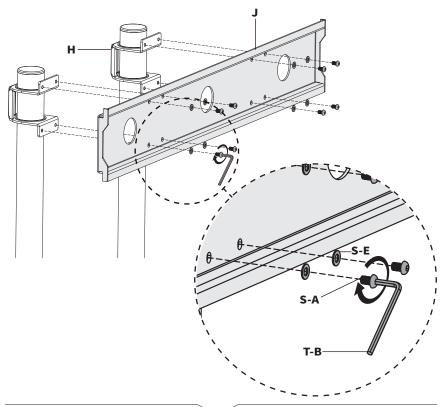

Attach Level (T-D) onto Mounting Plate.


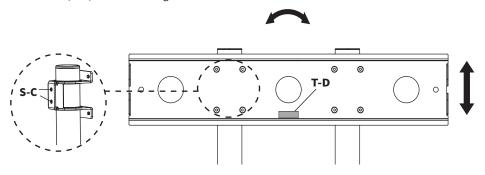





Plate Not Level?

Loosen the M8x14mm Set Screws **(S-C)** on the Pole Brackets and adjust as neeeded. Retighten once level.


Attach VESA Brackets (K,L) to your TV using appropriate Screws (M-A thru M-G), Washers (M-H thru M-J), and Spacers (M-K thru M-M).

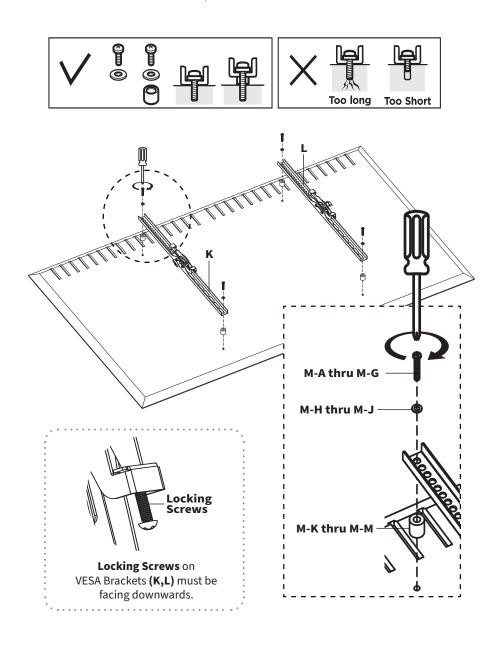


Hang your TV onto the Mounting Plate (J). Tighten both **Locking Screws** using the Phillips end on 5mm Allen Wrench (T-C).

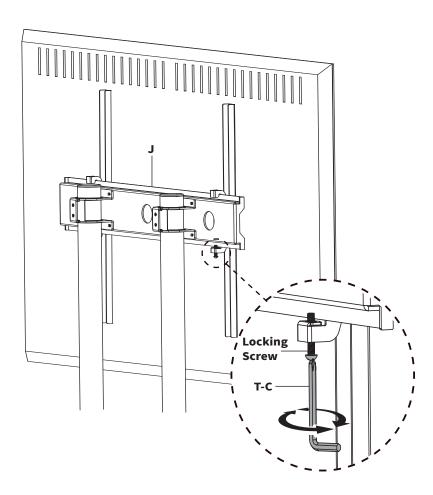


Attach Shelf Brackets (**O**) to Lower Poles (**E**) by partially installing M6x10mm Screws (**S-A**) using the 4mm Allen Wrench (**T-B**). Do not fully tighten these screws yet.

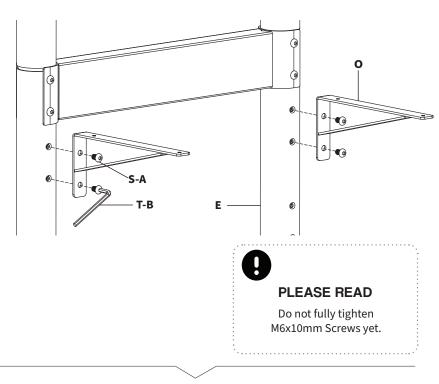

Attach Shelf (N) to Shelf Brackets using M4x6mm Screws (S-D) and the Phillips end on 5mm Allen Wrench (T-C). Fully tighten previously installed M6x10mm Screws (S-A) using 4mm Allen Wrench (T-B).

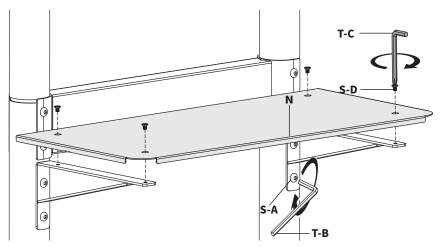

Insert Cable Clips **(D)** into the openings in Poles **(E,F)**. Route Cables through the Cable Clips.

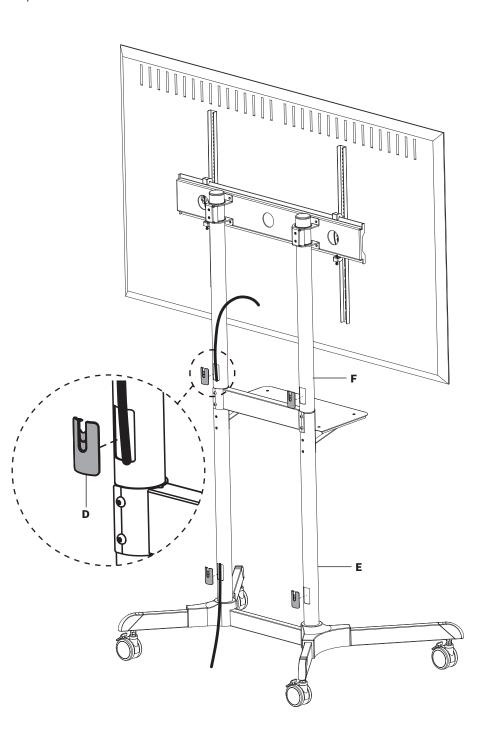

[THIS PAGE INTENTIONALLY LEFT BLANK]



Need Help? Get In Touch

Monday-Friday from 7:00am-7:00pm CST

Chat live with an agent!



help@vivo-us.com www.vivo-us.com



309-278-5303

