


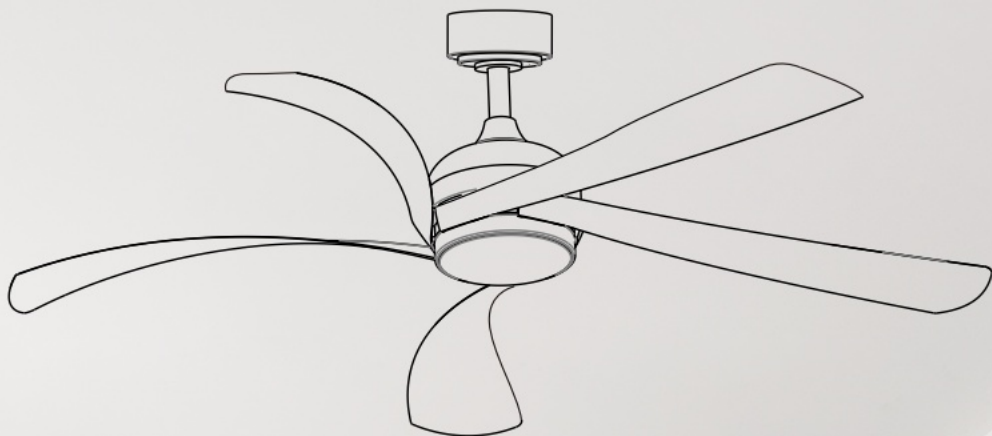

52 INCH CEILING FAN WITH LIGHT USER MANUAL

Voltage: 90~265V

Wattage: 18W



WARNING

WARNING: To avoid fire, shock and serious personal injury, please read the following instructions carefully.

Important Safety Instructions

- 1. Read all instructions and safety information before installing your new fan. Review the accompanying assembly diagrams.
- 2. Before installing the fan, disconnect the power by removing fuses or turning off circuit breakers.
- 3. Make sure all electrical connections comply with local codes, ordinances, or National Electrical Codes. Hire a qualified electrician or consult a do-it -yourself wiring handbook if you are unfamiliar with installing electrical wiring.
- 4. Make sure the installation site you choose allows the fan blades to rotate without any obstructions. Allow a minimum clearance of 7 feet from the floor to the trailing edge of the blades.
- 5. If you are mounting the fan on a ceiling outlet box, use a metal outlet box. Secure the box directly to the building structure. The outlet box and its support must be able to support the moving weight of the fan (at least 50 lbs.). Do not use a plastic outlet box. Attach the mounting bracket by using the hardware supplied with the ceiling outlet box.
- 6. If you are mounting the fan to a joist, make sure it is strong enough to support the moving weight of the fan (at least 50 lbs.)
- 7. After installing the fan, make sure all the connections are secured. This will prevent the fan from falling.
- 8. Do not insert anything into the fan blades while the fan is operating.
- 9. Turn the fan off and wait for it to stop before reversing fan direction.
- 10. To reduce risk of electrical shock and personal injury, do not install the fan on a sloped ceiling.
- 11. To reduce the risk of electrical shock and personal injury, do not use this fan with any solid-state.
- 12. To reduce risk of personal injury, use only the two steel screws and lock washers provided with the fan for mounting the outlet box.

Table of Contents

SAFETY PRECAUTIONS.....1

ASSEMBLY DRAWING & PARTS LIST-WITH LIGHT.....2-3

INSTALL THE CEILING BRACKET.....4

HOW TO INSTALL THE FAN WITH LIGHT.....5-8


REMOTE CONTROL SETTING AND OPERATING.....9-10

APP INSTRUCTIONS.....11




PROTECTIVE FUNCTIONS OF THE RECEIVER.....12

BALANCING FAN/WOBBLING/TROUBLE SHOOTING.....13

ASSEMBLY DRAWING & PARTS LIST

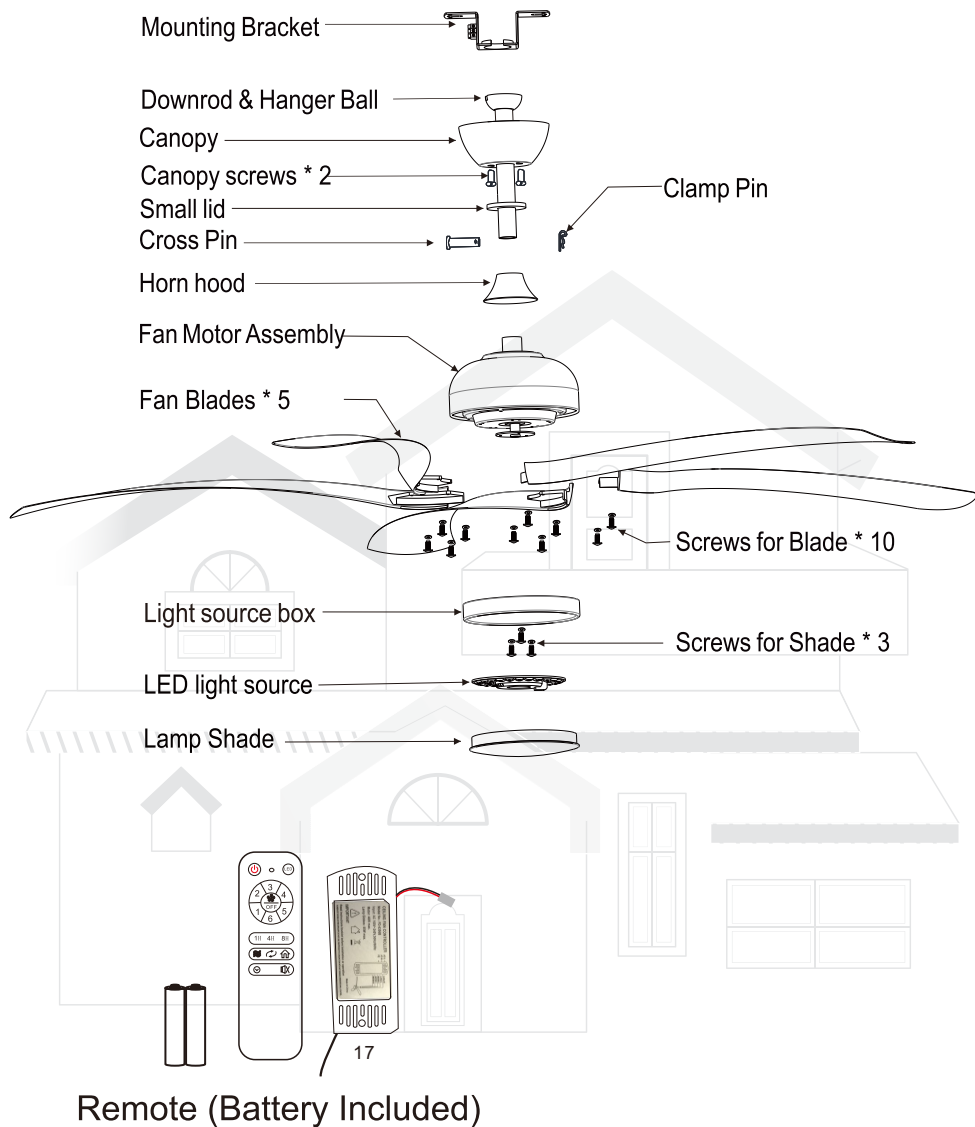


ASSEMBLY DRAWING & PARTS LIST

   Item no.	Reference Image	Qty.
1	 ST5x35 Setscrew	×4
2	 Expansion Screw	×2
3	 Screws for Blades	×10
4	 Fabric Washer	×10

INSTALL THE CEILING BRACKET

BEFORE YOU START

Contact a licensed electrician if you are not good at performing electrical work . It's the licensed electrician who installs the fan . if required by the local code . Do not use the fan with a dimmer switch
Turn off power at breaker

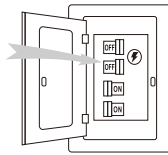

Tools and Materials Required



External Hexagonal Wrench



Wire Stripper




Phillips Screwdriver




Step Ladder

The ceiling fan must be installed in the location where there is 12"(300mm) spacing from the tips of all blades to the nearest objects or walls. **REMEMBER** to turn off the power before hanging the fan. Follow the instruction below to hang your fan properly:

1. For concrete ceiling, drill two holes in the ceiling and secure the mounting bracket to the ceiling with two $\Phi 0.32$ "(8mm) (distance between the two holes should be appropriate) expansion screws, flat washers nuts provided and tighten with a spanner.

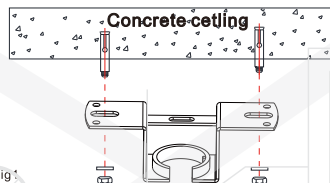


2. For wood ceiling, secure the mounting bracket to the ceiling that is capable of carrying a load of at least 100lbs (45kgs) with two long mounting screws and washers provided. Be sure at least 0.12"(30mm) of the screw is threaded into the support.

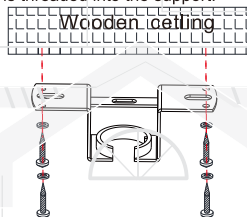


3. Refer to the Fig. on the right to mount when the ceiling is angled (Max. 15°).

NOTE: The hanger must be able to withstand 100lbs (45kg) or more after the installation.

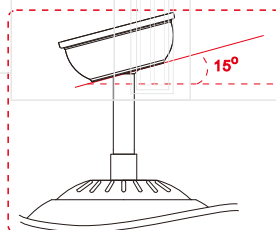


HOW TO INSTALL THE FAN WITH LIGHT

1. Assemble the blade assembly with the screws provided.

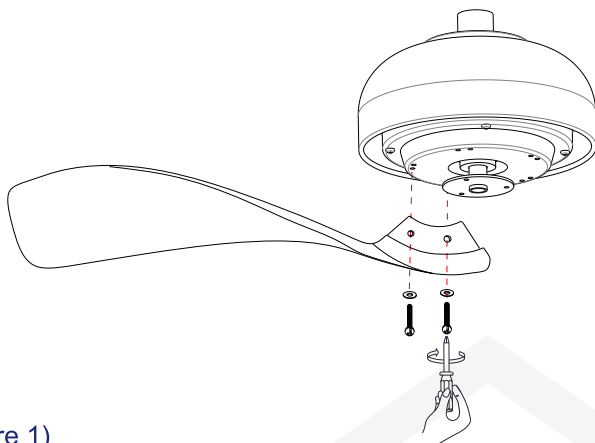


(Figure 1)

2. Loosen the set screws in the Hanger Ball assembly until the ball assembly can slide down the downrod. Remove the Pin from the downrod.

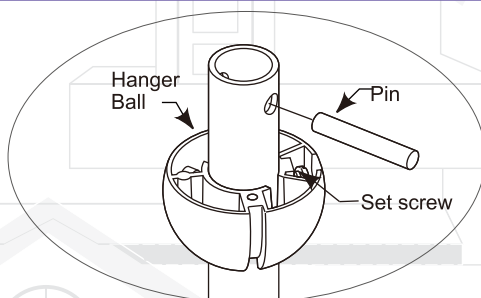

(Figure 2)

3. Remove and save the clevis pin and hairpin of the downrod. Put the downrod through the canopy and coupling cover.

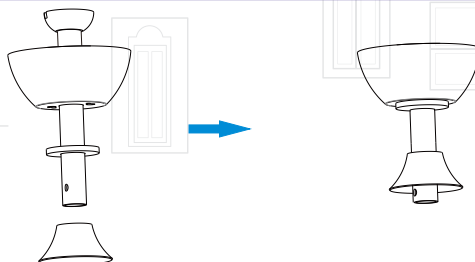

(Figure 3)

HOW TO INSTALL THE FAN WITH LIGHT

4. Loosen two set screws on the downrod support and then place the downrod into the downrod support. (Figure 4)

Then add the electrical wires and the earth wire through the downrod.

Align the Clevis Pin holes in the Downrod with the holes in the Downrod Support. Be sure to push the straight leg of the Hairpin Clip through the hole near the end of the Clevis Pin until the curved portion of the Hairpin snaps around the Clevis Pin.

Finally, re-tighten the two set screws.

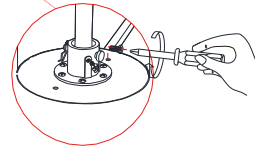
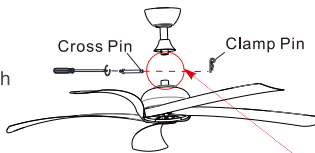


Figure 4

WARNING

It is critical that the clevis screw in the downrod support is properly installed and the set screws are securely tightened. Failure to verify the clevis screw, hairpin clip and set screws are properly installed could result in the fan falling.

5. Carefully lift the fan, and set the downrod / hanger ball assembly on the hanger bracket attached to the ceiling joist. Be sure the groove in the ball is properly aligned with the tab on the hanger bracket. (Figure 5)

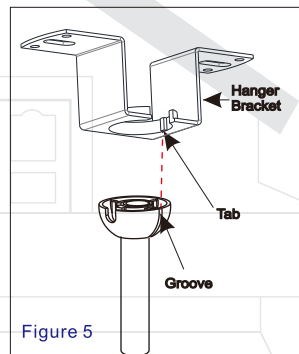


Figure 5

WARNING

The fan must be hung with at least 230 cm of clearance from floor to blades.

Precautions for connecting the power cord :

WARNING

To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring

Connect 110V main power (dwelling) to the Terminal Block located on the hanger

HOW TO INSTALL THE FAN-WITH LIGHT

6. Correctly link the light wire, motor wire, and neutral wire and live wire according to the line on the right.

① Connect the wires according to the polarity (the color of the House power cord may be different if the color is the same)

① Connect the wires according to the polarity (the color of the House power cord may be different if the color is the same).



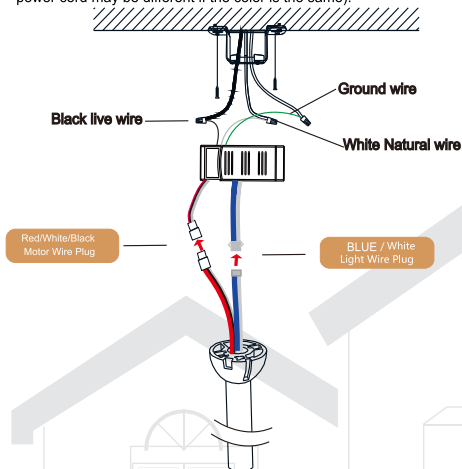


Figure 6

② Put the receiver into the Bracket and arrange the wires

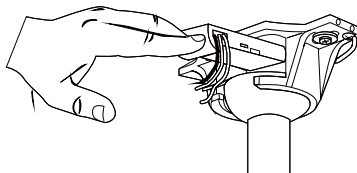

③ Adjust the position of Canopy, then lock it

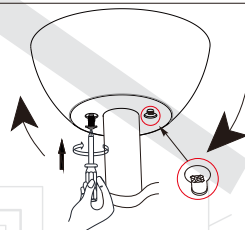

7. Fix the lighting base to the motor with three screws and connect the ambient light line

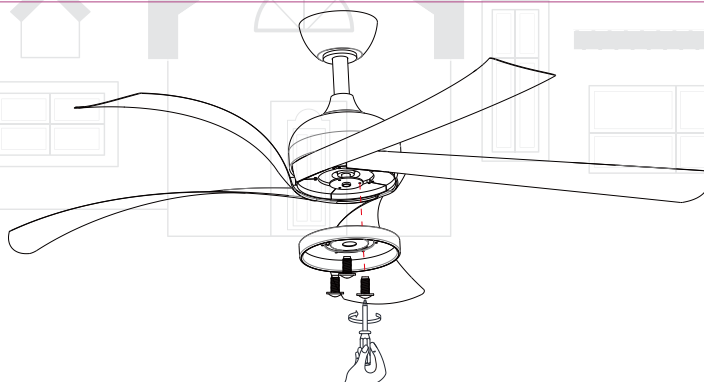


Figure 7

HOW TO INSTALL THE FAN WITH LIGHT

8. Insert the power cord through the hole of the LED source plate and connect it. Fix the LED source plate upwards the lamp body.

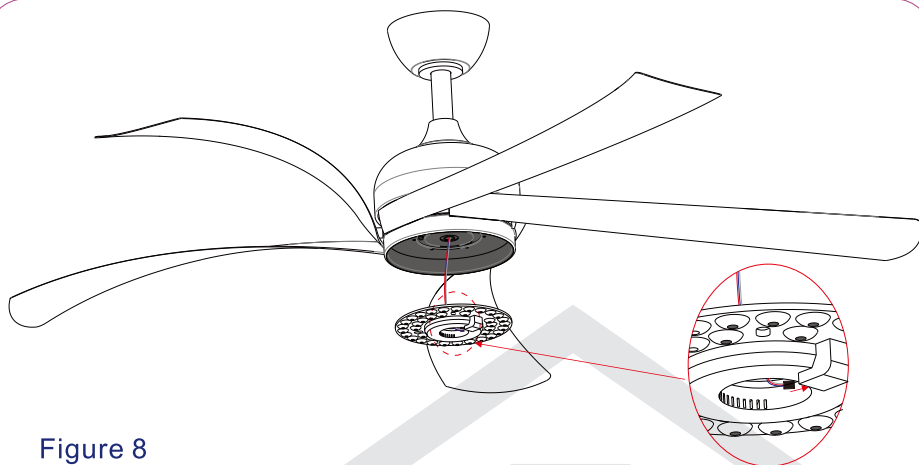


Figure 8

9. Install the lampshade and turn the acrylic lampshade upwards and clockwise

⚠ WARNING Take care not to over tighten when installing the plastic shade.


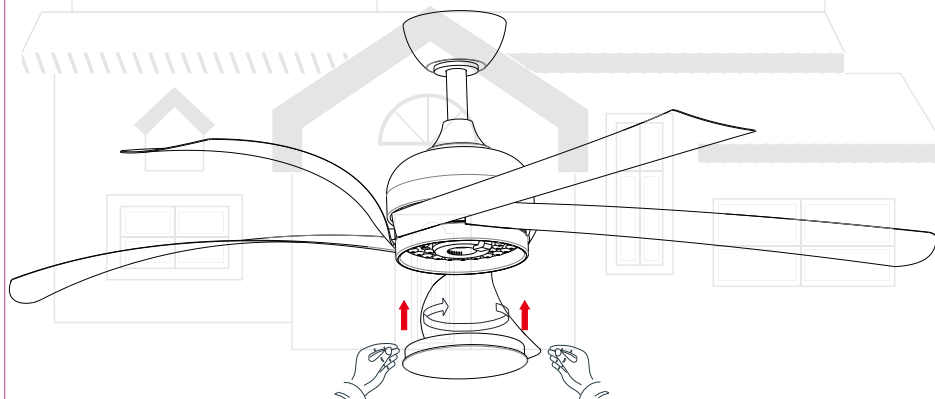


Figure 9

Remote Control

1. Restore electrical to the outlet box by turning the electricity on at the main fuse box.
2. Remove the battery cover from the remote control transmitter, install the battery, and replace the cover.
Note:
 - 1). Use 1 12V battery to replace battery.
 - 2). If not using for long periods of time, remove the battery to prevent damage to the remote transmitter, and store the remote transmitter away from excess heat or humidity.
3. The buttons on the remote control transmitter control the fan speed and light as follows.

Remote Control (Esmmitter) Operation

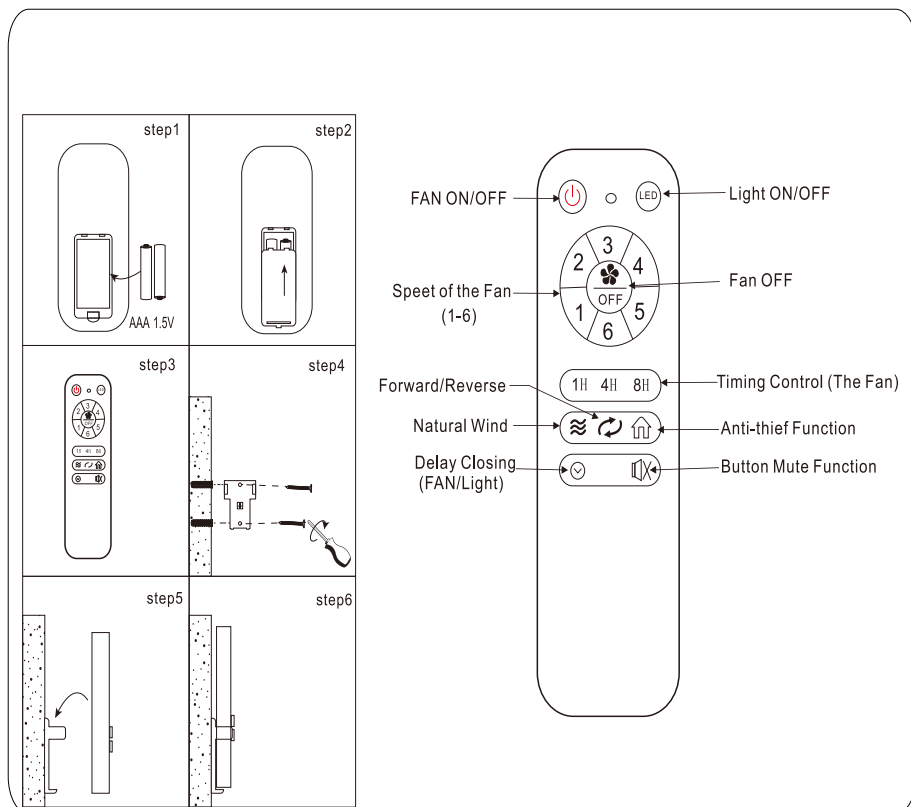

IMPORTANT REMINDERS

1. Please note: Receiver must be correctly installed in the mounting bracket on fan
2. When the transmitter cannot control the receiver, please check the battery has sufficient charge in the transmitter.
3. When the transmitter cannot control the receiver, please check if there is any existence of similar remote controlled products nearby, causing interference with each other.
4. Low power of battery will affect the sensitivity of the transmitter and the signal reception accordingly, must replace if the battery is getting low power.
5. Please take the battery out from the transmitter when leaving unused for a long time, to avoid battery leaks.
6. Isolation Switch "Must be connected in the line."
7. When power is cut to the unit (via a blackout or otherwise) when power is restored the light will come on.

Before carrying out any cleaning or maintenance work, always make sure that the appliance is disconnected.
LED lights are not removable. LED lights can only be used within the product delivery, they can not be replaced.

Wall Switch

In order to ensure the normal work of LED LIGHT, recommend to use ordinary wall switch.



NOTE: POWER OFF from wall switch Defaultmemory function cleared)