


OUTDOOR STEEL ROTATION CHAIR ASSEMBLY MANUAL

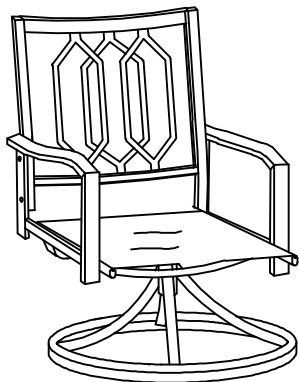

 
 
ASSEMBLY INSTRUCTIONS

- Prior to assembly, make sure you lay out and identify all the parts listed below in the parts list.
- Tighten all nuts and bolts securely. All bolts should be hand tightened before use. Never use power tools or excessive force during assembly and tightening of bolts.

Warning:


1. Max loading capacity of the chair: 300 Lbs.

Part list


Part	Description	Qty
A	 Back	2
B	 Armrest	2
C	 Armrest	2
D	 Seat	2
F	 Connector	2
G	 Base	2
H	 Shim	4
I	 M6*28 Screws	8

Part	Description	Qty
J	 M6*32 Screws	8
L	 M8*32 Screws	8
M	 M6 Washer	16
N	 M8 Washer	8
O	 M8 Washer	8
P	 M8 Nut	8
Q		1
R		2


1. Fix Connector (Part F) to Seat (Part D) using Screws(L) with Shim(H) Nut (P) and Washer(N&O)

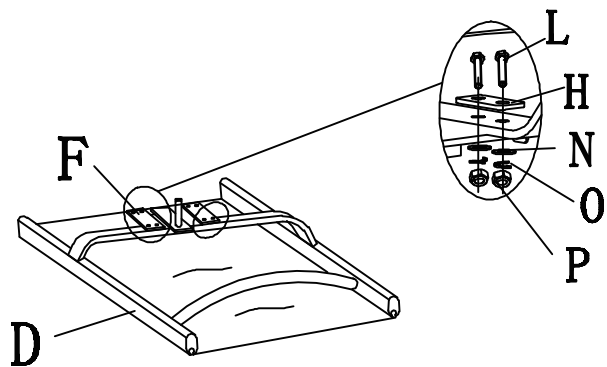


2. Connect Armrest (Part B) with Seat (Part D) using Screws(J) and Washer(M) as show in diagram.

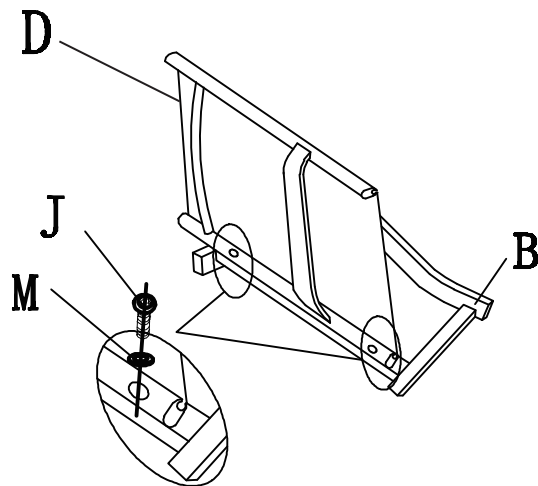


- 3.** Connect Armrest (Part C) with Seat (Part D) using Screws(J) Washer(M) as show in diagram.

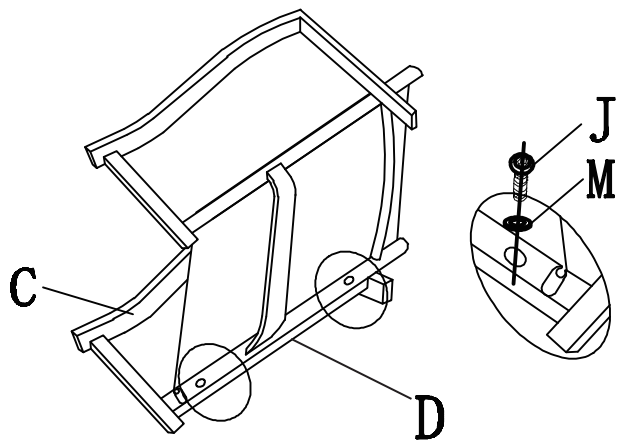

- 4.** Connect Part A and Part(B&C) using Screws(I) Washer(M). as show in diagram.

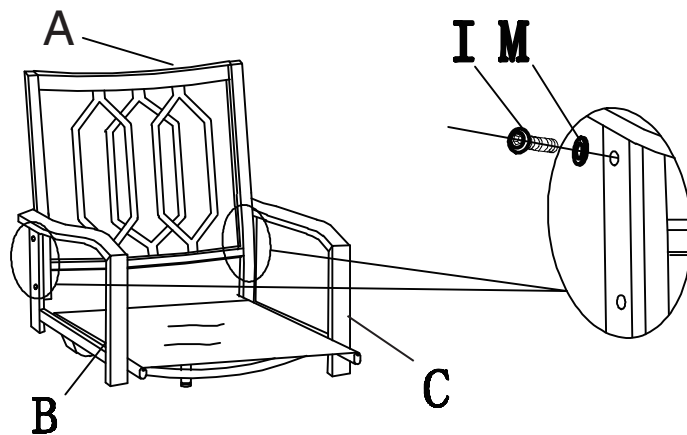

- 5.** Insert the assembled seat into the Base(Part G).
As show in diagram.

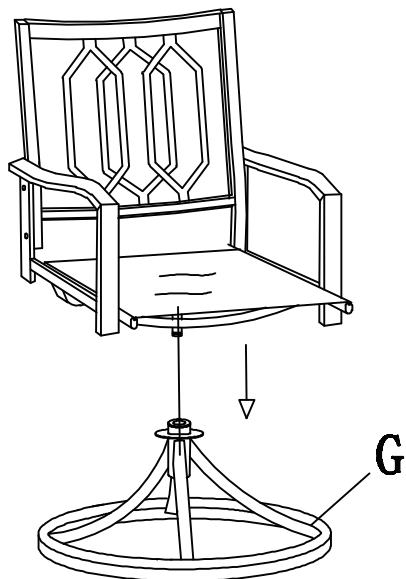

- 6.** Eventually, check all screws are fixed tightly before using.

