



ASSEMBLY INSTRUCTIONS

OUTDOOR SOFA PIECE - SLIPCOVER

1


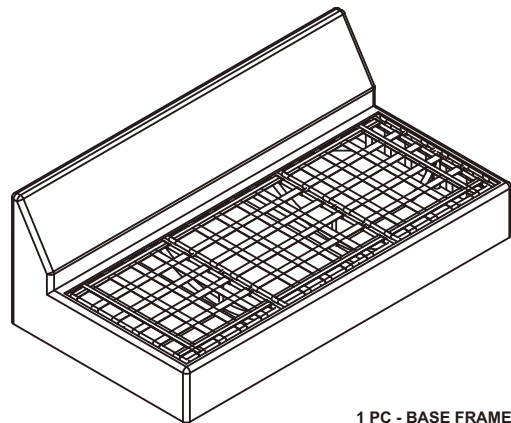


1 PC - BASE FRAME

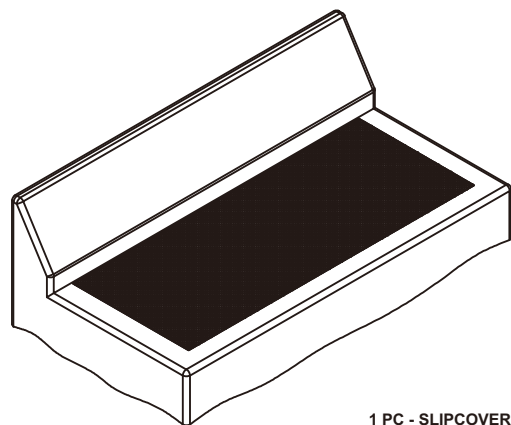


1 PC - SLIPCOVER


2

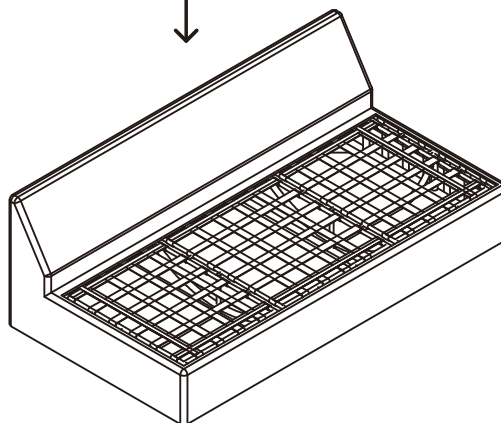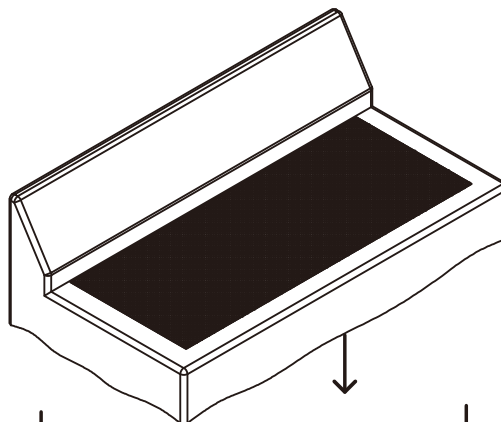

3

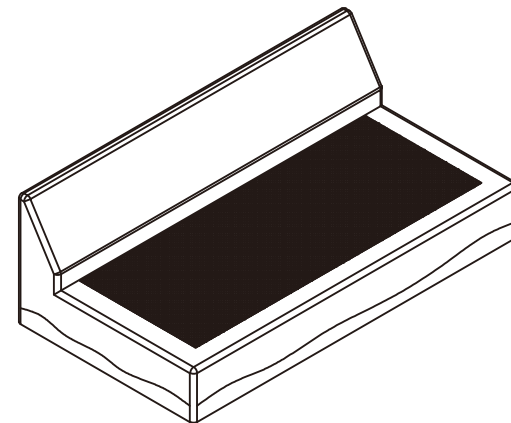

4

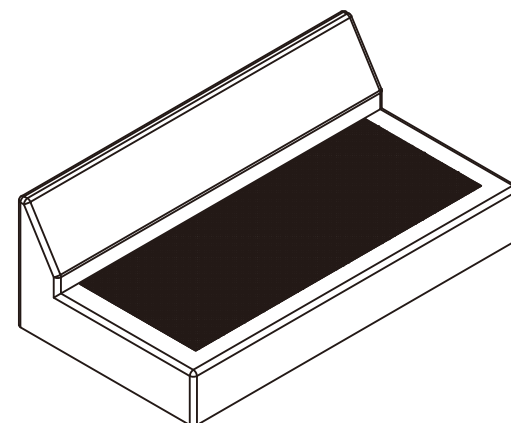

FABRICS MAINTENANCE




Direction of maintenance :

1. Machine wash in luke warm water (up to 40°C,100°F) at a gentle setting (reduced agitation).
2. A mild bleach agent can be used for cleaning, Avoid concentrated bleach application.
3. Ironing (Low 110 ° C, 230 ° F).
4. Do not dryclean.
5. Tumble dry, low permanent press.

ASSEMBLY INSTRUCTIONS


OUTDOOR SOFA PIECE - CUSHION COVER

1

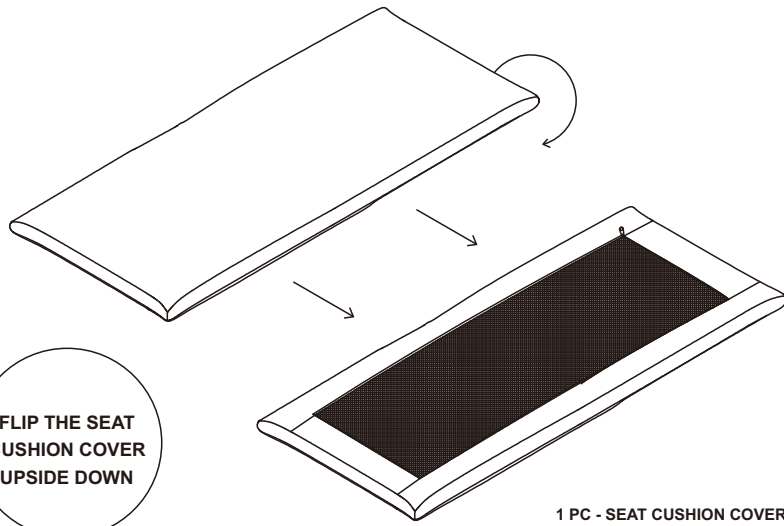


FLIP THE SEAT
CUSHION COVER
UPSIDE DOWN


2

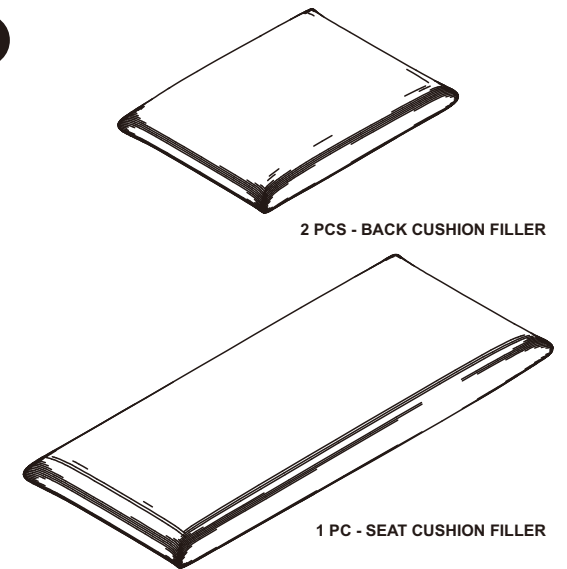

5

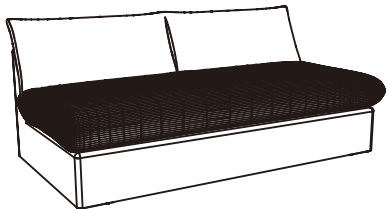

4

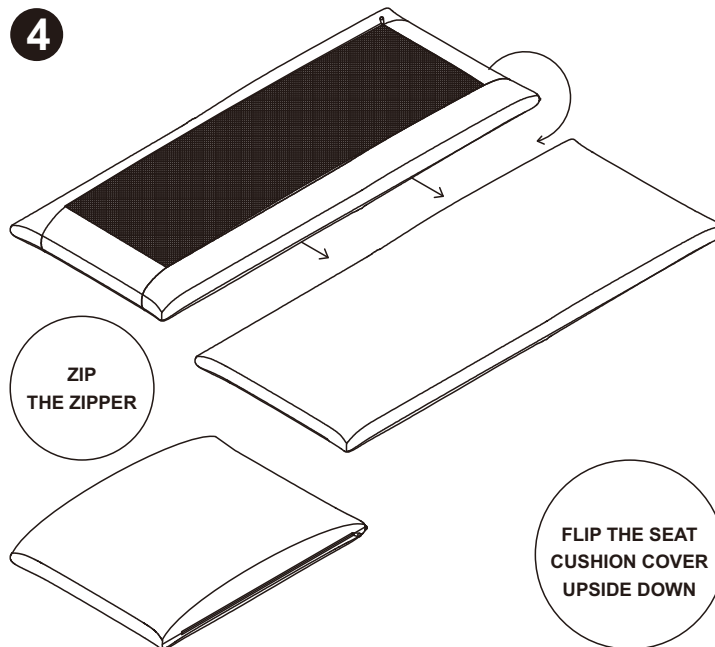

3

